
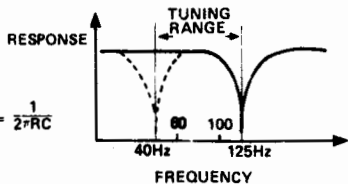


# 12

## Notch Filter (Hum Remover)

Notch frequency =  $1/2 \pi RC$

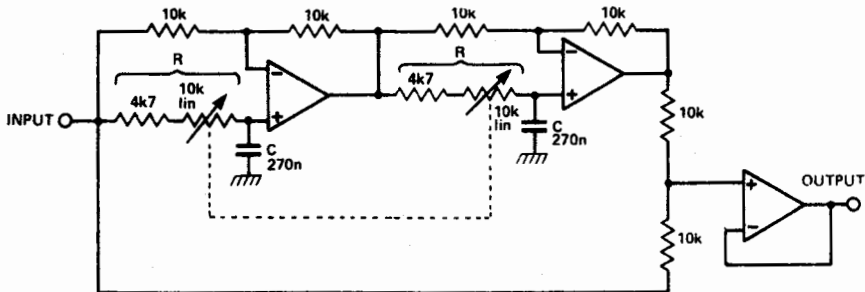

$$\text{NOTCH FREQUENCY} = \frac{1}{2\pi RC}$$