

In "Build a Disco Preamplifier/Mixer" (September 1978), pin 11 of IC6, Fig. 6, should be connected to  $-15\text{ V}$ , not  $+15\text{ V}$  as shown. The foil pattern is correct.