





MODEL NUMBER: C 24

MODIFICATION: Add four grounding springs to the shafts of the Volume, Balance, Bass and

Treble controls.

**DESCRIPTION:** Some controls have developed a noise when rotated. Adding the springs to

ground the shafts prevents this condition.

CAUTION: When adding the springs to the Bass and Treble control, be sure they make

good contact. Make sure the spring is not too tight. If the springs are tight

the clutch action of the controls will not function.

**PROCEDURE:** Remove the front panel. Place the spring around the shaft and insert the ends

of the spring into the control guide hole. See diagram.

