

McIntosh

MX 112

FM / AM TUNER PREAMP



SERVICE INFORMATION

FROM SERIAL NO. 10S01 TO 39S99

McINTOSH LABORATORY INC. 2 CHAMBERS STREET BINGHAMTON, NEW YORK

MX 112

ELECTRICAL SPECIFICATIONS

FM TUNER SECTION

USABLE SENSITIVITY

Better than $2.5\mu F$ (IHF usable sensitivity)

SIGNAL TO NOISE RATIO

Better than 65dB

HARMONIC DISTORTION

Mono, less than 0.5%. Stereo, less than 0.8%.

FREQUENCY RESPONSE

Flat from 20Hz to 20kHz with standard de-emphasis and 19kHz pilot filter

CAPTURE RATIO

Better than 1.5dB

SPURIOUS REJECTION

90dB or greater

IMAGE REJECTION

75dB or greater (at 100MHz)

STEREO SEPARATION

Better than 30dB at 1kHz

AM TUNER SECTION

SENSITIVITY

Better than $12\mu V$ at 1000kHz (using external antenna input)

SIGNAL TO NOISE RATIO

Better than 55dB

HARMONIC DISTORTION

Less than 1% at 30% modulation

FREQUENCY RESPONSE

Down 6dB at 5kHz

SELECTIVITY

10kHz at -6dB

IMAGE REJECTION

60dB or greater at 1000kHz

PREAMPLIFIER SECTION

FREQUENCY RESPONSE

± 0.5 dB, 20Hz to 20,000Hz

DISTORTION

Less than 0.1% at 2.5 volts 20Hz to 20kHz

INPUT SENSITIVITY (phono 1 and phono 2)

2 millivolts for 2.5 volts output at 1kHz

INPUT SENSITIVITY (aux, tape)

0.25 volts for 2.5 volts output

HUM AND NOISE (phono 1 and phono 2)

72dB below 10 millivolt input

HUM AND NOISE (aux, tape)

85dB below rated output

OUTPUT (main)

2.5 volts with rated input. Up to 10 volts can be developed without distortion. FM and AM will produce up to 10 volts output at 100% modulation.

OUTPUT (tape)

0.25 volts with rated input. Phono input signal of 10 millivolts produces 1.2 volts output. FM and AM will produce 1 volt output at 100% modulation.

OUTPUT (center channel)

2 volts with rated input to both channels

BASS CONTROL

-18dB to +16dB at 20Hz

TREBLE CONTROL

± 20 dB to 20,000Hz


LF FILTER

Flat or roll off below 50Hz, down 12dB at 20Hz


HF FILTER

Flat or roll off above 5000Hz, down 12dB at 20,000Hz


FM / AM TUNER SECTION

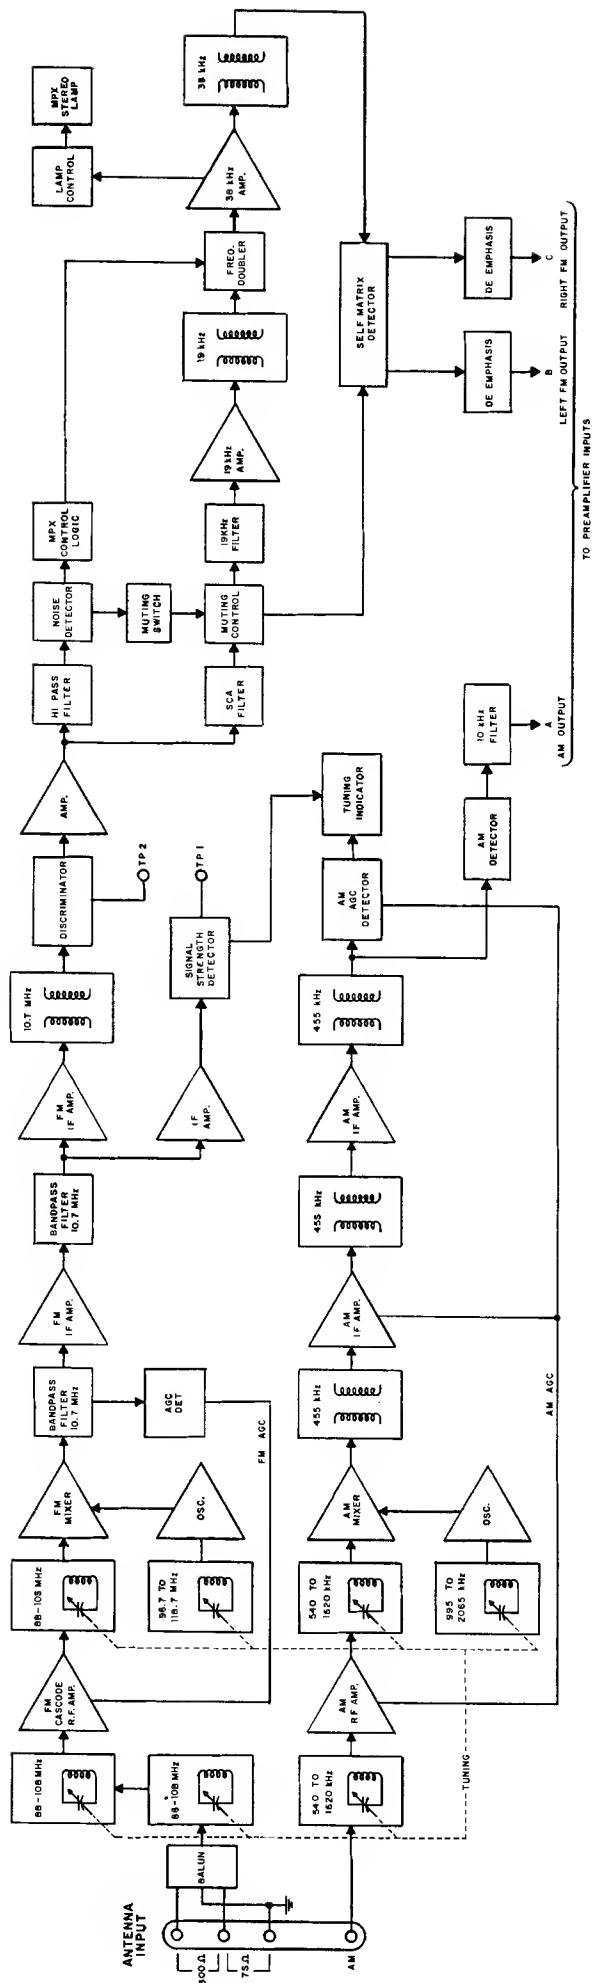


PREFACE SECTION

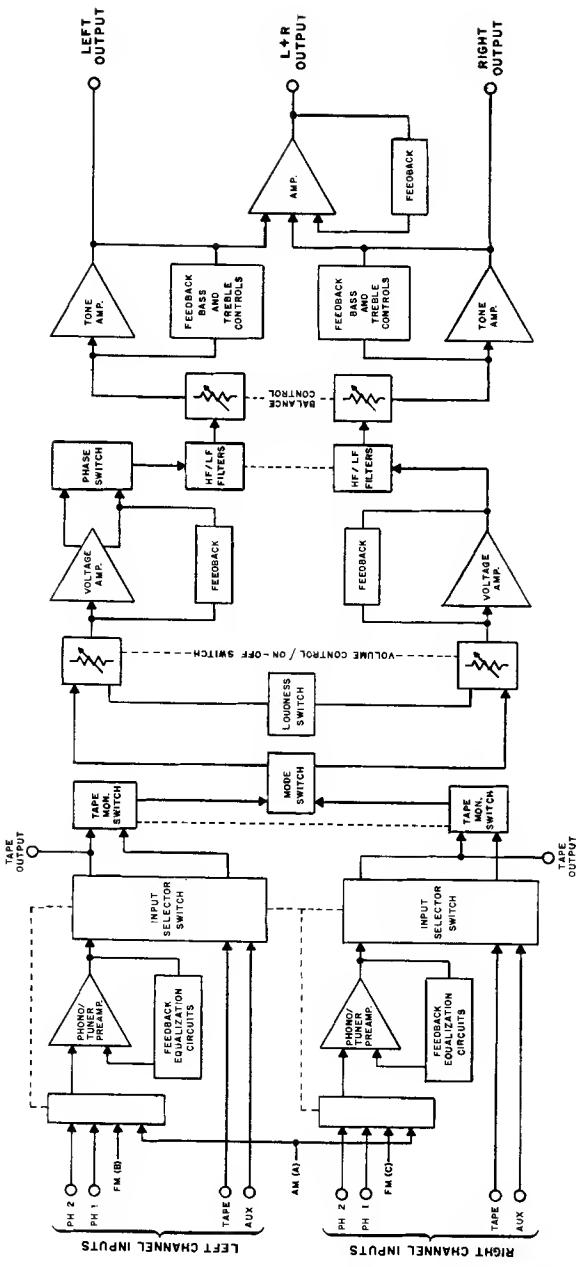


POWER SUPPLY

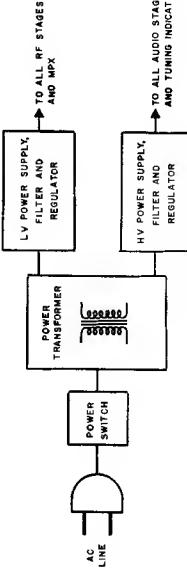




WZ 112 BLOCK DIAGRAM

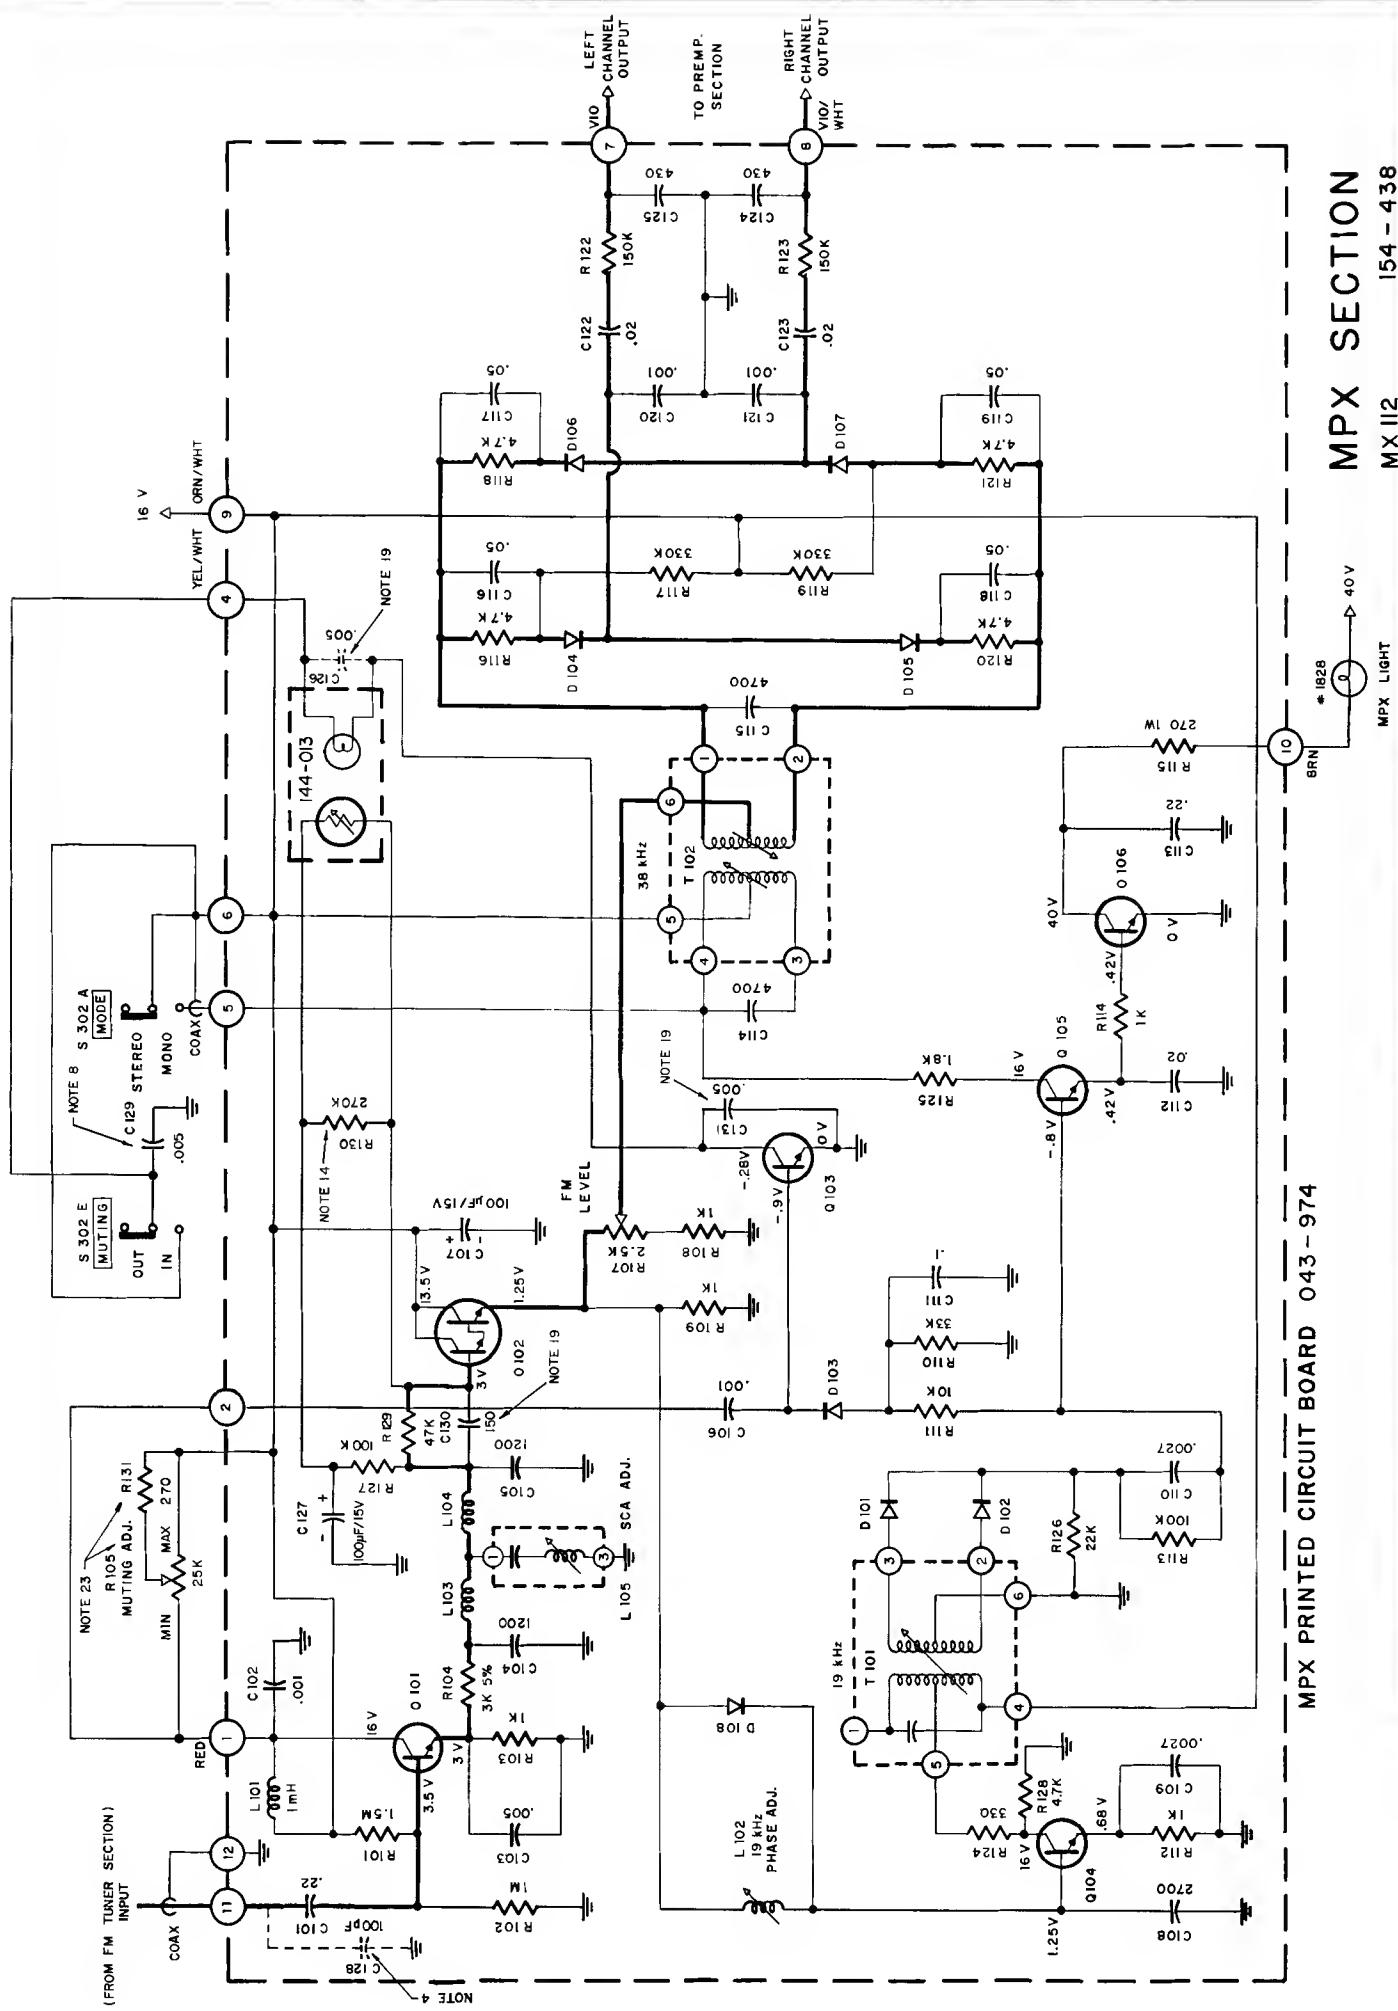

RF CHASSIS

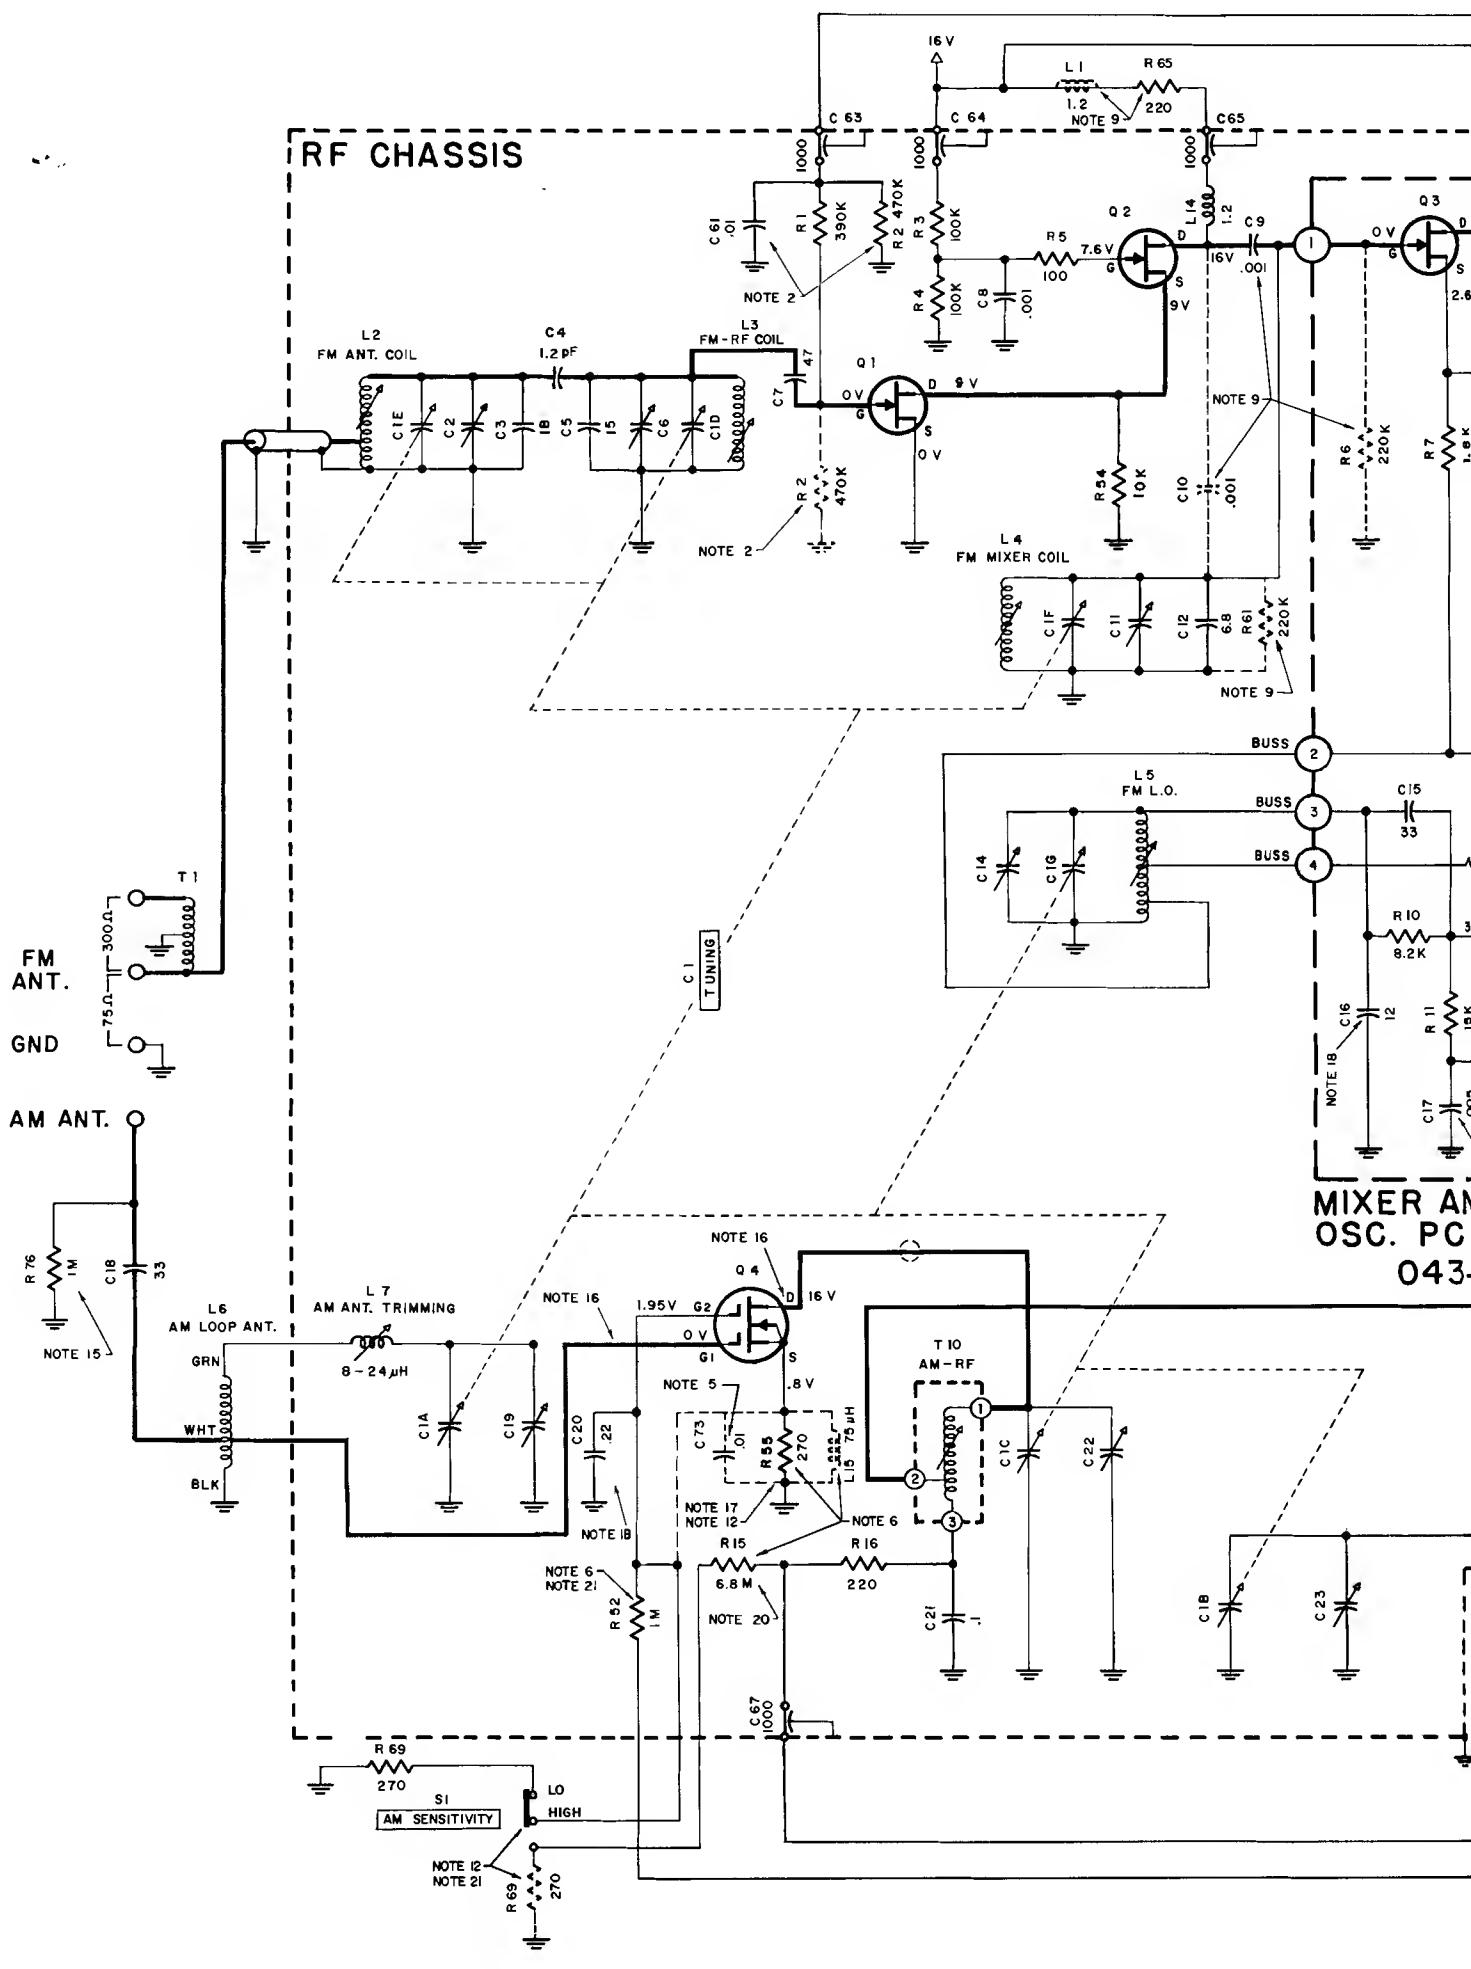

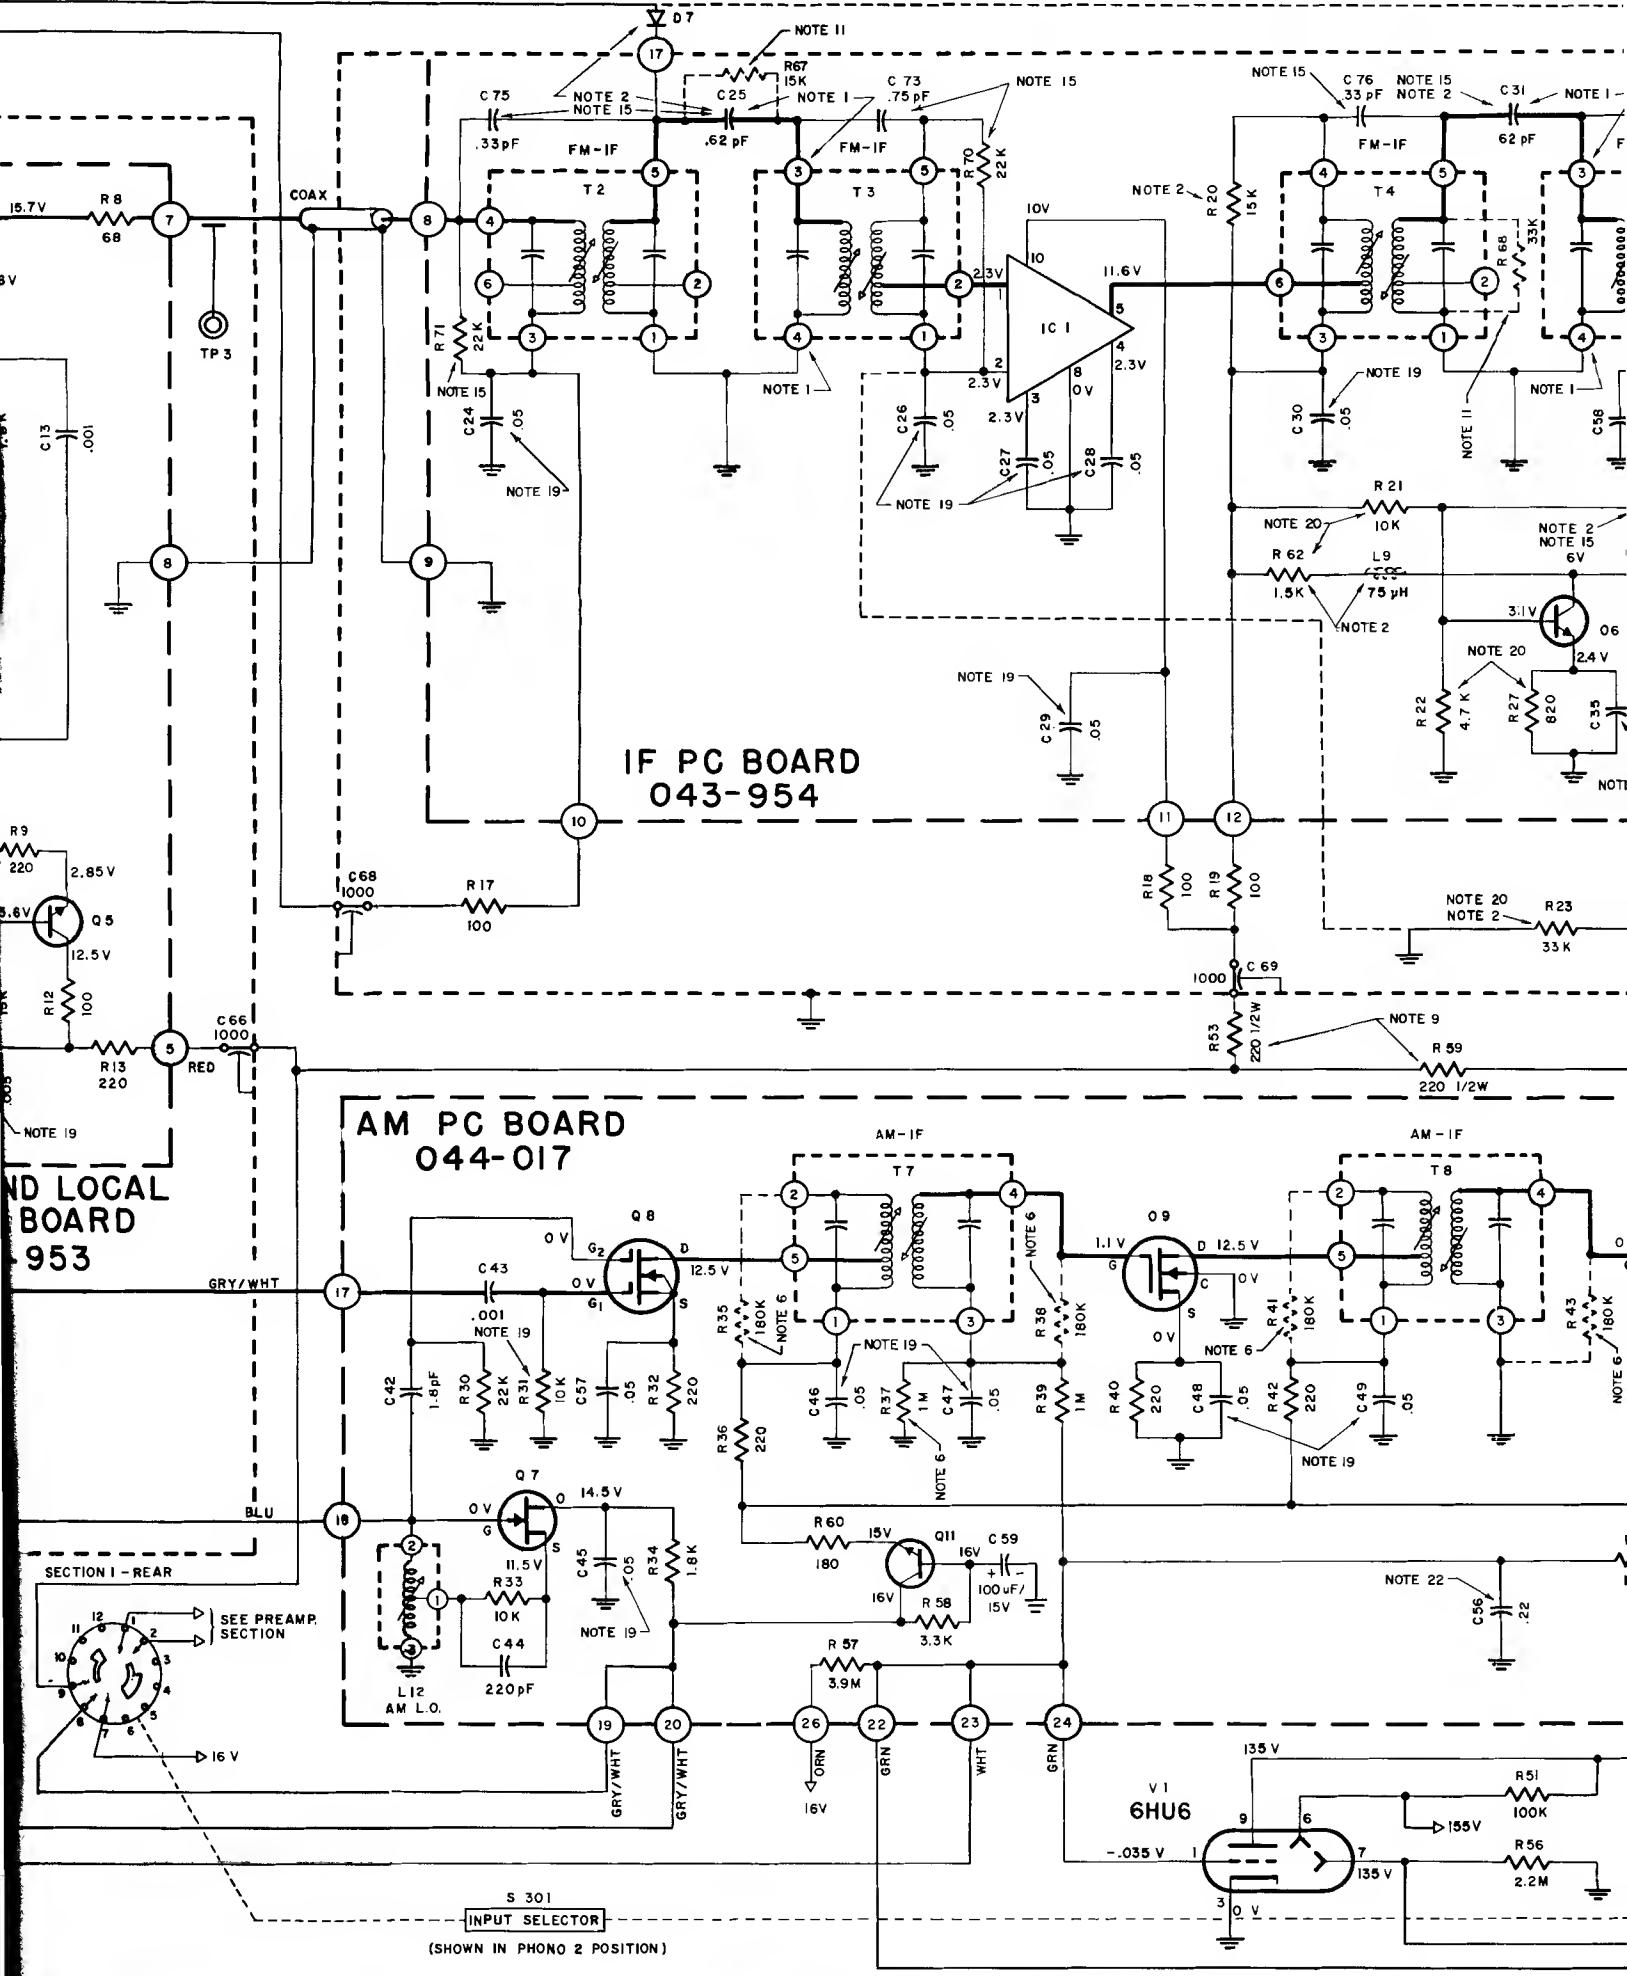

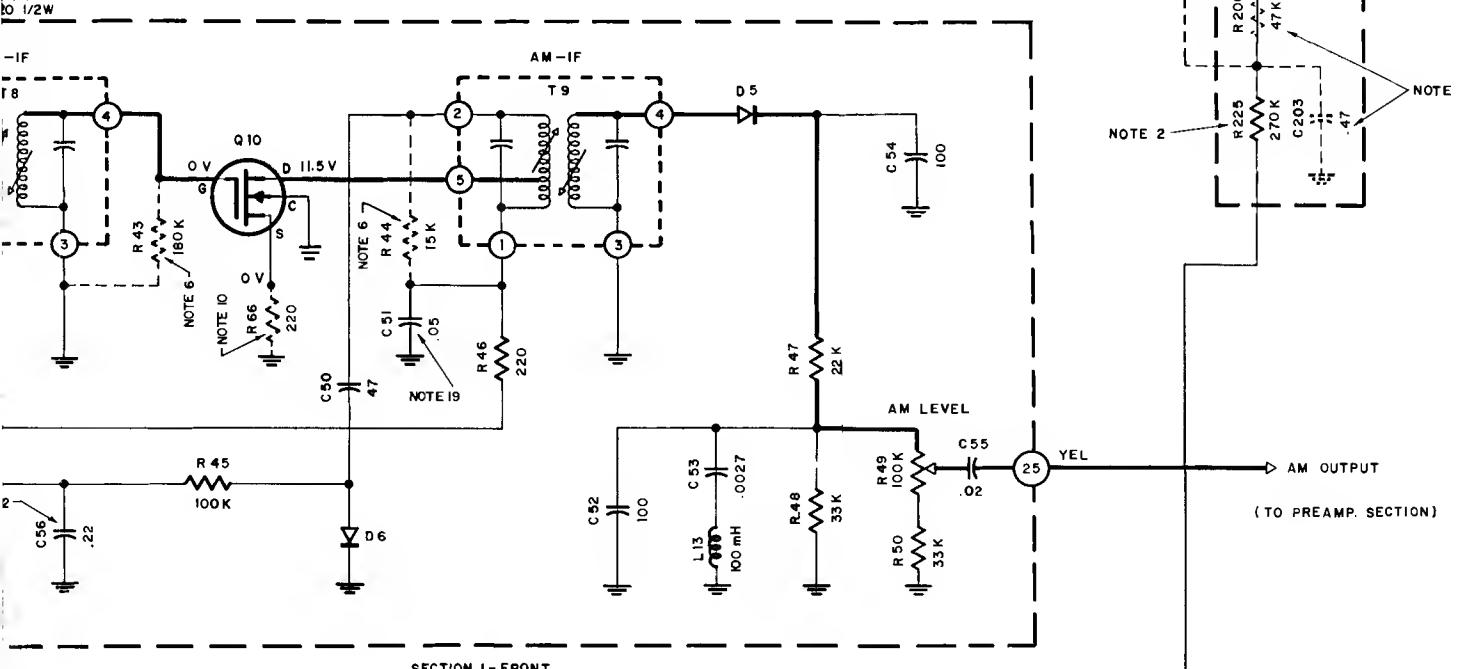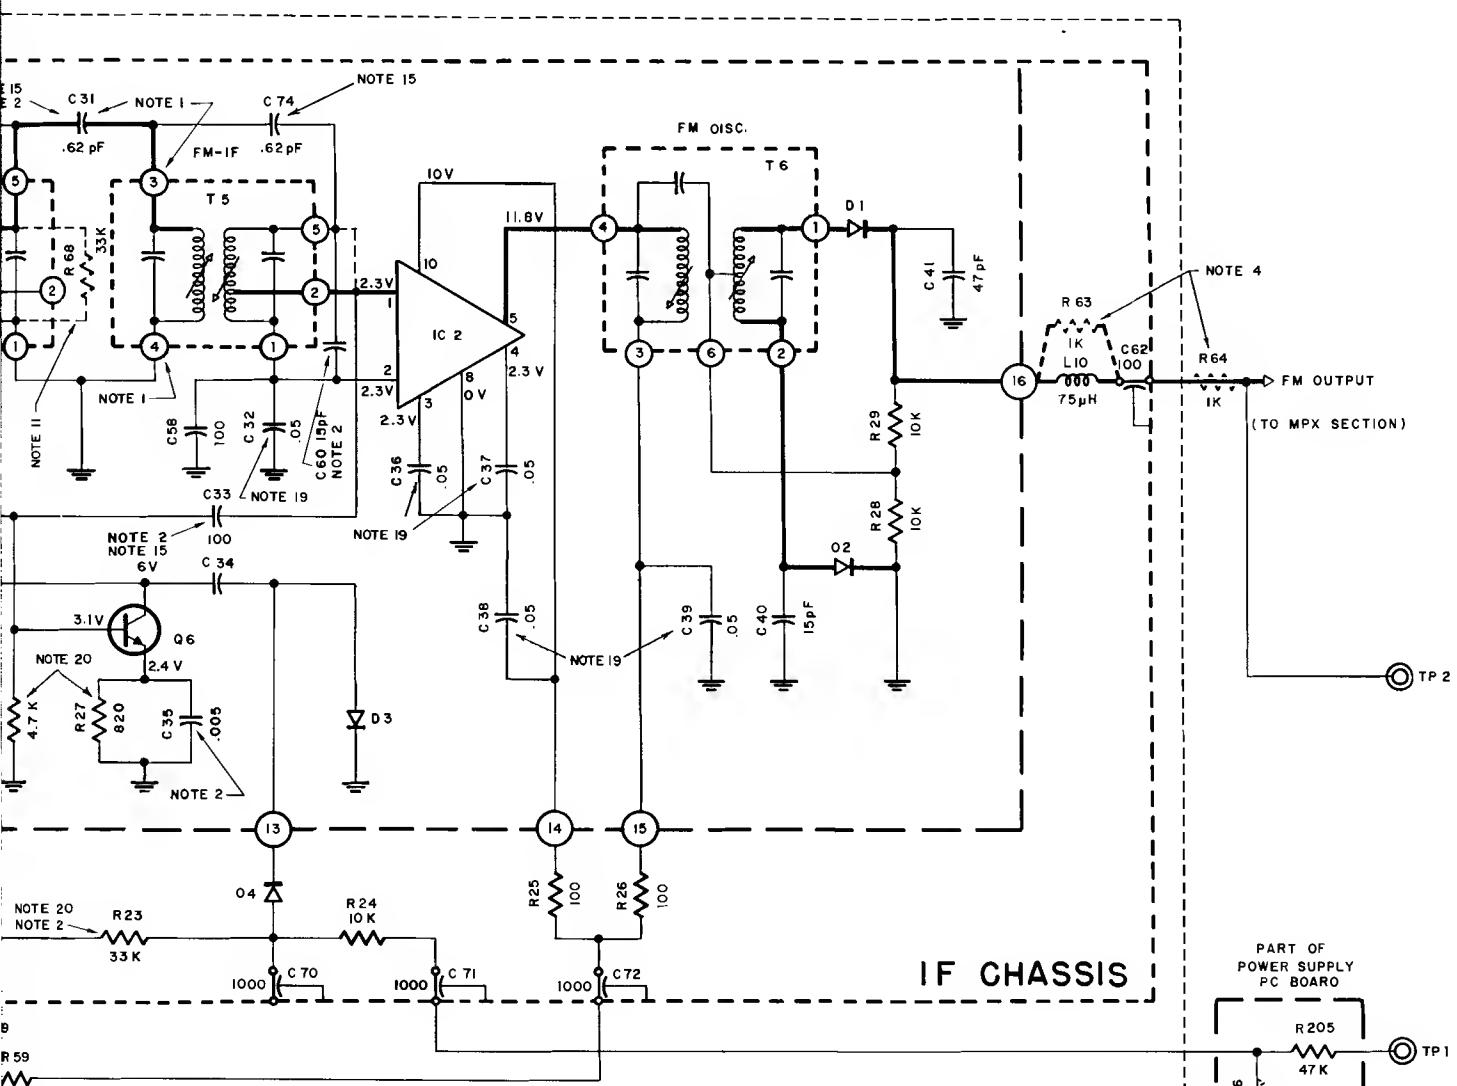

FM/AM TUNER SECTION

MX 112

154 - 439

SCHEMATIC NOTES

Unless otherwise specified: Resistance values are in ohms, 1/4 watt, and 10% tolerance; capacitance values smaller than 1 are in microfarads (μF); capacitance values greater than 1 are in picofarads (pF); inductors are in microhenries (μH).

Printed circuit board components are outlined on the schematics by dotted lines. The circled numbers around the dotted lines correspond to the numbers on the PC Board layouts.

The heavy lines on the schematics denote the primary signal path.


The terminal numbering of rotary switches is for reference only.

All voltages indicated on the schematics are measured under the following conditions:


- Use of an 11 megohm input impedance VTVM.
- All voltages $\pm 10\%$ with respect to chassis ground.
- No signal at input or antenna terminals.
- AC input at 117 volts, 50/60Hz.
- Front panel controls at:

Tuning indicator 100MHz (no signal)
 Volume Fully CCW
 Mode Stereo
 Muting Out
 Input Selector AM (to measure AM section)
 FM (to measure FM section)
 Panel Lights Bright

- In units with serial numbers below 11S00: C25 is connected to pin 4 of T3; pin 3 of T3 is connected to ground; C31 is connected to pin 4 of T5; pin 3 of T5 is connected to ground.
- In units with serial numbers below 11S17: C25 and C31 are 2.2pF; C33 is 6.8pF and is connected to pin 5 of T5; C35 is .001 μF ; C60 is not used; R20 is 33k; R23 is 33k and is connected as shown by dotted line; L9 (part number 122-013) is used in place of R62; D7 and C61 are not used; R225 is 470k; R206 and C203 (part number 064-069) are used and are connected as shown by dotted line. R2 is connected to the other end of R1 as shown by dotted line.
- R221 is used in units with serial numbers below 14S01.
- In units with serial numbers from 17S40 to 22S65: R63 is used in place of L10; R64 and C128 are used.
- In units with serial numbers from 17S25 to 17S75, C73 is used.
- In units with serial numbers below 17S25: R35, R38, R41, R43, and R44 are used; L15 is used; R37 is 470k; R55 is 1k; R52 is 1M and R15 is 6.8M.
- In units with serial numbers below 17S40: C345 is used; R397 and R398 are not used.
- In units with serial numbers below 18S35, C129 is not used.
- In units with serial numbers below 20S00: R53 and R59 are 100 Ω ; R65 is not used; L1, R6, R61, and C10 are used; there is no connection from C12 to pin number 1 on the mixer and local oscillator PC Board; and C7 is connected to L3 as shown by dotted line.
- In units with serial numbers from 19S63 to 31S34, R66 is used.
- In units with serial numbers from 20S72 to 31S35, R67 and R68 are used.
- In units with serial numbers below 26S01: R55 is 270 Ω ; R69 and S1 are not used.
- In units with serial numbers below 25S11, R399 and R400 are not used.

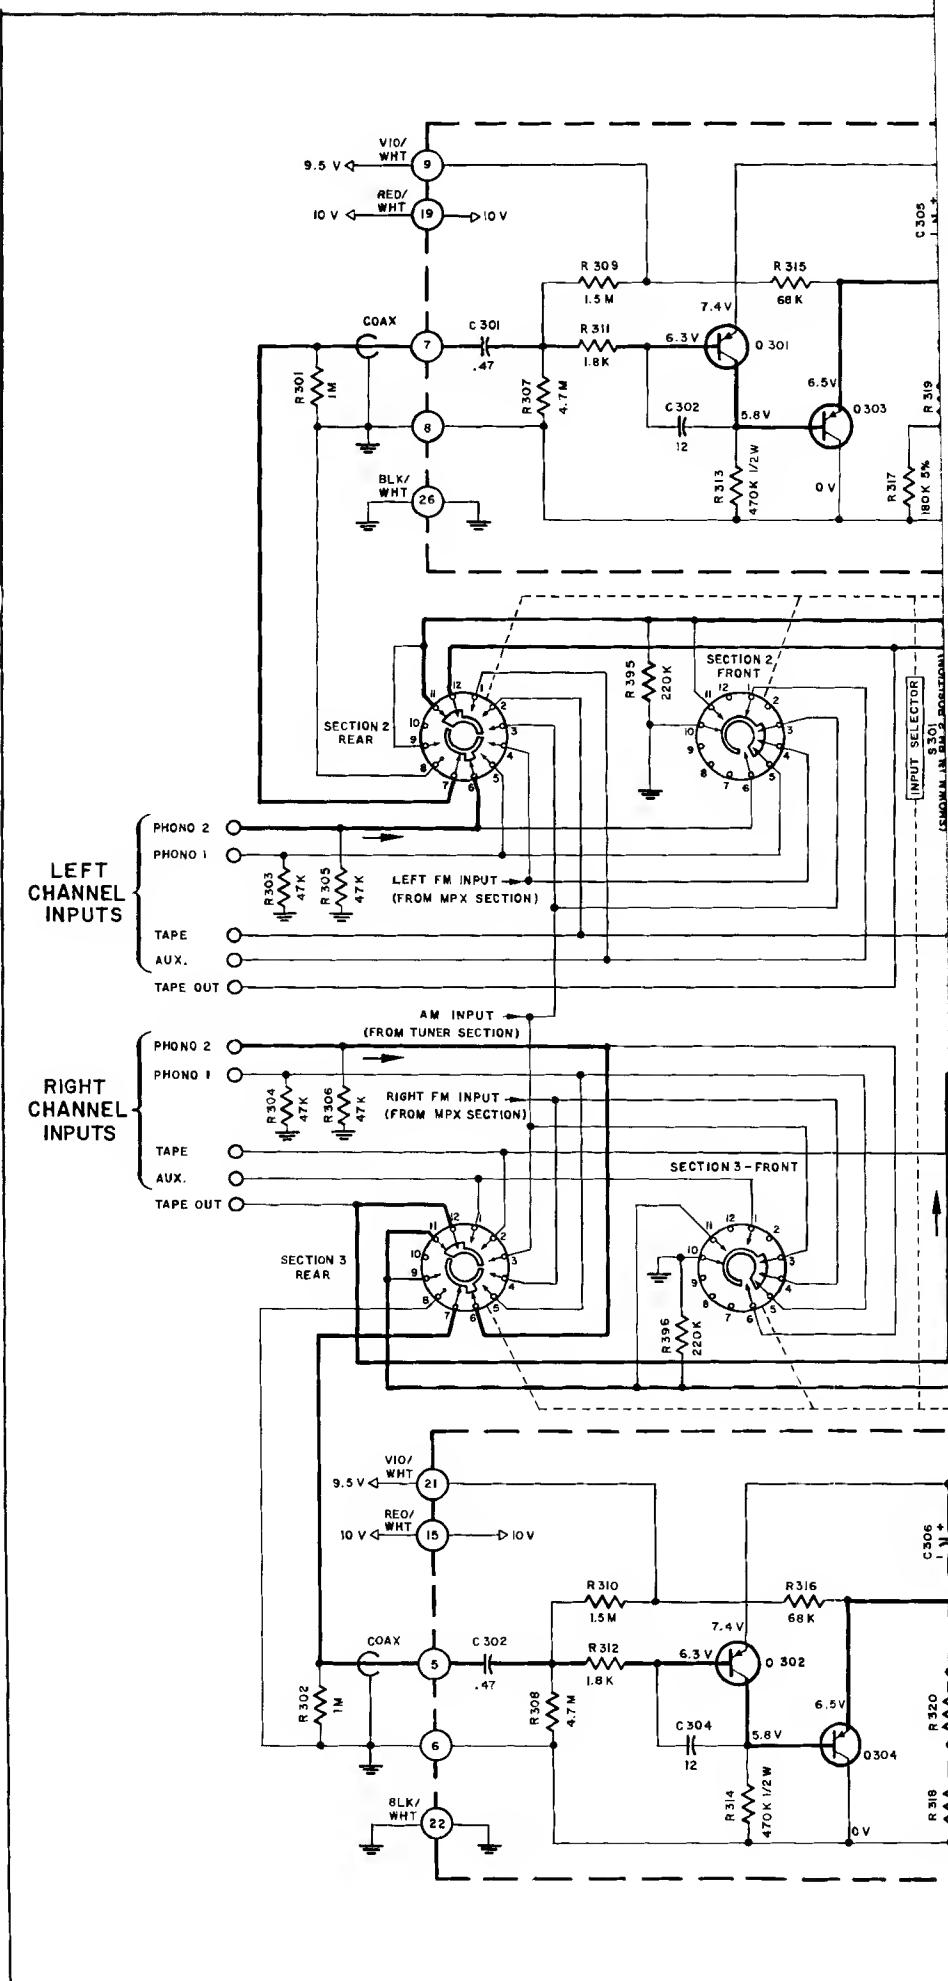


LEFT CHANNEL PREAMP. PRINTED C

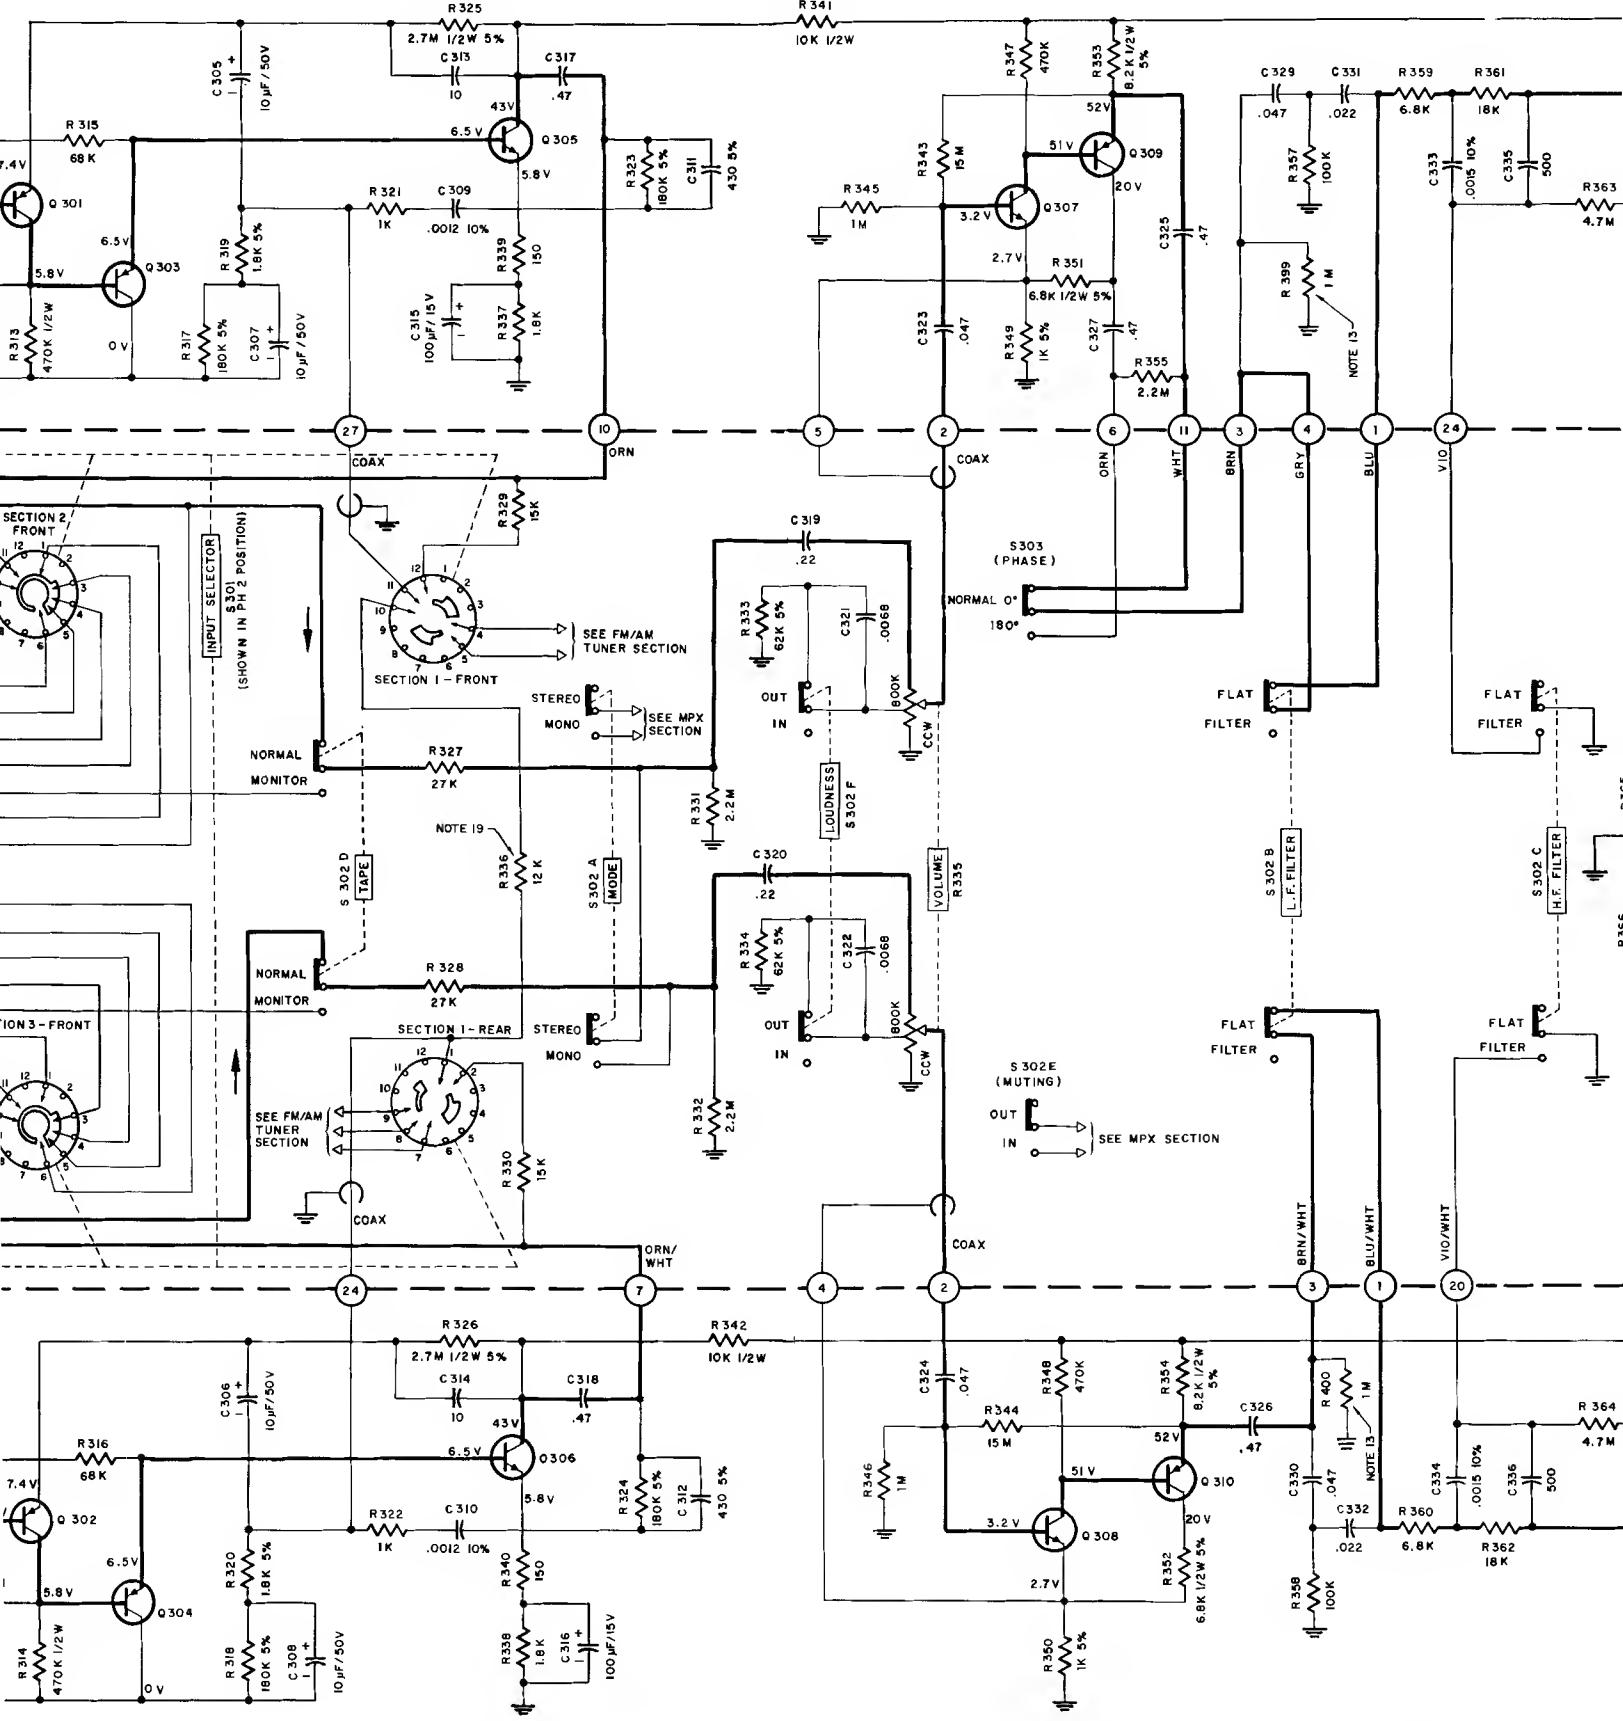

RIGHT CHANNEL PREAMP. PRINTED CIR

CIRCUIT BOARD 043-991

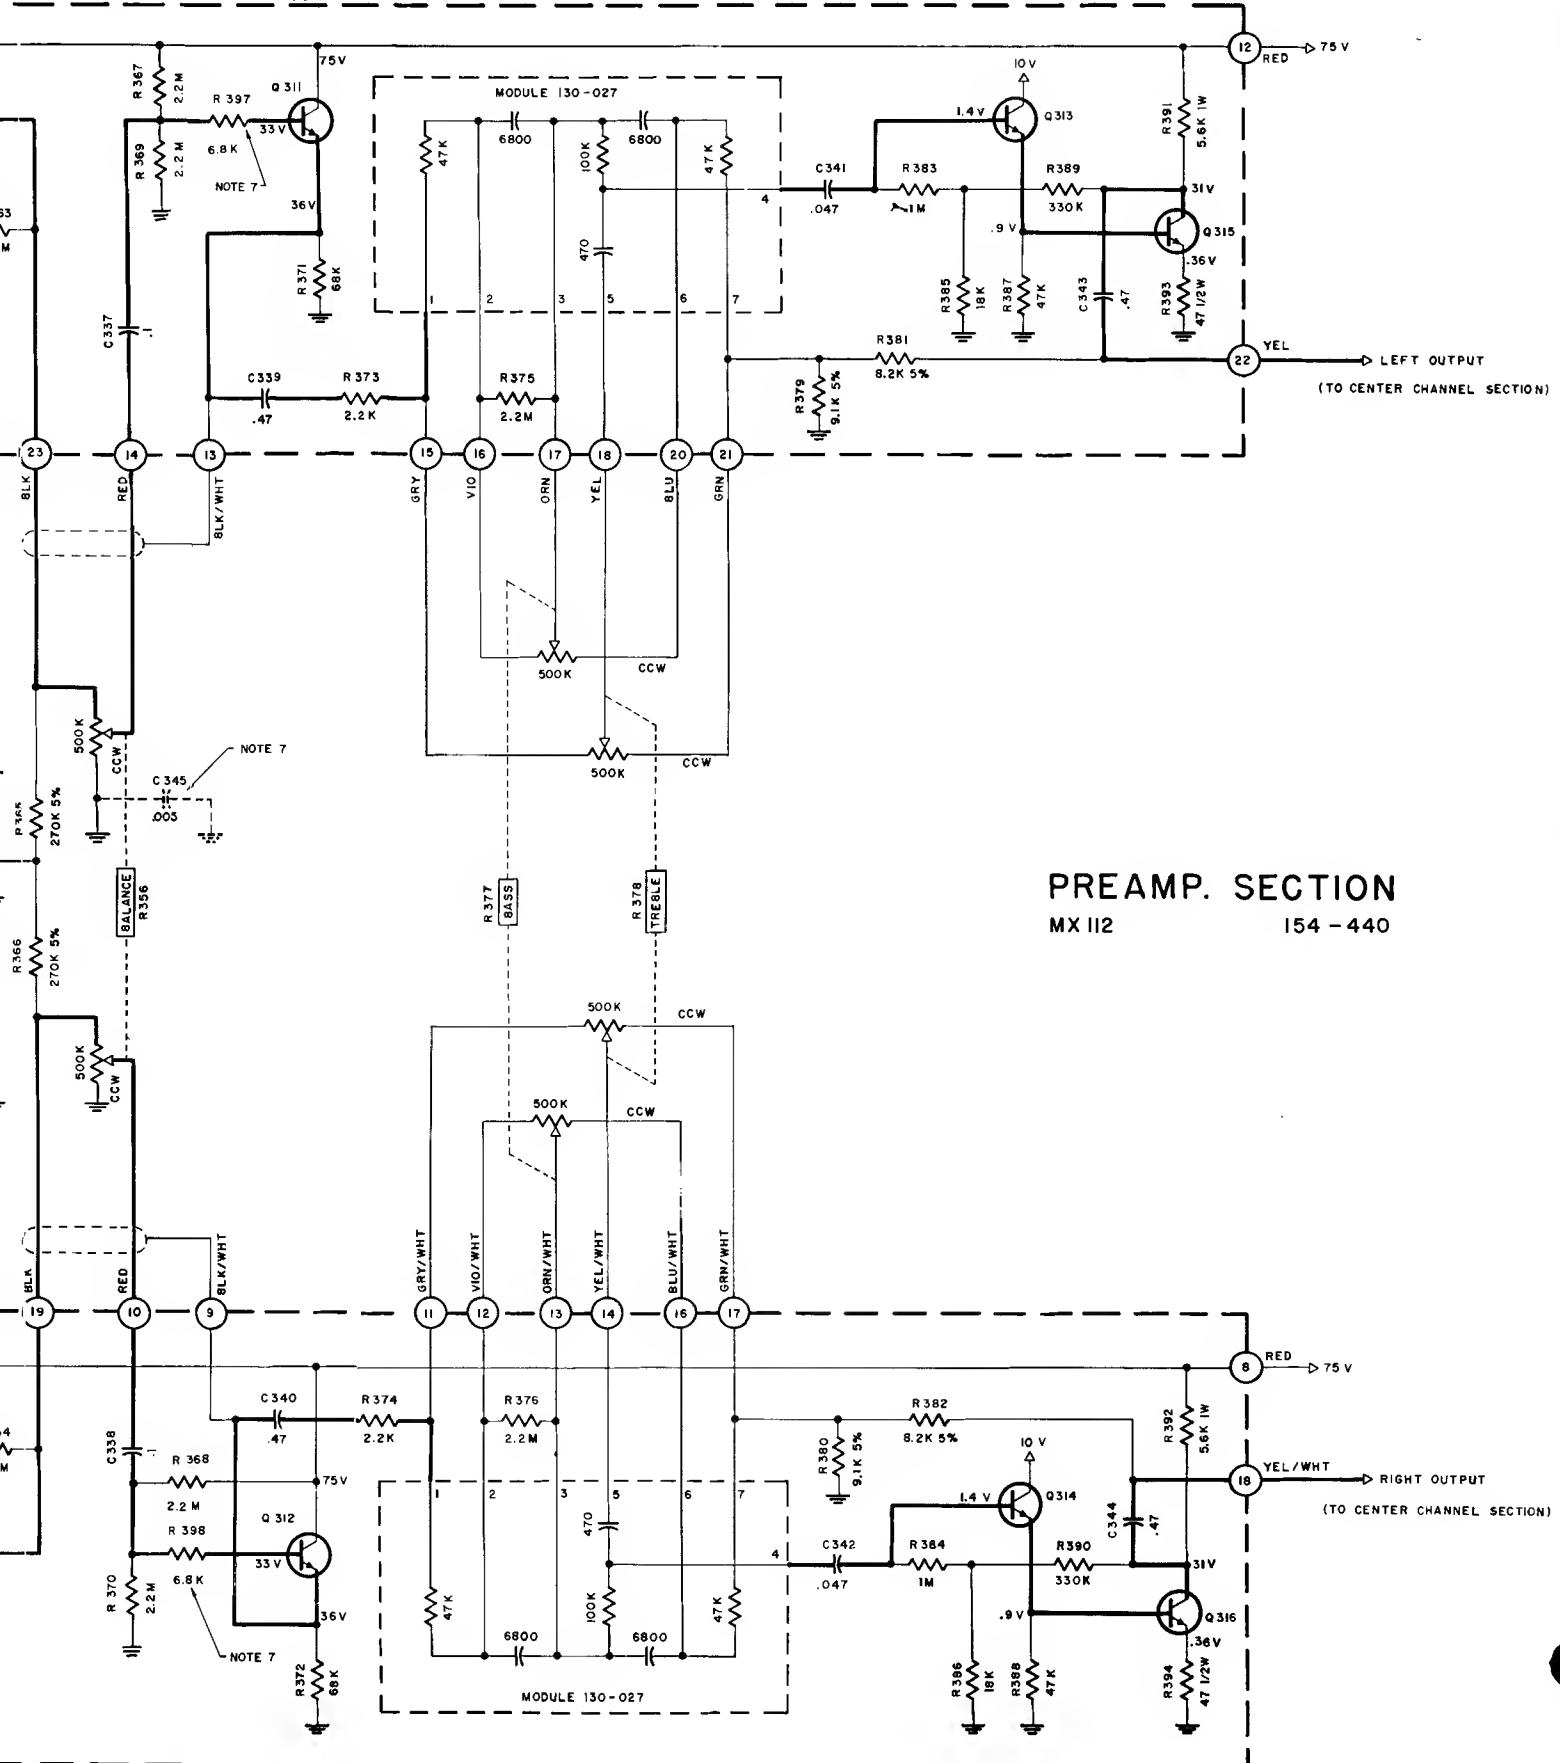


PREAMP. SECTION


MX II2

154 - 440

CIRCUIT BOARD 043-992

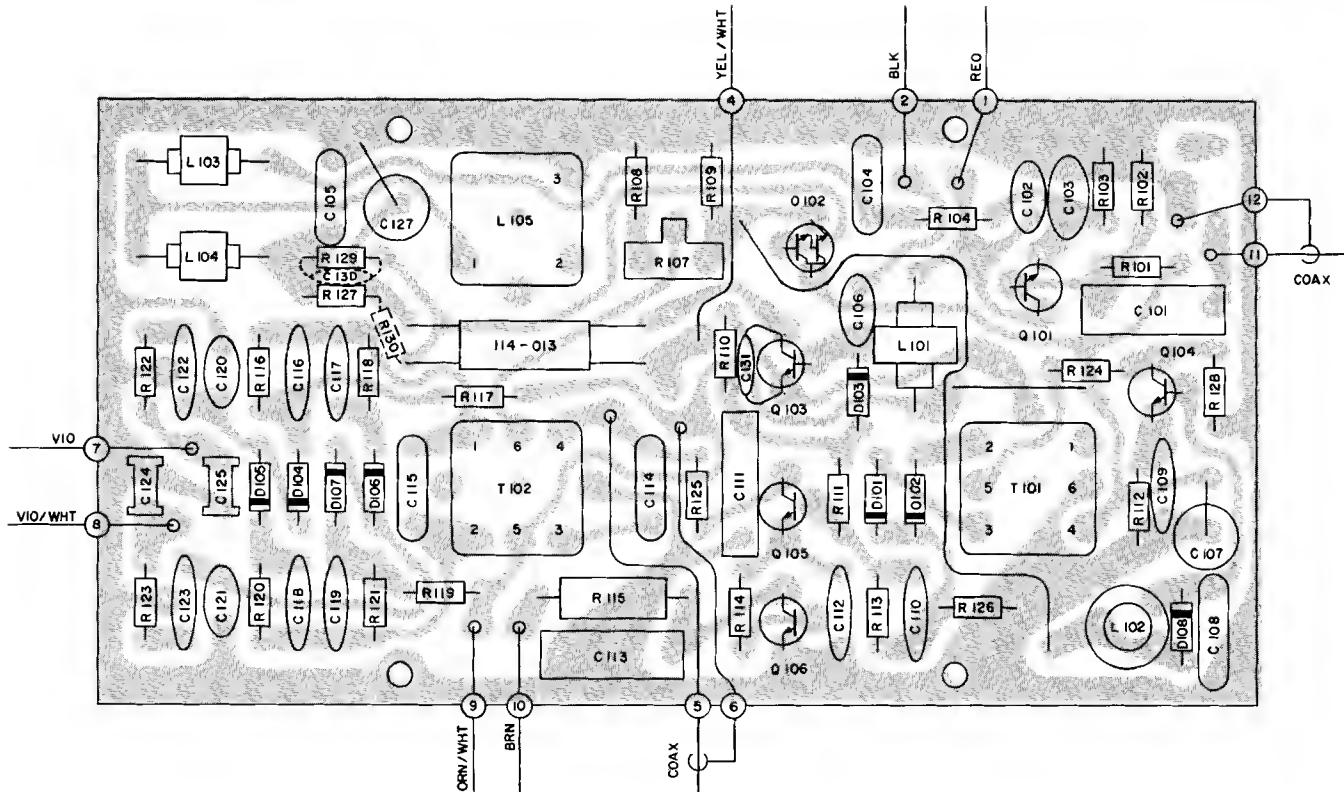

MPX PRINTED CIRCUIT BOARD 043-974

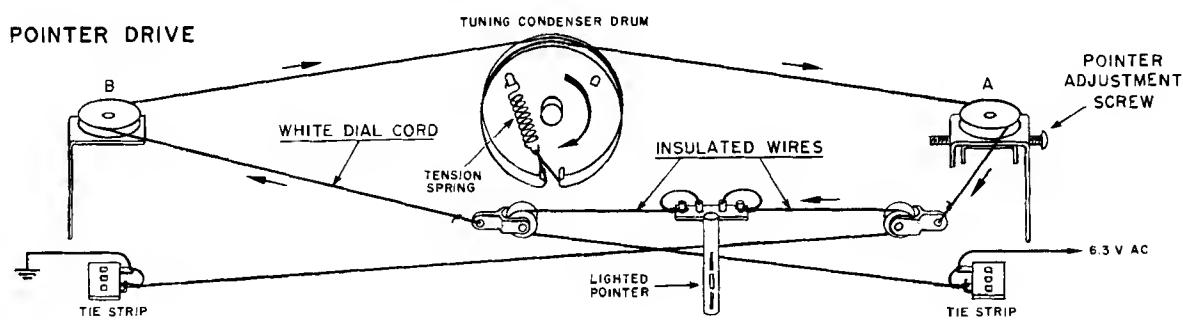


Step 1 Before stringing unit, turn pointer adjustment screw until pulley "A" is in the center of its travel.

Step 2 String unit as shown.

Step 3 After stringing unit, turn tuning shaft until pointer is as far to the left as it will go. Turn the pointer adjustment screw until the pointer coincides with the zero bar of the logging scale.

Step 4 Turn the tuning knob making the pointer move back and forth from one end of the dial scale to the other. Return pointer to the far left and, if necessary, readjust pointer position.

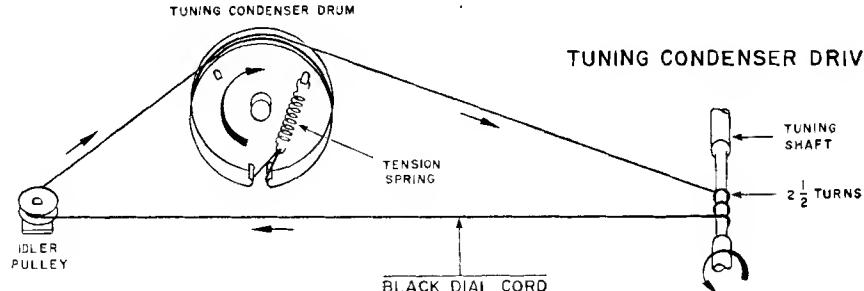


DIAL CORD SEQUENCE


(TO LEFT SIDE PULLEY B) WHITE ————— (TO IDLER PULLEY AND TUNING SHAFT) BLACK ————— TUNING CONDENSER DRUM (TOP VIEW) ————— WHITE (TO RIGHT SIDE PULLEY A) BLACK (TO TUNING SHAFT)

POINTER DIAL STRINGING


MIXER AND LOCAL OSCILLATOR P.C. BOARD
043-953

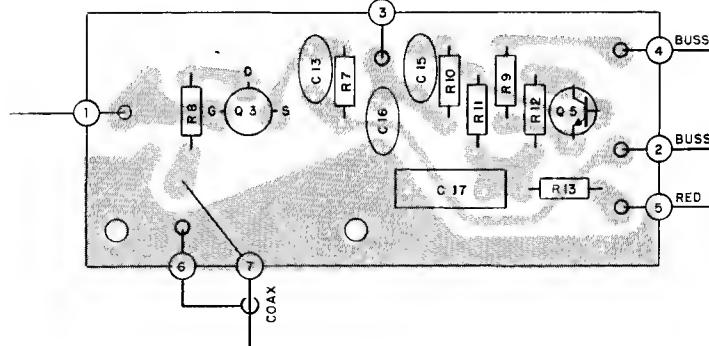


IF PRINTED CIRCUIT BOARD 043-954

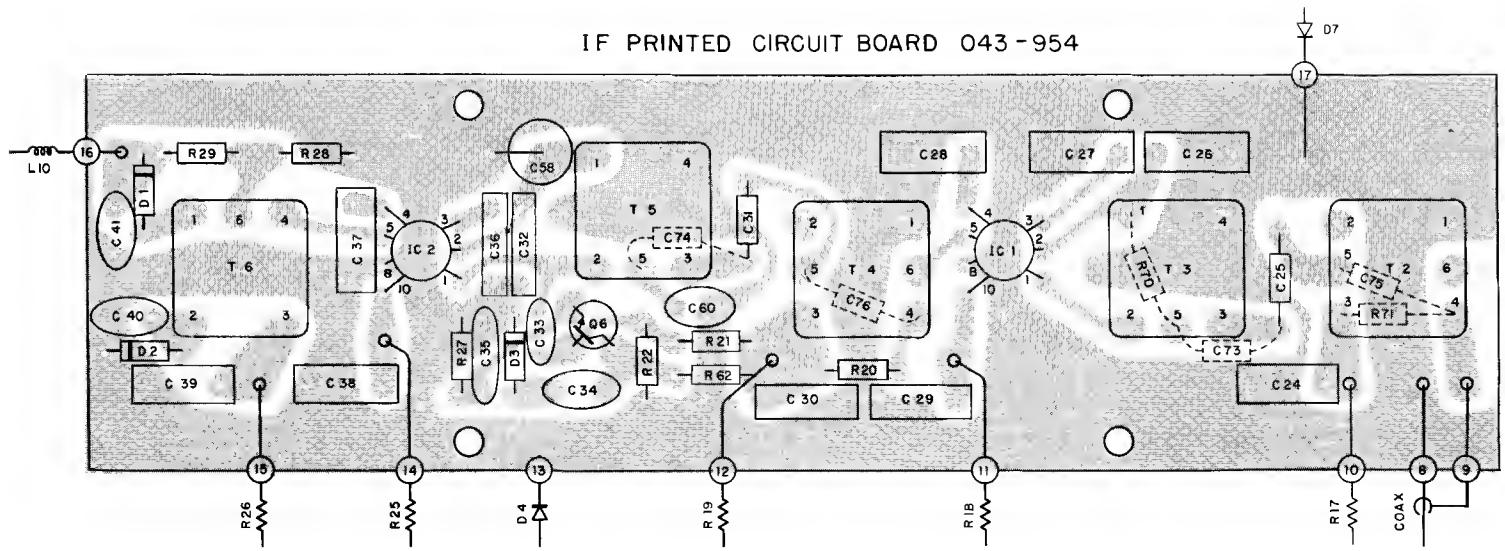


AM PRINTED CIRCUIT BOARD 044-017

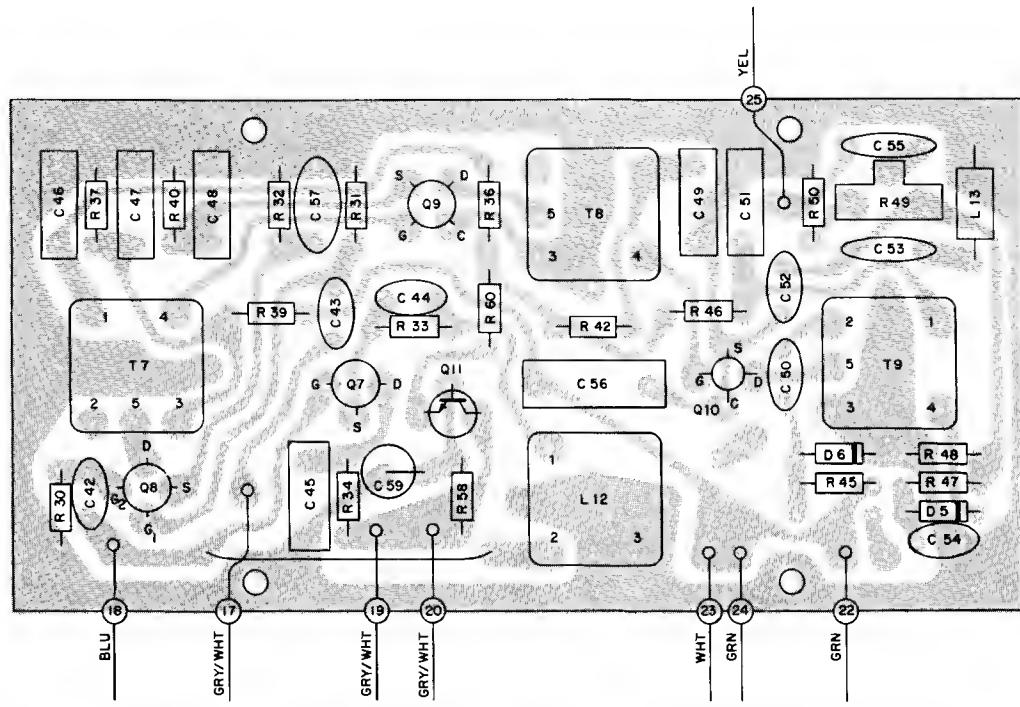


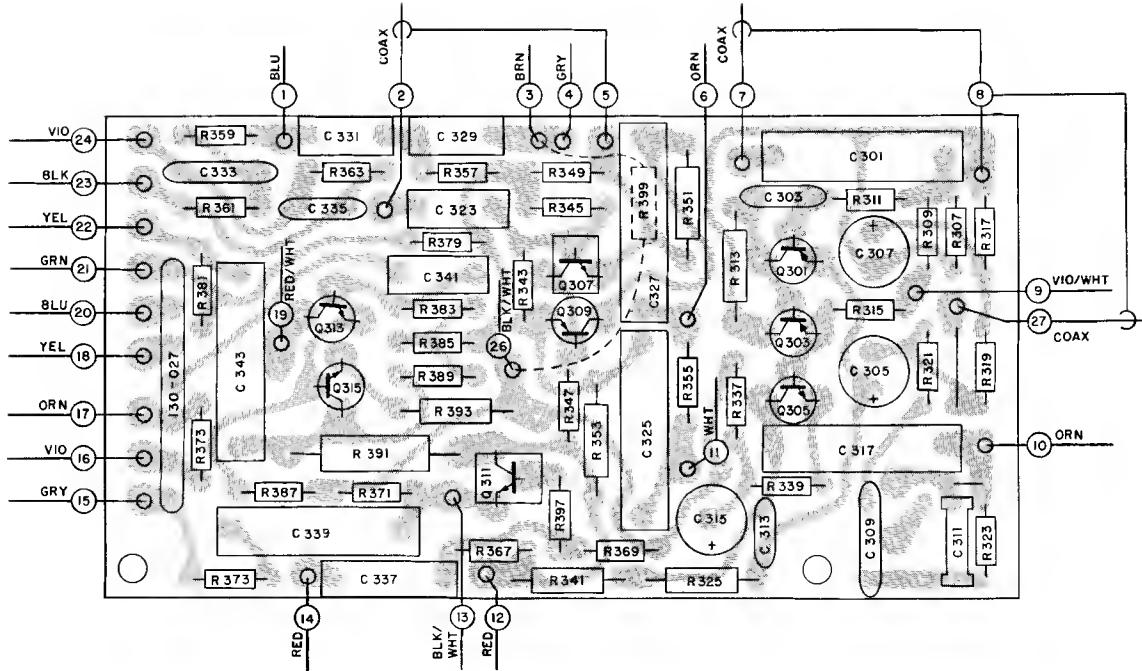

LEFT CHANNEL PREAMP PRINTED CIRCUIT BOARD 043-991

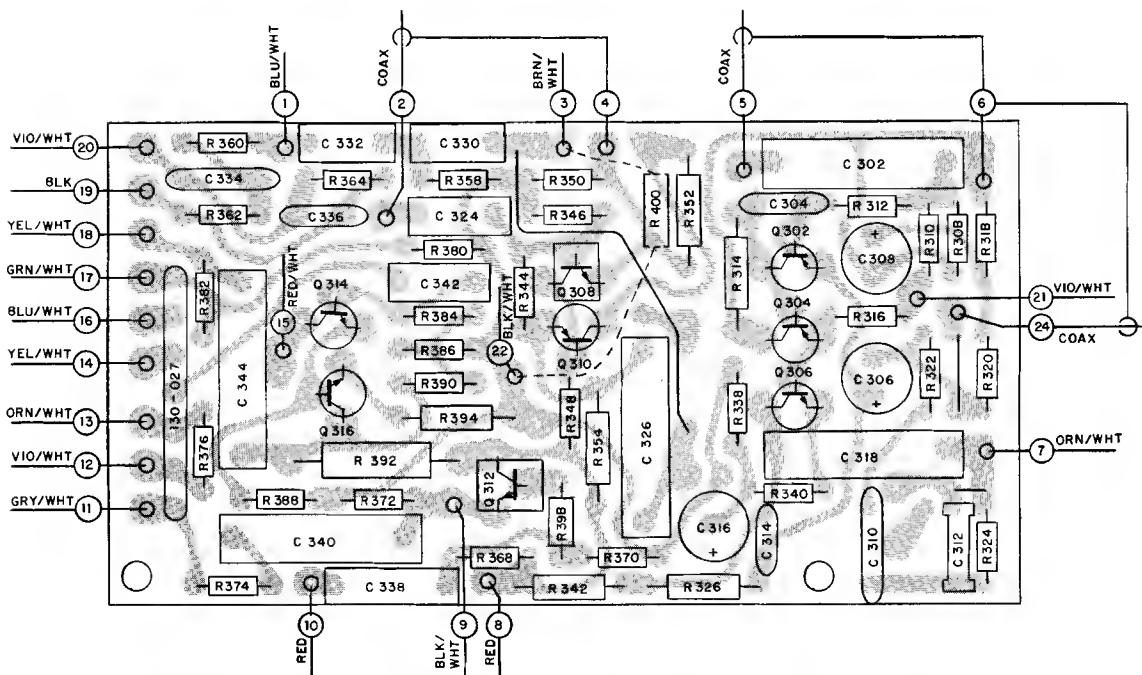


RIGHT CHANNEL PREAMP. PRINTED CIRCUIT BOARD 043-992

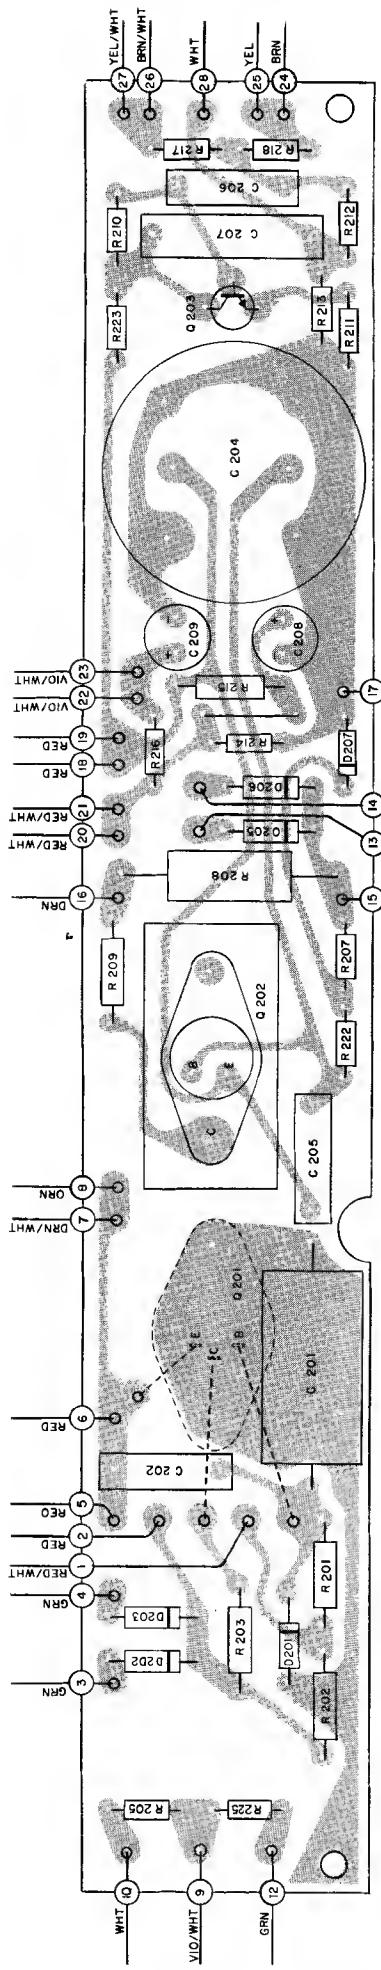


PRINTED CIRCUIT BOARD 043-983

PRINTED CIRCUIT BOARD 043-983

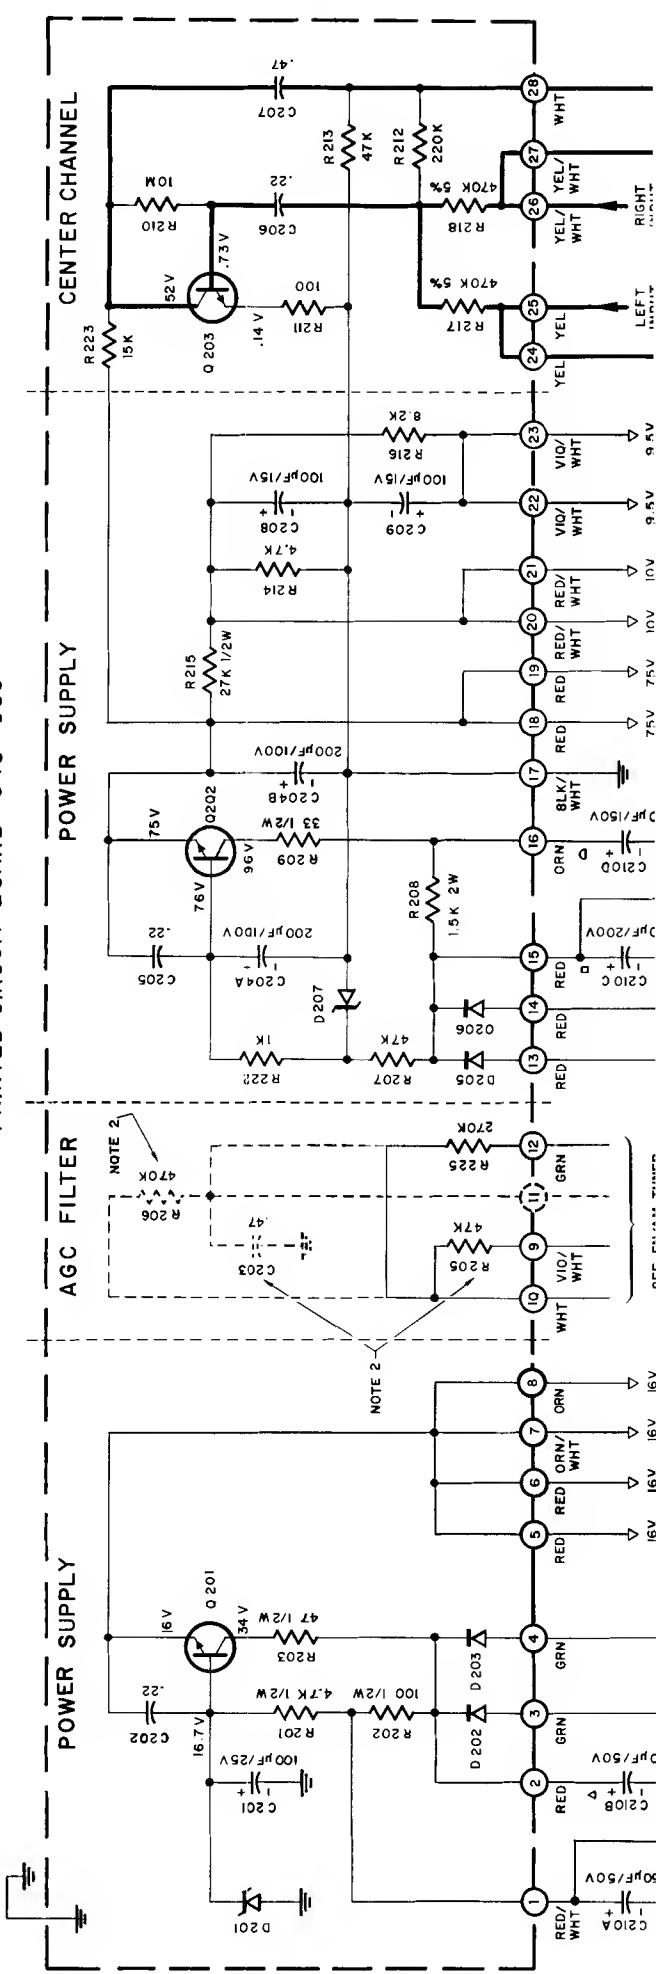

PRINTED CIRCUIT BOARD 043-983

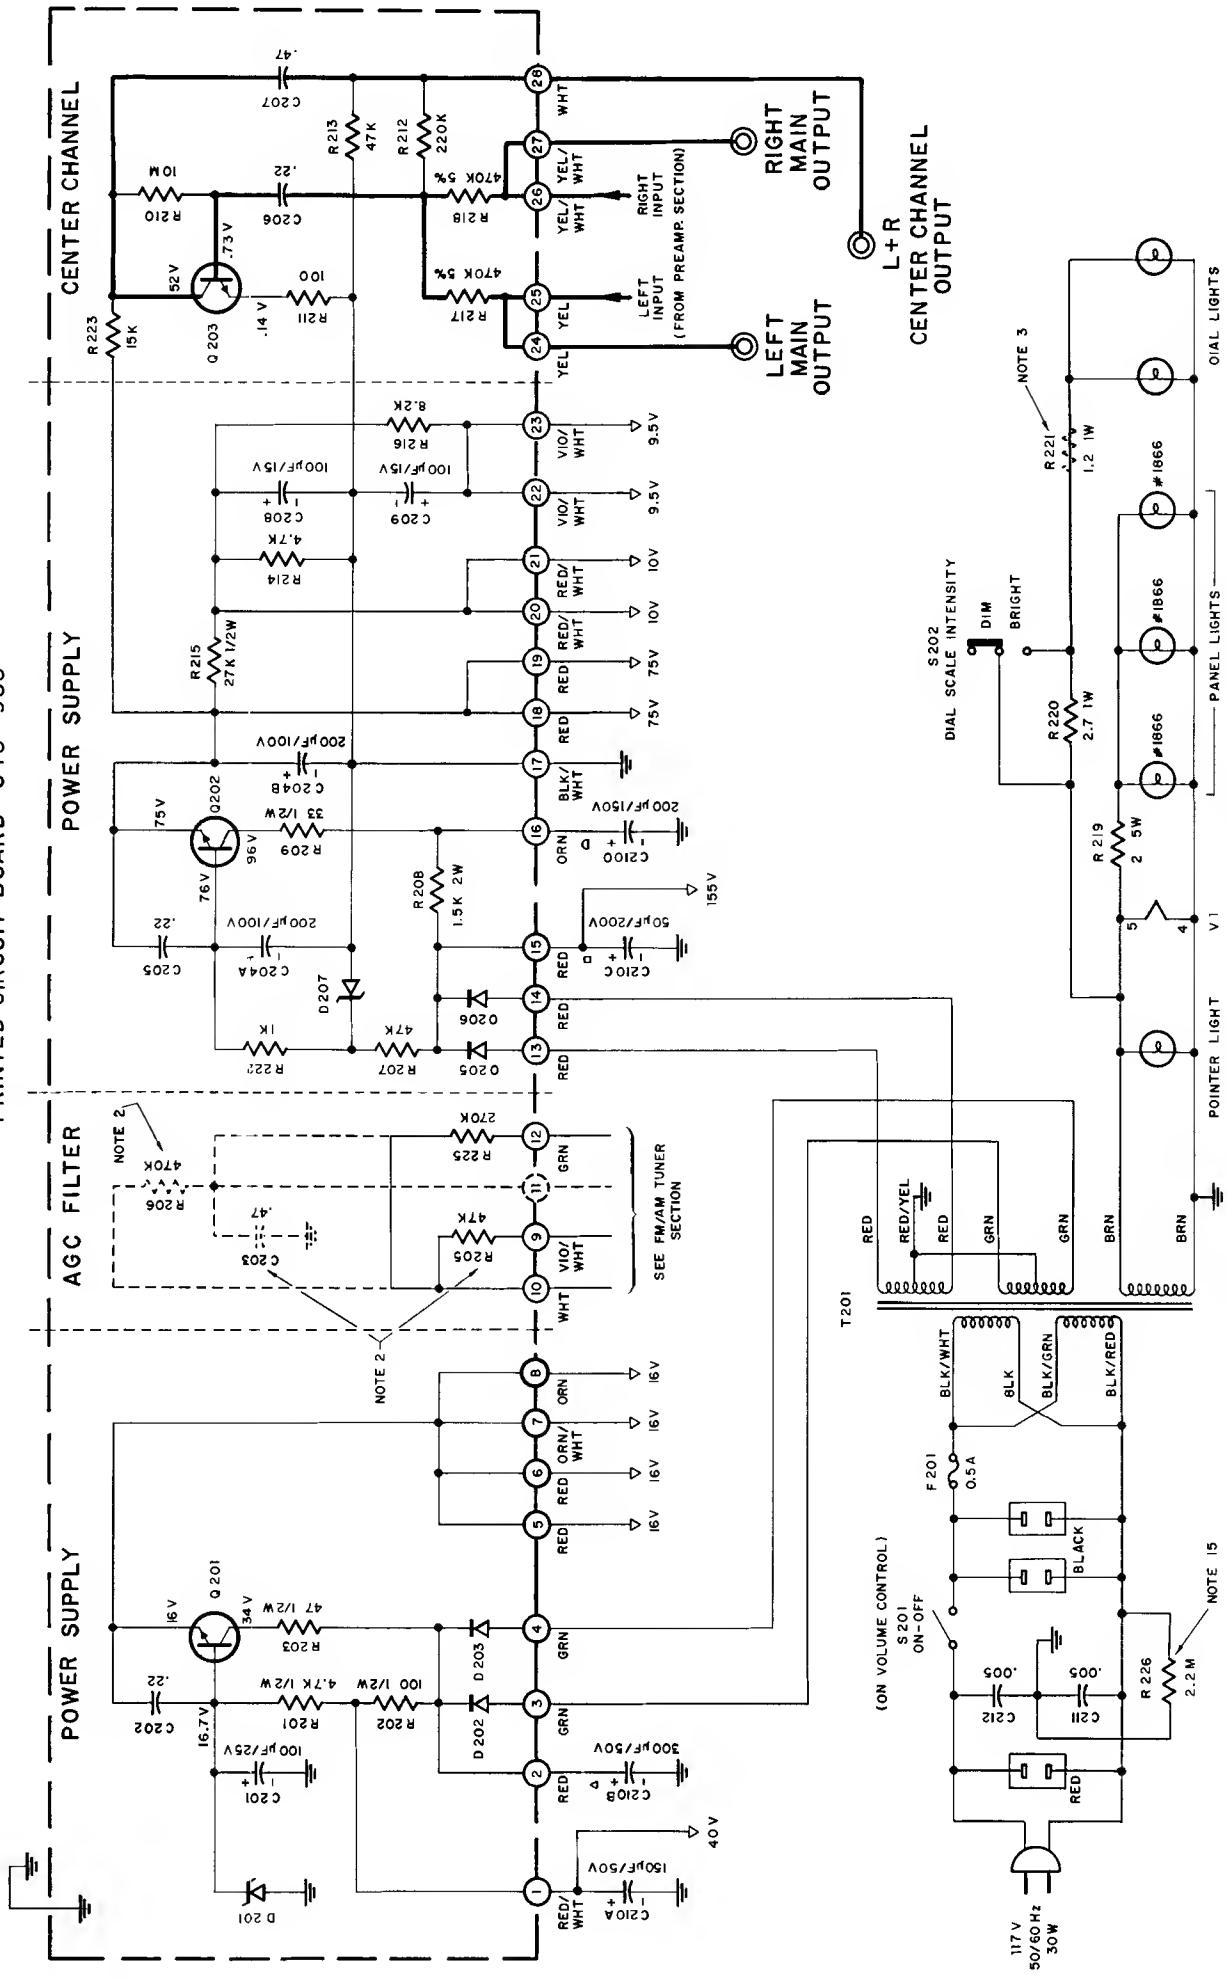




POWER SUPPLY / CENTER CHANNEL SECTION


MX 112 154 - 441

SCHEMATIC NOTES (CONT.)

14. In units with serial numbers below 31S34, R130 is not used.
15. In units with serial numbers below 31S35: C25 is 1.2pF; C31 is 1.5pF; C33 is .001μF; C73, C74, C75, C76, R70, R71, R72, and R226 are not used.
16. In units with serial numbers below 31S35, the drain of Q4 is connected directly to pin 17 on the AM PC Board and gate 1 of Q4 is connected directly to C19.
17. In units with serial numbers from 26S01 to 31S35, R55 is 56k.
18. In units with serial numbers below 31S35, C20 is .01μF.
19. In units with serial numbers below 31S56: R31 is 100k; R336 is 18k; C126 is used; C130 and C131 are not used; C17, C24, C26, C27, C28, C29, C30, C32, C36, C37, C38, C39, C45, C46, C47, C48, C49, and C51 are .047μF.
20. In units with serial numbers below 31S56: R23 is 15k; R27 is 1.5k; R62 is 2.7k, and R15 is 1M.
21. In units with serial numbers below 31S68, R57 is used; R52 is 100k and the AM sensitivity switch is wired as shown by dotted lines.
22. In units with serial numbers from 31S35 to 31S86, C56 is 1.5pF.
23. In units with serial numbers below 37S50, R131 is not used and R105 is a 200k potentiometer (McIntosh part number 134-205).

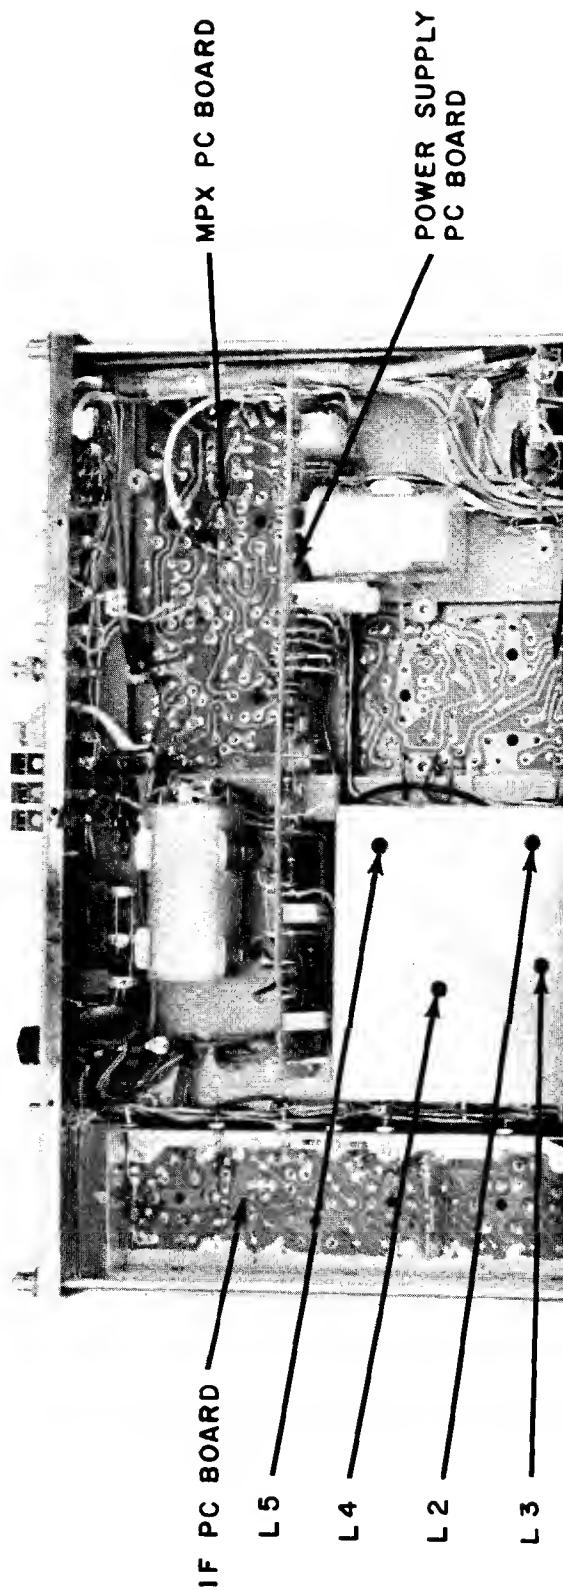

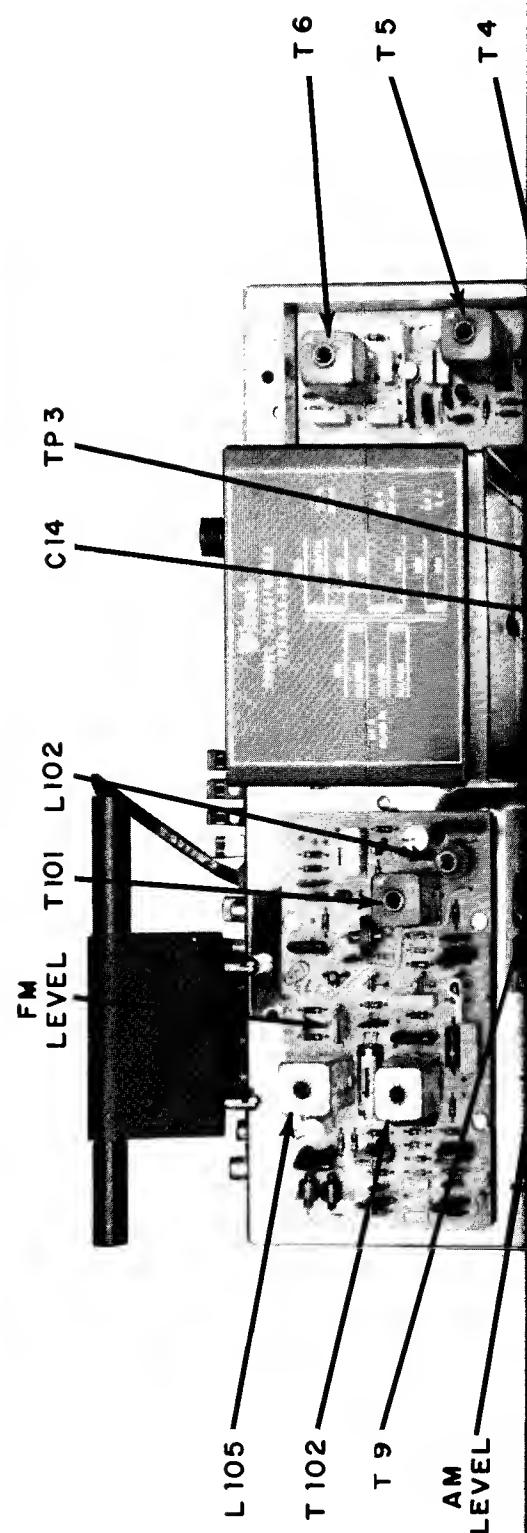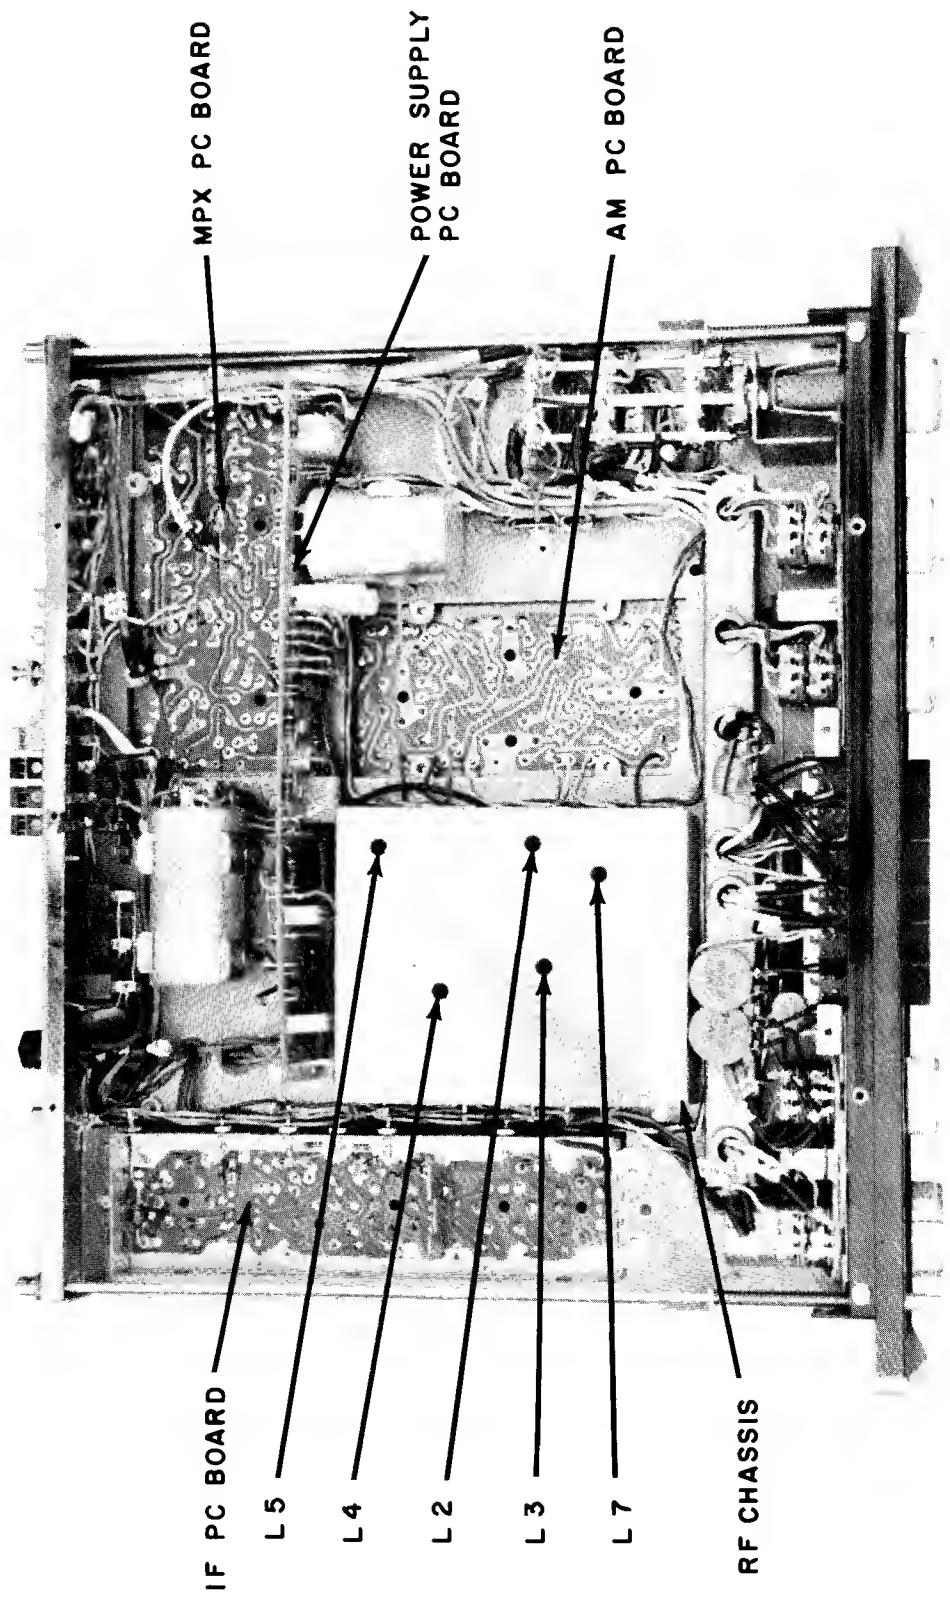

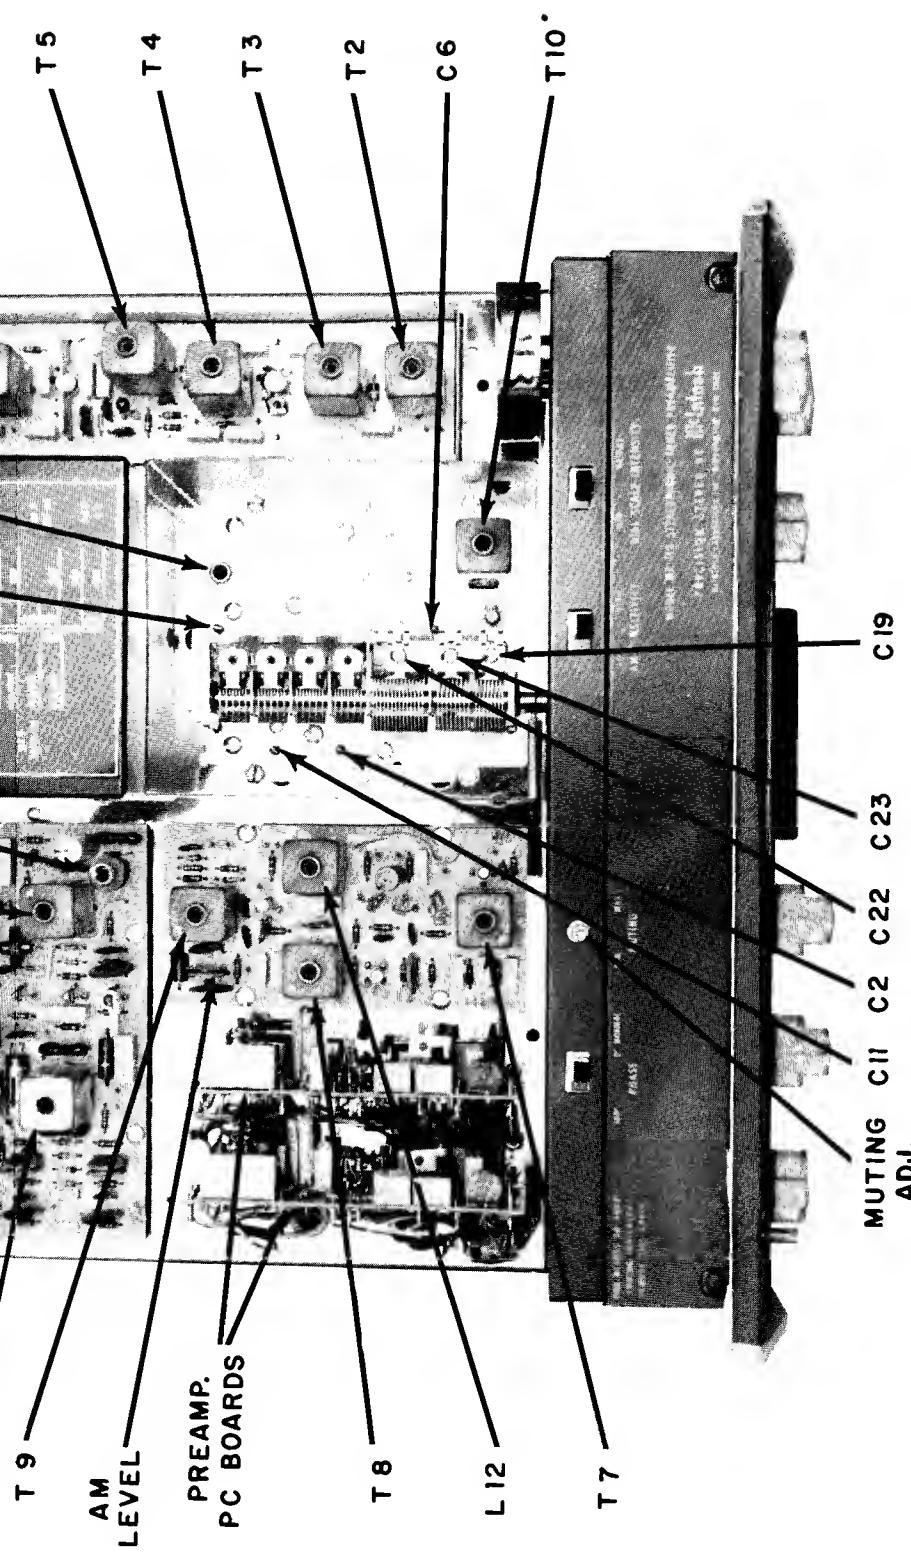

MX 112 ALIGNMENT INSTRUCTIONS

All McIntosh tuners are carefully aligned and tested at the factory using the finest available test equipment. All McIntosh tuners will meet their published specifications when shipped from the factory.

After extensive operation, or servicing, it may be desirable to realign the tuner circuits for best performance. The charts below give complete information on the circuit realignment procedure for the MX 112.

The test equipment listed (or its equivalent) is necessary to properly align an MX 112. The accuracy of the alignment will be directly related to the accuracy and calibration of the test equipment used.

If the necessary test equipment is not available, alignment should not be attempted. For additional information, contact Customer Service Department, McIntosh Laboratory Inc., 2 Chambers Street, Binghamton, New York 13903 (telephone 607-723-3512).

Alignment should be done in the following order: AM-FM-MPX

TEST EQUIPMENT REQUIRED

1. FM Signal Generator (Measurements 188 or equivalent)
2. AM Signal Generator (Measurements 65B or equivalent)
3. VTVM
4. Multiplex Generator (RCA WR-51A or equivalent)
5. 10.7MHz Generator (preferably crystal controlled)
6. Oscilloscope (Hewlett-Packard 120B or equivalent)
7. Harmonic Distortion Analyzer (Hewlett-Packard 333A or equivalent)

AM ALIGNMENT

STEP	TUNER DIAL SETTING	SIGNAL GENERATOR			INDICATOR	ADJUST	TEST LIMITS	REMARKS
		FREQ.	COUPLING	MODULATION				
1	Point of no interference or signal	1455kHz	Through external .01μF capacitor to junction of C13 and T10 pin 2.	CW	VTVM	Junction of C55 and C56 and sliding arm of AM level pot.	Top (pri) & bottom (sec) cores of T7, T8 and T9	Switch input selector to FM to make AM local oscillator inoperative. As the tuner output increases, attenuate generator output to keep tuner output at minimum.
2	600kHz	600kHz	Through a 200PF capacitor to ant. terminals.	Same	Same	L12 (oscillator coil)	Maximum possible voltage	Same as step 1 except input selector is on AM.
3	1400kHz	1400kHz	Same	Same	C23 (oscillator trimmer)	Same	Repeat steps 2 & 3 until dial calibration is accurate.	
4	600kHz	600kHz	Same	Same	L17 (AM antenna trimming coil) & T10 (AM-RF)	Same	Same as step 1 except input selector is on AM.	
5	1400kHz	1400kHz	Same	Same	C19 (AM antenna trimmer) & C22(AM-RF trimmer)	Same	Repeat steps 4 & 5 until output is as high as possible.	
6	1000kHz	1000kHz	Same	30% @ 400Hz	Distortion Analyzer	L or R output	With a distortion analyzer, the following measurements can be performed:	
							1. IHEM sensitivity of 10 microvolts for -20dB of signal to noise ratio. (this measurement is only possible in the absence of man-made interference, as fluorescent lamps, etc.)	
							2. With a 1mV input signal, harmonic distortion, whistle filter attenuation at 10kHz modulating frequency and signal to noise ratio may be measured.	
							3. With a 1mV input signal adjust "AM Level" control (R149) for .30 volt of audio output at tape-outputs.	

FM ALIGNMENT

STEP	TUNER DIAL SETTING	SIGNAL GENERATOR			INDICATOR	ADJUST	TEST LIMITS	REMARKS
		FREQ.	COUPLING	MODULATION				
1	Point of no interference or signal	10.7MHz	TO TP-3	FM +200kHz at 60Hz rate	Oscilloscope	TP #1	Top (second-bottom (primary) cores of T1, T2, T3, T4, T5 about 10.7 MHz and 10.7MHz ± 75kHz markers.	If sweep generator has no built-in markers, use external marker generator by mixing with swept RF-signal at TP#3. First adjust Pri. and Sec. tuning slugs of T2, 3, 4, 5 for maximum amplitude. Note this amplitude on the scope. Then, readjust T3 and T4 (T2 and T5 if necessary) for 220kHz bandwidth and optimum symmetry, taking care that amplitude of scope pattern shall not decrease by more than 30%. Hold input

1	Point of no interference or signal	10.7MHz	to 105MHz	at 50Hz rate	scope	bottom (primary) cores of T1, T2, T3, T4 about 10.7MHz and 10.7MHz ± 75kHz markers.	swept in 1 sec. tuning slugs of T2, 3, 4, 5 for maximum amplitude. Note this amplitude on the scope. Then, readjust T3 and T4 (T2 and T5 if necessary) for 20kHz bandwidth and optimum symmetry, taking care that amplitude of scope pattern shall not decrease by more than 30%. Hold input signal to a low level to prevent limiting.
2	Same	10.7MHz	Same	CW	VTVM	Pin 6 of T6	T6 primary (bottom core)
3	Same	Same	Same	Same	TP #2	T6 secondary (top core)	Maximum possible negative voltage
4	105MHz	105MHz	300 ohm antenna terminals w/matching network	400 cycles 75kHz deviation	VTVM connected to TP #1 and scope connected to L or R audio output	Oscillator Trimmer (C14)	Maximum negative voltage
5	90MHz	90MHz	Same	Same	Same	Oscillator Coil (L5)	Adj. for 0 Volts
6	105MHz	105MHz	Same	Same	Same	Mixer trimmer, RF trimmer & antenna trimmer C11, C6, C2	Same
7	90MHz	90MHz	Same	Same	Same	Mixer, RF and antenna coil tuning slugs L4, L3, L2	Repeat steps 4 and 5 until dial calibration is accurate.
8	105MHz & 90MHz	105MHz & 90MHz	Same	Same	VTVM connected to TP #1 and scope connected to L or R audio output.	Repeat steps 6 and 7 until TP#1 voltage is as high as possible. Connect a distortion analyzer to output jacks (either main or tape) and apply a 1mv input signal. Measure harmonic distortion and adjust T6 (primary) bottom slug for minimum distortion. (Should be less than 0.5%).	As the tuner output increases, attenuate generator output to keep TP #1 voltage at a low level.
							Step 8 is an overall sensitivity check. Adjust muting control (R105) by reducing the signal input to 5 microvolts for a 2dB drop in audio output. Push in muting button (S302E) for this adjustment.

MULTIPLEX DECODER ALIGNMENT


STEP	TUNER DIAL SETTING	SIGNAL GENERATOR FREQ.	COUPLING	MODULATION	INDICATOR	CONNECTED TO	ADJUST	TEST LIMITS	REMARKS
1	100MHz	100MHz	300Ω antenna W/ approx. 1000 microvolts signal W/* matching network	75kHz Deviation @ 67kHz	AC-VTVM	L or R output jack	L105 (SCA ADJ.)	Minimum output @ L or R output jack	L105 (SCA adj.) is adjusted for minimum output with 67kHz modulation.
	100MHz	100MHz	Same	19kHz pilot	AC-VTVM	T101, pin 2	L102 (19kHz pilot)	Adjust for maximum AC output.	Decrease pilot level so that 19kHz circuits are not being saturated.

7							
8	105MHz & 90MHz	105MHz & 90MHz	Same	VTVM connected to TP #1 and scope connected to L or R audio output.			
				Connect distortion analyzer to L or R output and reduce signal at antenna for -30dB total distortion and noise. Input signal required is THFM usable sensitivity of the tuner (2.5 microvolts).			

MULTIPLEX DECODER ALIGNMENT

STEP	TUNER DIAL SETTING	SIGNAL GENERATOR FREQ.	COUPLING	MODULATION	INDICATOR TYPE	CONNECTED TO	ADJUST	TEST LIMITS	REMARKS
1	100MHz	100MHz	300Ω antenna terminals W/ approx. 1000 microvolts signal W/* matching network	75kHz Deviation @ 67kHz	AC-VTVM	L or R output jack	L105 (SCA ADJ.)	Minimum output @ L or R output jack	L105 (SCA adj.) is adjusted for minimum output with 67kHz modulation.
2	100MHz	100MHz	Same	19kHz pilot	AC-VTVM or oscilloscope W/* very low cap. probe	T101, pin 2 or 3.	L102 (19kHz phase adj.) & T101 (19 kHz doubler)	Adjust for maximum AC voltage	Decrease pilot level so that 19kHz circuits are not being saturated.
3	Same	Same	Same	Same	T102, Pin 1 or 2.	T102 (Pri) & bottom (Sec) maximum AC voltage	Adj. for maximum AC voltage	Decrease pilot level so that 19kHz and 38kHz circuits are not being saturated. Mode switch must be in stereo position.	
4	Same	Same	Same	1kHz (100% modulation) L or R only, pilot on	L or R output jack	T102, Bottom (Sec.) tuning slug.	30dB separation or more	First, modulate left channel and measure right channel output. Adjust T102 bottom - tuning slug (Sec.) for minimum right channel output (maximum separation). Then, reverse channels and measure left channel separation. For this adjustment and measurement, no test lead should be connected to TP#2, and the dust cover over this section should be in place.	
5	100MHz	100MHz	Same	1kHz (100% modulation) L or R only, pilot on	AC-VTVM	L or R output jack	Less than 10mV volts of residual	Adjust "FM-Level" control (R107) for 1 volt of audio output at tape-outputs. Then, turn off the modulation and measure the residual of the 10kHz and 38kHz frequencies.	

* ANTENNA
MATCHING
NETWORK

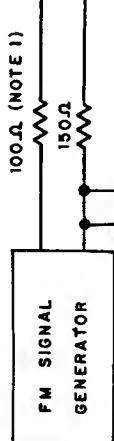

Note. 1 : If signal generator has other than 50 ohm internal impedance, use a resistor of 150 ohms less internal generator impedance.

REPLACEMENT PARTS

All parts not listed are common items obtainable from radio parts jobbers.

Replacement parts may be obtained when ordered by PART NUMBER from:

McIntosh Laboratory Inc.
Customer Service Department
2 Chambers Street
Binghamton, New York 13903
(telephone 607-723-3512)

CAPACITORS

Symbol Number		Description	Part Number
C56	Mylar	.22μF	250V
C58, 59	Elect.	100μF	15V
C101	Mylar	.22μF	250V
C107	Elect.	100μF	15V
C111	Mylar	.1μF	250V
C113	Mylar	.22μF	250V
C127	Elect.	100μF	15V
C201	Elect.	100μF	25V
C202	Mylar	.22μF	250V
C204	Elect.	200/200μF 100V	066-129
C205, 206	Mylar	.22μF	250V
C207	Mylar	.47μF	250V
C208, 209	Elect.	100μF	15V
C210	Elect.	50/200/300/150μF 200/150/50/50V	066-218
C301, 302	Mylar	.47μF	250V
C305, 306	Elect.	10μF	20V
C307, 308	Elect.	10μF	20V
C315, 316	Elect.	100μF	15V
C317, 318	Mylar	.47μF	250V
C319, 320	Mylar	.22μF	200V
C323, 324	Mylar	.047μF	250V
C325, 326	Mylar	.47μF	250V
C327	Mylar	.47μF	250V
C329, 330	Mylar	.047μF	250V
C331, 332	Mylar	.022μF	250V
C337, 338	Mylar	.1μF	250V
C339, 340	Mylar	.47μF	250V
C341, 342	Mylar	.047μF	250V
C343, 344	Mylar	.47μF	250V
DIODES			
D1, 2	Si. signal diode		070-022
D3, 4	Si. signal diode		070-022

D5	Ge. signal diode	070-003	Q104, 10
D6, 7	Si. signal diode	070-022	Q106
D101, 102	Si. signal diode	070-022	Q201
D103	Si. signal diode	070-022	Q202
D104	Ge. signal diode	070-003	Q203
D105, 106	Ge. signal diode	070-003	Q301, 30
D107	Ge. signal diode	070-003	Q303, 30
D108	Bias diode	070-046	Q305, 30
D201	Zener diode 16V	070-042	Q307, 30
D202, 203	Si. rectifier	070-031	Q309, 30
D205, 206	Si. rectifier	070-031	Q311, 30
D207	Zener diode 75V	070-025	Q313, 30
FUSE			Q315, 30
F201	Fuse .5 amp Slo-blo	089-020	
CHOKES			
L1	Choke 1.2μH	122-011	R49
L2	FM antenna coil	122-069	R105
L3	FM RF coil	122-070	R107
L4	FM mixer coil	122-071	R335
L5	FM local oscillator coil	122-072	R356
L6	AM loop antenna	122-074	R377, 30
L7	AM antenna coil	122-073	R219
L10	Choke 75μH	122-013	R220
L12	AM oscillator coil	122-066	R221
L13	Choke 100mH	122-004	
L14	Choke 1.2μH	122-011	S1
L101	Choke 1mH	122-065	S202
L102	Filter coil (19kHz phase)	122-067	S301
L103, 104	Filter coil (lo pass)	122-015	S302
L105	Filter coil (SCA adjust)	122-068	S303
TRANSISTORS			
Q1	Si. junction F.E.T.	132-049	T1
Q2, 3	Si. junction F.E.T.	132-049	T2
Q4	M.O.S. F.E.T.	132-064	T3
Q5, 6	Si. NPN transistor	132-015	T4
Q7	Si. junction F.E.T.	132-049	T5
Q8	M.O.S. F.E.T.	132-064	T6
Q9, 10	M.O.S. F.E.T.	132-061	T7, 8
Q11	Si. NPN transistor	132-041	T9
Q101	Si. NPN transistor	132-057	T10
Q102	Si. NPN transistor	132-052	T101
Q103	Si. NPN transistor	132-041	

003	Q104,105	Si. NPN transistor	132-057
022	Q106	Si. NPN transistor	132-042
022	Q201	Si. NPN transistor	132-072
022	Q202	Si. NPN transistor	132-516
003	Q203	Si. NPN transistor	132-069
003	Q301,302	Si. PNP transistor	132-056
003	Q303,304	Si. PNP transistor	132-056
046	Q305,306	Si. NPN transistor	132-069
042	Q307,308	Si. NPN transistor	132-054
031	Q309,310	Si. PNP transistor	132-056
031	Q311,312	Si. NPN transistor	132-054
025	Q313,314	Si. NPN transistor	132-057
020	Q315,316	Si. NPN transistor	132-042
		POTENTIOMETERS	
	R49	AM level	134-177
011	R105	Muting adjust	134-216
069	R107	FM level	134-197
070	R335	Volume control	134-202
071	R356	Balance control	134-201
072	R377,378	Tone control	134-203
		RESISTORS	
073	R219	Wirewound 2.0Ω 5W	139-005
013	R220	Wirewound 2.7Ω 1W	139-002
066	R221	Wirewound 1.2Ω 1W	139-001
		SWITCHES	
011	S1	AM sensitivity	148-023
065	S202	Dial scale intensity	148-023
067	S301	Input selector	146-125
015	S302	Pushbutton	150-004
068	S303	Phase	148-023
		TRANSFORMERS	
049	T1	Balun	043-226
049	T2	FM IF transformer	162-034
064	T3	FM IF transformer	162-035
015	T4	FM IF transformer	162-034
049	T5	FM IF transformer	162-035
064	T6	FM discriminator	162-036
061	T7,8	AM IF transformer	162-038
041	T9	AM IF transformer	162-038
057	T10	AM RF transformer	162-033
052	T101	RF transformer (19kHz)	162-031

T102	RF transformer (38kHz)	162-03
T201	Power transformer	043-86
	TUBES	
V1	6HU6	165-02
	INTEGRATED CIRCUITS	
I01,2	Integrated circuit	133-00
	MODULES	
	Tone control module	130-02
	LAMPS	
	#1828 (MPX lamp)	058-02
	#1866 (front panel)	058-01
	Festoon lamp (dial glass)	058-03
	FRONT PANEL & TRIM	
	Front panel	043-92
	Front panel end caps	018-12
	Tuning knob	043-27
	Volume control knob	043-25
	Balance knob	043-25
	Input selector knob	043-25
	Bass knob (rear)	090-00
	Bass knob (front)	043-62
	Treble knob (rear)	090-00
	Treble knob (front)	043-62
	Muting knob	090-01
	MOUNTING SYSTEM	
	Shelf bracket (right)	043-59
	Shelf bracket (left)	043-59
	Mounting template #100	038-17
	Hardware package	043-44
	MISCELLANEOUS ITEMS	
	FM dipole antenna	170-03
	Dial glass	043-89
	Pointer	043-87
	Dial cord (complete)	043-89
	Fuseholder	178-00
	AC power cord	170-02
	Shipping carton	043-94
	Owners manual	038-44
	Plastic feet	017-04
	Push terminal (antenna)	074-03

T102	RF transformer (38kHz)	162-039
T201	Power transformer	043-865
TUBES		
V1	6HU6	165-025
INTEGRATED CIRCUITS		
IC1,2	Integrated circuit	133-001
MODULES		
	Tone control module	130-027
LAMPS		
#1828 (MPX lamp)		058-027
#1866 (front panel)		058-014
Festoon lamp (dial glass)		058-032
FRONT PANEL & TRIM		
Front panel		043-920
Front panel end caps		018-120
Tuning knob		043-272
Volume control knob		043-253
Balance knob		043-253
Input selector knob		043-253
Bass knob (rear)		090-009
Bass knob (front)		043-625
Treble knob (rear)		090-009
Treble knob (front)		043-625
Muting knob		090-010
MOUNTING SYSTEM		
Shelf bracket (right)		043-592
Shelf bracket (left)		043-593
Mounting template #100		038-179
Hardware package		043-446
MISCELLANEOUS ITEMS		
FM dipole antenna		170-033
Dial glass		043-897
Pointer		043-876
Dial cord (complete)		043-891
Fuseholder		178-001
AC power cord		170-021
Shipping carton		043-949
Owners manual		038-447
Plastic feet		017-041
Push terminal (antenna)		074-032

Shorting plug	127-001
Audio cable (6')	170-015
LDR network	144-013

FRONT GLASS ONLY - 016-054125.00

McIntosh SERVICE BULLETIN

AM NOISE REDUCTION MODIFICATION

MODEL: MX 112 FM/AM Tuner-Preamp

PURPOSE OF MODIFICATION: To improve AM signal to noise ratio.

WHAT UNITS ARE AFFECTED: Serial No. 10S01 to 43S90 Only.

WHEN MODIFICATION SHOULD BE MADE: When customer complains that AM is noisy on local stations or that sensitivity is poor.

McINTOSH MODIFICATION KIT NO.: No kit.

PARTS REQUIRED:

QUANTITY	PART NUMBER	DESCRIPTION
1	061-043	.01 μ F +80-20% Disc capacitor


PROCEDURE:

- Step 1 Remove bottom cover, Multiplex-AM top cover, and RF front end bottom cover. Remove capacitors C204 and C208 on AM PC board. See service manual for exact location. Replace top cover.
- Step 2 Locate Q4, AM RF amplifier in RF front end chassis. Connect the .01 μ F disc capacitor between the source terminal of Q4 and the ground lug of the terminal strip as shown in the accompanying sketch. Replace bottom covers.
- Step 3 Check performance. If dial calibration is off at high end of the band, perform AM alignment steps 3 and 5 in service manual. The top cover of the RF front end is removed for access to the alignment trimmers.

(over)

BOTTOM VIEW

RF CHASSIS

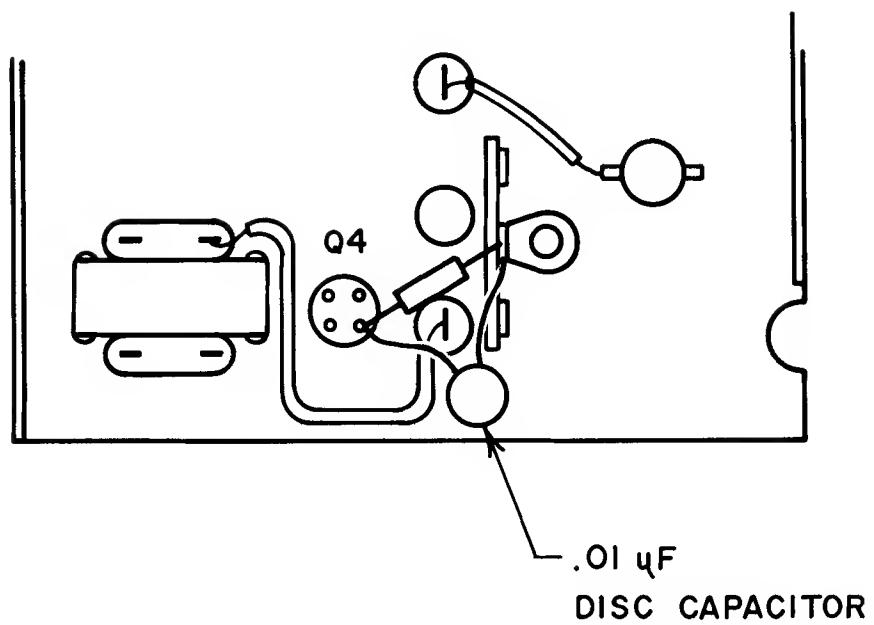

FRONT OF UNIT

McIntosh SERVICE BULLETIN

SCA FILTER MODIFICATION

MODEL: MX 112 Tuner Preamplifier

PURPOSE OF MODIFICATION: To increase effectiveness of SCA filter.

WHAT UNITS ARE AFFECTED: Serial No. 10S01 to 31S55 only.

WHEN MODIFICATION SHOULD BE MADE: When a customer complains of "birdies", whistles, or other noises on certain multiplex stations.

MCINTOSH MODIFICATION KIT NO. : No kit available.

PART REQUIRED:

Quantity	Description
1	150pF 20% Ceramic Disc Capacitor RMC type JG or equal.

PROCEDURE:

- Step 1 Remove bottom cover of the MX 112.
- Step 2 Remove the perforated cover from the MPX section.
- Step 3 Solder the capacitor in parallel with R129, a 47k resistor that connects between the SCA filter and the base of Q102. Keep leads short.
- Step 4 Feed a 1 volt 67 kHz signal from an audio oscillator into TP #2 of the MX 112. Observe the signal on a scope at the tape output. Adjust the SCA filter for minimum 67 kHz in the output.
- Step 5 Replace the covers.

038-375