

6

5

EXPANDER BOARI

3

DO NOT SCALE DRAWING

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS: DECIMALS: ANGLES: ± XX ± ± .XXX±

MATERIAL:

FINISH:

4

©1994,©1999 Mackie Designs Inc. All rights reserved


7

8

3

8•B			ERV	ICI	ΕM			, באי	_/_A_V	G	<u> </u>	Ę
	DWG.	^{NO.} 9	90-0	019	-00	^{sнт} 1	rev: S		1			
	REV:	ECO#		REV	ISIONS	DESCR			REV. BY:	APP. BY:	DATE	
	С	67				CTOR PI			тн	JC	11-12-93	_
	D	189				ING CON		RS	TH	JGG	5-20-94	_
	S	307 688	TOOLIN	G HO	LES TO				KR		10-31-96	D
		993	SOLDEF	RBRI	DGE RE	DUCTION						_
												c
												-
												в
												-
CONTRA	CT NO:							~		-,		-
							/ A	(d	$ \langle \langle $		٦	
APP	ROVALS		DATE			Mackie Des	signs Inc.	Woodinvill	ـــــا <i>کـــــک</i> لــــ e, Wa.		~	A
DRAWN:	тн		6-23-	93								1
CHECKED):								ATIC			
ISSUED:	CHL		7-7-9	_		8-	-Bl	IS E	ΧΡΑ	NDE	R	
ENG:	CR		7-7-9		SIZE	-						-
MFG:	JG		7-7-9	13	D			99	$0 - 0^{2}$			4
	AR		7-7-9	13 s	CALE:					SHEET 1		
				2	2					1		
								•				
										A	-	``
ים		0	DE	X 7	C				-]()	1	
RI) 1	9	RE	V	S				-	19	-1	

MAGKE 8.8 SERVICE MANUAL

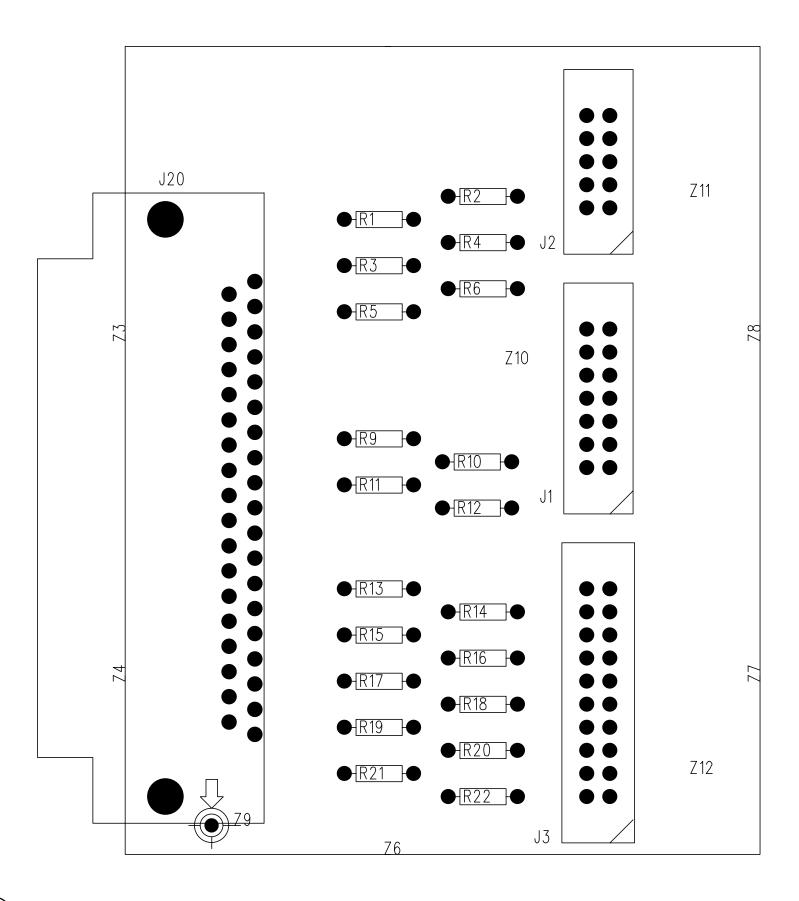

19-2

EXPANDER BOARD 19 REV S