


P/O= PART OF

TC4 & TC4001
ATTENDANT KEY SYST. WIRING
KM0717

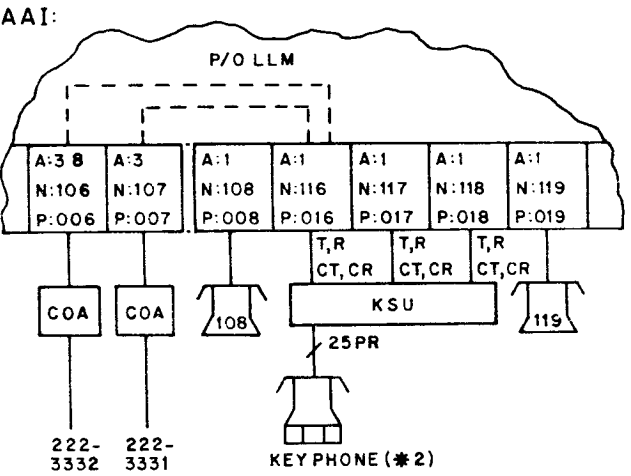


INCOMING: TO FIRST AVAILABLE KEY. OVERFLOW TO 119, ETC.

OUTGOING: DIAL "9" FOR FIRST AVAILABLE TRUNK (i.e., 006, 007, ...). IF ALLOWED IN SET UP, A PARTICULAR TRUNK MAY ALSO BE SELECTED BY USING ITS ARCH NO. ("N:")

NOTES:


1. ANY SYSTEM MAY USE ONE OR MORE BASIC TYPES.
2. KEY PHONE FUNCTIONS AS OPERATOR'S CONSOLE:
 - ANSWER INCOMING CALLS
 - TRANSFER INCOMING CALLS
 - BREAK INTO CALLS
 - PAGE REMOTE PICK UP
 - NIGHT PICK UP
 - ANSWER INTERNAL "DIAL 0"
3. ANY KEY HAS THE FOLLOWING CHARACTERISTICS:
 - NOT ASSOCIATED WITH ANY TRUNK NO. INCOMING CALLS GO TO FIRST AVAILABLE KEY AND KEY CLEARS WHEN CALL IS TRANSFERRED.
 - SET UP CAN PROVIDE DIAL "0" FOR CONSOLE PHONE, OR DIAL VARIOUS NUMBERS FOR INDIVIDUAL KEYS.

4. MNEMONIC	MODEL	DESCRIPTION
LLM	TC4150	LINE LINK MODULE
COA	TC4171	CENTRAL OFF ADAPT
KSU		KEY SYST UNIT

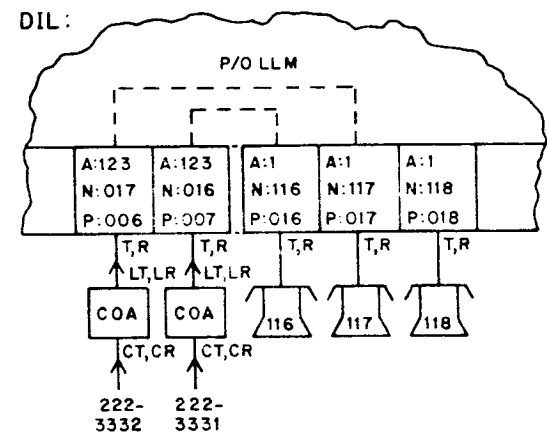


INCOMING: TO A SPECIFIED EXTENSION.

OUTGOING: NOT INCLUDED EXCEPT WHEN SET UP FOR SPECIFIED EXTENSION.

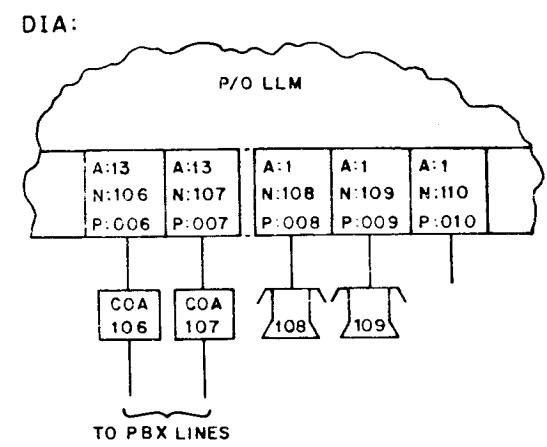

INCOMING: CALLER HEARS TC DIAL TONE AND MUST USE TONE DIALING PHONE TO SELECT TC EXTENSION.

OUTGOING: DIAL "9" FOR FIRST AVAILABLE TRUNK. IF ALLOWED IN SET UP, A PARTICULAR TRUNK MAY ALSO BE SELECTED BY USING ARCH NO. ("N:")

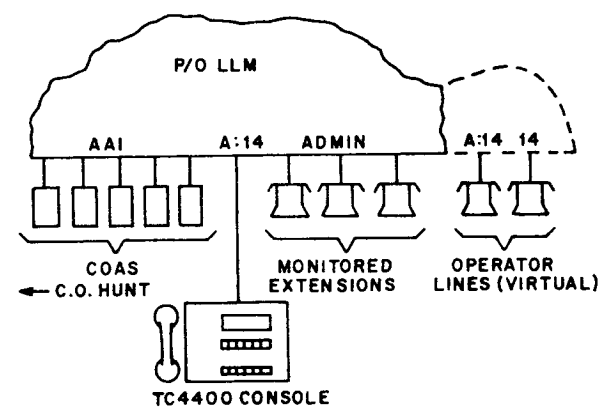

INCOMING: AUDIBLE AND FLASH ON TRUNK KEY- PRESS TO ANSWER.

OUTGOING: STATUS DISPLAYED ON TRUNK KEYS, RIGHT KEY TAKEN FIRST. CONSOLE CAN SELECT ANY TRUNK.

IMPORTANT: THE TC4400 CANNOT BE USED ON THE TELECENTER TCS SYSTEM.

TELECENTER® IV / TCS
INTERCONNECT
BASIC TYPES
KM0728 C