

SAVE THIS INSTRUCTION BOOK

POR FAVOR LEA LAS INSTRUCCIONES ANTES DE USAR EL PRODUCTO

 
CONSERVER CE GUIDE D'ENTRETIEN ET D'UTILISATION

 **BLACK & DECKER**®*

Auto-Off 2 Liter Kettle (English)

Tetera de 2 litros con apagado automático (Español)

Bouilloire de 2 litres à arrêt automatique (Français)

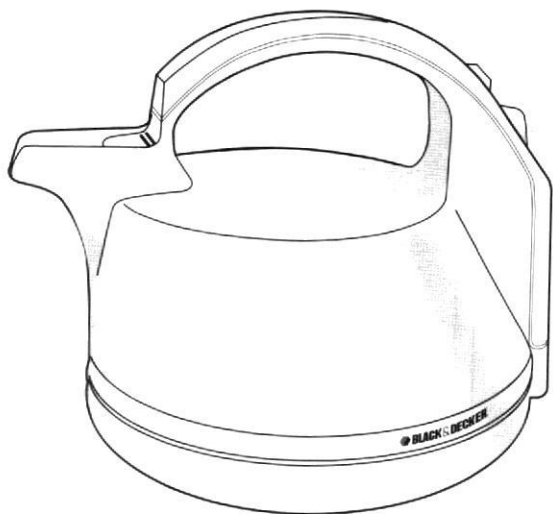


J.S.A./CANADA
MEXICO

1-800-231-9786
01-800-714-2499

<http://www.appliancesconsumerproductsinc.com>

 Série KE2000 Series

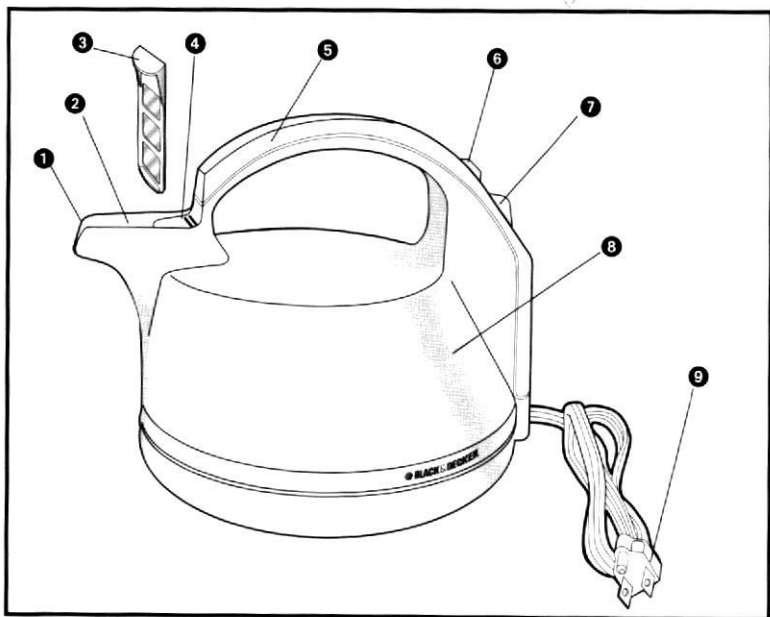

- 1 Spout
- 2 MAX Fill Line (at bottom of Spout)
- 3 Filter
- 4 Vent
- 5 Cool-Touch Handle
- 6 Indicator Light
- 7 On Switch
- 8 Kettle
- 9 Grounded (3-Prong) Plug

- 1 Boquilla
- 2 Nivel de llenado máximo (en el inferior de la boquilla)
- 3 Filtro
- 4 Escape
- 5 Asa térmica
- 6 Luz indicadora
- 7 Interruptor
- 8 Tetera
- 9 Enchufe de tierra (de tres contactos)

- 1 Bec
- 2 MARQUE de remplissage MAXimal (sous le bec)
- 3 Filtre
- 4 Évent
- 5 Poignée athermane
- 6 Témoin de fonctionnement
- 7 Interrupteur
- 8 Bouilloire
- 9 Fiche mise à la terre (à 3 broches)

- To avoid burns and risk of personal injury, use extreme caution when carrying Kettle containing hot water.
- Do not leave connected to an outlet where room temperature may fall to outdoor winter temperatures. At sub-zero temperatures, the Automatic Control Thermostat may reset and activate the heating element.
- This appliance is intended for household use only. Use for anything other than intended will void the warranty.

SAVE THESE INSTRUCTIONS

ELECTRICAL CORD

The cord length of this appliance was selected to reduce safety hazards that may occur with a longer cord. If more cord length is needed, an extension cord may be used. It should be rated not less than 10 amperes, 120 volts, and should have Underwriters Laboratories or appropriate agency listing. When using a longer cord, be sure to pull on the cord at the plug end, not the appliance end.

sure that it does not drape over a work surface or trip over.

GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

How To Use – English

NOTE: Before first use, fill the Kettle with water, plug in and press the Switch to On. Allow to boil. Discard the boiled water.

WARNING: This Kettle is protected by a boil dry safety device. If your Kettle is accidentally left plugged in without being filled or is allowed to boil to a very low level it will automatically repeat a cycle of turning off, cooling down, and coming back on unless unplugged. Unplug the Kettle and wait 5-10 minutes for the heating element to cool down before refilling with cold water and plugging back in for normal use.

BOILING WATER

1. Fill the Kettle to your selected level. Be sure not to exceed the MAX Fill line at the bottom of the Spout to prevent boiling over (A). **NOTE:** The minimum amount of water needed to avoid the safety thermostat cutting off the boiling is 16 oz. (500 ml) equal to 2 standard measuring cups of water.
2. Always use the Kettle on a flat, level surface. Plug in the cord and press On; the Indicator Light will come on.
3. When water has boiled, the light will go out, and the Kettle will shut off automatically. DO NOT attempt to hold the Switch on after boiling to force the Kettle to reheat. Allow to cool and refill with cold water to reuse.
4. DO NOT allow the Kettle to boil dry. Never place fingers, face, etc. near the Vent when boiling (B) as hot steam escapes and could cause scalding.
5. The Kettle has a Cool-Touch Handle and may be moved to a serving table. Be extremely cautious when moving a Kettle with hot water and be sure to place it on heating pad or trivet to protect the table or counter surface.

SCALE FILTER

Always boil water with the Scale Filter in place just behind the spout. Lime scale forms over time when water is heated. Though scale is natural and harmless, it may produce a powdery substance or mineral-like chunks that can get into your hot beverages and affect the taste. The Filter helps prevent particles from pouring into your beverage.

Cleaning

1. Before cleaning, unplug the Kettle and allow to cool completely. Empty any remaining water from the Kettle.
2. Lift the Scale Filter out for cleaning (C). Wash the filter in warm soapy water and rinse or place it in the utensil holder of a dishwasher. Slip it back into the channels just behind the Spout to replace the Filter after cleaning.
3. NEVER IMMERSER THE KETTLE IN WATER OR OTHER LIQUIDS. Do NOT place in a dishwasher.
4. Wipe the exterior of the Kettle with a damp cloth or sponge and dry. Do not use abrasive soaps, cleansers, or scouring pads on any part of the Kettle.

5. Over time, the Kettle may take longer to heat up or may not even boil, depending on your use and the hardness of the water in your area. When this happens, it's time for descaling or removing mineral deposits. For scale, use a scale/lime remover and follow its manufacturer's directions.
6. To remove interior mineral deposits, fill the Kettle with equal parts white vinegar and cold tap water. Do NOT exceed the MAX fill Line. Plug in the Kettle and let boil. Unplug the Kettle and allow it to stand overnight. Empty this mixture and refill with cold tap water. Plug in and boil. Empty the kettle, rinse with cold water, and empty again. You're now ready to use as normal.

4. Limpie el exterior de la tetera y la base con un paño humedecido o con una esponja y séquela bien. No use jabones abrasivos, limpiadores ni almohadillas de fibras abrasivas para limpiar ninguna parte de la tetera.
5. Con el tiempo, la tetera puede calentar el agua pero no hervirla, según el uso y la dureza del agua en área donde usted reside. Cuando esto sucede, llegó la hora de remover las escamas. Use un agente de limpieza para remover escamas/cal conforme las indicaciones del fabricante.
6. Para eliminar los depósitos minerales del interior de la tetera, llénela con partes iguales de agua fría de la llave y vinagre blanco. No exceda el nivel de llenado MAX. Desconecte la tetera y déjela reposar con la mezcla de agua y vinagre de un día para otro. Vacíe la tetera y llénela nuevamente con agua fría. Enchúfela y permita que hierva el agua. Vacía nuevamente la tetera y enjuáguela bien con agua fría para usarla normalmente.

Need Help?

For service, repair, or any questions regarding your appliance, call the appropriate "800" number on the cover of this book. Do NOT return the product to the place of purchase. Do NOT mail the product back to the manufacturer nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

¿Necesita ayuda?

Para cualquier servicio, reparación o preguntas relacionadas al producto, llame al número gratis apropiado que aparece en la cubierta de este manual. NO devuelva el producto al lugar de compra. NO envíe el producto por correo al fabricante ni lo lleve a un centro de servicio. Para más información puede también consultar la página de la red citada en la cubierta.

Besoin d'aide?

Pour communiquer avec les services d'entretien ou de réparation, ou pour adresser toute question relative au produit, composer le numéro sans frais approprié indiqué sur la page couverture. NE PAS retourner le produit où il a été acheté. NE PAS poster le produit au fabricant ni le porter dans un centre de service. On peut également consulter le site web indiqué sur la page couverture.

IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, basic safety precautions should always be followed, including the following:

- Please read all instructions.
- Do not touch hot surfaces or hot water. Use handle. Care must be taken as burns can occur from touching spilled hot liquids.
- To protect against fire, electric shock or injury, do not place cord, plug, or Kettle in water or other liquid.
- To reduce the risk of fire or electric shock, do not remove bottom cover from base. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.
- Close supervision is necessary when any appliance is used by or near children.
- Kettle must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
- To protect against electric shock, unplug from outlet when not in use, and before cleaning. To prevent burns, allow to cool before cleaning.
- Do not operate dry. Do not use for other than heating water. Other foods or liquids will contaminate the interior and void the warranty.
- To disconnect, remove plug from outlet. Do not yank on cord as it may damage cord and eventually cause electric shock.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. If the product requires attention within the warranty period, call the appropriate toll-free number listed on the cover of this manual for information on examination, repair, or electrical or mechanical adjustment.
- To avoid an electrical overload, do not operate another high-wattage appliance on the same circuit.
- The use of an accessory attachment not approved by the manufacturer may result in fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- In models that contain filters: To avoid scalding, be sure the Filter is fully inserted into the Kettle Spout before plugging in the Kettle. Do not attempt to remove the Filter during the boiling cycle. Unplug and allow the Kettle to cool before removing the filter for cleaning.
- Do not place on or near a hot gas or electric burner or in a microwave or heated oven.
- To avoid possible steam damage, turn spout away from walls or cabinets during use; use a pad under the Kettle to prevent damage to surfaces.

Continued inside

FULL ONE-YEAR WARRANTY

Applica warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident, misuse, or repairs performed by unauthorized personnel. If the product should become defective within the warranty period, or you have questions regarding warranty or service, call Consumer Assistance and Information toll free at: 1-800-231-9786. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

UN AÑO COMPLETO DE GARANTIA

Household Products garantiza este producto contra cualquier defecto originado por fallas en los materiales o en la mano de obra por un periodo de un año a partir de la fecha original de compra. Esta garantía no incluye daños al producto ocasionados por accidentes, mal uso, ni como resultado de reparaciones efectuadas por personal no autorizado. Si el producto resulta con defectos dentro del periodo de garantía, o si tiene usted preguntas relacionadas a la garantía o al servicio en sí, llame por favor al número gratis de información para asistencia al consumidor al: 1-800-231-9786. Esta garantía le otorga derechos legales específicos y usted podría tener otros derechos que pueden variar de un estado o de una provincia a otra.

GARANTIE COMPLÈTE DE UN AN

Applica garantit le produit pour un an à compter de la date d'achat, contre tout vice de matière ou de fabrication. La garantie ne couvre pas les dommages causés par un accident, une mauvaise utilisation ou des réparations effectuées par des personnes non autorisées. Advenant le fonctionnement irrégulier du produit dans les délais prescrits, ou pour toute question relative à la garantie ou au service, communiquer sans frais avec le service à la clientèle au numéro suivant : 1 800 231-9786. Les modalités de la présente garantie donnent des droits légaux spécifiques. L'utilisateur peut également se prévaloir d'autres droits selon l'état ou la province qu'il habite.

The logo for Black & Decker, featuring a stylized diamond shape with diagonal lines to the left of the brand name "BLACK & DECKER" in a bold, sans-serif font. A registered trademark symbol (®) is located at the bottom right of the brand name.

Product may vary slightly from what is illustrated.
El producto puede variar ligeramente del ilustrado.
Le produit peut différer légèrement de celui illustré.

- * **BLACK & DECKER** is a trademark of The Black & Decker Corporation, Towson, Maryland, USA
- * **Marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.**
- * **Marque de commerce de la société The Black & Decker Corporation, Towson, Maryland, É.-U.**

The logo for Applica, featuring a stylized swoosh above the word "Applica" in a serif font. Below it, in a smaller font, is "Applica Consumer Products, Inc."

Applica Consumer Products, Inc.

Copyright © 2000 Applica Consumer Products, Inc.

Pub. No. 177005-00-RV00

Product made in People's Republic of China

 
 
Printed in People's Republic of China

Producto hecho en la República Popular China

Impreso en la República Popular China

Produit fabriqué en République populaire de Chine

Imprimé en République populaire de Chine

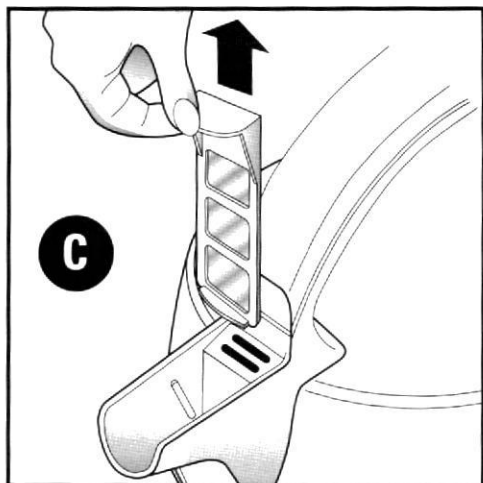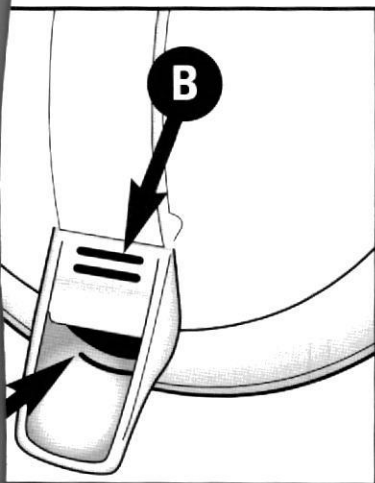

- En los modelos con filtros: Para evitar quemaduras, asegúrese que el filtro esté introducido de lleno dentro de la boquilla de la tetera antes de conectarla. No procure retirar el filtro mientras hierve el agua. Desconecte la tetera y permita que se enfríe por completo antes de retirar el filtro para lavarlo.
- No coloque la tetera sobre ni cerca de una hornilla de gas o eléctrica ni dentro de un horno caliente ni uno de microondas.
- Con el fin de evitar cualquier daño a consecuencia de la emisión de vapor, cuando use la tetera aleje la boquilla de las paredes y de los gabinetes; coloque la tetera sobre una almohadilla protectora para evitar daños a las superficies.
- A fin de evitar las quemaduras y el riesgo de lesiones personales, tome mucha precaución cuando lleve la tetera llena de agua caliente de un lugar a otro.
- No deje la tetera conectada a una toma de corriente en donde la temperatura ambiental baje a 0°F o menos ya que el termostato de control automático puede reactivar la resistencia de calor.
- Este producto ha sido diseñado solamente para uso doméstico. Al usarse con cualquier otro fin la garantía perderá su validez de inmediato.

GUARDE ESTAS INSTRUCCIONES

EL CABLE ELECTRICO

El cable de esta unidad fue seleccionado a fin de evitar la posibilidad de que alguien se enrede o se tropiece en uno más largo. De ser necesaria una extensión, use una calificada para no menos de 10 amperes, 120 volts e inscrita por UL (Underwriters Laboratories) o una agencia apropiada. Cuando use un cable de extensión, no permita que cuelgue sobre el área de trabajo para evitar que alguien se tropiece en ella accidentalmente.

ENCHUFE DE TIERRA

Como medida de seguridad esta unidad tiene un enchufe de puesta a tierra que únicamente puede enchufarse a una toma de tres contactos. Por ningún punto trate