

Bought April 14, 2011.

April 14,
2011.

Sunbeam®



MODEL KD20W/KD20A

**Instruction Manual and Warranty
ELECTRIC KETTLES**

P.N. 103334

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before using the machine.
2. Do not touch hot surfaces. Use handle.
3. To protect against electric shock, kettle should be unplugged when filling.
4. To protect against electric shock, **do not immerse this appliance, including cordset, in water or any other liquid.**
5. Close adult supervision is necessary when this appliance is used by or near children.
6. Always unplug kettle from outlet when not in use and before cleaning. Allow kettle to cool before cleaning.
7. To avoid injury, do not operate appliance with a damaged cordset or after the appliance malfunctions, or has been damaged in any manner. Return this appliance only to the nearest SUNBEAM Authorized Service Center for examination, repair or adjustment.
8. The use of accessory attachments not recommended by SUNBEAM may cause hazards or injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
12. This kettle is intended for boiling **WATER ONLY**. Do not heat any other liquid or attempt to cook any food in this appliance.
13. **NEVER PULL ON CORD** since this may damage cord leading to product failure and/or cause an electric shock.
14. This kettle is a high wattage appliance and no other appliance should be plugged into and operated from the same power outlet at the same time. Overloading circuits can cause fuse problems and fire hazards.
15. Do not use appliance for other than intended use.
16. Use this appliance on a hard, flat level surface only, to avoid interruption of air flow underneath the appliance.



17. Use extreme caution when handling, moving kettle and pouring from the kettle containing hot or boiling water. Carry or move kettle with handle only.
18. **TO AVOID SCALDING**, handle this electric kettle with care as water is heating, boiling and cooling. Keep spout away from persons as scalding can result from steam.

SAVE THESE INSTRUCTIONS

SPECIAL INSTRUCTIONS

1. Place the electric kettle well back from the edge of the counter. To avoid damage to delicate counter surfaces, it is recommended a protective pad be used.
2. Do not exceed the **"MAX" WATER LEVEL MARK** on inside of spout when filling. Overfilling could cause the water to boil out of the spout. The maximum amount of water that can be boiled without risk of overflowing is 2 litres. The minimum water level recommended is 500 mL to avoid safety thermostat cut out.
3. If the kettle is allowed to boil dry or operated without water, the safety thermostat will automatically cycle the element off to prevent the kettle from overheating. If this situation should occur, switch the kettle "OFF" and allow to cool for a few minutes. Cold water can be added to kettle to reset thermostat and prepare for use.

SPECIAL CORDSET INSTRUCTIONS

1. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
 2. An extension cord may be purchased and used if care is exercised in its use.
 3. If an extension cord is used the marked electrical rating of the extension cord must be at least 15 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.
- * **This appliance has a grounded 3-prong electrical plug. It must be plugged only into a properly grounded 3-prong outlet. Do not modify the plug in any way.**

FOR HOUSEHOLD USE ONLY

INTRODUCTION

Congratulations! You are the owner of the electric kettle by Sunbeam. You can use the electric kettle in the home or when traveling. Makes hot water for hot chocolate, hot cider, coffee, tea, instant soup, oatmeal and gelatin.


Our specially designed kettle is fitted with a safety thermostat which protects the kettle from overheating or boiling dry should the kettle be operated with insufficient water.

To insure the long life of this appliance and its trouble-free operation, please read **ALL** of the instructions in this booklet carefully before you begin to use this appliance. Save these instructions and refer to them often for cleaning and care tips.

TABLE OF CONTENTS

	Page #
Important Safeguards	1-2
Special Instructions	2
Special Cordset Instructions	2
Introduction	3
Diagram of Parts	3
Clean Your Electric Kettle Before First Use	4
Filling Your Electric Kettle	4
Using Your Electric Kettle	
Whistling Model KD20W	4
Auto Off Model KD20A	5
Care and Cleaning	6
Limited Warranty	7

DIAGRAM OF PARTS

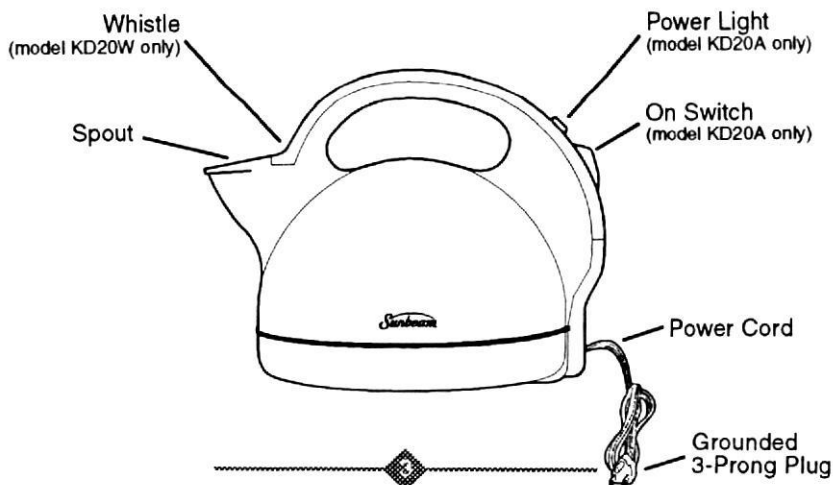

CLEAN YOUR ELECTRIC KETTLE BEFORE FIRST USE

It is recommended that you clean your new kettle thoroughly prior to using it for the first time. Follow the instructions as stated below.

1. Fill the electric kettle with fresh water to the "MAX" water level line on the inside of the spout. **DO NOT EXCEED "MAX" WATER LEVEL LINE. DOING SO MAY RESULT IN WATER BEING EJECTED OUT OF THE SPOUT WHILE BOILING OR POURING.**
2. Plug the electric cord into an electric outlet. Be sure kettle is on a level surface or countertop. Let water boil.
3. When water and unit have cooled, discard the water. Rinse with cold water and repeat instructions. Your electric kettle is now ready for use.

FILLING YOUR ELECTRIC KETTLE

1. Always unplug electric kettle from power outlet prior to filling. It is recommended that freshly drawn cold water be used for best results.
2. Fill the electric kettle through the pouring spout with the desired amount of water, observing the "MAX" water level line on the inside of the spout.
3. Check water level by placing on a flat surface. **WARNING: WATER LEVEL SHOULD NOT EXCEED "MAX" WATER LEVEL LINE.**

USING YOUR ELECTRIC KETTLE - WHISTLING MODEL KDZOW

1. To switch the kettle on, place the filled kettle on a level surface; insert the plug into a grounded 120 volt power outlet.
2. To switch the kettle off; when the water has boiled and the kettle begins to whistle, grasp the plug and remove from power outlet. **NOTE:** Kettle will continue to whistle until unplugged. Use whistle as an indication that water is continuously boiling. **WARNING: Steam escapes whistle above spout. To avoid scalding, never place fingers, face, etc., near openings while operating kettle.**
3. Kettle must always be unplugged from power outlet before pouring.
4. To reduce mineral deposit build up, it is recommended that your electric kettle be emptied between use.

USING YOUR ELECTRIC KETTLE - AUTO OFF MODEL KD20A

1. To switch the kettle on, place the filled kettle on a level surface; insert the plug into a grounded 120 volt power outlet.
2. To begin boiling water, depress the ON switch. The power light will immediately illuminate, indicating the kettle has begun the boil cycle. When the water has boiled, the kettle will turn off automatically and the power light will go out. To reboil water, wait a short period of time, allowing the internal safety switch to cool. When kettle has cooled, simply depress the ON switch again to begin reboiling. If the kettle power light does not illuminate, the water is hot enough to use without reheating. **WARNING: DO NOT HOLD THE SWITCH ON IN AN ATTEMPT TO FORCE THE KETTLE TO REHEAT. THIS WILL SERIOUSLY DAMAGE THE SWITCH MECHANISM.**
3. To switch off kettle before boiling has been completed, disconnect power cord from power outlet.
4. Kettle must always be unplugged from power outlet before pouring.
5. To reduce mineral deposit build up, it is recommended that your electric kettle be emptied between use.

CARE AND CLEANING OF YOUR ELECTRIC KETTLE

Mineral deposits in tap water may cause scale deposits to form over the interior of the kettle after frequent use, resulting in longer boiling cycles. **We recommend the kettle be descaled twice a year based on normal use and the mineral content of your water.**

WARNING: ALWAYS UNPLUG KETTLE FROM POWER OUTLET AND ALLOW TO COOL BEFORE CLEANING.

1. To remove the scale deposit build-up, unplug kettle from power outlet, fill the kettle with a solution of three cups white vinegar and three cups water, then bring to a boil. Let solution sit overnight.
2. Empty the vinegar solution from the kettle. Fill the kettle with clean water to maximum water level. Plug the power cord into a power outlet and bring to a boil, then discard water. **DO NOT EXCEED "MAX" WATER LEVEL.** Repeat procedure and the kettle will be ready for use.
3. Before cleaning the exterior of the kettle, always disconnect the electric cord from the power outlet. **Allow kettle to cool before cleaning. DO NOT IMMERSE THE KETTLE, CORDSET OR PLUG IN WATER OR OTHER LIQUID.**
4. The exterior of the kettle can be wiped with a soft cloth. A mild detergent may be used for stubborn stains.
5. To clean the whistle opening just behind the spout (MODEL KD20W ONLY), insert a cotton swab or pipe cleaner into opening.

NOTE: Never use any chemical, steel wool, or abrasive cleaners to clean the exterior or interior of the kettle.

Sunbeam.

2 Year Limited Warranty

Sunbeam Corporation (Canada) Limited ("Sunbeam") warrants that for a period of TWO years from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty or condition. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty or condition. Sunbeam disclaims all other warranties or conditions, express or implied, statutory or otherwise. Some provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province.

HOW TO OBTAIN WARRANTY SERVICE

Take the product to a Sunbeam Authorized Service Center. You can find the nearest Sunbeam Authorized Service Center by calling **1 800 667-8623**. If a service center is not conveniently located, attach a tag to the product that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by UPS or Parcel Post with shipping and insurance prepaid to:

Sunbeam Corporation (Canada) Limited
c/o Service Tek
1351 Matheson Boulevard East
Units 5 and 6
Mississauga, ON L4W 2A1

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call **1 800 667-8623** or write to:
Attn: Consumer Affairs, Sunbeam Corporation (Canada) Limited,
5975 Falbourne St., Mississauga, ON L5R 3V8.

Made in China

©1999 Sunbeam Corporation or its affiliated companies. All rights reserved.

Sunbeam® is a registered trademark of Sunbeam Corporation or its affiliated companies.
Imported and distributed by Sunbeam Corporation (Canada) Limited, Mississauga, ON L5R 3V8
