Corrections & Updates

MP3 Preamp

February 2007, p. 40-45, 060237-I

On the PCB component overlay, the labels of SMD resistors R29 and R32 have been transposed. Resistor 29 (2 $k\Omega$) should be the top device in the row of resistors fitted to the right of S1 and S2. R2 (6 $k\Omega$ 8) should be directly below it.

Ethermeter

March 2007, p. 72-74, 075035-I

Due to a crashed hard disk in the author's PC an early version of the circuit diagram was printed. The correct schematic is reproduced here.

Canon EOS Cameras go Wireless

July/August 2004, p. 102, 030432-1.

In the transmitter circuit diagram, pushbutton S1 should be a normally closed (NC) type.

