 


Service
Service
Service

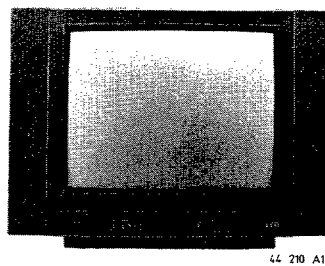

44 210 A11

 
 
- 23B/29B/31B/33B/36B
- 63NA1076/38B
- 63NA1077/26B
- 63NA1276/38B
- 70NA1147/22B/
- 23B/29B/31B/33B
- 70NA1176/38B
- 70NA1177/26B
- 70NA1376/38B

Service Manual

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

CHASSIS GR2.1

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

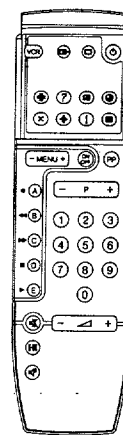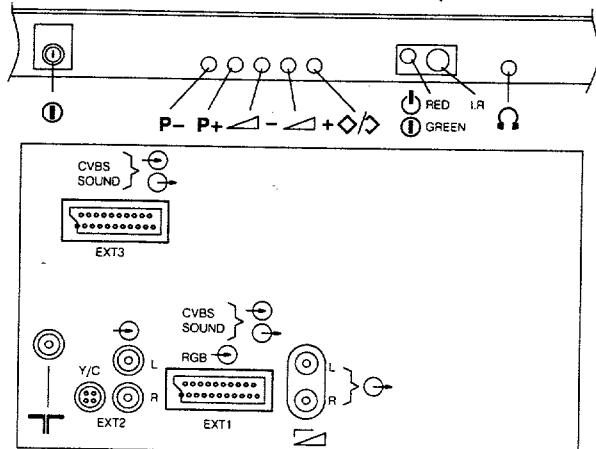

RC6512



220-240 V ($\pm 10\%$)
140W max.




2 x 20W
8 Ω




- /26B/38B : PAL BGI
SECAM BGLL'
- /22B : PAL BG
- /23B/29B : PAL BG
- /31B/33B : PAL BG NICAM
- /36B



 UV916: 45-855 MHz



 axbxc (mm)
25": 730x535x447
28": 788x581x485

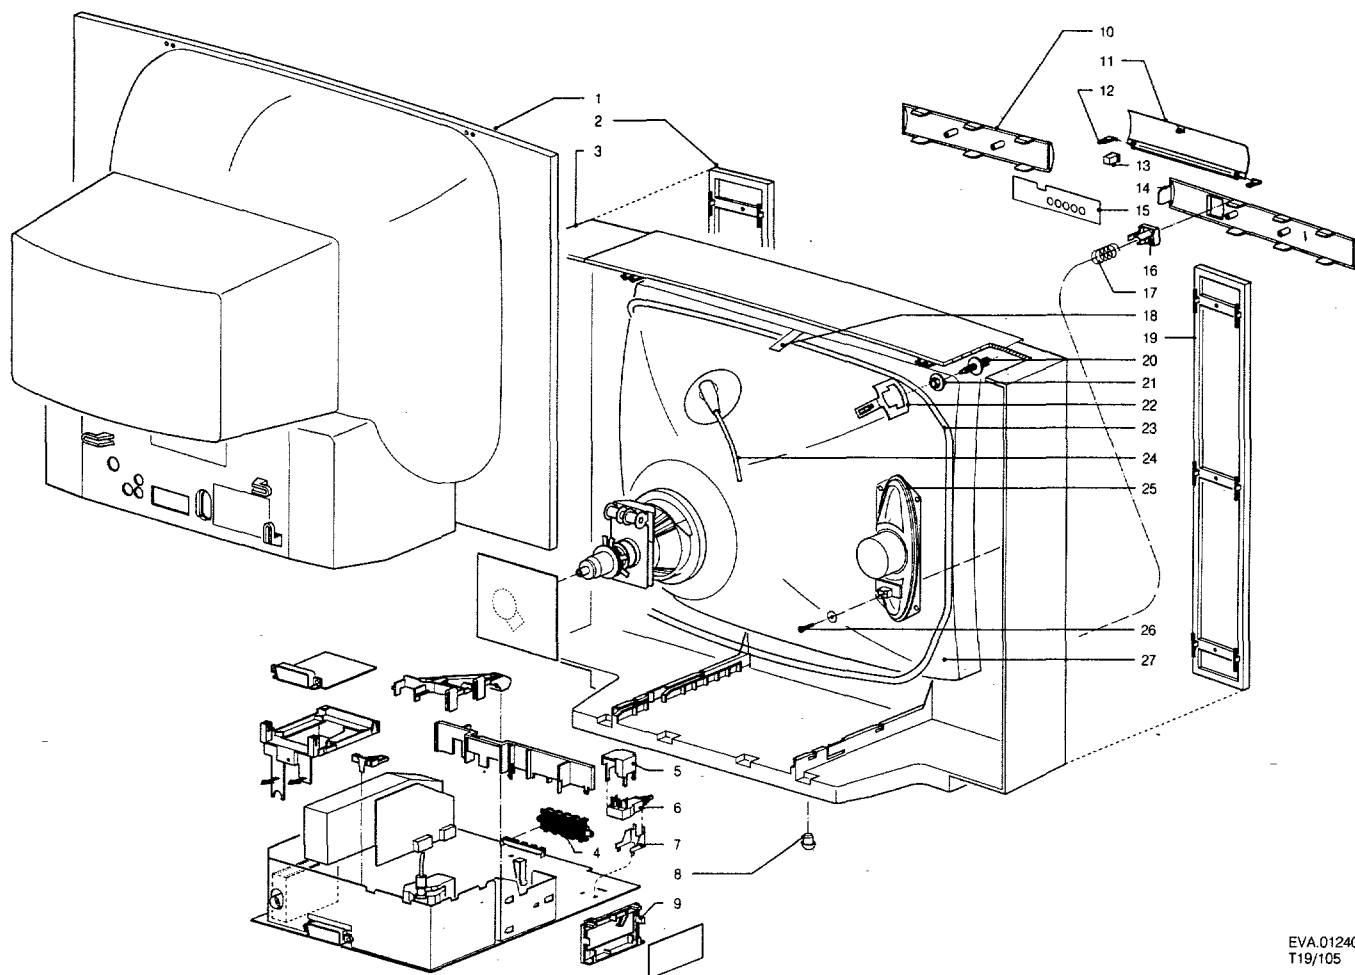

EVA.01240
T19/105

1	4822 438 40205	Rear cover 25"	16	4822 410 61423	Mains knob
1	4822 438 40194	Rear cover 28"	16	4822 410 61643	Mains knob
2	4822 458 50346	Grill right 25"			63NA1276/70NA1376
2	4822 458 50374	Grill right 25" 63NA1276	17	4822 492 32656	Spring behind mains knob
2	4822 458 50348	Grill right 28"	18	4822 404 30709	Clip
			19	4822 458 50347	Grill left 25"
2	4822 458 50372	Grill right 28" 70NA1376			
3	4822 430 50793	Cabinet 25"	19	4822 458 50373	Grill left 25" 63NA1276
3	4822 430 50809	Cabinet 25" 63NA1276	19	4822 458 50349	Grill left 28"
3	4822 430 50792	Cabinet 28"	19	4822 458 50371	Grill left 28" 70NA1376
3	4822 430 50811	Cabinet 28" 70NA1376	20	4822 502 12865	Picture tube spindle
			21	4822 505 10903	Picture tube nut
4	4822 410 61347	Knob assy			
5	4822 432 92152	Mains switch cover	22	4822 404 30869	Degaussing coil bracket
6	4822 276 12916	Mains switch	23	4822 157 53067	Degaussing coil 25"
7	4822 404 31058	Mains switch bracket	23	4822 157 53091	Degaussing coil 28"
8	4822 462 71537	Foot	23	4822 157 63747	Degaussing coil 63NA1047
			23	4822 157 63752	Degaussing coil 70NA1147
9	4822 404 31181	Mains module bracket			
10	4822 432 92771	Front cover right 25"	24	4822 320 20172	EHT cable assy
10	4822 432 92811	Front cover right 25" 63NA1276	24	4822 320 20182	EHT cable assy Non Blackline
10	4822 432 92771	Front cover right 28"	25	4822 240 40162	Loudspeaker
10	4822 432 92812	Front cover right 28" 70NA1376	26	4822 502 30672	Screw 10x3 mm
			26	4822 502 13712	Screw 12x3 mm
11	4822 432 92768	Door			
12	4822 432 92754	Hing	27	4822 131 20345	Picture tube A59EAK22X13
13	4822 417 50252	Lock	27	4822 131 20317	Picture tube A66EAK22X13
14	4822 432 92772	Front cover left 25"	27	4822 131 20309	Picture tube A59EAK01X03
14	4822 432 92813	Front cover left 25" 63NA1276	27	4822 131 20308	Picture tube A66EAK51X03
14	4822 432 92769	Front cover left 28"			
14	4822 432 92814	Front cover left 28" 70NA1376	4822 218 21079	Remote control RC6512	
15	4822 454 12742	Indication strip	4822 432 92761	Battery cover RC6512	
			4822 432 92762	Top cover RC6512	