



PHILIPS

SERVICE PUBLICATIONS COLOUR TELEVISION 1

© Copyright 1996 Philips Consumer Electronics BV Eindhoven, The Netherlands.
All rights reserved. No part may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

I. ANUBIS A.....	3
II. ANUBIS B	6
III. FL1.0	8
IV. FL1.1	12
V. FL1.2.....	14
VI. FL1.6	16
VII. FL1.7.....	17
VIII. FL1.10	18
IX. FL1.14	19
X. FL1.16.....	20
XI. FL1.17	21
XII. FL2.14.....	22
XIII. FL2.16	23
XIV. FL2.24.....	24
XV. FL2.26.....	25
XVI. FL4.16.....	26
XVII. FL4.17	27
XVIII. FL4.26	28
XIX. FL4.27.....	29
XX. GR2.1	30
XXI. GR2.2.....	33

XXII. GR2.3	37
XXIII. GR2.4	38

I. ANUBIS A

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
ANUBIS A AA	GB	4822 727 18241	4822 727 18321
	D	4822 727 18242	4822 727 18323
	NL	4822 727 18262	4822 727 18339
	F	4822 727 18192	4822 727 18322
	I	4822 727 18243	4822 727 18325
	E	4822 727 18244	4822 727 18324
ANUBIS A AB	GB	4822 727 18801	4822 727 18321
	D	4822 727 18805	4822 727 18323
	NL	4822 727 18728	4822 727 18339
	F	4822 727 18803	4822 727 18322
	I	4822 727 18802	4822 727 18325
	E	4822 727 18804	4822 727 18324
ANUBIS A AC	GB	4822 727 19656	4822 727 18321
	D	4822 727 19658	4822 727 18323
	NL	4822 727 19655	4822 727 18339
	F	4822 727 19657	4822 727 18322
	I	4822 727 19661	4822 727 18325
	E	4822 727 19659	4822 727 18324

SERVICE INFORMATION

91.02	F	4822 727 18288
91.02	-	4822 727 18367
91.03	-	4822 727 18999
93.01	-	4822 727 19726
94.01	-	4822 727 20292
Hotel Mode	-	4822 727 20384

MODEL MANUALS

MODEL MANUALS ANUBIS A

14AA3320/19B	4822 727 18415
14AA3322/20B	4822 727 18365
14AA3322/08B/10B/19B/40B	4822 727 18828
14AA3324/05B/07B/08B/10B/15B/16B/19B/22B/30B/40B	4822 727 18842
14AA3327/00B/01B/16B/42B	4822 727 19694
14AA3329/10B/16B/19B/40B	4822 727 19694
14AA3527/00B/01B/05B/16B	4822 727 19694
14PT300A/00B/01B	4822 727 19712
15AA3330/10B/16B/19B/22B/30B/39B	4822 727 19575
15AA3332/05B/07B/08B/10B/15B/16B/19B/20B/22B	4822 727 19572
15AA3332/07B/30B/36B/39B/39W/40B/42B	4822 727 19572
15AA3334/19B	4822 727 18838
15AA3336/00B/01B/05B	4822 727 19581
15AA3537/00B/01B/13B	4822 727 19704
15PT161A/05	4822 727 19699
17AA3340/05B/07B/08B/10B/15B/16B/19B/22B/30B/39B	4822 727 19576
17AA3342/07B/08B/10B/15B/16B/19B/20B/22B/30B/39B/40B/42B	4822 727 19572
17AA3346/00B/01B	4822 727 19582
17AA3547/00B/01B/05B/13B	4822 727 19704
17PT161A/05	4822 727 19701
21AA3350/05B/08B/10B/15B/16B/19B/20B/22B/30B/39B/40B	4822 727 18845
21AA3356/00B/01B/05B/42B	4822 727 19583
21AA3357/00B/01B/05B/13B/42B	4822 727 19702
21AA3356/20B/21B/25B/43B	4822 727 19702
21PT131A/05	4822 727 19703
21PT161A/00/05	4822 727 19703
37ZZ3223/22B	4822 727 18725
37ZZ3233/08B/22B/38B	4822 727 19579
37ZZ3241/18G	4822 727 18287
37ZZ3243/18G	4822 727 18287
38ZZ3253/03B/06B/08B/09B/11B/13B/16B/22B/26B/31B/33B	4822 727 19573
38ZZ3273/18G	4822 727 18363
38ZZ3383/08B/09B/16B/38B	4822 727 19699
38ZZ3385/03B/08B/16B	4822 727 19699
43ZZ3453/03B/06B/08B/09B/10B/11B/13B/16B/22B/26B/31B	4822 727 19574
43ZZ3473/18G	4822 727 18363
43ZZ3483/08B/16B/31B/38B	4822 727 19701
43ZZ3485/03B/08B/16B	4822 727 19701
52ZZ3523/03B/08B/11B/13B/16B/22B/26B/31B/33B	4822 727 18727
52ZZ3523/25G	4822 727 19792
52ZZ3533/18B/38B	4822 727 19578
52ZZ3583/08B/16B/31B/38B	4822 727 19703
52ZZ3585/03B/05B/08B/16B/33B	4822 727 19703
141243PP/19B	4822 727 18289
142133PP/39B	4822 727 19579

143243PP/19B	4822 727 18289
153243PP/19B	4822 727 18416
153933PP/39B	4822 727 19699
174243PP/19B	4822 727 18416
174933PP/39B	4822 727 19702
215033PP/19B/39B	4822 727 18726
1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

II. ANUBIS B

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
ANUBIS B AA	GB	4822 727 19112	4822 727 19118
	D	4822 727 19114	4822 727 19121
	NL	4822 727 19111	4822 727 19117
	F	4822 727 19113	4822 727 19119
	I	4822 727 19116	4822 727 19123
	E	4822 727 19115	4822 727 19122
ANUBIS B AB	GB	4822 727 19663	4822 727 19118
	D	4822 727 19665	4822 727 19121
	NL	4822 727 19662	4822 727 19117
	F	4822 727 19664	4822 727 19119
	I	4822 727 19667	4822 727 19123
	E	4822 727 19666	4822 727 19122

SERVICE INFORMATION

93.01	-	4822 727 19727
93.02	-	4822 727 19737
94.01	-	4822 727 20292
94.02	-	4822 727 20383
Hotel Mode	-	4822 727 20384

MODEL MANUALS

MODEL MANUALS ANUBIS B

15AB3536/00B/13B	4822 727 19687
17AB3546/00B/01B/13B	4822 727 19687
21AB3556/00B/01B/05B/13B	4822 727 19569
21AB3357/01B	4822 727 19687
38ZY3325/03B/08B/16B/22B	4822 727 19551
43ZY3425/03B/08B/16B/22B	4822 727 19549
52ZY3523/38B	4822 727 19682
52ZY3535/03B/05B/06B/08B/13B/16B/22B/25G/26B/33B	4822 727 19682
215333PQ/39B	4822 727 19682
1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

III. FL1.0

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL1.0 AA	GB	4822 727 18181	4822 727 18239
	D	4822 727 18182	4822 727 18237
	NL	4822 727 18171	4822 727 18238
	F	4822 727 18183	4822 727 18236
	I	4822 727 18184	-
	E	4822 727 18185	-
FL1.0 AB	GB	4822 727 18437	4822 727 18239
	D	4822 727 18441	4822 727 18237
	NL	4822 727 18438	4822 727 18238
	F	4822 727 18439	4822 727 18236
	I	4822 727 18443	-
	E	4822 727 18442	-
FL1.0 AC	-	4822 727 18957	
FL1.0 AD	GB	4822 727 18903	4822 727 18239
	D	4822 727 18904	4822 727 18237
	NL	4822 727 18908	4822 727 18238
	F	4822 727 18905	4822 727 18236
	I	4822 727 18906	-
	E	4822 727 18907	-

SERVICE INFORMATION

MODEL MANUALS

SERVICE INFORMATION FL1.0

91.01	-	4822 727 18313
91.02	GB	4822 727 18924
	D	4822 727 18926
	NL	4822 727 18925
	F	4822 727 18927
	I	4822 727 18928
91.03	-	4822 727 18956
91.04	GB	4822 727 19012
	D	4822 727 19014
	NL	4822 727 19013
	F	4822 727 19015
	I	4822 727 19016
92.01	-	4822 727 19061
92.02	-	4822 727 19157
92.03	GB	4822 727 19171
	D	4822 727 19173
	NL	4822 727 19172
	F	4822 727 19174
	I	4822 727 19175
92.04	-	4822 727 19603
92.05	GB	4822 727 19412
	D	4822 727 19597
	NL	4822 727 19596
	F	4822 727 19598
	I	4822 727 19599
92.06	GB	4822 727 19762
	D	4822 727 19764
	NL	4822 727 19763
	F	4822 727 19765
	I	4822 727 19766
92.07	GB	4822 727 19784
93.02	-	4822 727 19885
93.03	-	4822 727 19915
93.04	GB	4822 727 19966
	D	4822 727 19968
	NL	4822 727 19967
	F	4822 727 19969
	I	4822 727 19971
93.07	-	4822 727 20265
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS FL1.0

21PT700A/00R/01R/19R	4822 727 19886
21PT702A/12R	4822 727 19886
21SL5100/00B	4822 727 19149
21SL5101/00B/10B/19B	4822 727 19149
21SL5750/00B/02B/05B/10B	4822 727 18875
21SL5756/00B/10B/13B/16B/19B	4822 727 18875
25PV7505/00B	4822 727 19147
25PV7506/00B/10B/13B/19B	4822 727 19147
25PV7960/00B/02B/10B/13B	4822 727 18217
25PV7960/20B/22B/30B	4822 727 18371
25PV7960/20S/30S	4822 727 19141
25PV7966/00B/10B/13B/16B/19B	4822 727 18217
25PV7966/20B/30B/33B/36B/39B	4822 727 18371
25PV7966/20S/30S/33S/36S/39S	4822 727 19141
25SL5500/00B/05B	4822 727 19811
25SL5501/00B/07B/10B/13B/19B	4822 727 19811
25SL5760/00B/02B/05B	4822 727 18366
25SL5760/20B/22B/25B/30B	4822 727 18874
25SL5760/20S/25S/30S	4822 727 19139
25SL5766/00B/10B/13B/16B/19B	4822 727 18366
25SL5766/20B/30B/33B/36B/39B	4822 727 18874
25SL5766/20S/30S/33S/36S/39S	4822 727 19139
28CL6770/05Z	4822 727 19753
28CL6776/00Z/10Z/13Z	4822 727 19753
28CL6970/00Z/08Z	4822 727 19753
28CL6976/00Z/16Z/19Z	4822 727 19753
28PV7805/00B	4822 727 19147
28PV7806/00B/10B/13B/19B	4822 727 19147
28PV7970/00B/02B/10B/13B	4822 727 18217
28PV7970/20B/22B/30B	4822 727 18371
28PV7970/20S/30S	4822 727 19141
28PV7976/00B/10B/13B/16B/19B	4822 727 18217
28PV7976/20B/30B/33B/36B/39B	4822 727 18371
28PV7976/20S/30S/33S/36S/39S	4822 727 19141
28PV7978/00S/13S	4822 727 19416
28PV7978/00B/13B	4822 727 19068
28SL5770/00B/02B/05B	4822 727 18366
28SL5770/20B/22B/25B	4822 727 18874
28SL5770/20S/25S	4822 727 19139
28SL5776/00B/10B/13B/16B/19B	4822 727 18366
28SL5776/20B/30B/33B/36B/39B	4822 727 18874
28SL5776/20S/30S/33S/36S/39S	4822 727 19139
28SL5800/00B/05B	4822 727 19811
28SL5801/00B/07B/10B/13B/19B	4822 727 19811
33PV7905/00B	4822 727 19779
33PV7906/00B/10B/19B	4822 727 19779
33PV7990/00B	4822 727 18745
33PV7996/00B/19B	4822 727 18745
33SL5790/00B/02B/10B	4822 727 18877
33SL5796/00B/10B/13B/16B/19B	4822 727 18877
33SL5900/00B	4822 727 19812
33SL5901/07B/10B/13B/19B	4822 727 19812
63RK5617/03R/132/23R/28R	4822 727 18746
63RK5617/03S/08S	4822 727 19418
63RK5687/18R/22R/36R/38R	4822 727 18746

63RK5687/18S	4822 727 19418
63QW7619/03R/08R/13R	4822 727 18751
63QW7619/03S	4822 727 19417
63QW7619/023R/28R	4822 727 19133
63QW7689/06R/18R	4822 727 18751
63QW7689/16S/18S	4822 727 19417
63QW7689/16S/26R/36R/38R	4822 727 19133
70RK5717/03R/08R/13R/23R/28R	4822 727 18759
70RK5717/03S/08	4822 727 19421
70RK5787/11R/18R/22R/31R/36R/38R	4822 727 18759
70RK5787/18S	4822 727 19421
70RK5797/08Z/11Z/18Z	4822 727 19846
70QW7719/03R/08R/13R	4822 727 18752
70QW7719/03S/08S	4822 727 19419
70QW7719/23R/28R/29R/33R	4822 727 19134
70QW7789/06R/11R/18R	4822 727 18752
70QW7789/16S/18S	4822 727 19419
70QW7789/26R/31R/36R/38R	4822 727 19134
85RK5927/03B/08B	4822 727 18872
85RK5927/23S/28S	4822 727 19423
85RK5987/02B/11B/16B/18B	4822 727 18872
85RK5987/38S	4822 727 19423
85QW7989/06R/11R	4822 727 18887
85QW7989/31S/36S	4822 727 19422
256275KR/04M/24M	4822 727 18746
256275KR/04S	4822 727 19418
256297WQ/04M	4822 727 18751
256297WQ/24M	4822 727 19133
256575KR/19M/39M	4822 727 18746
256575KR/19S	4822 727 19418
256597WQ/19M	4822 727 18751
256597WQ/19S	4822 727 19417
256597WQ/39M	4822 727 19133
287275KR/04M/24M	4822 727 18759
287275KR/04S	4822 727 19421
287297WQ/04M	4822 727 18752
287297WQ/24M	4822 727 19134
287575KR/19M/39M	4822 727 18759
287575KR/19S	4822 727 19421
287597WQ/19M	4822 727 18752
287597WQ/19S	4822 727 19419
287597WQ/39M	4822 727 19134
339975KR/19B	4822 727 18872
339975KR/39S	4822 727 19827

IV. FL1.1

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL1.1 AA	GB	4822 727 18402	4822 727 18791
	D	4822 727 18403	4822 727 18792
	NL	4822 727 18401	4822 727 18789
	F	4822 727 18404	4822 727 18793
	I	4822 727 18406	-
	E	4822 727 18405	-
FL1.1 AB	GB	4822 727 18896	
FL1.1 AC	GB	4822 727 19085	4822 727 18791
	D	4822 727 19083	4822 727 18792
	NL	4822 727 19082	4822 727 18789
	F	4822 727 19084	4822 727 18793
	I	4822 727 19086	-
	E	4822 727 19087	-

SERVICE INFORMATION

MODEL MANUALS

25ML8760/05B	4822 727 18878
25ML8766/00B/02B/08B/10B/16B/19B	4822 727 18878
25ML8966/00B/02B/06B/07B/08B/10B/13B/16B/19B	4822 727 18878
28ML8770/05B	4822 727 19138
28ML8776/00B/02B/08B/16B/19B	4822 727 19138
28ML8976/00B/02B/06B/07B/08B/109B/13B/19B/42B	4822 727 19138
33ML8990/05B	4822 727 18873
33ML8996/00B/02B/06B/07B/08B/10B/13B/16B/19B	4822 727 18873

SERVICE INFORMATION FL1.1

91.01	-	4822 727 18871
91.03	-	4822 727 18955
91.04	GB	4822 727 19017
	D	4822 727 19019
	NL	4822 727 19018
	F	4822 727 19021
	I	4822 727 19022
91.05	GB	4822 727 19028
	D	4822 727 19031
	NL	4822 727 19029
	F	4822 727 19032
	I	4822 727 19033
92.01	-	4822 727 19034
92.02	-	4822 727 19158
92.03	GB	4822 727 19176
	D	4822 727 19178
	NL	4822 727 19177
	F	4822 727 19179
	I	4822 727 19181
92.04	-	4822 727 19604
92.06	GB	4822 727 19767
	D	4822 727 19769
	NL	4822 727 19768
	F	4822 727 19771
	I	4822 727 19772
93.02	-	4822 727 19885
93.03	-	4822 727 19915
93.04	GB	4822 727 19966
	D	4822 727 19968
	NL	4822 727 19967
	F	4822 727 19969
	I	4822 727 19971
94.01	-	4822 727 20283
94.02	GB	4822 727 20337
	D	4822 727 20339
	NL	4822 727 20338
	F	4822 727 20341
	I	4822 727 20342
94.04	-	4822 727 20634
94.05	-	4822 727 20694

V. FL1.2

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL1.2 AA	GB	4822 727 18782	4822 727 18791
	D	4822 727 18783	4822 727 18792
	NL	4822 727 18781	4822 727 18789
	F	4822 727 18784	4822 727 18793
	I	4822 727 18785	-
	E	4822 727 18786	-
FL1.2 AB	GB	4822 727 19092	4822 727 18791
	D	4822 727 19089	4822 727 18792
	NL	4822 727 19088	4822 727 18789
	F	4822 727 19091	4822 727 18793
	I	4822 727 19093	-
	E	4822 727 19094	-
FL1.2 BB	GB	4822 727 19092	4822 727 18791
	D	4822 727 19089	4822 727 18792
	NL	4822 727 19088	4822 727 18789
	F	4822 727 19091	4822 727 18793
	I	4822 727 19093	-
	E	4822 727 19094	-

SERVICE INFORMATION

MODEL MANUALS

28ML8762/00B/05B/13B/19B	4822 727 19415
28ML8765/00B/10B/75B	4822 727 19415
28ML8785/00B/10B/13B/19B	4822 727 19861
28ML8916/00B/05B/10B/13B/19B	4822 727 19137
28ML8926/00B/10B	4822 727 19414
36ML8906/00B/05B/10B/13B/19B	4822 727 18755
36ML8908/20B/30B/33B/39B	4822 727 19136
36ML8965/39B	4822 727 19152
70KR5816/18R	4822 727 19783
70QW7916/08R	4822 727 19781
1993 STYLING YEAR BOOK	4822 727 20263

SERVICE INFORMATION FL1.2

91.01	-	4822 727 18952
91.02	GB	4822 727 19005
	D	4822 727 19007
	NL	4822 727 19006
	F	4822 727 19008
	I	4822 727 19009
91.03	GB	4822 727 19023
	D	4822 727 19025
	NL	4822 727 19024
	F	4822 727 19026
	I	4822 727 19027
92.01	-	4822 727 19060
92.02	-	4822 727 19159
92.03	GB	4822 727 19182
	D	4822 727 19184
	NL	4822 727 19183
	F	4822 727 19185
92.04	-	4822 727 19605
92.05	GB	4822 727 19773
	D	4822 727 19775
	NL	4822 727 19774
	F	4822 727 19776
	I	4822 727 19777
92.06	GB	4822 727 19785
93.02	-	4822 727 19885
93.03	-	4822 727 19915
93.04	GB	4822 727 19966
	D	4822 727 19968
	NL	4822 727 19967
	F	4822 727 19969
	I	4822 727 19971
93.07	-	4822 727 20265
94.01	-	4822 727 20283
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

VI. FL1.6

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL1.6 AA	GB	4822 727 18914	-
	D	4822 727 18915	-
	NL	4822 727 18919	-
	F	4822 727 18916	-
	I	4822 727 18917	-
	E	4822 727 18918	-

SERVICE INFORMATION

92.01	-	4822 727 19778
92.02	-	4822 727 19807
93.02	-	4822 727 19885
93.03	-	4822 727 19915
93.04	GB	4822 727 19966
	D	4822 727 19968
	NL	4822 727 19967
	F	4822 727 19969
	I	4822 727 19971
94.01	-	4822 727 20283
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

25ML8500/02B/05B/08B/19B	4822 727 19143
25ML8505/00B/02B/06B/07B/08B/10B/13B/16B/19B	4822 727 19143
28ML8800/02B/05B/08B/19B	4822 727 19144
28ML8805/00B/02B/06B/07B/08B/10B/13B/16B/19B/42B	4822 727 19144
33ML8905/00B/02B/05B/06B/10B/13B/16B/19B	4822 727 19412
1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

VII. FL1.7

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL1.7 AA	GB	4822 727 19085	4822 727 18791
	D	4822 727 19083	4822 727 18792
	NL	4822 727 19082	4822 727 18789
	F	4822 727 19084	4822 727 18793
	I	4822 727 19086	-
	E	4822 727 19087	-

SERVICE INFORMATION

92.01	-	4822 727 19808
92.02	-	4822 727 19807
93.02	-	4822 727 19885
93.03	-	4822 727 19915
93.04	GB	4822 727 19966
	D	4822 727 19968
	NL	4822 727 19967
	F	4822 727 19969
	I	4822 727 19971
94.01	-	4822 727 20283
94.02	GB	4822 727 20337
	D	4822 727 20339
	NL	4822 727 20338
	F	4822 727 20341
	I	4822 727 20342
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

25ML8300/00B/05B/13B/19B	4822 727 19751
25ML8305/00B/10B/19B	4822 727 19751
28ML8600/00B/05B/13B/19B	4822 727 19752
28ML8605/00B/10B/19B	4822 727 19752
1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

VIII. FL1.10

		CHASSIS MANUAL	TRAINING MANUAL
FL1.10 AA	GB	4822 727 19981	4822 727 20294
	D	4822 727 19983	4822 727 20295
	NL	4822 727 19982	-
	F	4822 727 19984	4822 727 20296
	I	4822 727 19886	4822 727 20298
	E	4822 727 19885	4822 727 20297

SERVICE INFORMATION

93.03	-	4822 727 19915
94.01	-	4822 727 20283
94.02	GB	4822 727 20337
	D	4822 727 20339
	NL	4822 727 20338
	F	4822 727 20341
	I	4822 727 20342
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

IX. FL1.14

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL1.14 AA	GB	4822 727 19919	-
	D	4822 727 19922	-
	NL	4822 727 19921	-
	F	4822 727 19923	-
	I	4822 727 19924	-
	E	4822 727 19925	-

SERVICE INFORMATION

93.03	-	4822 727 19915
93.05	GB	4822 727 20005
	D	4822 727 20007
	NL	4822 727 20006
	F	4822 727 20008
	I	4822 727 20011
	E	4822 727 20009
93.07	-	4822 727 20265
94.01	-	4822 727 20283
94.02	GB	4822 727 20337
	D	4822 727 20339
	NL	4822 727 20338
	F	4822 727 20341
	I	4822 727 20342
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

X. FL1.16

		CHASSIS MANUAL	TRAINING MANUAL
FL1.16 AA	GB	4822 727 19919	4822 727 20294
	D	4822 727 19922	4822 727 20295
	NL	4822 727 19921	-
	F	4822 727 19923	4822 727 20296
	I	4822 727 19924	4822 727 20298
	E	4822 727 19925	4822 727 20297

SERVICE INFORMATION

93.05	GB	4822 727 20005
	D	4822 727 20007
	NL	4822 727 20006
	F	4822 727 20008
	I	4822 727 20011
	E	4822 727 20009
93.07	-	4822 727 20265
94.01	-	4822 727 20283
94.02	GB	4822 727 20337
	D	4822 727 20339
	NL	4822 727 20338
	F	4822 727 20341
	I	4822 727 20342
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

XI. FL1.17

		CHASSIS MANUAL	TRAINING MANUAL
FL1.17 AA	GB	4822 727 19919	4822 727 20294
	D	4822 727 19922	4822 727 20295
	NL	4822 727 19921	-
	F	4822 727 19923	4822 727 20296
	I	4822 727 19924	4822 727 20298
	E	4822 727 19925	4822 727 20297

SERVICE INFORMATION

93.01	F	4822 727 20276
93.05	GB	4822 727 20005
	D	4822 727 20007
	NL	4822 727 20006
	F	4822 727 20008
	I	4822 727 20011
	E	4822 727 20009
93.07	-	4822 727 20265
94.01	-	4822 727 20283
94.02	GB	4822 727 20337
	D	4822 727 20339
	NL	4822 727 20338
	F	4822 727 20341
	I	4822 727 20342
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

XII. FL2.14

		CHASSIS MANUAL	TRAINING MANUAL
FL2.14 AA	GB	4822 727 19919	4822 727 20294
	D	4822 727 19922	4822 727 20295
	NL	4822 727 19921	-
	F	4822 727 19923	4822 727 20296
	I	4822 727 19924	4822 727 20298
	E	4822 727 19925	4822 727 20297

SERVICE INFORMATION

93.05	GB	4822 727 20005
	D	4822 727 20007
	NL	4822 727 20006
	F	4822 727 20008
	I	4822 727 20011
	E	4822 727 20009
94.01	-	4822 727 20283
94.02	GB	4822 727 20337
	D	4822 727 20339
	NL	4822 727 20338
	F	4822 727 20341
	I	4822 727 20342
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

XIII. FL2.16

		CHASSIS MANUAL	TRAINING MANUAL
FL2.16 AA	GB	4822 727 19919	4822 727 20294
	D	4822 727 19922	4822 727 20295
	NL	4822 727 19921	-
	F	4822 727 19923	4822 727 20296
	I	4822 727 19924	4822 727 20298
	E	4822 727 19925	4822 727 20297

SERVICE INFORMATION

93.05	GB	4822 727 20005
	D	4822 727 20007
	NL	4822 727 20006
	F	4822 727 20008
	I	4822 727 20011
	E	4822 727 20009
93.07	-	4822 727 20265
94.01	-	4822 727 20283
94.02	GB	4822 727 20337
	D	4822 727 20339
	NL	4822 727 20338
	F	4822 727 20341
	I	4822 727 20342
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

XIV. FL2.24

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL2.24 AA	GB	4822 727 20266	-
	D	4822 727 20268	-
	NL	4822 727 20267	-
	F	4822 727 20269	-
	I	4822 727 20271	-
	E	4822 727 20272	-

SERVICE INFORMATION

94.01	-	4822 727 20283
	F	4822 727 20629
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1994 STYLING YEAR BOOK	4822 727 20672
------------------------	----------------

XV. FL2.26

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL2.26 AA	GB	4822 727 20266	-
	D	4822 727 20268	-
	NL	4822 727 20267	-
	F	4822 727 20269	-
	I	4822 727 20271	-
	E	4822 727 20272	-

SERVICE INFORMATION

94.01	-	4822 727 20283
	F	4822 727 20629
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1994 STYLING YEAR BOOK	4822 727 20672
------------------------	----------------

XVI. FL4.16

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL4.16 AA	GB	4822 727 20611	-
	D	4822 727 20613	-
	NL	4822 727 20612	-
	F	4822 727 20614	-
	I	4822 727 20615	-
	E	4822 727 20616	-

SERVICE INFORMATION

94.05 - 4822 727 20694

MODEL MANUALS

1994 STYLING YEAR BOOK

4822 727 20672

XVII. FL4.17

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL4.17 AA	GB	4822 727 20351	-
	D	4822 727 20353	-
	NL	4822 727 20352	-
	F	4822 727 20354	-
	I	4822 727 20355	-
	E	4822 727 20356	-

SERVICE INFORMATION

94.01	-	4822 727 20283
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1994 STYLING YEAR BOOK	4822 727 20672
------------------------	----------------

XVIII.FL4.26

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL4.26 AA	GB	4822 727 20604	-
	D	4822 727 20606	-
	NL	4822 727 20605	-
	F	4822 727 20607	-
	I	4822 727 20608	-
	E	4822 727 20609	-

SERVICE INFORMATION

94.04 - 4822 727 20634

MODEL MANUALS

1994 STYLING YEAR BOOK

4822 727 20672

XIX. FL4.27

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
FL4.27 AA	GB	4822 727 20266	-
	D	4822 727 20268	-
	NL	4822 727 20267	-
	F	4822 727 20269	-
	I	4822 727 20271	-
	E	4822 727 20272	-

SERVICE INFORMATION

94.01	-	4822 727 20283
	F	4822 727 20629
94.03	-	4822 727 20628
94.04	-	4822 727 20634
94.05	-	4822 727 20694

MODEL MANUALS

1994 STYLING YEAR BOOK	4822 727 20672
------------------------	----------------

XX. GR2.1

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
GR2.1 AA	GB	4822 727 18334	4822 727 18714
	D	4822 727 18332	4822 727 18711
	NL	4822 727 18335	4822 727 18713
	F	4822 727 18331	4822 727 18712
	I	4822 727 18337	-
	E	4822 727 18336	-
GR2.1 AB	GB	4822 727 18977	4822 727 18714
	D	4822 727 18979	4822 727 18711
	NL	4822 727 18978	4822 727 18713
	F	4822 727 18981	4822 727 18712
	I	4822 727 18982	-
	E	4822 727 18983	-
GR2 SAT BOX -		4822 727 18984	

SERVICE INFORMATION

91.01	-	4822 727 18968
91.02	-	4822 727 18969
92.01	-	4822 727 19095
92.02	-	4822 727 19535

MODEL MANUALS

MODEL MANUALS GR2.1

21ST1636/39B	4822 727 19039
21ST1730/22B/25B/28B/30B/32B/33B/36B	4822 727 19039
25MN1350/10B	4822 727 19058
25MN1356/15B/19B	4822 727 19058
25MN1550/02B/05B/07B/08B/10B/13B/16B	4822 727 19058
25ST1607/19B	4822 727 18408
25ST1627/19B	4822 727 18773
25ST1666/19B	4822 727 18769
25ST1666/39B	4822 727 19042
25ST1667/39B	4822 727 19044
25ST1761/22B/25B/28B/30B/33B/36B	4822 727 19044
25ST1767/30B	4822 727 19044
25ST1702/02B/10B/16B	4822 727 18409
25ST1704/02B/08B/10B/12B/13B/16B	4822 727 18408
25ST1704/30B	4822 727 19035
25ST1707/10B	4822 727 18408
25ST1707/30B	4822 727 19035
25ST1724/05B	4822 727 18773
25ST1724/05B/10B/16B	4822 727 19035
25ST1750/05B	4822 727 18769
25ST1750/25B	4822 727 19042
25ST1760/02B/08B/10B/12B/13B/16B	4822 727 18769
25ST1760/22B/28B/30B/32B/33B/36B	4822 727 19042
25ST1804/12B	4822 727 19035
25ST1881/32B	4822 727 19044
28MN1370/10B/16B	4822 727 19058
28MN1376/15B/19B	4822 727 19058
28MN1570/02B/08B/10B/13B/16B	4822 727 19058
28ST1181/02B	4822 727 19672
28ST1281/02B	4822 727 19672
28ST1414/33R	4822 727 19037
28ST1617/19B	4822 727 18408
28ST1617/39B	4822 727 19037
28ST1637/19B	4822 727 19035
28ST1637/39B	4822 727 19037
28ST1686/19B	4822 727 18769
28ST1686/39B	4822 727 19042
28ST1687/39B	4822 727 19044
28ST1712/02B/08B/10B/13B/16B	4822 727 18409
28ST1714/02B/08B/10B/12B/13B/16B	4822 727 18408
28ST1714/10V/22B/28B/30V/33B/36B	4822 727 19037
28ST1714/30B	4822 727 19035
28ST1717/10B	4822 727 18408
28ST1717/30B	4822 727 19035
28ST1734/22B/28B	4822 727 19037
28ST1770/05B	4822 727 18769
28ST1770/25B	4822 727 19042
28ST1780/02B/08B/10B/12B/13B/16B	4822 727 18769
28ST1780/22B/28B/30B/32B/33B/36B	4822 727 19042
28ST1781/22B/28B/30B/33B/36B	4822 727 19044
28ST1786/30B	4822 727 19042
28ST1787/30B	4822 727 19044
28ST1789/22Z/30Z	4822 727 19584
28ST1814/12B/13R	4822 727 19035
28ST1814/32B	4822 727 19037
28ST1881/32B	4822 727 19044

52NA1307/23B/28B/33B/36B	4822 727 19041
52NA1364/38B	4822 727 19041
63CA1503/09B/10B	4822 727 19059
63CA1505/03B/08B/13B/16B	4822 727 19059
63CA1563/18B	4822 727 19059
63NA1047/02B/03B/09B/11B/13B	4822 727 18819
63NA1047/22B/23B/31B/33B/36B	4822 727 19428
63NA1048/11B	4822 727 18719
63NA1076/18B	4822 727 18819
63NA1076/38B	4822 727 19428
63NA1077/06B	4822 727 18819
63NA1077/26B	4822 727 19428
63NA1276/18B	4822 727 18819
63NA1276/38B	4822 727 19428
63NA1607/03B/23B	4822 727 19043
63NA1617/22B/23B/28B/29B/33B/36B	4822 727 19045
63NA1618/31B	4822 727 19045
63NA1666/18B/38B	4822 727 19043
63NA1676/38B	4822 727 19045
63NA1677/26B	4822 727 19045
70CA1703/10B/16B	4822 727 19059
70CA1705/08B/09B/13B/16B	4822 727 19059
70CA1763/18B	4822 727 19059
70NA1147/02B/03B/09B/11B/13B	4822 727 18819
70NA1147/22B/23B/29B/31B/33B	4822 727 19428
70NA1148/11B	4822 727 18719
70NA1176/18B	4822 727 18819
70NA1176/38B	4822 727 19428
70NA1177/06B	4822 727 18819
70NA1177/26B	4822 727 19428
70NA1376/18B	4822 727 18819
70NA1376/38B	4822 727 19428
70NA1807/03B/08B/11B/23B/28B/31B	4822 727 19043
70NA1817/22B/23B/28B/29B/33B/36B	4822 727 19046
70NA1818/31B	4822 727 19046
70NA1866/18B/38B	4822 727 19043
70NA1876/38B	4822 727 19046
70NA1877/26B	4822 727 19046
213861SB/39R	4822 727 19041
250571SB/02B/04R/22R/24R	4822 727 19038
252961SB/19R/39R	4822 727 19038
254961SB/19R/39R	4822 727 19038
255831CB/19R	4822 727 19059
256341SB/22B/24R	4822 727 19045
256861SB/19R/39R	4822 727 19043
256961SB/39R	4822 727 19045
281571SB/02R/04R/22R/24R	4822 727 19038
281961SB/19R/39R	4822 727 19038
281963SB/19R/39R	4822 727 19038
287831CB/19R	4822 727 19059
288371SB/22B/24R	4822 727 19046
288861SB/19R/39R	4822 727 19043
288961SB/39R	4822 727 19046

XXI. GR2.2

		CHASSIS MANUAL	CIRCUIT DESCRIPTION
GR2.2 AA	GB	4822 727 19063	-
	D	4822 727 19064	-
	NL	4822 727 19062	-
	F	4822 727 19065	-
	I	4822 727 19066	-
	E	4822 727 19067	-
GR2.2 SAT2	D	4822 727 20635	

SERVICE INFORMATION

92.02	-	4822 727 19535
92.03	-	4822 727 19748
93.01	-	4822 727 20088
94.01	-	4822 727 20094
94.04	-	4822 727 20674

MODEL MANUALS

MODEL MANUALS GR2.2

21ST2131/16B	4822 727 19589
21ST2430/02B/05B/08B/10B/12B/13B	4822 727 19541
21ST2436/10B/19B/42B	4822 727 19541
21ST2637/19B/42B	4822 727 19403
21ST2630/02B	4822 727 19556
21ST2636/19B	4822 727 19556
21ST2730/05B/08B/10B/12B/13B/16B	4822 727 19556
21ST2731/02B/05B/07B/08B/10B/12B/13B/16B	4822 727 19403
21ST2737/10B/42B	4822 727 19403
21ST2931/10B/16B	4822 727 19589
21ST2937/19B	4822 727 19589
25MN1350/30B	4822 727 19402
25MN1353/28B/36B	4822 727 19557
25MN1355/39B	4822 727 19557
25MN1356/39B/42B	4822 727 19402
25MN1550/22B/25B/27B/28B/30B/33B/36B	4822 727 19402
25MN1553/30B/33B/36B	4822 727 19557
25PT510A/00	4822 727 19706
25PT550A/00	4822 727 19708
25ST2451/02B/07B/08B/10B/12B/13B/16B	4822 727 19539
25ST1724/02B	4822 727 19684
25ST2454/42B	4822 727 19539
25ST2457/10B/42B	4822 727 19539
25ST2657/19B	4822 727 19565
25ST2664/19B/42B	4822 727 19543
25ST2666/19B/42B	4822 727 19552
25ST2751/02B	4822 727 19565
25ST2759/02Z	4822 727 19543
25ST2760/05B/08B/10B/13B/16B	4822 727 19552
25ST2761/02B/05B/07B/08B/10B/12B/13B/16B	4822 727 19543
25ST2767/10B/42B	4822 727 19543
25ST2860/12B	4822 727 19552
25ST2864/12B	4822 727 19543
25ST2961/10B/16B	4822 727 19589
28ET2485/10B	4822 727 19689
28ET2785/10B	4822 727 19689
28MN1370/28B/30B	4822 727 19402
28MN1570/22B/28B/30B/33B/36B	4822 727 19402
28PT510A/00	4822 727 19706
28PT550A/00	4822 727 19708
28ST1734/02B	4822 727 19684
28ST2181/10B	4822 727 19589
28ST2281/10B	4822 727 19589
28ST2287/19B	4822 727 19589
28ST2471/02B/08B/10B/12B/13B	4822 727 19406
28ST2477/10B	4822 727 19406
28ST2674/19B	4822 727 19561
28ST2686/19B	4822 727 19542
28ST2687/19B/42B	4822 727 19401
28ST2771/02B	4822 727 19561
28ST2780/02B/08B/10B/13B/16B	4822 727 19542
28ST2781/02B/05B/08B/10B/13B/16B	4822 727 19401
28ST2784/13B	4822 727 19674
28ST2785/13B	4822 727 19566
28ST2786/10B	4822 727 19542
28ST2787/10B/42B	4822 727 19401
28ST2789/02Z/10Z	4822 727 19401

28ST2880/12B	4822 727 19542
28ST2981/10B/16B	4822 727 19589
28ST2987/19B	4822 727 19589
52NA2304/03B/08B	4822 727 19546
52NA2307/03B/16B	4822 727 19562
52NA2317/03B/08B/10B/12B	4822 727 19404
52NA2364/18B	4822 727 19546
52NA2366/18B	4822 727 19562
52NA2376/18B	4822 727 19404
52NA2377/06B	4822 727 19404
63CA1503/30B/37B	4822 727 19405
63CA1505/23B28B/33B/36B	4822 727 19405
63CA1513/28B/29B/30B/36B	4822 727 19675
63CA1515/23B	4822 727 19675
63CA1563/38B	4822 727 19405
63CA1573/38B	4822 727 19675
63CA1595/25Z	4822 727 19675
63NA2514/03B/08B/12B/16B	4822 727 19545
63NA2576/18B	4822 727 19567
63NA2607/02B/03B/08B	4822 727 19558
63NA2617/03B/09B/10B/13B/16B	4822 727 19559
63NA2618/10B	4822 727 19559
63NA2676/18B	4822 727 19559
70CA1703/28B/29B/30B	4822 727 19405
70CA1705/23B/28B/33B/36B	4822 727 19405
70CA1763/38B	4822 727 19405
70NA2714/03B/08B/09B/12B/16B	4822 727 19544
70NA2774/18B	4822 727 19544
70NA2776/18B	4822 727 19564
70NA2807/02B/03B	4822 727 19555
70NA2808/10B	4822 727 19555
70NA2817/02B/03B/08B/09B/10B/13B/16B	4822 727 19553
70NA2818/10B	4822 727 19553
70NA2876/18B	4822 727 19553
70NA2877/06B	4822 727 19553
70NA2879/18B	4822 727 19653
213372SB/04R	4822 727 19404
213862SB/19R	4822 727 19562
213962SB/19R	4822 727 19404
25251CB/24R	4822 727 19405
255741CB/39R	4822 727 19675
255831CB/39R/42R	4822 727 19405
255942SB/19R	4822 727 19545
255962CB/19R	4822 727 19567
256372SB/02R/04R	4822 727 19559
256392SB/02B	4822 727 19691
256862SB/19R	4822 727 19558
287231CB/24R/34R	4822 727 19405
287342SB/14R	4822 727 19544
287831CB/39R	4822 727 19405
287942SB/19R	4822 727 19544
287962SB/19R	4822 727 19564
288372SB/02R/04R	4822 727 19553
288392SB/02R	4822 727 19697
288572SB/02B	4822 727 19564

288862SB/19R

4822 727 19555

1993 STYLING YEAR BOOK
1994 STYLING YEAR BOOK

4822 727 20263
4822 727 20672

XXII. GR2.3

		CHASSIS MANUAL	TRAINING MANUAL	REPAIR MANUAL
GR2.3 AA	GB	4822 727 19732	4822 727 20018	4822 727 20012
	D	4822 727 19734	4822 727 20022	4822 727 20014
	NL	4822 727 19731	4822 727 20019	4822 727 20013
	F	4822 727 19733	-	-
	I	4822 727 19736	4822 727 20024	4822 727 20017
	E	4822 727 19735	4822 727 20023	4822 727 20016

SERVICE INFORMATION

93.01	-	4822 727 19738
94.01	-	4822 727 20129
94.04	-	4822 727 20674

MODEL MANUALS

1993 STYLING YEAR BOOK	4822 727 20263
1994 STYLING YEAR BOOK	4822 727 20672

XXIII.GR2.4

		CHASSIS MANUAL	SUPPLEMENT MANUAL	TRAINING MANUAL
GR2.4 AA	GB	4822 727 20662	4822 727 20686	4822 727 20365
	D	4822 727 20664	4822 727 20689	4822 727 20366
	NL	4822 727 20663	4822 727 20687	-
	F	4822 727 20665	4822 727 20688	4822 727 20367
	I	4822 727 20666	4822 727 20691	4822 727 20369
	E	4822 727 20667	4822 727 20693	-

SERVICE INFORMATION

94.04 - 4822 727 20674

MODEL MANUALS

1993 STYLING YEAR BOOK
1994 STYLING YEAR BOOK

4822 727 20263
4822 727 20672