 



# SERVICE MANUAL

# RA-3 CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
KP-48V80	RM-Y905	US	SCC-P14CA	KP-61V80	RM-Y905	US	SCC-P14BA
KP-48V80	RM-Y905	Canadian	SCC-P14CA	KP-61V80	RM-Y905	Canadian	SCC-P14BA
KP-53V80	RM-Y905	US	SCC-P14AA				
KP-53V80	RM-Y905	Canadian	SCC-P14AA				



RM-Y905

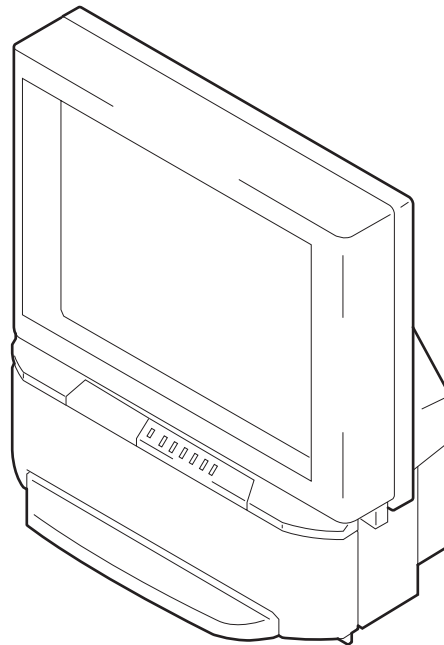

KP-48V80/53V80/61V80



\* Please file according to model size. ....

48 53 61

COLOR REAR VIDEO PROJECTOR  
**SONY**®

**SPECIFICATIONS****Projection system**

3 picture tubes, 3 lenses, horizontal in-line system

**Picture tube**

7-inch high-brightness monochrome tubes (6.3 raster size),  
with optical coupling and liquid cooling system

**Projection lenses**

High performance, large diameter hybrid lens F1.05

**Television system**

American TV standard

**Channel coverage**

VHF: 2–13/UHF: 14–69/CATV: 1–125

**Antenna**

75 ohm external terminal for VHF/UHF

**Screen size (measured diagonally)**

48 inches (KP-48V80)

53 inches (KP-53V80)

61 inches (KP-61V80)

**Inputs/outputs**

VIDEO 1/3 IN

VIDEO 2 INPUT

S VIDEO IN (4-pin mini DIN):

Y: 1 Vp-p, 75-ohms unbalanced, sync negative

C: 0.286 Vp-p (Burst signal), 75 ohms

VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync  
negative

AUDIO (phono jacks): 500 mVrms (100% modulation),

Impedance: 47 kilohms

**VIDEO 4/5 IN**

Y: 1 Vp-p, 75 ohms, sync negative

PB: 0.7 Vp-p, 75 ohms

PR: 0.7 Vp-p, 75 ohms

AUDIO (phono jacks): 500 mVrms (100% modulation),

Impedance: 47 kilohms

**TV OUT/MONITOR OUT**

VIDEO (phono jack): 1 Vp-p, 75-ohms unbalanced, sync  
negative

AUDIO (phono jacks): 500 mVrms (100% modulation),

Impedance: 470 ohms

UDIO (VAR/FIX) OUT (phono jacks): 500 mVrms (100%  
modulation), Impedance: 470 ohms

**S-LINK:** minijacks

**CONTROL S OUT:** minijack

**Speaker**

Tweeter: 66 mm (2 5/8") x 2

Woofer: 130 mm (5 1/8") x 2 (KP-48V80/53V80)

160 mm (6 3/8") x 2 (KP-61V80)

**Speaker output**

20 W x 2

**Power requirement**

120 V AC, 60 Hz

**Power consumption**

In use (Max.): 170 W

In standby: 1 W

**Dimensions (W/H/D)**

1,105 x 1,338 x 579 mm (43 1/2 x 52 5/8 x 22 3/4 inches)  
(KP-48V80)

1,216 x 1,417 x 632 mm (47 7/8 x 55 3/4 x 24 7/8 inches)  
(KP-53V80)

1,370 x 1,560 x 670 mm (54 x 61 3/8 x 26 3/8 inches)  
(KP-61V80)

**Mass**

68.8 kg (151 lbs 11 oz) (KP-48V80)

76.0 kg (167 lbs 9 oz) (KP-53V80)

93.6 kg (206 lbs 6 oz) (KP-61V80)

**Supplied accessories**

Remote control RM-Y905 (1)

Batteries (2) size AA (R6)

**Optional accessories**

Connecting cables

RK-G34, RK-74A, RK-G69HG, VMC-10HG,

VMC-720M, VMC-810S/820S, YC-15V/30V

U/V mixer EAC-66

Design and specifications are subject to change without notice.

## SAFETY CHECK-OUT ( US model only )

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the condition of the monopole antenna (if any). Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

### HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watt trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

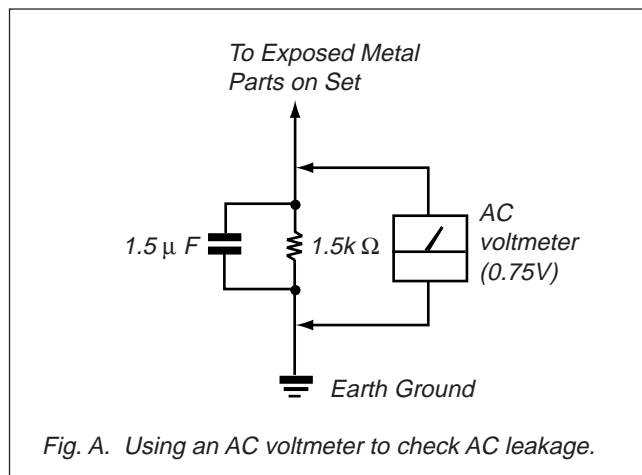


Fig. A. Using an AC voltmeter to check AC leakage.

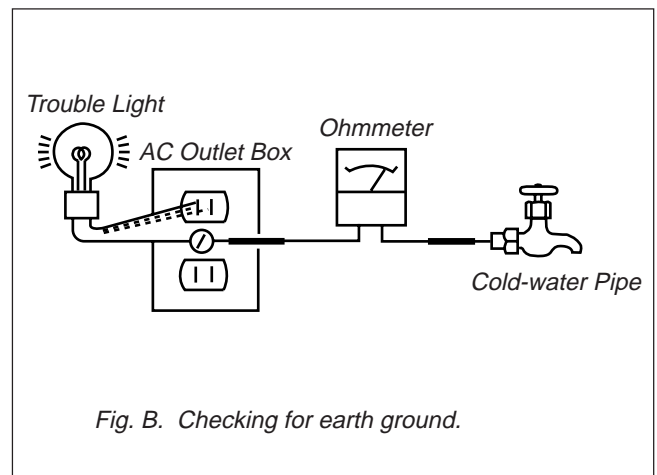


Fig. B. Checking for earth ground.

## SELF DIAGNOSIS FUNCTION

### 1. Summary of Self-Diagnosis Function

- This device includes a self-diagnosis function.
- In case of abnormalities, the TIMER/STANDBY indicator automatically blinks. It is possible to predict the abnormality location by the number of blinks. The Instruction Manual describes blinking of the TIMER/STANDBY indicator.
- If the symptom is not reproduced sometimes in case of a malfunction, there is recording of whether a malfunction was generated or not. Operate the remote command to confirm the matter on the screen and to predict the location of the abnormality.

### 2. Diagnosis Items and Prediction of Malfunction Location


- When a malfunction occurs the TIMER/STANDBY indicator only blinks for one of the following diagnosis items. In case of two or more malfunctions, the item which first occurred blinks. If the malfunctions occurred simultaneously, the item with the lower blink count blinks first.
- The screen display displays the results regarding all the diagnosis items listed below. The display “ 0 ” means that no malfunctions occurred.

Diagnosis item	TIMER/STANDBY Indicator Number of blinks	Supposed malfunction	Condition	Self-diagnosis screen display, Diagnosis item: Results
• Power not ON	0	[Standby Power Supply System] F601 open. R607 open. Q601 short circuit [Main Power Supply System] IC601 and R612 are broken. VDR601 short-circuit	Cannot turn on the power. LED doesn't blink.	
+B OCP detection	2 times	Short circuit of power supply system in each circuit.	Goes to the standby mode Short circuit of +B line	2 : +B OCP 000
+B OVP detection	3 times	T603 pin 78 open. R672 open.	Goes to the standby mode Malfunction of power supply circuit	3 : +B OVP 000
Vertical deflection stop	4 times	IC1509(V out) is broken. Q1505(V Pulse Buffer) is broken.	Raster goes to one line horizontally, A and then video signal is muted.	4 : V Stop 000
Video out abnormality detection	5 times	Video out, Q705, 732, 761 and others in C board circuit. Q218, 219, 220 (A board)	TIMER/STANDBY LED blinks approx. 30 seconds, and then blinks for the self diagnosis.	5 : AKB 000
Horizontal deflection stop	6 times	C515, 516 open. IC206(YC Jungle) is broken.	Raster doesn't appear.	6 : H Stop 000
Audio abnormality detection	8 times	IC406(Audio amp.) is broken. PS401, 402 open.	The sound is not out. Goes to the standby mode	8 : Audio 000

\* : 000 the range of values for number of operations is 000-255. For 256 or higher there is no count up and the number remains at 255.

### 3. Blinking count display of TIMER/STANDBY indicator

\* One blink is not used for self-diagnosis.

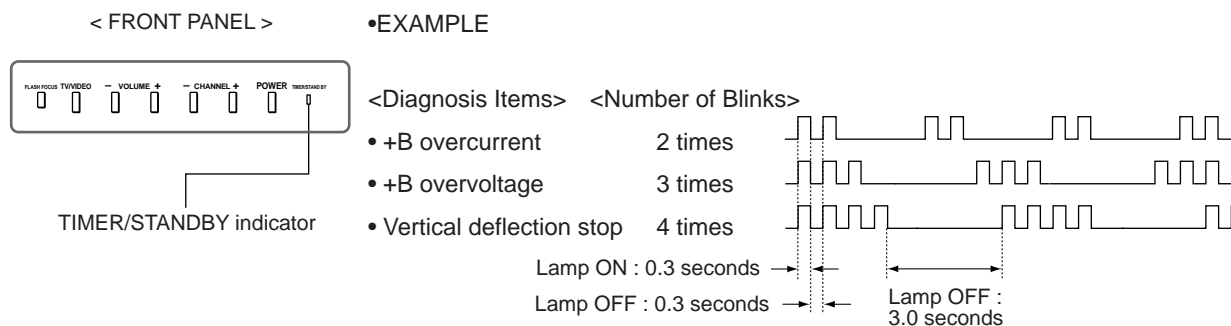

#### Release of TIMER/STANDBY indicator blinking.


- The TIMER/STANDBY indicator blinking display is released by turning OFF the power switch on the TV main unit or removing the plug from the power.



**6. Self-diagnosis function operation**

- OCP Low B and +B line detect DET SHORT, and shut-down POWER ON RELAY.  
 Reset by turning power on/off.  
 In case of +B is loaded approx. 2A or more, microcomputer detects it via IC651.
- OVP In case of +B becomes approx. 150V or more, POWER ON RELAY shuts down and microcomputer detects it via IC651.  
 Reset by turning power on/off just the same as OCP.
- V Stop In case of microcomputer detects 2 seconds or more interval of V Pulse, Reference Pulse turns off by turning off the picture signal in YC Jungle IC (IC206).  
 After the picture signal turns off, H Pulse is regenerated 2 seconds or more, the picture signal turns on.
- AKB IK detection. Makes LED blinking in case of microcomputer doesn't detect IK returns of IC206 CXA2147Q 30 seconds or more.
- H Stop In case of HV becomes 33kV or more, IC502 detects it and shut-down H Drive Pulse.  
 Microcomputer receives H Stop data from IC206 and makes LED blinking.
- Audio In case of DC component overlaps the output of Audio Amp., microcomputer detects it and makes LED blinking.  
 Microcomputer forces to shut down the power.

**Self-diagnosis block diagram**

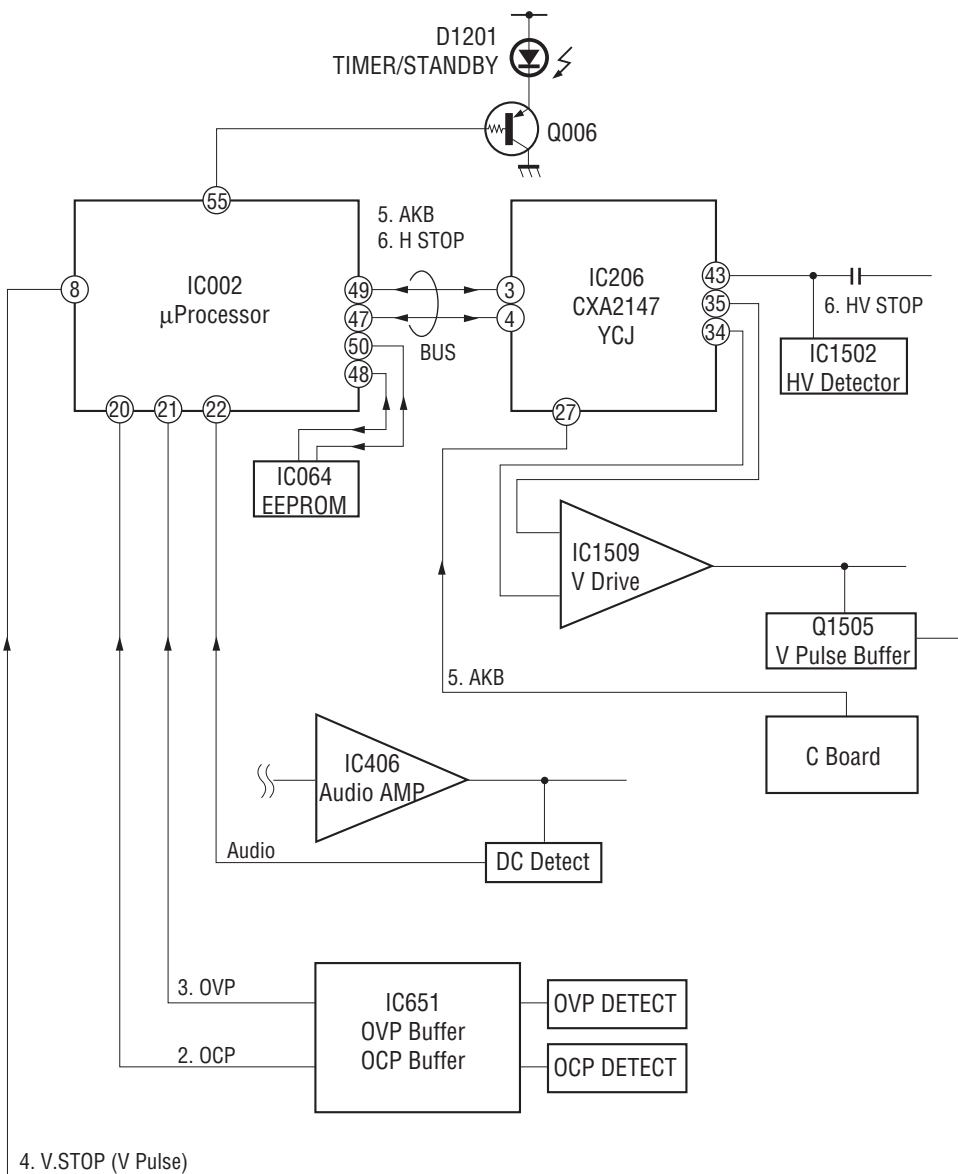

**TABLE OF CONTENTS**

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
	SELF DIAGNOSIS FUNCTION .....	4			
<b>1. GENERAL</b>			<b>5. CIRCUIT ADJUSTMENTS</b>		
	Using This Manual .....	9	5-1.	TV Input Sub Contrast Adjustment (VPNT-SCON) .....	53
	Precautions .....	9	5-2.	“Video Input Sub-HUE and Sub-Color Adjustment .....	53
	Installing and Connecting the Projection TV .....	9	5-3.	“Component Input Sub-HUE and Sub-Color .....	53
	Basic Set Up .....	17	5-4.	P & P Sub Contrast Adjustment (SC-SYDR) .....	53
	Using Your New Projection TV .....	18	5-5.	“Sub-HUE, Sub-Color and Main Contrast Adjustment” “(MC-MYDR, MSHU, MSCL, SC-SSHU, SSCL)” .....	54
	Adjusting Your SET UP (menus) .....	22	5-6.	Bar Display Position Adjustment (OP-DISP) .....	54
	Operating Video Equipment .....	33	5-7.	“PIP Acquisition Area Adjustment (PP-MAHP, SAHP)” .....	54
	Operating a Cable Box or Satellite Receiver (SAT) .....	34	5-8.	Display Position for Channel Index Mode (CCDCCHP) .....	54
	Troubleshooting .....	35			
<b>2. DISASSEMBLY</b>			<b>7. EXPLODED VIEWS</b>		
2-1.	Rear Board Removal .....	36	6-1.	Block Diagram (1) .....	55
2-2.	Chassis Assy Removal .....	36		Block Diagram (2) .....	57
2-3.	Service Position .....	36		Block Diagram (3) .....	59
2-4.	HA Board and HB Board Removal .....	36		Block Diagram (4) .....	63
2-5.	Mirror Cover Removal .....	37		Block Diagram (5) .....	67
2-6.	Beznet Assy Removal .....	37		Block Diagram (6) .....	69
2-7.	HC Board and S Board Removal .....	37	6-2.	Frame Schematic Diagram .....	71
2-8.	U Board and Terminal Board Removal .....	37	6-3.	Circuit Boards Location .....	74
2-9.	A Board and G Board Removal .....	38	6-4.	Printed Wiring Boards and Schematic Diagrams .....	74
2-10.	Picture Tube Removal .....	38		• A (1/3)Board .....	75
2-11.	High-Voltage Cable Installation and Removal .....	38		• A (2/3)Board .....	79
				• A (3/3)Board .....	83
<b>3. SET-UP ADJUSTMENTS</b>				• G Board .....	91
3-1.	Screen Voltage Adjustment (Rough Alignment) .....	39		• U Board .....	101
3-2.	Focus Lens Adjustment .....	39		• CG Board .....	105
3-3.	Screen (G2) Adjustment .....	39		• CR Board .....	106
3-4.	Focus VR Adjustment .....	39		• CB Board .....	107
3-5.	Deflection York Tilt Adjustment .....	40		• HA Board .....	109
3-6.	“2-Pole Magnet Adjustment (Green, Red)” .....	40		• HC Board .....	109
3-7.	4-Pole Magnet Adjustment .....	40		• HB Board .....	110
3-8.	Defocus Adjustment (Blue) .....	40	6-5.	Semiconductors .....	111
3-9.	Electrical Adjustment by Remote Commander .....	41			
3-10.	Registration Adjustment .....	46	<b>7. EXPLODED VIEWS</b>		
3-11.	Auto Registration Error Code List .....	49	7-1.	Cover (KP-48V80) .....	113
<b>4. SAFETY RELATED ADJUSTMENTS</b>			7-2.	Cover (KP-53V80/61V80) .....	114
4-1.	HV Regulation Circuit Check and Adjustment .....	51	7-3.	Chassis .....	115
4-2.	HV Hold Down Circuit Operation and Adjustment ..	51	7-4.	Picture Tube .....	116
4-3.	+B Max Voltage Confirmation .....	51			
4-4.	+B OVP Confirmation .....	52	<b>8. ELECTRICAL PARTS LIST</b> .....		117

**(CAUTION)**

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

**WARNING!!**

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.

THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

**SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY SHADING AND MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

**(ATTENTION)**

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

**ATTENTION!!**

AFIN D'EVITER TOUT RISQUE DE ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DEPANNAGE.

LE CHÂSSIS DE CE RECEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

**ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!**

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MAPQUE  $\triangle$  SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÈCES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÈCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.



# SECTION 1

## GENERAL

The operating instructions mentioned here are partial abstracts from the Operating Instructions Manual. The page numbers of the Operating Instruction Manual remain as in the manual. (Part no : 3-806-564-11)

### Using This Manual

We recommend that you carefully review the contents of the following four sections in the order provided to ensure that you fully understand the operation of your new projection TV.

#### 1 Installing and Connecting the Projection TV

This section guides you through your initial set up. It shows you how to install your projection TV, to connect your new components and to connect to the antenna and cable.

#### 2 Basic Set Up

This section teaches you the basic skills needed to operate your new projection TV, including Auto Set Up. It shows you how to operate the remote control's special functions.

#### 3 Using Your New Projection TV

This section shows you how to begin using your new projection TV. It shows you how to use your remote control's features.

#### 4 Adjusting Your Set Up (menus)

This section teaches you how to access on-screen menus and adjust your projection TV's settings.

*Instructions in this manual are written for the remote control. Similar controls may be found on the projection TV console.*

2

### Precautions

#### Safety

- Operate the projection TV only on 120 V AC.
- The plug is designed, for safety purposes, to fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If any liquid or solid object should fall inside the cabinet, unplug the projection TV immediately and have it checked by qualified service personnel before operating it further.
- If you will not be using the projection TV for several days, disconnect the power by pulling the plug itself. Never pull on the cord.

*For details concerning safety precautions, see the supplied leaflet "IMPORTANT SAFEGUARDS."*

#### Note on cleaning

Clean the cabinet of the projection TV with a dry soft cloth. To remove dust from the screen, wipe it gently with a soft cloth. Stubborn stains may be removed with a cloth slightly dampened with solution of mild soap and warm water. Never use strong solvents such as thinner or benzine for cleaning.

If the picture becomes dark after using the projection TV for a long period of time, it may be necessary to clean the inside of the projection TV. Consult qualified service personnel.

### Installing

- To prevent internal heat buildup, do not block the ventilation openings.
- Do not install the projection TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- Avoid operating the projection TV at temperatures below 5° C (41° F).
- If the projection TV is transported directly from a cold to a warm location, or if the room temperature changes suddenly, the picture may be blurred or show poor color. In this case, please wait a few hours to let the moisture evaporate before turning on the projection TV.
- To obtain the best picture, do not expose the screen to direct illumination or direct sunlight. It is recommended to use spot lighting directed down from the ceiling or to cover the windows that face the screen with opaque drapery. It is desirable to install the projection TV in a room where the floor and walls are not of a reflective material.

### Installing and Connecting the Projection TV


#### Carrying Your Projection TV

Carrying the projection TV requires three or more people.


The projection TV has been equipped with casters for easy movement on a hard surface. Please move your projection TV using the casters.

#### Installing the Projection TV

##### Recommended viewing area (Horizontal)

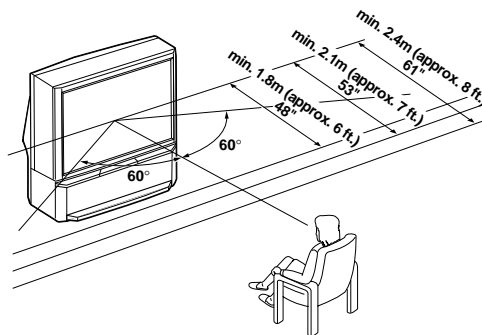

##### Recommended viewing area (Vertical)

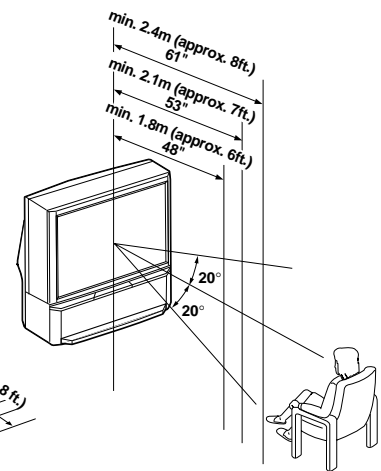

3

## Installing and Connecting the Projection TV (continued)

### Connector Types

You may find it necessary to use some of the following connector types during set up.

#### Coaxial cable

Standard TV cable and antenna cable

##### Plug Type



##### Screw-on Type

 


#### S Video cable

High quality video cable for enhanced picture quality



#### Audio/Video cable



Video - Yellow  
Audio (Left) - White  
Audio (Right) - Red

Some DVD Players and DTV Receivers are equipped with the following three video connectors.

Y - Green  
PB (CB, Cb or B-Y) - Blue  
PR (CR, Cr or R-Y) - Red

4

#### S-Link/CONTROL S cable

Sony cable for S-Link and CONTROL S connections. These features are exclusive to Sony products and allow greater control of all Sony equipment.




#### Note:

- For S-Link and CONTROL S connections, you can use the combined S-Link / CONTROL S cable provided with some Sony video equipment, or you can purchase a separate S-Link / CONTROL S cable (RK-G69HG).

#### About the CONTROL S OUT jack

To control other Sony equipment with the projection TV's remote control, connect the CONTROL S IN jack of the equipment to the CONTROL S OUT jack on the projection TV with the CONTROL S cable.



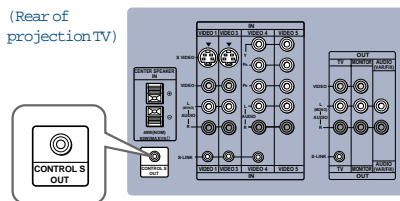


### Making Connections

#### Connecting directly to a cable or an antenna


The connection you choose will depend on the cable found in your home. Newer homes will be equipped with standard coaxial cable (see **A**); older homes will probably have 300-ohm twin lead cable (see **B**); still other homes may contain both (see **C**).

Use 75-ohm coaxial cable for improved picture quality (see **A**).

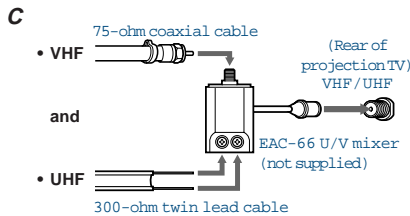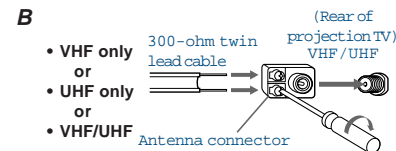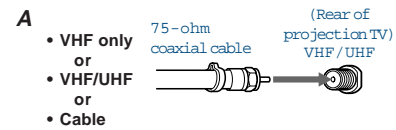


#### Cable or antenna

 This is the simplest connection. Connection is made directly from the cable or antenna to the projection TV.



#### Cable and antenna

You may find it convenient to use the following set up if your cable provider does not feature local channels that you are able to receive using an antenna.

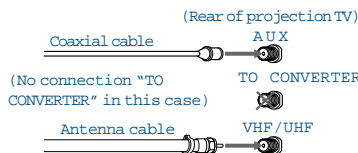


Select Cable or ANT mode by pressing ANT on the remote control.

#### Connecting a cable box


Some pay cable TV systems use scrambled or encoded signals that require a cable box\* to view all channels.

Also, set "Cable" to "On" in the Channel Set Up menu (page 35).

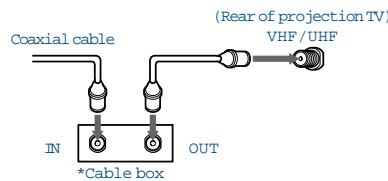

#### Cable box and cable

Some pay cable TV systems use scrambled or encoded signals requiring a cable box\* only for certain channels (e.g. HBO, SHOWTIME, etc.)

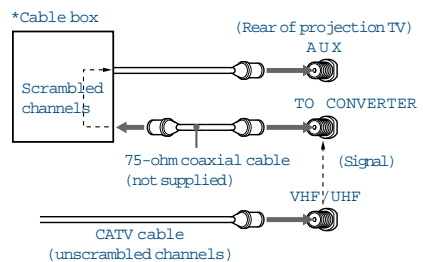

For this set up, you can switch between scrambled channels (through your cable box), and normal (CATV) channels by pressing ANT on your remote control.

#### Notes:

- You may be able to program your Sony remote control to operate your cable box. (see "Operating a Cable Box or Satellite Receiver (SAT)" on page 53)
- During PIP, P&P, CHANNEL INDEX or Favorite Channel viewing, the AUX input can only be viewed in the main picture.

5


Disconnect all power sources before making any connections.

**Note:**

- To view scrambled channels through the cable box, select the video input which the cable box is connected to by pressing TV / VIDEO.
- \* If your VCR is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.
- \*\* If you are connecting a monaural VCR, connect only the single audio output to the left (MONO) input on the projection TV.

**Connecting a satellite receiver (SAT)**

- 1 Connect the cable from the satellite antenna to the satellite receiver.
- 2 Attach the coaxial cable from the incoming cable connection or antenna to VHF /UHF on the projection TV.
- 3 Using AUDIO and S VIDEO cables, connect AUDIO and S VIDEO OUT on the satellite receiver to AUDIO and S VIDEO IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).

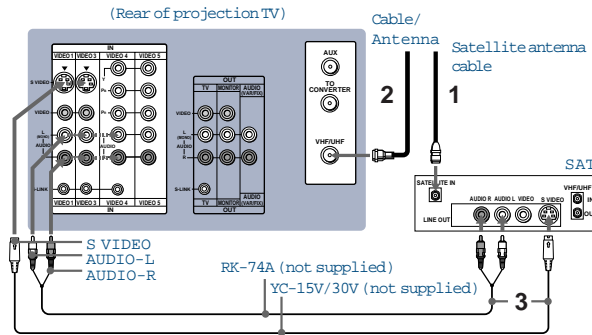

**Note:**


- To view input from the satellite receiver, select the video input which the satellite receiver is connected to by pressing TV / VIDEO on the remote control.

**Installing and Connecting the Projection TV (continued)**

Disconnect all power sources before making any connections.

**Connecting a satellite receiver (SAT) and a VCR**

- 1 Connect the cable from the satellite antenna to the satellite receiver.
- 2 Attach the coaxial cable from the incoming cable connection or antenna to VHF /UHF IN on the VCR.
- 3 Using a coaxial cable, connect VHF /UHF OUT on the VCR to VHF /UHF on the projection TV.
- 4 Using AUDIO and S VIDEO\* cables, connect AUDIO and S VIDEO OUT on the satellite receiver to AUDIO and S VIDEO IN on the VCR.
- 5 Using AUDIO and S VIDEO\* cables, connect AUDIO and S VIDEO OUT on the VCR to AUDIO and S VIDEO IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).

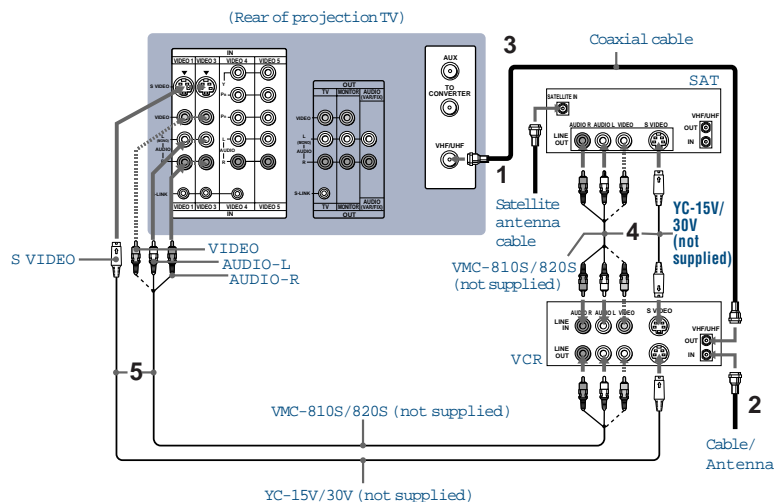

\*If your VCR is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.

**Note:**

- To view input from the satellite receiver or VCR, select the video input which your satellite receiver or VCR is connected to by pressing TV / VIDEO on the remote control.

## Installing and Connecting the Projection TV (continued)

Disconnect all power sources before making any connections.

### Connecting a satellite receiver (SAT) and a VCR


- 1 Connect the cable from the satellite antenna to the satellite receiver.
- 2 Attach the coaxial cable from the incoming cable connection or antenna to VHF/UHF IN on the VCR.
- 3 Using a coaxial cable, connect VHF/UHF OUT on the VCR to VHF/UHF on the projection TV.
- 4 Using AUDIO and S VIDEO\* cables, connect AUDIO and S VIDEO OUT on the satellite receiver to AUDIO and S VIDEO IN on the VCR.
- 5 Using AUDIO and S VIDEO\* cables, connect AUDIO and S VIDEO OUT on the VCR to AUDIO and S VIDEO IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).

\*If your VCR is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.

#### Note:

- To view input from the satellite receiver or VCR, select the video input which your satellite receiver or VCR is connected to by pressing TV/VIDEO on the remote control.

8

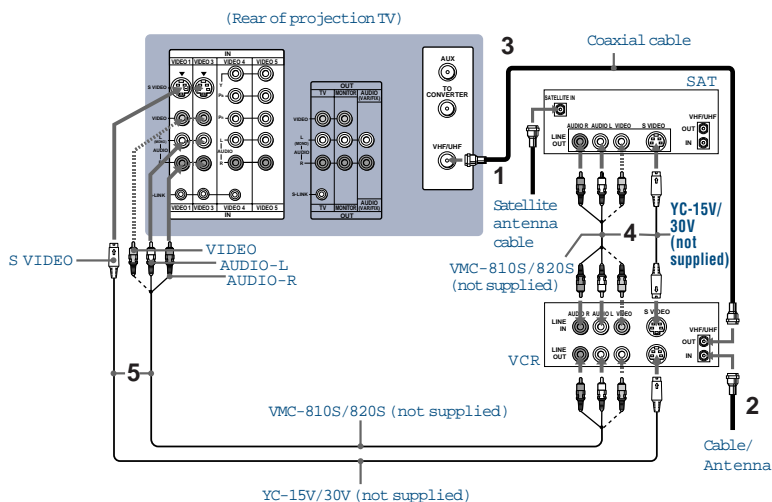


### Connecting a DTV (digital television) receiver

Disconnect all power sources before making any connections.

Before connecting, be sure to read the Operating Instructions of the DTV receiver.

- 1 Attach the coaxial cable from the roof antenna to VHF/UHF on the DTV receiver.
- 2 Using three yellow VIDEO cables, connect Y, P<sub>B</sub> and P<sub>R</sub> of VIDEO OUT on the DTV receiver to Y, P<sub>B</sub> and P<sub>R</sub> of VIDEO 4 or 5 IN on the projection TV.
- 3 Using an AUDIO cable, connect AUDIO OUT on the DTV receiver to AUDIO of VIDEO 4 or 5 IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).
- 4 Set the DOWN CONVERTER ON/OFF switch on the DTV receiver to ON.

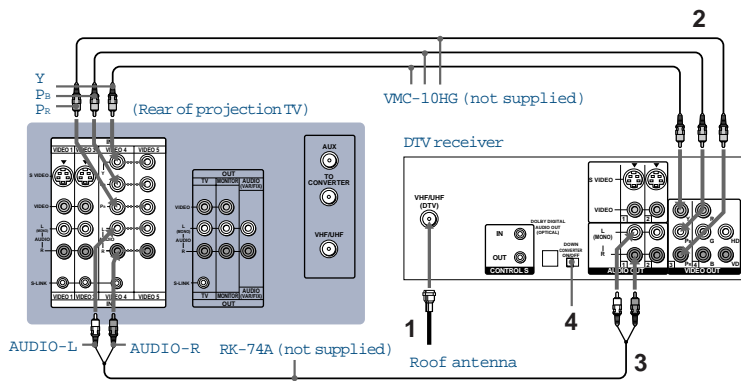

9

## Installing and Connecting the Projection TV (continued)

### Connecting a camcorder

Use this connection to view a picture directly from your camcorder.


- Using AUDIO and S VIDEO\* cables, connect AUDIO and S VIDEO OUT on the camcorder to AUDIO and S VIDEO IN inside the drop-down panel on the front of the projection TV (White-AUDIO Left, Red-AUDIO Right\*\*).

- Press VIDEO 2 to select the video inputs from a camcorder.

\* If your camcorder is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.

\*\* If you are connecting a monaural camcorder, connect only the single audio output to the left (MONO) input on the projection TV.

Disconnect all power sources before making any connections.

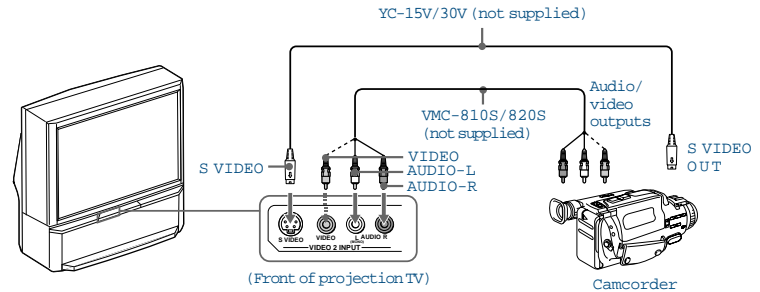

10

### Connecting two VCRs for tape editing

By connecting a second VCR to MONITOR OUT, you can record a program being played by the primary VCR to the second VCR or perform tape editing and dubbing.



- Connect the VCR intended for playback using the connection instructions on page 6 of this manual.

- Using an AUDIO/VIDEO cable, connect AUDIO and VIDEO IN on the VCR intended for recording to AUDIO and VIDEO OUT of MONITOR OUT on the projection TV.

#### Notes:

- Do not change the input signal while editing through MONITOR OUT.
- When connecting a single VCR to the projection TV: if VCR LINE OUT is connected to VIDEO IN on the projection TV, **do not** connect MONITOR OUT on the projection TV to the VCR LINE INPUT (see right). Doing so will cause program interference and other viewing problems.

Disconnect all power sources before making any connections.

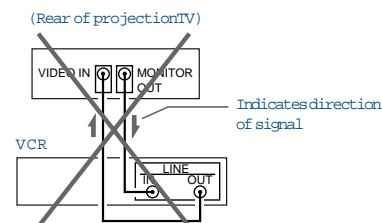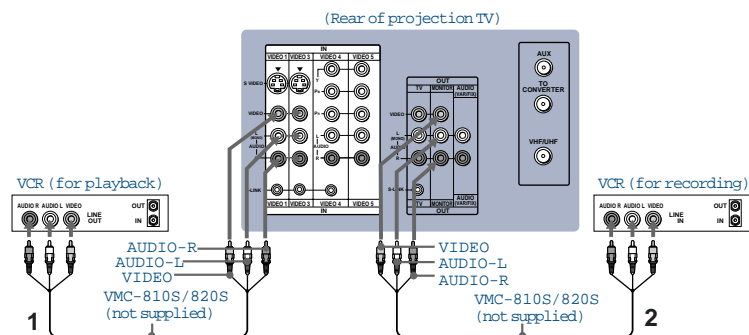

11

## Installing and Connecting the Projection TV (continued)

Disconnect all power sources before making any connections.

### Connecting a DVD Player (Upper illustration)


Using an AUDIO and S VIDEO cables, connect AUDIO and S VIDEO IN on the projection TV to AUDIO and S VIDEO OUT on the DVD Player (White-AUDIO Left, Red-AUDIO Right).

### Connecting a DVD Player with component video output connectors (Lower illustration)

- Using an AUDIO cable, connect AUDIO of LINE OUT on the DVD Player to AUDIO of VIDEO 4 or 5 IN on the projection TV (White-AUDIO Left, Red-AUDIO Right).
- Using three yellow VIDEO cables, connect Y, Pb, and Pr of COMPONENT VIDEO OUT on the DVD Player to Y, Pb, and Pr of VIDEO 4 or 5 IN on the projection TV.

#### Notes:

- Since the high quality pictures on a DVD disc contain a lot of information, picture noise may appear. In this case, adjust "Noise Reduction" in the Video menu. (see "Noise Reduction" on page 30)
- Some DVD Player terminals may be labeled differently. If so, connect as follows:  
 Connect Y (green) to Y.  
 Connect Pb (blue) to Cb, Cb or B-Y.  
 Connect Pr (red) to Cr, Cr or R-Y.

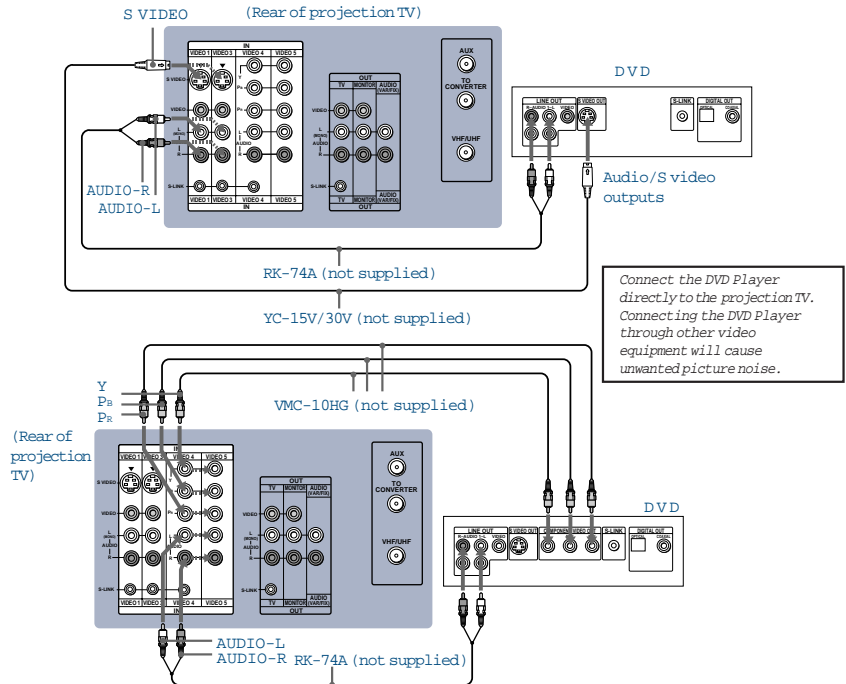


12

### Connecting an AV receiver

Disconnect all power sources before making any connections.

For greater control of all audio and video equipment, connect an AV receiver.

- 1-2 Perform as described in "Connecting a cable TV system/antenna to a VCR" on page 6.
- 3 Using a VIDEO cable, connect VIDEO 1 IN on the projection TV to MONITOR OUT on the AV receiver.
- 4 Using an AUDIO/VIDEO cable, connect TV OUT on the projection TV to VIDEO 2 IN on the AV receiver.
- 5 Using an AUDIO/VIDEO cable, connect the video equipment to the AV receiver.

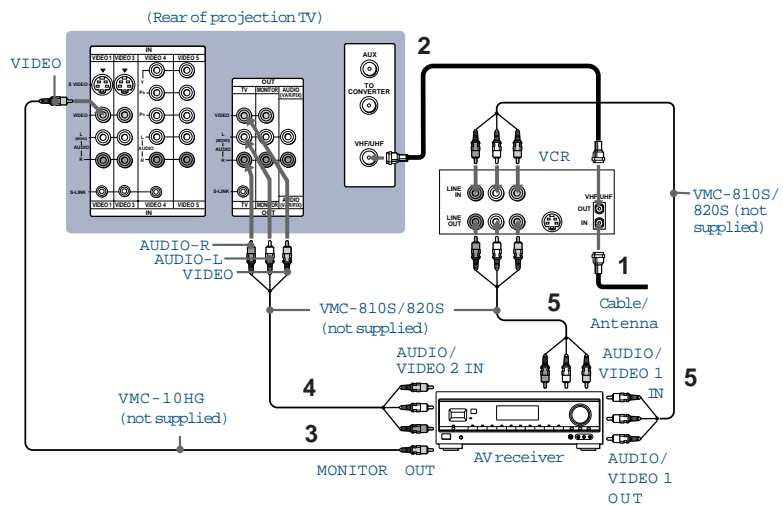

13

## Installing and Connecting the Projection TV (continued)

Disconnect all power sources before making any connections.

### Connecting an audio system

For more dynamic sound, connect an audio system to the projection TV.



- 1 Using an AUDIO cable, connect AUDIO (VAR/FIX) OUT on the projection TV to one of the unused Line inputs (e.g. Tape-2, AUX1, etc.) on the stereo.
- 2 Set the stereo to the chosen Line input and use the Audio menu to set the audio output and switch the TV's speakers off. (see "Audio Out" and "Speaker" on page 32)

#### Note:

- You can adjust VOLUME, "Bass," "Treble," "Balance," "MTS/SAP" and "Effect" with the supplied remote control. The control items except VOLUME can be adjusted only when "Audio Out" is set to "Variable" in the Audio menu. (see "Audio Out" on page 32)

### Connecting a Sony SAVA series speaker system

Use this connection to control the speaker's Dolby Pro Logic surround system and super woofer mode with the remote control. (see "Speaker" and "SAVA SP Control" on page 32)

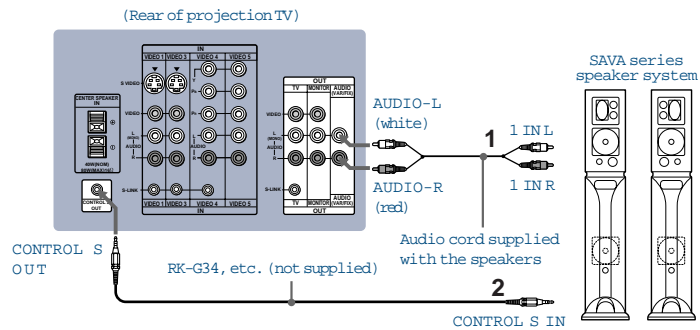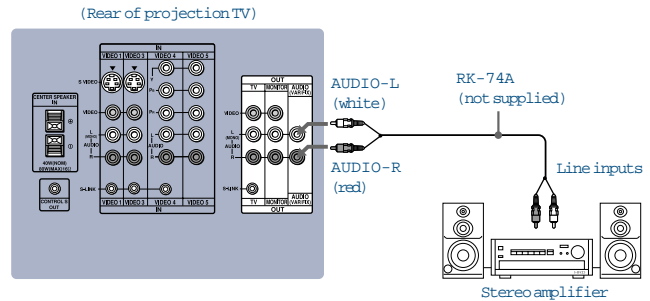

14


- 1 Using the AUDIO cable supplied with the speaker to AUDIO (VAR/FIX) OUT on the projection TV.
- 2 Using the CONTROL S cable, connect CONTROL S IN on the speaker to CONTROL S OUT on the projection TV.

### Connecting an amplifier that supports Dolby Pro Logic decoder

If you use an amplifier with a Dolby Pro Logic decoder instead of the projection TV's audio system, you can still use the projection TV's center speaker.

- 1 Using the speaker cords (supplied with the amplifier), connect the speaker terminals on the amplifier to CENTER SPEAKER IN +/- on the projection TV.
- 2 Using an AUDIO cable, connect AUDIO (VAR/FIX) OUT on the projection TV to one of the unused Line inputs (e.g. Tape-2, AUX1, etc.) on the amplifier (White-AUDIO Left, red-AUDIO Right).
- 3 Set the amplifier to the chosen Line input and use the Audio menu to set "Speaker" to "Center" on the projection TV. (see "Speaker" on page 32)

Disconnect all power sources before making any connections.

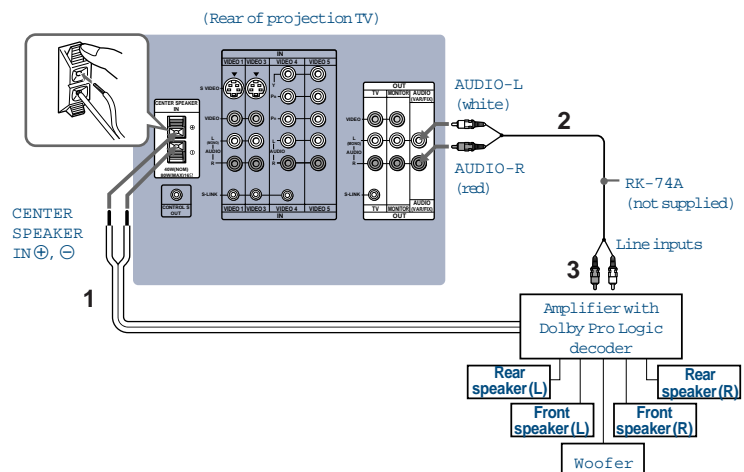

15

## Installing and Connecting the Projection TV (continued)


Disconnect all power sources before making any connections.

### Using the S-Link Function

S-Link is a Sony innovation designed to make the Sony components work together. It allows you to automatically switch the projection TV's input mode to video when you press the play button on the Sony S-Link VCR.

#### Using the S-Link function without a Sony AV receiver

- 1 Connect the Sony VCR (DVD). (see "Connecting a cable TV system/antenna to a VCR" on page 6 or "Connecting a DVD Player with component video output connectors" on page 12)
- 2 Using an S-LINK cable, connect the S-LINK jacks on the VCR (DVD) and the projection TV. Ensure that both ends are seated firmly and that the projection TV's S-LINK jack is in the same row as the AUDIO/VIDEO cable extending from the Sony VCR (DVD).

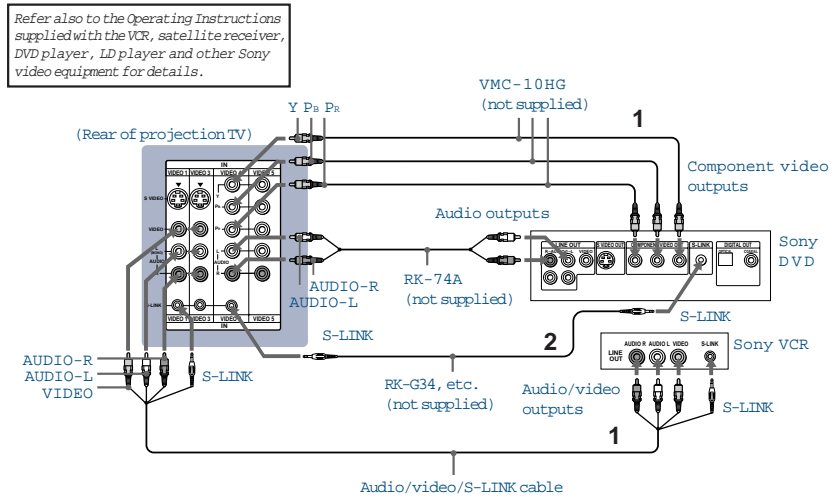


16

#### Using the S-Link function with a Sony AV receiver

- 1 Using a VIDEO cable, connect VIDEO 1 IN on the projection TV to MONITOR OUT on the Sony AV receiver.
- 2 Using an AUDIO/VIDEO cable, connect TV OUT on the projection TV to TV AUDIO and VIDEO IN on the AV receiver.
- 3 Using an S-LINK cable, connect S-LINK on the VIDEO 1 IN panel on the projection TV and S-LINK on MONITOR OUT on the AV receiver.
- 4 Using an S-LINK cable, connect S-LINK on the TV OUT panel on the projection TV to S-LINK on TV IN on the AV receiver.
- 5 Using AUDIO/VIDEO and S-LINK cables, connect the Sony video equipment to the AV receiver.
- 6 Use the Audio menu to set "Speaker" to "Off" or "Center." (see "Speaker" on page 32)
- 7 Press CH (CHANNEL) +/- to activate the S-Link function.

Disconnect all power sources before making any connections.

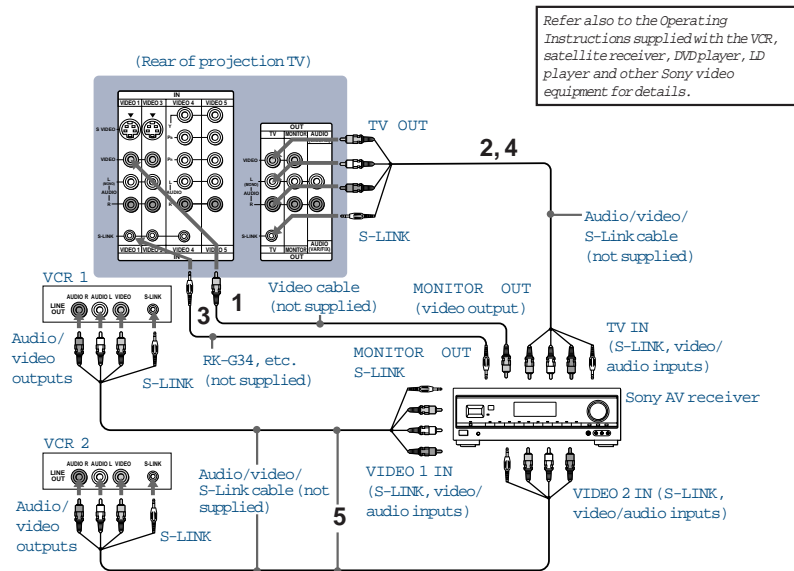

17




## Basic Set Up

### Using the Remote Control

#### Inserting the batteries

Insert two size AA (R6) batteries (supplied) by matching the + and - on the batteries to the diagram inside the remote control's battery compartment.

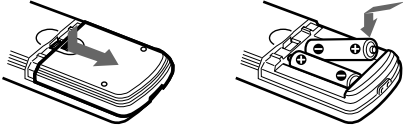


#### Notes:

- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater or where the humidity is high.
- Your remote control can be programmed to operate most video equipment. (see "Operating Video Equipment" on page 51)

18

### Using the remote control joystick

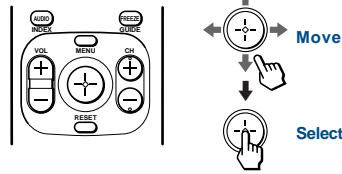

The supplied remote control has a joystick which moves the on-screen selector in four directions. In most cases, moving the joystick up, down, left or right will cause the selector to *move* in the selected direction.

In some cases, the selector may move in four directions according to the function. Pressing down on the center of the joystick (⊕) will *activate* the selected item.

You may also move the joystick right to activate a selected item. (There are some exceptions to this option.)

### Adjusting Sliders

When menu items present a slider (— or —), move the joystick up, down, left or right to adjust the setting.

### On Line Help/Instructions

Several menu windows will provide prompts and instructions to assist you in navigating through the different functions.

### Setting Up the Projection TV Automatically

The AUTO SET UP feature will allow you to set the on-screen language and set all receivable channels.

 
The *AUTO SET UP* feature does not apply for installations that use a cable box for all channel selection.

You can also set up the projection TV manually. (see "Using the Channel Set Up menu" on pages 34 and 35)

#### Notes:


- Before you perform AUTO SET UP again, make sure that the input from ANT (not AUX) is selected by pressing ANT until "AUX" does not appear next to the channel number.
- Perform this function during the day, with the antenna and/or cable properly connected, to ensure that all available channels will be broadcasting and receivable.
- When you perform AUTO SET UP, all the settings in the Video, and Audio menus are reset to the factory settings.

Using the buttons on the front panel of the projection TV:




- 1 Press POWER to turn on the projection TV.

The AUTO SET UP screen appears.

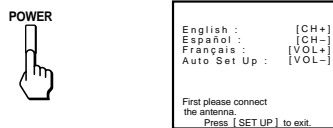


- 2 Press CHANNEL + to select English, CHANNEL - to select Español or VOLUME + to select Français.

The screen will change to reflect your choice.

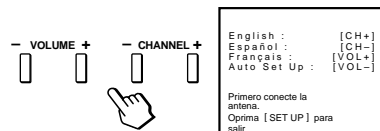

- 3 Press VOLUME - to continue.

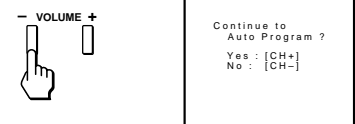


- 4 Press CHANNEL + to preset channels automatically.



"Auto Program" appears and the projection TV starts scanning and presetting channels automatically. While scanning, the received channel will be displayed on the sub screen. When all the receivable channels are stored, the lowest numbered channel is displayed.

## Basic Set Up (continued)
 
### To perform AUTO SET UP again



Press SET UP inside the drop-down panel on the projection TV and perform steps 2-4 on page 19.

Press SET UP again to exit.

### Adjusting the Convergence Automatically (FLASH FOCUS)


The projection tube image appears on the screen in three layers (red, green and blue). If they do not converge, the color is poor and the picture blurs.

Before you use your projection TV, be sure to adjust the convergence.

The FLASH FOCUS feature allows you to adjust the convergence automatically.

#### Tips


- It is recommended to perform FLASH FOCUS about 30 minutes after the projection TV is first turned on.
- You can also perform FLASH FOCUS using the Set Up menu on page 39.

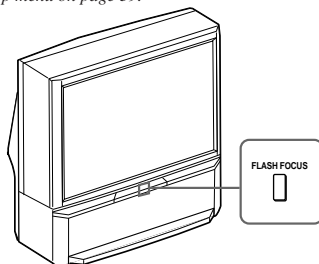

Press FLASH FOCUS.



The cross pattern appears and FLASH FOCUS begins to work. The adjustment is completed when the cross pattern becomes white.

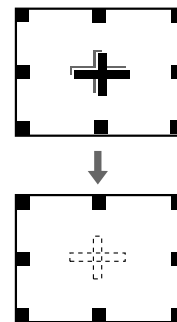

#### Note:

- FLASH FOCUS is canceled if you perform any other function while FLASH FOCUS is working.

20

## Using Your New Projection TV

### Watching the TV

Many TV features can be accessed directly through the remote control. The following chart will explain the function of some buttons found on your remote control.



**REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART**

Using the White Labeled Buttons for Projection TV Operations	
TV (FUNCTION)	Activates the remote control for use with the projection TV.
TV POWER	Turns the projection TV on and off. If a video input indication (e.g., VIDEO 1, VIDEO 2) appears on the screen, press TV/VIDEO until a channel number appears.
<b>0 - 9</b> and ENTER	Use for direct channel selection. Press 0-9 to select a channel (for example, to select channel 10, press 1 and 0). The channel will change after 2 seconds, or you can press ENTER for immediate selection.
CH +/-	Press to scan through the channels (+ up or - down). <b>Speed Surf</b> 1 Press and hold CH + or - to change the channel number rapidly. 2 Release to display the desired channel.
VOL +/-	Press to adjust the volume (+ up or - down).
MUTING	Press to mute the sound. "Muting" will appear on the screen and will dim three seconds later. To restore sound, press again or press VOL +.

(continued)

#### PICTURE MODE

Press PICTURE MODE repeatedly to directly choose one of five different video modes that best suits the program you are watching.

**Vivid:** Select for enhanced picture contrast and sharpness.

**Standard:** Select to display a standard picture for normal viewing environments.


**Movie:** Select to display a finely detailed picture for low light environments.

**Personal 1, Personal 2:** Select to customize the "Picture Adjustment" of the Video menu according to your personal preference.

When you select "Movie," "Personal 1" and "Personal 2," you can also perform the "Picture Adjustment" (such as "Brightness," "Color," etc.) to suit your taste. For details, see "Mode" on page 30.

21



## Using Your New Projection TV (continued)

Using the White Labeled Buttons for Projection TV Operations	
TV/VIDEO	Press repeatedly to scroll through available video inputs: <b>TV, VIDEO 1, VIDEO 2, VIDEO 3, VIDEO 4 and VIDEO 5.</b> If you select "Skip" as a "Video Label" in the Set Up menu, your projection TV will skip the video input you selected. (see "Video Label" on page 39)
JUMP	Press to alternate or <i>jump</i> back and forth between two channels. The projection TV will jump between the current channel and the last channel selected using the 0-9 buttons.
FREEZE <i>(yellow labeled button)</i>	This is useful when you need to copy down information that appears on the TV's screen. Press to <i>freeze</i> the desired picture. The frozen picture is displayed on the left of the screen while viewing the normal picture of the current channel on the right.  <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Frozen picture</p>  </div> <div style="text-align: center;"> <p>Normal motion picture</p> </div> </div> Press again to display the normal picture.
DISPLAY	Press to display the channel number, current time, channel caption (if set), and MTS mode (if SAP is selected). The SAP indication disappears and the other indications dim three seconds later. To turn the display off, press DISPLAY again.

**Tip** 

Some control buttons are located under the cover on the top of the remote control. They are indicated with *(under the cover)* in the table.

22

Using the White Labeled Buttons for Projection TV Operations	
 <i>(under the cover)</i>	Press repeatedly to scroll through available displays: <b>XDS (Extended Data Service)</b> Displays a network name, program name, program type, program length, program description, call letters and time of the show if the broadcaster offers this service. <b>Caption Vision</b> Displayed on the screen if the broadcaster offers this service. (see "Caption Vision" on page 38) <b>No display</b> "Off" appears and the display is canceled.
SLEEP <i>(under the cover)</i>	Press repeatedly until the projection TV displays the approximate time in minutes (30, 60, or 90) that you want the projection TV to remain on before shutting off automatically. Cancel by pressing until "Sleep Off" appears.
ANT <i>(AUX input)</i>	Press to change between the VHF/UHF input and the AUX input. (for detailed connection information, see "Cable and antenna" or "Cable box and cable" on page 5)
MTS/SAP <i>(under the cover)</i>	Press to scroll through the Multi-channel TV Sound (MTS) options: <b>Stereo, SAP, Mono and Auto SAP.</b> (see "MTS/SAP" on page 31)
	Press to select an audio option: <b>Trusurround, Simulated and Effect Off.</b> (see "Effect" on page 31)
TV/VTR <i>(under the cover)</i>	Press when you are finished using a VCR and you want to switch to the TV input. The VCR power will remain on.
SYSTEM OFF <i>(under the cover)</i>	Press to turn off the projection TV and all other equipment connected with S-Link. (see page 16)



**REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART**

23

## Using Your New Projection TV (continued)


### Watching Two Programs at One Time — PIP

The Picture-in-Picture (PIP) feature allows you to view two channels simultaneously, one in the full size “main” picture and one in a smaller “window” picture.

You can move the window picture to any location on the screen.

The symbol “♣” or “♠” indicates which picture's TV channel or input source can be changed.

The symbol “♪” indicates which picture's sound is being received.

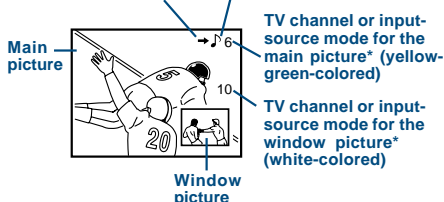

\* It will dim in about 3 seconds.

**Tip**

If you press RESET in PIP mode, the window picture will move to the bottom right (factory-preset location).

Using the Yellow Labeled Buttons for PIP Operations	
	Press to display a window picture. Each time you press this button, the picture size will change (1/4 → 1/9 → 1/16 → no display). ↑ To close the window picture, press  repeatedly until it disappears.
<b>POSITION</b>  (under the cover)	Press to change the location of the window picture (counterclockwise) around the main picture.
<b>ACTIVE</b> 	Press to select either the main or window picture in order to change the TV channel or video source using the white labeled buttons below. The symbol “♣” (or “♠”) will appear to indicate which picture's channel or input mode can be changed.
 (white labeled button)	To change the location of the window picture, move the joystick in any direction and release it when the picture is in the desired location.
<b>TV/VIDEO</b>  (white labeled button)	Press repeatedly to scroll through the available video inputs for the picture on which the symbol “♣” (or “♠”) is displayed. (see “TV/VIDEO” on page 22)

Using the Yellow Labeled Buttons for PIP Operations	
<b>CH</b>  (white labeled button)	Press to select the TV channel on which the symbol “♣” is displayed. (for details, see “Watching the TV” on page 21) <b>Speed Surf</b> 1 Press and hold CH + or – to change the channel number rapidly. 2 Release to display the desired channel.
<b>ANT</b>  (white labeled button)	Press to change between the VHF/UHF input and the AUX input for the picture on which the symbol “♣” (or “♠”) is displayed.
<b>AUDIO INDEX</b> 	Press to alternate sound between the main picture and the window picture. The symbol “♪” will appear for a few seconds to indicate which picture's sound is being received.
<b>FREEZE GUIDE</b> 	This is useful when you need to copy down information of the main picture. Press to freeze the desired scene in the main picture. The frozen picture is displayed in the window picture while viewing the normal picture in the main picture. The window picture size is automatically changed to 1/4 if it was 1/9 or 1/16. Press again to resume normal PIP viewing.
<b>SWAP</b>  (under the cover)	Press to switch the audio and video of the main picture and the window picture. Each time you press SWAP, the picture and sound of the two will be exchanged.



REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART


**Note:**

- If one of the pictures received through PIP is snowy, the entire screen may become unstable. In this case, erase the snowy channel. (see “Channel Skip/Add” on page 35)

## Using Your New Projection TV (continued)

### Watching Two Programs at One Time — P&P (Twin View™)

The Picture-and-Picture (P&P) feature allows you to view two channels simultaneously, both in a reduced size screen. The main picture will appear on the right.

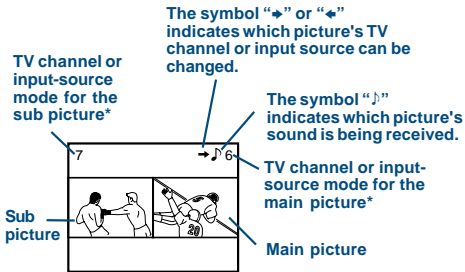

\* It will dim in about 3 seconds.

Using the Yellow Labeled Buttons for P&P Operations	
	Press to display right (main) and left (sub) pictures. Press again to close the sub picture.
	Press to select either the right or left picture in order to change the TV channel or video source using the white labeled buttons below. The symbol "▶" (or "◀") will appear to indicate which picture's channel or input mode can be changed.
	Press repeatedly to scroll through the available video inputs for the picture on which the symbol "▶" (or "◀") is displayed. (see "TV/VIDEO" on page 22)
	Press to select the TV channel on which the symbol "▶" (or "◀") is displayed. (for details, see "Watching the TV" on page 21) <b>Speed Surf</b> 1 Press and hold CH + or – to change the channel number rapidly. 2 Release to display the desired channel.
	Press to change between the VHF/UHF input and the AUX input for the picture on which the symbol "▶" (or "◀") is displayed.

26

Using the Yellow Labeled Buttons for P&P Operations	
	Press to alternate sound between the right and left pictures. The symbol "♪" will appear for a few seconds to indicate which picture's sound is being received.
	This is useful when you need to copy down information that appears on the TV's screen. Press to freeze both the right and left pictures. Press again to resume P&P viewing.
	Press to switch the audio and video of the right and left pictures. Each time you press SWAP, the picture and sound of the two will be exchanged.



**REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART**

**Notes:**

- The sound of the left (sub) picture is monaural.
- Caption Vision is displayed for the right (main) picture only.
- If one of the pictures received through P&P is snowy, the entire screen may become unstable. In this case, erase the snowy channel. (see "Channel Skip/Add" on page 35)

27

## Using Your New Projection TV (continued)


### Using CHANNEL INDEX

You can use the CHANNEL INDEX feature to display multiple channels and select one directly.

Channels used for CHANNEL INDEX will come directly from the TV's list of receivable channels (those set during Auto Program or through the Channel Set Up menu).

1 Press .

The current channel will be reduced in size and displayed in the center of the screen in normal motion picture format. The first twelve receivable channels will appear one after another, clockwise, around the center picture. These small pictures are updated in intervals of one second. The channel number and channel caption (if set) on the second and later appearances will dim.

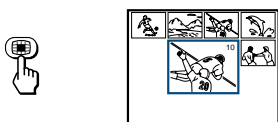

A yellow-colored frame will appear to indicate current channel selection.

28

2 Move the joystick in any direction to move the yellow frame to the picture that you wish to view.



3 Press .

The selected picture will be enlarged for normal viewing.



### To cancel CHANNEL INDEX

Press  again, or select a TV channel using the 0-9 and ENTER buttons.

### Tips

- To cycle through the receivable channels at a time, press CH +/-.
- To freeze the center picture, press FREEZE. Press it again to resume normal center picture viewing.

### Notes:

- The projection TV will continually update each of the surrounding pictures while the CHANNEL INDEX screen is displayed.
- Sound will only be heard from the center picture.
- If one of the pictures received through CHANNEL INDEX is snowy, the entire screen may become unstable. In this case, erase the snowy channel. (see "Channel Skip/Add" on page 35)
- If you leave the CHANNEL INDEX screen displayed for about 20 minutes without any additional operation, CHANNEL INDEX is canceled and the normal picture reappears.

## Adjusting Your SET UP (menus)


### Learning Menu Selection


Use the MENU button to access a menu and use the joystick to alter the settings. Use the following example to learn how to modify settings.

1 Press the MENU button.

The main menu appears.





2 Move the joystick up or down to highlight the desired menu and press  (press down on the center of the joystick) to activate it.

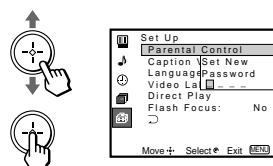


You may also move the joystick right to activate your selection.


3 Move the joystick up or down to highlight the desired option.

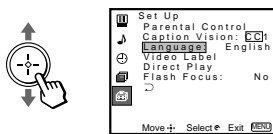


4 Press  (press down on the center of the joystick).


Options for your selection (Pop-up menu or Adjusting menu) will be displayed.

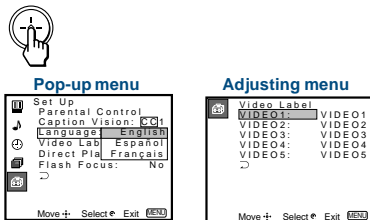

5 Move the joystick up or down to make your selection and press  to activate it. The previous screen will reappear.

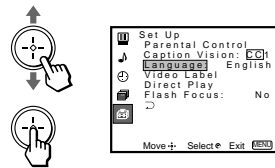

Some adjustment menus may require further operations. For details, see each menu option.

To return to the previous screen (except for the slider adjustment menus), choose "↵" at the bottom of the menu and press  or move the joystick left.




6 Once you have completed all menu corrections, press MENU to exit the menu screens.



### To exit from the menus at any time

   Press MENU.


### Tip

You can also use the MENU,   and  buttons inside the front drop-down panel of the projection TV for the menu selection.

29

## Adjusting Your SET UP (menus) (continued)


### Using the Video Menu

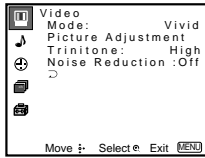

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 29.

#### To select the Video menu:

 
Display → Highlight → Select



#### To restore the factory settings


Press RESET on the remote control while the Video menu is selected. To restore each "Mode" to the factory setting, press RESET after selecting the mode to be reset.

<b>Mode</b> <i>Customized picture viewing</i>	<p>You can choose one of five different video modes that best suits the program you are watching. You can also perform the "Picture Adjustment" (such as "Brightness," "Color," etc.) for "Movie," "Personal 1" or "Personal 2" to suit your taste.</p> <p><b>Vivid:</b> Select for enhanced picture contrast and sharpness.</p> <p><b>Standard:</b> Select to display a standard picture for normal viewing environments.</p> <p><b>Movie:</b> Select to display a finely detailed picture for low light environments.</p> <p><b>Personal 1, Personal 2:</b> Select to customize the "Picture Adjustment" of the Video menu according to your personal preference.</p> <p><i>Press PICTURE MODE on the remote control for direct selection of a "Mode" setting.</i></p>
<b>Picture Adjustment</b> <i>Picture adjustment</i>	<p>First select "Movie," "Personal 1" or "Personal 2" from "Mode," then highlight the desired option using the joystick and press <math>\oplus</math> to display the adjusting slider of the selected option.</p> <p><b>Picture:</b> Adjust slider right (up) to increase picture contrast; left (down) to decrease it.</p> <p><b>Brightness:</b> Adjust slider right (up) to brighten the picture; left (down) to darken it.</p> <p><b>Color:</b> Adjust slider right (up) to increase color intensity; left (down) to decrease it.</p> <p><b>Hue:</b> Adjust slider right (up) to increase the green tones; left (down) to increase the red tones.</p> <p><b>Sharpness:</b> Adjust slider right (up) to sharpen the picture; left (down) to soften it.</p>
<b>Trinitone</b> <i>White intensity adjustment</i>	<p><b>High:</b> Select to give the white colors a blueish tint.</p> <p><b>Medium:</b> Select to give the white colors a neutral tint.</p> <p><b>NTSC Standard:</b> Select to give the white colors a reddish tint.</p>
<b>Noise Reduction</b> <i>Noise reduction</i>	<p>Select <b>On</b> to reduce picture noise.</p> <p>Select <b>Off</b> to cancel the feature.</p> <p><i>"Noise Reduction" can be set separately from the "Mode" settings of the Video menu.</i></p>

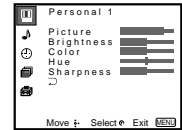

30

### Using the Audio Menu

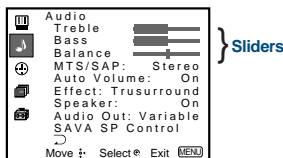

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 29.

#### To select the Audio menu:

Display → Highlight → Select



#### To restore the factory settings

Press RESET on the remote control while the Audio menu is selected.

<b>Treble</b> <i>Sound adjustment</i>	<p>Adjust slider right (up) to increase high pitched sounds.</p> <p>Adjust slider left (down) to decrease high pitched sounds.</p>
<b>Bass</b> <i>Sound adjustment</i>	<p>Adjust slider right (up) to increase low pitched sounds.</p> <p>Adjust slider left (down) to decrease low pitched sounds.</p>
<b>Balance</b> <i>Sound adjustment</i>	<p>Adjust slider right (up) to emphasize right speaker volume.</p> <p>Adjust slider left (down) to emphasize left speaker volume.</p>
<b>MTS/SAP</b> <i>Enjoy stereo, bilingual and mono programs.</i>	<p>When the sound is intermittent due to poor reception conditions, select "Stereo" or "SAP."</p> <p><b>Stereo:</b> Select for stereo reception when viewing a program broadcast in stereo.</p> <p><b>SAP:</b> Select to listen to a bilingual broadcast. (non-SAP programs will be muted when this feature is selected)</p> <p><b>Mono:</b> Select for mono reception. (use to reduce noise during stereo broadcasts)</p> <p><b>Auto SAP:</b> Select to listen to SAP when a SAP program is broadcast and return to stereo reception automatically for non-SAP programs.</p> <p><b>Quick MTS access:</b> Press <math>\text{MTS/SAP}</math> on the remote control to cycle through the "MTS/SAP" options as follows: Stereo → SAP → Mono → Auto SAP.</p>
<b>Auto Volume</b> <i>Adjust the sound level.</i>	<p><b>On:</b> Sound output coming from TV speakers have the volume level equalized for all channel audio inputs when broadcasts have different sound transmission levels.</p> <p><b>Off:</b> Sound output coming from the TV speakers varies according to the received channel.</p>
<b>Effect</b> <i>Customizes surround sound effects based on the program's audio type.</i>	<p>"Effect" can only be set when "Speaker" is set to "On" or "Off."</p> <p><b>Trusurround:</b> Produces a virtual surround effect for Dolby-surround encoded programs.</p> <p><b>Simulated:</b> Adds a surround-like effect to mono programs.</p> <p><b>Off:</b> Normal stereo or mono reception.</p> <p><b>Quick Effect access:</b> Press <math>\text{Effect}</math> on the remote control to cycle through the "Effect" options as follows: Trusurround → Simulated → Effect Off.</p>


(continued) 31

## Adjusting Your SET UP (menus) (continued)

<p><b>Speaker</b>  <i>Custom selection of audio output source</i></p>	<p><b>On:</b> Select to listen to the sound from the projection TV speakers alone.  <b>Off:</b> Select to turn off the projection TV speakers and listen to the projection TV's sound only through an external audio system's speakers.  <b>SAVA SP:</b> Select to turn off the projection TV speakers and listen to the projection TV's sound only through the Sony SAVA series speaker system. You can adjust volume, muting, "Surround Mode," and "Super Woofer Mode" with the projection TV's remote control. (see "SAVA SP Control" below)  <b>Center:</b> Select to use the projection TV as center speaker when you connect an amplifier with a Dolby Pro Logic decoder. (see "Connecting an amplifier that supports Dolby Pro Logic decoder" on page 15)</p>
<p><b>Audio Out</b>  <i>Easy control of volume adjustment</i></p>	<p>"Audio Out" can only be set when "Speaker" is set to "Off."  <b>Fixed:</b> Sound output is held at a fixed level through the audio system. Use the AV receiver's remote control to adjust the volume.  <b>Variable:</b> Sound output varies according to the TV settings. Useful when you want to use your remote control to control the output of a separate audio system.</p>
<p><b>SAVA SP Control</b>  <i>Controls Sony SAVA speaker's mode.</i></p>	<p>"SAVA SP Control" can only be set when Sony SAVA speaker system is connected to the AUDIO (VAR/FIX) OUT connectors and "Speaker" is set to "SAVA SP." (see "Speaker" above)          You can also adjust the SAVA speaker's volume using VOL +/- of the projection TV's remote control.  <b>Surround Mode:</b> Select to activate the SAVA Speaker's surround mode.  <b>Super Woofer Mode:</b> Select to activate the SAVA Speaker's super woofer mode.</p>

32

### Using the Timer Menu

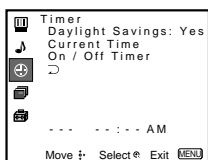


After setting the clock you can use the timer to turn the projection TV on and off.

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 29.

#### To select the Timer menu:

 Display → Highlight → Select



#### Tip

Set daylight saving time before setting the clock. Any loss of power will cause these settings to be erased.


<p><b>Daylight Savings</b>  <i>Automatically adjusts the time.</i></p>	<p><b>Spring:</b> Select <b>Yes</b> to compensate for Daylight Saving Time. The current time automatically moves ahead one hour.  <b>Fall:</b> Select <b>No</b> at the end of Daylight Saving Time. The current time moves back one hour.</p>
<p><b>Current Time</b>  <i>Necessary for the Timer.</i></p>	<ol style="list-style-type: none"> <li>1 Press <math>\oplus</math>, then move the joystick up or down until the current day (Sun - Sat) is displayed, and press <math>\oplus</math>.</li> <li>2 Move the joystick up or down until the current hour (1-12) and AM/PM is displayed, and press <math>\oplus</math>.</li> <li>3 Move the joystick up or down until the current minute (00-59) is displayed, and press <math>\oplus</math>.</li> </ol> <p>The clock has now started. Press MENU to exit.</p>
<p><b>On/Off Timer</b>  <i>Wake up or scheduled viewing.</i></p>	<ol style="list-style-type: none"> <li>1 Move the joystick up or down until the desired day or range of days (Every Sun-Sat, Every Mon-Fri, Sunday, Monday, ....Saturday, Every Sunday, ....Every Saturday) is displayed, and press <math>\oplus</math>.</li> <li>2 Move the joystick up or down until the time (hours and minutes) that you want the projection TV to remain on is displayed, and then press <math>\oplus</math>.</li> <li>3 Move the joystick up or down to set the time duration (maximum of 6 hours) and press <math>\oplus</math>.</li> <li>4 Move the joystick up or down to select the desired channel and press <math>\oplus</math>.</li> </ol> <p>The timer is now set. The TIMER/STAND BY indicator on your projection TV will be lit.          Press MENU to exit. To cancel your timer setting, press RESET while in the On/Off Timer window. Performing Auto Program will erase all Timer settings.</p>

33



## Adjusting Your SET UP (menus) (continued)


### Using the Channel Set Up Menu

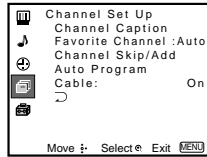

For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 29.

#### To select the Channel Set Up menu:

 Display → Highlight → Select



<p><b>Channel Caption</b> <i>Easy recognition of the channel you are watching</i></p>	<p>You can add a caption for up to 32 channels of VHF/UHF input.</p> <p>With the Channel Caption window open:</p> <ol style="list-style-type: none"> <li>1 Press <math>\oplus</math> and then move the joystick up or down to select the desired channel. You can view the channel that is selected with the Channel Caption menu in the sub screen.</li> <li>2 Press <math>\oplus</math>.</li> <li>3 Move the joystick up or down to display the first letter or number of the caption and press <math>\oplus</math> to select it. Repeat until up to five digits are selected.</li> <li>4 Press <math>\oplus</math>.</li> </ol> <p><i>To erase a caption, press RESET.</i></p>	
<p><b>Favorite Channel</b> <i>User's favorite channels</i></p>	<p>The Favorite Channel feature enables easy access to the eight channels that you preset (or the last channel that you were watching). (for details on how to set up this feature, see "Setting and Selecting Favorite Channel" on page 36)</p>	

34

<p><b>Channel Skip/Add</b> <i>Skips unnecessary channels.</i></p>	<p>After AUTO SET UP, you can erase unnecessary channels from the channel preset memory.</p> <p>With the Channel Skip/Add window open:</p> <ol style="list-style-type: none"> <li>1 Move the joystick up or down to select the desired channel. You can view the channel that is selected with the Channel Skip/Add menu in the sub screen. You can also use CH +/- or 0-9 and ENTER buttons.</li> <li>2 Press <math>\oplus</math>.</li> <li>3 Move the joystick up or down to select <b>Skip</b>, and press <math>\oplus</math>. The selected channel will be erased. If you want to re-enter the skipped channel, follow the steps above and select <b>Add</b>.</li> </ol>	
<p><b>Auto Program</b> <i>Automatic channel presetting</i></p>	<p>Select <b>Yes</b> to signal the projection TV to automatically program all receivable channels. When all the receivable channels are stored, the lowest numbered channel is displayed. Select <b>No</b> to cancel Auto Program.</p>	
<p><b>Cable</b> <i>Cable system setting</i></p>	<p>Select <b>On</b> if your projection TV is connected to a cable system. Select <b>Off</b> if your projection TV is connected to an antenna.</p>	

35

## Adjusting Your SET UP (menus) (continued)

### Setting and Selecting Favorite Channel

The Favorite Channel feature of your projection TV enables easy access to the eight channels that you preset (or the last channel that you were watching).


Your Favorite Channel options can be set automatically or manually.

The factory setting for "Favorite Channel" is "Auto."

When "Favorite Channel" is set to "Auto," the last eight channels selected with the 0-9 buttons will be set as Favorite Channel options. If you want to input your own selections as Favorite Channel settings, set to "Manual."


### Setting Favorite Channel manually

- 1 Select "Favorite Channel" from the Channel Set Up menu. (see page 34)

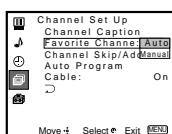


- 2 Move the joystick up or down to select "Manual" and press +.

The Favorite Channel menu will appear. If you set Channel Caption names (e.g. CNN, HBO), they will also be displayed. (see "Channel Caption" on page 34)

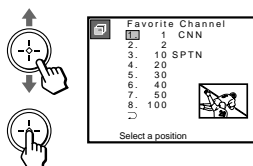


- 3 Move the joystick up or down to select a position (1-8), and press +.

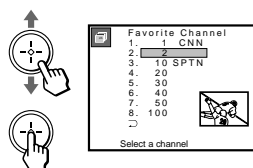

- 4 Move the joystick up or down to select a channel.

You have now selected a favorite channel.

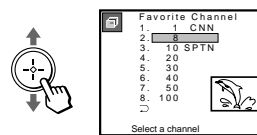

- 5 Press + and use the joystick to program other favorite channels. (Follow steps 3 and 4.)

- 6 Press MENU when you have finished.

Your favorite channels are now ready for use.


36

### Changing Favorite Channel choices

You have the option of returning to the Favorite Channel screen to adjust any of your favorite channel choices.

Simply proceed as described in "Setting Favorite Channel manually" (skip step 2 if "Manual" is already selected).

When you reach step 3, select the position you want to change and press +. Move the joystick up or down to select a new channel.

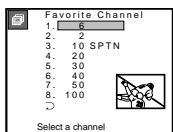

Press MENU when you are done.

#### Note:


- The Favorite Channel feature is not available for the picture input from AUX.

### Using Favorite Channel

You can use the Favorite Channel feature to directly select the channel you want to watch.


- 1 Press + once.

The favorite channel menu and a window picture will be superimposed over the current channel. The window picture displays the channel selected from the menu.

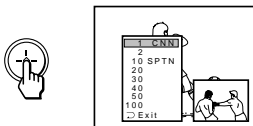

- 2 Move the joystick up or down to select the channel that you wish to view from the menu.

The picture of the selected channel will be displayed in the window picture.

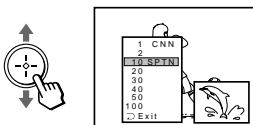

- 3 Press + to select the channel.

The selected channel will be displayed for normal viewing.




To cancel the favorite channel menu before selecting a channel, move the joystick up or down to select "Exit" at the bottom of the menu and press +.

37

## Adjusting Your SET UP (menus) (continued)

### Using the Set Up Menu

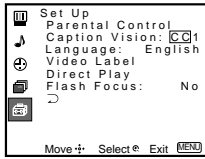


For detailed information on using the remote control to modify menu settings, refer to "Learning Menu Selection" on page 29.

#### To select the Set Up menu:


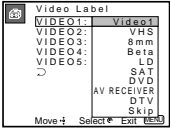

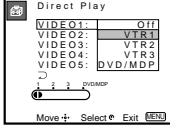
Display → Highlight → Select



<p><b>Parental Control</b> <i>Blocks programs unsuitable for children.</i></p>	<p>Allows you to block TV programs that you feel are unsuitable for your children. (see "Using the Parental Control Feature" on page 40 for details)</p>
<p><b>Caption Vision</b> <i>Television closed caption display</i></p>	<p>Some programs are broadcast with Caption Vision. To display Caption Vision, select <b>CC</b>1, <b>CC</b>2, <b>CC</b>3, <b>CC</b>4, TEXT1, TEXT2, TEXT3 or TEXT4 from the menu. Then press the <b>CC</b> button until "Caption Vision" is displayed. <b>CC</b>1, <b>CC</b>2, <b>CC</b>3 or <b>CC</b>4 displays a printed version of the dialogue or sound effects of a program. (The mode should be set to <b>CC</b>1 for most programs.) TEXT1, TEXT2, TEXT3, or TEXT4 displays network/station information presented using either half or the whole screen.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>Poor reception of TV programs can cause errors in Caption Vision and XDS. Captions may appear with a white box or other errors instead of the intended text.</li> <li>XDS, Caption Vision, and the status display cannot be used at the same time.</li> </ul>
<p><b>Language</b> <i>Preferred language</i></p>	<p>Select from available languages (<b>English, Español or Français</b>) to display all menus in your language of choice.</p>

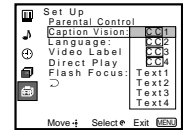

38

<p><b>Video Label</b> <i>Easy recognition of connected equipment (e.g. SAT, VHS, etc.)</i></p>	<p>This feature allows you to label each input mode so that you can easily identify the connected equipment (e.g. you can label VIDEO 1 IN as VHS). With the Video Label window open:</p> <ol style="list-style-type: none"> <li>Move the joystick up or down to select the input mode you want to label and press <b>+</b>.</li> <li>Move the joystick up or down to select the label and press <b>+</b>.</li> </ol> <p><b>Video Label Options:</b>  <b>VIDEO 1:</b> VIDEO 1, VHS, 8mm, Beta, LD, SAT, DVD, AV RECEIVER, DTV, Skip  <b>VIDEO 2/3:</b> VIDEO 2/VIDEO 3, VHS, 8mm, Beta, LD, SAT, DVD, DTV, Skip  <b>VIDEO 4/5:</b> VIDEO 4/VIDEO 5, SAT, DVD, DTV, Skip  <i>If you select "Skip," your projection TV will skip this connection when you scan through video sources using the TV/VIDEO button.</i></p>	 
<p><b>Direct Play</b> <i>Easy operation of a connected VCR</i></p>	<p>This feature allows you to switch the input mode from the TV to a Sony VCR (MDP or DVD) and start playing by only pressing the <b>▶</b> (playback) button on the remote control. You have to set the VTR1/2/3/DVD/MDP switch on the remote control (e.g., you connect your VCR to the VIDEO 3 IN jacks and set the VTR1/2/3/DVD/MDP switch to VTR 3). With the Direct Play window open:</p> <ol style="list-style-type: none"> <li>Move the joystick up or down to select the input to which your video equipment is connected, and press <b>+</b>.</li> <li>Move the joystick up or down to select the position of the VTR 1/2/3/DVD/MDP switch, and press <b>+</b>.</li> </ol>	 
<p><b>Flash Focus</b> <i>Automatic convergence adjustment</i></p>	<p>Select <b>Yes</b> and press <b>+</b> to start Flash Focus adjustment. When the adjustment is completed, the cross pattern on the screen becomes white. (for details, see page 20) Select <b>No</b> to cancel Flash Focus.</p>	

39

## Adjusting Your SET UP (menus) (continued)

### Using the Parental Control Feature

The TV programs and movies shown on TV are given a rating signal based on the following rating systems.

**In U.S.A.:** U.S. Television Parental Guidelines to rate television programs (U.S. TV ratings), and Motion Picture Association of America (MPAA) Guidelines to rate movies including those shown on TV (movie ratings)

**In Canada:** Canadian English Language ratings to rate television programs in English, and Canadian French Language ratings to rate those in French.

To block programs you feel are unsuitable for your children, you need to set the TV for the desired rating systems. Sony's predetermined ratings are also available.

See pages 47 to 50 for a description of the ratings.


The Parental Control feature of the TV functions by receiving the rating signal from your local broadcasting station or cable service provider.

### Activating the Parental Control Feature


First, set a password, then select your desired rating from Sony's predetermined ratings.

40

- 1 Select "Parental Control" from the Set Up menu. (see page 38)

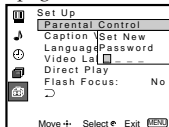


- 2 Enter a four digit password\* using the 0-9 buttons.

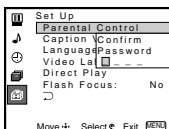


\* Do not enter "4357" corresponding to "HELP" on a phone number pad. (see page 47)


- 3 To confirm the password, re-enter the same password with the 0-9 buttons. Your password is stored and the Parental Control menu automatically appears. If you want to change the password, see page 46.

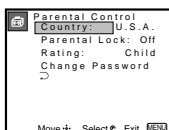


- 4 Make sure that "Country" is highlighted, and press  $\oplus$ .

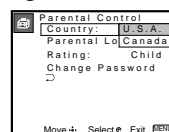

- 5 Move the joystick up or down to select your country (U.S.A. or Canada), and press  $\oplus$ .

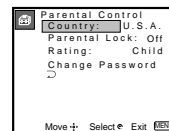


- 6 Move the joystick up or down to select "Parental Lock," and press  $\oplus$ .

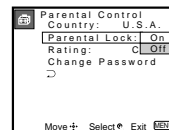


(continued)

- 7 Move the joystick up or down to select "On," and press  $\oplus$ .

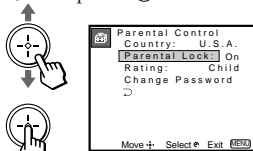

- 8 Move the joystick up or down to select "Rating," and press  $\oplus$ .

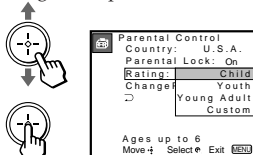

- 9 Move the joystick up or down to select a desired rating ("Child," "Youth" and "Young Adult"), and press  $\oplus$ .


If you want to select the ratings from "Custom," go to step 4 of "Selecting a Custom Rating in U.S.A." on page 42 or "Selecting a Custom Rating in Canada" on page 45, according to your "Country" setting.

- 10 Press MENU to exit the menu.

### To deactivate the Parental Control feature


If you set "Parental Lock" in the Parental Control menu to "Off," the Parental Control feature will not work and you can view all TV programs and movies shown on TV.

- 1 Select "Parental Control" from the Set Up menu. (see page 38)

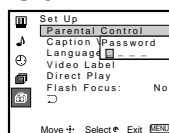


- 2 Enter your four digit password using the 0-9 buttons.

The Parental Control menu appears.

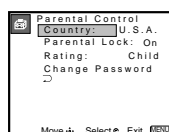

- 3 Move the joystick up or down to select "Parental Lock," and press  $\oplus$ .

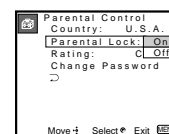

- 4 Move the joystick up or down to select "Off," and press  $\oplus$ .



- 5 Press MENU to exit the menu.

## Adjusting Your SET UP (menus) (continued)

### To unlock the Parental Control feature temporarily

When you select a Parental Control program, no sound or picture except for a channel number will appear. The indicator is displayed. To view the program, follow the steps below.


- 1 Press ENTER to display the "Password" screen.
- 2 Enter your password using the 0-9 buttons. Parental Control will be canceled ("Parental Lock" set to "Off") until you turn your projection TV off.

### Selecting a Custom Rating in U.S.A.

If you want to select the ratings to be blocked from "Custom" once you have activated the Parental Control feature (page 41), follow the procedure below.


For a detailed description of each rating, see "What the Ratings Mean" on pages 47 to 49.

- 1 Select "Parental Control" from the Set Up menu. (see page 38)

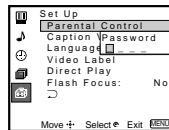


- 2 Enter your four digit password using the 0-9 buttons.


The Parental Control menu appears. Make sure that "Country" is set to "U.S.A."

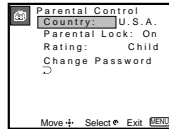

- 3 Move the joystick up or down to select "Rating," and press .

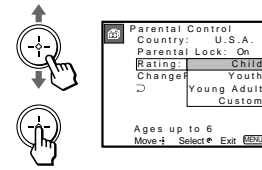


- 4 Move the joystick up or down to select "Custom," and press .

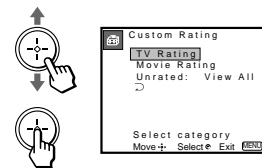


42

First, select a TV rating.


- 5 Move the joystick up or down to select "TV Rating," and press .

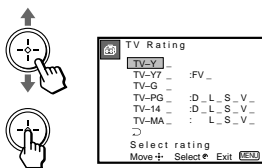

- 6 Move the joystick up or down to select the TV rating to be blocked, and press .

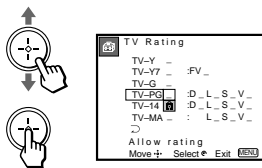


- 7 Move the joystick up or down to select , and press . The indicator automatically appears beside the selected rating and all "higher" ratings, indicating that the programs that match the ratings will be blocked.

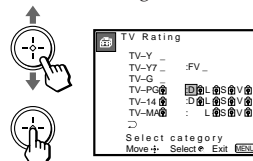

Some ratings have additional content ratings called "extenders." The extenders are defined as follows: D (sexually suggestive Dialog), FV (Fantasy Violence), L (coarse Language), S (Sexual situations) and V (Violence). By setting the extenders, you can define additional viewing limits. For more details of extenders, see page 49.

All of the extenders included in the selected ratings will be blocked. If you wish to allow any of them to be viewed, go to step 8.


- 8 Move the joystick left or right to select the extender to be viewed, and press .

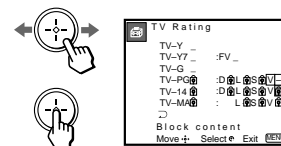

- 9 Move the joystick up or down to select "-", and press .

"-" appears beside the selected extender, indicating that the programs that match the extender can be viewed.

If you select , is displayed to show that the programs that match the extender will be blocked again.

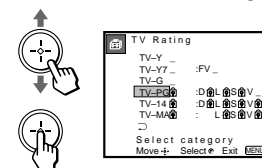

(continued)


43

## Adjusting Your SET UP (menus) (continued)

10 Repeat steps 8 and 9 for other extenders.


All programs that match the ratings you select and higher, except for the extenders that were canceled, will be blocked.

11 After setting of the TV rating is complete, move the joystick up or down to select “▷,” and press ⊕.

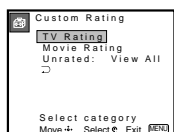


Second, select a movie rating.


12 Move the joystick up or down to select “Movie Rating,” and press ⊕.

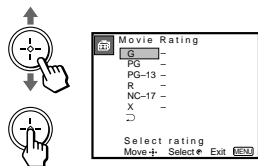

13 Move the joystick up or down to select the movie rating to be blocked, and press ⊕.

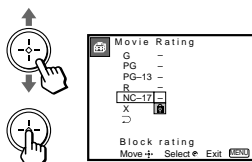

14 Move the joystick up or down to select “⊞,” and press ⊕. The ⊞ indicator automatically appears beside the selected rating and all “higher” ratings, indicating that the programs that match the ratings will be blocked.

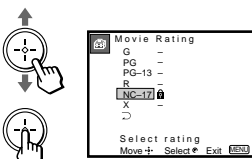


15 Press MENU to exit the menu.

### To block TV programs and/or movies for which a rating signal is not given (NR and N/A)

For a description of the NR and N/A ratings, see page 48.


1 Perform steps 1–4 of “Selecting a Custom Rating in U.S.A.” on page 42.

2 Move the joystick up or down to select “Unrated,” and press ⊕.

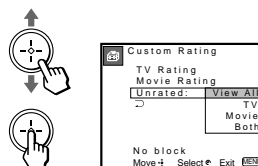

44

3 Move the joystick up or down to select the type of programs to be blocked, and press ⊕.

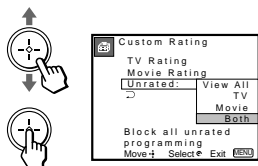

To block ...	Select ...
No program (to view any unrated TV program and movie)	View All
Unrated TV programs	TV
Unrated movies	Movie
Unrated TV programs and movies	Both


4 Press MENU to exit the menu.

### Selecting a Custom Rating in Canada

If you want to select the ratings to be blocked from “Custom” once you have activated the Parental Control feature (page 41), follow the procedure below.


For a detailed description of each rating, see “What the Ratings Mean” on pages 49 and 50.

1 Select “Parental Control” from the Set Up menu. (see page 38)

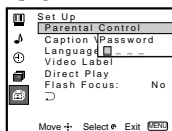


2 Enter your four digit password using the 0–9 buttons.


The Parental Control menu appears. Make sure that “Country” is set to “Canada.”

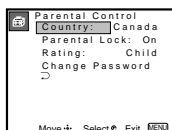

3 Move the joystick up or down to select “Rating,” and press ⊕.

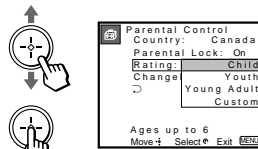



4 Move the joystick up or down to select “Custom,” and press ⊕.

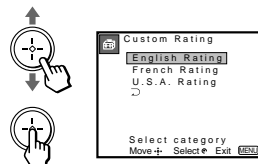


(continued)

## Adjusting Your SET UP (menus) (continued)

- 5 Move the joystick up or down to select the rating you want to block, and press  $\oplus$ .
- The selected rating appears.

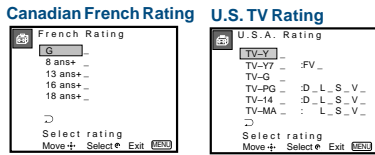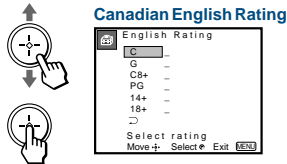


- 6 Move the joystick up or down to select the TV rating to be blocked, and press  $\oplus$ .

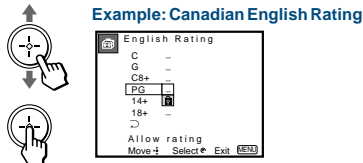


46

- 4 Enter a new four digit password using the 0-9 buttons.

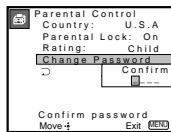

- 5 Enter the password set in step 4 again to confirm.
- If you entered it incorrectly, "Password incorrect" appears.
- Re-enter the correct password.
- 6 Press MENU to exit the menu.

- 7 Move the joystick up or down to select "C," and press  $\oplus$ .
- The  $\oplus$  indicator automatically appears beside the selected rating and all "higher" ratings, indicating that the programs that match the ratings will be blocked.

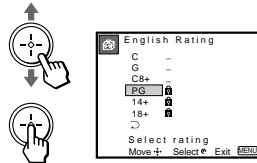

Some U.S. TV ratings have additional content ratings called "extenders," such as D, FV, L, S and V. By setting the extenders, see steps 7 to 10 of "Selecting a Custom Rating in U.S.A." on pages 43 and 44. For more details of extenders, see page 49.

All of the extenders included in the selected ratings will be blocked. If you wish to allow any of them to be viewed, go to step 8.

- 8 Press MENU to exit the menu.

### If you have forgotten your password

In step 2 of "Changing the Password" on page 46, enter the master password "4357" (corresponding to "HELP" on a phone number pad). You can then store a new password.

#### Notes:


- If you entered "4357" as your password the first time, you cannot store a new password. (see step 2 of "Activating the Parental Control Feature" on page 40)
- When you select a Parental Control program and the  $\oplus$  indicator is displayed on the screen, you cannot view that program even if you enter "4357." (see "To unlock the Parental Control feature temporarily" on page 42)

## Changing the Password


- 1 Select "Parental Control" from the Set Up menu. (see page 38)



- 2 Enter your four digit password using the 0-9 buttons.
- The Parental Control menu appears.

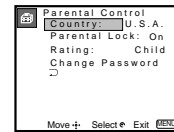

- 3 Move the joystick up or down to select "Change Password," and press  $\oplus$ .

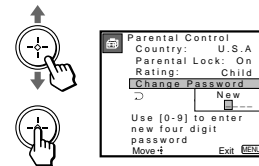

## What the Ratings Mean

### Ratings in U.S.A.

#### Sony's predetermined ratings

These are original ratings that Sony predetermined according to the viewer's age. Each rating allows you to view the certain programs, as follows.

See pages 48 and 49 for a description of each rating.

**Child:** Suitable for children under the age of 6.

Viewable U.S. movie ratings: G, NR, and N/A  
Viewable U.S. TV ratings: TV-Y, TV-G, and TV-NR

**Youth:** Suitable for children aged 7 and older.  
Viewable U.S. movie ratings: G, PG, NR, and N/A

Viewable U.S. TV ratings: TV-Y, TV-Y7, TV-G, TV-PG, and TV-NR

**Young Adult:** Suitable for children aged 13 and older.

Viewable U.S. movie ratings: G, PG, PG-13, NR, and N/A  
Viewable U.S. TV ratings: TV-Y, TV-Y7, TV-G, TV-PG, TV-14, and TV-NR

(continued)

47

## Adjusting Your SET UP (menus) (continued)

### U.S. movie ratings

U.S. movie ratings are for movies (including those shown on TV) rated according to the Motion Picture Association of America (MPAA) Guidelines.

#### G (General Audiences—All Ages

**Admitted):** In G-rated films no strong words are used, the violence is at a minimum, nudity and sex scenes are not present, nor is there any drug use.

#### PG (Parental Guidance Suggested. Some Material May Not Be Suitable For

**Children):** This is a film which may need to be monitored first by parents.

#### PG-13 (Parents Strongly Cautioned. Some Material May Be Inappropriate For

**Children Under 13):** Parents are alerted to be very careful about the attendance of their under-teenage children when viewing.

#### R (Restricted, Under 17 Require

**Accompanying Parent Or Adult Guardian):** This film includes hard language, tough violence, nudity, drug abuse or other elements of concern.

#### NC-17 or X (No One 17 Or Under

**Admitted.):** This is a film that most parents would consider not suitable for children aged 17 and under. There may be violence, sex, aberrational behavior, drug abuse or other elements of concern.

**NR (Not Rated):** This is a film that a producer has not rated, intending to have his film widely released.

**N/A (Not Applicable):** This is a film that a producer considers outside the scope of the MPAA ratings.

#### Note:

- NR and N/A ratings are shown together as “Unrated” in the menu.

### U.S. TV ratings

U.S. TV ratings are for TV programs rated according to the U.S. Television Parental Guidelines.

**TV-Y (All Children):** This program is designed for young children aged 2–6 and is appropriate for all children.

**TV-Y7 (Directed to Older Children):** This program is designed for children aged 7 and above. Themes and elements in this program may include mild fantasy violence or slapstick violence, or may frighten children under the age of 7.

**TV-G (General Audience):** Most parents would find this program suitable for all ages. It contains little or no violence, no strong language and little or no sexual dialog or situations.

**TV-PG (Parental Guidance Suggested):** This program contains some material that parents may find unsuitable for younger children.

**TV-14 (Parents Strongly Cautioned):** This program contains some material that many parents would find unsuitable for children under the age of 14.

**TV-MA (Mature Audience Only):** This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under the age of 17.

48

**TV-NR (Not Rated/Unrated):** This is a program broadcast without any rating, such as news, news flashes or sports.

#### Note:

The TV-NR rating is shown as “Unrated” in the menu.

### About the extenders of U.S. TV ratings

TV-Y7, TV-PG, TV-14 and TV-MA ratings have additional content ratings called “extenders” to define additional viewing limits. The extenders are defined as follows:

**D (sexually suggestive Dialog):** Programs containing suggestive dialog, or sexual innuendo

**FV (Fantasy Violence):** Programs containing cartoon violence occurring in TV-Y7 programs only

**L (coarse Language):** Programs containing coarse language

**S (Sexual situations):** Programs containing sexual content

**V (Violence):** Programs containing violence There may be some profanity, violence or brief nudity in these programs.

### Ratings in Canada

#### Sony's predetermined ratings

These are original ratings that Sony predetermined according to the viewer's age. Each rating allows you to view the certain programs, as follows.

See the right column to page 50 for a description of each rating.

**Child:** Suitable for children under the age of 7.

Viewable Canadian English Language ratings: C and G

Viewable Canadian French Language ratings: G

Viewable U.S. TV ratings: TV-Y, TV-G, and TV-NR

**Youth:** Suitable for children aged 8 and older.

Viewable Canadian English Language ratings: C, G, C8+ and PG

Viewable Canadian French Language ratings: G and 8 ans+

Viewable U.S. TV ratings: TV-Y, TV-Y7, TV-G, TV-PG, and TV-NR

**Young Adult:** Suitable for children aged 14 and older.

Viewable Canadian English Language ratings: C, G, C8+, PG and 14+

Viewable Canadian French Language ratings: G, 8 ans+, 13 ans+

Viewable U.S. TV ratings: TV-Y, TV-Y7, TV-G, TV-PG, TV-14, and TV-NR

### Canadian English Language ratings

The Canadian English Language Ratings are for TV programs in English broadcast in Canada.

**C (Programming intended for children under age 8):** There will be no realistic scenes of violence or no offensive language, nudity or sexual content. Careful attention is paid to themes, which could threaten children's sense of security and well-being.

**G (General Audience):** Will contain very little violence, either physical or verbal or emotional. There may be some inoffensive slang, no profanity and no nudity.

(continued)

49



## Adjusting Your SET UP (menus) (continued)

**C8+ (Programming generally considered acceptable for children 8 years and over to watch on their own):** Violence will not be portrayed as the preferred, acceptable, or only way to resolve conflict; or encourage children to imitate dangerous acts which they may see on television. There will be no profanity, nudity or sexual content.

**PG (Parental Guidance):** Programming intended for a general audience but which may not be suitable for younger children. Parents may consider some content inappropriate for unsupervised viewing by children aged 8 - 13.

**14+ (Programming contains themes or content which may not be suitable for viewers under the age of 14):** Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.

**18+ (Adult):** May contain violence integral to the development of the plot, character or theme, intended for adult audiences. May contain graphic language and explicit portrayals of nudity and/or sex.

**E (Exempt):** Exempt programming includes: news, sports documentaries and other information programming; talk shows, music videos, and variety programming.

**Note:**

The E (Exempt) rating is not shown in the menu.

**Canadian French Language ratings**

The Canadian French Language Ratings are for TV programs in French broadcast in Canada.

**G (General):** Programming intended for audience of all ages. Contains no violence, or the violence it contains is minimal or is depicted appropriately with humor or caricature or in an unrealistic manner.

**8 ans+ (8+ General - Not recommended for young children):** Programming intended for a broad audience but contains light or occasional violence that could disturb young children. Viewing with an adult is recommended for young children (under the age of 8).

**13 ans+ (Programming may not suitable for children under the age of 13):** Viewing with an adult is strongly recommended for children under 13.

**16 ans+ (Programming is not suitable for children under the age of 16):** Contains frequent scenes of violence or intense violence.

**18 ans+ (Programming restricted to adults):** Contains constant violence or scenes of extreme violence.

**E (Exempt):** Exempt programming.

**Note:**

The E (Exempt) rating is not shown in the menu.

50

## Operating Video Equipment

### Setting the Manufacturer's Code

You can use the supplied remote control to operate Sony or non-Sony video equipment that has an infrared sensor.

- Set the VTR 1/2/3/DVD/MDP switch to the input through which you would like to access your video equipment.

The following Sony equipment is preset to each input as shown below:

- VTR1 (303) Beta, ED Beta VCRs
- VTR2 (302) 8 mm VCR
- VTR3 (301) VHS VCR
- DVD/MDP (751) DVD Player

- Press CODE SET, DVD/VTR (FUNCTION), and the 0-9 buttons to enter the manufacturer's code number (see the following chart), then press ENTER.

For example, to operate a Sony 8mm VCR:



**If the remote control doesn't work**

- See the tips on page 53.

### VCR manufacturer code numbers

Manufacturer	Code
Sony	301, 302, 303
Aiwa	338
Admiral (M. Ward)	327
Audio Dynamic	314, 337
Bell & Howell (M. Ward)	330
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	302, 332
Curtis Mathis	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General Electric	329, 304, 309
Go Video	340, 339, 322
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327

Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 329, 312, 313, 310
Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Signature 2000 (M. Ward)	338, 327
Sylvania	308, 309, 338, 310
Symphonic	338
SV2000	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Teknica	338
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	330, 314, 336, 337
Zenith	331

### MDP manufacturer code numbers

Manufacturer	Code
Sony	701
Panasonic	704, 710
Mitsubishi	702

51

## Operating Video Equipment (continued)

### DVD Player manufacturer code numbers

Manufacturer	Code
Sony	751
Panasonic	753
Pioneer	752
RCA	755
Toshiba	754

#### Tips

- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. In this case, please use the equipment's own remote control.
- When you remove the batteries, the code number may revert to the factory setting.

### To operate video equipment

- Set the VTR1/2/3/DVD/MDP switch to the input through which you would like to access your video equipment.
- Press DVD/VTR (FUNCTION).
- Use the VCR/DVD/MDP operation buttons indicated in the following tables.

### Operating a VCR using the remote control

To turn On/Off	Press DVD/VTR (POWER). [Green Button]
To select a channel	Press the 0 – 9 buttons.
To change channels	Press CH +/-.
To record	Press  while pressing  (REC) (upper).
To play	Press .
To stop	Press .
To fast forward	Press .
To rewind the tape	Press .
To pause	Press . Press again to resume normal playback.
To search the picture forward or backward	Press  or  during playback. Release to resume normal playback.
To change input mode	Press TV/VTR.

### Operating an MDP using the remote control

To turn On/Off	Press DVD/VTR (POWER). [Green Button]
To play	Press .
To stop	Press .
To pause	Press . Press again to resume normal playback.

To search the picture forward or backward	Press  or  during playback. Release to resume normal playback.
To search a chapter forward or backward	Press CH +/-.

### Operating a DVD Player using the remote control

To turn On/Off	Press DVD/VTR (POWER). [Green Button]
To play	Press .
To stop	Press .
To pause	Press . Press again to resume normal playback.
To step through different tracks of an audio disc	Press  to step forward or  to step backward.
To step through different chapters of a video disc	Press CH + to step forward or CH – to step backward.
To display the Title menu	Press TITLE.
To select DVD multilingual sound	Press AUDIO repeatedly. [Pink Labeled Button]
To display the DVD menu	Press DVD MENU.
To select tracks directly	Press 0-9 buttons.
To display the menu (Set up)	Press MENU.

52

## Operating a Cable Box or Satellite Receiver (SAT)

### Setting the Manufacturer's Code

You can program the supplied remote control to operate a cable box or satellite receiver.

Press CODE SET, SAT/CABLE (FUNCTION), and the 0-9 buttons to enter the manufacturer's code number (see the following chart), then press ENTER.

For example, to operate a Sony satellite receiver:



### Manufacturer code numbers (cable box)

Manufacturer	Code
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I.	201, 202, 203, 204, 205, 222, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

### Manufacturer code numbers (satellite receiver)

Manufacturer	Code number
Sony	801 (preset code for remote control)
Genael Electric	802, 808
Hitachi	805
Hughes	804
Panasonic	803
RCA/PROSCAN	802
Toshiba	806, 807

### To operate the cable box or satellite receiver (SAT)

- Press SAT/CABLE (POWER) [Green Button] to turn on/off the cable box or satellite receiver.
- Press SAT/CABLE (FUNCTION).
- For other operations, refer to the operating instructions that come with the equipment.  
The GUIDE and INDEX (blue-labeled) buttons can be used only with a satellite receiver.

### If the remote control doesn't work

- Try repeating the set up procedures using the other codes listed for your equipment.

### To operate the projection TV

Press TV (FUNCTION). Then use the projection TV control buttons to control the projection TV.

#### Tips

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's own remote control unit.
- Whenever you remove the batteries — to replace them, for example — if too much time is taken, the code numbers may revert to the factory setting and must be reset.

53

## Troubleshooting

If, after reading the following instructions, you have additional questions related to the use of your Sony projection TV, please call one of the following numbers (English only).  
Customers in the continental United States contact the Direct Response Center at: 1-800-222-SONY (7669)  
Customers in Canada contact the Customer Relations Center at: (416) 499-SONY (7669)

<b>The picture turns off and the TIMER/STAND BY indicator on the front panel flashes (self-diagnosis function)</b>	<ul style="list-style-type: none"> <li>The projection TV is equipped with a self-diagnosis function. If there is a problem with your projection TV, the TIMER/STAND BY indicator on the front panel will flash repeatedly. Counting the number of flashes helps you inform qualified Sony personnel of the projection TV's condition.</li> <li>Press POWER on the projection TV to turn it off, then inform qualified Sony personnel or the above Direct Response Center of the number of flashes.</li> </ul>
<b>No picture (screen not lit), no sound</b>	<ul style="list-style-type: none"> <li>Make sure the power cord is plugged in.</li> <li>Operate with the buttons on both the projection TV and the remote control.</li> <li>Check to see if the TV/VIDEO setting is correct: when watching TV, set to TV, and when watching video tapes, set to VIDEO 1, 2, 3, 4 or 5.</li> <li>Try another channel. <i>It could be station trouble.</i></li> <li>Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (see "To perform AUTO SET UP again" on page 20)</li> <li>The Parental Control feature is activated. (see "To deactivate the Parental Control feature" on page 41)</li> </ul>
<b>Remote control does not operate</b>	<ul style="list-style-type: none"> <li>Batteries could be weak. Replace the batteries.</li> <li>Press TV (FUNCTION) when operating your projection TV.</li> <li>Make sure the projection TV's power cord is connected securely to the wall outlet.</li> <li>Locate the projection TV at least 3-4 feet away from fluorescent lights.</li> <li>Check the S-Link connection. (see "Using the S-Link Function" on page 16)</li> <li>Check the polarity of the batteries.</li> </ul>
<b>Dark, poor or no picture (screen lit), good sound</b>	<ul style="list-style-type: none"> <li>Adjust "Picture" in the Video menu. (see "Picture Adjustment" on page 30)</li> <li>Adjust "Brightness" in the Video menu. (see "Picture Adjustment" on page 30)</li> <li>Check antenna/cable connections.</li> <li>Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (see "To perform AUTO SET UP again" on page 20)</li> <li>Adjust the convergence again using the FLASH FOCUS button. (see "Adjusting the Convergence Automatically (FLASH FOCUS)" on page 20)</li> </ul>
<b>Good picture, no sound</b>	<ul style="list-style-type: none"> <li>Press MUTING so that "Muting" disappears from the screen. (see "MUTING" on page 21)</li> <li>Check the "MTS/SAP" setting in the Audio menu. (see "MTS/SAP" on page 31)</li> <li>Make sure "Speaker" is set to "On" in the Audio menu. (see "Speaker" on page 32)</li> <li>Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (see "To perform AUTO SET UP again" on page 20)</li> </ul>


54

<b>Cannot receive upper channels (UHF) when using an antenna</b>	<ul style="list-style-type: none"> <li>Make sure "Cable" is "Off" in the Channel Set Up menu. (see "Cable" on page 35)</li> <li>Use "Auto Program" to add receivable channels that are not presently in the TV's memory. (see "Auto Program" on page 35)</li> </ul>
<b>No color</b>	<ul style="list-style-type: none"> <li>Adjust "Color" in the Video menu. (see "Picture Adjustment" on page 30)</li> <li>Black and white programs cannot be seen in color.</li> <li>Perform AUTO SET UP again using the SET UP button to return to the factory preset condition. (see "To perform AUTO SET UP again" on page 20)</li> </ul>
<b>Only snow and noise appear on the screen</b>	<ul style="list-style-type: none"> <li>Check the "Cable" setting in the Channel Set Up menu. (see "Cable" on page 35)</li> <li>Check the antenna/cable connections.</li> <li>Make sure the channel is broadcasting programs.</li> <li>Press ANT to change the input mode. (see "ANT" on page 23)</li> </ul>
<b>Dotted lines or stripes</b>	<ul style="list-style-type: none"> <li>Adjust the antenna.</li> <li>Keep the projection TV away from noise sources such as cars, neon signs or hair-dryers.</li> </ul>
<b>TV is fixed to one channel</b>	<ul style="list-style-type: none"> <li>Use "Auto Program" to add receivable channels that are not presently in TV's memory. (see "Auto Program" on page 35)</li> </ul>
<b>Double images or ghosts</b>	<ul style="list-style-type: none"> <li>Use a highly directional outdoor antenna or a cable (when the problem is caused by reflections from nearby mountains or tall buildings).</li> </ul>
<b>Cannot operate the menu</b>	<ul style="list-style-type: none"> <li>If the item you want to choose appears in gray, you cannot select it.</li> <li>Press the projection TV's power button off and on again.</li> </ul>
<b>Cannot receive any channels when using cable TV</b>	<ul style="list-style-type: none"> <li>Make sure "Cable" is "On" in the Channel Set Up menu. (see "Cable" on page 35)</li> <li>Use "Auto Program" to add receivable channels that are not presently in the TV's memory. (see "Auto Program" on page 35)</li> </ul>
<b>Cannot gain enough volume when using a cable box</b>	<ul style="list-style-type: none"> <li>Increase the volume at the cable box. Then press TV (FUNCTION) and adjust the projection TV's volume.</li> </ul>
<b>Projection TV malfunctions when using the S-Link function</b>	<ul style="list-style-type: none"> <li>Make sure the projection TV's power cord is connected securely to the wall outlet.</li> <li>Check the S-Link connection. (see "Using the S-Link Function" on page 16)</li> </ul>
<b>CHANNEL INDEX does not display all available channels</b>	<ul style="list-style-type: none"> <li>Make sure "Cable" is "On" in the Channel Set Up menu. (see "Cable" on page 35)</li> <li>Use "Auto Program" to add receivable channels that are not presently in the TV's memory. (see "Auto Program" on page 35)</li> </ul>
<b>Favorite Channel does not display your choices</b>	<ul style="list-style-type: none"> <li>Verify that "Favorite Channel" is set to "Manual" in the Channel Set Up menu. (see "Setting Favorite Channel manually" on page 36)</li> </ul>
<b>Some video sources do not appear when you press TV/VIDEO</b>	<ul style="list-style-type: none"> <li>Ensure that "Video Label" is not set to "Skip." (see "Video Label" on page 39)</li> </ul>
<b>Recording through MONITOR OUT does not function properly when recording in PIP or P&amp;P mode</b>	<ul style="list-style-type: none"> <li>MONITOR OUT will not record both images in PIP or P&amp;P. Only the main picture will be recorded.</li> <li>If you are recording the main picture and you switch to the sound of the sub picture using the AUDIO button, the main picture will be recorded with sound from the other program.</li> </ul>
<b>Cannot play shooting games</b>	<ul style="list-style-type: none"> <li>Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with this projection TV. For details, see the instruction manual supplied with the video game software.</li> </ul>


55

## SECTION 2 DISASSEMBLY


### 2-1. REAR BOARD REMOVAL

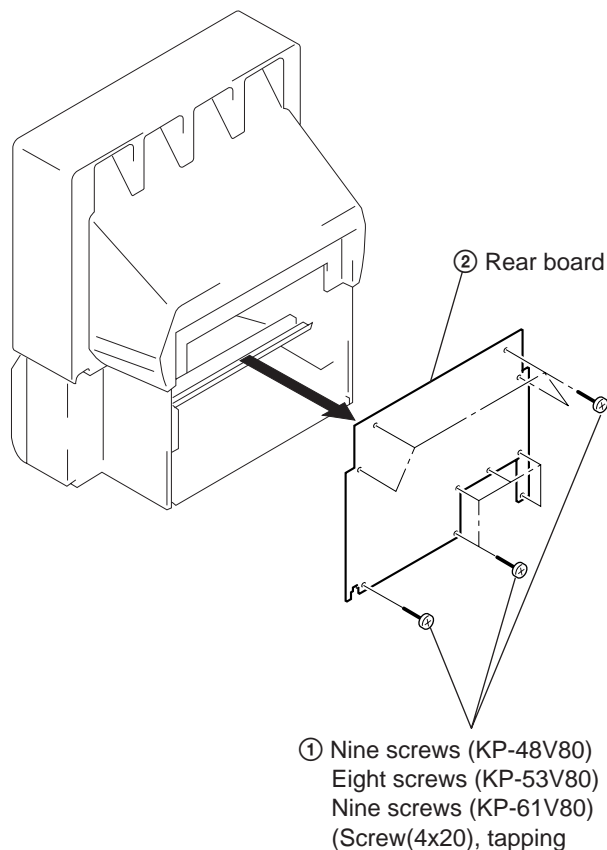


### 2-2. CHASSIS ASSY REMOVAL

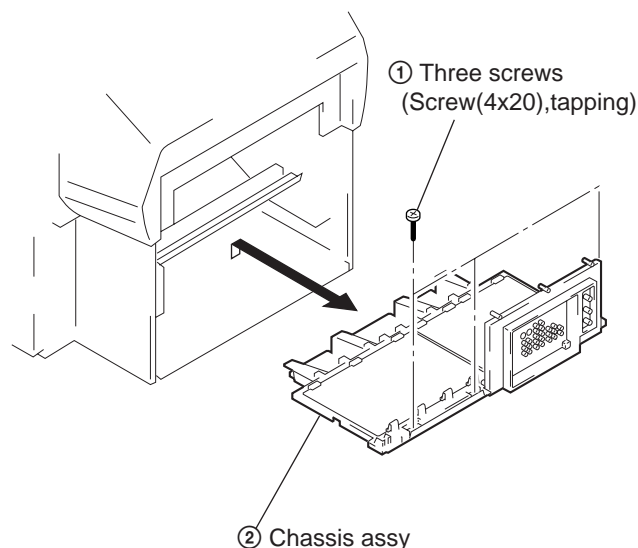


### 2-3. SERVICE POSITION

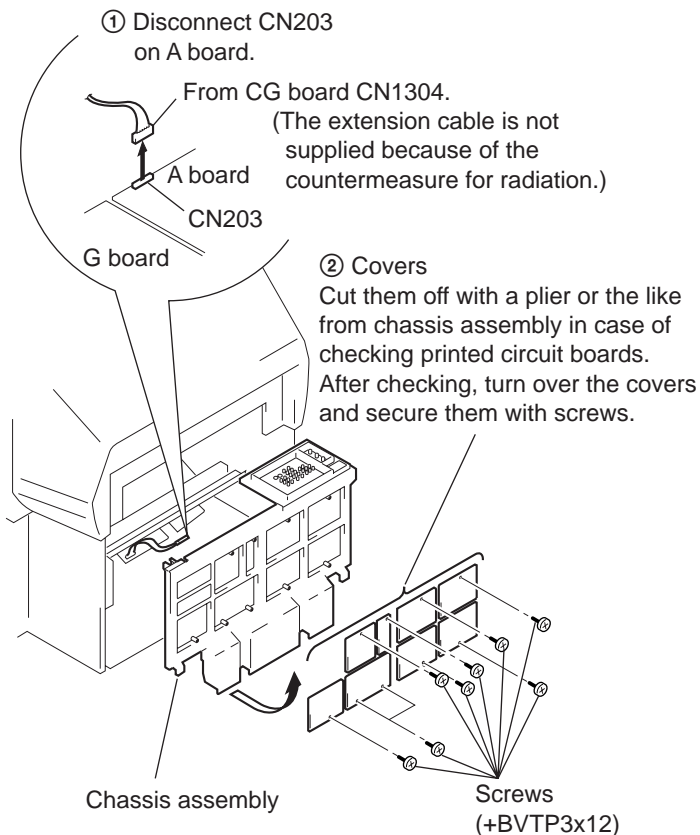


### 2-4. HA BOARD AND HB BOARD REMOVAL

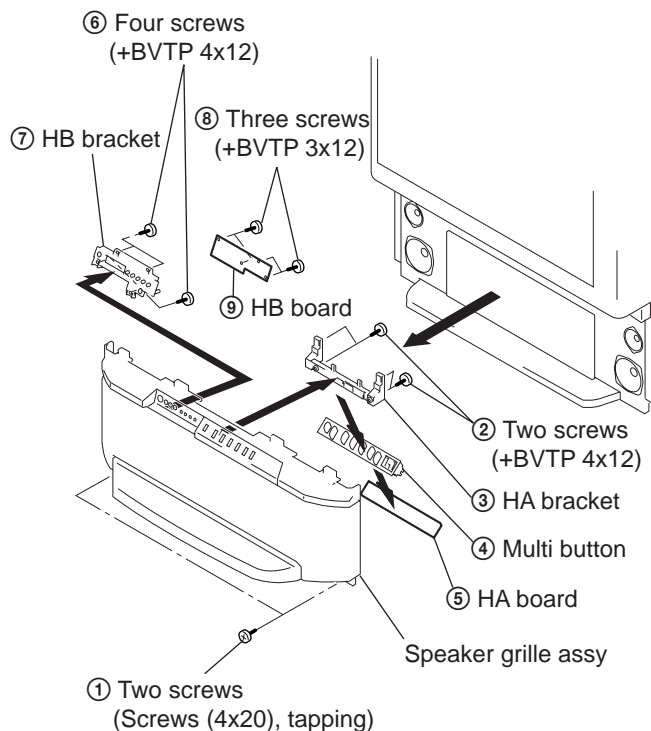


### 2-5. MIRROR COVER REMOVAL

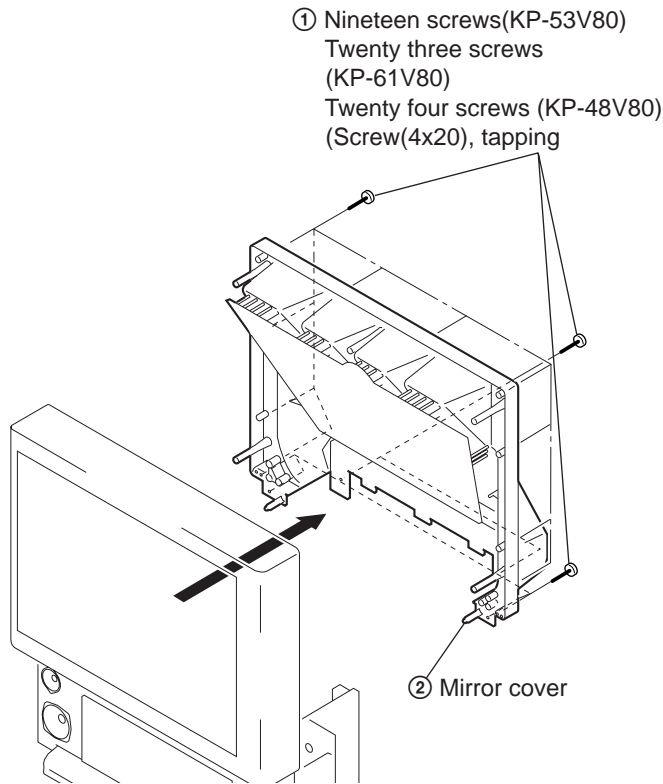


### 2-7. HC BOARD AND S BOARD REMOVAL

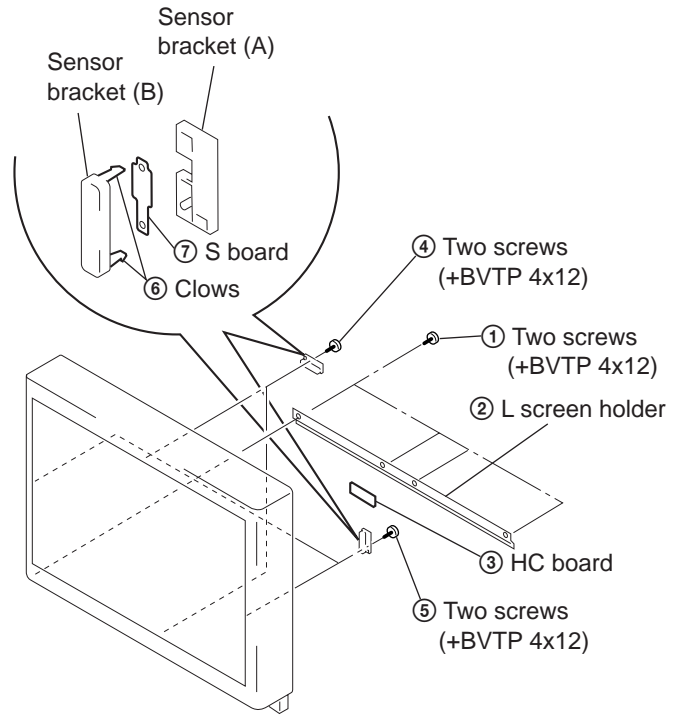


### 2-6. BEZNET ASSY REMOVAL

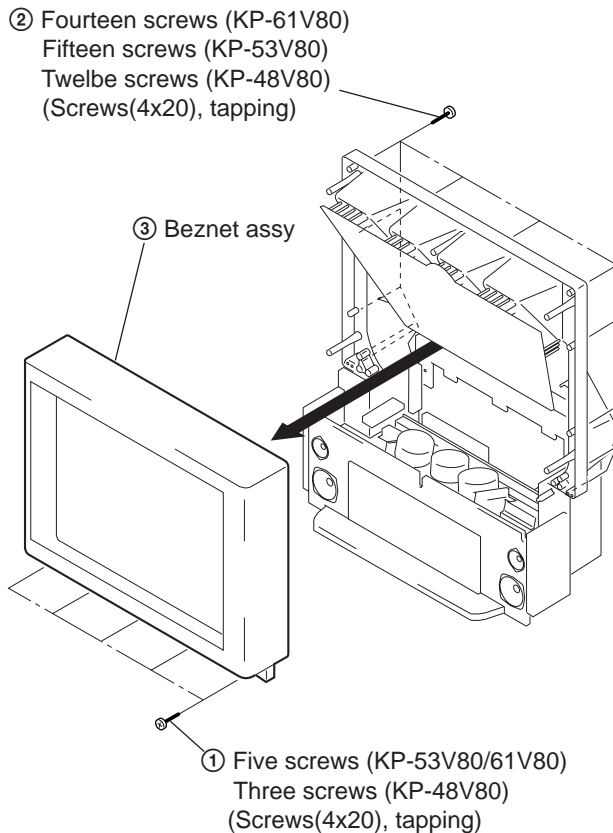

### 2-8. U BOARD AND TERMINAL BOARD REMOVAL

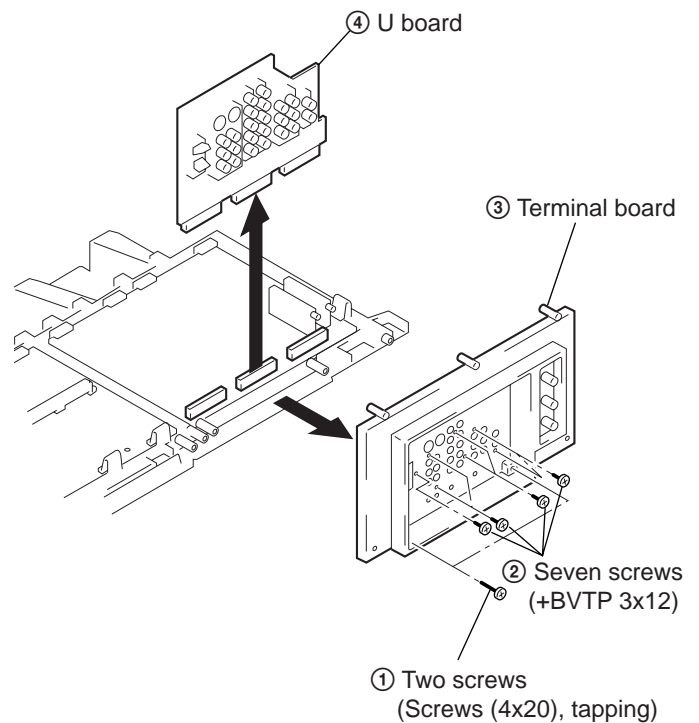


**2-9. A BOARD AND G BOARD REMOVAL**

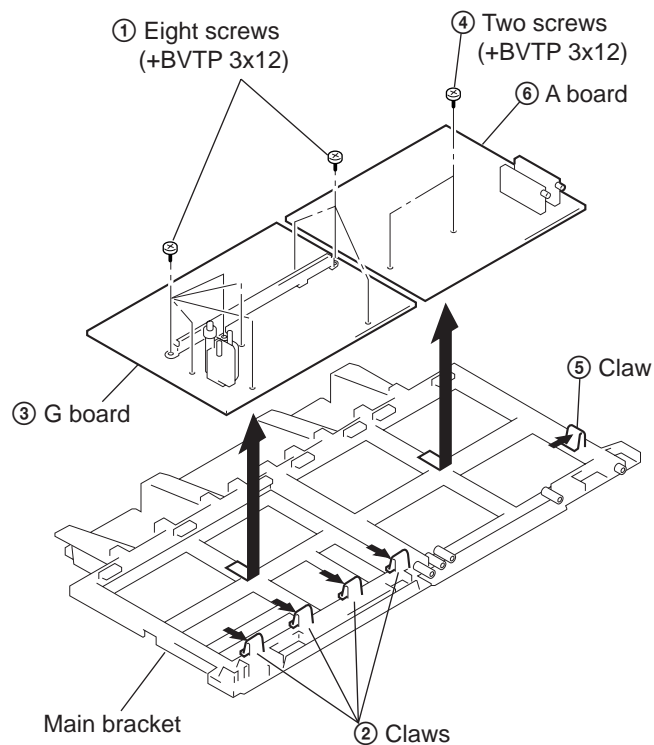


**2-11. HIGH-VOLTAGE CABLE INSTALLATION AND REMOVAL**

(1) Remover

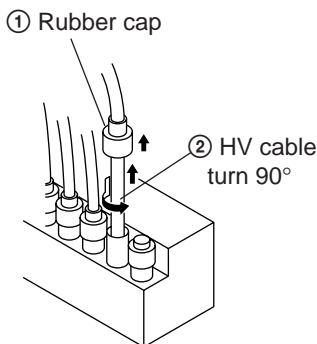


(2) Installation

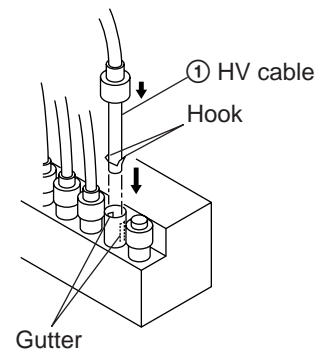

**2-10. PICTURE TUBE REMOVAL**


**CAUTION:** Removing the arrow-marked screws is strictly prohibited. If removed, it may cause liquid spill.

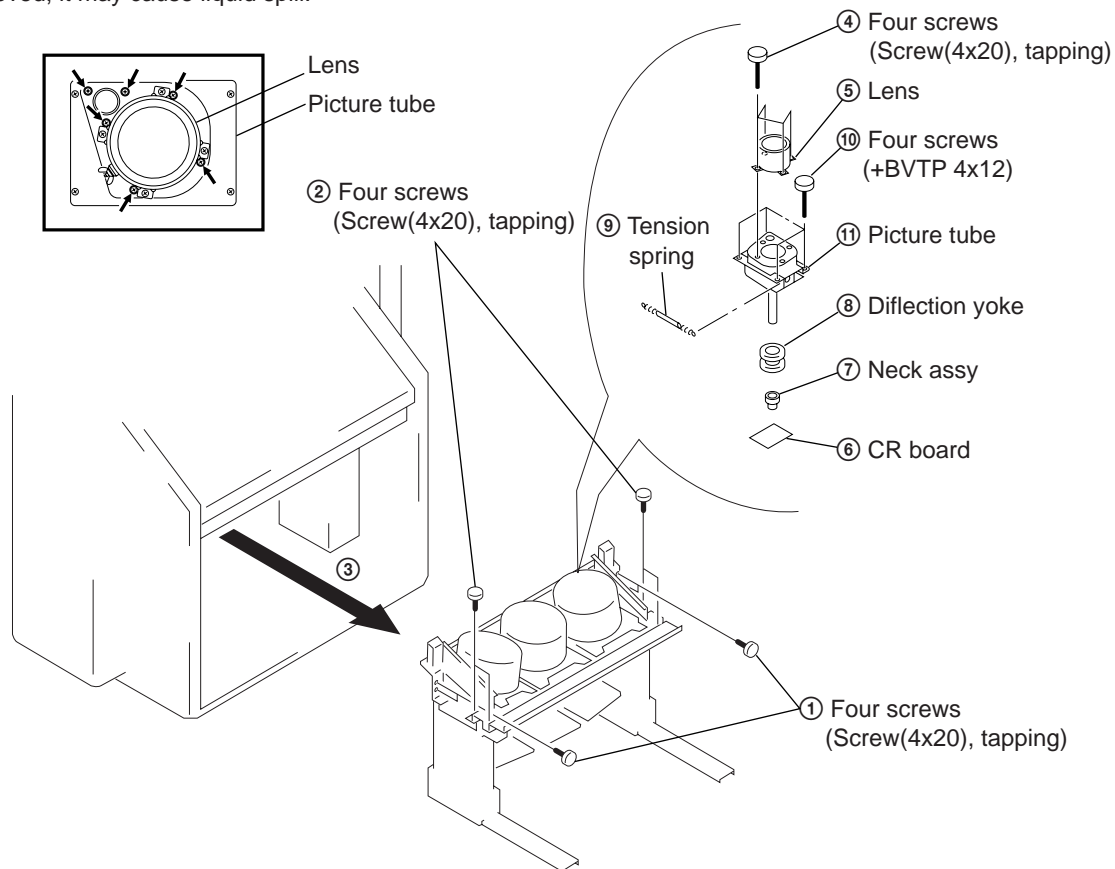

## SECTION 3 SET-UP ADJUSTMENTS

### 3-1. SCREEN VOLTAGE ADJUSTMENT (ROUGH ALIGNMENT)

1. Receive the Monoscope signal.
2. Set 50% BRIGHTNESS and minimum PICTURE.
3. Turn the red VR on the FOCUS block all the way to the left and then gradually turn it to the right until the point where you can see the retrace line.
4. Next gradually turn it to the left to the position where the retrace line disappears.

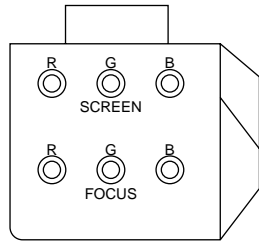


FOCUS block  
**Fig. 3-1**

### 3-2. FOCUS LENS ADJUSTMENT

In this adjustment, use the remote commander in the service mode.

For details of the usage of the service mode and the remote commander, please refer the item 3-9. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER.

1. Loosen the lens screw.
2. Set to the service mode.
3. Change TV mode to the video input mode.
4. Set to PJE, and press 6 to display the test signal (crosshatch) on the screen.
5. Set VPNT 28 RON to "000", 29 GON to "001" and 30 BON to "000" to show only the green color.
6. Turn the green lens to adjust to the optimum focus point with the test signal.
7. Tighten the lens screw.
8. Set VPNT 28 RON to "001", 29 GON to "000" and 30 BON to "000" to show only the red color.
9. Adjust red CRT lens just the same as green.

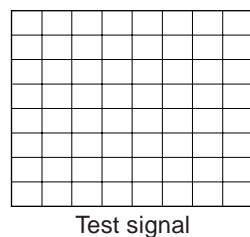


Test signal  
**Fig. 3-2**

10. Set VPNT 28 RON to "000", 29 GON to "000" and 30 BON to "001" to show only the blue color.
11. Adjust blue CRT lens just the same as green.

\*: Every time you press 6, the test signal changes to "crosshatch+video signal" - "dots+video signal" - "crosshach(black)" - "dots(black)" - off.

### 3-3. SCREEN (G2) ADJUSTMENT


1. Select VIDEO1 mode without signals.
2. Connect an oscilloscope to the TP701(KR), TP732(KG) and TP761(KB) of CR board, CG board and CB board.
3. Adjust R, G and B screen voltage to 170 – 173V with screen VR on the Focus block.

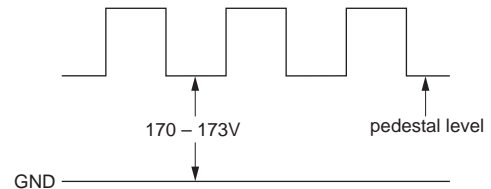


**Fig. 3-3**

### 3-4. FOCUS VR ADJUSTMENT

1. Set to the service mode.
2. Change TV mode to the video input mode.
3. Set to PJE, and press 6 to display the test signal (crosshatch) on the screen.
4. Set VPNT 28 RON to "000", 29 GON to "001" and 30 BON to "000" to show only the green color.
5. Turn the green VR on the focus block to adjust to the optimum focus point with the test signal.
6. Set VPNT 28 RON to "001", 29 GON to "000" and 30 BON to "000" to show the red color.
7. Turn the red VR on the focus block to adjust to the optimum focus point with the test signal.
8. Set VPNT 28 RON to "000", 29 GON to "000" and 30 BON to "001" to show the blue color.
9. Turn the blue VR on the focus block to adjust to the optimum focus point with the test signal.

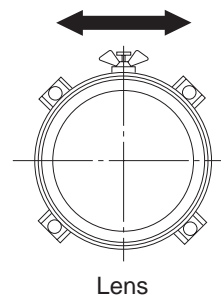


Lens  
**Fig. 3-4**

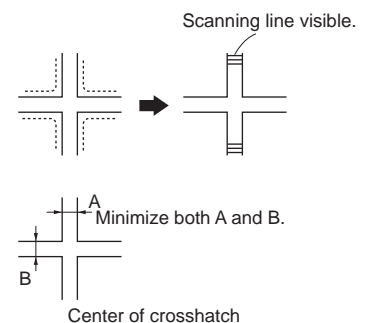

**Fig. 3-5**

### 3-5. DEFLECTION YOKE TILT ADJUSTMENT

1. Receive the Monoscope signal.
2. Set in service mode.
3. Set VPNT 29 GON to "001" 28 RON to "000" and 30 BON to "000" to show only the green color.
4. Loosen the deflection yoke set screw and align the tilt of the Deflection Yoke so that the bars at the center of the monoscope pattern are horizontal.
5. After aligning the deflection yoke, fasten it securely to the funnel-shaped portion (neck) of the CRT.
6. The tilt of the deflection yoke for red is aligned in the mode VPNT 28 RON "001", 29 GON "000", 30 BON "000" on the service mode menu, and the tilt of the deflection yoke for blue is aligned with in the mode VPNT 28 RON "000", 29 GON "000", 30 BON "001" on the service menu, is aligned the same as was done for green.

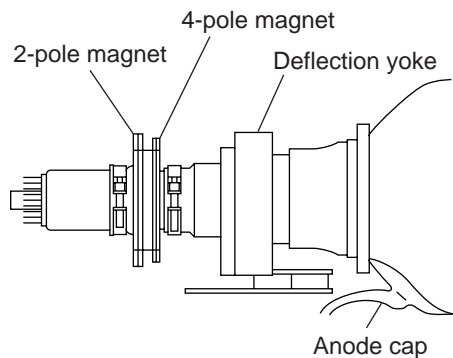


**Fig. 3-6**

### 3-6. 2-POLE MAGNET ADJUSTMENT (GREEN,RED)

1. Receive the Dot signal.
2. Set in service mode.
3. Set VPNT 29 GON to "001" 28 RON to "000" and 30 BON to "000" to show only the green color.
4. Turn the green VR on the focus block to the right and set to overfocus to enlarge the spot.
5. Now align the 2-Pole Magnet so that the enlarged spot is in the center of the Just Focus spot.
6. Align the green focus VR and set for just (precise) focus.
7. Perform the same alignment for red.

Use the center dot

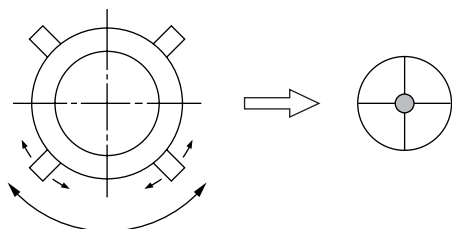


**Fig. 3-7**

### 3-7. 4-POLE MAGNET ADJUSTMENT

1. Receive the Dot signal.
2. Set in service mode.
3. Set VPNT 29 GON to "001" 28 RON to "000" and 30 BON to "000" to show only the green color.
4. Turn the green VR on the focus block to the left and set to underfocus to enlarge the spot.
5. Now align the 4-Pole Magnet so that the enlarged spot becomes a perfect circle for green and red.
6. Perform the same alignment for blue.

Use the center dot

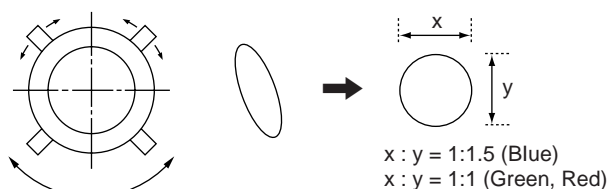


**Fig. 3-8**

### 3-8. DEFOCUS ADJUSTMENT (BLUE)

1. Select the video menu and set the mode to "Vivid" mode.
2. Set to the service mode.
3. Change TV mode to the video input mode.
4. Set to PJE, and press 6 to display the test signal (dots) on the screen.
5. Turn the blue VR on the focus block to adjust to the diameter of the dots as shown in the figure below.

[Focus adjustment point]

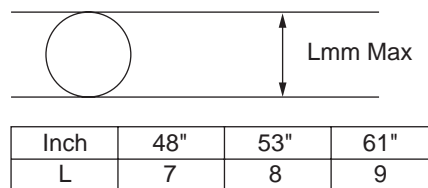

**Fig. 3-9**



### 3-9. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER

By using Remote Commander (RM-Y905), all circuit adjustments can be made.

**NOTE : Test Equipment Required.**

1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio oscillator


#### 1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

##### SERVICE MODE PROCEDURE

1. Standby mode. (Power off)
2. **DISPLAY** → **5** → **VOL(+)** → **TV POWER**  
( **+** → **5** → **▲** → **□** )

on the Remote Commander.  
(Press each button within a second.)

##### SERVICE MODE ADJUSTMENT

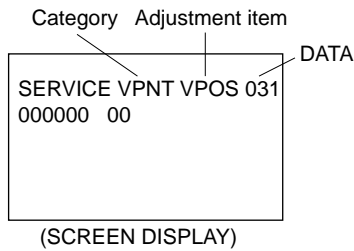


3. The SCREEN displays the item being adjusted.
4. Press **1** or **4** on the Remote Commander to select the adjustment item.
5. Press **3** or **6** on the Remote Commander to change the data.
6. Press **2** or **5** on the Remote Commander to select the category.
7. If you want to recover the latest values press **0** then **ENTER** to read the memory.
8. Press **MUTING** then **ENTER** to write into memory.
9. Turn power off.

Note: Press **8** then **ENTER** on the Remote Commander to initialize or turn set off and on to exit.

#### 2. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, remove the plug from AC outlet, and then replace the plug in AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again and confirm they were adjusted.

#### 3. ADJUST BUTTONS AND INDICATOR

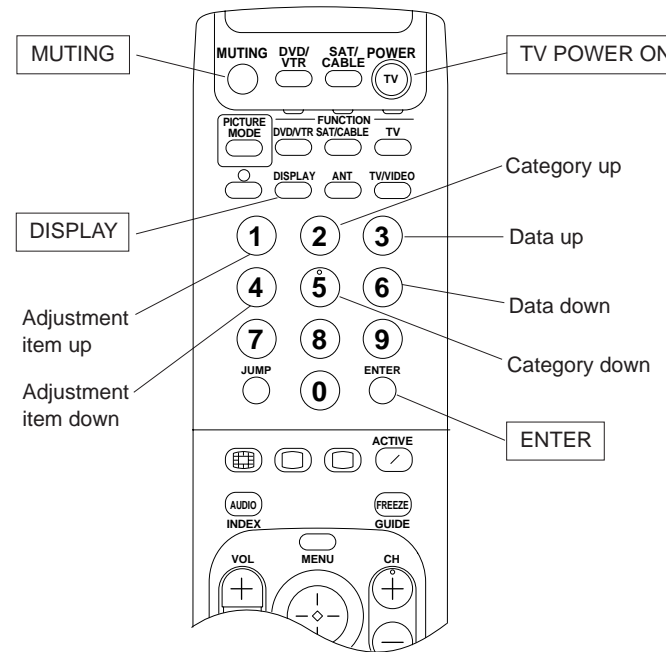

RM-Y905

Note : In the PJE mode these are different a little. See page 46.

#### 4. SERVICE MODE LIST

□ : Fixed data

##### VPNT

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	VPOS	0-63	31	V POSITION
1	VSIZ	0-63	31	V SIZE
2	VCOM	0-3	0	V COMP
3	VLIN	0-15	7	V LINEARITY
4	VSCO	0-15	7	V SCURVE CORRECTION
5	HPOS	0-15	7	H POSITION
6	HSIZ	0-63	31	H SIZE
7	PAMP	0-63	31	PIN AMP
8	UPIN	0-15	7	UPPER CORNER PIN DISTORTION
9	LPIN	0-15	7	LOWER CORNER PIN DISTORTION
10	PPHA	0-15	5	PIN PHASE
11	AFC	0-3	2	AFC LOOP GAIN
12	VBOW	0-15	7	V BOW
13	VANG	0-15	7	V ANGLE
14	REF	0-3	3	REFERENCE PULSE POSITION
15	RDRV	0-63	31	RED DRIVE GAIN
16	BDRV	0-63	31	BLUE DRIVE GAIN
17	RCUT	0-15	7	RED CUTOFF
18	BCUT	0-15	7	BLUE CUTOFF
19	SCON	0-15	7	SUB CONTRAST
20	SHUE	0-15	7	SUB HUE
21	SCOL	0-15	7	SUB COLOR
22	CDM2	0,1	0	COUNT DOWN MODE2
23	DPIX	0,1	1	DYNAMIC PICTURE
24	NOTC	0,1	0	Y CHROMA TRAP
25	CROM	0-15	7	CHROMA TRAP F0
26	TOT	0,1	0	CHROMA TOT FILTER
27	SHPF	0-3	3	SHARPNESS F0
28	RON	0,1	1	RED ON
29	GON	0,1	1	GREEN ON
30	BON	0,1	1	BLUE ON
31	DCOL	0,1	1	DYNAMIC COLOR
32	CDMD	0,1	0	V COUNT DOWN
33	LBLK	0-15	13	LEFT-SIDE BLANK WIDTH
34	RBLK	0-15	13	RIGHT-SIDE BLANK WIDTH
35	PREC	0-3	1	PRE OVER LEVEL FOR COMP .V IN
36	PREY	0-3	1	PRE OVER LEVEL FOR Y IN

##### VPNV

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	SBRV	0-63	27	SUB BRIGHTNESS FOR VIVID
1	GMMV	0-3	2	GAMMA LEVEL FOR VIVID
2	YDCV	0,1	1	Y-DC TRANSFER RATIO FOR VIVID
3	ABLV	0,1	1	ABL MODE FOR VIVID
4	AXIV	0,1	0	AXIS R-Y,G-Y FOR VIVID

##### VPNS

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	SBRS	0-63	27	SUB BRIGHTNESS FOR STANDARD
1	GMMS	0-3	2	GAMMA LEVEL FOR STANDARD
2	YDCS	0,1	0	Y-DC TRANSFER RATIO FOR STANDARD
3	ABLS	0,1	1	ABL MODE FOR STANDARD
4	AXIS	0,1	0	AXIS R-Y,G-Y FOR STANDARD

PJED

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	FDIS	0,1	0	SELECT REGI DATA DISPLAY OF FINE ADJ
1	OSDH	1-255	31	PJED SERVICE MENU H POSITION
2	OSDV	1-255	25	PJED SERVICE MENU V POSITION
3	FVST	0-255	25	LINE NUMBER OF FINE ADJUST START
4	V1ST	0-255	0	V1 START DATA
5	V1CU	0-255	62	V1 COUNT UP DATA
6	COHP	0-255	0	H-PHASE OF ROUGH ADJ
7	FIHP	0-255	194	H-PHASE OF FINE ADJ
8	TPHP	0-255	62	H-PHASE OF TEST PATTERN
9	DFHP	0-255	225	H-PHASE OF DYNAMIC FOCUS
10	DFHG	-128-127	-80	H-2 GAIN OF DYNAMIC FOCUS
11	DFVG	-128-127	-15	V-2 GAIN OF DYNAMIC FOCUS
12	PWM1	0-255	0	PWM 1
13	PWM2	0-255	32	H-PHASE OF AUTO REGI .TEST PATTERN
14	HBLD	0-255	244	H-PHASE OF RETURNED BLUE V LINE
15	HBLW	0-63	23	PULSE WIDTH OF RETURNED BLUE V LINE
16	BLKP	0-255	27	START BLANK PULSE
17	COGV	-128-127	X(*1)	GREEN V CENT OFFSET DATA OF AUTO REGI
18	CORV	-128-127	X(*1)	RED V CENT OFFSET DATA OF AUTO REGI
19	COBV	-128-127	X(*1)	BLUE V CENT OFFSET DATA OF AUTO REGI
20	COGH	-128-127	X(*1)	GREEN H CENT OFFSET DATA OF AUTO REGI
21	CORH	-128-127	X(*1)	RED H CENT OFFSET DATA OF AUTO REGI
22	COBH	-128-127	X(*1)	BLUE H CENT OFFSET DATA OF AUTO REGI
23	SOGV	-128-127	X(*1)	GREEN V SKEW OFFSET DATA OF AUTO REGI
24	SORV	-128-127	X(*1)	RED V SKEW OFFSET DATA OF AUTO REGI
25	SOBV	-128-127	X(*1)	BLUE V SKEW OFFSET DATA OF AUTO REGI
26	SOGH	-128-127	X(*1)	GREEN H SKEW OFFSET DATA OF AUTO REGI
27	SORH	-128-127	X(*1)	RED H SKEW OFFSET DATA OF AUTO REGI
28	SOBH	-128-127	X(*1)	BLUE H SKEW OFFSET DATA OF AUTO REGI
29	ERR	FIXED	0	AUTO REGI ERROR CODE
30	ADTM	0-255	144	TIMING TO GET A/D DATA OF AUTO REGI
31	VUP	1-255	1	AUTO REGI PATTERN UPPER V POSITION
32	VMID	1-255	102	AUTO REGI PATTERN MIDDLE V POSITION
33	VLOW	1-255	212	AUTO REGI PATTERN LOWER V POSITION
34	HPR	1-510	1	AUTO REGI PATTERN H POSITION
GRN	CENT	-512-511	000 / 000	GREEN H/V CENT
	SKEW	-512-511	000 / 000	GREEN H/V SKEW
	SIZE	-512-511	-70/-190	GREEN H/V SIZE
	LIN	-512-511	xxxx / xxxx	GREEN H/V LIN
	KEY	-512-511	xxxx / xxxx	GREEN H/V KEY
BLU	PIN	-512-511	xxxx / 271	GREEN H/V PIN
	CENT	-512-511	000 / 000	BLUE H/V CENT
	SKEW	-512-511	080 / -130	BLUE H/V SKEW
	SIZE	-512-511	-20 / -226	BLUE H/V SIZE
	LIN	-512-511	187 / xxxx	BLUE H/V LIN
RED	KEY	-512-511	xxxx / -115	BLUE H/V KEY
	PIN	-512-511	xxxx / 198	BLUE H/V PIN
	CENT	-512-511	000 / 000	RED H/V CENT
	SKEW	-512-511	080 / -130	RED H/V SKEW
	SIZE	-512-511	-61 / -206	RED H/V SIZE
RED	LIN	-512-511	195 / xxxx	RED H/V LIN
	KEY	-512-511	xxxx / 124	RED H/V KEY
	PIN	-512-511	xxxx / 250	RED H/V PIN

3DCM

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	NRMD	0-3	0	NOISE REDUCER MODE
1	DYCO	0-15	2	ΔY CORING LEVEL SETTING
2	DYGA	0-15	10	ΔY GAIN SETTING
3	DCCO	0-15	5	ΔC CORING LEVEL SETTING
4	DCGA	0-15	5	ΔC GAIN SETTING
5	SELD	0,1	1	SELECT ΔY SIGNAL FILTER
6	D2GA	0-7	4	ΔY/C 2nd GAIN SETTING
7	VTRH	0-3	1	VTR HSYNC HYSTERESIS SETTING
8	VTRR	0-3	1	VTR HSYNC REFERENCE SETTING
9	LDSR	0-3	2	LD SIGNAL REFERENCE
10	VAPG	0-7	5	V APERTURE GAIN
11	VAPI	0-31	11	V APERTURE INVERT POINT
12	YPFT	0-3	0	Y PEAKING FILTER TAP
13	YPPG	0-15	9	Y PEAKING FILTER GAIN
14	VIPS	0-3	2	VERTICAL 1-LINE SELECTOR
15	VEGS	0-3	1	VERTICAL EDGE SELECTOR
16	CC3N	0,1	0	C SIGNAL 3-LINE COM FILTER
17	HDP	0-7	4	HD HORIZONTAL PHASE
18	CDL	0-7	4	C DELAY
19	HSSL	0-15	12	H SYNC SLICE LEVEL
20	VSSL	0-15	8	V SYNC SLICE LEVEL
21	HPLF	0,1	1	H PLL FILTER
22	BPLF	0,1	0	BURST PLL FILTER
23	FSCF	0,1	1	FSC FILTER GAIN
24	PLFG	0,1	1	PLL FILTER GAIN
25	EXAD	0,1	1	EXTERNAL AD IN
26	MSS	0,1	0	FORCED MOTION SIGNAL
27	COUT	0-3	2	C SIGNAL OUTPUT
28	YAPS	0-3	1	Y APERTURE
29	NSDS	0-3	0	NON STD SIGNAL DETECT.
30	CPP	0-3	0	CLAMP PULSE & AD RANGE
31	YHCO	0-3	1	Y HIGH FREQ.SIGNAL CORING
32	YPCO	0,1	0	Y PEAK FILTER CORING OFF
33	KILR	0-15	3	KILLER REFERENCE
34	BGPS	0-15	4	BGP START POSITION
35	BGPW	0-15	10	BGP WIDTH
36	ADCL	0-3	2	AD CLOCK DELAY
37	PWRF	0,1	0	PULSE WIDTH REFERENCE
38	YHCG	0,1	0	Y HIGH FREQ.SIGNAL CORING 1/2 GAIN
39	CKG2	0,1	1	CLOCK GENERATOR TEST BIT
40	CKGE	0,1	0	CLOCK GENERATOR TEST BIT

\* 1 : Set correctly by the automatic resistration adjustment.

xxxx : Cannot change.

**ZONE**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	RBAS	0-63	39	RESET VALUE OF USER BASS DATA
1	RTRE	0-63	35	RESET VALUE OF USER TREBLE DATA
2	BBEH	0-15	-	BBE HIGH FREQUENCY
3	BBEL	0-11	-	BBE LOW FREQUENCY
4	SUFE	7	-	SURROUND EFFECT

**DSP**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	TB0H	0-255	48	TRUSURROUND EFFECT (L+R) COARSE
1	TB0L	0-255	0	TRUSURROUND EFFECT (L+R) FINE
2	TB1H	0-255	64	TRUSURROUND EFFECT (L-R) COARSE
3	TB1L	0-255	0	TRUSURROUND EFFECT (L-R) FINE
4	TB2H	0-255	64	TRUSURROUND EFFECT ( C ) COARSE
5	TB2L	0-255	0	TRUSURROUND EFFECT (C) FINE
6	TBFH	0-255	165	TRUSURROUND EFFECT ( S ) COARSE
7	TBFL	0-255	126	TRUSURROUND EFFECT ( S ) FINE
8	TC0H	0-255	90	TRUSURROUND EFFECT ( S ) COARSE
9	TC0L	0-255	130	TRUSURROUND EFFECT ( S ) FINE
10	TC1H	0-255	11	TRUSURROUND EFFECT (L,R) COARSE
11	TC1L	0-255	100	TRUSURROUND EFFECT (L,R) FINE
12	SADH	0-255	64	SRS SPACE LEVEL COARSE
13	SADL	0-255	0	SRS SPACE LEVEL FINE
14	SB0H	0-255	92	SRS CENTER LEVEL COARSE
15	SB0L	0-255	0	SRS CENTER LEVEL FINE

**MC**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	MYDR	0-31	22	MAIN Y DRIVE
1	MSHU	0-63	31	MAIN SUB HUE
2	MSCL	0-63	31	MAIN SUB COLOR
3	MUPD	0-15	7	MAIN U PEDESTAL OFFSET
4	MVPD	0-15	7	MAIN V PEDESTAL OFFSET
5	MDLY	0-3	0	MAIN Y DELAY
6	MU2P	0-15	7	MAIN U2 PEDESTAL OFFSET
7	MV2P	0-15	7	MAIN V2 PEDESTAL OFFSET
8	MY2D	0-31	19	MAIN Y2 DRIVE
9	MU2D	0-31	11	MAIN U2 DRIVE
10	MV2D	0-31	11	MAIN V2 DRIVE
11	MPRE	0-3	3	MAIN PRE-OVER

**SC**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	SYDR	0-31	28	SUB Y DRIVE
1	SSHU	0-63	31	SUB SUB HUE
2	SSCL	0-63	31	SUB SUB COLOR
3	SUPD	0-15	7	SUB U PEDESTAL OFFSET
4	SVPD	0-15	7	SUB V PEDESTAL OFFSET
5	SDLY	0-3	0	SUB Y DELAY
6	SU2P	0-15	7	SUB U2 PEDESTAL OFFSET
7	SV2P	0-15	7	SUB V2 PEDESTAL OFFSET
8	SY2D	0-3	20	SUB Y2 DRIVE
9	SU2D	0-15	11	SUB U2 DRIVE
10	SV2D	0-15	11	SUB V2 DRIVE
11	SPRE	0-3	3	SUB PRE-OVER

**IC**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	PCDR	0-15	7	PIP COLOR
1	PHDR	0-15	7	PIP HUE
2	PAFC	0-3	2	PIP AFC LOOP GAIN
3	PTAD	0-15	7	PIP TRAP F0 ADJUSTMENT
4	PTOT	0,1	0	PIP CHROMA TOT FILTER
5	PSCN	0-15	7	PIP SUB CONTRAST
6	PYDC	0-7	0	PIP Y DC TRAN
7	PSHP	0,1	1	PIP SHARPNESS F0
8	PMSK	0,1	0	PIP MACRO VISION MASK

**PP**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	BGHP	0-15	10	PIP H POSITION
1	BGHN	0-15	7	PIP H POSITION FOR NO SIGNAL
2	BGVP	0-15	7	PIP V POSITION
3	6BIT	0,1	1	6BIT(SMART6/SKIP6) MATRIX
4	MAHP	0-15	7	MAIN H ACQUISITION
5	MAVP	0-255	23	MAIN V ACQUISITION
6	SAHP	0-15	7	SUB H ACQUISITION
7	SAVP	0-255	23	SUB V ACQUISITION
8	DECS	0-31	18	SUB DECODER REGISTERS
9	DECM	0-31	18	MAIN DECODER REGISTERS
10	DIS	0-127	66	DISPLAY SETTING
11	BSIZ	0-15	2	BORDER SIZE
12	VPED	0-15	13	V PEDESTAL OFFSET
13	UPED	0-15	13	U PEDESTAL OFFSET

**DAC**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	UVSH	0-63	31	YUV SUB HUE
1	UVSC	0-63	31	YUV SUB COLOR

**PI**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	PIPH		-	PIP H POSITION
1	PIPV		-	PIP V POSITION
2	PYSD		-	PIP SELECT DELAY
3	PYDL		-	PIP Y DELAY
4	PHDL		-	H-PULSE DELAY
5	PMVD		-	MAIN V-PULSE DELAY
6	PIVD		-	INSET V-PULSE DELAY
7	PCON		-	INSET CONTRAST
8	FRMY		-	FRAME Y
9	IPEP		-	PIP PEDESTAL R-Y
10	IPEB		-	PIP PEDESTAL B-Y
11	PCPS		-	PIP CLP
12	PCPF		-	PIP CLP CYCLES
13	PPLL		-	PIP PLL TIME CONSTANT
14	PVNR		-	PIP VSP PULSE NOISE REDUCTION

**ID**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	AREA	0-3	0	AREA ID
1	SERS	0-3	0	SERIES ID
2	VCHP	0-3	0	V CHIP ID

**CCD**


ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	CCHP	0-63	39	OSD H POSI FOR INDEX & CC/XDS
1	CCHN	0-63	29	NO FUNCTION

**OP**

ITEM NUMBER	ADJUSTMENT ITEM	DATA RANGE	STANDARD DATA	NOTE
0	DISP	0-63	9	OSD H POSITION
1	FW1	0-7	2	FIELD1 WINDOW
2	FW2	0-7	3	FIELD2 WINDOW

### 3-10. REGISTRATION ADJUSTMENT

#### • ADJUST BUTTONS AND INDICATOR

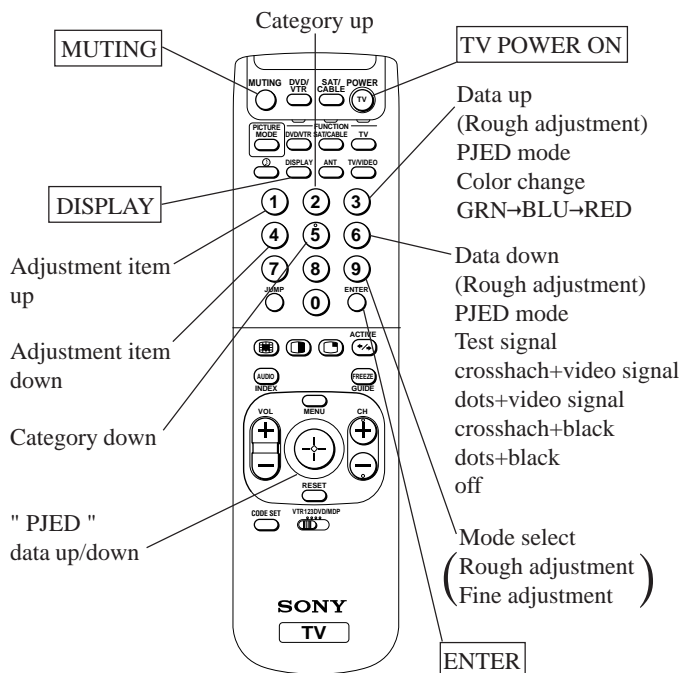

- Press **[6]** to display the test signal (crosshatch) on the screen.
- Select GRN CENT(\*) with the **[1]** and **[4]** keys on the remote commander and check that the adjustment data is now "000" both vertically and horizontally.

	(H)	(V)
GRN	000	000
CENT		

\*: In the factory preset, "GRN CENT" appears on the screen first. In case of other colors "RED" or "BLU", change color by every pressing **[3]** key.

- Set VPNT 28 RON to "000", 29 GON to "001" and 30 BON to "000" to show only the green color.
- Change the VPNT mode to the PJE mode.

#### SUB DEFLECTION ADJUSTMENT ITEM

Adjustment      O : Yes    - : No


Display	Adjustment item	Adjustment type		
		G	R	B
CENT	CENT	O/O	O/O	O/O
SKEW	SKEW	O/O	O/O	O/O
SIZE	SIZE	-/-	O/O	O/O
LIN	LIN	-/-	O/-	O/-
KEY	KEY	-/-	-/O	-/O
PIN	PIN	-/O	-/O	-/O

#### [SETUP FOR ADJUSTMENT]


- Current flow in circuit should be stable before attempting adjustment. So wait 5 minutes after turning on the TV power.

- Set to the service mode by pressing quickly keys on the remote commander in the standby mode in the following order:

**[DISPLAY]** → **[5]** → **[VOL+]** → **[TV POWER]**

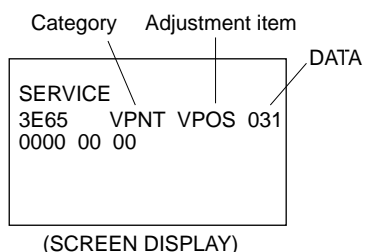


- Change TV mode to the video input mode.
- Change the VPNT mode to the PJE 00 FDIS.
- Set FDIS data to "01" to display the registration data of each spot in the fine adjustment.

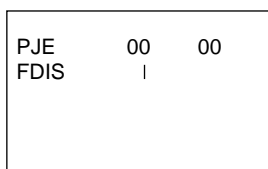

**[GREEN REGISTRATION ADJUSTMENT]**


**<GREEN CENTER>**

1. Select GRN CENT with the **[1]** and **[4]** keys on the remote commander.
2. Adjust the crosshatch line goes straight vertically and horizontally with the joystick on the remote commander.

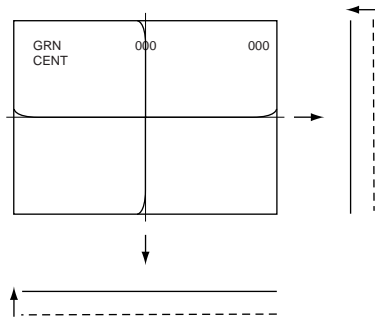


**<GREEN SKEW>**

1. Select GRN SKEW with the **[1]** and **[4]** keys on the remote commander.
2. Adjust the crosshatch line goes straight vertically and horizontally with the joystick on the remote commander.

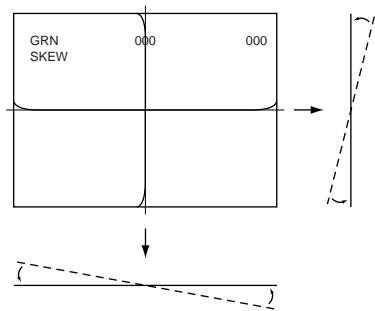

**<GREEN PINCUSHION>**


1. Select GRN PIN with the **[1]** and **[4]** keys on the remote commander.
2. Adjust the crosshatch line goes straight vertically and horizontally with the joystick on the remote commander.

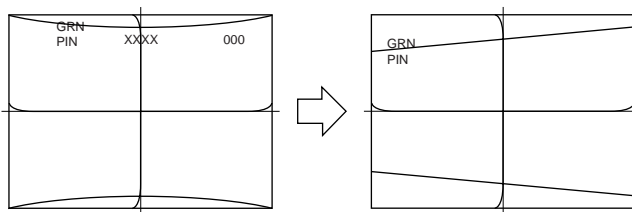



**<FINE ADJUSTMENT>**

1. Press **[9]** key on the remote commander to shift to the fine adjustment mode.  
The green marker (in the GRN mode) appears on the center of the screen.
2. Use the **[1]** and **[4]** keys or the joystick on the remote commander, move the marker (see below) everywhere you want to adjust and adjust with the joystick keys on the remote commander.

Marker movement by the **[1]** and **[4]** keys:

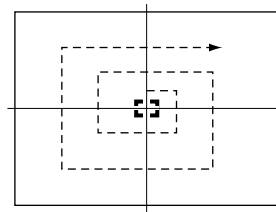

Press once the joystick the marker turns screen to white. Then you can move the marker up and down ,left and right.

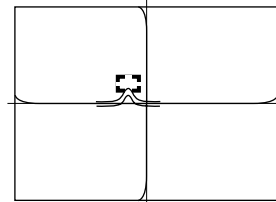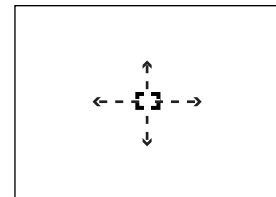

3. Press **[9]** key on the remote commander to shift to the rough

adjustment mode.

## [RED REGISTRATION ADJUSTMENT]

### <RED CENTER>

1. Change to VPNT mode and set VPNT 28 RON to “001”, 29 GON to “001” and 30 BON to “000” to show the green and red colors.
2. Change the VPNT mode to the PJE mode.
3. Press **[3]** key on the remote commander to shift the GRN mode to the RED mode.
4. Select RED CENT with the **[1]** and **[4]** keys on the remote commander.
5. Adjust the red crosshatch lines go straight vertically and horizontally and overlaps the green lines with the joystick on the remote commander.

### <RED SKEW>

1. Select RED SKEW with the **[1]** and **[4]** keys on the remote commander.
2. Adjust the red crosshatch lines go straight vertically and horizontally and overlaps the green lines with the joystick on the remote commander.

### <RED LINEARITY>

1. Select RED SIZE (vertically and horizontally) or RED LIN (vertically) with the **[1]** and **[4]** keys on the remote commander and adjust while tracking each other alternately.
2. Adjust the red crosshatch lines go straight vertically and horizontally and overlaps the green lines with the joystick on the remote commander.

### <RED KEY>

1. Select RED KEY with the **[1]** and **[4]** keys on the remote commander.
2. Adjust the red crosshatch lines go straight horizontally and overlaps the green lines with the joystick on the remote commander.

### <RED PINCUSHION>

1. Select RED PIN with the **[1]** and **[4]** keys on the remote commander.
2. Adjust the red crosshatch lines go straight horizontally and overlaps the green lines with the joystick on the remote commander.

### <FINE ADJUSTMENT>

1. Press **[9]** key on the remote commander to shift to the fine adjustment mode.

The red marker (in the RED mode) appears on the center of the screen.

2. Use the **[1]** and **[4]** keys or the joystick on the remote commander, move the marker everywhere you want to adjust and adjust with the joystick on the remote commander.

## [BLUE REGISTRATION ADJUSTMENT]

1. Change to VPNT mode and set VPNT 28 RON to “001”, 29 GON to “001” and 30 BON to “001” to show full color.
2. Change the VPNT mode to the PJE mode.
3. Press **[3]** key on the remote commander to shift the RED mode to the BLU mode.
4. Adjust BLU CENT, BLU SKEW, BLU SIZE, BLU LIN, BLU KEY and BLU PIN in the same procedure of the red registration adjustment.

## [FINAL CHECK]

1. Store the new adjustment (offset) value on the remote control by pressing **[MUTING]** and **[ENTER]**.
2. Press the FLASH FOCUS button on the front panel. (The Offset value is now automatically stored.)
3. Check that no error message appears.  
If an error message appears, recheck.




### 3-11. AUTO REGISTRATION ERROR CODE LIST

[ERROR CODE LIST]

ERROR CODE	DISCRIPTION	NOTE
00	No Error	
10	Sensor Output Level Low	* Check wiring, beam position, sensor. 0 : Upper Center 1 : Middle Left 2 : Middle Right 3 : Lower Center
20	Sensor Output Level High	* Check OP-amp circuit. 0 : Upper Center 1 : Middle Left 2 : Middle Right 3 : Lower Center
30	Adjustment Loop Counter Overflow	* Check the data go far from the standard or not.
40	Regi Data Overflow	* Check the data go far from the standard or not.
50	Regi Data Overflow	* Check the data go far from the standard or not.
60	Offset Overflow	* Check the data go far from the standard or not.
70	Offset Overdraw	* Check the data go far from the standard or not.


\* In case of multiple error, last error is displayed.

• ERROR CODE SCREEN DISPLAY

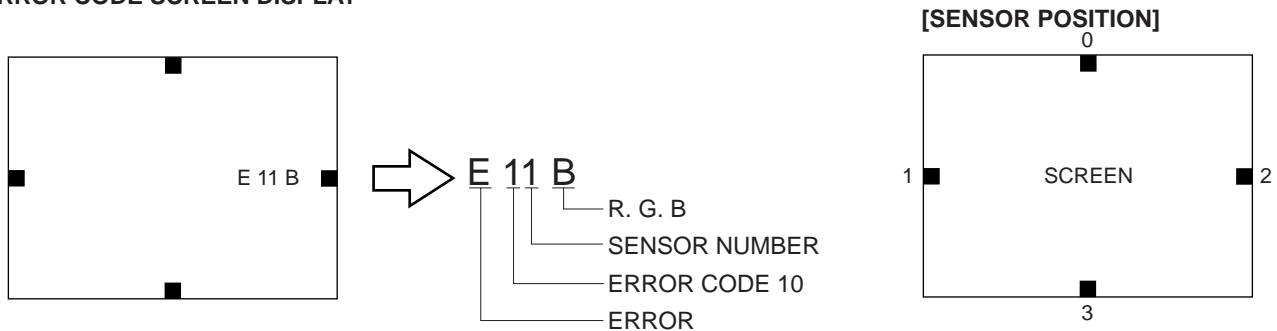


\* Error code will be displayed on center of screen for 3 seconds.

[SENSOR POSITION]

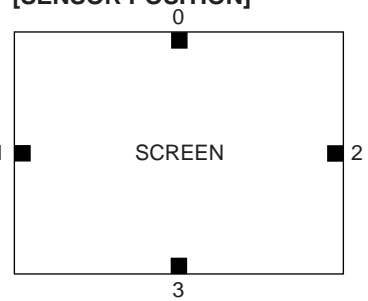

- 0 : UPPER SENSOR
- 1 : LEFT SENSOR
- 2 : RIGHT SENSOR
- 3 : LOWER SENSOR

• ERROR CODE DISPLAY IN REGI SERVICE MODE

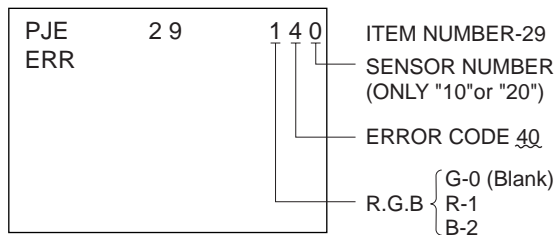






## SECTION 4

### SAFETY RELATED ADJUSTMENTS

#### [ G BOARD]

#### 4-1. HV REGULATION CIRCUIT CHECK AND ADJUSTMENT

When replacing the following components marked with  on the schematic diagram always check HV regulation, and if necessary re-adjust.

-  : C517
-  : C517, C521, C522  
IC654, L504  
T502, T504 (FBT)  
D.Y, A board, G board

#### OPERATION CHECK

1. Connect a HV static voltmeter to the unconnected plug of the high-voltage block. (Fig.4-1)
2. Power on the set.
3. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
4. Check that the HV static voltmeter is reading  $31.00 \pm 1.0$  kVdc.

#### HV Regulation adjustment

1. Connect a HV static voltmeter to the unconnected plug of the high-voltage block.
2. Power on the set.
3. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
4. If anode voltage is 31.95kV or higher, replace C517 of 470PF/2kV with that of 680PF/2kV, and check if the voltage is within the standard range.
5. If anode voltage is 29.45kV or lower, replace C517 of 470PF/2kV with that of 100PF/2kV, and check if the voltage is within the standard range.

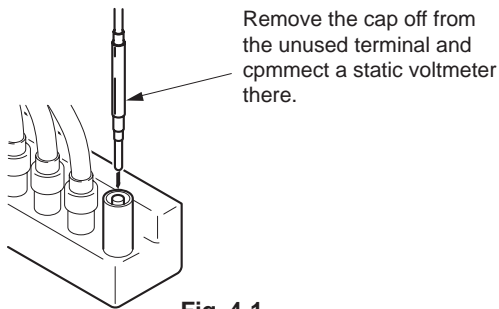





Fig. 4-1

#### 4-2. HV HOLD DOWN CIRCUIT OPERATION CHECK AND ADJUSTMENT

When replacing the following components marked with  on the schematic diagram always check hold-down voltage and if necessary re-adjust.

-  : R536, R545
-  : C516, C536  
D506, D507, D522  
IC206, IC502, IC654  
L504, R511, R522, R536, R538, R545,  
R548, R584  
T502, T504 (FBT)  
D.Y, A board, G board

#### OPERATION CHECK

1. Remove CN652 connector.
2. Short-circuit across TP-PROT and ground.
3. Connect a HV static voltmeter to the unconnected plug of the high-voltage block.
4. Connect a 220 /200W variable resistor, across pin ② and pin ① of CN652 and connect an external dc power supply unit (200V, class 2A) to pin ③ of CN652.
5. First turn on the external power supply (+B=135V), then turn on the power of the set.
6. Receive the dot signal. (PICTURE and BRIGHTNESS to minimum)
7. Gradually increase the value of the external dc power supply and check that the hold-down circuit operates at a static voltmeter reading of  $33.5 \pm 1.0$  kVdc when the raster disappears.

#### HV HOLD-DOWN ADJUSTMENT

1. Repeat steps ① ~ ⑦ as above.
2. If hold down voltage is 34.5kV or higher, remove R536, mount a resistor (150k , 1/4W : RN) onto R545 instead, and check again if the hold-down voltage is within the standard range.
3. If hold down voltage is 32.5kV or lower, mount a resistor (220k , 1/4W : RN) onto R536 and check again if the hold-down voltage is within the standard range.

**NOTE** : Please finish the adjustment as soon as possible

#### 4-3. +B MAX VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC654.

1. Supply 130VAC with variable autotransformer.
2. Input a dot signal.
3. Set the PICTURE control and the BRIGHTNESS controls to minimum.
4. Confirm the voltage of G BOARD TP135V is less than 137.0Vdc.
5. If step 4 is not satisfied, replace IC654 and repeat above steps.

**4-4. +B OVP CONFIRMATION**

1. Connect an external dc power supply to TP OVP.
2. Supply 120VAC to variable autotransformer.
3. Set PICTURE and the BRIGHTNESS controls to minimum.
4. Gradually turn the external dc power supply, and check if OVP works properly when the voltage of the external dc power supply is between 139.0 ~ 151.5V.

## SECTION 5

### CIRCUIT ADJUSTMENTS

#### 5-1. TV INPUT SUB CONTRAST ADJUSTMENT (VPNT-SCON)

1. Receive the color-bar signal.
2. Mode : Personal 1 or 2.  
PICTURE : maximum  
COLOR : maximum  
BRIGHTNESS : center  
TRINITONE : medium  
SERVICE DATA VPNT SCON : 7
3. Set to service mode.
4. Connect an oscilloscope between pin ⑦ of CN204 (A board) and ground.
5. Select “VPNT-SCON”, and adjust so that the wave from level is  $1.90 \pm 0.05V_{p-p}$ .
6. Write the data into memory.

**MUTING** → **ENTER**

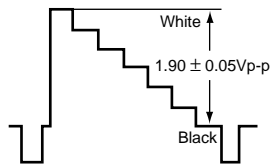


Fig. 5-1

#### 5-2. VIDEO INPUT SUB-HUE AND SUB-COLOR ADJUSTMENT (VPNT-SHUE, SCOL)

1. Select VIDEO1 input and supply the color-bar signal.
2. Mode : Personal 1 or 2.  
PICTURE : maximum  
COLOR : center  
BRIGHTNESS : center  
TRINITONE : medium  
SERVICE DATA VPNT-SHUE : 7  
VPNT-SCOL : 7
3. Set to service mode.
4. Connect an oscilloscope between pin ⑤ of CN204 (A board) connector and ground.
5. Select “VPNT-SHUE, SCOL”, and adjust them to have VB1 = VB4 and VB2 = VB3 in the waveform levels.
6. Increase SCOL by 2 steps.
7. Write the data into memory.

**MUTING** → **ENTER**

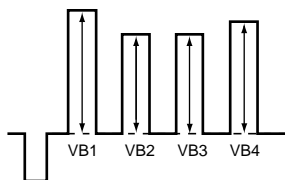


Fig. 5-2

#### 5-3. COMPONENT INPUT SUB-HUE AND SUB-COLOR ADJUSTMENT (DAC-UVSH, UVSC)

1. Select VIDEO 4 and supply the color-bar signal.  
VIDEO input
2. Mode : Personal 1 or 2.  
PICTURE : maximum  
COLOR : center  
BRIGHTNESS : center  
TRINITONE : medium  
SERVICE DATA DAC UVSH : 31  
DAC UVSC : 31
3. Set to service mode.
4. Connect an oscilloscope between pin ⑤ of CN204 (A board) connector and ground.
5. Select “DAC-UVSH, UVSC”, and adjust them to have VB1 = VB4 and VB2 = VB3 in the waveform levels.
6. Write the data into memory.

**MUTING** → **ENTER**

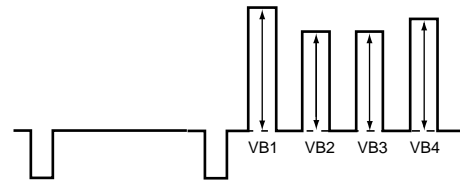


Fig. 5-3

#### 5-4. P & P SUB CONTRAST ADJUSTMENT (SC-SYDR)

1. Receive the signal.  
TV terminal (sub) : color-bar signal  
VIDEO terminal (main) : no signal
2. Set to service mode and set to P & P mode.
3. Connect an oscilloscope between pin ⑦ of CN204 (A board) and ground.
4. Select “SC-SYDR”, and adjust so that the wave from level is  $1.75 \pm 0.05V_{p-p}$ .
5. Write the data into memory.

**MUTING** → **ENTER**


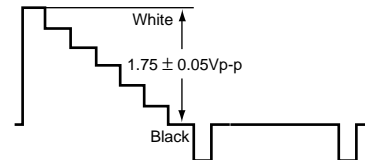


Fig. 5-4

**5-5. SUB-HUE , SUB-COLOR AND MAIN CONTRAST ADJUSTMENT (MC-MYDR, MSHU, MSCL, SC-SSHU, SSCL)**

1. Receive the color-bar signal.
2. Mode : Personal 1 or 2.  
 PICTURE : maximum  
 COLOR : center  
 BRIGHTNESS : center  
 TRINITONE : medium  
 SERVICE DATA MC-MYDR : 22  
                   MC-MSHU : 31  
                   MC-MSCL : 31  
                   SC-SSHU : 31  
                   SC-SSCL : 31
3. Set to service mode and set to P & P model .
4. Connect an oscilloscope between pin ⑤ of CN204 (A board) connector and ground.
5. Select “ MC-MYDR”, and adjust them to have VB1 = VB5 in the waveform levels.
6. Select “ MC-MSCL, SC-SSCL” and adjust so that the wave form shows VB1=VB4 and VB5=VB8.
7. Select “ MC-MSHU, SC-SSHU” and adjust so that the wave form shows VB2=VB3 and VB6=VB7.
8. Write the data into memory.

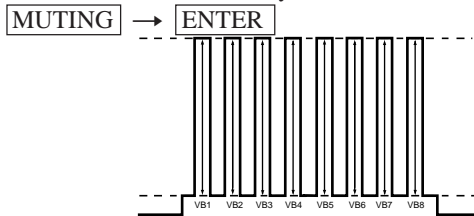


**Fig. 5-5**

**5-6. BAR DISPLAY POSITION ADJUSTMENT (OP-DISP)**

1. Receive the monoscope signal.
2. Set to service mode.
3. Push “ PICTURE +” . (Bar is displayed)
4. Select “ OP-DISP ”, and adjust so that the bar is as shown in the figure.
5. Write the data into memory.

MUTING → ENTER

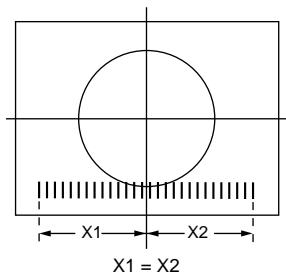

**Fig. 5-6**


**5-7. PIP ACQUISITION AREA ADJUSTMENT (PP-MAHP, SAHP)**

1. Set the SPLIT mode.
2. Receive the monoscope signal on the main/sub picture.
3. Check the monoscope position of each picture.

A=B

4. If necessary, set to service mode and adjust "PP-MAHP, SAHP".
5. Write the data into memory.

MUTING → ENTER

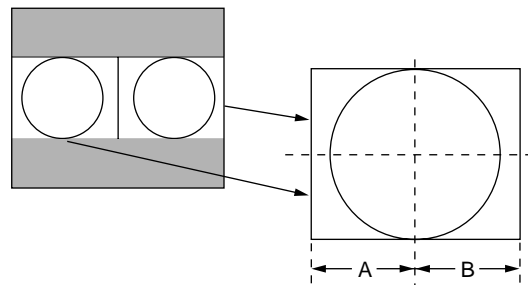

**Fig. 5-7**

**5-8. DISPLAY POSITION FOR CHANNEL INDEX MODE (CCD-CCHP)**

1. Recive the broadcast signal for main picture.
2. Set to service mode.
3. Select index mode.
4. Adjust “ CCD-CCHP” to get all channel number displays into picture area without being on border.
5. Write the data into memory.

MUTING → ENTER


2X	5X	7X	9X
125X		5	11X
36X			13X
23X	19X	17X	14X

KEEP ONE CHARACTER SPACE BETWEEN CH# AND BORDER.


**Fig. 5-8**

**SECTION 6  
DIAGRAMS**

**6-1. BLOCK DIAGRAM (1)**

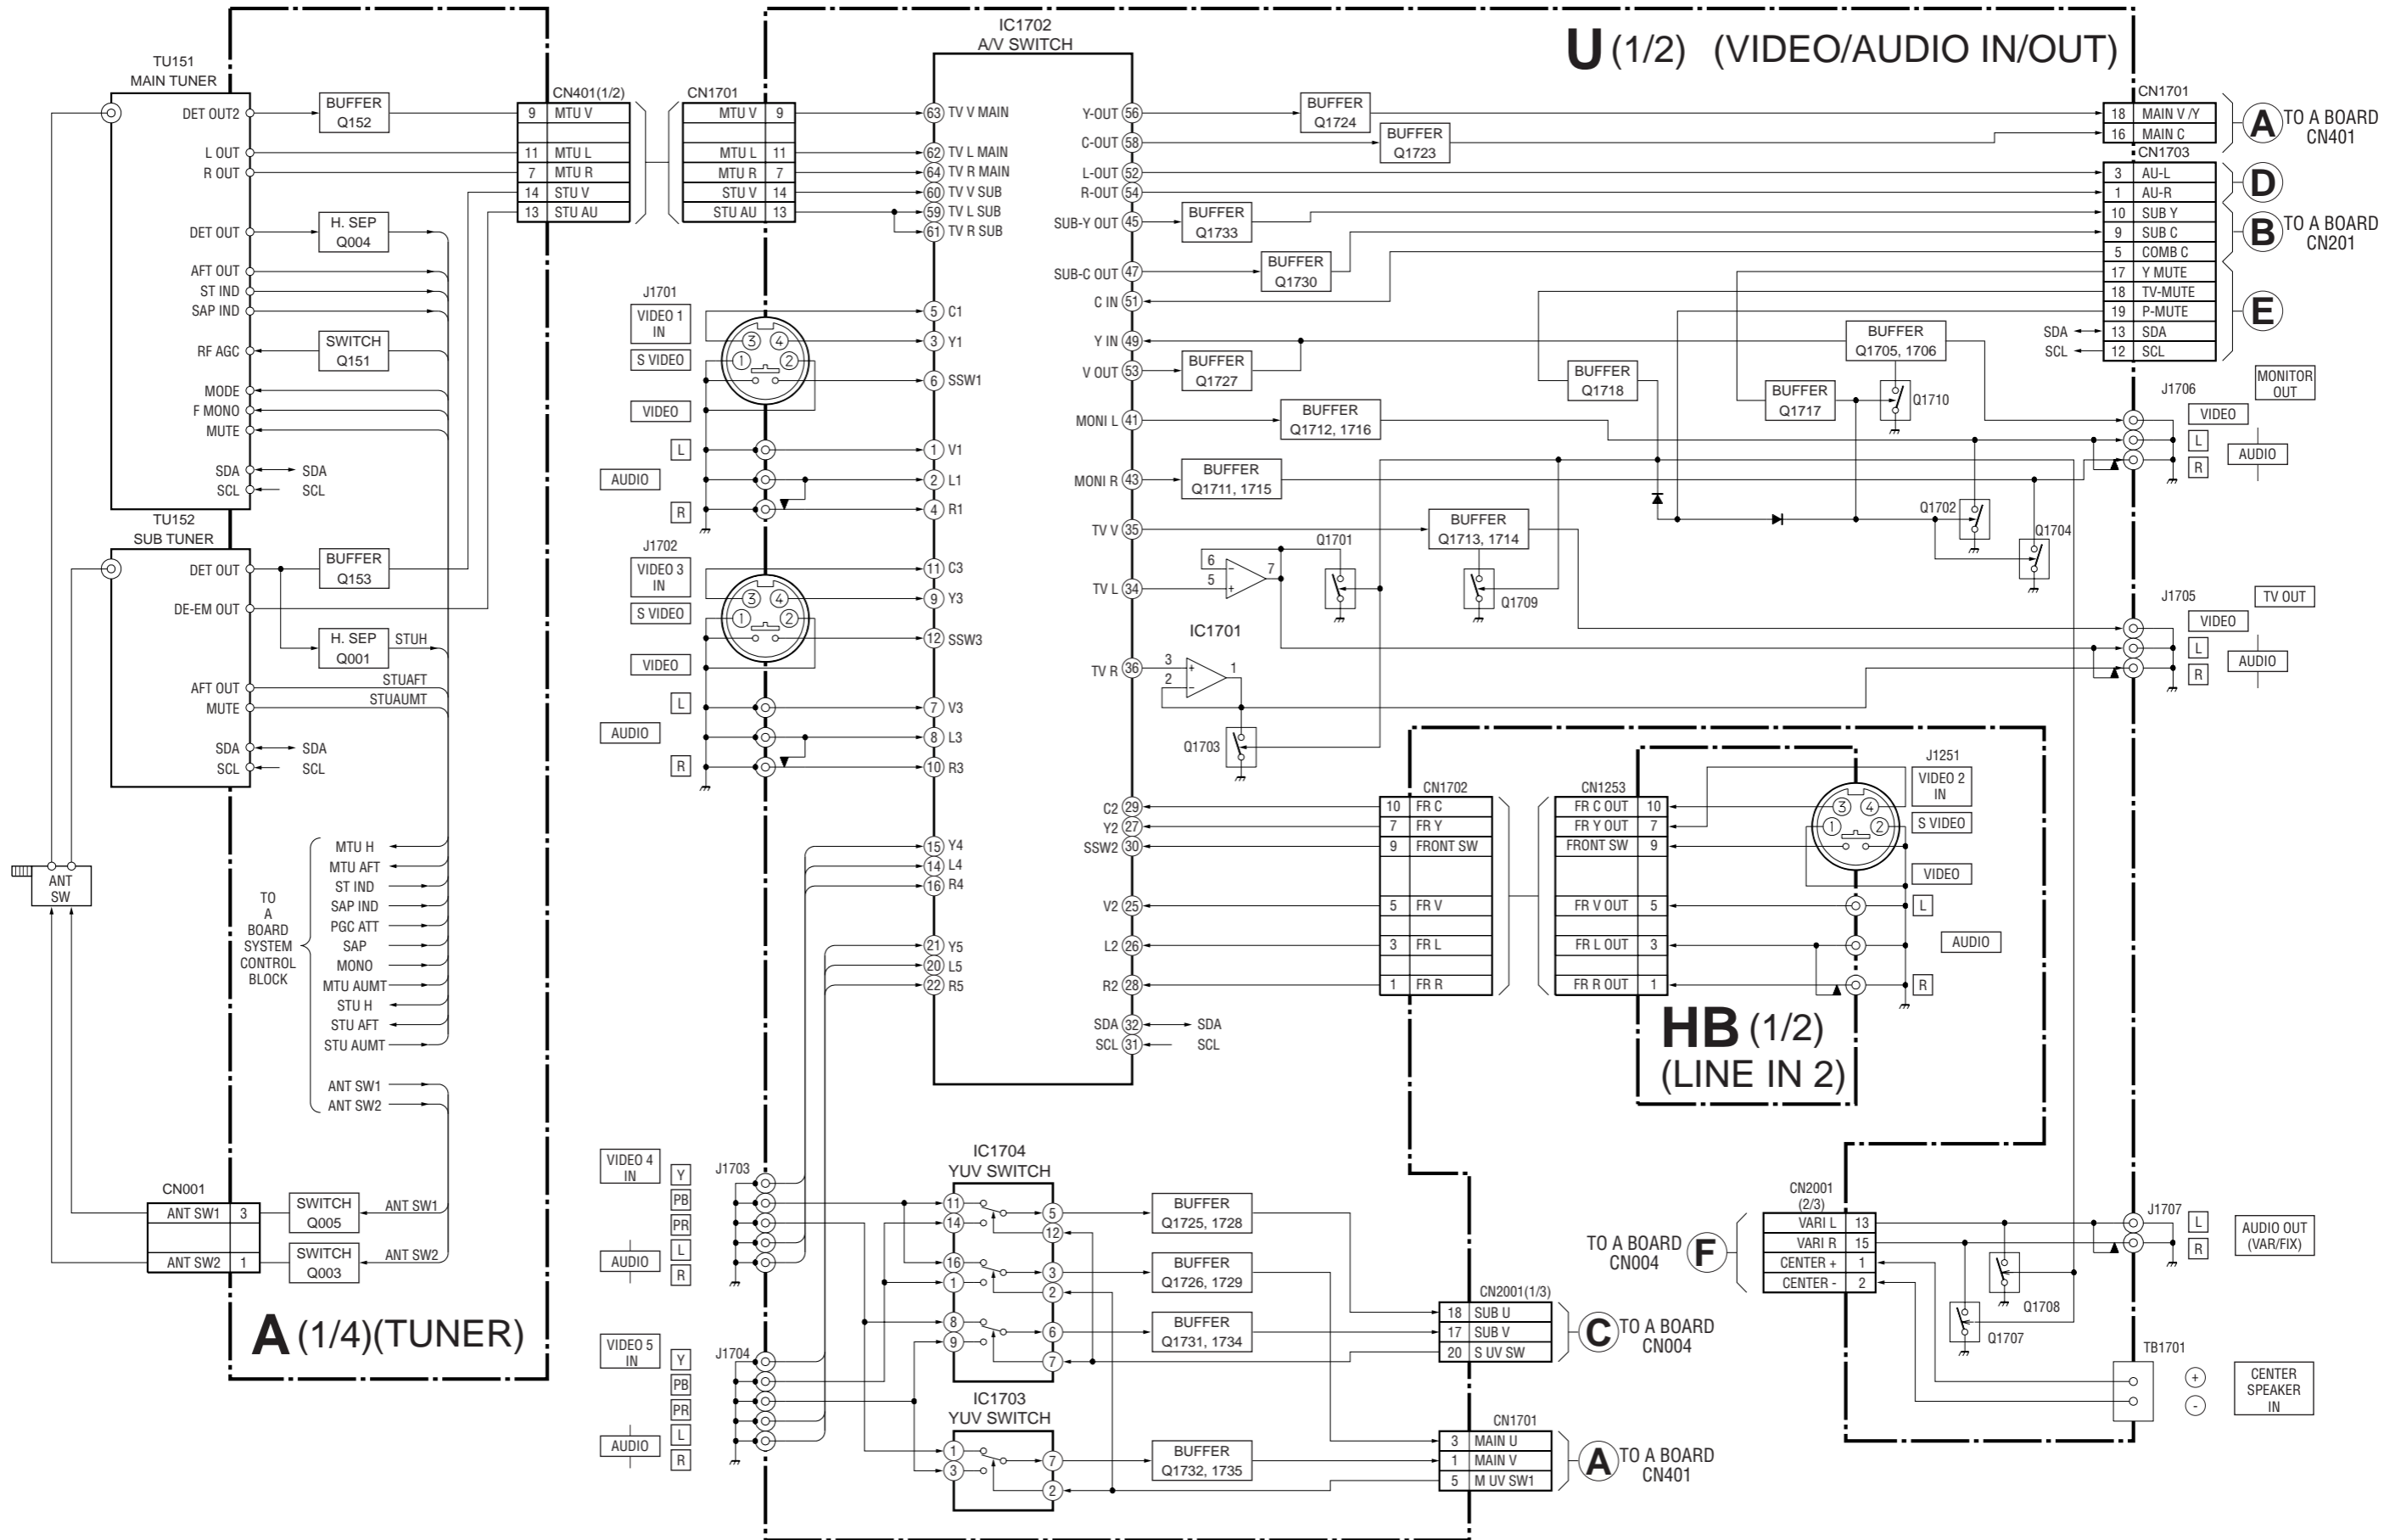


**BLOCK DIAGRAM (2)**

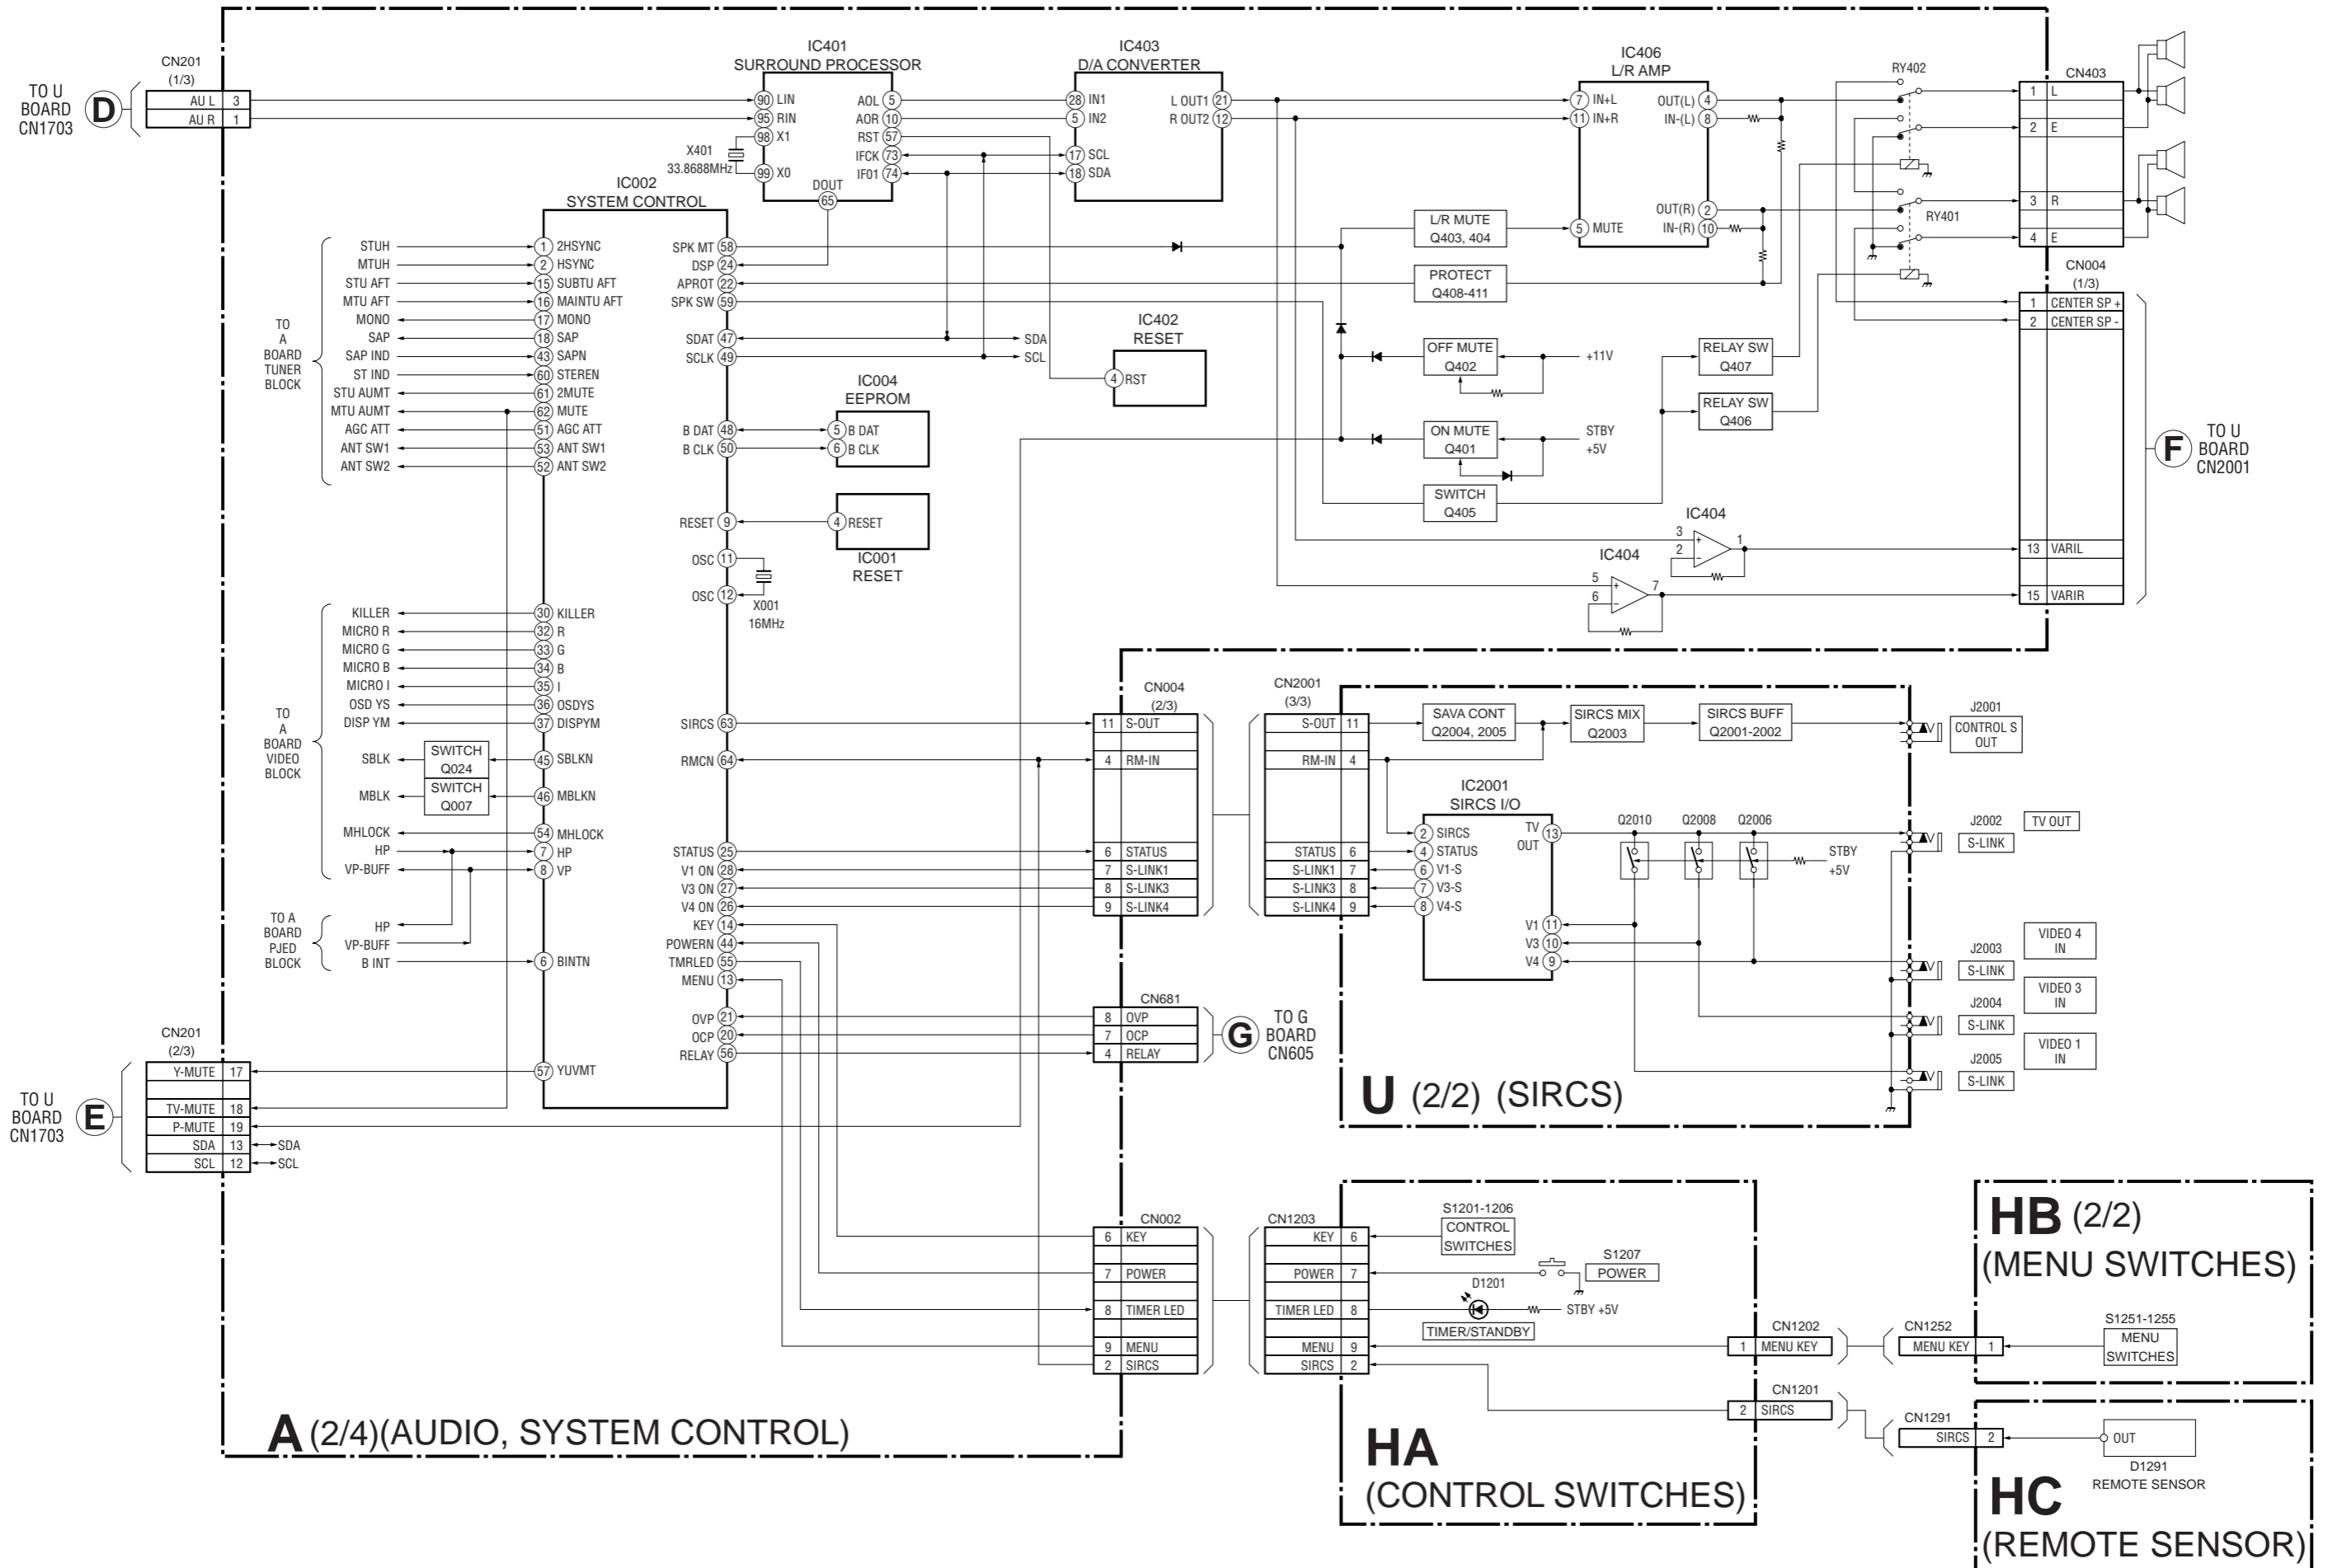




**BLOCK DIAGRAM (3)**

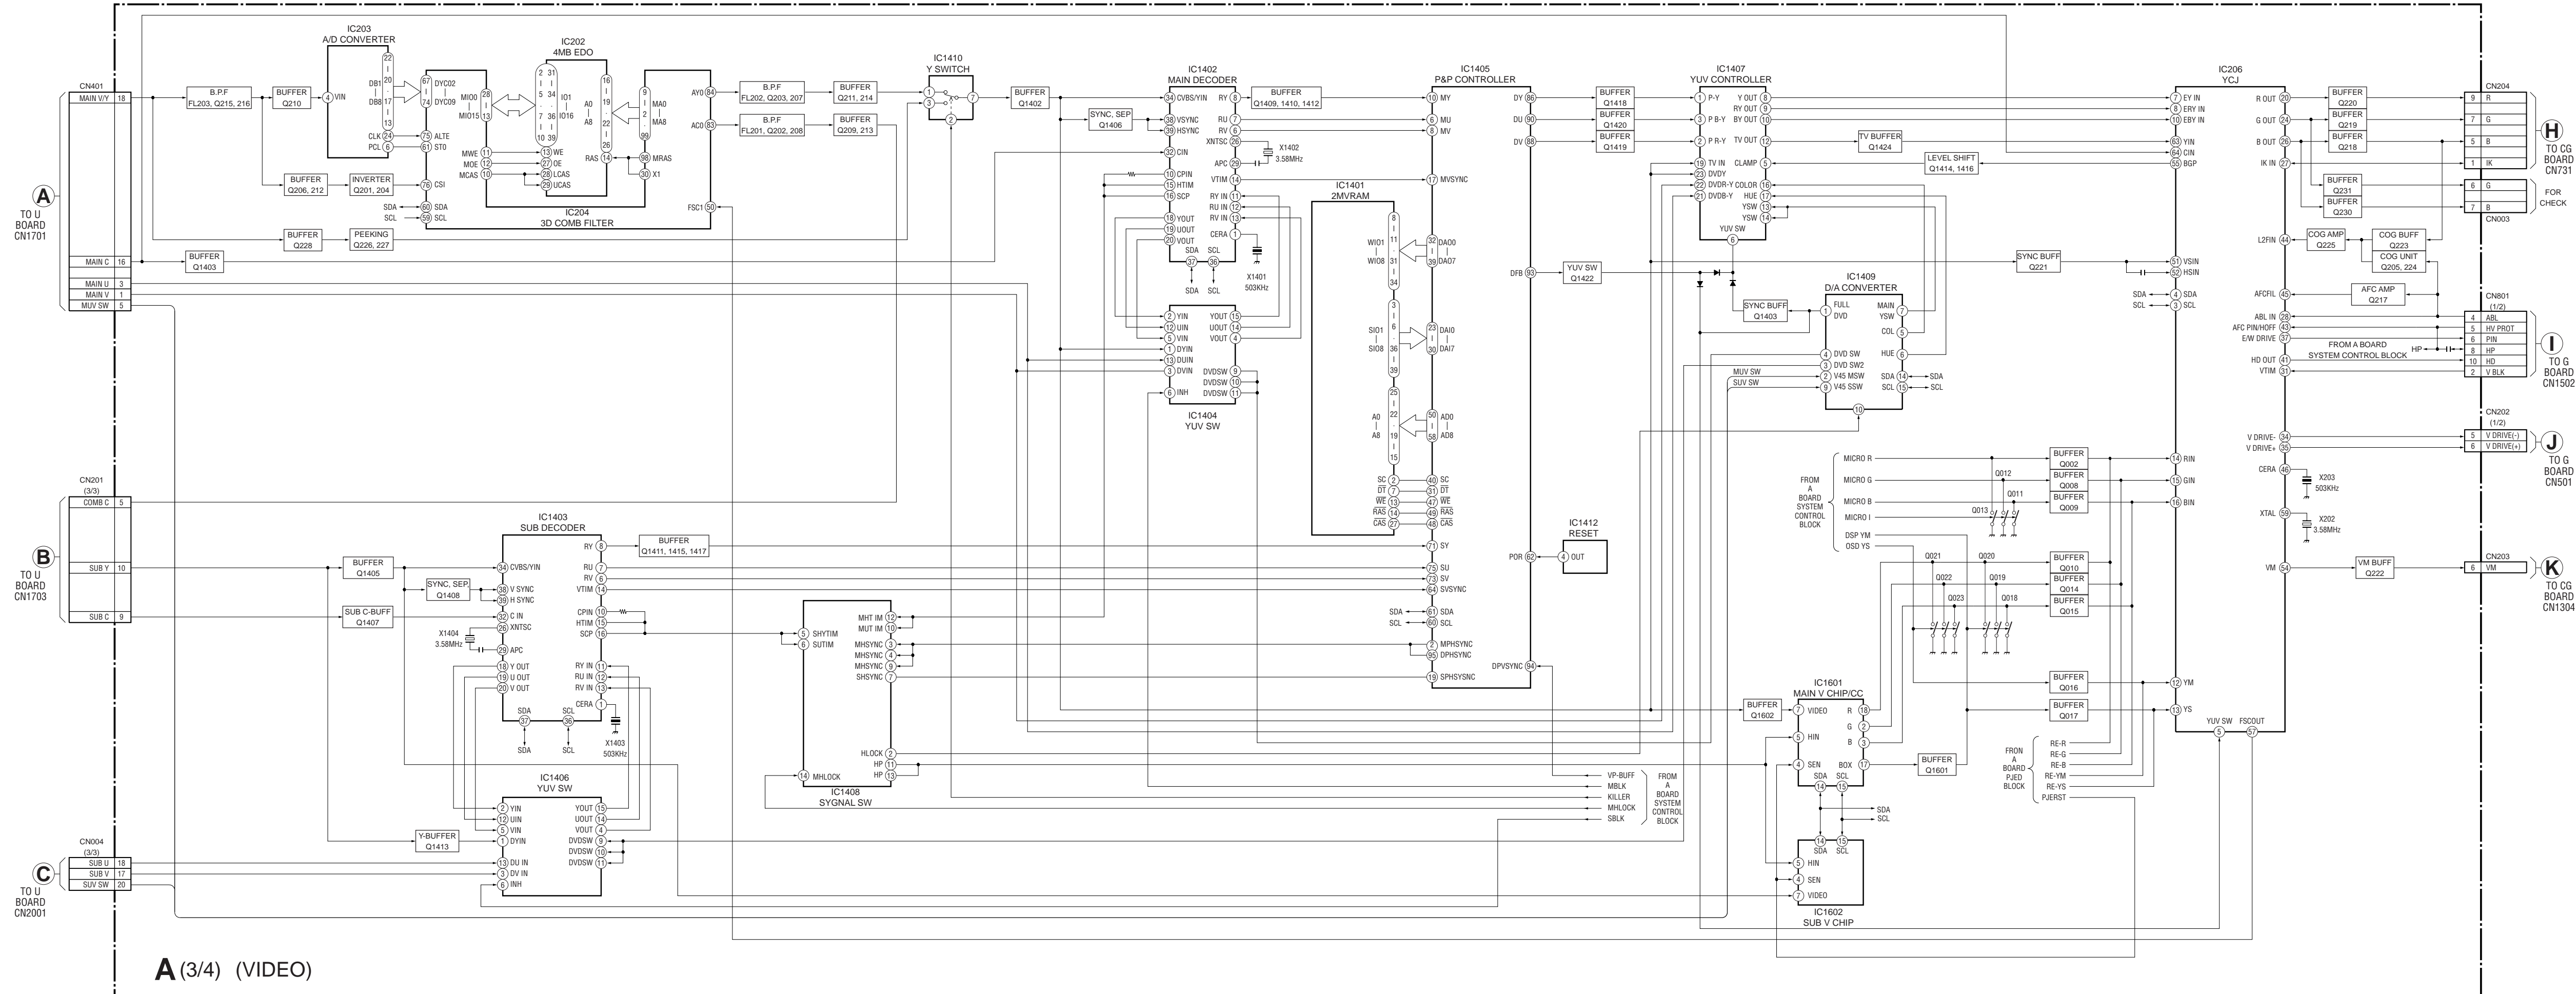




**A(3/4) (VIDEO)**

BLOCK DIAGRAM (4)

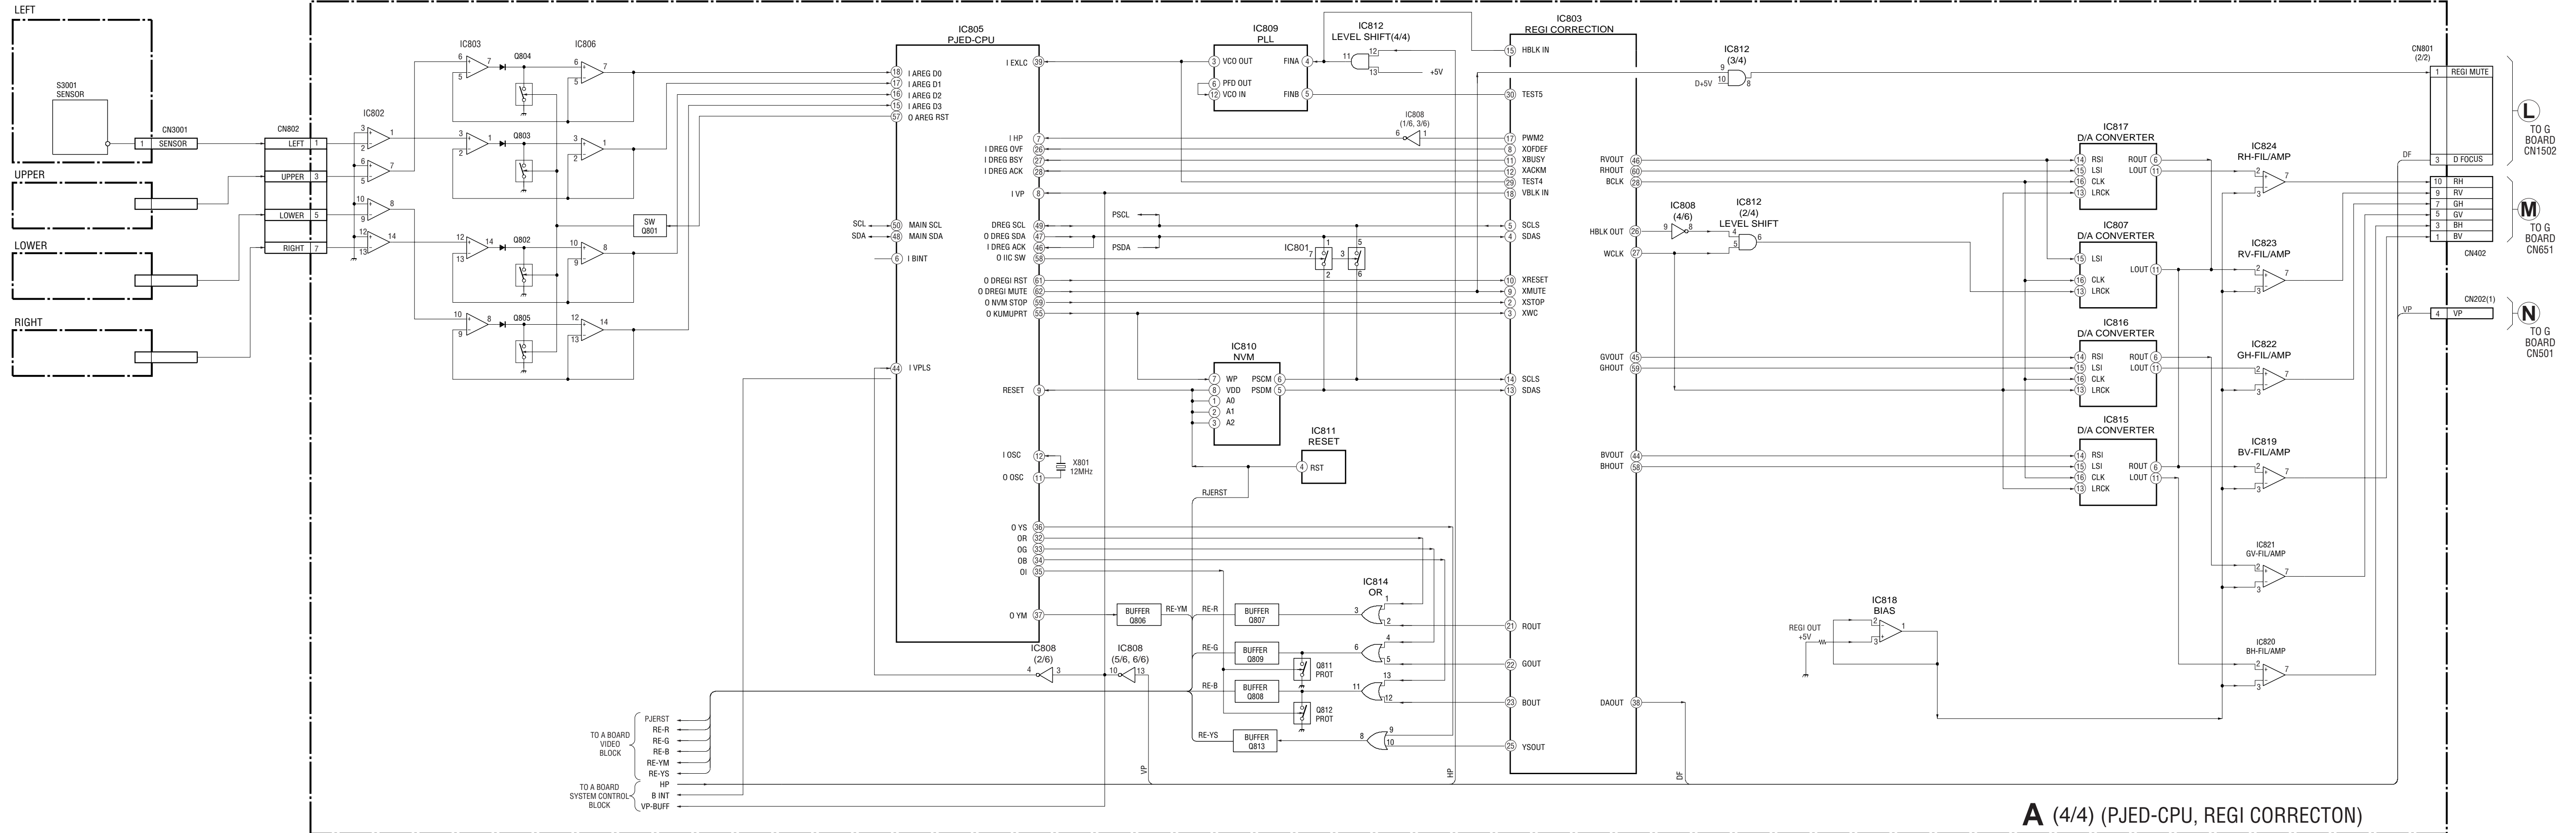



**A (4/4) (PJED-CPU, REGI CORRECTON)**

**BLOCK DIAGRAM (5)**

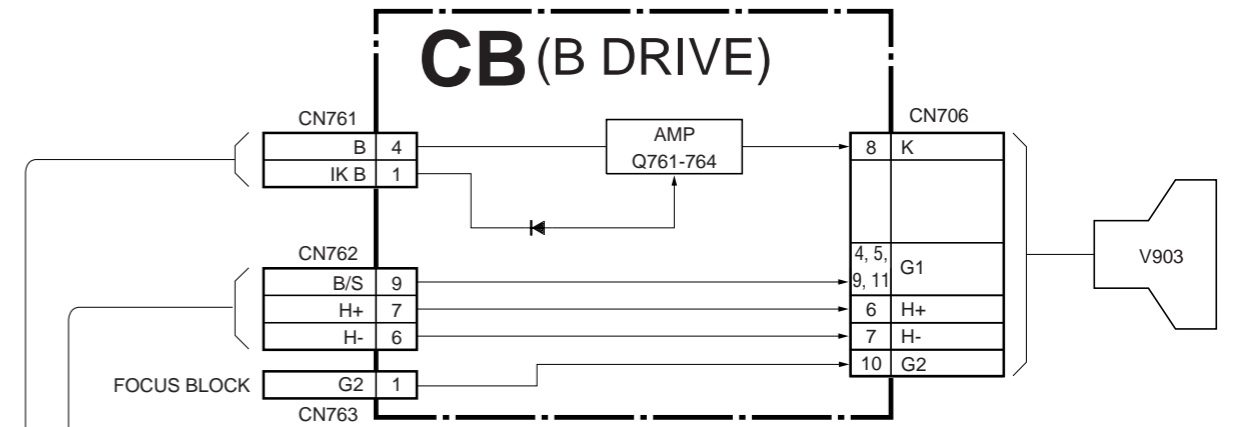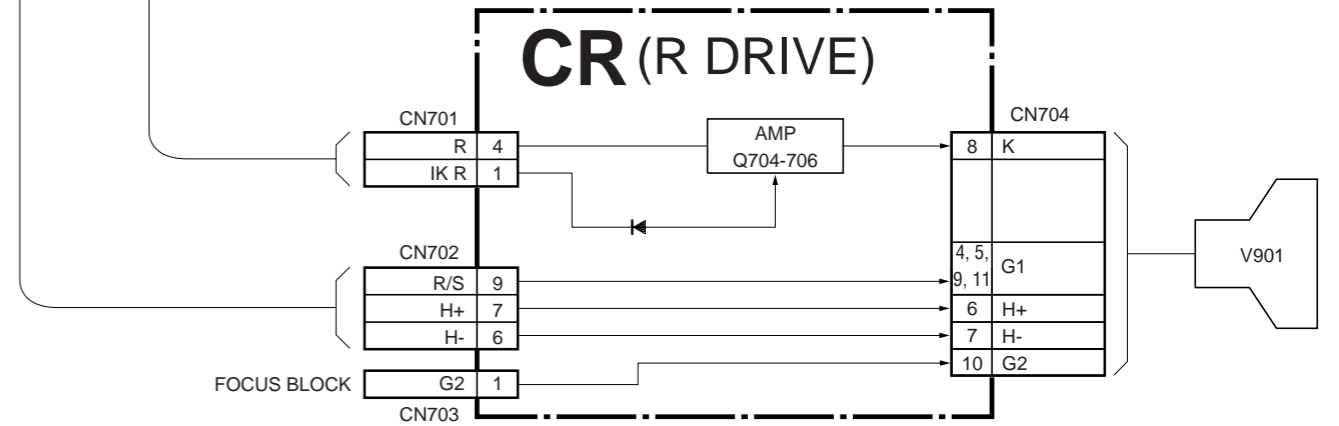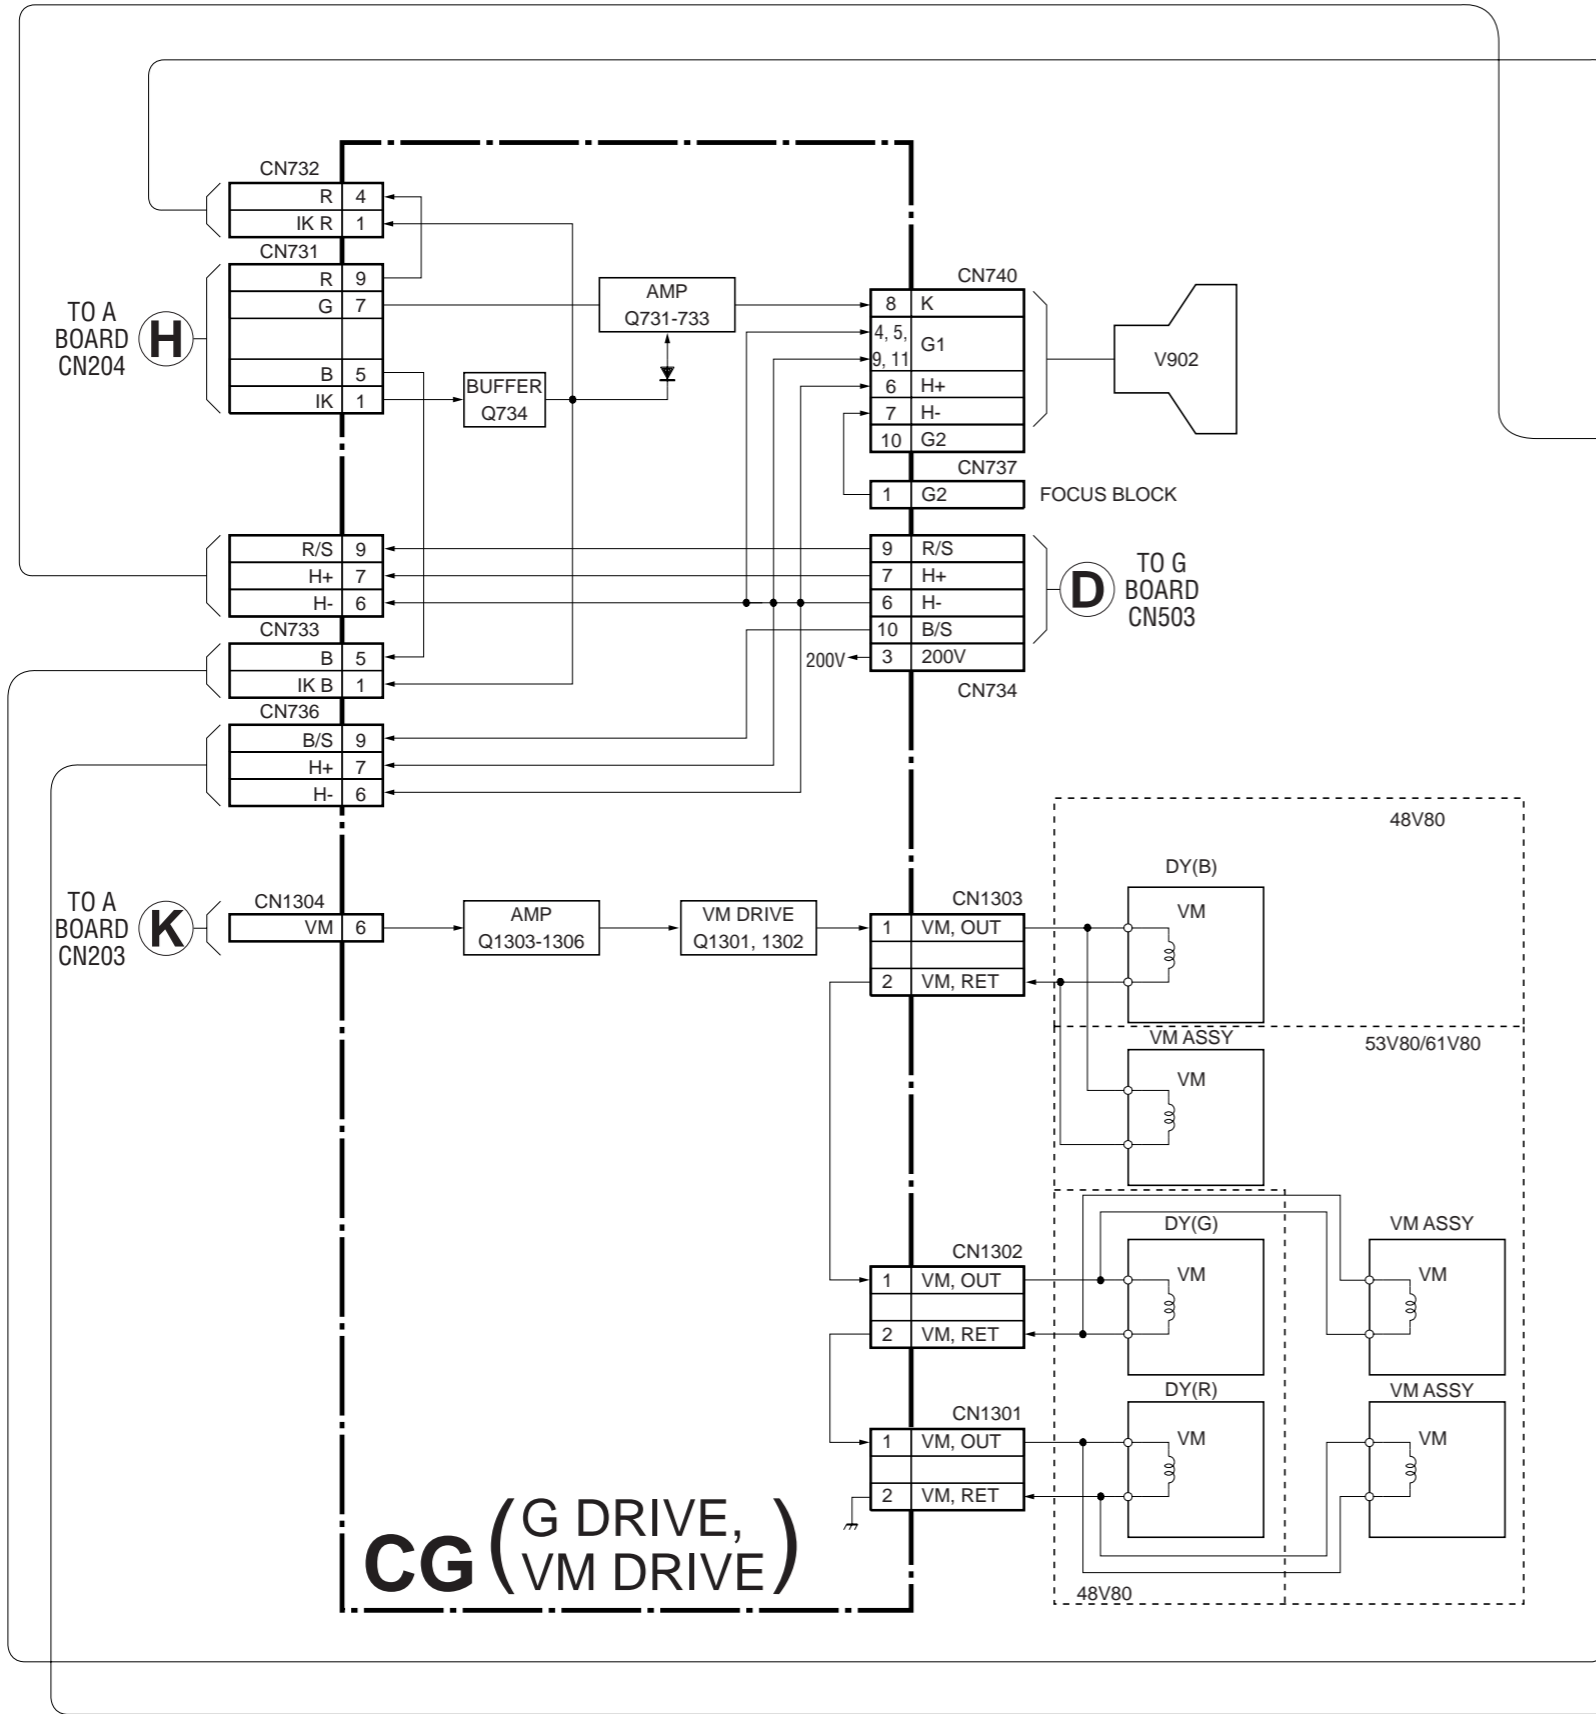


BLOCK DIAGRAM (6)

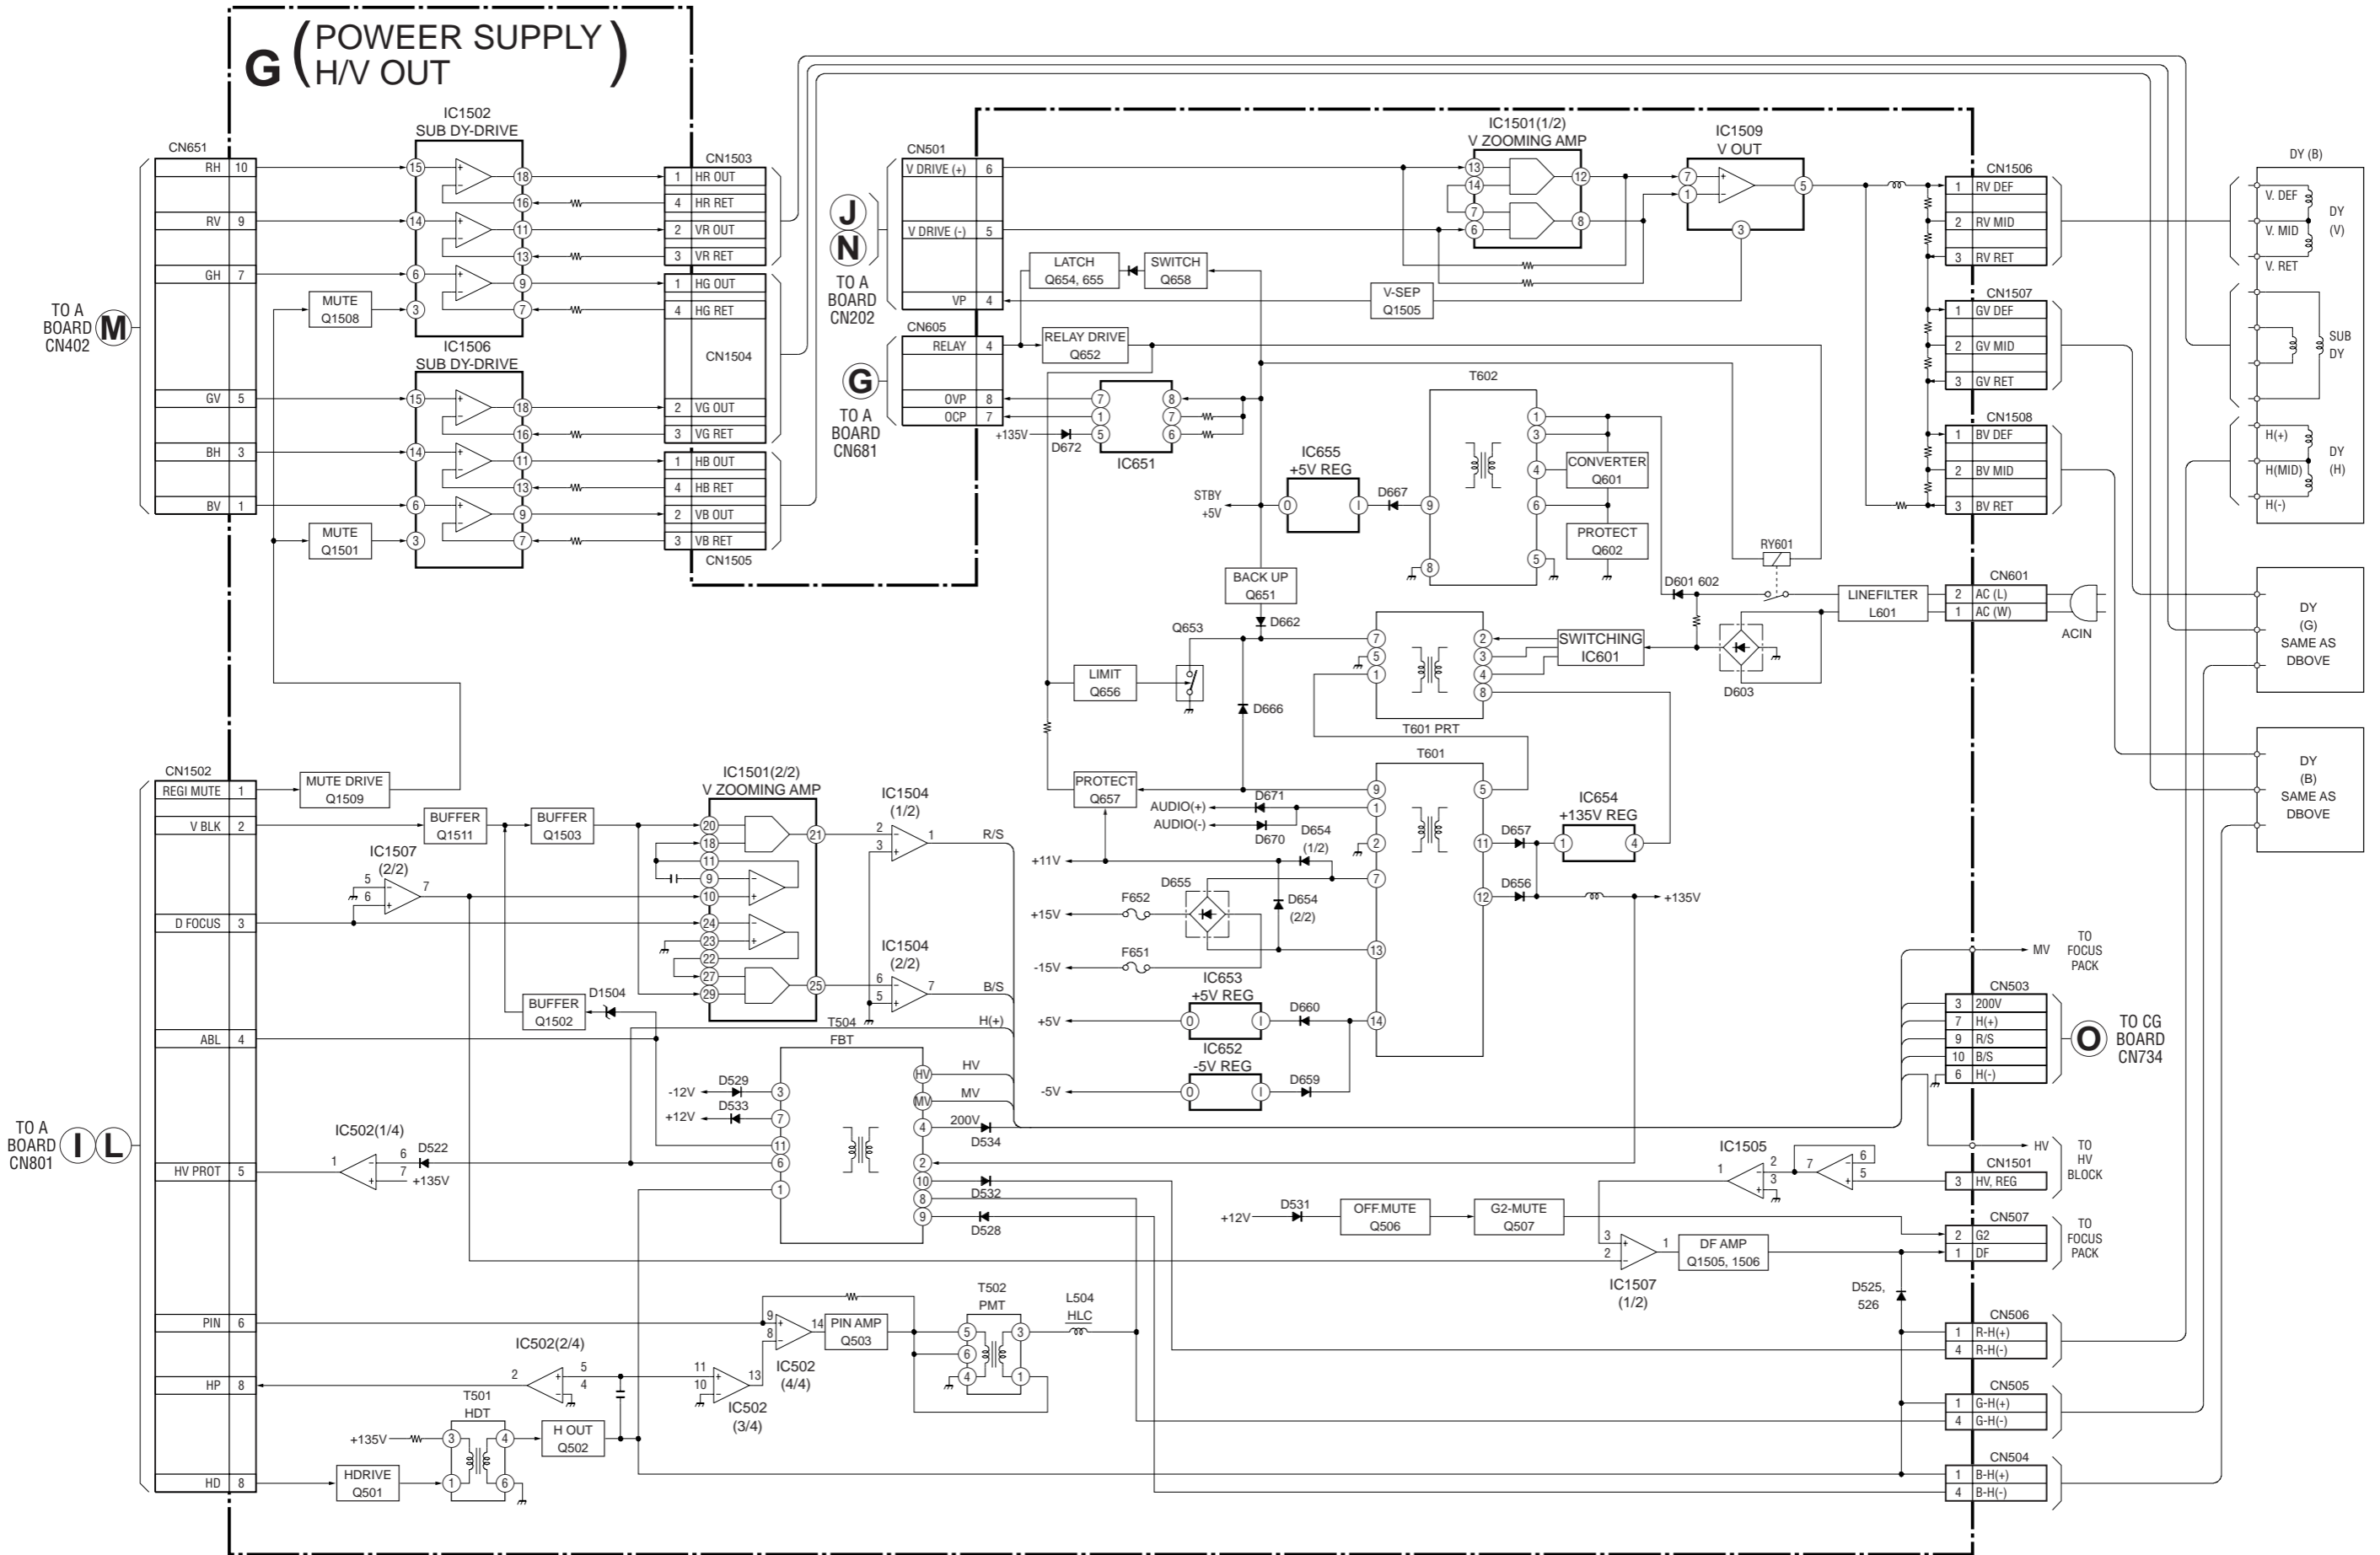

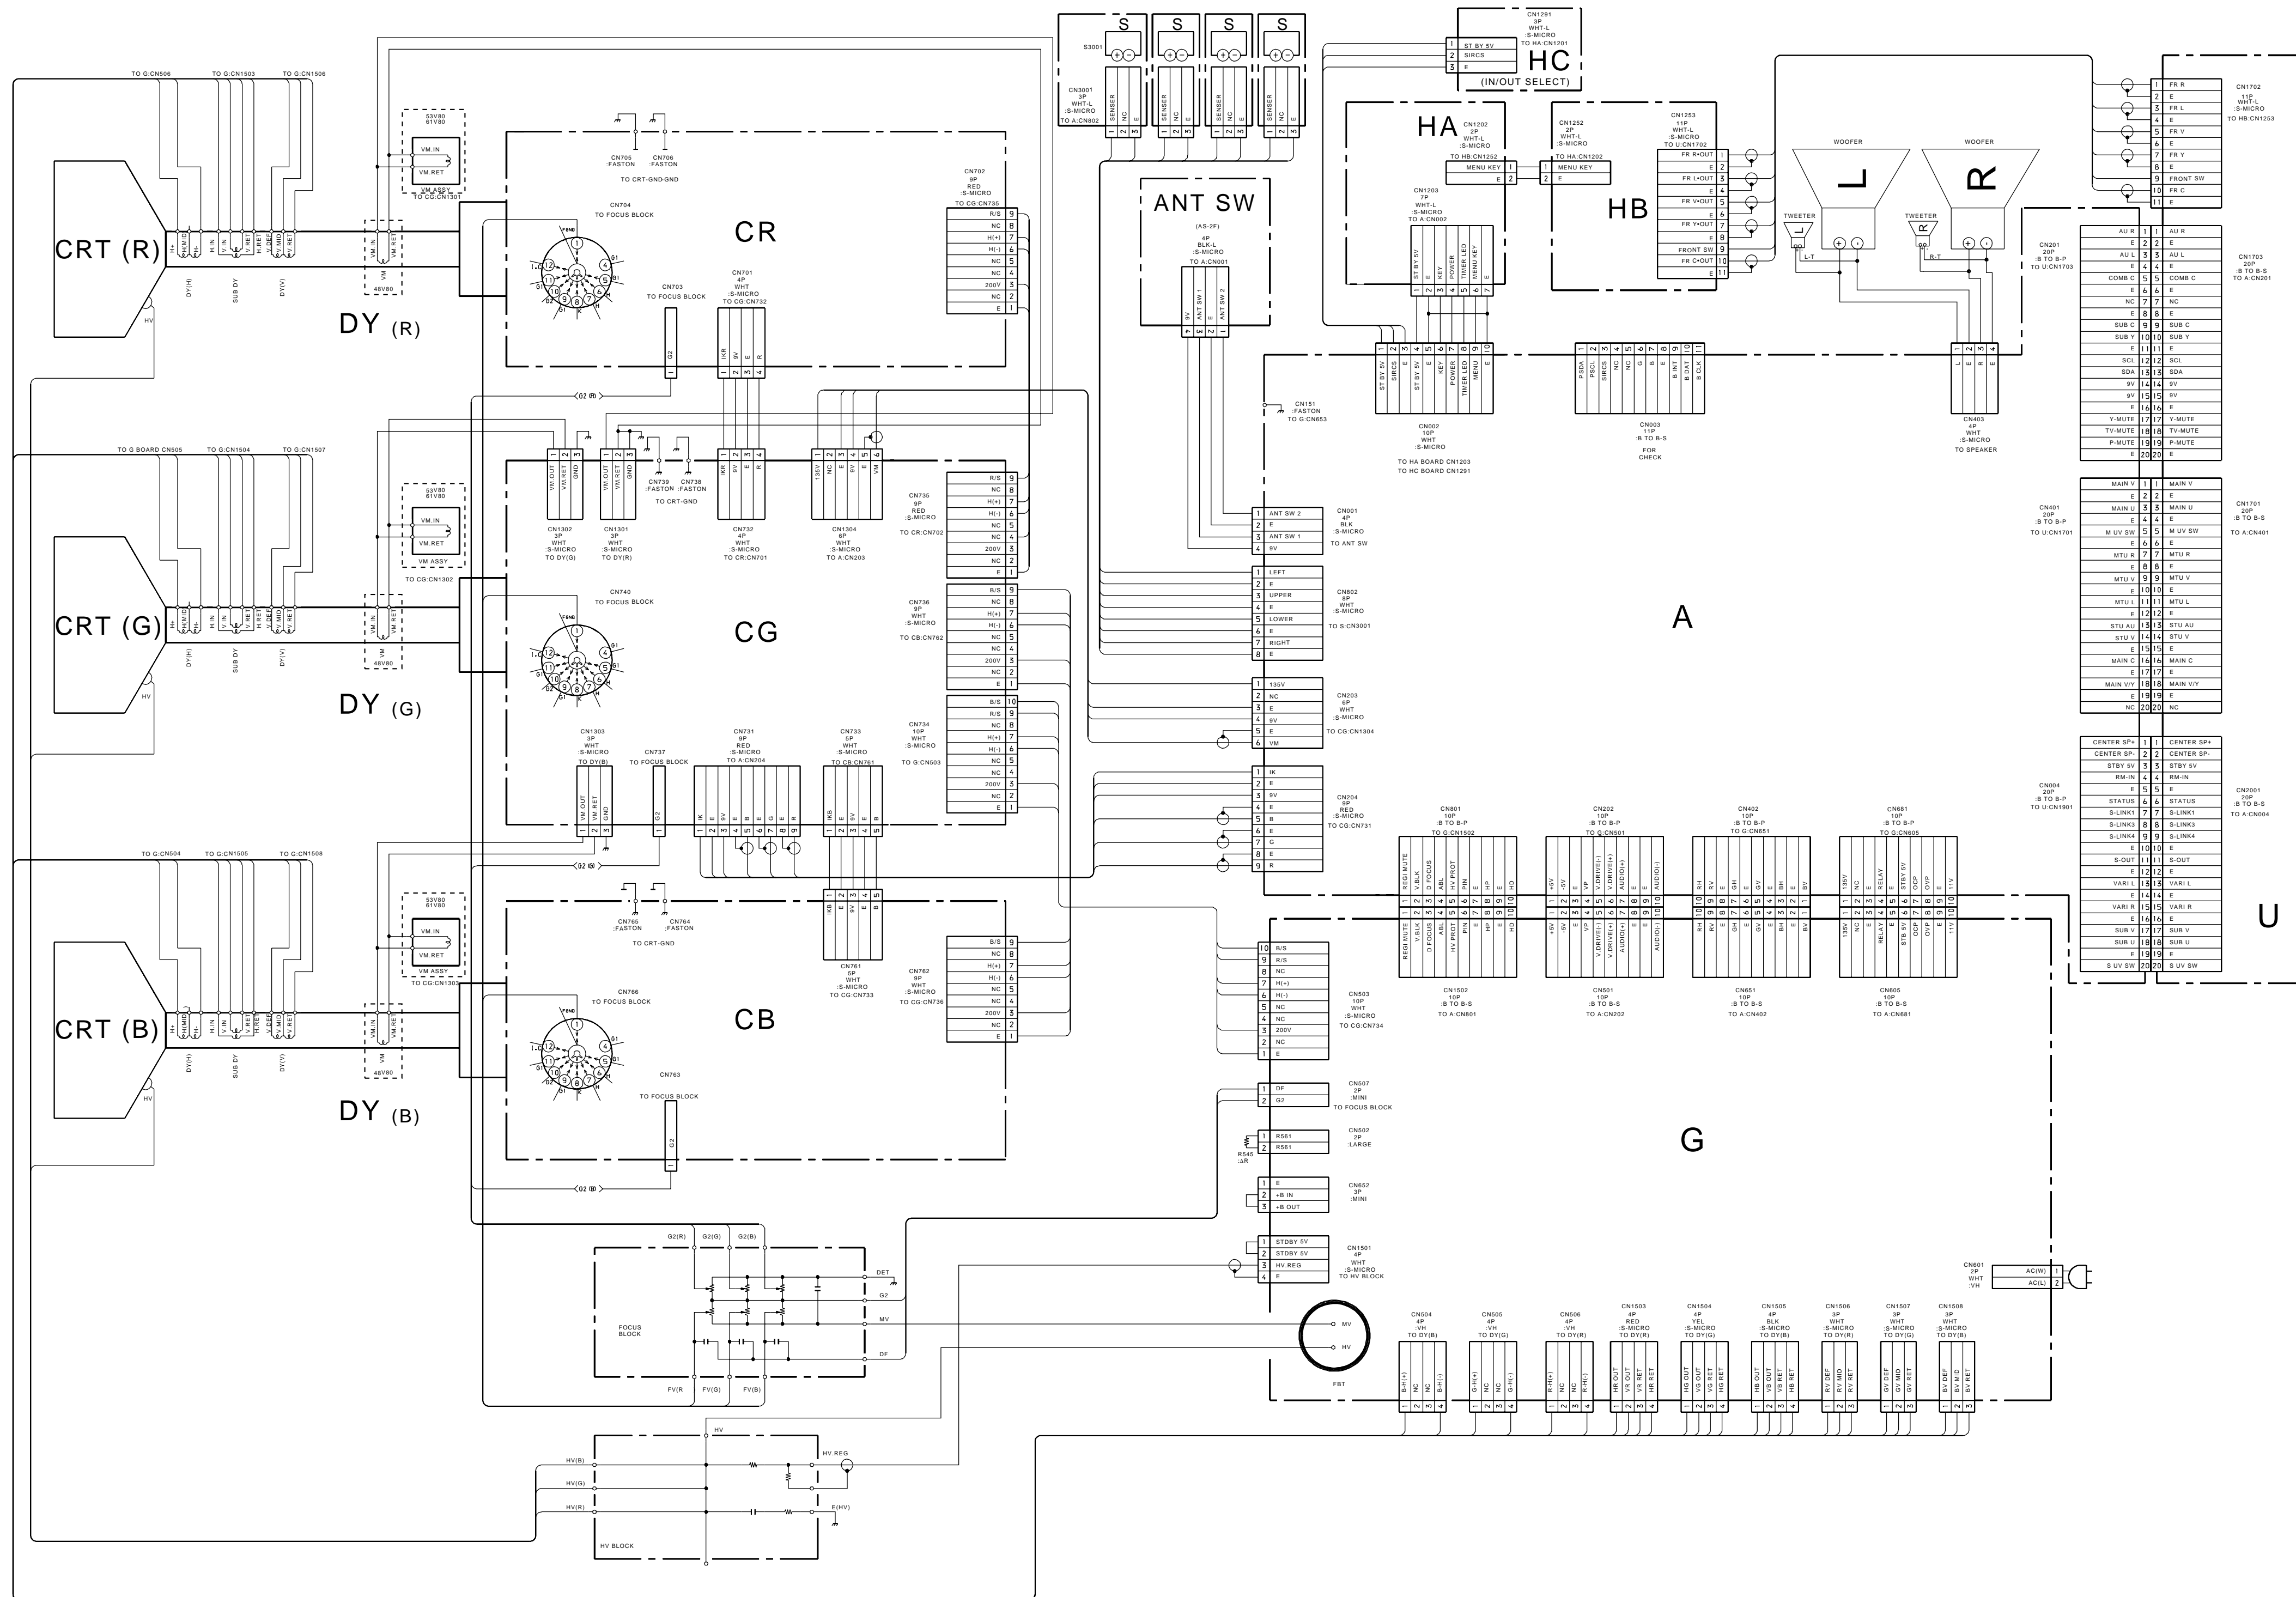

6-3. CIRCUIT BOARDS LOCATION

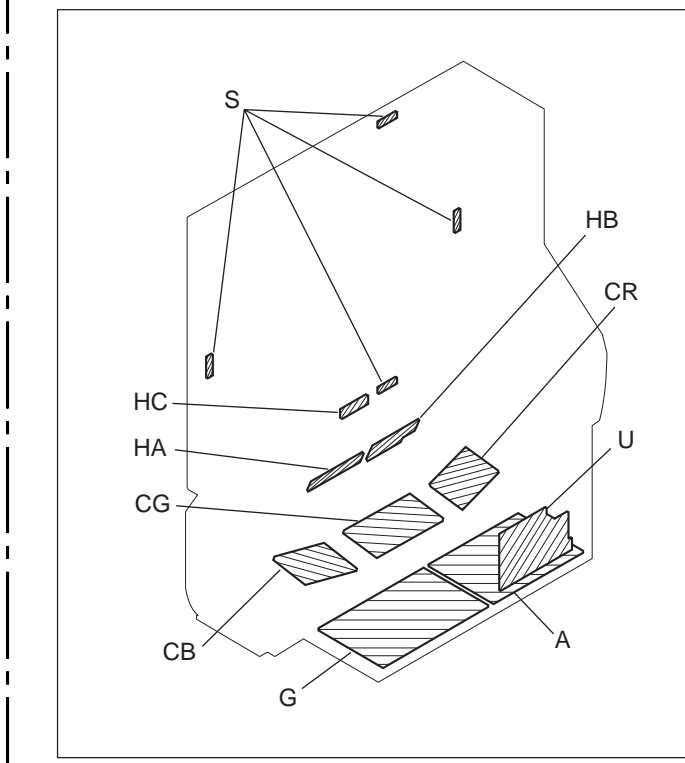

Note: The symbol display is on the component slide. The components identified by shading and mark are critical for safety. Replace only with part number specified. The symbol indicate fast operating fuse. Replace only with fuse of same rating as marked.

Note: Les composants identifiés par un tramé et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié. Le symbole indique une fusible à action rapide. Doit être remplacé par une fusible de même valeur, comme maque.

6-4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note:  
 • Capacitors without voltage indication are all 50V.  
 • All resistors are in ohms.  
 • Indication of resistance, which does not have one for rating electrical power, is as follows:  
 □ Flitch : 5mm  
 Rating electrical power : 1/4 W  
 □ : nonflammable resistor.  
 □ : fusible resistor.  
 □ : internal component.  
 □ : panel designation and adjustment for repair.  
 □ : All variable and adjustable resistors have characteristic curve B, unless otherwise noted.  
 □ : earth-chassis.  
 • The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation.  
 Should replacement be required, replace only with the value originally used.  
 • When replacing components identified by , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved. (Refer to R536, R545 and C517 adjustment on Page 51 - 52.)  
 • When replacing the part in below table, be sure to perform the related adjustment.

Part replaced (  )	Adjustment (  )
C517, C521, C522, IC654, L504, T502, T504, DY, A board, G board	HV Regulator (C517)
C516, C536, D506, D507, D522, IC206, IC502, IC654, L504, R511, R522, R536, R538, R545, R548, R584, T502, T504, DY, A board, G board	HV HOLD-DOWN (R536, R545)




• Readings are taken with a color-bar signal input.  
 • Readings are taken with a 10M $\Omega$  digital multimeter.  
 • Voltages are dc with respect to ground unless otherwise noted.  
 • Voltage variations may be noted due to normal production tolerances.  
 • All voltages are in V.  
 • □ : Measurement impossibility.  
 • Circled numbers are waveform references.  
 • : B+ bus.  
 • : B- bus.  
 • : signal path.(RF)

Reference information  
 RESISTOR : RN METAL FILM  
 : RC SOLID  
 : FPRD NONFLAMMABLE CARBON  
 : FUSE NONFLAMMABLE FUSIBLE  
 : RW NONFLAMMABLE WIREWOUND  
 : RS NONFLAMMABLE METAL OXIDE  
 : RS NONFLAMMABLE CEMENT  
 :  $\Sigma$  ADJUSTMENT RESISTOR  
 : LF- $\Sigma$ L MICRO INDUCTOR  
 COIL  
 CAPACITOR : TA TANTALUM  
 : PS STYROL  
 : PP POLYPROPYLENE  
 : PT MYLAR  
 : MFS METALIZED POLYESTER  
 : MPP METALIZED POLYPROPYLENE  
 : ALB BIPOLAR  
 : ALT HIGH TEMPERATURE  
 : ALR HIGH RIPPLE

Terminal name of semiconductors in silk screen printed circuit ( \* )

Device	Printed symbol	Terminal name	Circuit
① Transistor		Collector Base Emitter	
② Transistor		Collector Base Emitter	
③ Diode		Cathode Anode	
④ Diode		Cathode Anode (NC)	
⑤ Diode		Cathode Anode (NC)	
⑥ Diode		Common Emitter Anode Cathode	
⑦ Diode		Common Emitter Anode Cathode	
⑧ Diode		Common Emitter Anode Anode	
⑨ Diode		Common Emitter Cathode Cathode	
⑩ Diode		Common Emitter Cathode Cathode	
⑪ Transistor (FET)		Source Gate Drain	
⑫ Transistor (FET)		Source Gate Drain	
⑬ Transistor (FET)		Emitter Collector Base	
⑭ Transistor		C1B1E1 E1B1C1 C1B1C2 E1B1C2	
⑮ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
⑯ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
⑰ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
⑱ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
⑲ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
⑳ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉑ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉒ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉓ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉔ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉕ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉖ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉗ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉘ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉙ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉚ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉛ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉜ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉝ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉞ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㉟ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊱ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊲ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊳ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊴ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊵ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊶ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊷ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊸ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊹ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊺ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊻ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊼ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊽ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊾ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	
㊿ Transistor		C1B1E2 E1B1C2 C1B1C2 E1B1C2	



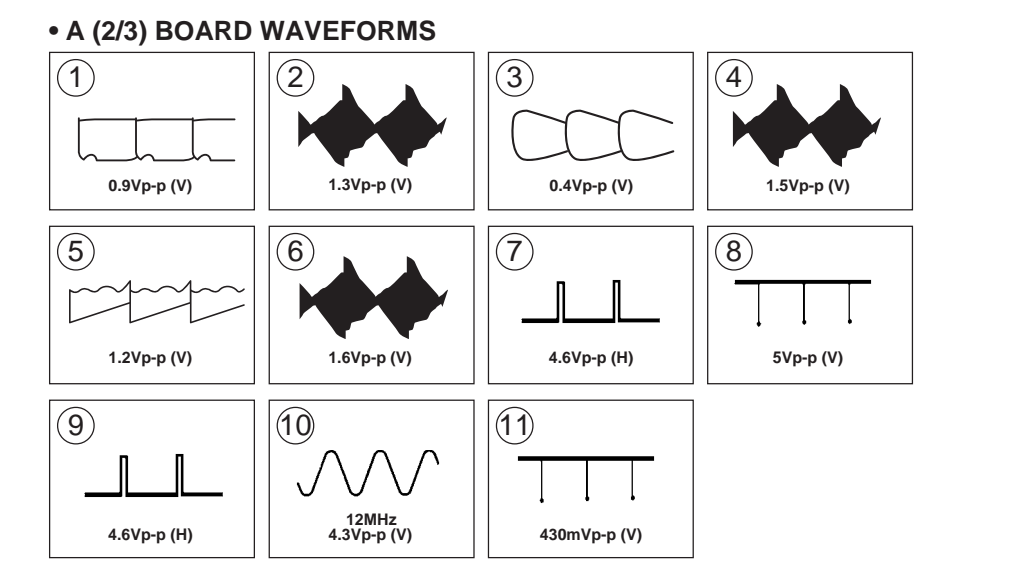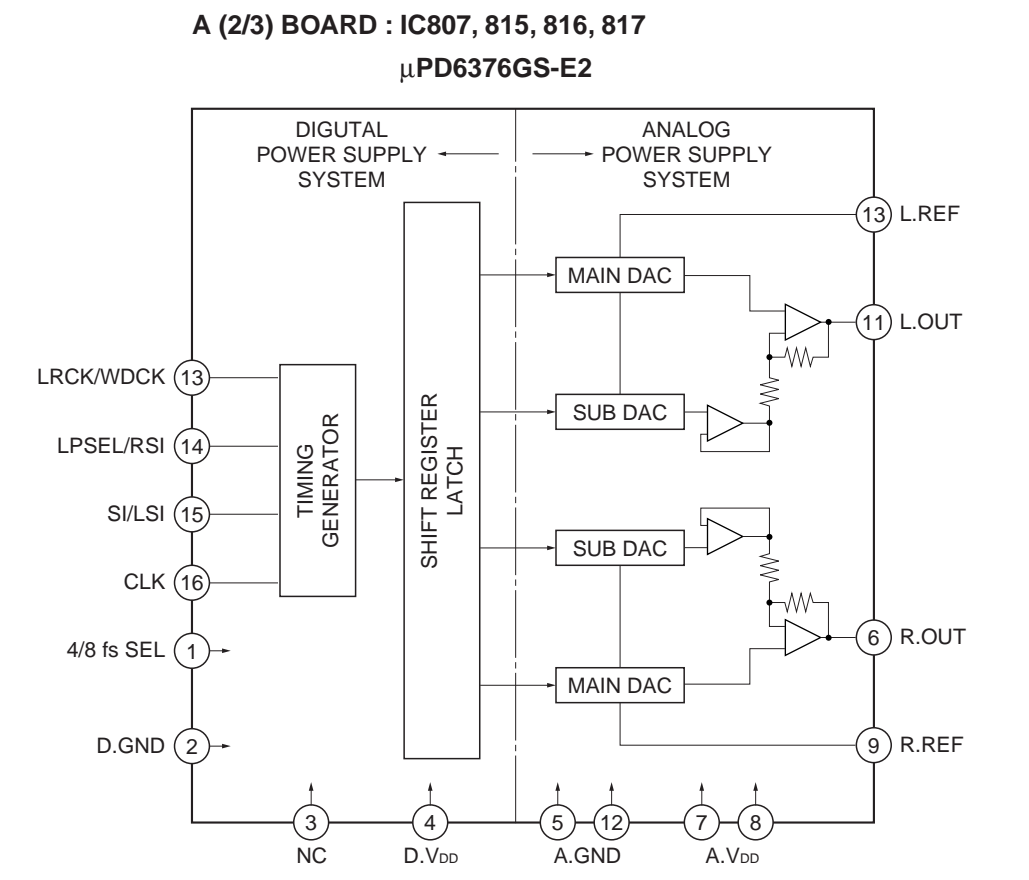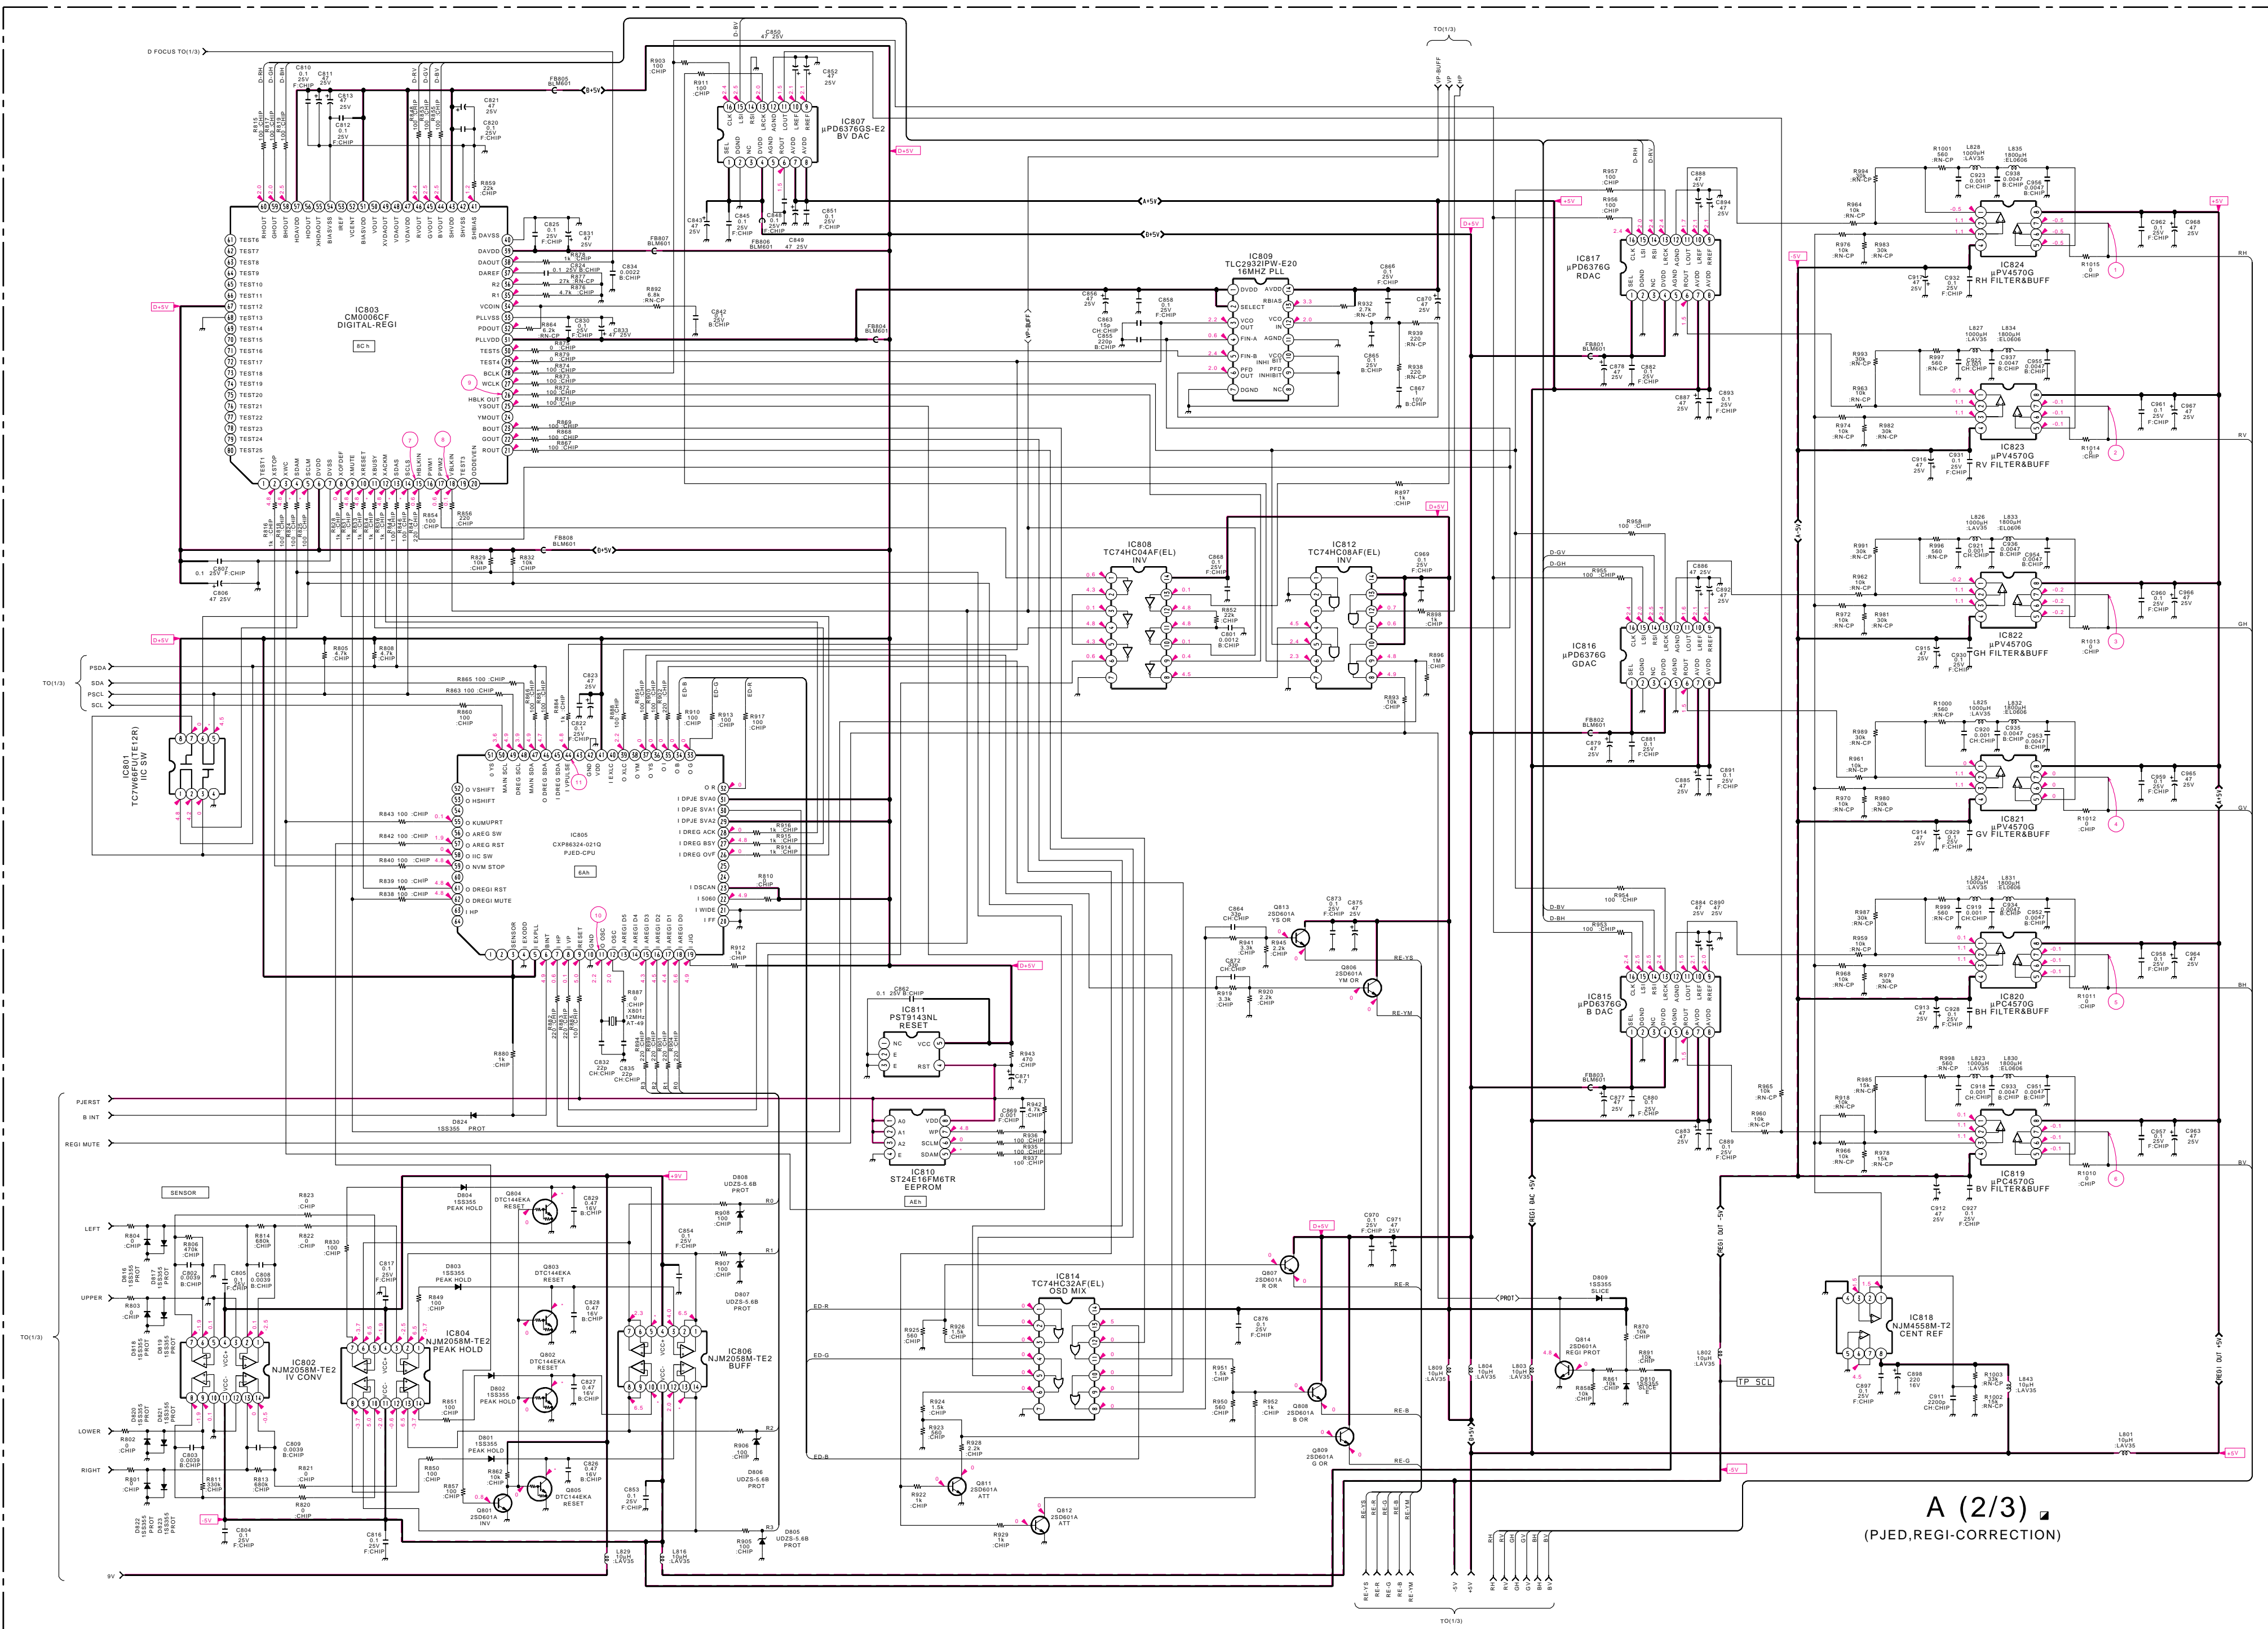

**A (2/3)**  
 (PJED,REGI-CORRECTION)











- G Board -

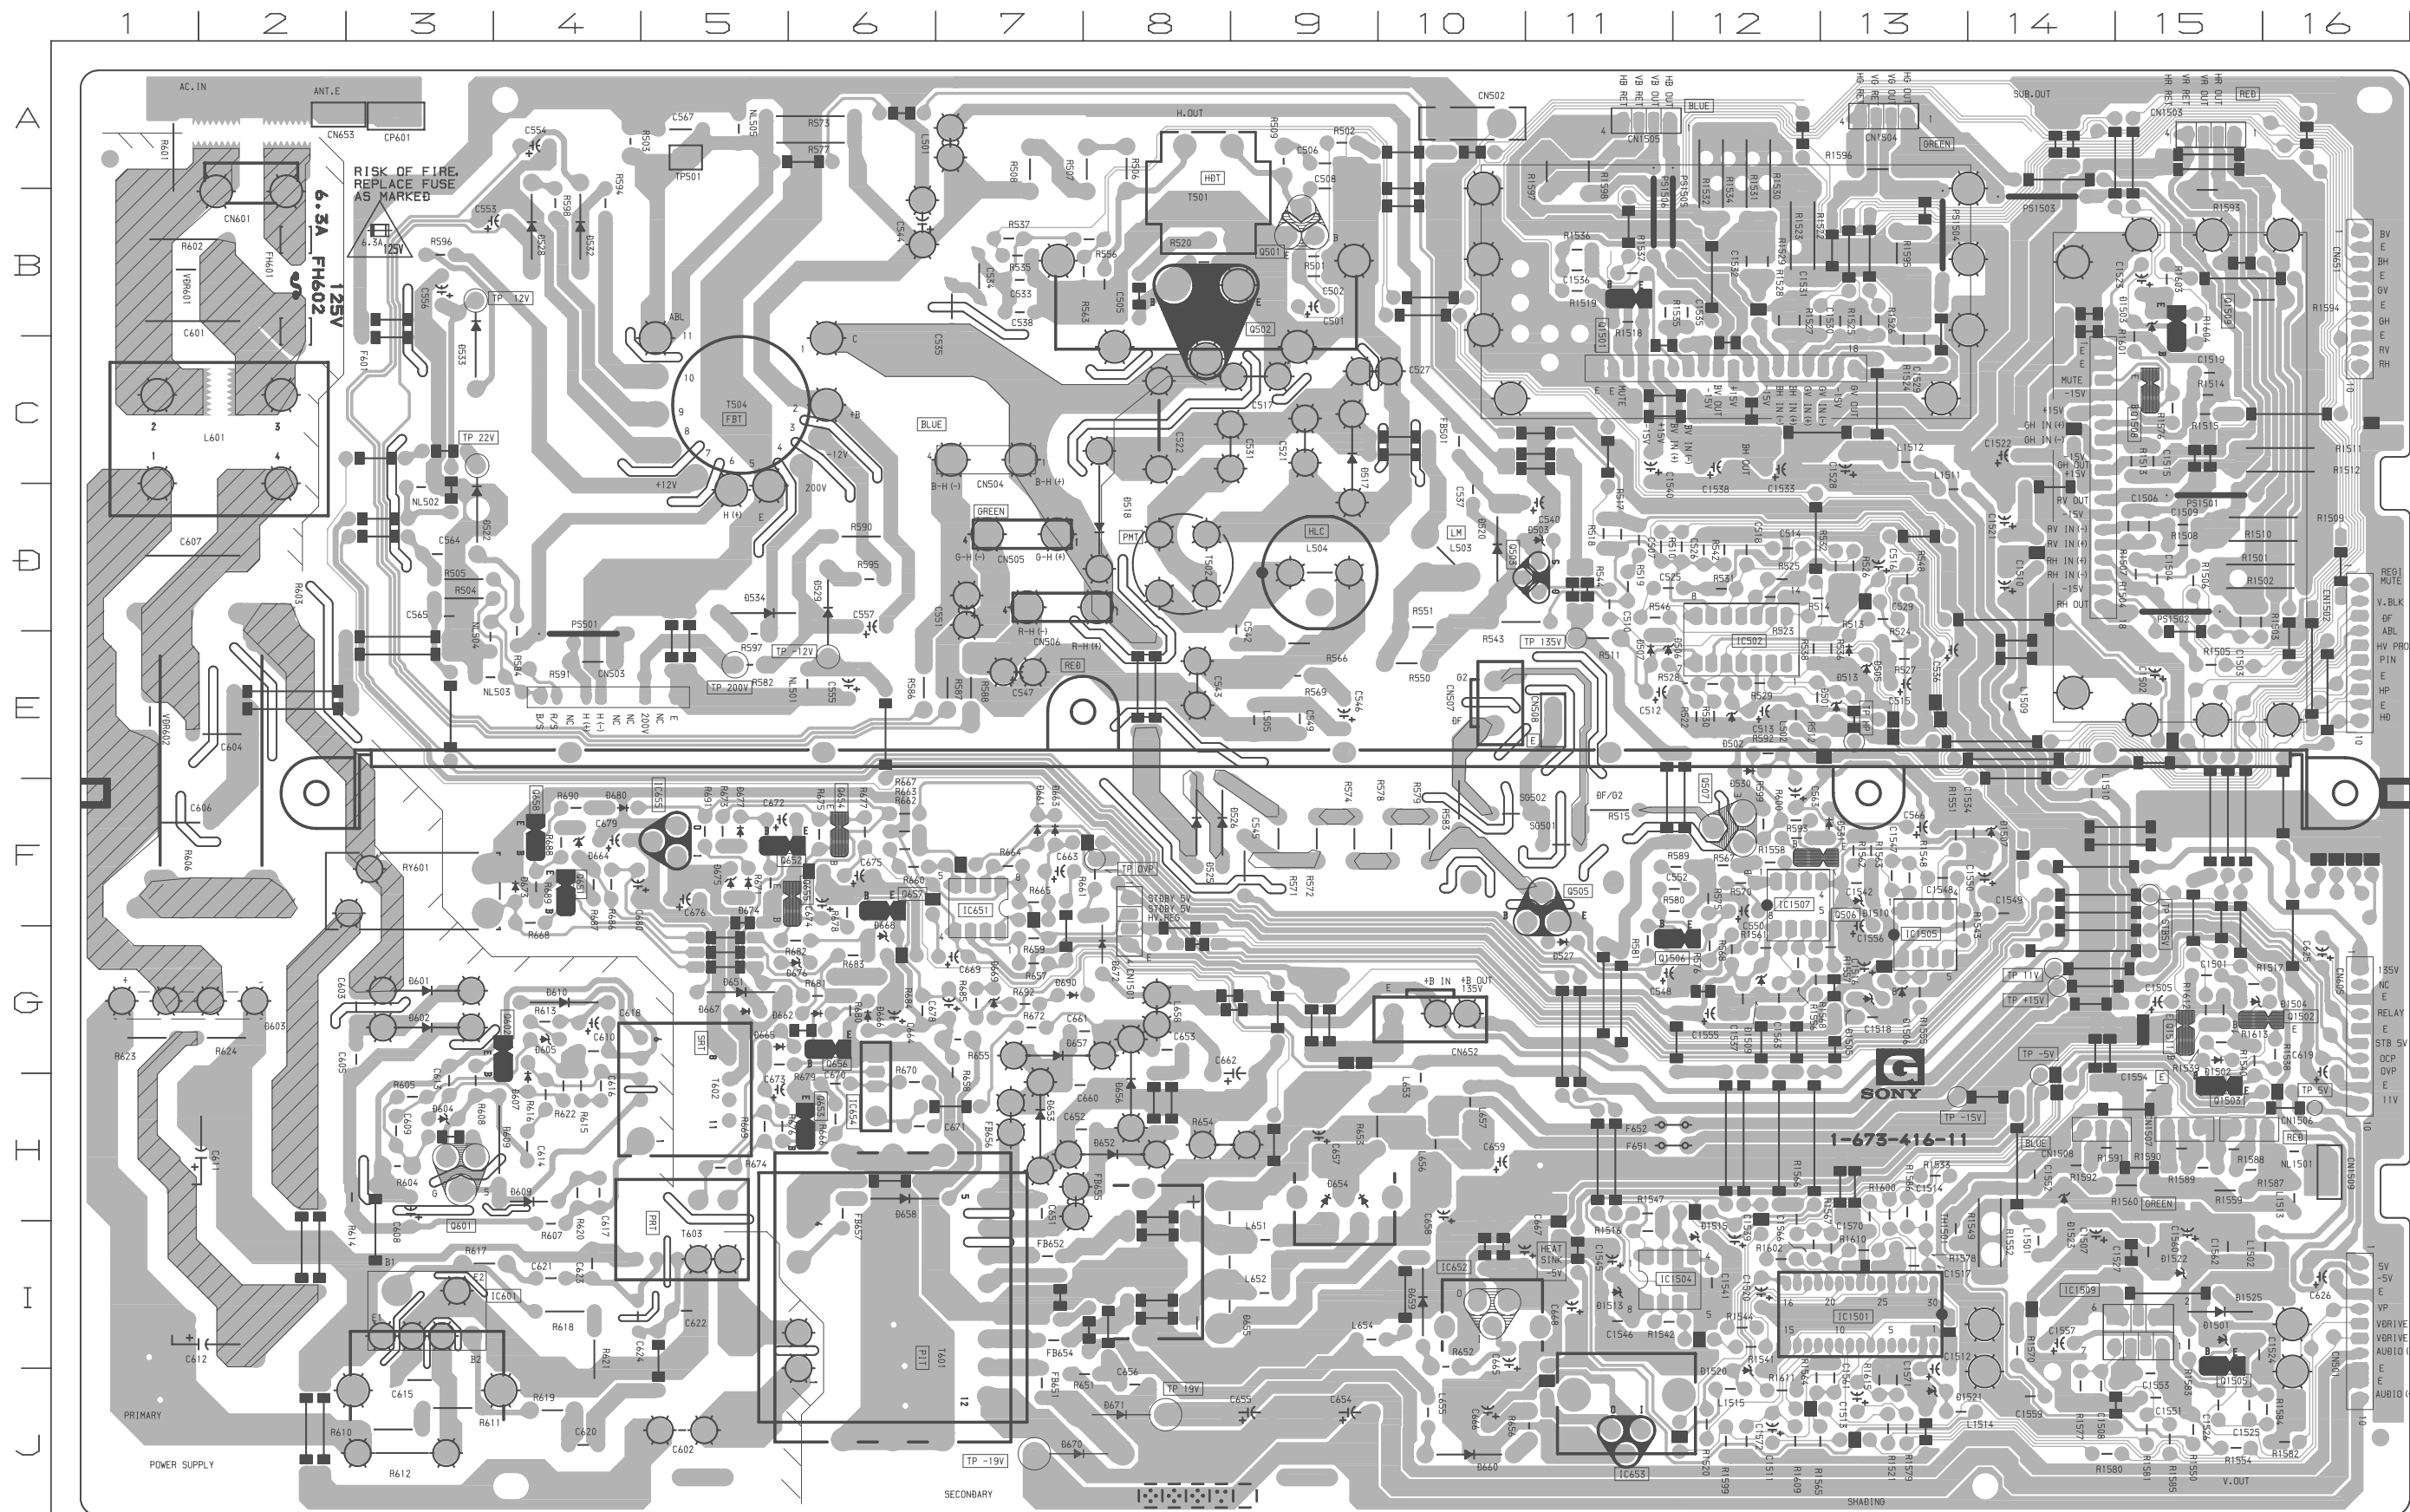


**G BOARD**

DIODE		D1503	B-15
D501	E-13	D1504	G-15
D505	E-13	D1505	G-13
D506	E-11	D1506	G-13
D507	E-11	D1507	F-14
D513	E-13	D1509	G-12
D517	C-9	D1510	F-13
D518	D-8	D1513	I-11
D520	D-10	D1515	I-12
D522	D-3	D1520	J-12
D525	F-8	D1521	J-13
D526	F-8	D1522	I-15
D528	B-4	D1523	H-14
D529	D-6	D1525	I-15
D530	E-12	TRANSISTOR	
D531	F-13	Q501	B-9
D532	B-4	Q502	B-8
D533	B-6	Q503	D-11
D534	D-5	Q505	F-11
D601	G-3	Q506	F-12
D602	G-3	Q507	F-12
D603	G-2	Q601	H-3
D604	H-3	Q602	G-4
D605	G-4	Q651	F-4
D607	H-4	Q652	F-5
D609	H-4	Q653	H-6
D610	G-4	Q654	F-6
D651	G-5	Q655	F-5
D652	H-8	Q656	G-6
D653	H-7	Q657	F-6
D654	H-9	Q658	F-4
D655	I-8	Q1501	B-11
D656	H-8	Q1502	G-15
D657	G-7	Q1503	H-15
D658	H-6	Q1505	I-15
D659	I-10	Q1506	G-11
D660	J-10	Q1508	C-15
D661	F-7	Q1509	B-15
D662	G-6	Q1511	G-15
D663	F-7	IC	
D664	F-4	IC502	E-12
D665	G-5	IC601	I-3
D666	G-6	IC651	F-7
D667	G-5	IC652	I-10
D668	G-6	IC653	J-11
D669	G-7	IC654	H-6
D670	J-7	IC655	F-5
D671	J-8	IC1501	I-13
D673	F-4	IC1502	D-14
D674	F-5	IC1504	I-11
D675	F-5	IC1505	G-13
D676	G-6	IC1506	C-12
D677	F-5	IC1507	F-12
D680	I-15	IC1509	I-15




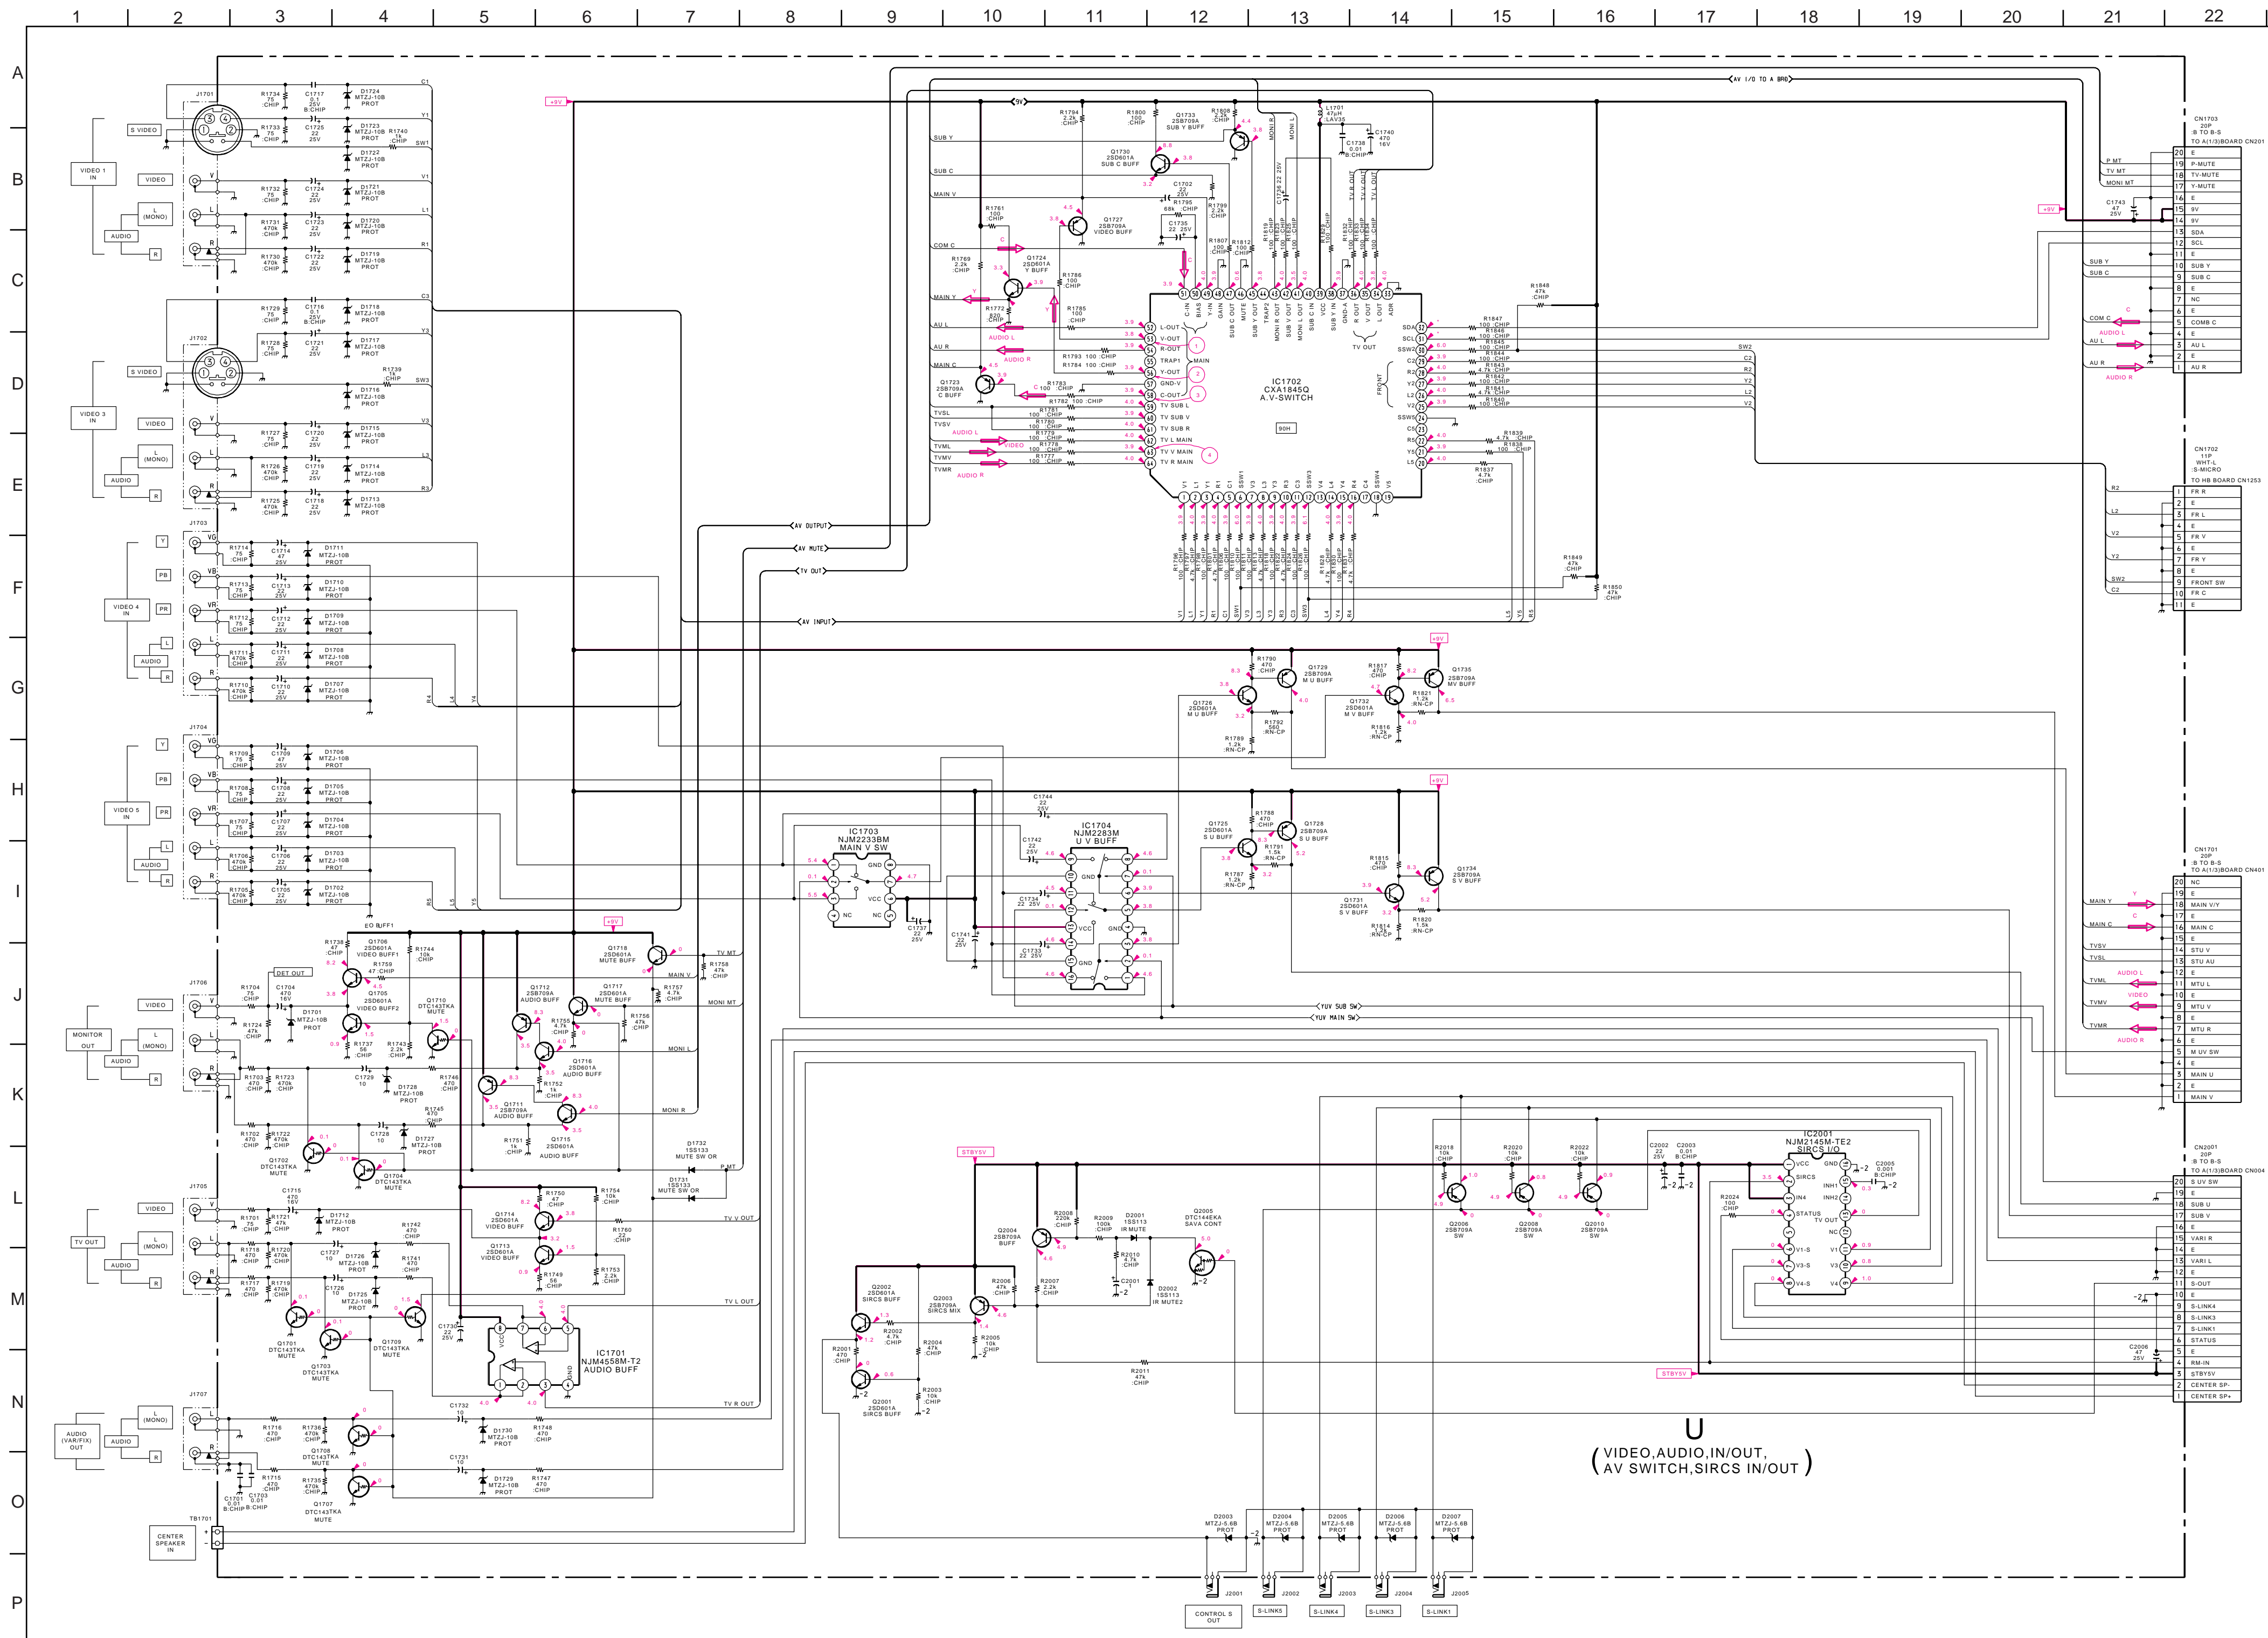


**U BOARD : IC1702 CXA1845Q**






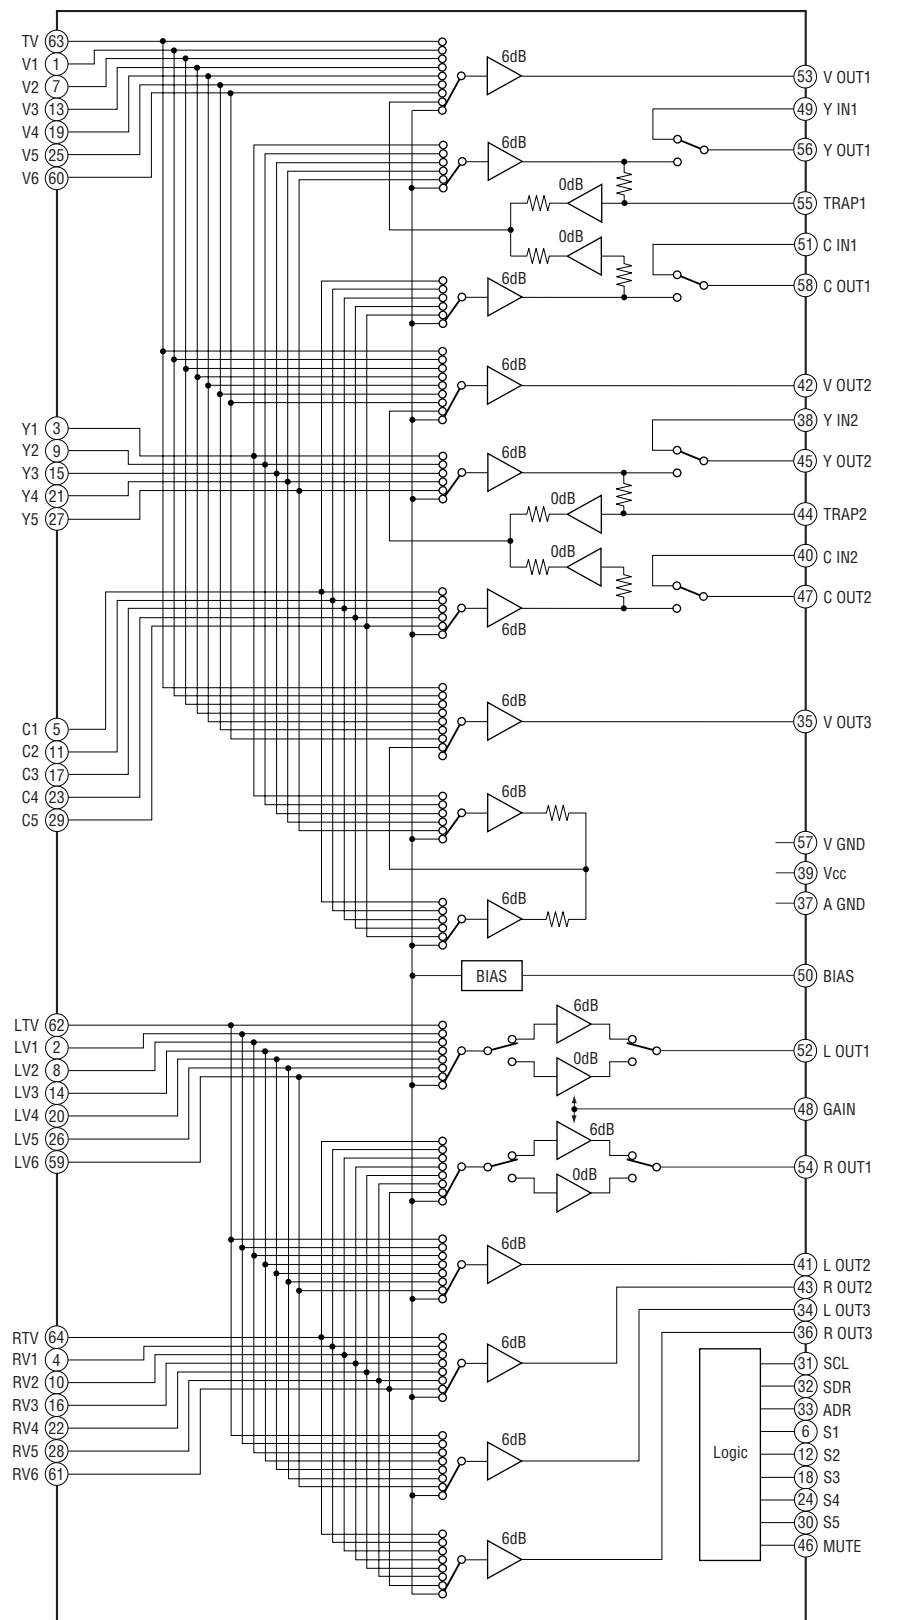



**U BOARD WAVEFORMS**

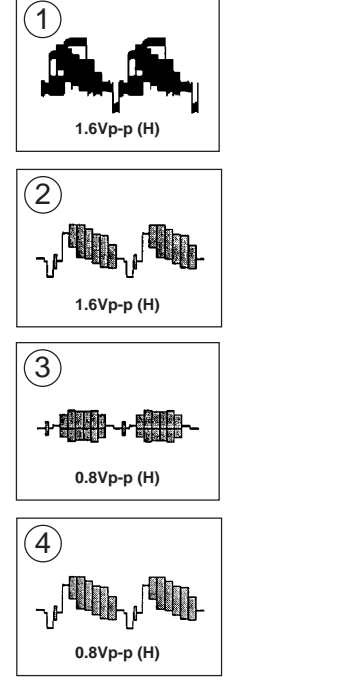

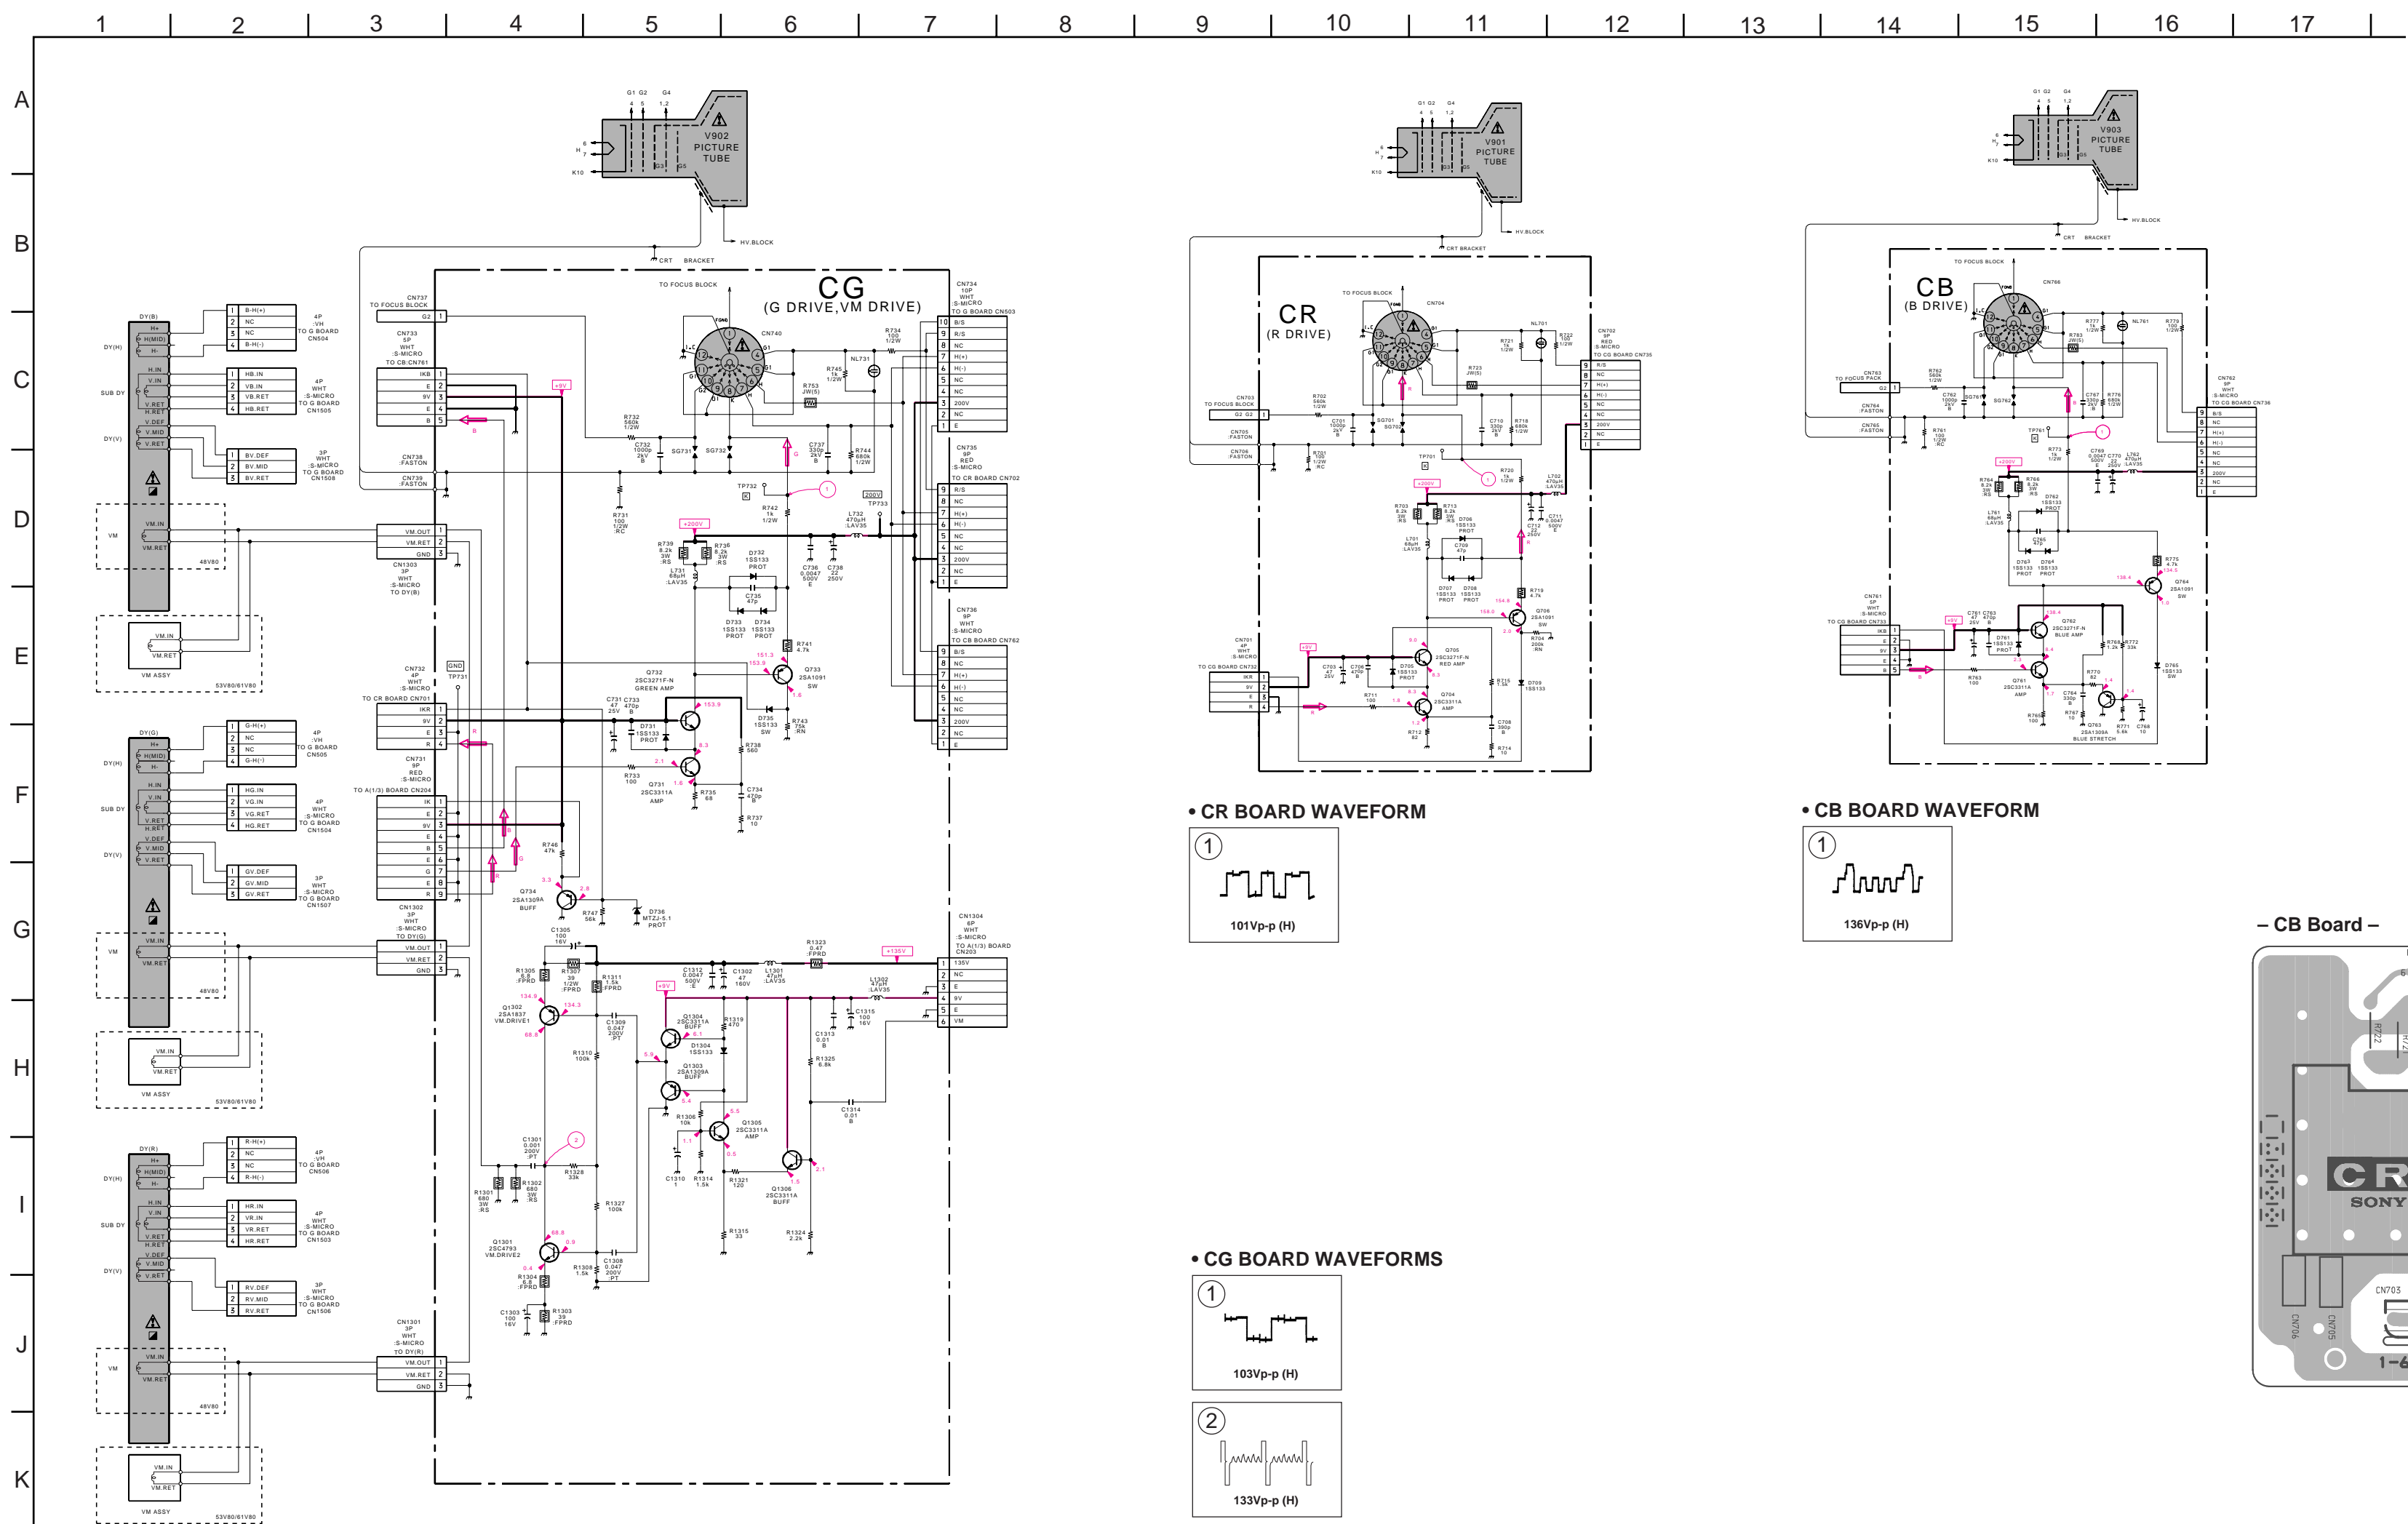


**CG** [G DRIVE, VM DRIVE]   **CR** [R DRIVE]   **CB** [B DRIVE]

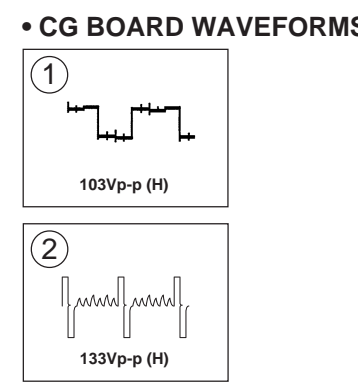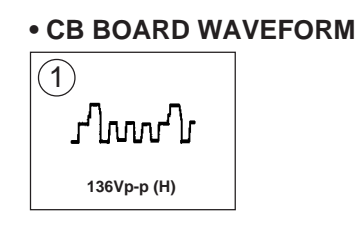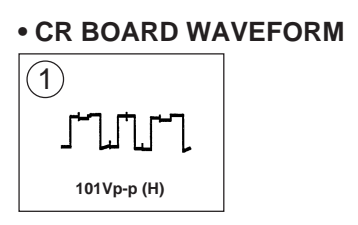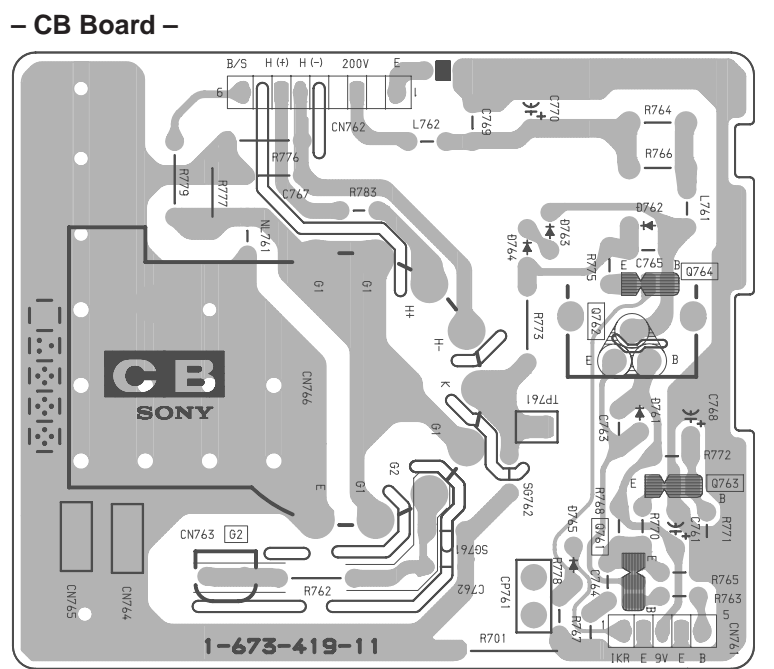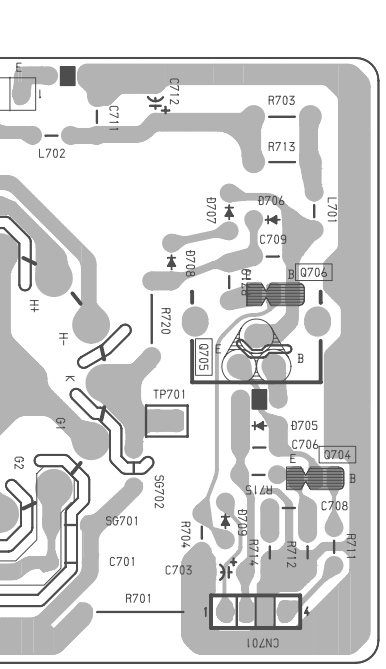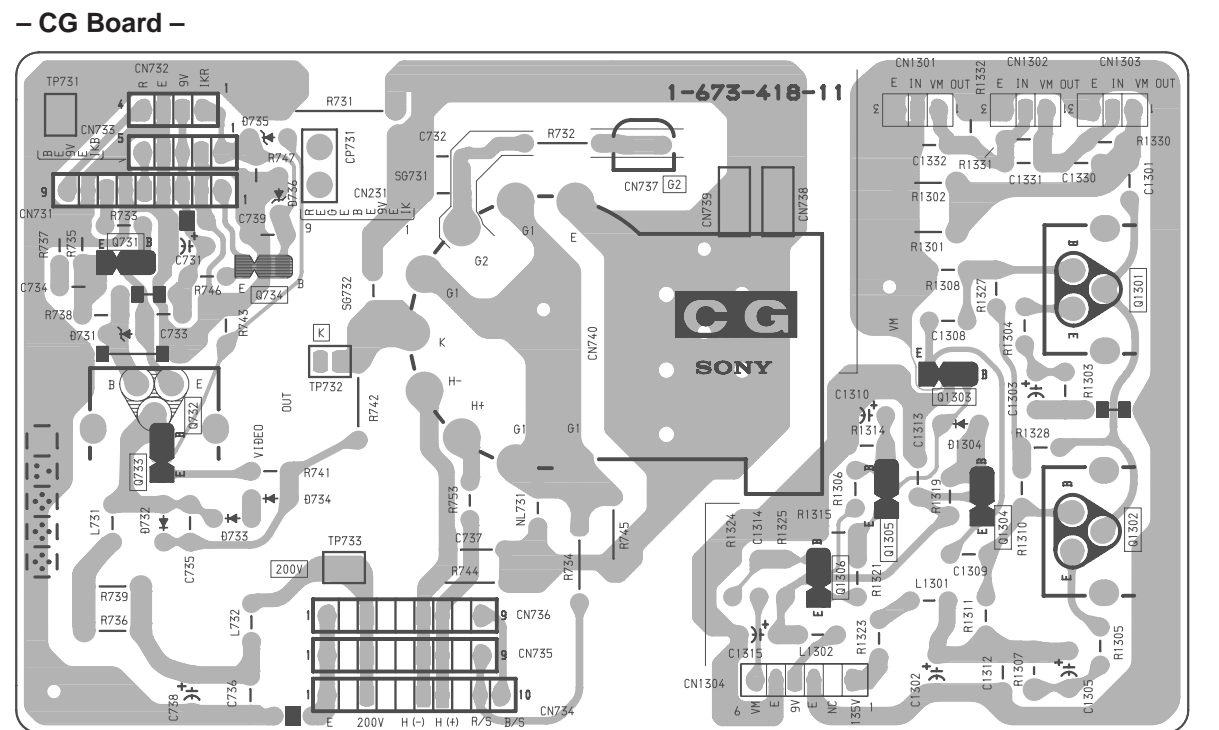

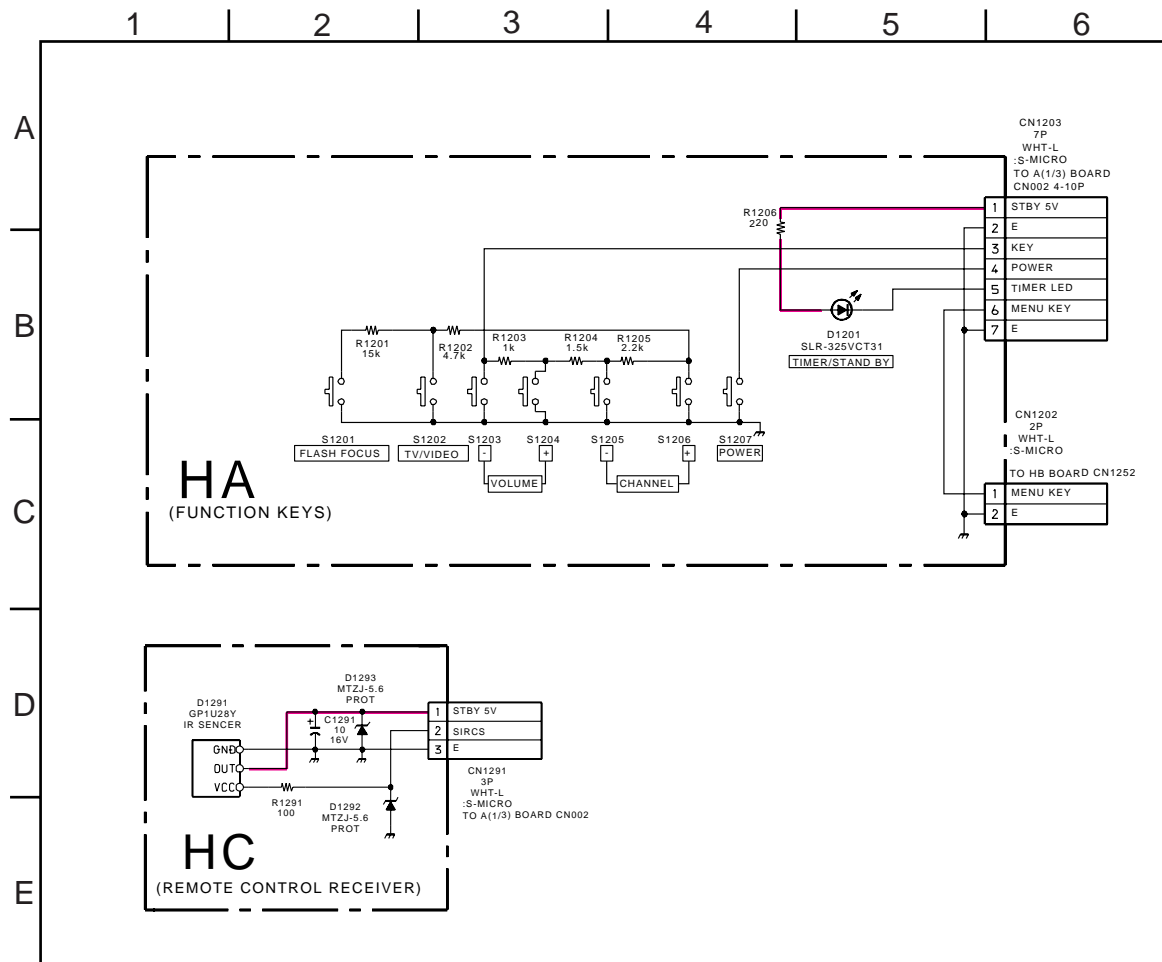


**HA** [ FUNCTION KEK ]      **HC** [ RIMOTE CONTROL RECEIVER ]

**- HA Board -**

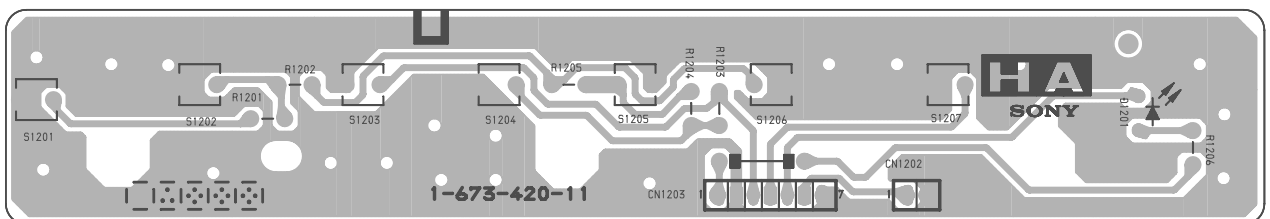

**- HC Board -**

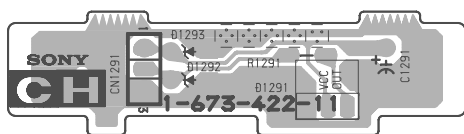







6-5. SEMICONDUCTORS

 BA05T



CXA2019AQ-T4

 


40pin

MSM514265C-60JSDR1




40pin

STK392-150

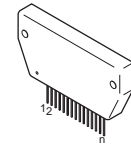


MARKING SIDE VIEW

 2SA1837  
 2SC4793  
 IRF614




BH3868FS-E2

 


32pin

 CXA2039M-T6




24pin

 NJM2283M-TE1




16pin

 TC528257J-80(EL)




40pin

 2SC2611  
 2SC2688-(5)LK




 BU4053BCF-T2  
 CXA1315M  
 NJM2145M-TE2  
 SN74HC153ANS  
 UPD6376GS-E2




16pin

 DM-58




MARKING SIDE VIEW  
 • pin 1 ~ N  
 • Mt (one side, both side)

 
NJM7805FA



NJM7905FA

 


TDA7265

 


11pin

 
2SA1162-G  
 2SD601A-Q  
 DTA144EKA-T146  
 DTC143TKA-T146



LA78045

 


UPC2933T-E2

 


OUTPUT  
 VDD  
 VSS

 2SA1175-HFE  
 2SC2785-HFE




CM0006CF

 


80pin

 M24C08-MN6T  
 NJM2533M(TE2)  
 ST24E16FM6TR  
 TC7W66FU(TE12R)  
 UPC4558G2  
 UPC4570G2




8pin

 PQ09RD11



PST9143NL

 


5pin

UPC339C




14pin

 UPC659AGS-E2



24pin

 2SC5022-02



CXA1726AS



 
30pin

M5218AP  
 UPC393C




8pin

Z8613012SSC-00TR




18pin

CXA1845Q  
 CXA2147Q  
 CXP750010-009Q  
 CXP86324-021Q

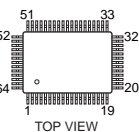


 MC74HC04AF  
 MC74HC32AF  
 NJM2058M-TE2  
 TC74HC08AF(EL)  
 TLC2932IPW




14pin

SAB9076H/N4  
 TC9447F-003  
 UPD64081BGF-3BA

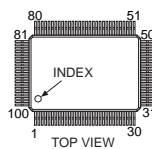


TOP VIEW

 
2SA1091-O




2SD2144S-UVW  
 2SD2144S-V

 

**2SD2578-RF**


 


**D4SBS4-F**

 



**D1NL20U**

  **2SK2663**




**D1NS6**  
**EGP20G**  
**EL1Z**  
**GP08D**  
**RGP02-20EL-6394**

 **1SS355TE-17**  
**DTZ10B**  
**DTZ33B**  
**DTZ4.7C**  
**UDZ-TE-17-22B**  
**UDZS-TE17-5.6B**

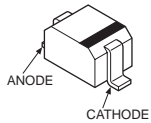



**D3S6M-F**  
**ERA22-08**  
**ERC04-06SE**  
**ERC06-15S**

 **D1N20R**  
**D2L20U**  
**MTZJ-10B**  
**MTZJ-13**  
**MTZJ-2.7A**  
**MTZJ-4.7C**  
**MTZJ-7.5B**  
**MTZJ-T-77-24**  
**MTZJ-T-77-5.6B**  
**RD10ES-B2**  
**RD15ES-B2**  
**RD18ESB2**  
**RD24ES-B1**  
**RD3.9ES-B2**  
**RD5.1ES-B1**  
**RD5.1ESB2**  
**RD5.6ES-B2**  
**RD6.2ESB2**  
**RD8.2ES-B2**



**SLR-325VCT31**

 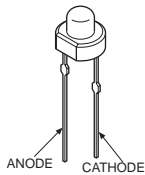

## SECTION 7 EXPLODED VIEWS

**NOTE:**

- Items with no part number and no description are not stocked because they are seldom required for routine service
- The construction parts of an assembled part are indicated with a collation number in the remark column.


- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark  $\blacktriangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque  $\blacktriangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

**7-1. COVER (KP-48V80)**


- : +BVTP 3X12 7-685-648-79
- : +BVTP 4X12 7-685-661-14
- ▲ : +BVTP 4X12 7-685-661-79
- : +BVTP 4X16 7-685-663-71

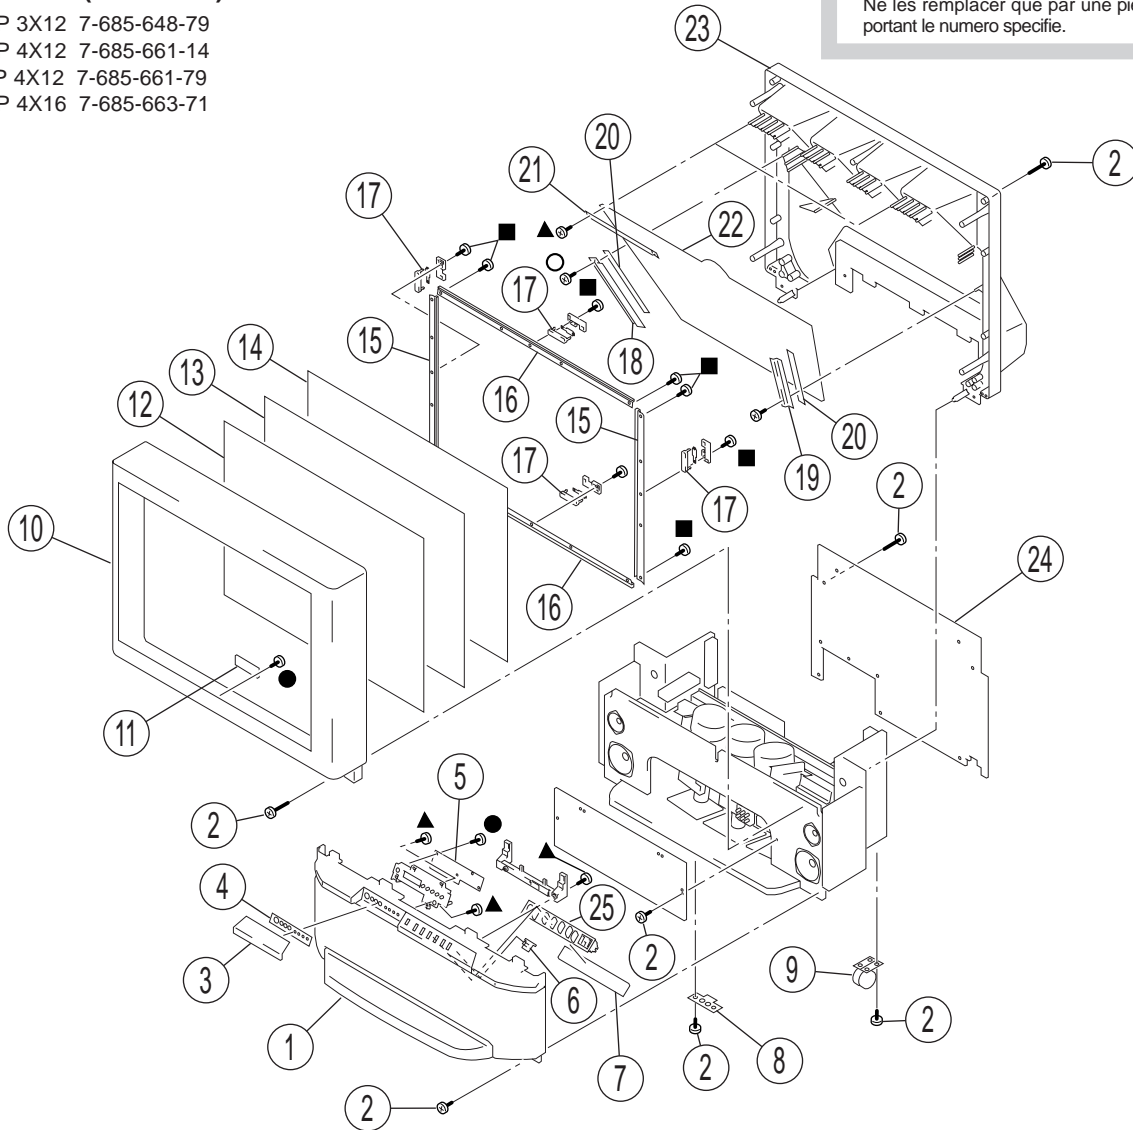

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	X-4036-837-1	GRILLE (48V) ASSY, SPEAKER		14	4-070-235-11	PLATE (L), DIFFUSION	
2	4-041-164-11	SCREW (4X20), TAPPING		15	* 4-070-336-11	HOLDER, SCREEN (YC)	
3	4-069-671-11	DOOR (V), CONTROL		16	* 4-070-336-41	HOLDER, SCREEN (YC)	
4	4-069-715-01	LABEL, CONTROL		17	* A-1390-933-A	S BOARD, COMPLETE	
5	* A-1372-620-A	HB BOARD, COMPLETE		18	* 4-051-790-02	HOLDER, MIRSD (L)	
6	4-069-682-01	GUIDE, LED		19	* 4-051-789-02	HOLDER, MIRSD (R)	
7	* A-1372-619-A	HA BOARD, COMPLETE		20	* 4-049-098-01	CUSHION	
8	4-048-175-01	FOOT, PLASTIC		21	* 4-070-345-21	HOLDER (TOP), MIRROR	
9	4-040-755-01	CASTER (DIA. 30)		22	4-071-048-01	MIRROR (48), REFLECTION	
10	X-4036-838-1	BEZNET ASSY (48V)		23	* 4-057-610-01	COVER, MIRROR	
11	* A-1372-618-A	HC BOARD, COMPLETE		24	* 4-071-126-01	BOARD, REAR (48)	(48V80)
12	4-064-651-11	SCREEN (48), CONTRAST		25	4-069-681-01	BUTTON, MULTI	
13	4-058-455-12	PLATE (F), DIFFUSION					

**7-2. COVER (KP-53V80/61V80)**

- : +BVTP 3X12 7-685-648-79
- : +BVTP 4X12 7-685-661-14
- ▲ : +BVTP 4X12 7-685-661-79
- : +BVTP 4X16 7-685-663-71

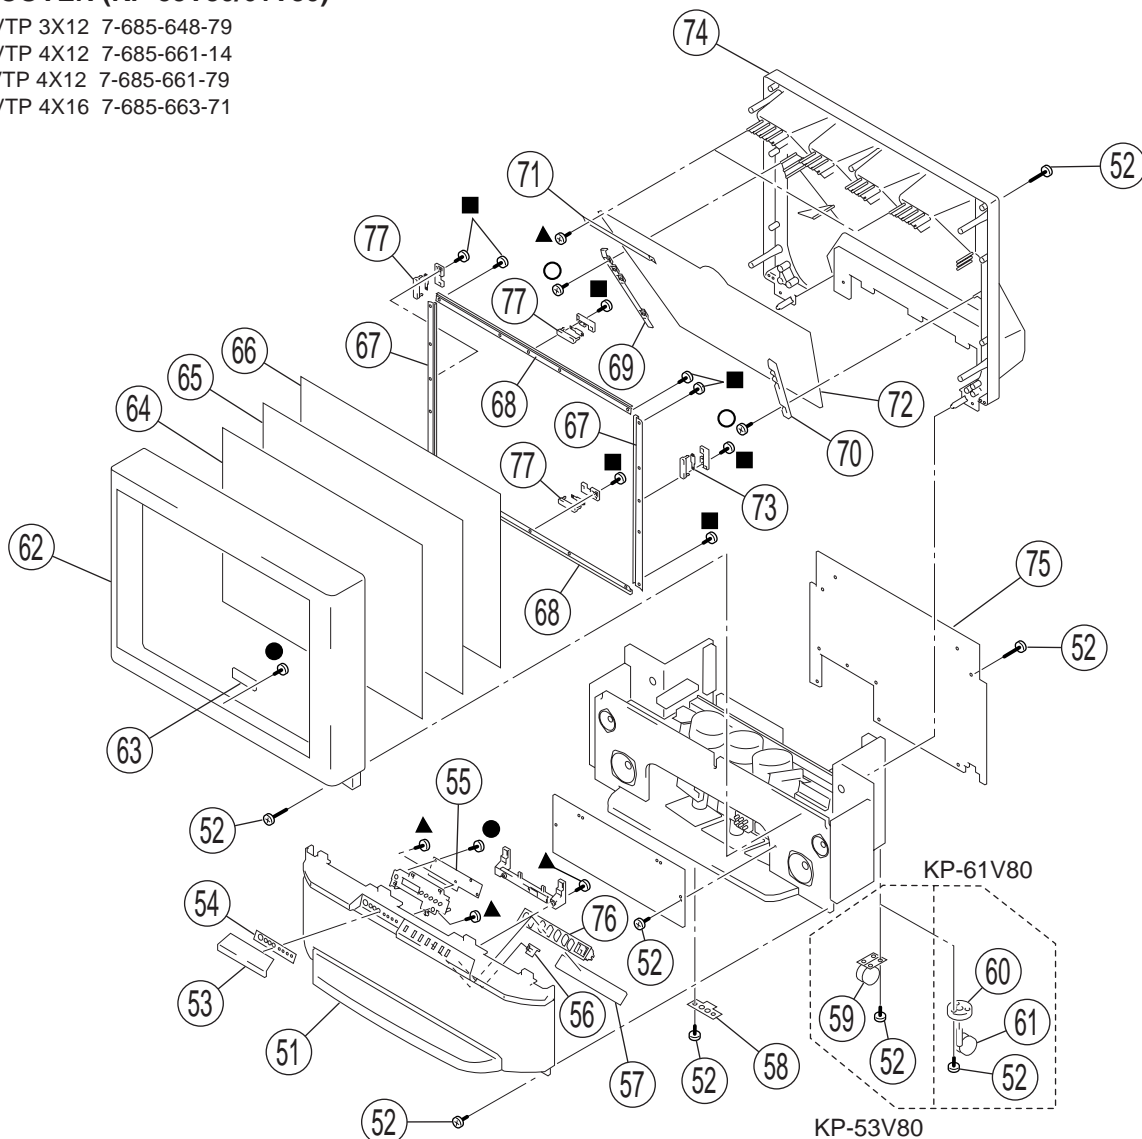


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
51	X-4036-806-1	GRILLE ASSY, SPEAKER	(61V80)	66	4-064-343-11	PLATE (L), DUFFUSION	(53V80)
	X-4036-808-1	GRILLE ASSY, SPAKER	(53V80)		4-070-283-11	PLATE (L), DIFFUSION	(61V80)
52	4-041-164-11	SCREW (4X20), TAPPING		67	* 4-070-330-01	HOLDER (S), SCREEN (YC)	(53V80)
53	4-069-671-11	DOOR (V), CONTROL			* 4-070-334-01	HOLDER (S), SCREEN (YC)	(61V80)
54	4-069-715-01	LABEL, CONTROL		68	* 4-070-328-11	HOLDER (L), SCREEN (YC)	(53V80)
55	* A-1372-620-A	HB BOARD, COMPLETE			* 4-070-329-01	HOLDER (L), SCREEN (YC)	(61V80)
56	4-069-682-01	GUIDE, LED		69	* 4-069-687-01	HOLDER (LS), MIRROR	(53V80)
57	* A-1372-619-A	HA BOARD, COMPLETE			* 4-069-689-01	HOLDER (L), MIRROR	(61V80)
58	4-048-175-01	FOOT, PLASTIC		70	* 4-069-688-01	HOLDER (RS), MIRROR	(53V80)
59	4-040-755-01	CASTER (DIA. 30)	(53V80)		* 4-069-690-01	HOLDER (R), MIRROR	(61V80)
60	4-030-850-03	SOCKET, CASTER	(61V80)	71	* 4-070-345-01	HOLDER (TOP), MIRROR	(61V80)
61	4-061-174-01	CASTER	(61V80)		* 4-070-345-11	HOLDER (TOP), MIRROR	(53V80)
62	X-4036-807-1	BEZNET ASSY	(61V80)	72	4-070-344-01	MIRROR, REFLECTION	(53V80)
	X-4036-809-1	BEZNET ASSY (53V)	(53V80)		4-070-922-01	MIRROR, REFLECTION	(61V80)
63	* A-1372-618-A	HC BOARD, COMPLETE		77	* A-1390-933-A	S BOARD, COMPLETE	
64	4-058-538-11	SCREEN (61), CONTRAST	(61V80)	74	* 4-069-694-01	COVER, MIRROR	(53V80)
	4-058-894-11	SCREEN (53), CONTRAST	(53V80)		* 4-069-695-01	COVER, MIRROR	(61V80)
65	4-066-082-11	PLATE (F), DIFFUSION	(61V80)	75	* 4-070-342-01	BOARD (53), REAR	(53V80)
	4-070-602-11	PLATE (F), DIFFUSION	(53V80)		* 4-070-920-01	BOARD, REAR	(61V80)
				76	4-069-681-01	BUTTON, MULTI	

Les composants identifiés par une trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

### 7-3. CHASSIS

■ : +BVTP 3X12 7-685-648-79

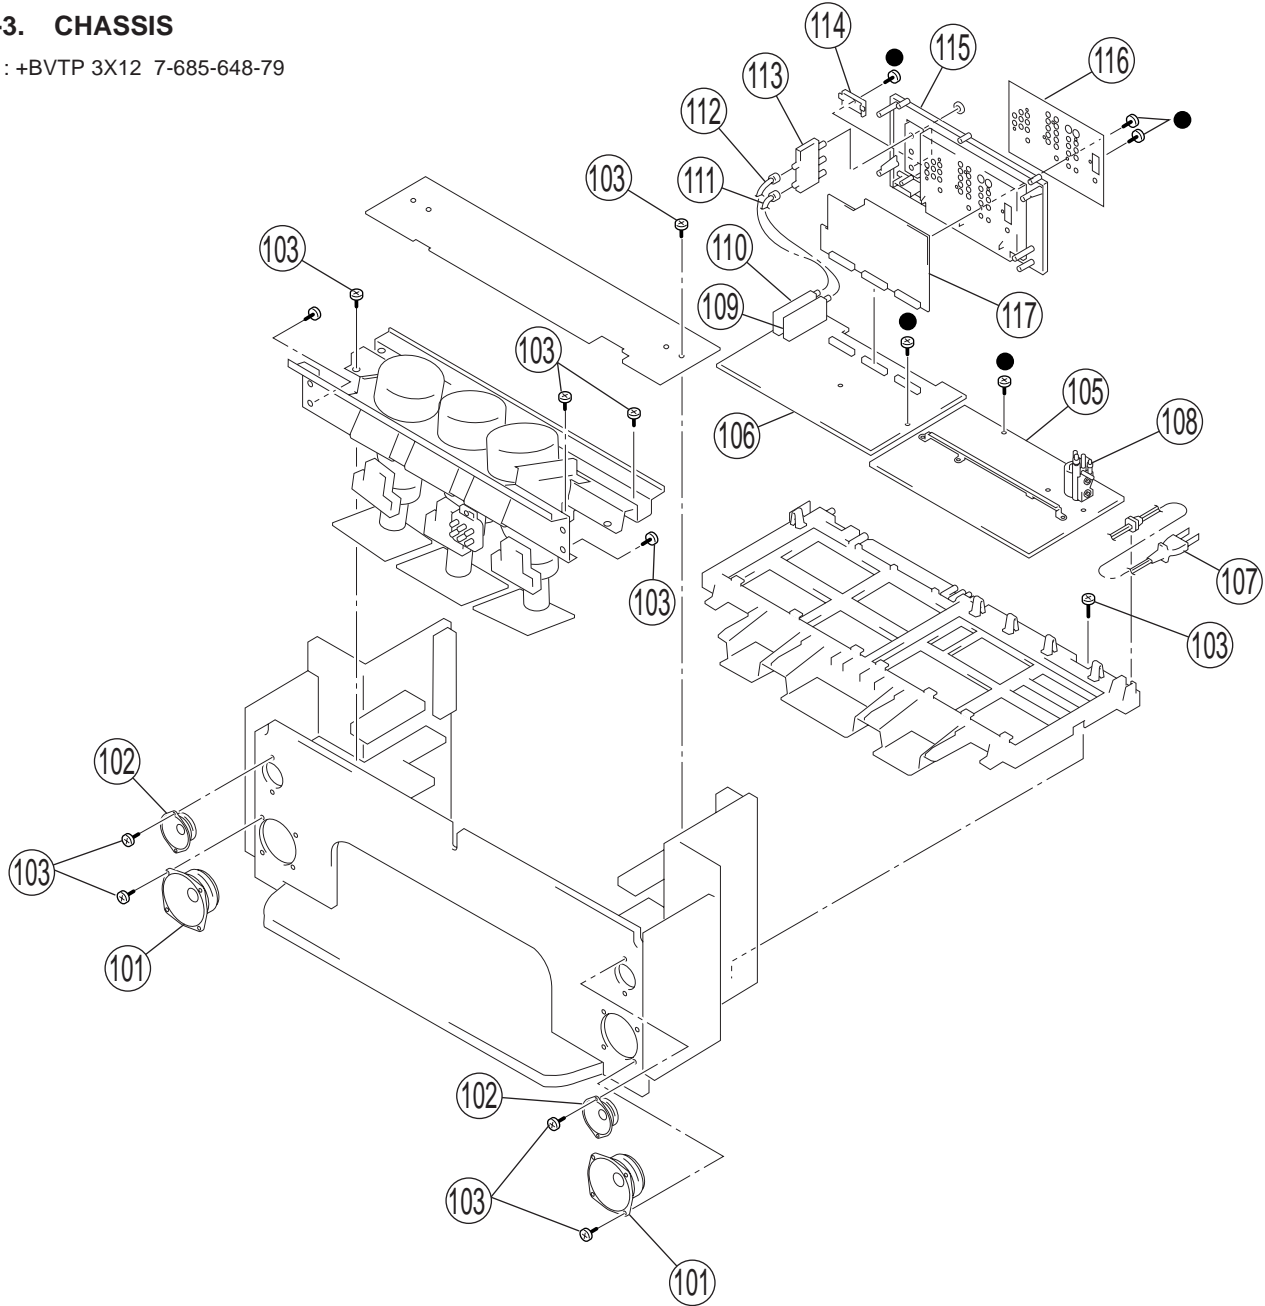


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
101	1-529-401-11	SPEAKER (13cm)	(48/53V80)	110	8-598-431-20	TUNER, FSS BTF-WA411 (TU151)	
	1-529-402-11	SPEAKER (16cm)	(61V80)	111	* 1-557-056-31	CABLE, P-P	
102	1-529-403-21	SPEAKER (6.6cm)		112	1-556-945-21	CABLE, P-P	
103	4-378-522-31	SCREW (4X20), TAPPING		113	8-598-414-20	CHANGER, ANTENNA AS-2F	
105	* A-1316-437-A	G BOARD, COMPLETE	(53V80)	114	4-069-675-01	CAP, TERMINAL BOARD	(48V80)
105	* A-1316-471-A	G BOARD, COMPLETE	(48/61V80)	115	4-069-674-01	TERMINAL BOARD	
106	* A-1298-843-A	A BOARD, COMPLETE		116	4-069-661-01	LABEL, TERMINAL	
107	$\triangle$ 1-790-130-11	CORD, AC POWER(WITH CONNECTOR)		117	* A-1373-727-A	U BOARD, COMPLETE	
108	$\triangle$ X-4560-164-1	FLAY BACK TRANS ASSY,					
		NX4007//J114(T504)					
109	8-598-430-00	TUNER, FSS BTF-FA401 (TU152)					

Les composants identifiés par une trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

**7-4. PICTURE TUBE**

- : +BVTP 3X12 7-685-648-79
- : +BVTP 4X12 7-685-661-14

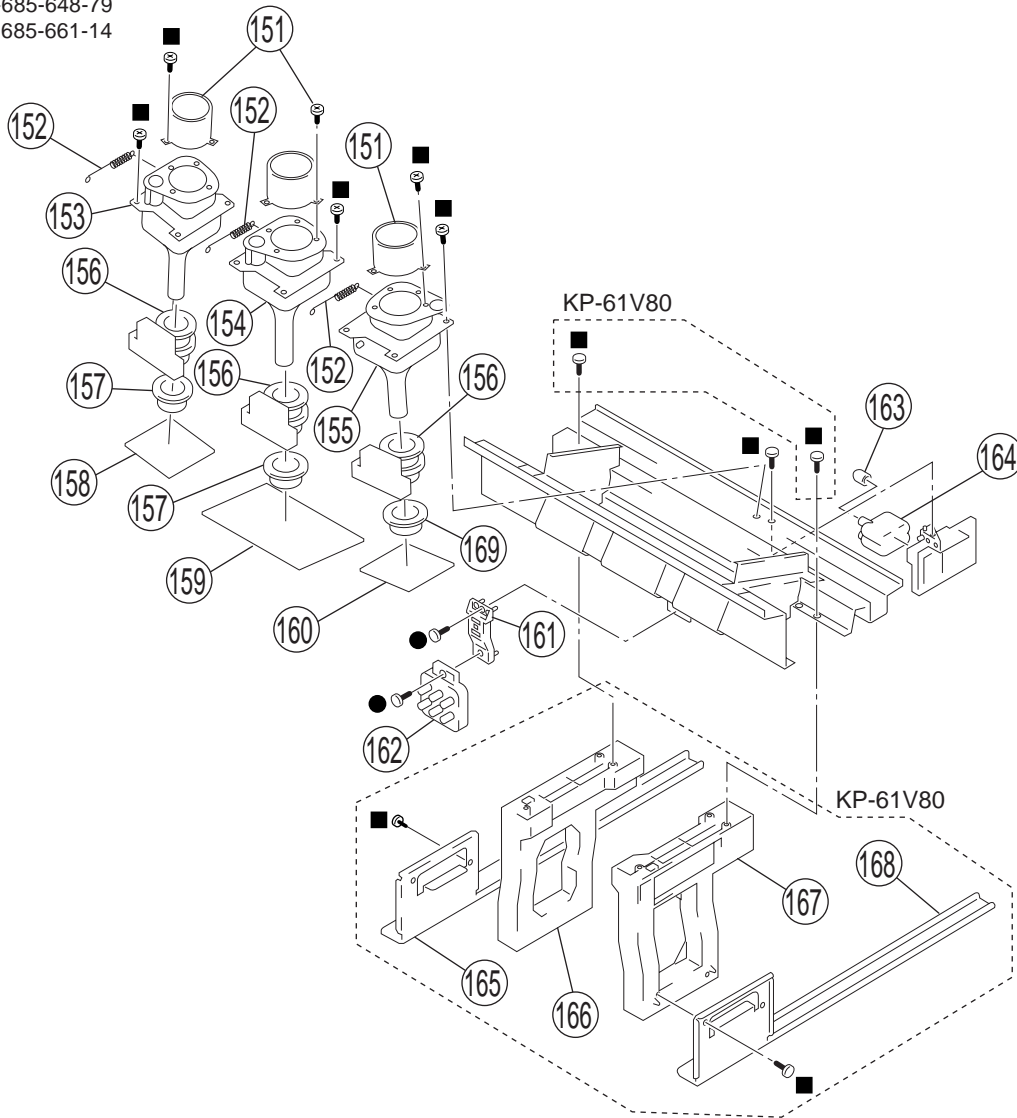

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
151	4-056-258-11	LENS (DELTA 78)	(48/61V80)		$\triangle$ 1-452-790-21	NECK ASSY	(48V80)
	4-040-131-21	LENS (LINNIT POINT 6)	(61V80)	158	* A-1331-922-A	CR BOARD, COMPLETE	
152	4-057-007-01	SPRING, TENSION	(53/61V80)	159	* A-1331-923-A	CG BOARD, COMPLETE	
153	$\triangle$ 8-733-572-05	CRT 07MXC3(R)(HEATER)	(48V80)	160	* A-1331-924-A	CB BOARD, COMPLETE	
	$\triangle$ A-1501-278-	ACOUPLER (R) ASSY, CRT	(53V80)	161	* 4-063-403-01	BRACKET, FOCUS PACK	
	$\triangle$ A-1501-521-	ACOUPLER (R) ASSY, CRT	(61V80)	162	$\triangle$ 1-223-925-11	RESISTOR ASSY (FOCUS PACK)	
154	$\triangle$ 8-733-570-05	CRT 07MXC2(G)(HEATER)	(48V80)	163	4-373-137-01	CAP (Z), RUBBER	
	$\triangle$ A-1501-279-	ACOUPLER (G) ASSY, CRT	(53V80)	164	$\triangle$ 8-598-955-30	BLOCK ASSY, HIGH-VOLTAGE	
	$\triangle$ A-1501-522-	ACOUPLER ASSY, CRT (G)	(61V80)	165	4-070-917-01	STAY (L), CHASSIS	(61V80)
155	$\triangle$ 8-733-575-05	CRT 07MAC3(B)(HEATER)	(48V80)	166	4-069-677-01	BOARD (L), SIDE	(61V80)
	$\triangle$ A-1501-277-	ACOUPLER (B) ASSY, CRT	(53V80)	167	4-069-678-01	BOARD (R), SIDE	(61V80)
	$\triangle$ A-1501-520-	ACOUPLER (B) ASSY, CRT	(61V80)	168	4-070-916-01	STAY (R), CHASSIS	(61V80)
156	$\triangle$ 1-451-497-21	DEFLECTION YOKE	(53/61V80)	169	$\triangle$ 1-451-469-21	COIL ASSY, VM	(53/61V80)
	$\triangle$ 1-451-496-11	DEFLECTION YOKE	(48V80)		$\triangle$ 1-452-909-31	MAGNET ASSY, 4 POLE	(48V80)
157	$\triangle$ 1-451-469-21	COIL ASSY, VM	(53/61V80)				

SECTION 8

ELECTRICAL PARTS LIST



NOTE:

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

The components identified by  $\boxtimes$  in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

- All resistors are in ohms
- F : nonflammable

CAPACITORS  
MF :  $\mu$  F, PF :  $\mu$  F

COILS  
MMH : m H, UH :  $\mu$  H

There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
* A-1298-843-A A BOARD, COMPLETE *****				C157	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
4-382-854-11 SCREW(M3X10), P, SW (+)				C159	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
<CAPACITOR>				C161	1-126-968-11	ELECT 100MF	20% 50V
C002	1-163-259-91	CERAMIC CHIP 220PF	5% 50V	C162	1-126-960-11	ELECT 1MF	20% 50V
C003	1-163-038-91	CERAMIC CHIP 0.1MF	25V	C163	1-128-551-11	ELECT 22MF	20% 25V
C004	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V	C164	1-128-551-11	ELECT 22MF	20% 25V
C005	1-126-935-11	ELECT 470MF	20% 6.3V	C165	1-128-551-11	ELECT 22MF	20% 25V
C006	1-126-960-11	ELECT 1MF	20% 50V	C166	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
C015	1-163-259-91	CERAMIC CHIP 220PF	5% 50V	C167	1-126-935-11	ELECT 470MF	20% 16V
C016	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V	C168	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
C039	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V	C170	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
C040	1-126-916-11	ELECT 1000MF	20% 6.3V	C171	1-126-933-11	ELECT 100MF	20% 16V
C041	1-163-229-11	CERAMIC CHIP 12PF	5% 50V	C172	1-126-964-11	ELECT 10MF	20% 50V
C042	1-126-960-11	ELECT 1MF	20% 50V	C173	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
C044	1-163-231-11	CERAMIC CHIP 15PF	5% 50V	C174	1-126-933-11	ELECT 100MF	20% 16V
C066	1-117-720-11	CERAMIC CHIP 4.7MF	10V	C175	1-128-551-11	ELECT 22MF	20% 25V
C072	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V	C176	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
C080	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C177	1-128-551-11	ELECT 22MF	20% 25V
C081	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C178	1-126-960-11	ELECT 1MF	20% 50V
C082	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C179	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
C085	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V	C180	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
C086	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C201	1-104-664-11	ELECT 47MF	20% 25V
C087	1-104-664-11	ELECT 47MF	20% 25V	C202	1-163-249-11	CERAMIC CHIP 82PF	5% 50V
C091	1-163-229-11	CERAMIC CHIP 12PF	5% 50V	C203	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C093	1-126-933-11	ELECT 100MF	20% 16V	C205	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C094	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C209	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C098	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C210	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C099	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C211	1-128-551-11	ELECT 22MF	20% 25V
C100	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C213	1-163-231-11	CERAMIC CHIP 15PF	5% 50V
C102	1-163-239-11	CERAMIC CHIP 33PF	5% 50V	C214	1-163-231-11	CERAMIC CHIP 15PF	5% 50V
C103	1-163-239-11	CERAMIC CHIP 33PF	5% 50V	C216	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V
C104	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C218	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C105	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C220	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
C106	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V	C221	1-104-760-11	CERAMIC CHIP 0.047MF	10% 50V
C151	1-126-935-11	ELECT 470MF	20% 16V	C222	1-109-982-11	CERAMIC CHIP 1MF	10% 10V
C152	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V	C224	1-163-245-11	CERAMIC CHIP 56PF	5% 50V
C153	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V	C227	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C154	1-163-021-91	CERAMIC CHIP 0.01MF	10% 50V	C228	1-163-038-91	CERAMIC CHIP 0.1MF	25V
C155	1-126-964-11	ELECT 10MF	20% 50V	C231	1-126-933-11	ELECT 100MF	20% 16V
C156	1-126-933-11	ELECT 100MF	20% 16V	C232	1-163-038-91	CERAMIC CHIP 0.1MF	25V
				C233	1-165-319-11	CERAMIC CHIP 0.1MF	50V
				C234	1-126-964-11	ELECT 10MF	20% 50V
				C235	1-163-038-91	CERAMIC CHIP 0.1MF	25V

# KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905

**A**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C236	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C303	1-126-933-11	ELECT	100MF 20% 16V
C237	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C304	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V
C240	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C305	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V
C241	1-126-964-11	ELECT	10MF 20% 50V	C306	1-126-959-11	ELECT	0.47MF 20% 50V
C242	1-128-551-11	ELECT	22MF 20% 25V	C307	1-126-959-11	ELECT	0.47MF 20% 50V
C243	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C308	1-126-963-11	ELECT	4.7MF 20% 50V
C244	1-104-664-11	ELECT	47MF 20% 25V	C309	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
C245	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	C310	1-163-229-11	CERAMIC CHIP	12PF 5% 50V
C247	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C311	1-126-960-11	ELECT	1MF 20% 50V
C248	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C312	1-115-419-11	CERAMIC CHIP	3300PF 5% 25V
C249	1-104-664-11	ELECT	47MF 20% 25V	C313	1-163-259-91	CERAMIC CHIP	220PF 5% 50V
C250	1-104-664-11	ELECT	47MF 20% 25V	C314	1-128-551-11	ELECT	22MF 20% 25V
C251	1-104-664-11	ELECT	47MF 20% 25V	C315	1-163-245-11	CERAMIC CHIP	56PF 5% 50V
C252	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	C316	1-163-275-11	CERAMIC CHIP	0.001MF 5% 50V
C253	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C317	1-104-664-11	ELECT	47MF 20% 16V
C254	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C318	1-126-933-11	ELECT	100MF 20% 16V
C255	1-126-933-11	ELECT	100MF 20% 16V	C319	1-126-964-11	ELECT	10MF 20% 50V
C256	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C320	1-126-934-11	ELECT	220MF 20% 16V
C257	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C321	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V
C258	1-163-231-11	CERAMIC CHIP	15PF 5% 50V	C323	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C259	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C325	1-126-964-11	ELECT	10MF 20% 50V
C260	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C326	1-104-664-11	ELECT	47MF 20% 25V
C261	1-126-933-11	ELECT	100MF 20% 16V	C327	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C263	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C328	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C264	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C329	1-104-664-11	ELECT	47MF 20% 25V
C265	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C401	1-164-690-91	CERAMIC CHIP	0.0022MF 5% 50V
C266	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C402	1-164-690-91	CERAMIC CHIP	0.0022MF 5% 50V
C268	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C403	1-126-933-11	ELECT	100MF 20% 16V
C271	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C404	1-126-963-11	ELECT	4.7MF 20% 50V
C272	1-126-933-11	ELECT	100MF 20% 16V	C405	1-126-963-11	ELECT	4.7MF 20% 50V
C273	1-126-935-11	ELECT	470MF 20% 6.3V	C406	1-163-227-11	CERAMIC CHIP	10PF 0.5PF 50V
C274	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C407	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C275	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C408	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
C276	1-163-275-11	CERAMIC CHIP	0.001MF 5% 50V	C410	1-126-933-11	ELECT	100MF 20% 16V
C277	1-126-959-11	ELECT	0.47MF 20% 50V	C411	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C279	1-126-959-11	ELECT	0.47MF 20% 50V	C413	1-163-091-00	CERAMIC CHIP	8PF 0.25PF 50V
C280	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	C414	1-104-664-11	ELECT	47MF 20% 25V
C281	1-130-495-00	FILM	0.1MF 5% 50V	C415	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C282	1-130-495-00	FILM	0.1MF 5% 50V	C416	1-104-664-11	ELECT	47MF 20% 25V
C283	1-130-495-00	FILM	0.1MF 5% 50V	C417	1-104-664-11	ELECT	47MF 20% 25V
C284	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	C418	1-126-964-11	ELECT	10MF 20% 50V
C285	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	C419	1-164-690-91	CERAMIC CHIP	0.0022MF 5% 50V
C286	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	C420	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
C287	1-126-964-11	ELECT	10MF 20% 50V	C421	1-104-664-11	ELECT	47MF 20% 25V
C288	1-130-495-00	MYLAR	0.1MF 5% 50V	C422	1-126-933-11	ELECT	100MF 20% 16V
C289	1-137-581-11	FILM	0.1MF 5% 100V	C423	1-164-690-91	CERAMIC CHIP	0.0022MF 5% 50V
C290	1-126-935-11	ELECT	470MF 20% 16V	C425	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C291	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	C426	1-104-664-11	ELECT	47MF 20% 25V
C293	1-164-182-11	CERAMIC CHIP	0.0033MF 10% 50V	C427	1-126-964-11	ELECT	10MF 20% 50V
C294	1-130-495-00	FILM	0.1MF 5% 50V	C428	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C296	1-126-961-11	ELECT	2.2MF 20% 50V	C429	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C297	1-163-251-11	CERAMIC CHIP	100PF 5% 50V	C430	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C298	1-165-319-11	CERAMIC CHIP	0.1MF 50V	C431	1-104-760-11	CERAMIC CHIP	0.047MF 10% 50V
C299	1-126-959-11	ELECT	0.47MF 20% 50V	C432	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C300	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	C433	1-126-963-11	ELECT	4.7MF 20% 50V
C301	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	C434	1-104-664-11	ELECT	47MF 20% 25V
C302	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	C435	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V





REF. NO.	PART NO.	DESCRIPTION	REMARK			REF. NO.	PART NO.	DESCRIPTION	REMARK		
C436	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	C820	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C438	1-104-664-11	ELECT	47MF	20%	25V	C821	1-104-664-11	ELECT	47MF	20% 25V	
C439	1-126-960-11	ELECT	1MF	20%	50V	C822	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C440	1-126-963-11	ELECT	4.7MF	20%	50V	C823	1-104-664-11	ELECT	47MF	20% 25V	
C442	1-130-489-00	MYLAR	0.033MF	5%	50V	C824	1-164-004-11	CERAMIC CHIP	0.1MF	10% 25V	
C443	1-130-471-00	MYLAR	0.001MF	5%	50V	C825	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C444	1-126-963-11	ELECT	4.7MF	20%	50V	C826	1-107-823-11	CERAMIC CHIP	0.47MF	10% 16V	
C445	1-126-963-11	ELECT	4.7MF	20%	50V	C827	1-107-823-11	CERAMIC CHIP	0.47MF	10% 16V	
C447	1-130-489-00	MYLAR	0.033MF	5%	50V	C828	1-107-823-11	CERAMIC CHIP	0.47MF	10% 16V	
C448	1-130-471-00	MYLAR	0.001MF	5%	50V	C829	1-107-823-11	CERAMIC CHIP	0.47MF	10% 16V	
C450	1-126-963-11	ELECT	4.7MF	20%	50V	C830	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C451	1-126-933-11	ELECT	100MF	20%	16V	C831	1-104-664-11	ELECT	47MF	20% 25V	
C456	1-126-933-11	ELECT	100MF	20%	16V	C832	1-163-235-11	CERAMIC CHIP	22PF	5% 50V	
C457	1-126-767-11	ELECT	1000MF	20%	16V	C833	1-104-664-11	ELECT	47MF	20% 25V	
C458	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	C834	1-164-161-11	CERAMIC CHIP	0.0022MF	10% 50V	
C459	1-164-004-11	CERAMIC CHIP	0.1MF	10%	25V	C835	1-163-235-11	CERAMIC CHIP	22PF	5% 50V	
C460	1-126-943-11	ELECT	2200MF	20%	25V	C842	1-164-004-11	CERAMIC CHIP	0.1MF	10% 25V	
C461	1-126-943-11	ELECT	2200MF	20%	25V	C843	1-104-664-11	ELECT	47MF	20% 25V	
C462	1-126-964-11	ELECT	10MF	20%	50V	C845	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C463	1-126-964-11	ELECT	10MF	20%	50V	C848	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C464	1-126-933-11	ELECT	100MF	20%	16V	C849	1-104-664-11	ELECT	47MF	20% 25V	
C465	1-128-551-11	ELECT	22MF	20%	25V	C850	1-104-664-11	ELECT	47MF	20% 25V	
C466	1-128-551-11	ELECT	22MF	20%	25V	C851	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C467	1-104-664-11	ELECT	47MF	20%	25V	C852	1-104-664-11	ELECT	47MF	20% 25V	
C468	1-126-964-11	ELECT	10MF	20%	50V	C853	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C469	1-128-551-11	ELECT	22MF	20%	25V	C854	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C470	1-104-664-11	ELECT	47MF	20%	25V	C855	1-163-001-11	CERAMIC CHIP	220PF	10% 50V	
C471	1-126-963-11	ELECT	4.7MF	20%	50V	C856	1-104-664-11	ELECT	47MF	20% 25V	
C473	1-104-665-11	ELECT	100MF	20%	25V	C858	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C474	1-130-495-00	FILM	0.1MF	5%	50V	C862	1-164-004-11	CERAMIC CHIP	0.1MF	10% 25V	
C475	1-130-495-00	FILM	0.1MF	5%	50V	C863	1-163-231-11	CERAMIC CHIP	15PF	5% 50V	
C476	1-130-495-00	FILM	0.1MF	5%	50V	C864	1-163-239-11	CERAMIC CHIP	33PF	5% 50V	
C477	1-130-495-00	FILM	0.1MF	5%	50V	C865	1-164-004-11	CERAMIC CHIP	0.1MF	10% 25V	
C681	1-126-935-11	ELECT	470MF	20%	16V	C866	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C682	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V	C867	1-109-982-11	CERAMIC CHIP	1MF	10% 10V	
C683	1-126-935-11	ELECT	470MF	20%	16V	C868	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C684	1-126-933-11	ELECT	100MF	20%	16V	C869	1-163-025-11	CERAMIC CHIP	0.001MF	50V	
C685	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V	C870	1-104-664-11	ELECT	47MF	20% 25V	
C686	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V	C871	1-126-963-11	ELECT	4.7MF	20% 50V	
C687	1-128-551-11	ELECT	22MF	20%	25V	C872	1-163-239-11	CERAMIC CHIP	33PF	5% 50V	
C688	1-163-021-91	CERAMIC CHIP	0.01MF	10%	50V	C873	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C801	1-163-143-00	CERAMIC CHIP	0.0012MF	5%	50V	C875	1-104-664-11	ELECT	47MF	20% 25V	
C802	1-163-016-00	CERAMIC CHIP	0.0039MF	10%	50V	C876	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C803	1-163-016-00	CERAMIC CHIP	0.0039MF	10%	50V	C877	1-104-664-11	ELECT	47MF	20% 25V	
C804	1-163-038-91	CERAMIC CHIP	0.1MF	25V		C878	1-104-664-11	ELECT	47MF	20% 25V	
C805	1-163-038-91	CERAMIC CHIP	0.1MF	25V		C879	1-104-664-11	ELECT	47MF	20% 25V	
C806	1-104-664-11	ELECT	47MF	20%	25V	C880	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C807	1-163-038-91	CERAMIC CHIP	0.1MF	25V		C881	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C808	1-163-016-00	CERAMIC CHIP	0.0039MF	10%	50V	C882	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
C809	1-163-016-00	CERAMIC CHIP	0.0039MF	10%	50V	C883	1-104-664-11	ELECT	47MF	20% 25V	
C810	1-163-038-91	CERAMIC CHIP	0.1MF	25V		C884	1-104-664-11	ELECT	47MF	20% 25V	
C811	1-104-664-11	ELECT	47MF	20%	25V	C885	1-104-664-11	ELECT	47MF	20% 25V	
C812	1-163-038-91	CERAMIC CHIP	0.1MF	25V		C886	1-104-664-11	ELECT	47MF	20% 25V	
C813	1-104-664-11	ELECT	47MF	20%	25V	C887	1-104-664-11	ELECT	47MF	20% 25V	
C816	1-163-038-91	CERAMIC CHIP	0.1MF	25V		C888	1-104-664-11	ELECT	47MF	20% 25V	
C817	1-163-038-91	CERAMIC CHIP	0.1MF	25V		C889	1-163-038-91	CERAMIC CHIP	0.1MF	25V	
						C890	1-104-664-11	ELECT	47MF	20% 25V	

# KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905

**A**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C891	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1406	1-164-489-11	CERAMIC CHIP	0.22MF 10% 16V
C892	1-104-664-11	ELECT	47MF 20% 25V	C1407	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C893	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1408	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C894	1-104-664-11	ELECT	47MF 20% 25V	C1409	1-104-664-11	ELECT	47MF 20% 25V
C897	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1410	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V
C898	1-126-934-11	ELECT	220MF 20% 16V	C1411	1-164-346-11	CERAMIC CHIP	1MF 16V
C911	1-164-690-91	CERAMIC CHIP	0.0022MF 5% 50V	C1412	1-164-489-11	CERAMIC CHIP	0.22MF 10% 16V
C912	1-104-664-11	ELECT	47MF 20% 25V	C1413	1-164-005-11	CERAMIC CHIP	0.47MF 16V
C913	1-104-664-11	ELECT	47MF 20% 25V	C1414	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C914	1-104-664-11	ELECT	47MF 20% 25V	C1415	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C915	1-104-664-11	ELECT	47MF 20% 25V	C1416	1-126-963-11	ELECT	4.7MF 20% 50V
C916	1-104-664-11	ELECT	47MF 20% 25V	C1417	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C917	1-104-664-11	ELECT	47MF 20% 25V	C1418	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C918	1-163-275-11	CERAMIC CHIP	0.001MF 5% 50V	C1419	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C919	1-163-275-11	CERAMIC CHIP	0.001MF 5% 50V	C1420	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
C920	1-163-275-11	CERAMIC CHIP	0.001MF 5% 50V	C1421	1-126-934-11	ELECT	220MF 20% 16V
C921	1-163-275-11	CERAMIC CHIP	0.001MF 5% 50V	C1422	1-126-960-11	ELECT	1MF 20% 50V
C922	1-163-275-11	CERAMIC CHIP	0.001MF 5% 50V	C1423	1-164-005-11	CERAMIC CHIP	0.47MF 16V
C923	1-163-275-11	CERAMIC CHIP	0.001MF 5% 50V	C1424	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V
C927	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1425	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V
C928	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1426	1-164-346-11	CERAMIC CHIP	1MF 16V
C929	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1427	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C930	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1428	1-164-005-11	CERAMIC CHIP	0.47MF 16V
C931	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1429	1-163-229-11	CERAMIC CHIP	12PF 5% 50V
C932	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1430	1-126-963-11	ELECT	4.7MF 20% 50V
C933	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1431	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C934	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1432	1-163-005-11	CERAMIC CHIP	470PF 10% 50V
C935	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1433	1-126-934-11	ELECT	220MF 20% 16V
C936	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1434	1-126-960-11	ELECT	1MF 20% 50V
C937	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1435	1-164-005-11	CERAMIC CHIP	0.47MF 16V
C938	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1436	1-126-934-11	ELECT	220MF 20% 16V
C951	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1437	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V
C952	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1438	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C953	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1439	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C954	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1440	1-163-229-11	CERAMIC CHIP	12PF 5% 50V
C955	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1441	1-126-933-11	ELECT	100MF 20% 16V
C956	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V	C1442	1-128-551-11	ELECT	22MF 20% 25V
C957	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1443	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C958	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1444	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C959	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1445	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C960	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1446	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C961	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1447	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C962	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1448	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C963	1-104-664-11	ELECT	47MF 20% 25V	C1449	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C964	1-104-664-11	ELECT	47MF 20% 25V	C1450	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C965	1-104-664-11	ELECT	47MF 20% 25V	C1451	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C966	1-104-664-11	ELECT	47MF 20% 25V	C1452	1-126-934-11	ELECT	220MF 20% 16V
C967	1-104-664-11	ELECT	47MF 20% 25V	C1453	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C968	1-104-664-11	ELECT	47MF 20% 25V	C1454	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C969	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1455	1-163-038-91	CERAMIC CHIP	0.1MF 25V
C970	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1457	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C971	1-104-664-11	ELECT	47MF 20% 25V	C1458	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C1401	1-128-551-11	ELECT	22MF 20% 25V	C1459	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C1402	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1460	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C1403	1-104-664-11	ELECT	47MF 20% 25V	C1461	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C1404	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1462	1-163-227-11	CERAMIC CHIP	10PF 0.5PF 50V
C1405	1-104-664-11	ELECT	47MF 20% 25V	C1463	1-163-038-91	CERAMIC CHIP	0.1MF 25V



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C1464	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1610	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C1465	1-163-227-11	CERAMIC CHIP	10PF 50V	C1613	1-164-344-11	CERAMIC CHIP	0.068MF 10% 25V
C1466	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	C1614	1-163-019-00	CERAMIC CHIP	0.0068MF 10% 50V
C1467	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1615	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C1468	1-163-038-91	CERAMIC CHIP	0.1MF 25V	C1617	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
C1469	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	C1618	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
C1470	1-163-259-91	CERAMIC CHIP	220PF 5% 50V	C1620	1-104-664-11	ELECT	47MF 20% 25V
C1474	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V			<CONNECTOR>	
C1475	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	CN001	* 1-564-507-11	PLUG, CONNECTOR	4P
C1476	1-163-038-91	CERAMIC CHIP	0.1MF 25V	CN002	* 1-564-513-11	PLUG, CONNECTOR	10P
C1477	1-163-038-91	CERAMIC CHIP	0.1MF 25V	CN003	1-573-979-21	CONNECTOR, BOARD TO BOARD	11P
C1479	1-164-346-11	CERAMIC CHIP	1MF 16V	CN004	1-573-298-21	CONNECTOR, BOARD TO BOARD	20P
C1480	1-164-346-11	CERAMIC CHIP	1MF 16V	CN151	1-695-915-11	TAB (CONTACT)	
C1481	1-126-933-11	ELECT	100MF 20% 16V	CN201	1-573-298-21	CONNECTOR, BOARD TO BOARD	20P
C1483	1-163-038-91	CERAMIC CHIP	0.1MF 25V	CN202	* 1-779-892-11	CONNECTOR, BOARD TO BOARD	10P
C1484	1-163-038-91	CERAMIC CHIP	0.1MF 25V	CN203	* 1-564-509-11	PLUG, CONNECTOR	6P
C1486	1-163-038-91	CERAMIC CHIP	0.1MF 25V	CN204	* 1-564-512-11	PLUG, CONNECTOR	9P
C1487	1-126-964-11	ELECT	10MF 20% 50V	CN205	1-695-915-11	TAB (CONTACT)	
C1488	1-163-038-91	CERAMIC CHIP	0.1MF 25V	CN401	1-573-298-21	CONNECTOR, BOARD TO BOARD	20P
C1489	1-164-346-11	CERAMIC CHIP	1MF 16V	CN402	* 1-779-892-11	CONNECTOR, BOARD TO BOARD	10P
C1490	1-163-038-91	CERAMIC CHIP	0.1MF 25V	CN403	* 1-564-507-11	PLUG, CONNECTOR	4P
C1491	1-164-346-11	CERAMIC CHIP	1MF 16V	CN681	* 1-779-892-11	CONNECTOR, BOARD TO BOARD	10P
C1492	1-164-346-11	CERAMIC CHIP	1MF 16V	CN801	* 1-779-892-11	CONNECTOR, BOARD TO BOARD	10P
C1493	1-164-346-11	CERAMIC CHIP	1MF 16V	CN802	* 1-564-511-11	PLUG, CONNECTOR	8P
C1494	1-104-664-11	ELECT	47MF 20% 25V			<DIODE>	
C1496	1-163-038-91	CERAMIC CHIP	0.1MF 25V	D001	8-719-988-61	DIODE	1SS355TE-17
C1497	1-163-038-91	CERAMIC CHIP	0.1MF 25V	D002	8-719-988-61	DIODE	1SS355TE-17
C1499	1-163-259-91	CERAMIC CHIP	220PF 5% 50V	D003	8-719-988-61	DIODE	1SS355TE-17
C1500	1-163-038-91	CERAMIC CHIP	0.1MF 25V	D004	8-719-069-55	DIODE	UDZS-TE17-5.6B
C1501	1-104-664-11	ELECT	47MF 20% 25V	D005	8-719-988-61	DIODE	1SS355TE-17
C1504	1-126-964-11	ELECT	10MF 20% 50V	D006	8-719-069-55	DIODE	UDZS-TE17-5.6B
C1506	1-104-664-11	ELECT	47MF 20% 25V	D151	8-719-977-81	DIODE	DTZ33B
C1507	1-104-664-11	ELECT	47MF 20% 25V	D201	8-719-988-61	DIODE	1SS355TE-17
C1508	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D202	8-719-977-28	DIODE	DTZ10B
C1510	1-163-245-11	CERAMIC CHIP	56PF 5% 50V	D204	8-719-069-55	DIODE	UDZS-TE17-5.6B
C1511	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D205	8-719-069-55	DIODE	UDZS-TE17-5.6B
C1512	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D206	8-719-988-61	DIODE	1SS355TE-17
C1513	1-163-038-91	CERAMIC CHIP	0.1MF 25V	D207	8-719-988-61	DIODE	1SS355TE-17
C1514	1-163-038-91	CERAMIC CHIP	0.1MF 25V	D208	8-719-976-96	DIODE	DTZ4.7C
C1515	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D209	8-719-988-61	DIODE	1SS355TE-17
C1516	1-163-038-91	CERAMIC CHIP	0.1MF 25V	D301	8-719-988-61	DIODE	1SS355TE-17
C1518	1-104-664-11	ELECT	47MF 20% 25V	D302	8-719-988-61	DIODE	1SS355TE-17
C1520	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D303	8-719-988-61	DIODE	1SS355TE-17
C1521	1-126-933-11	ELECT	100MF 20% 16V	D304	8-719-977-28	DIODE	DTZ10B
C1522	1-126-933-11	ELECT	100MF 20% 16V	D305	8-719-977-28	DIODE	DTZ10B
C1523	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D402	8-719-988-61	DIODE	1SS355TE-17
C1524	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D403	8-719-988-61	DIODE	1SS355TE-17
C1525	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	D404	8-719-988-61	DIODE	1SS355TE-17
C1526	1-126-964-11	ELECT	10MF 20% 50V	D405	8-719-988-61	DIODE	1SS355TE-17
C1529	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	D406	8-719-056-95	DIODE	UDZ-TE-17-22B
C1601	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D407	8-719-988-61	DIODE	1SS355TE-17
C1602	1-163-133-00	CERAMIC CHIP	470PF 5% 50V	D408	8-719-988-61	DIODE	1SS355TE-17
C1603	1-164-344-11	CERAMIC CHIP	0.068MF 10% 25V	D409	8-719-988-61	DIODE	1SS355TE-17
C1604	1-163-019-00	CERAMIC CHIP	0.0068MF 10% 50V				
C1605	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V				
C1607	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V				
C1608	1-163-239-11	CERAMIC CHIP	33PF 5% 50V				

**KP-48V80/53V80/61V80**

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D410	8-719-056-95	DIODE UDZ-TE-17-22B		FB801	1-414-135-11	FERRITE	0UH
D411	8-719-056-95	DIODE UDZ-TE-17-22B		FB802	1-414-135-11	FERRITE	0UH
D412	8-719-056-95	DIODE UDZ-TE-17-22B		FB803	1-414-135-11	FERRITE	0UH
D413	8-719-056-95	DIODE UDZ-TE-17-22B		FB804	1-414-135-11	FERRITE	0UH
D414	8-719-056-95	DIODE UDZ-TE-17-22B		FB805	1-414-135-11	FERRITE	0UH
D415	8-719-056-95	DIODE UDZ-TE-17-22B		FB806	1-414-135-11	FERRITE	0UH
D416	8-719-988-61	DIODE 1SS355TE-17		FB807	1-414-135-11	FERRITE	0UH
D417	8-719-988-61	DIODE 1SS355TE-17		FB808	1-414-135-11	FERRITE	0UH
D418	8-719-056-95	DIODE UDZ-TE-17-22B		FB1401	1-414-135-11	FERRITE	0UH
D420	8-719-988-61	DIODE 1SS355TE-17		FB1402	1-414-135-11	FERRITE	0UH
D421	8-719-988-61	DIODE 1SS355TE-17		FB1403	1-414-135-11	FERRITE	0UH
D801	8-719-988-61	DIODE 1SS355TE-17		FB1404	1-414-135-11	FERRITE	0UH
D802	8-719-988-61	DIODE 1SS355TE-17		FB1405	1-414-135-11	FERRITE	0UH
D803	8-719-988-61	DIODE 1SS355TE-17		FB1406	1-414-135-11	FERRITE	0UH
D804	8-719-988-61	DIODE 1SS355TE-17		FB1407	1-414-135-11	FERRITE	0UH
D805	8-719-069-55	DIODE UDZS-TE17-5.6B		FB1408	1-414-135-11	FERRITE	0UH
D806	8-719-069-55	DIODE UDZS-TE17-5.6B		FB1409	1-414-135-11	FERRITE	0UH
D807	8-719-069-55	DIODE UDZS-TE17-5.6B		FB1410	1-414-135-11	FERRITE	0UH
D808	8-719-069-55	DIODE UDZS-TE17-5.6B		FB1411	1-414-135-11	FERRITE	0UH
D809	8-719-988-61	DIODE 1SS355TE-17		FB1412	1-414-135-11	FERRITE	0UH
D810	8-719-988-61	DIODE 1SS355TE-17		FB1413	1-414-135-11	FERRITE	0UH
D816	8-719-988-61	DIODE 1SS355TE-17		FB1414	1-414-135-11	FERRITE	0UH
D817	8-719-988-61	DIODE 1SS355TE-17					
D818	8-719-988-61	DIODE 1SS355TE-17				<FILTER>	
D819	8-719-988-61	DIODE 1SS355TE-17		FL201	1-239-847-11	FILTER, LOW PASS	
D820	8-719-988-61	DIODE 1SS355TE-17		FL202	1-239-847-11	FILTER, LOW PASS	
D821	8-719-988-61	DIODE 1SS355TE-17		FL203	1-239-847-11	FILTER, LOW PASS	
D822	8-719-988-61	DIODE 1SS355TE-17		FL401	1-239-803-11	ENCAPSULATED COMPONENT	
D823	8-719-988-61	DIODE 1SS355TE-17					
D824	8-719-988-61	DIODE 1SS355TE-17				<IC>	
D1407	8-719-988-61	DIODE 1SS355TE-17		IC001	8-759-352-91	IC PST9143NL	
D1408	8-719-988-61	DIODE 1SS355TE-17		IC002	8-752-909-31	IC CXP750010-010Q	
D1409	8-719-988-61	DIODE 1SS355TE-17		IC004	8-759-527-76	IC M24C08-MN6T	
D1410	8-719-988-61	DIODE 1SS355TE-17		IC202	8-759-568-27	IC MSM514265C-60JSDR1	
		<FERRITEBEAD>		IC203	8-759-161-24	IC UPC659AGS-E2	
FB001	1-414-135-11	FERRITE	0UH	IC204	8-759-536-12	IC UPD64081BGF-3BA	
FB151	1-414-135-11	FERRITE	0UH	IC205	8-759-591-79	IC UPC2933T-E1	
FB152	1-414-135-11	FERRITE	0UH	IC206	8-752-091-25	IC CXA2147Q	
FB202	1-414-135-11	FERRITE	0UH	IC401	8-759-549-74	IC TC9447F-003	
FB203	1-414-135-11	FERRITE	0UH	IC402	8-759-352-91	IC PST9143NL	
FB204	1-414-135-11	FERRITE	0UH	IC403	8-759-578-88	IC BH3868FS-E2	
FB205	1-414-135-11	FERRITE	0UH	IC404	8-759-100-96	IC UPC4558G2	
FB206	1-216-295-91	SHORT	0	IC406	8-759-190-89	IC TDA7265	
FB207	1-216-295-91	SHORT	0	IC681	8-759-459-99	IC PQ09RD11	
FB209	1-216-295-91	SHORT	0	IC682	8-759-459-99	IC PQ09RD11	
FB210	1-414-135-11	FERRITE	0UH	IC801	8-759-488-29	IC TC7W66FU(TE12R)	
FB211	1-414-135-11	FERRITE	0UH	IC802	8-759-394-80	IC NJM2058M-TE2	
FB212	1-216-295-91	SHORT	0	IC803	8-759-589-66	IC CM0006CF	
FB213	1-414-135-11	FERRITE	0UH	IC804	8-759-394-80	IC NJM2058M-TE2	
FB214	1-414-135-11	FERRITE	0UH	IC805	8-752-906-76	IC CXP86324-021Q	
FB215	1-216-295-91	SHORT	0	IC806	8-759-394-80	IC NJM2058M-TE2	
FB216	1-216-295-91	SHORT	0	IC807	8-759-546-22	IC UPD6376GS-E2	
FB217	1-216-295-91	SHORT	0	IC808	8-759-032-11	IC MC74HC04AF	
FB301	1-216-295-91	SHORT	0	IC809	8-759-295-09	IC TLC2932IPW	
FB401	1-414-135-11	FERRITE	0UH	IC810	8-759-468-90	IC ST24E16FM6TR	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
IC811	8-759-352-91	IC PST9143NL		L816	1-414-183-41	INDUCTOR	10UH
IC812	8-759-235-19	IC TC74HC08AF(EL)		L823	1-414-858-31	INDUCTOR	1MMH
IC814	8-759-032-20	IC MC74HC32AF		L824	1-414-858-31	INDUCTOR	1MMH
IC815	8-759-546-22	IC UPD6376GS-E2		L825	1-414-858-31	INDUCTOR	1MMH
IC816	8-759-546-22	IC UPD6376GS-E2		L826	1-414-858-31	INDUCTOR	1MMH
IC817	8-759-546-22	IC UPD6376GS-E2		L827	1-414-858-31	INDUCTOR	1MMH
IC818	8-759-100-96	IC UPC4558G2		L828	1-414-858-31	INDUCTOR	1MMH
IC819	8-759-106-02	IC UPC4570G2		L829	1-414-183-41	INDUCTOR	10UH
IC820	8-759-106-02	IC UPC4570G2		L830	1-407-495-00	INDUCTOR	1.8MMH
IC821	8-759-106-02	IC UPC4570G2		L831	1-407-495-00	INDUCTOR	1.8MMH
IC822	8-759-106-02	IC UPC4570G2		L832	1-407-495-00	INDUCTOR	1.8MMH
IC823	8-759-106-02	IC UPC4570G2		L833	1-407-495-00	INDUCTOR	1.8MMH
IC824	8-759-106-02	IC UPC4570G2		L834	1-407-495-00	INDUCTOR	1.8MMH
IC1401	8-759-351-59	IC UC528257J-80(EL)		L835	1-407-495-00	INDUCTOR	1.8MMH
IC1402	8-752-086-80	IC CXA2019AQ-T4		L843	1-414-183-41	INDUCTOR	10UH
IC1403	8-752-086-80	IC CXA2019AQ-T4		L1401	1-414-187-11	INDUCTOR	47UH
IC1404	8-759-932-69	IC BU4053BCF-T2		L1402	1-414-187-11	INDUCTOR	47UH
IC1405	8-759-498-32	IC SAB9076H/N4		L1403	1-414-187-11	INDUCTOR	47UH
IC1406	8-759-932-69	IC BU4053BCF-T2		L1404	1-414-187-11	INDUCTOR	47UH
IC1407	8-752-080-75	IC CXA2039M-T6		L1405	1-414-187-11	INDUCTOR	47UH
IC1408	8-759-926-17	IC SN74HC153ANS		L1406	1-414-187-11	INDUCTOR	47UH
IC1409	8-752-058-68	IC CXA1315M		L1407	1-414-187-11	INDUCTOR	47UH
IC1410	8-759-353-02	IC NJM2533M(TE2)		L1408	1-414-187-11	INDUCTOR	47UH
IC1412	8-759-352-91	IC PST9143NL		L1409	1-414-187-11	INDUCTOR	47UH
IC1601	8-759-638-04	IC Z8622912SSC-00TR		L1410	1-414-187-11	INDUCTOR	47UH
IC1602	8-759-638-05	IC Z8613012SSC-00TR		L1411	1-414-187-11	INDUCTOR	47UH
		<COIL>		L1412	1-414-187-11	INDUCTOR	47UH
L001	1-414-183-41	INDUCTOR	10UH			<ICLINK>	
L004	1-414-189-31	INDUCTOR	100UH	PS401	1-532-984-11	LINK, IC	2A/90V
L151	1-414-187-11	INDUCTOR	47UH	PS402	1-532-984-11	LINK, IC	2A/90V
L152	1-414-187-11	INDUCTOR	47UH			<TRANSISTOR>	
L153	1-414-187-11	INDUCTOR	47UH	Q001	8-729-216-22	TRANSISTOR	2SA1162-G
L154	1-414-183-41	INDUCTOR	10UH	Q002	8-729-422-27	TRANSISTOR	2SD601A-Q
L155	1-414-187-11	INDUCTOR	47UH	Q003	8-729-027-38	TRANSISTOR	DTA144EKA-T146
L201	1-414-187-11	INDUCTOR	47UH	Q004	8-729-216-22	TRANSISTOR	2SA1162-G
L203	1-414-187-11	INDUCTOR	47UH	Q005	8-729-027-38	TRANSISTOR	DTA144EKA-T146
L204	1-414-187-11	INDUCTOR	47UH	Q006	8-729-027-38	TRANSISTOR	DTA144EKA-T146
L205	1-414-187-11	INDUCTOR	47UH	Q007	1-801-806-11	TRANSISTOR	DTC144EKA-T146
L206	1-414-183-41	INDUCTOR	10UH	Q008	8-729-422-27	TRANSISTOR	2SD601A-Q
L207	1-414-183-41	INDUCTOR	10UH	Q009	8-729-422-27	TRANSISTOR	2SD601A-Q
L208	1-414-187-11	INDUCTOR	47UH	Q010	8-729-422-27	TRANSISTOR	2SD601A-Q
L209	1-414-187-11	INDUCTOR	47UH	Q011	8-729-422-27	TRANSISTOR	2SD601A-Q
L210	1-414-187-11	INDUCTOR	47UH	Q012	8-729-422-27	TRANSISTOR	2SD601A-Q
L211	1-414-857-11	INDUCTOR	100UH	Q013	8-729-422-27	TRANSISTOR	2SD601A-Q
L212	1-414-856-11	INDUCTOR	10UH	Q014	8-729-422-27	TRANSISTOR	2SD601A-Q
L213	1-414-183-41	INDUCTOR	10UH	Q015	8-729-422-27	TRANSISTOR	2SD601A-Q
L302	1-414-187-11	INDUCTOR	47UH	Q016	8-729-422-27	TRANSISTOR	2SD601A-Q
L401	1-414-187-11	INDUCTOR	47UH	Q017	8-729-422-27	TRANSISTOR	2SD601A-Q
L402	1-414-183-41	INDUCTOR	10UH	Q018	8-729-422-27	TRANSISTOR	2SD601A-Q
L681	1-406-975-21	INDUCTOR	47UH	Q019	8-729-422-27	TRANSISTOR	2SD601A-Q
L801	1-414-183-41	INDUCTOR	10UH	Q020	8-729-422-27	TRANSISTOR	2SD601A-Q
L802	1-414-183-41	INDUCTOR	10UH	Q021	8-729-422-27	TRANSISTOR	2SD601A-Q
L803	1-414-183-41	INDUCTOR	10UH	Q022	8-729-422-27	TRANSISTOR	2SD601A-Q
L804	1-414-183-41	INDUCTOR	10UH				
L809	1-414-183-41	INDUCTOR	10UH				

# KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q023	8-729-422-27	TRANSISTOR	2SD601A-Q	Q806	8-729-422-27	TRANSISTOR	2SD601A-Q
Q024	1-801-806-11	TRANSISTOR	DTC144EKA-T146	Q807	8-729-422-27	TRANSISTOR	2SD601A-Q
Q151	1-801-806-11	TRANSISTOR	DTC144EKA-T146	Q808	8-729-422-27	TRANSISTOR	2SD601A-Q
Q152	8-729-422-27	TRANSISTOR	2SD601A-Q	Q809	8-729-422-27	TRANSISTOR	2SD601A-Q
Q153	8-729-422-27	TRANSISTOR	2SD601A-Q	Q811	8-729-422-27	TRANSISTOR	2SD601A-Q
Q201	8-729-422-27	TRANSISTOR	2SD601A-Q	Q812	8-729-422-27	TRANSISTOR	2SD601A-Q
Q202	8-729-216-22	TRANSISTOR	2SA1162-G	Q813	8-729-422-27	TRANSISTOR	2SD601A-Q
Q203	8-729-216-22	TRANSISTOR	2SA1162-G	Q814	8-729-422-27	TRANSISTOR	2SD601A-Q
Q204	8-729-216-22	TRANSISTOR	2SA1162-G	Q1402	8-729-422-27	TRANSISTOR	2SD601A-Q
Q205	8-729-216-22	TRANSISTOR	2SA1162-G	Q1403	8-729-422-27	TRANSISTOR	2SD601A-Q
Q206	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1405	8-729-422-27	TRANSISTOR	2SD601A-Q
Q207	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1406	8-729-216-22	TRANSISTOR	2SA1162-G
Q208	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1407	8-729-422-27	TRANSISTOR	2SD601A-Q
Q209	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1408	8-729-216-22	TRANSISTOR	2SA1162-G
Q210	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1409	8-729-422-27	TRANSISTOR	2SD601A-Q
Q211	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1410	8-729-422-27	TRANSISTOR	2SD601A-Q
Q212	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1411	8-729-422-27	TRANSISTOR	2SD601A-Q
Q213	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1412	8-729-422-27	TRANSISTOR	2SD601A-Q
Q214	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1413	8-729-216-22	TRANSISTOR	2SA1162-G
Q215	8-729-216-22	TRANSISTOR	2SA1162-G	Q1414	8-729-216-22	TRANSISTOR	2SA1162-G
Q216	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1415	8-729-422-27	TRANSISTOR	2SD601A-Q
Q217	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1416	8-729-216-22	TRANSISTOR	2SA1162-G
Q218	8-729-216-22	TRANSISTOR	2SA1162-G	Q1417	8-729-422-27	TRANSISTOR	2SD601A-Q
Q219	8-729-216-22	TRANSISTOR	2SA1162-G	Q1418	8-729-216-22	TRANSISTOR	2SA1162-G
Q220	8-729-216-22	TRANSISTOR	2SA1162-G	Q1419	8-729-216-22	TRANSISTOR	2SA1162-G
Q221	8-729-216-22	TRANSISTOR	2SA1162-G	Q1420	8-729-216-22	TRANSISTOR	2SA1162-G
Q222	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1422	8-729-422-27	TRANSISTOR	2SD601A-Q
Q223	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1423	8-729-422-27	TRANSISTOR	2SD601A-Q
Q224	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1424	8-729-216-22	TRANSISTOR	2SA1162-G
Q225	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1601	8-729-422-27	TRANSISTOR	2SD601A-Q
Q226	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1602	8-729-422-27	TRANSISTOR	2SD601A-Q
Q227	8-729-422-27	TRANSISTOR	2SD601A-Q	Q1603	8-729-422-27	TRANSISTOR	2SD601A-Q
Q228	8-729-422-27	TRANSISTOR	2SD601A-Q				
Q229	8-729-216-22	TRANSISTOR	2SA1162-G			<RESISTOR>	
Q230	8-729-216-22	TRANSISTOR	2SA1162-G	R001	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q231	8-729-216-22	TRANSISTOR	2SA1162-G	R002	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
Q232	8-729-216-22	TRANSISTOR	2SA1162-G	R003	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q301	8-729-216-22	TRANSISTOR	2SA1162-G	R004	1-216-121-91	RES,CHIP	1M 5% 1/10W
Q302	8-729-422-27	TRANSISTOR	2SD601A-Q	R005	1-216-097-91	RES,CHIP	100K 5% 1/10W
Q303	8-729-422-27	TRANSISTOR	2SD601A-Q	R006	1-216-033-00	RES,CHIP	220 5% 1/10W
Q304	8-729-422-27	TRANSISTOR	2SD601A-Q	R007	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q401	8-729-216-22	TRANSISTOR	2SA1162-G	R008	1-216-033-00	RES,CHIP	220 5% 1/10W
Q402	8-729-216-22	TRANSISTOR	2SA1162-G	R009	1-216-033-00	RES,CHIP	220 5% 1/10W
Q403	8-729-422-27	TRANSISTOR	2SD601A-Q	R010	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q404	8-729-422-27	TRANSISTOR	2SD601A-Q	R011	1-216-049-91	RES,CHIP	1K 5% 1/10W
Q405	1-801-806-11	TRANSISTOR	DTC144EKA-T146	R012	1-216-033-00	RES,CHIP	220 5% 1/10W
Q406	8-729-422-27	TRANSISTOR	2SD601A-Q	R013	1-216-073-00	RES,CHIP	10K 5% 1/10W
Q407	8-729-422-27	TRANSISTOR	2SD601A-Q	R014	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q408	8-729-422-27	TRANSISTOR	2SD601A-Q	R015	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
Q409	8-729-422-27	TRANSISTOR	2SD601A-Q	R016	1-216-033-00	RES,CHIP	220 5% 1/10W
Q410	8-729-422-27	TRANSISTOR	2SD601A-Q	R017	1-216-033-00	RES,CHIP	220 5% 1/10W
Q411	8-729-216-22	TRANSISTOR	2SA1162-G	R018	1-216-033-00	RES,CHIP	220 5% 1/10W
Q801	8-729-422-27	TRANSISTOR	2SD601A-Q	R019	1-216-033-00	RES,CHIP	220 5% 1/10W
Q802	1-801-806-11	TRANSISTOR	DTC144EKA-T146	R020	1-216-033-00	RES,CHIP	220 5% 1/10W
Q803	1-801-806-11	TRANSISTOR	DTC144EKA-T146	R021	1-216-033-00	RES,CHIP	220 5% 1/10W
Q804	1-801-806-11	TRANSISTOR	DTC144EKA-T146				
Q805	1-801-806-11	TRANSISTOR	DTC144EKA-T146				



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R022	1-216-033-00	RES,CHIP	220 5% 1/10W	R088	1-216-025-91	RES,CHIP	100 5% 1/10W
R023	1-216-049-91	RES,CHIP	1K 5% 1/10W	R089	1-216-055-00	RES,CHIP	1.8K 5% 1/10W
R024	1-216-025-91	RES,CHIP	100 5% 1/10W	R090	1-216-113-00	RES,CHIP	470K 5% 1/10W
R025	1-216-025-91	RES,CHIP	100 5% 1/10W	R091	1-216-017-91	RES,CHIP	47 5% 1/10W
R026	1-216-025-91	RES,CHIP	100 5% 1/10W	R092	1-216-113-00	RES,CHIP	470K 5% 1/10W
R027	1-216-025-91	RES,CHIP	100 5% 1/10W	R093	1-216-017-91	RES,CHIP	47 5% 1/10W
R028	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R094	1-216-113-00	RES,CHIP	470K 5% 1/10W
R029	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R095	1-216-017-91	RES,CHIP	47 5% 1/10W
R030	1-216-033-00	RES,CHIP	220 5% 1/10W	R096	1-216-055-00	RES,CHIP	1.8K 5% 1/10W
R031	1-216-037-00	RES,CHIP	330 5% 1/10W	R097	1-216-055-00	RES,CHIP	1.8K 5% 1/10W
R032	1-216-033-00	RES,CHIP	220 5% 1/10W	R099	1-216-043-91	RES,CHIP	560 5% 1/10W
R033	1-216-033-00	RES,CHIP	220 5% 1/10W	R100	1-216-043-91	RES,CHIP	560 5% 1/10W
R034	1-216-033-00	RES,CHIP	220 5% 1/10W	R101	1-216-043-91	RES,CHIP	560 5% 1/10W
R035	1-216-033-00	RES,CHIP	220 5% 1/10W	R102	1-216-113-00	RES,CHIP	470K 5% 1/10W
R036	1-216-033-00	RES,CHIP	220 5% 1/10W	R103	1-216-113-00	RES,CHIP	470K 5% 1/10W
R037	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R104	1-216-113-00	RES,CHIP	470K 5% 1/10W
R038	1-216-033-00	RES,CHIP	220 5% 1/10W	R105	1-216-017-91	RES,CHIP	47 5% 1/10W
R039	1-216-033-00	RES,CHIP	220 5% 1/10W	R106	1-216-017-91	RES,CHIP	47 5% 1/10W
R040	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R107	1-216-017-91	RES,CHIP	47 5% 1/10W
R041	1-216-033-00	RES,CHIP	220 5% 1/10W	R108	1-216-113-00	RES,CHIP	470K 5% 1/10W
R042	1-216-033-00	RES,CHIP	220 5% 1/10W	R109	1-216-113-00	RES,CHIP	470K 5% 1/10W
R043	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R110	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R044	1-216-121-91	RES,CHIP	1M 5% 1/10W	R111	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R045	1-216-097-91	RES,CHIP	100K 5% 1/10W	R112	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R046	1-216-073-00	RES,CHIP	10K 5% 1/10W	R113	1-216-113-00	RES,CHIP	470K 5% 1/10W
R047	1-216-073-00	RES,CHIP	10K 5% 1/10W	R114	1-216-043-91	RES,CHIP	560 5% 1/10W
R048	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R115	1-216-043-91	RES,CHIP	560 5% 1/10W
R049	1-216-049-91	RES,CHIP	1K 5% 1/10W	R116	1-216-043-91	RES,CHIP	560 5% 1/10W
R050	1-216-049-91	RES,CHIP	1K 5% 1/10W	R117	1-216-295-91	SHORT	0
R051	1-216-049-91	RES,CHIP	1K 5% 1/10W	R118	1-216-053-00	RES,CHIP	1.5K 5% 1/10W
R052	1-216-049-91	RES,CHIP	1K 5% 1/10W	R119	1-216-053-00	RES,CHIP	1.5K 5% 1/10W
R053	1-216-049-91	RES,CHIP	1K 5% 1/10W	R120	1-216-061-91	RES,CHIP	3.3K 5% 1/10W
R054	1-216-033-00	RES,CHIP	220 5% 1/10W	R121	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R055	1-216-033-00	RES,CHIP	220 5% 1/10W	R122	1-216-033-00	RES,CHIP	220 5% 1/10W
R056	1-216-049-91	RES,CHIP	1K 5% 1/10W	R123	1-216-017-91	RES,CHIP	47 5% 1/10W
R057	1-216-049-91	RES,CHIP	1K 5% 1/10W	R124	1-216-017-91	RES,CHIP	47 5% 1/10W
R059	1-216-089-91	RES,CHIP	47K 5% 1/10W	R125	1-216-017-91	RES,CHIP	47 5% 1/10W
R060	1-216-049-91	RES,CHIP	1K 5% 1/10W	R126	1-216-033-00	RES,CHIP	220 5% 1/10W
R061	1-216-025-91	RES,CHIP	100 5% 1/10W	R127	1-216-025-91	RES,CHIP	100 5% 1/10W
R062	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R128	1-216-025-91	RES,CHIP	100 5% 1/10W
R063	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R129	1-216-073-00	RES,CHIP	10K 5% 1/10W
R064	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R130	1-216-073-00	RES,CHIP	10K 5% 1/10W
R066	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R131	1-216-073-00	RES,CHIP	10K 5% 1/10W
R068	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R151	1-216-025-91	RES,CHIP	100 5% 1/10W
R069	1-216-033-00	RES,CHIP	220 5% 1/10W	R152	1-216-083-00	RES,CHIP	27K 5% 1/10W
R070	1-216-033-00	RES,CHIP	220 5% 1/10W	R153	1-216-689-11	RES,CHIP	39K 5% 1/10W
R071	1-216-033-00	RES,CHIP	220 5% 1/10W	R154	1-216-043-91	RES,CHIP	560 5% 1/10W
R072	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R155	1-216-025-91	RES,CHIP	100 5% 1/10W
R074	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R156	1-216-045-00	RES,CHIP	680 5% 1/10W
R075	1-216-061-91	RES,CHIP	3.3K 5% 1/10W	R157	1-216-049-91	RES,CHIP	1K 5% 1/10W
R077	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R158	1-215-900-11	METAL OXIDE	22K 5% 2W
R078	1-216-025-91	RES,CHIP	100 5% 1/10W	R159	1-216-041-00	RES,CHIP	470 5% 1/10W
R079	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R160	1-216-025-91	RES,CHIP	100 5% 1/10W
R084	1-216-025-91	RES,CHIP	100 5% 1/10W	R161	1-216-083-00	RES,CHIP	27K 5% 1/10W
R085	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R162	1-216-041-00	RES,CHIP	470 5% 1/10W
R086	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R163	1-216-689-11	RES,CHIP	39K 5% 1/10W
R087	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R164	1-216-065-91	RES,CHIP	4.7K 5% 1/10W

# KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R166	1-216-025-91	RES,CHIP	100 5% 1/10W	R256	1-216-049-91	RES,CHIP	1K 5% 1/10W
R167	1-216-025-91	RES,CHIP	100 5% 1/10W	R257	1-216-025-91	RES,CHIP	100 5% 1/10W
R168	1-216-025-91	RES,CHIP	100 5% 1/10W	R258	1-216-025-91	RES,CHIP	100 5% 1/10W
R169	1-216-065-91	RES,CHIP	4.7K 5% 1/10W				
R170	1-216-025-91	RES,CHIP	100 5% 1/10W	R259	1-216-025-91	RES,CHIP	100 5% 1/10W
				R260	1-208-810-11	RES,CHIP	15K 0.50% 1/10W
R171	1-216-295-91	SHORT	0	R261	1-216-049-91	RES,CHIP	1K 5% 1/10W
R201	1-216-295-91	SHORT	0	R262	1-216-648-11	RES,CHIP	750 0.50% 1/10W
R202	1-216-041-00	RES,CHIP	470 5% 1/10W	R263	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R203	1-216-051-00	RES,CHIP	1.2K 5% 1/10W				
R204	1-216-041-00	RES,CHIP	470 5% 1/10W	R264	1-216-049-91	RES,CHIP	1K 5% 1/10W
				R265	1-216-017-91	RES,CHIP	47 5% 1/10W
R205	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R266	1-216-021-00	RES,CHIP	68 5% 1/10W
R206	1-216-295-91	SHORT	0	R268	1-208-800-11	RES,CHIP	5.6K 0.50% 1/10W
R207	1-216-041-00	RES,CHIP	470 5% 1/10W	R269	1-208-776-11	RES,CHIP	560 0.50% 1/10W
R208	1-216-017-91	RES,CHIP	47 5% 1/10W				
R209	1-216-049-91	RES,CHIP	1K 5% 1/10W	R270	1-216-049-91	RES,CHIP	1K 5% 1/10W
				R272	1-216-025-91	RES,CHIP	100 5% 1/10W
R210	1-216-049-91	RES,CHIP	1K 5% 1/10W	R273	1-216-025-91	RES,CHIP	100 5% 1/10W
R211	1-216-041-00	RES,CHIP	470 5% 1/10W	R274	1-216-073-00	RES,CHIP	10K 5% 1/10W
R212	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R275	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R213	1-208-776-11	RES,CHIP	560 0.50% 1/10W				
R215	1-216-025-91	RES,CHIP	100 5% 1/10W	R276	1-216-097-91	RES,CHIP	100K 5% 1/10W
				R277	1-216-089-91	RES,CHIP	47K 5% 1/10W
R216	1-216-025-91	RES,CHIP	100 5% 1/10W	R278	1-216-073-00	RES,CHIP	10K 5% 1/10W
R217	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R279	1-216-129-00	RES,CHIP	2.2M 5% 1/10W
R218	1-216-049-91	RES,CHIP	1K 5% 1/10W	R280	1-216-073-00	RES,CHIP	10K 5% 1/10W
R219	1-216-298-00	RES,CHIP	2.2 5% 1/10W				
R222	1-208-800-11	RES,CHIP	5.6K 0.50% 1/10W	R281	1-216-025-91	RES,CHIP	100 5% 1/10W
				R282	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R223	1-208-800-11	RES,CHIP	5.6K 0.50% 1/10W	R283	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R224	1-216-105-91	RES,CHIP	220K 5% 1/10W	R284	1-216-025-91	RES,CHIP	100 5% 1/10W
R225	1-216-071-00	RES,CHIP	8.2K 5% 1/10W	R285	1-216-049-91	RES,CHIP	1K 5% 1/10W
R226	1-216-041-00	RES,CHIP	470 5% 1/10W				
R227	1-216-025-91	RES,CHIP	100 5% 1/10W	R286	1-216-025-91	RES,CHIP	100 5% 1/10W
				R287	1-216-025-91	RES,CHIP	100 5% 1/10W
R228	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R288	1-216-017-91	RES,CHIP	47 5% 1/10W
R229	1-216-033-00	RES,CHIP	220 5% 1/10W	R289	1-216-049-91	RES,CHIP	1K 5% 1/10W
R230	1-216-025-91	RES,CHIP	100 5% 1/10W	R290	1-216-049-91	RES,CHIP	1K 5% 1/10W
R231	1-216-065-91	RES,CHIP	4.7K 5% 1/10W				
R232	1-216-295-91	SHORT	0	R291	1-216-049-91	RES,CHIP	1K 5% 1/10W
				R292	1-216-049-91	RES,CHIP	1K 5% 1/10W
R233	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R293	1-216-049-91	RES,CHIP	1K 5% 1/10W
R234	1-208-782-11	RES,CHIP	1K 0.50% 1/10W	R294	1-216-049-91	RES,CHIP	1K 5% 1/10W
R235	1-216-025-91	RES,CHIP	100 5% 1/10W	R295	1-216-017-91	RES,CHIP	47 5% 1/10W
R236	1-216-025-91	RES,CHIP	100 5% 1/10W				
R237	1-216-047-91	RES,CHIP	820 5% 1/10W	R296	1-216-033-00	RES,CHIP	220 5% 1/10W
				R297	1-216-033-00	RES,CHIP	220 5% 1/10W
R238	1-208-790-11	RES,CHIP	2.2K 0.50% 1/10W	R298	1-216-033-00	RES,CHIP	220 5% 1/10W
R239	1-208-822-11	RES,CHIP	47K 0.50% 1/10W	R299	1-216-033-00	RES,CHIP	220 5% 1/10W
R240	1-216-025-91	RES,CHIP	100 5% 1/10W	R300	1-216-033-00	RES,CHIP	220 5% 1/10W
R241	1-216-025-91	RES,CHIP	100 5% 1/10W				
R242	1-216-025-91	RES,CHIP	100 5% 1/10W	R301	1-216-033-00	RES,CHIP	220 5% 1/10W
				R302	1-216-049-91	RES,CHIP	1K 5% 1/10W
R243	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R303	1-216-133-00	RES,CHIP	3.3M 5% 1/10W
R244	1-216-075-00	RES,CHIP	12K 5% 1/10W	R304	1-216-059-00	RES,CHIP	2.7K 5% 1/10W
R245	1-216-085-00	RES,CHIP	33K 5% 1/10W	R305	1-216-071-00	RES,CHIP	8.2K 5% 1/10W
R246	1-216-049-91	RES,CHIP	1K 5% 1/10W				
R247	1-208-793-11	RES,CHIP	3K 0.50% 1/10W	R306	1-208-776-11	RES,CHIP	560 0.50% 1/10W
				R307	1-208-810-11	RES,CHIP	15K 0.50% 1/10W
R248	1-216-025-91	RES,CHIP	100 5% 1/10W	R308	1-216-109-00	RES,CHIP	330K 5% 1/10W
R249	1-216-025-91	RES,CHIP	100 5% 1/10W	R309	1-216-061-91	RES,CHIP	3.3K 5% 1/10W
R250	1-216-049-91	RES,CHIP	1K 5% 1/10W	R310	1-216-033-00	RES,CHIP	220 5% 1/10W
R251	1-216-025-91	RES,CHIP	100 5% 1/10W				
R252	1-216-075-00	RES,CHIP	12K 5% 1/10W	R311	1-216-025-91	RES,CHIP	100 5% 1/10W
				R312	1-216-025-91	RES,CHIP	100 5% 1/10W
R253	1-216-085-00	RES,CHIP	33K 5% 1/10W	R313	1-216-113-00	RES,CHIP	470K 5% 1/10W
R255	1-216-025-91	RES,CHIP	100 5% 1/10W	R314	1-216-025-91	RES,CHIP	100 5% 1/10W





REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
R315	1-216-043-91	RES,CHIP	560	5% 1/10W	R414	1-216-081-00	RES,CHIP	22K	5% 1/10W
R316	1-216-049-91	RES,CHIP	1K	5% 1/10W	R415	1-216-073-00	RES,CHIP	10K	5% 1/10W
R317	1-216-059-00	RES,CHIP	2.7K	5% 1/10W	R418	1-216-025-91	RES,CHIP	100	5% 1/10W
R318	1-216-077-00	RES,CHIP	15K	5% 1/10W	R419	1-216-025-91	RES,CHIP	100	5% 1/10W
R319	1-216-655-11	RES,CHIP	1.5K	0.50% 1/10W	R420	1-216-025-91	RES,CHIP	100	5% 1/10W
R321	1-216-033-00	RES,CHIP	220	5% 1/10W	R421	1-216-025-91	RES,CHIP	100	5% 1/10W
R322	1-216-069-00	RES,CHIP	6.8K	5% 1/10W	R422	1-216-025-91	RES,CHIP	100	5% 1/10W
R323	1-216-017-91	RES,CHIP	47	5% 1/10W	R423	1-216-089-91	RES,CHIP	47K	5% 1/10W
R324	1-216-049-91	RES,CHIP	1K	5% 1/10W	R424	1-215-865-11	METAL OXIDE	220	5% 1W F
R325	1-216-073-00	RES,CHIP	10K	5% 1/10W	R425	1-216-041-00	RES,CHIP	470	5% 1/10W
R326	1-216-073-00	RES,CHIP	10K	5% 1/10W	R426	1-216-073-00	RES,CHIP	10K	5% 1/10W
R327	1-216-073-00	RES,CHIP	10K	5% 1/10W	R428	1-216-073-00	RES,CHIP	10K	5% 1/10W
R328	1-216-049-91	RES,CHIP	1K	5% 1/10W	R429	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R329	1-216-073-00	RES,CHIP	10K	5% 1/10W	R430	1-216-041-00	RES,CHIP	470	5% 1/10W
R330	1-216-075-00	RES,CHIP	12K	5% 1/10W	R431	1-216-073-00	RES,CHIP	10K	5% 1/10W
R331	1-216-065-91	RES,CHIP	4.7K	5% 1/10W	R432	1-216-073-00	RES,CHIP	10K	5% 1/10W
R332	1-216-075-00	RES,CHIP	12K	5% 1/10W	R433	1-216-041-00	RES,CHIP	470	5% 1/10W
R333	1-216-049-91	RES,CHIP	1K	5% 1/10W	R434	1-216-097-91	RES,CHIP	100K	5% 1/10W
R334	1-216-113-00	RES,CHIP	470K	5% 1/10W	R435	1-216-073-00	RES,CHIP	10K	5% 1/10W
R335	1-216-041-00	RES,CHIP	470	5% 1/10W	R437	1-216-033-00	RES,CHIP	220	5% 1/10W
R336	1-216-049-91	RES,CHIP	1K	5% 1/10W	R438	1-216-073-00	RES,CHIP	10K	5% 1/10W
R337	1-216-037-00	RES,CHIP	330	5% 1/10W	R439	1-216-041-00	RES,CHIP	470	5% 1/10W
R338	1-216-075-00	RES,CHIP	12K	5% 1/10W	R440	1-216-033-00	RES,CHIP	220	5% 1/10W
R339	1-216-049-91	RES,CHIP	1K	5% 1/10W	R441	1-216-049-91	RES,CHIP	1K	5% 1/10W
R340	1-216-041-00	RES,CHIP	470	5% 1/10W	R442	1-216-073-00	RES,CHIP	10K	5% 1/10W
R341	1-216-040-00	RES,CHIP	430	5% 1/10W	R443	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R342	1-208-783-11	RES,CHIP	1.1K	0.50% 1/10W	R444	1-216-077-00	RES,CHIP	15K	5% 1/10W
R343	1-216-085-00	RES,CHIP	33K	5% 1/10W	R446	1-216-085-00	RES,CHIP	33K	5% 1/10W
R344	1-216-025-91	RES,CHIP	100	5% 1/10W	R447	1-216-081-00	RES,CHIP	22K	5% 1/10W
R345	1-216-049-91	RES,CHIP	1K	5% 1/10W	R448	1-216-081-00	RES,CHIP	22K	5% 1/10W
R346	1-216-089-91	RES,CHIP	47K	5% 1/10W	R449	1-216-049-91	RES,CHIP	1K	5% 1/10W
R347	1-216-073-00	RES,CHIP	10K	5% 1/10W	R450	1-216-689-11	RES,CHIP	39K	5% 1/10W
R348	1-216-079-00	RES,CHIP	18K	5% 1/10W	R451	1-216-073-00	RES,CHIP	10K	5% 1/10W
R349	1-216-077-00	RES,CHIP	15K	5% 1/10W	R452	1-216-083-00	RES,CHIP	27K	5% 1/10W
R350	1-216-073-00	RES,CHIP	10K	5% 1/10W	R453	1-216-049-91	RES,CHIP	1K	5% 1/10W
R351	1-216-041-00	RES,CHIP	470	5% 1/10W	R454	1-216-049-91	RES,CHIP	1K	5% 1/10W
R352	1-216-081-00	RES,CHIP	22K	5% 1/10W	R455	1-216-083-00	RES,CHIP	27K	5% 1/10W
R353	1-216-113-00	RES,CHIP	470K	5% 1/10W	R456	1-216-073-00	RES,CHIP	10K	5% 1/10W
R354	1-216-065-91	RES,CHIP	4.7K	5% 1/10W	R457	1-216-073-00	RES,CHIP	10K	5% 1/10W
R360	1-216-051-00	RES,CHIP	1.2K	5% 1/10W	R458	1-249-389-11	CARBON	4.7	5% 1/4W F
R361	1-208-803-11	RES,CHIP	7.5K	0.50% 1/10W	R459	1-249-389-11	CARBON	4.7	5% 1/4W F
R362	1-208-774-11	RES,CHIP	470	0.50% 1/10W	R460	1-216-089-91	RES,CHIP	47K	5% 1/10W
R363	1-208-798-11	RES,CHIP	4.7K	0.50% 1/10W	R461	1-216-025-91	RES,CHIP	100	5% 1/10W
R401	1-216-057-00	RES,CHIP	2.2K	5% 1/10W	R462	1-216-075-00	RES,CHIP	12K	5% 1/10W
R402	1-216-057-00	RES,CHIP	2.2K	5% 1/10W	R463	1-216-089-91	RES,CHIP	47K	5% 1/10W
R403	1-216-121-91	RES,CHIP	1M	5% 1/10W	R464	1-216-089-91	RES,CHIP	47K	5% 1/10W
R404	1-216-065-91	RES,CHIP	4.7K	5% 1/10W	R465	1-216-121-91	RES,CHIP	1M	5% 1/10W
R405	1-216-065-91	RES,CHIP	4.7K	5% 1/10W	R466	1-216-079-00	RES,CHIP	18K	5% 1/10W
R406	1-216-035-00	RES,CHIP	270	5% 1/10W	R467	1-216-077-00	RES,CHIP	15K	5% 1/10W
R407	1-216-065-91	RES,CHIP	4.7K	5% 1/10W	R468	1-216-295-91	SHORT	0	
R408	1-216-025-91	RES,CHIP	100	5% 1/10W	R471	1-216-033-00	RES,CHIP	220	5% 1/10W
R409	1-216-025-91	RES,CHIP	100	5% 1/10W	R472	1-216-049-91	RES,CHIP	1K	5% 1/10W
R410	1-216-035-00	RES,CHIP	270	5% 1/10W	R473	1-216-049-91	RES,CHIP	1K	5% 1/10W
R411	1-216-025-91	RES,CHIP	100	5% 1/10W	R474	1-216-049-91	RES,CHIP	1K	5% 1/10W
R412	1-216-025-91	RES,CHIP	100	5% 1/10W	R475	1-208-817-11	RES,CHIP	30K	0.50% 1/10W
R413	1-216-025-91	RES,CHIP	100	5% 1/10W	R476	1-208-817-11	RES,CHIP	30K	0.50% 1/10W
					R477	1-216-089-91	RES,CHIP	47K	5% 1/10W

**KP-48V80/53V80/61V80**

RM-Y905 RM-Y905 RM-Y905

**A**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R478	1-216-089-91	RES,CHIP	47K 5%	R866	1-216-025-91	RES,CHIP	100 5%
R801	1-216-295-91	SHORT	0				
R802	1-216-295-91	SHORT	0	R867	1-216-025-91	RES,CHIP	100 5%
				R868	1-216-025-91	RES,CHIP	100 5%
R803	1-216-295-91	SHORT	0	R869	1-216-025-91	RES,CHIP	100 5%
R804	1-216-295-91	SHORT	0	R870	1-216-073-00	RES,CHIP	10K 5%
R805	1-216-065-91	RES,CHIP	4.7K 5%	R871	1-216-025-91	RES,CHIP	100 5%
R806	1-216-113-00	RES,CHIP	470K 5%				
R808	1-216-065-91	RES,CHIP	4.7K 5%	R872	1-216-025-91	RES,CHIP	100 5%
				R873	1-216-025-91	RES,CHIP	100 5%
R810	1-216-295-91	SHORT	0	R874	1-216-025-91	RES,CHIP	100 5%
R811	1-216-109-00	RES,CHIP	330K 5%	R875	1-216-295-91	SHORT	0
R813	1-216-117-00	RES,CHIP	680K 5%	R876	1-216-065-91	RES,CHIP	4.7K 5%
R814	1-216-117-00	RES,CHIP	680K 5%				
R815	1-216-025-91	RES,CHIP	100 5%	R877	1-208-816-11	RES,CHIP	27K 0.50%
				R878	1-216-049-91	RES,CHIP	1K 5%
R816	1-216-049-91	RES,CHIP	1K 5%	R879	1-216-295-91	SHORT	0
R817	1-216-025-91	RES,CHIP	100 5%	R880	1-216-049-91	RES,CHIP	1K 5%
R818	1-216-025-91	RES,CHIP	100 5%	R881	1-216-025-91	RES,CHIP	100 5%
R819	1-216-025-91	RES,CHIP	100 5%				
R820	1-216-295-91	SHORT	0	R882	1-216-033-00	RES,CHIP	220 5%
				R883	1-216-033-00	RES,CHIP	220 5%
R821	1-216-295-91	SHORT	0	R884	1-216-049-91	RES,CHIP	1K 5%
R822	1-216-295-91	SHORT	0	R885	1-216-025-91	RES,CHIP	100 5%
R823	1-216-295-91	SHORT	0	R887	1-216-295-91	SHORT	0
R824	1-216-025-91	RES,CHIP	100 5%				
R825	1-216-025-91	RES,CHIP	100 5%	R888	1-216-025-91	RES,CHIP	100 5%
				R891	1-216-073-00	RES,CHIP	10K 5%
R828	1-216-049-91	RES,CHIP	1K 5%	R892	1-208-802-11	RES,CHIP	6.8K 0.50%
R829	1-216-073-00	RES,CHIP	10K 5%	R893	1-216-073-00	RES,CHIP	10K 5%
R830	1-216-025-91	RES,CHIP	100 5%	R894	1-216-033-00	RES,CHIP	220 5%
R831	1-216-049-91	RES,CHIP	1K 5%				
R832	1-216-073-00	RES,CHIP	10K 5%	R895	1-216-025-91	RES,CHIP	100 5%
				R896	1-216-121-91	RES,CHIP	1M 5%
R833	1-216-049-91	RES,CHIP	1K 5%	R897	1-216-049-91	RES,CHIP	1K 5%
R834	1-216-049-91	RES,CHIP	1K 5%	R898	1-216-049-91	RES,CHIP	1K 5%
R836	1-216-049-91	RES,CHIP	1K 5%	R899	1-216-033-00	RES,CHIP	220 5%
R838	1-216-025-91	RES,CHIP	100 5%				
R839	1-216-025-91	RES,CHIP	100 5%	R900	1-216-025-91	RES,CHIP	100 5%
				R901	1-216-033-00	RES,CHIP	220 5%
R840	1-216-025-91	RES,CHIP	100 5%	R902	1-216-033-00	RES,CHIP	220 5%
R842	1-216-025-91	RES,CHIP	100 5%	R903	1-216-025-91	RES,CHIP	100 5%
R843	1-216-025-91	RES,CHIP	100 5%	R904	1-216-033-00	RES,CHIP	220 5%
R844	1-216-025-91	RES,CHIP	100 5%				
R846	1-216-025-91	RES,CHIP	100 5%	R905	1-216-025-91	RES,CHIP	100 5%
				R906	1-216-025-91	RES,CHIP	100 5%
R847	1-216-033-00	RES,CHIP	220 5%	R907	1-216-025-91	RES,CHIP	100 5%
R848	1-216-025-91	RES,CHIP	100 5%	R908	1-216-025-91	RES,CHIP	100 5%
R849	1-216-025-91	RES,CHIP	100 5%	R910	1-216-025-91	RES,CHIP	100 5%
R850	1-216-025-91	RES,CHIP	100 5%				
R851	1-216-025-91	RES,CHIP	100 5%	R911	1-216-025-91	RES,CHIP	100 5%
				R912	1-216-049-91	RES,CHIP	1K 5%
R852	1-208-814-91	RES,CHIP	22K 0.50%	R913	1-216-025-91	RES,CHIP	100 5%
R853	1-216-025-91	RES,CHIP	100 5%	R914	1-216-049-91	RES,CHIP	1K 5%
R854	1-216-025-91	RES,CHIP	100 5%	R915	1-216-049-91	RES,CHIP	1K 5%
R855	1-216-025-91	RES,CHIP	100 5%				
R856	1-216-033-00	RES,CHIP	220 5%	R916	1-216-049-91	RES,CHIP	1K 5%
				R917	1-216-025-91	RES,CHIP	100 5%
R857	1-216-025-91	RES,CHIP	100 5%	R918	1-208-806-11	RES,CHIP	10K 0.50%
R858	1-216-073-00	RES,CHIP	10K 5%	R919	1-216-061-91	RES,CHIP	3.3K 5%
R859	1-216-081-00	RES,CHIP	22K 5%	R920	1-216-057-00	RES,CHIP	2.2K 5%
R860	1-216-025-91	RES,CHIP	100 5%				
R861	1-216-073-00	RES,CHIP	10K 5%	R922	1-216-049-91	RES,CHIP	1K 5%
				R923	1-216-043-91	RES,CHIP	560 5%
R862	1-216-073-00	RES,CHIP	10K 5%	R924	1-216-053-00	RES,CHIP	1.5K 5%
R863	1-216-025-91	RES,CHIP	100 5%	R925	1-216-043-91	RES,CHIP	560 5%
R864	1-208-801-11	RES,CHIP	6.2K 0.50%	R926	1-216-053-00	RES,CHIP	1.5K 5%
R865	1-216-025-91	RES,CHIP	100 5%				



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R928	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R1013	1-216-295-91	SHORT	0
R929	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1014	1-216-295-91	SHORT	0
R932	1-208-792-11	RES,CHIP	2.7K 0.50% 1/10W	R1015	1-216-295-91	SHORT	0
R935	1-216-025-91	RES,CHIP	100 5% 1/10W	R1403	1-216-049-91	RES,CHIP	1K 5% 1/10W
R936	1-216-025-91	RES,CHIP	100 5% 1/10W	R1404	1-216-049-91	RES,CHIP	1K 5% 1/10W
R937	1-216-025-91	RES,CHIP	100 5% 1/10W	R1406	1-216-061-91	RES,CHIP	3.3K 5% 1/10W
R938	1-208-764-11	RES,CHIP	180 0.50% 1/10W	R1407	1-216-049-91	RES,CHIP	1K 5% 1/10W
R939	1-208-766-11	RES,CHIP	220 0.50% 1/10W	R1408	1-216-025-91	RES,CHIP	100 5% 1/10W
R941	1-216-061-91	RES,CHIP	3.3K 5% 1/10W	R1409	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R942	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R1410	1-216-025-91	RES,CHIP	100 5% 1/10W
R943	1-216-041-00	RES,CHIP	470 5% 1/10W	R1411	1-216-025-91	RES,CHIP	100 5% 1/10W
R945	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R1412	1-216-025-91	RES,CHIP	100 5% 1/10W
R950	1-216-043-91	RES,CHIP	560 5% 1/10W	R1413	1-216-025-91	RES,CHIP	100 5% 1/10W
R951	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R1414	1-216-025-91	RES,CHIP	100 5% 1/10W
R952	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1415	1-216-025-91	RES,CHIP	100 5% 1/10W
R953	1-216-025-91	RES,CHIP	100 5% 1/10W	R1416	1-216-025-91	RES,CHIP	100 5% 1/10W
R954	1-216-025-91	RES,CHIP	100 5% 1/10W	R1417	1-216-025-91	RES,CHIP	100 5% 1/10W
R955	1-216-025-91	RES,CHIP	100 5% 1/10W	R1418	1-216-025-91	RES,CHIP	100 5% 1/10W
R956	1-216-025-91	RES,CHIP	100 5% 1/10W	R1419	1-216-033-00	RES,CHIP	220 5% 1/10W
R957	1-216-025-91	RES,CHIP	100 5% 1/10W	R1420	1-216-045-00	RES,CHIP	680 5% 1/10W
R958	1-216-025-91	RES,CHIP	100 5% 1/10W	R1421	1-216-025-91	RES,CHIP	100 5% 1/10W
R959	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1422	1-216-025-91	RES,CHIP	100 5% 1/10W
R960	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1423	1-216-049-91	RES,CHIP	1K 5% 1/10W
R961	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1424	1-216-061-91	RES,CHIP	3.3K 5% 1/10W
R962	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1425	1-216-009-91	RES,CHIP	22 5% 1/10W
R963	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1427	1-216-109-00	RES,CHIP	330K 5% 1/10W
R964	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1428	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R965	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1429	1-208-774-11	RES,CHIP	470 0.50% 1/10W
R966	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1430	1-216-033-00	RES,CHIP	220 5% 1/10W
R968	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1431	1-216-045-00	RES,CHIP	680 5% 1/10W
R970	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1432	1-216-071-00	RES,CHIP	8.2K 5% 1/10W
R972	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1433	1-216-077-00	RES,CHIP	15K 5% 1/10W
R974	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1434	1-216-025-91	RES,CHIP	100 5% 1/10W
R976	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	R1435	1-216-025-91	RES,CHIP	100 5% 1/10W
R978	1-208-810-11	RES,CHIP	15K 0.50% 1/10W	R1436	1-216-109-00	RES,CHIP	330K 5% 1/10W
R979	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1437	1-216-073-00	RES,CHIP	10K 5% 1/10W
R980	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1439	1-216-053-00	RES,CHIP	1.5K 5% 1/10W
R981	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1440	1-216-025-91	RES,CHIP	100 5% 1/10W
R982	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1441	1-216-025-91	RES,CHIP	100 5% 1/10W
R983	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1442	1-216-025-91	RES,CHIP	100 5% 1/10W
R985	1-208-810-11	RES,CHIP	15K 0.50% 1/10W	R1443	1-216-025-91	RES,CHIP	100 5% 1/10W
R987	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1444	1-216-025-91	RES,CHIP	100 5% 1/10W
R989	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1445	1-216-025-91	RES,CHIP	100 5% 1/10W
R991	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1446	1-216-025-91	RES,CHIP	100 5% 1/10W
R993	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1447	1-208-774-11	RES,CHIP	470 0.50% 1/10W
R994	1-208-817-11	RES,CHIP	30K 0.50% 1/10W	R1448	1-216-025-91	RES,CHIP	100 5% 1/10W
R996	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R1449	1-216-025-91	RES,CHIP	100 5% 1/10W
R997	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R1450	1-216-071-00	RES,CHIP	8.2K 5% 1/10W
R998	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R1451	1-216-025-91	RES,CHIP	100 5% 1/10W
R999	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R1452	1-216-025-91	RES,CHIP	100 5% 1/10W
R1000	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R1453	1-216-025-91	RES,CHIP	100 5% 1/10W
R1001	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R1454	1-216-077-00	RES,CHIP	15K 5% 1/10W
R1002	1-208-810-11	RES,CHIP	15K 0.50% 1/10W	R1455	1-216-025-91	RES,CHIP	100 5% 1/10W
R1003	1-208-818-11	RES,CHIP	33K 0.50% 1/10W	R1456	1-216-025-91	RES,CHIP	100 5% 1/10W
R1010	1-216-295-91	SHORT	0	R1457	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1011	1-216-295-91	SHORT	0	R1458	1-216-053-00	RES,CHIP	1.5K 5% 1/10W
R1012	1-216-295-91	SHORT	0	R1459	1-216-025-91	RES,CHIP	100 5% 1/10W

**KP-48V80/53V80/61V80**

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1460	1-216-025-91	RES,CHIP	100 5% 1/10W	R1528	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R1461	1-216-025-91	RES,CHIP	100 5% 1/10W	R1529	1-216-025-91	RES,CHIP	100 5% 1/10W
R1462	1-216-025-91	RES,CHIP	100 5% 1/10W	R1530	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1463	1-216-025-91	RES,CHIP	100 5% 1/10W	R1531	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1464	1-216-025-91	RES,CHIP	100 5% 1/10W	R1532	1-216-051-00	RES,CHIP	1.2K 5% 1/10W
R1465	1-216-025-91	RES,CHIP	100 5% 1/10W	R1533	1-216-051-00	RES,CHIP	1.2K 5% 1/10W
R1466	1-216-025-91	RES,CHIP	100 5% 1/10W	R1534	1-216-025-91	RES,CHIP	100 5% 1/10W
R1467	1-216-037-00	RES,CHIP	330 5% 1/10W	R1535	1-216-025-91	RES,CHIP	100 5% 1/10W
R1468	1-216-295-91	SHORT	0	R1536	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1470	1-216-009-91	RES,CHIP	22 5% 1/10W	R1537	1-208-801-11	RES,CHIP	6.2K 0.50% 1/10W
R1471	1-216-025-91	RES,CHIP	100 5% 1/10W	R1540	1-216-053-00	RES,CHIP	1.5K 5% 1/10W
R1472	1-208-774-11	RES,CHIP	470 0.50% 1/10W	R1541	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1473	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1542	1-216-025-91	RES,CHIP	100 5% 1/10W
R1474	1-216-033-00	RES,CHIP	220 5% 1/10W	R1543	1-216-025-91	RES,CHIP	100 5% 1/10W
R1476	1-208-780-11	RES,CHIP	820 0.50% 1/10W	R1544	1-216-025-91	RES,CHIP	100 5% 1/10W
R1477	1-216-295-91	SHORT	0	R1545	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1479	1-216-025-91	RES,CHIP	100 5% 1/10W	R1547	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1480	1-216-025-91	RES,CHIP	100 5% 1/10W	R1601	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1481	1-216-025-91	RES,CHIP	100 5% 1/10W	R1603	1-216-049-91	RES,CHIP	1K 5% 1/10W
R1482	1-216-041-00	RES,CHIP	470 5% 1/10W	R1604	1-216-049-91	RES,CHIP	1K 5% 1/10W
R1483	1-216-009-91	RES,CHIP	22 5% 1/10W	R1605	1-208-802-11	RES,CHIP	6.8K 0.50% 1/10W
R1484	1-216-009-91	RES,CHIP	22 5% 1/10W	R1607	1-208-806-11	RES,CHIP	10K 0.50% 1/10W
R1486	1-208-782-11	RES,CHIP	1K 0.50% 1/10W	R1609	1-216-025-91	RES,CHIP	100 5% 1/10W
R1487	1-216-025-91	RES,CHIP	100 5% 1/10W	R1610	1-216-025-91	RES,CHIP	100 5% 1/10W
R1489	1-216-075-00	RES,CHIP	12K 5% 1/10W	R1614	1-216-049-91	RES,CHIP	1K 5% 1/10W
R1490	1-216-081-00	RES,CHIP	22K 5% 1/10W	R1615	1-208-802-11	RES,CHIP	6.8K 0.50% 1/10W
R1492	1-216-009-91	RES,CHIP	22 5% 1/10W	R1616	1-216-049-91	RES,CHIP	1K 5% 1/10W
R1493	1-216-037-00	RES,CHIP	330 5% 1/10W	R1618	1-216-033-00	RES,CHIP	220 5% 1/10W
R1494	1-216-025-91	RES,CHIP	100 5% 1/10W	R1619	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R1495	1-208-784-11	RES,CHIP	1.2K 0.50% 1/10W	R1621	1-208-806-11	RES,CHIP	10K 0.50% 1/10W
R1496	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1622	1-216-033-00	RES,CHIP	220 5% 1/10W
R1497	1-208-774-11	RES,CHIP	470 0.50% 1/10W	R1623	1-216-025-91	RES,CHIP	100 5% 1/10W
R1498	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	R1624	1-216-025-91	RES,CHIP	100 5% 1/10W
R1499	1-208-780-11	RES,CHIP	820 0.50% 1/10W	R1627	1-216-061-91	RES,CHIP	3.3K 5% 1/10W
R1501	1-216-073-00	RES,CHIP	10K 5% 1/10W			<RELAY>	
R1504	1-216-025-91	RES,CHIP	100 5% 1/10W				
R1505	1-216-049-91	RES,CHIP	1K 5% 1/10W	RY401	1-755-028-11	RELAY	
R1506	1-216-049-91	RES,CHIP	1K 5% 1/10W	RY402	1-755-028-11	RELAY	
R1507	1-216-009-91	RES,CHIP	22 5% 1/10W				
R1508	1-216-041-00	RES,CHIP	470 5% 1/10W				
R1509	1-208-782-11	RES,CHIP	1K 0.50% 1/10W				
R1510	1-216-049-91	RES,CHIP	1K 5% 1/10W	TU151	8-598-431-20	TUNER, FSS BTF-WA411	
R1511	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	TU152	8-598-430-00	TUNER, FSS BTF-FA401	
R1512	1-216-075-00	RES,CHIP	12K 5% 1/10W				
R1513	1-216-081-00	RES,CHIP	22K 5% 1/10W				
R1514	1-216-025-91	RES,CHIP	100 5% 1/10W				
R1515	1-208-806-11	RES,CHIP	10K 0.50% 1/10W	X001	1-781-589-21	VIBRATOR, CRYSTAL	
R1516	1-208-774-11	RES,CHIP	470 0.50% 1/10W	X202	1-567-505-11	OSCILLATOR, CRYSTAL	
R1517	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	X203	1-579-583-11	VIBRATOR, CERAMIC	
R1518	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	X401	1-781-590-21	VIBRATOR, CRYSTAL	
R1519	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	X801	1-767-925-21	VIBRATOR, CRYSTAL	
R1520	1-216-049-91	RES,CHIP	1K 5% 1/10W	X1401	1-579-583-11	VIBRATOR, CERAMIC	
R1522	1-208-755-11	RES,CHIP	75 0.50% 1/10W	X1402	1-567-505-11	OSCILLATOR, CRYSTAL	
R1523	1-216-061-91	RES,CHIP	3.3K 5% 1/10W	X1403	1-579-583-11	VIBRATOR, CERAMIC	
R1525	1-216-073-00	RES,CHIP	10K 5% 1/10W	X1404	1-567-505-11	OSCILLATOR, CRYSTAL	
R1527	1-216-051-00	RES,CHIP	1.2K 5% 1/10W				

\*\*\*\*\*



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
* A-1373-727-A U BOARD, COMPLETE *****				<CONNECTOR>			
<CAPACITOR>				CN1701	1-573-301-21	CONNECTOR, BOARD TO BOARD 20P	
C1701	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	CN1702 *	1-564-526-11	PLUG, CONNECTOR 11P	
C1702	1-128-551-11	ELECT	22MF 20% 25V	CN1703	1-573-301-21	CONNECTOR, BOARD TO BOARD 20P	
C1703	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	CN2001	1-573-301-21	CONNECTOR, BOARD TO BOARD 20P	
C1704	1-126-935-11	ELECT	470MF 20% 16V	<DIODE>			
C1705	1-128-551-11	ELECT	22MF 20% 25V	D1701	8-719-110-17	DIODE RD10ESB2	
C1706	1-128-551-11	ELECT	22MF 20% 25V	D1702	8-719-110-17	DIODE RD10ESB2	
C1707	1-128-551-11	ELECT	22MF 20% 25V	D1703	8-719-110-17	DIODE RD10ESB2	
C1708	1-128-551-11	ELECT	22MF 20% 25V	D1704	8-719-110-17	DIODE RD10ESB2	
C1709	1-104-664-11	ELECT	47MF 20% 25V	D1705	8-719-110-17	DIODE RD10ESB2	
C1710	1-128-551-11	ELECT	22MF 20% 25V	D1706	8-719-110-17	DIODE RD10ESB2	
C1711	1-128-551-11	ELECT	22MF 20% 25V	D1707	8-719-110-17	DIODE RD10ESB2	
C1712	1-128-551-11	ELECT	22MF 20% 25V	D1708	8-719-110-17	DIODE RD10ESB2	
C1713	1-128-551-11	ELECT	22MF 20% 25V	D1709	8-719-110-17	DIODE RD10ESB2	
C1714	1-104-664-11	ELECT	47MF 20% 25V	D1710	8-719-110-17	DIODE RD10ESB2	
C1715	1-126-935-11	ELECT	470MF 20% 16V	D1711	8-719-110-17	DIODE RD10ESB2	
C1716	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D1712	8-719-110-17	DIODE RD10ESB2	
C1717	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V	D1713	8-719-110-17	DIODE RD10ESB2	
C1718	1-128-551-11	ELECT	22MF 20% 25V	D1714	8-719-110-17	DIODE RD10ESB2	
C1719	1-128-551-11	ELECT	22MF 20% 25V	D1715	8-719-110-17	DIODE RD10ESB2	
C1720	1-128-551-11	ELECT	22MF 20% 25V	D1716	8-719-110-17	DIODE RD10ESB2	
C1721	1-128-551-11	ELECT	22MF 20% 25V	D1717	8-719-110-17	DIODE RD10ESB2	
C1722	1-128-551-11	ELECT	22MF 20% 25V	D1718	8-719-110-17	DIODE RD10ESB2	
C1723	1-128-551-11	ELECT	22MF 20% 25V	D1719	8-719-110-17	DIODE RD10ESB2	
C1724	1-128-551-11	ELECT	22MF 20% 25V	D1720	8-719-110-17	DIODE RD10ESB2	
C1725	1-128-551-11	ELECT	22MF 20% 25V	D1721	8-719-110-17	DIODE RD10ESB2	
C1726	1-126-964-11	ELECT	10MF 20% 50V	D1722	8-719-110-17	DIODE RD10ESB2	
C1727	1-126-964-11	ELECT	10MF 20% 50V	D1723	8-719-110-17	DIODE RD10ESB2	
C1728	1-126-964-11	ELECT	10MF 20% 50V	D1724	8-719-110-17	DIODE RD10ESB2	
C1729	1-126-964-11	ELECT	10MF 20% 50V	D1725	8-719-110-17	DIODE RD10ESB2	
C1730	1-128-551-11	ELECT	22MF 20% 25V	D1726	8-719-110-17	DIODE RD10ESB2	
C1731	1-126-964-11	ELECT	10MF 20% 50V	D1727	8-719-110-17	DIODE RD10ESB2	
C1732	1-126-964-11	ELECT	10MF 20% 50V	D1728	8-719-110-17	DIODE RD10ESB2	
C1733	1-128-551-11	ELECT	22MF 20% 25V	D1729	8-719-110-17	DIODE RD10ESB2	
C1734	1-128-551-11	ELECT	22MF 20% 25V	D1730	8-719-110-17	DIODE RD10ESB2	
C1735	1-128-551-11	ELECT	22MF 20% 25V	D1731	8-719-991-33	DIODE 1SS133T-77	
C1736	1-128-551-11	ELECT	22MF 20% 25V	D1732	8-719-991-33	DIODE 1SS133T-77	
C1737	1-128-551-11	ELECT	22MF 20% 25V	D2001	8-719-991-33	DIODE 1SS133T-77	
C1738	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	D2002	8-719-991-33	DIODE 1SS133T-77	
C1740	1-126-935-11	ELECT	470MF 20% 16V	D2003	8-719-109-89	DIODE RD5.6ESB2	
C1741	1-128-551-11	ELECT	22MF 20% 25V	D2004	8-719-109-89	DIODE RD5.6ESB2	
C1742	1-128-551-11	ELECT	22MF 20% 25V	D2005	8-719-109-89	DIODE RD5.6ESB2	
C1743	1-104-664-11	ELECT	47MF 20% 25V	D2006	8-719-109-89	DIODE RD5.6ESB2	
C1744	1-128-551-11	ELECT	22MF 20% 25V	D2007	8-719-109-89	DIODE RD5.6ESB2	
C2001	1-126-960-11	ELECT	1MF 20% 50V	<IC>			
C2002	1-128-551-11	ELECT	22MF 20% 25V	IC1701	8-759-100-96	IC UPC4558G2	
C2003	1-163-021-91	CERAMIC CHIP	0.01MF 10% 50V	IC1702	8-752-066-69	IC CXA1845Q	
C2005	1-163-009-11	CERAMIC CHIP	0.001MF 10% 50V	IC1703	8-759-353-02	IC NJM2533M(TE2)	
C2006	1-104-664-11	ELECT	47MF 20% 25V	IC1704	8-759-443-11	IC NJM2283M-TE1	
				IC2001	8-759-470-63	IC NJM2145M-TE2	

# KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
		<JACK>					
J1701	1-750-515-11	TERMINAL BLOCK, S 3P(VIDEO 1 IN)		Q2005	1-801-806-11	TRANSISTOR DTC144EKA-T146	
J1702	1-750-515-11	TERMINAL BLOCK, S 3P(VIDEO 3 IN)		Q2006	8-729-216-22	TRANSISTOR 2SA1162-G	
J1703	1-774-358-11	JACK BLOCK, PIN(VIDEO 4 IN)		Q2008	8-729-216-22	TRANSISTOR 2SA1162-G	
J1704	1-774-358-11	JACK BLOCK, PIN(VIDEO 5 IN)		Q2010	8-729-216-22	TRANSISTOR 2SA1162-G	
J1705	1-750-517-11	JACK BLOCK, PIN 3P(TV OUT)				<RESISTOR>	
J1706	1-750-517-11	JACK BLOCK, PIN 3P(MONITOR OUT)		R1701	1-216-022-00	RES,CHIP 75 5% 1/10W	
J1707	1-750-516-11	JACK BLOCK, PIN 2P(AUDIO (VAR/ FIX)OUT)		R1702	1-216-041-00	RES,CHIP 470 5% 1/10W	
J2001	1-764-143-11	JACK 3P(CONTROL S OUT)		R1703	1-216-041-00	RES,CHIP 470 5% 1/10W	
J2002	1-764-143-11	JACK 3P(S-LINK 5)		R1704	1-216-022-00	RES,CHIP 75 5% 1/10W	
J2003	1-764-143-11	JACK 3P(S-LINK 4)		R1705	1-216-113-00	RES,CHIP 470K 5% 1/10W	
J2004	1-764-143-11	JACK 3P(S-LINK 3)		R1706	1-216-113-00	RES,CHIP 470K 5% 1/10W	
J2005	1-764-143-11	JACK 3P(S-LINK 1)		R1707	1-216-022-00	RES,CHIP 75 5% 1/10W	
		<COIL>		R1708	1-216-022-00	RES,CHIP 75 5% 1/10W	
L1701	1-414-187-11	INDUCTOR 47UH		R1709	1-216-022-00	RES,CHIP 75 5% 1/10W	
		<TRANSISTOR>		R1710	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1701	8-729-027-56	TRANSISTOR DTC143TKA-T146		R1711	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1702	8-729-027-56	TRANSISTOR DTC143TKA-T146		R1712	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1703	8-729-027-56	TRANSISTOR DTC143TKA-T146		R1713	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1704	8-729-027-56	TRANSISTOR DTC143TKA-T146		R1714	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1705	8-729-422-27	TRANSISTOR 2SD601A-Q		R1715	1-216-041-00	RES,CHIP 470 5% 1/10W	
Q1706	8-729-422-27	TRANSISTOR 2SD601A-Q		R1716	1-216-041-00	RES,CHIP 470 5% 1/10W	
Q1707	8-729-027-56	TRANSISTOR DTC143TKA-T146		R1717	1-216-041-00	RES,CHIP 470 5% 1/10W	
Q1708	8-729-027-56	TRANSISTOR DTC143TKA-T146		R1718	1-216-041-00	RES,CHIP 470 5% 1/10W	
Q1709	8-729-027-56	TRANSISTOR DTC143TKA-T146		R1719	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1710	8-729-027-56	TRANSISTOR DTC143TKA-T146		R1720	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1711	8-729-216-22	TRANSISTOR 2SA1162-G		R1721	1-216-089-91	RES,CHIP 47K 5% 1/10W	
Q1712	8-729-216-22	TRANSISTOR 2SA1162-G		R1722	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1713	8-729-422-27	TRANSISTOR 2SD601A-Q		R1723	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1714	8-729-422-27	TRANSISTOR 2SD601A-Q		R1724	1-216-089-91	RES,CHIP 47K 5% 1/10W	
Q1715	8-729-422-27	TRANSISTOR 2SD601A-Q		R1725	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1716	8-729-422-27	TRANSISTOR 2SD601A-Q		R1726	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1717	8-729-422-27	TRANSISTOR 2SD601A-Q		R1727	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1718	8-729-422-27	TRANSISTOR 2SD601A-Q		R1728	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1723	8-729-216-22	TRANSISTOR 2SA1162-G		R1729	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1724	8-729-422-27	TRANSISTOR 2SD601A-Q		R1730	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1725	8-729-422-27	TRANSISTOR 2SD601A-Q		R1731	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1726	8-729-422-27	TRANSISTOR 2SD601A-Q		R1732	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1727	8-729-216-22	TRANSISTOR 2SA1162-G		R1733	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1728	8-729-216-22	TRANSISTOR 2SA1162-G		R1734	1-216-022-00	RES,CHIP 75 5% 1/10W	
Q1729	8-729-216-22	TRANSISTOR 2SA1162-G		R1735	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1730	8-729-422-27	TRANSISTOR 2SD601A-Q		R1736	1-216-113-00	RES,CHIP 470K 5% 1/10W	
Q1731	8-729-422-27	TRANSISTOR 2SD601A-Q		R1737	1-216-019-00	RES,CHIP 56 5% 1/10W	
Q1732	8-729-422-27	TRANSISTOR 2SD601A-Q		R1738	1-216-017-91	RES,CHIP 47 5% 1/10W	
Q1733	8-729-216-22	TRANSISTOR 2SA1162-G		R1739	1-216-049-91	RES,CHIP 1K 5% 1/10W	
Q1734	8-729-216-22	TRANSISTOR 2SA1162-G		R1740	1-216-049-91	RES,CHIP 1K 5% 1/10W	
Q1735	8-729-216-22	TRANSISTOR 2SA1162-G		R1741	1-216-041-00	RES,CHIP 470 5% 1/10W	
Q2001	8-729-422-27	TRANSISTOR 2SD601A-Q		R1742	1-216-041-00	RES,CHIP 470 5% 1/10W	
Q2002	8-729-422-27	TRANSISTOR 2SD601A-Q		R1743	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
Q2003	8-729-216-22	TRANSISTOR 2SA1162-G		R1744	1-216-073-00	RES,CHIP 10K 5% 1/10W	
Q2004	8-729-216-22	TRANSISTOR 2SA1162-G		R1745	1-216-041-00	RES,CHIP 470 5% 1/10W	
				R1746	1-216-041-00	RES,CHIP 470 5% 1/10W	
				R1747	1-216-041-00	RES,CHIP 470 5% 1/10W	
				R1748	1-216-041-00	RES,CHIP 470 5% 1/10W	
				R1749	1-216-019-00	RES,CHIP 56 5% 1/10W	
				R1750	1-216-017-91	RES,CHIP 47 5% 1/10W	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1751	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1826	1-216-025-91	RES,CHIP	100 5% 1/10W
R1752	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1828	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1753	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R1829	1-216-025-91	RES,CHIP	100 5% 1/10W
R1754	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1830	1-216-025-91	RES,CHIP	100 5% 1/10W
R1755	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R1831	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1756	1-216-089-91	RES,CHIP	47K 5% 1/10W	R1832	1-216-025-91	RES,CHIP	100 5% 1/10W
R1757	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R1833	1-216-025-91	RES,CHIP	100 5% 1/10W
R1758	1-216-089-91	RES,CHIP	47K 5% 1/10W	R1834	1-216-025-91	RES,CHIP	100 5% 1/10W
R1759	1-216-017-91	RES,CHIP	47 5% 1/10W	R1837	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1760	1-216-009-91	RES,CHIP	22 5% 1/10W	R1838	1-216-025-91	RES,CHIP	100 5% 1/10W
R1761	1-216-025-91	RES,CHIP	100 5% 1/10W	R1839	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1769	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R1840	1-216-025-91	RES,CHIP	100 5% 1/10W
R1772	1-216-047-91	RES,CHIP	820 5% 1/10W	R1841	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1777	1-216-025-91	RES,CHIP	100 5% 1/10W	R1842	1-216-025-91	RES,CHIP	100 5% 1/10W
R1778	1-216-025-91	RES,CHIP	100 5% 1/10W	R1843	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1779	1-216-025-91	RES,CHIP	100 5% 1/10W	R1844	1-216-025-91	RES,CHIP	100 5% 1/10W
R1780	1-216-025-91	RES,CHIP	100 5% 1/10W	R1845	1-216-025-91	RES,CHIP	100 5% 1/10W
R1781	1-216-025-91	RES,CHIP	100 5% 1/10W	R1846	1-216-025-91	RES,CHIP	100 5% 1/10W
R1782	1-216-025-91	RES,CHIP	100 5% 1/10W	R1847	1-216-025-91	RES,CHIP	100 5% 1/10W
R1783	1-216-025-91	RES,CHIP	100 5% 1/10W	R1848	1-216-089-91	RES,CHIP	47K 5% 1/10W
R1784	1-216-025-91	RES,CHIP	100 5% 1/10W	R1849	1-216-089-91	RES,CHIP	47K 5% 1/10W
R1785	1-216-025-91	RES,CHIP	100 5% 1/10W	R1850	1-216-089-91	RES,CHIP	47K 5% 1/10W
R1786	1-216-025-91	RES,CHIP	100 5% 1/10W	R2001	1-216-041-00	RES,CHIP	470 5% 1/10W
R1787	1-216-653-11	METAL CHIP	1.2K 0.50% 1/10W	R2002	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1788	1-216-041-00	RES,CHIP	470 5% 1/10W	R2003	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1789	1-216-653-11	METAL CHIP	1.2K 0.50% 1/10W	R2004	1-216-089-91	RES,CHIP	47K 5% 1/10W
R1790	1-216-041-00	RES,CHIP	470 5% 1/10W	R2005	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1791	1-216-655-11	RES,CHIP	1.5K 0.50% 1/10W	R2006	1-216-089-91	RES,CHIP	47K 5% 1/10W
R1792	1-208-776-11	RES,CHIP	560 0.50% 1/10W	R2007	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R1793	1-216-025-91	RES,CHIP	100 5% 1/10W	R2008	1-216-105-91	RES,CHIP	220K 5% 1/10W
R1794	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R2009	1-216-097-91	RES,CHIP	100K 5% 1/10W
R1795	1-216-093-91	RES,CHIP	68K 5% 1/10W	R2010	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R1796	1-216-025-91	RES,CHIP	100 5% 1/10W	R2011	1-216-089-91	RES,CHIP	47K 5% 1/10W
R1797	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R2018	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1798	1-216-025-91	RES,CHIP	100 5% 1/10W	R2020	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1799	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R2022	1-216-073-00	RES,CHIP	10K 5% 1/10W
R1800	1-216-025-91	RES,CHIP	100 5% 1/10W	R2024	1-216-025-91	RES,CHIP	100 5% 1/10W
R1801	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	<TERMINAL BOARD>			
R1806	1-216-025-91	RES,CHIP	100 5% 1/10W	TB1701	1-537-712-11	TERMINAL, PUSH (CENTER SPEAKER)	
R1807	1-216-025-91	RES,CHIP	100 5% 1/10W	*****			
R1808	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	* A-1316-437-A G BOARD, COMPLETE (53V80)			
R1810	1-216-025-91	RES,CHIP	100 5% 1/10W	*****			
R1811	1-216-025-91	RES,CHIP	100 5% 1/10W	* A-1316-471-A G BOARD, COMPLETE (48/61V80)			
R1812	1-216-025-91	RES,CHIP	100 5% 1/10W	*****			
R1813	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	1-533-223-11 HOLDER, FUSE			
R1814	1-216-653-11	METAL CHIP	1.2K 0.50% 1/10W	1-923-106-33 WIREUL1007 AWG24 160MM BLK			
R1815	1-216-041-00	RES,CHIP	470 5% 1/10W	1-923-514-77 WIREUL1007 AWG24 35MM BLK			
R1816	1-216-653-11	METAL CHIP	1.2K 0.50% 1/10W	* 4-039-590-01 SHIELD, TRANSFORMER			
R1817	1-216-041-00	RES,CHIP	470 5% 1/10W	4-382-854-11 SCREW(M3X10), P, SW (+)			
R1818	1-216-025-91	RES,CHIP	100 5% 1/10W	7-682-952-09 SCREW+PSW 3X16			
R1819	1-216-025-91	RES,CHIP	100 5% 1/10W				
R1820	1-216-655-11	RES,CHIP	1.5K 0.50% 1/10W				
R1821	1-208-784-11	RES,CHIP	1.2K 0.50% 1/10W				
R1822	1-216-065-91	RES,CHIP	4.7K 5% 1/10W				
R1823	1-216-025-91	RES,CHIP	100 5% 1/10W				
R1824	1-216-025-91	RES,CHIP	100 5% 1/10W				
R1825	1-216-025-91	RES,CHIP	100 5% 1/10W				



Les composants identifiés par une trame et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

• The components identified by  $\blacksquare$  in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<CAPACITOR>							
C501	1-126-959-11	ELECT	0.47MF 20% 50V	C611	1-104-350-11	ELECT(BLOCK) 1000MF 20% 250V	
C502	1-102-002-00	CERAMIC	680PF 10% 500V	C612	1-104-350-11	ELECT(BLOCK) 1000MF 20% 250V	
C505	1-106-383-00	MYLAR	0.047MF 10% 200V	C613	1-136-165-00	FILM 0.1MF 5% 50V	
C506	1-102-212-00	CERAMIC	820PF 10% 500V	C614	1-130-467-00	MYLAR 470PF 5% 50V	
C508	1-102-002-00	CERAMIC	680PF 10% 500V	C615	1-104-331-11	CERAMIC 0.0022MF 10% 1KV	
C510	1-130-471-00	MYLAR	0.001MF 5% 50V	C616	1-130-471-00	MYLAR 0.001MF 5% 50V	
C513	1-126-933-11	ELECT	100MF 20% 16V	C617	1-137-605-11	FILM 0.01MF 10% 250V	
C514	1-130-495-00	MYLAR	0.1MF 5% 50V	C618	1-126-965-11	ELECT 22MF 20% 50V	
C515	1-126-960-11	ELECT	1MF 20% 50V	C619	1-104-664-11	ELECT 47MF 20% 16V	
C516	1-126-965-11	ELECT	22MF 20% 50V	C620	1-136-175-00	FILM 0.68MF 5% 50V	
$\blacksquare$ C517 $\Delta$	1-162-134-11	CERAMIC	470PF 10% 2KV	C621	1-136-175-00	FILM 0.68MF 5% 50V	
C518	1-130-487-00	MYLAR	0.022MF 5% 50V	C622	1-136-171-00	FILM 0.33MF 5% 50V	
C521 $\Delta$	1-128-660-91	FILM	0.039MF 3% 630V	C623	1-136-171-00	FILM 0.33MF 5% 50V	
C522 $\Delta$	1-117-658-11	FILM	14000PF 3% 1.2KV	C624	1-104-330-91	CERAMIC 470PF 10% 1KV	
C525	1-136-479-11	FILM	0.001MF 5% 50V	C625	1-104-664-11	ELECT 47MF 20% 16V	
C526	1-130-475-00	MYLAR	0.0022MF 5% 50V	C626	1-104-664-11	ELECT 47MF 20% 16V	
C527	1-129-702-00	FILM	0.001MF 5% 630V	C651	1-164-644-11	CERAMIC 330PF 10% 500V	
C529	1-130-495-00	MYLAR	0.1MF 5% 50V	C654	1-126-953-11	ELECT 2200MF 20% 35V	
C531	1-117-673-11	FILM	1.5MF 5% 250V	C655	1-126-953-11	ELECT 2200MF 20% 35V	
C533	1-106-359-00	MYLAR	0.0047MF 5% 100V	C656	1-102-121-00	CERAMIC 0.0022MF 10% 50V	
C534	1-162-116-00	CERAMIC	680PF 10% 2KV	C657	1-126-768-11	ELECT 2200MF 20% 16V	
C535	1-162-116-00	CERAMIC	680PF 10% 2KV	C658	1-126-943-11	ELECT 2200MF 20% 25V	
C536	1-126-965-11	ELECT	22MF 20% 50V	C659	1-126-943-11	ELECT 2200MF 20% 25V	
C537	1-102-244-00	CERAMIC	220PF 10% 500V	C662	1-123-024-21	ELECT 33MF 160V	
C538	1-106-359-00	MYLAR	0.0047MF 5% 100V	C663	1-104-665-11	ELECT 100MF 20% 25V	
C540	1-107-645-11	ELECT	22MF 20% 160V	C664	1-107-910-11	ELECT 100MF 20% 35V	
C542	1-102-228-00	CERAMIC	470PF 10% 500V	C665	1-126-934-11	ELECT 220MF 20% 10V	
C543	1-117-813-11	FILM	0.75MF 5% 250V	C666	1-126-927-11	ELECT 2200MF 20% 10V	
C544	1-110-626-11	ELECT	330MF 20% 160V	C667	1-104-664-11	ELECT 47MF 20% 25V	
C545	1-162-114-00	CERAMIC	0.0047MF 2KV	C668	1-104-664-11	ELECT 47MF 20% 25V	
C546	1-107-649-11	ELECT	2.2MF 20% 250V	C669	1-104-664-11	ELECT 47MF 20% 25V	
C547	1-126-971-11	ELECT	470MF 20% 50V	C670	1-106-343-00	MYLAR 0.001MF 10% 200V	
C548	1-104-665-11	ELECT	100MF 20% 25V	C671	1-106-343-00	MYLAR 0.001MF 10% 200V	
C549	1-130-489-00	MYLAR	0.033MF 5% 50V	C672	1-104-664-11	ELECT 47MF 20% 25V	
C550	1-104-665-11	ELECT	100MF 20% 25V	C673	1-126-960-11	ELECT 1MF 20% 50V	
C551	1-126-971-11	ELECT	470MF 20% 50V	C674	1-104-664-11	ELECT 47MF 20% 25V	
C552	1-130-489-00	MYLAR	0.033MF 5% 50V	C676	1-126-940-11	ELECT 330MF 20% 25V	
C553	1-126-935-11	ELECT	470MF 20% 16V	C678	1-104-665-11	ELECT 100MF 20% 25V	
C554	1-126-935-11	ELECT	470MF 20% 16V	C679	1-104-664-11	ELECT 47MF 20% 25V	
C555	1-104-665-11	ELECT	100MF 20% 25V	C680	1-128-551-11	ELECT 22MF 20% 25V	
C556	1-104-665-11	ELECT	100MF 20% 25V	C1501	1-130-495-00	MYLAR 0.1MF 5% 50V	
C557	1-128-562-11	ELECT	47MF 20% 100V	C1502	1-126-941-11	ELECT 470MF 20% 25V	
C563	1-104-664-11	ELECT	47MF 20% 25V	C1504	1-102-106-00	CERAMIC 100PF 10% 50V	
C564	1-102-129-00	CERAMIC	0.01MF 10% 50V	C1505	1-104-664-11	ELECT 47MF 20% 25V	
C565	1-102-129-00	CERAMIC	0.01MF 10% 50V	C1506	1-102-106-00	CERAMIC 100PF 10% 50V	
C566	1-104-666-11	ELECT	220MF 20% 25V	C1507	1-126-942-61	ELECT 1000MF 20% 25V	
C567	1-106-387-00	MYLAR	0.068MF 5% 200V	C1508	1-102-121-00	CERAMIC 0.0022MF 10% 50V	
C601 $\Delta$	1-136-311-11	FILM	0.47MF 20% 125V	C1510	1-126-941-11	ELECT 470MF 20% 25V	
C602	1-129-722-00	FILM	0.047MF 5% 630V	C1512	1-126-933-11	ELECT 100MF 20% 16V	
C604 $\Delta$	1-113-920-11	CERAMIC	0.0022MF 20% 250V	C1516	1-104-665-11	ELECT 100MF 20% 25V	
C606 $\Delta$	1-113-920-11	CERAMIC	0.0022MF 20% 250V	C1518	1-102-129-00	CERAMIC 0.01MF 10% 50V	
C607 $\Delta$	1-136-311-11	FILM	0.47MF 20% 125V	C1519	1-102-106-00	CERAMIC 100PF 10% 50V	
C608	1-107-670-11	ELECT	10MF 20% 400V	C1520	1-126-933-11	ELECT 100MF 20% 16V	
C609	1-130-467-00	MYLAR	470PF 5% 50V	C1521	1-126-941-11	ELECT 470MF 20% 25V	
C610	1-130-471-00	MYLAR	0.001MF 5% 50V	C1522	1-126-941-11	ELECT 470MF 20% 25V	
C1523	1-126-964-11	ELECT	10MF 20% 50V	C1524	1-102-106-00	CERAMIC 100PF 10% 50V	



Les composants identifiés par une trame et une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C1525	1-102-852-91	CERAMIC	47PF 5% 50V			<DIODE>	
C1526	1-136-177-00	FILM	1MF 5% 50V				
C1527	1-102-129-00	CERAMIC	0.01MF 10% 50V	D501	8-719-109-85	DIODE RD5.1ESB2	
C1528	1-126-941-11	ELECT	470MF 20% 25V	D505	8-719-110-41	DIODE RD15ESB2	
C1530	1-102-106-00	CERAMIC	100PF 10% 50V	D506	8-719-921-63	DIODE MTZJ-7.5B	
C1531	1-102-106-00	CERAMIC	100PF 10% 50V	D507	8-719-991-33	DIODE 1SS133T-77	
C1533	1-126-941-11	ELECT	470MF 20% 25V	D513	8-719-991-33	DIODE 1SS133T-77	
C1534	1-102-129-00	CERAMIC	0.01MF 10% 50V	D517	8-719-979-85	DIODE EGP20G	
C1536	1-102-106-00	CERAMIC	100PF 10% 50V	D518	8-719-945-80	DIODE ERC06-15S	
C1537	1-102-129-00	CERAMIC	0.01MF 10% 50V	D520	8-719-302-43	DIODE ELIZ	
C1538	1-126-941-11	ELECT	470MF 20% 25V	D522	8-719-302-43	DIODE ELIZ	
C1539	1-104-665-11	ELECT	100MF 20% 25V	D525	8-719-018-82	DIODE RGP02-20EL-6394	
C1540	1-126-941-11	ELECT	470MF 20% 25V	D526	8-719-018-82	DIODE RGP02-20EL-6394	
C1541	1-102-129-00	CERAMIC	0.01MF 10% 50V	D528	8-719-908-03	DIODE GP08D	
C1542	1-102-129-00	CERAMIC	0.01MF 10% 50V	D529	8-719-302-43	DIODE ELIZ	
C1545	1-126-933-11	ELECT	100MF 20% 16V	D530	8-719-991-33	DIODE 1SS133T-77	
C1546	1-102-129-00	CERAMIC	0.01MF 10% 50V	D531	8-719-991-33	DIODE 1SS133T-77	
C1547	1-130-487-00	MYLAR	0.022MF 5% 50V	D532	8-719-908-03	DIODE GP08D	
C1548	1-136-177-00	FILM	1MF 5% 50V	D533	8-719-302-43	DIODE ELIZ	
C1549	1-130-471-00	MYLAR	0.001MF 5% 50V	D534	8-719-302-43	DIODE ELIZ	
C1550	1-104-665-11	ELECT	100MF 20% 25V	D601	8-719-068-00	DIODE ERC04-06SE	
C1551	1-102-121-00	CERAMIC	0.0022MF 10% 50V	D602	8-719-068-00	DIODE ERC04-06SE	
C1552	1-106-220-00	MYLAR	0.1MF 5% 100V	D603	$\triangle$ 8-719-510-53	DIODE D4SB60L	
C1553	1-107-504-11	CERAMIC	10PF 0.5PF 500V	D604	8-719-110-41	DIODE RD15ESB2	
C1555	1-104-665-11	ELECT	100MF 20% 25V	D605	8-719-110-49	DIODE RD18ESB2	
C1556	1-104-665-11	ELECT	100MF 20% 25V	D607	8-719-991-33	DIODE 1SS133T-77	
C1557	1-126-969-11	ELECT	220MF 20% 50V	D609	8-719-948-45	DIODE ERA22-08	
C1559	1-137-401-11	FILM	0.22MF 5% 100V	D610	8-719-510-48	DIODE D1N20R	
C1560	1-126-942-61	ELECT	1000MF 20% 25V	D651	8-719-063-70	DIODE D1NL20U	
C1561	1-102-121-00	CERAMIC	0.0022MF 10% 50V	D652	8-719-028-45	DIODE D2L20U	
C1562	1-102-129-00	CERAMIC	0.01MF 10% 50V	D653	8-719-028-45	DIODE D2L20U	
C1563	1-137-370-11	FILM	0.01MF 5% 50V	D654	8-719-057-96	DIODE D10SC6M-4012	
C1566	1-137-370-11	FILM	0.01MF 5% 50V	D655	8-719-052-91	DIODE D4SBS4-F	
C1570	1-137-374-11	FILM	0.047MF 5% 50V	D656	8-719-028-45	DIODE D2L20U	
		<CONNECTOR>		D657	8-719-028-45	DIODE D2L20U	
CN501	* 1-779-890-11	CONNECTOR, BOARD TO BOARD	10P	D658	8-719-063-70	DIODE D1NL20U	
CN502	* 1-506-371-00	PIN, CONNECTOR	2P	D659	8-719-063-70	DIODE D1NL20U	
CN503	* 1-564-513-11	PLUG, CONNECTOR	10P	D660	8-719-028-45	DIODE D2L20U	
CN504	* 1-580-689-11	PIN, CONNECTOR (PC BOARD)	4P	D661	8-719-991-33	DIODE 1SS133T-77	
CN505	* 1-580-689-11	PIN, CONNECTOR (PC BOARD)	4P	D662	8-719-991-33	DIODE 1SS133T-77	
CN506	* 1-580-689-11	PIN, CONNECTOR (PC BOARD)	4P	D663	8-719-991-33	DIODE 1SS133T-77	
CN507	* 1-691-134-11	PIN, CONNECTOR (PC BOARD)	2P	D664	8-719-981-94	DIODE MTZJ-2.7A	
CN601	* 1-580-843-11	PIN, CONNECTOR (POWER)		D665	8-719-991-33	DIODE 1SS133T-77	
CN605	* 1-779-890-11	CONNECTOR, BOARD TO BOARD	10P	D666	8-719-991-33	DIODE 1SS133T-77	
CN651	* 1-779-890-11	CONNECTOR, BOARD TO BOARD	10P	D667	8-719-032-12	DIODE D1NS6	
CN652	* 1-573-963-11	PIN, CONNECTOR (PC BOARD)	3P	D668	8-719-110-61	DIODE RD24ESB1	
CN653	1-695-915-11	TAB (CONTACT)		D669	8-719-921-86	DIODE MTZJ-13	
CN1501	* 1-564-507-11	PLUG, CONNECTOR	4P	D670	8-719-027-22	DIODE D3S6M-F	
CN1502	* 1-779-890-11	CONNECTOR, BOARD TO BOARD	10P	D671	8-719-027-22	DIODE D3S6M-F	
CN1503	* 1-564-507-11	PLUG, CONNECTOR	4P	D673	8-719-991-33	DIODE 1SS133T-77	
CN1504	* 1-564-507-11	PLUG, CONNECTOR	4P	D674	8-719-991-33	DIODE 1SS133T-77	
CN1505	* 1-564-506-11	PLUG, CONNECTOR	3P	D675	8-719-110-17	DIODE RD10ESB2	
CN1507	* 1-564-506-11	PLUG, CONNECTOR	3P	D676	8-719-109-72	DIODE RD3.9ESB2	
CN1508	* 1-564-506-11	PLUG, CONNECTOR	3P	D677	8-719-991-33	DIODE 1SS133T-77	
				D680	8-719-991-33	DIODE 1SS133T-77	
				D1501	8-719-109-89	DIODE RD5.6ESB2	
				D1503	8-719-921-40	DIODE MTZJ-4.7C	

# KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D1504	8-719-110-08	DIODE RD8.2ESB2		L1509	1-412-533-21	INDUCTOR 47UH	
D1505	8-719-110-41	DIODE RD15ESB2		L1510	1-412-533-21	INDUCTOR 47UH	
D1506	8-719-110-41	DIODE RD15ESB2		L1511	1-412-533-21	INDUCTOR 47UH	
D1507	8-719-110-41	DIODE RD15ESB2		L1512	1-412-533-21	INDUCTOR 47UH	
D1509	8-719-110-41	DIODE RD15ESB2		L1513	1-412-525-31	INDUCTOR 10UH	
D1510	8-719-110-41	DIODE RD15ESB2		L1514	1-414-187-11	INDUCTOR 47UH	
D1513	8-719-110-41	DIODE RD15ESB2		L1515	1-414-187-11	INDUCTOR 47UH	
D1515	8-719-110-41	DIODE RD15ESB2				<NEONLAMP>	
D1520	8-719-109-93	DIODE RD6.2ESB2		NL501	1-517-778-21	LAMP, NEON	
D1521	8-719-109-93	DIODE RD6.2ESB2		NL502	1-517-778-21	LAMP, NEON	
D1522	8-719-924-16	DIODE MTZJ-T-77-24		NL503	1-517-778-21	LAMP, NEON	
D1523	8-719-924-16	DIODE MTZJ-T-77-24		NL504	1-517-778-21	LAMP, NEON	
D1525	8-719-908-03	DIODE GP08D		NL505	1-517-778-21	LAMP, NEON	
		<FUSE>				<ICLINK>	
F601	△ 1-576-193-11	FUSE 6.3A/125V		PS501	1-533-593-11	LINK, IC	
F651	△ 1-576-360-21	FUSE, MULTIPLE 4A		PS1501	1-533-593-11	LINK, IC	
F652	△ 1-576-360-21	FUSE, MULTIPLE 4A		PS1502	1-533-593-11	LINK, IC	
		<FERRITEBEAD>		PS1503	1-533-593-11	LINK, IC	
FB655	1-410-396-41	FERRITE 0.45UH		PS1504	1-533-593-11	LINK, IC	
FB656	1-410-396-41	FERRITE 0.45UH		PS1505	1-533-593-11	LINK, IC	
		<IC>		PS1506	1-533-593-11	LINK, IC	
IC502	8-759-133-90	IC É PC339C				<TRANSISTOR>	
IC601	△ 8-729-045-39	TRANSISTOR MX0842AB-F		Q501	8-729-048-47	TRANSISTOR 2SC2688(5)-LK	
IC651	8-759-103-93	IC É PC393C		Q502	8-729-048-46	TRANSISTOR 2SD2578-RF	
IC652	8-759-701-84	IC NJM7905FA		Q503	8-729-931-45	TRANSISTOR IRF614	
IC653	8-759-701-75	IC NJM7805FA		Q505	8-729-032-61	TRANSISTOR 2SC5022-02	
IC654	△ 8-749-012-13	IC DM-58		Q506	8-729-119-76	TRANSISTOR 2SA1175-HFE	
IC655	8-759-450-47	IC BA05T		Q507	8-729-032-61	TRANSISTOR 2SC5022-02	
IC1501	8-752-068-36	IC CXA1726AS		Q601	8-729-046-40	TRANSISTOR 2SK2663	
IC1502	8-749-014-37	IC STK392-150		Q602	8-729-922-39	TRANSISTOR 2SD2144S-V	
IC1504	8-759-634-51	IC M5218AP		Q651	8-729-119-76	TRANSISTOR 2SA1175-HFE	
IC1505	8-759-634-51	IC M5218AP		Q652	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
IC1506	8-749-014-37	IC STK392-150		Q653	8-729-119-76	TRANSISTOR 2SA1175-HFE	
IC1507	8-759-634-51	IC M5218AP		Q654	8-729-119-76	TRANSISTOR 2SA1175-HFE	
IC1509	8-759-593-33	IC LA78045		Q655	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		<COIL>		Q656	8-729-119-78	TRANSISTOR 2SC2785-HFE	
L501	1-412-533-21	INDUCTOR 47UH		Q657	8-729-119-76	TRANSISTOR 2SA1175-HFE	
L502	1-414-187-11	INDUCTOR 47UH		Q658	8-729-119-76	TRANSISTOR 2SA1175-HFE	
L503	1-459-104-00	COIL, DUST CORE		Q1501	8-729-119-78	TRANSISTOR 2SC2785-HFE	
L504	△ 1-419-082-11	COIL, HORIZONTAL LINEARITY		Q1502	8-729-119-76	TRANSISTOR 2SA1175-HFE	
L505	1-412-552-11	INDUCTOR 2.2MMH		Q1503	8-729-119-78	TRANSISTOR 2SC2785-HFE	
L601	△ 1-433-900-11	TRANSFORMER, LINE FILTER		Q1505	8-729-119-78	TRANSISTOR 2SC2785-HFE	
L651	1-412-525-31	INDUCTOR 10UH		Q1506	8-729-119-78	TRANSISTOR 2SC2785-HFE	
L652	1-412-525-31	INDUCTOR 10UH		Q1508	8-729-119-78	TRANSISTOR 2SC2785-HFE	
L653	1-412-525-31	INDUCTOR 10UH		Q1509	8-729-119-76	TRANSISTOR 2SA1175-HFE	
L656	1-412-525-31	INDUCTOR 10UH		Q1511	8-729-119-78	TRANSISTOR 2SC2785-HFE	
L657	1-412-525-31	INDUCTOR 10UH				<RESISTOR>	
L658	1-412-525-31	INDUCTOR 10UH		R501	1-247-843-11	CARBON 3.3K 5% 1/4W	
L1501	1-412-533-21	INDUCTOR 47UH		R502	1-249-419-11	CARBON 1.5K 5% 1/4W	
L1502	1-412-533-21	INDUCTOR 47UH					

• The components identified by **◻** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par une trame et une marque **◻** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

The components identified by shading and mark **◻** are critical for safety. Replace only with part number specified.

# KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R503	1-260-336-11	CARBON	4.7K 5% 1/2W	R583	1-260-117-11	CARBON	33K 5% 1/2W
R504	1-260-087-11	CARBON	100 5% 1/2W	R584	1-249-377-11	CARBON	0.47 5% 1/4W F
R505	1-260-087-11	CARBON	100 5% 1/2W	R586	1-215-862-11	METAL OXIDE	68 5% 1W F
R506	1-216-481-11	METAL OXIDE	1.2K 5% 3W F				(48/61V80)
R507	1-216-481-11	METAL OXIDE	1.2K 5% 3W F	R586	1-215-864-00	METAL OXIDE	150 5% 1W F
R508	1-216-481-11	METAL OXIDE	1.2K 5% 3W F				(53V80)
R509	1-260-337-11	CARBON	5.6K 5% 1/2W	R587	1-216-349-00	METAL OXIDE	1 5% 1W F
R510	1-249-421-11	CARBON	2.2K 5% 1/4W	R588	1-215-862-11	METAL OXIDE	68 5% 1W F
							(48/61V80)
R511	1-215-879-11	METAL OXIDE	47K 5% 1W F	R588	1-215-864-00	METAL OXIDE	150 5% 1W F
R512	1-249-422-11	CARBON	2.7K 5% 1/4W				(53V80)
R513	1-249-422-11	CARBON	2.7K 5% 1/4W	R589	1-247-807-31	CARBON	100 5% 1/4W
R514	1-249-422-11	CARBON	2.7K 5% 1/4W	R590	1-260-127-11	CARBON	220K 5% 1/2W
R515	1-260-131-11	CARBON	470K 5% 1/2W	R591	1-216-392-11	METAL OXIDE	1.8 5% 3W F
R517	1-247-895-91	CARBON	470K 5% 1/4W	R592	1-247-863-91	CARBON	22K 5% 1/4W
R519	1-215-445-00	METAL	10K 1% 1/4W	R593	1-249-429-11	CARBON	10K 5% 1/4W
R522	1-215-399-00	METAL	120 1% 1/4W	R594	1-249-377-11	CARBON	0.47 5% 1/4W F
R523	1-247-895-91	CARBON	470K 5% 1/4W	R595	1-249-377-11	CARBON	0.47 5% 1/4W F
R524	1-247-863-91	CARBON	22K 5% 1/4W	R596	1-249-377-11	CARBON	0.47 5% 1/4W F
R525	1-249-428-11	CARBON	8.2K 5% 1/4W	R597	1-260-288-11	CARBON	0.47 5% 1/2W
R526	1-249-437-11	CARBON	47K 5% 1/4W	R598	1-249-377-11	CARBON	0.47 5% 1/4W F
R527	1-249-428-11	CARBON	8.2K 5% 1/4W	R599	1-249-429-11	CARBON	10K 5% 1/4W
R528	1-249-437-11	CARBON	47K 5% 1/4W	R600	1-247-863-91	CARBON	22K 5% 1/4W
R529	1-247-895-91	CARBON	470K 5% 1/4W	R601	◻ 1-219-776-11	CARBON	2.2M 10% 1/2W
R530	1-249-428-11	CARBON	8.2K 5% 1/4W	R602	◻ 1-219-759-11	CARBON	1M 5% 1/2W
R531	1-249-429-11	CARBON	10K 5% 1/4W	R603	◻ 1-240-881-11	CMT.MELF	0.82 5% 20W
R532	1-249-430-11	CARBON	12K 5% 1/4W	R604	1-260-298-51	CARBON	3.3 5% 1/2W
R535	1-247-887-00	CARBON	220K 5% 1/4W	R605	1-249-415-11	CARBON	680 5% 1/4W
◻R536	◻	METAL	1/4W	R606	◻ 1-240-881-11	CMT.MELF	0.82 5% 20W
R537	1-247-863-91	CARBON	22K 5% 1/4W	R607	1-249-389-11	CARBON	4.7 5% 1/4W F
R538	1-215-443-00	METAL	8.2K 1% 1/4W	R608	1-247-791-91	CARBON	22 5% 1/4W
R542	1-249-424-11	CARBON	3.9K 5% 1/4W	R609	1-240-205-91	CARBON	22M 5% 1/2W
R543	1-260-135-11	CARBON	1M 5% 1/2W	R610	1-260-127-11	CARBON	220K 5% 1/2W
R544	1-249-405-11	CARBON	100 5% 1/4W F	R611	1-260-127-11	CARBON	220K 5% 1/2W
◻R545		METAL	1/4W	R612	◻ 1-202-933-61	FUSIBLE	0.1 10% 1/2W F
R546	1-215-456-00	METAL	30K 1% 1/4W	R613	1-249-413-11	CARBON	470 5% 1/4W
R548	1-215-449-00	METAL	15K 1% 1/4W	R615	1-249-437-11	CARBON	47K 5% 1/4W
R550	1-215-910-00	METAL OXIDE	68 5% 3W F	R616	1-249-421-11	CARBON	2.2K 5% 1/4W
R551	1-215-910-00	METAL OXIDE	68 5% 3W F	R617	1-216-349-00	METAL OXIDE	1 5% 1W F
R556	1-249-437-11	CARBON	47K 5% 1/4W	R618	1-260-127-11	CARBON	220K 5% 1/2W
R563	1-247-887-00	CARBON	220K 5% 1/4W	R619	1-216-349-00	METAL OXIDE	1 5% 1W F
R566	1-215-868-00	METAL OXIDE	680 5% 1W F	R620	1-215-493-00	METAL	1M 1% 1/4W
R567	1-249-437-11	CARBON	47K 5% 1/4W	R621	1-260-127-11	CARBON	220K 5% 1/2W
R568	1-249-405-11	CARBON	100 5% 1/4W F	R622	1-249-441-11	CARBON	100K 5% 1/4W
R569	1-260-314-11	CARBON	68 5% 1/2W	R623	1-260-127-11	CARBON	220K 5% 1/2W
R570	1-247-807-31	CARBON	100 5% 1/4W	R624	1-260-127-11	CARBON	220K 5% 1/2W
R571	1-215-917-11	METAL OXIDE	1K 5% 3W F	R651	1-249-387-11	CARBON	3.3 5% 1/4W
R572	1-216-490-11	METAL OXIDE	39K 5% 3W F	R652	1-249-377-11	CARBON	0.47 5% 1/4W F
R573	1-214-912-00	METAL	91K 1% 1/2W	R654	1-216-361-00	METAL OXIDE	0.22 5% 2W F
R574	1-216-490-11	METAL OXIDE	39K 5% 3W F	R655	1-260-288-11	CARBON	0.47 5% 1/2W
R575	1-247-863-91	CARBON	22K 5% 1/4W	R656	1-249-377-11	CARBON	0.47 5% 1/4W F
R576	1-247-881-00	CARBON	120K 5% 1/4W	R657	1-215-421-00	METAL	1K 1% 1/4W
R577	1-214-923-00	METAL	270K 1% 1/2W	R658	1-249-429-11	CARBON	10K 5% 1/4W
R578	1-216-490-11	METAL OXIDE	39K 5% 3W F	R659	1-215-450-00	METAL	16K 1% 1/4W
R579	1-216-490-11	METAL OXIDE	39K 5% 3W F	R660	1-215-439-00	METAL	5.6K 1% 1/4W
R580	1-249-413-11	CARBON	470 5% 1/4W	R661	1-215-481-00	METAL	330K 1% 1/4W
R581	1-247-807-31	CARBON	100 5% 1/4W	R662	1-215-445-00	METAL	10K 1% 1/4W
R582	1-260-292-11	CARBON	1 5% 1/2W				

**KP-48V80/53V80/61V80**

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK		
R663	1-215-445-00	METAL	10K	1%	1/4W	R1532	1-214-800-11	METAL	2.2	1%	1/2W
R664	1-249-425-11	CARBON	4.7K	5%	1/4W	R1534	1-214-800-11	METAL	2.2	1%	1/2W
R665	1-249-425-11	CARBON	4.7K	5%	1/4W	R1535	1-215-421-00	METAL	1K	1%	1/4W
R666	1-247-887-00	CARBON	220K	5%	1/4W	R1536	1-215-433-00	METAL	3.3K	1%	1/4W
R667	1-249-429-11	CARBON	10K	5%	1/4W	R1537	1-247-815-91	CARBON	220	5%	1/4W
R668	1-249-429-11	CARBON	10K	5%	1/4W	R1538	1-249-429-11	CARBON	10K	5%	1/4W
R669	1-247-807-31	CARBON	100	5%	1/4W	R1539	1-249-428-11	CARBON	8.2K	5%	1/4W
R670	1-249-417-11	CARBON	1K	5%	1/4W	R1540	1-249-417-11	CARBON	1K	5%	1/4W
R671	1-249-429-11	CARBON	10K	5%	1/4W	R1541	1-247-843-11	CARBON	3.3K	5%	1/4W
R672	1-249-417-11	CARBON	1K	5%	1/4W F	R1542	1-249-429-11	CARBON	10K	5%	1/4W
R673	1-249-425-11	CARBON	4.7K	5%	1/4W	R1543	1-249-429-11	CARBON	10K	5%	1/4W
R675	1-249-429-11	CARBON	10K	5%	1/4W	R1544	1-249-419-11	CARBON	1.5K	5%	1/4W
R676	1-249-417-11	CARBON	1K	5%	1/4W	R1548	1-249-438-11	CARBON	56K	5%	1/4W
R677	1-249-417-11	CARBON	1K	5%	1/4W	R1549	1-214-800-11	METAL	2.2	1%	1/2W
R678	1-249-425-11	CARBON	4.7K	5%	1/4W	R1550	1-215-437-00	METAL	4.7K	1%	1/4W
R679	1-247-807-31	CARBON	100	5%	1/4W	R1551	1-249-428-11	CARBON	8.2K	5%	1/4W
R680	1-249-429-11	CARBON	10K	5%	1/4W	R1552	1-214-800-11	METAL	2.2	1%	1/2W
R681	1-249-429-11	CARBON	10K	5%	1/4W	R1554	1-215-440-00	METAL	6.2K	1%	1/4W
R682	1-249-417-11	CARBON	1K	5%	1/4W	R1555	1-247-807-31	CARBON	100	5%	1/4W
R683	1-249-417-11	CARBON	1K	5%	1/4W	R1556	1-247-863-91	CARBON	22K	5%	1/4W
R684	1-249-425-11	CARBON	4.7K	5%	1/4W	R1557	1-249-429-11	CARBON	10K	5%	1/4W
R685	1-249-417-11	CARBON	1K	5%	1/4W	R1558	1-249-429-11	CARBON	10K	5%	1/4W
R686	1-215-445-00	METAL	10K	1%	1/4W	R1559	1-215-857-11	METAL OXIDE	10	5%	1W F
R687	1-215-429-00	METAL	2.2K	1%	1/4W	R1560	1-215-888-00	METAL OXIDE	220	5%	2W F
R688	1-215-429-00	METAL	2.2K	1%	1/4W	R1561	1-249-429-11	CARBON	10K	5%	1/4W
R689	1-249-417-11	CARBON	1K	5%	1/4W	R1562	1-249-429-11	CARBON	10K	5%	1/4W
R690	1-215-437-00	METAL	4.7K	1%	1/4W	R1563	1-249-429-11	CARBON	10K	5%	1/4W
R691	1-249-417-11	CARBON	1K	5%	1/4W	R1564	1-215-445-00	METAL	10K	1%	1/4W
R1501	1-214-800-11	METAL	2.2	1%	1/2W	R1565	1-249-429-11	CARBON	10K	5%	1/4W
R1502	1-214-800-11	METAL	2.2	1%	1/2W	R1566	1-249-427-11	CARBON	6.8K	5%	1/4W
R1503	1-215-421-00	METAL	1K	1%	1/4W	R1567	1-247-863-91	CARBON	22K	5%	1/4W
R1504	1-215-433-00	METAL	3.3K	1%	1/4W	R1568	1-249-429-11	CARBON	10K	5%	1/4W
R1505	1-247-815-91	CARBON	220	5%	1/4W	R1570	1-249-383-11	CARBON	1.5	5%	1/4W F
R1506	1-247-815-91	CARBON	220	5%	1/4W	R1576	1-249-429-11	CARBON	10K	5%	1/4W
R1507	1-215-433-00	METAL	3.3K	1%	1/4W	R1577	1-215-437-00	METAL	4.7K	1%	1/4W
R1508	1-215-421-00	METAL	1K	1%	1/4W	R1582	1-249-421-11	CARBON	2.2K	5%	1/4W
R1509	1-214-800-11	METAL	2.2	1%	1/2W	R1583	1-247-807-31	CARBON	100	5%	1/4W
R1510	1-214-800-11	METAL	2.2	1%	1/2W	R1584	1-247-863-91	CARBON	22K	5%	1/4W
R1511	1-214-800-11	METAL	2.2	1%	1/2W	R1585	1-215-440-00	METAL	6.2K	1%	1/4W
R1512	1-214-800-11	METAL	2.2	1%	1/2W	R1587	1-249-414-11	CARBON	560	5%	1/4W
R1513	1-215-421-00	METAL	1K	1%	1/4W	R1588	1-249-414-11	CARBON	560	5%	1/4W
R1514	1-215-433-00	METAL	3.3K	1%	1/4W	R1589	1-249-414-11	CARBON	560	5%	1/4W
R1515	1-247-815-91	CARBON	220	5%	1/4W	R1590	1-249-414-11	CARBON	560	5%	1/4W
R1516	1-249-429-11	CARBON	10K	5%	1/4W	R1591	1-249-414-11	CARBON	560	5%	1/4W
R1517	1-247-887-00	CARBON	220K	5%	1/4W	R1592	1-249-414-11	CARBON	560	5%	1/4W
R1518	1-249-429-11	CARBON	10K	5%	1/4W	R1593	1-216-475-11	METAL OXIDE	120	5%	3W F
R1519	1-249-437-11	CARBON	47K	5%	1/4W	R1594	1-216-475-11	METAL OXIDE	120	5%	3W F
R1522	1-214-800-11	METAL	2.2	1%	1/2W	R1595	1-216-475-11	METAL OXIDE	120	5%	3W F
R1523	1-214-800-11	METAL	2.2	1%	1/2W	R1596	1-216-475-11	METAL OXIDE	120	5%	3W F
R1524	1-215-421-00	METAL	1K	1%	1/4W	R1597	1-216-475-11	METAL OXIDE	120	5%	3W F
R1525	1-215-433-00	METAL	3.3K	1%	1/4W	R1598	1-216-475-11	METAL OXIDE	120	5%	3W F
R1526	1-247-815-91	CARBON	220	5%	1/4W	R1599	1-249-429-11	CARBON	10K	5%	1/4W
R1527	1-247-815-91	CARBON	220	5%	1/4W	R1600	1-247-807-31	CARBON	100	5%	1/4W
R1528	1-215-433-00	METAL	3.3K	1%	1/4W	R1601	1-249-437-11	CARBON	47K	5%	1/4W
R1529	1-215-421-00	METAL	1K	1%	1/4W	R1602	1-247-807-31	CARBON	100	5%	1/4W
R1530	1-214-800-11	METAL	2.2	1%	1/2W	R1603	1-249-418-11	CARBON	1.2K	5%	1/4W
R1531	1-214-800-11	METAL	2.2	1%	1/2W						

Les composants identifiés par une trame et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1604	1-249-429-11	CARBON	10K 5% 1/4W	CN706	1-695-915-11	TAB (CONTACT)	
R1610	1-247-807-31	CARBON	100 5% 1/4W			<DIODE>	
R1611	1-247-807-31	CARBON	100 5% 1/4W	D705	8-719-991-33	DIODE 1SS133T-77	
R1612	1-249-429-11	CARBON	10K 5% 1/4W	D706	8-719-991-33	DIODE 1SS133T-77	
R1613	1-249-429-11	CARBON	10K 5% 1/4W	D707	8-719-991-33	DIODE 1SS133T-77	
		<RELAY>		D708	8-719-991-33	DIODE 1SS133T-77	
Ry601 $\Delta$	1-755-266-11	RELAY, AC POWER		D709	8-719-991-33	DIODE 1SS133T-77	
		<TRANSFORMER>				<COIL>	
T501 $\Delta$	1-433-836-11	TRANSFORMER, HORIZONTAL DRIVE		L701	1-414-188-41	INDUCTOR 68UH	
T502 $\Delta$	1-433-876-11	TRANSFORMER, FERRITE (PMT)		L702	1-414-223-11	INDUCTOR 470UH	
T504 $\Delta$	X-4560-164-1	FBT ASSY, NX-4007				<NEONLAMP>	
T601 $\Delta$	1-433-871-11	TRANSFORMER, CONVERTER (PIT)		NL701	1-517-778-21	LAMP, NEON	
T602 $\Delta$	1-433-844-11	TRANSFORMER, CONVERTER				<TRANSISTOR>	
T603 $\Delta$	1-429-992-21	TRANSFORMER, CONVERTER (PRT)		Q704	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		<THERMISTOR>		Q705	8-729-326-11	TRANSISTOR 2SC2611	
TH1501	1-807-925-11	THERMISTOR		Q706	8-729-200-17	TRANSISTOR 2SA1091-O	
		<TESTPIN>				<RESISTOR>	
TP501 *	1-535-881-21	TERMINAL, TP (AUTO INSERTION)		R701	1-219-743-11	CARBON 100 5% 1/2W	
		<VARISTOR>		R702	1-260-132-11	CARBON 560K 5% 1/2W	
VDR601 $\Delta$	1-801-073-31	VARISTOR TNR14V471K660		R703	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
				R704	1-215-476-00	METAL 200K 1% 1/4W	
				R711	1-247-807-31	CARBON 100 5% 1/4W	
				R712	1-249-404-00	CARBON 82 5% 1/4W	
				R713	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
				R714	1-249-393-11	CARBON 10 5% 1/4W	
				R715	1-249-419-11	CARBON 1.5K 5% 1/4W	
				R718	1-260-133-11	CARBON 680K 5% 1/2W	
				R719	1-249-425-11	CARBON 4.7K 5% 1/4W	
				R720	1-260-099-11	CARBON 1K 5% 1/2W	
				R721	1-260-099-11	CARBON 1K 5% 1/2W	
				R722	1-260-087-11	CARBON 100 5% 1/2W	
						<SPARKGAP>	
C701	1-104-570-11	CERAMIC	0.001MF 10% 2KV	SG701	1-519-422-11	GAP, SPARK	
C703	1-104-664-11	ELECT	47MF 20% 25V	SG702	1-519-422-11	GAP, SPARK	
C706	1-102-114-00	CERAMIC	470PF 10% 50V			<TESTPIN>	
C708	1-102-113-00	CERAMIC	390PF 10% 50V	TP701 *	1-535-881-21	TERMINAL, TP (AUTO INSERTION)	
C709	1-101-880-00	CERAMIC	47PF 5% 50V				
C710	1-162-115-00	CERAMIC	330PF 10% 2KV				
C711	1-161-830-00	CERAMIC	0.0047MF 500V				
C712	1-107-662-11	ELECT	22MF 20% 250V				
		<CONNECTOR>					
CN701 *	1-564-507-11	PLUG, CONNECTOR 4P					
CN702 *	1-564-512-11	PLUG, CONNECTOR 9P					
CN703	1-785-879-11	CONNECTOR, ONE TOUCH					
CN704 $\Delta$	1-251-182-11	SOCKET, CRT					
CN705	1-695-915-11	TAB (CONTACT)					



Les composants identifiés par une trame et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
	* A-1331-923-A	CG BOARD, COMPLETE		L1301	1-414-187-11	INDUCTOR	47UH
		*****		L1302	1-414-187-11	INDUCTOR	47UH
	4-382-854-11	SCREW(M3X10), P, SW (+)				<NEONLAMP>	
		<CAPACITOR>		NL731	1-517-778-21	LAMP, NEON	
C731	1-104-664-11	ELECT	47MF 20% 25V			<TRANSISTOR>	
C732	1-104-570-11	CERAMIC	0.001MF 10% 2KV				
C733	1-102-114-00	CERAMIC	470PF 10% 50V	Q731	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C734	1-102-114-00	CERAMIC	470PF 10% 50V	Q732	8-729-326-11	TRANSISTOR 2SC2611	
C735	1-101-880-00	CERAMIC	47PF 5% 50V	Q733	8-729-200-17	TRANSISTOR 2SA1091-O	
C736	1-161-830-00	CERAMIC	0.0047MF 500V	Q734	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C737	1-162-115-00	CERAMIC	330PF 10% 2KV	Q1301	8-729-017-06	TRANSISTOR 2SC4793	
C738	1-107-662-11	ELECT	22MF 20% 250V				
C1301	1-106-343-00	MYLAR	0.001MF 10% 200V	Q1302	8-729-017-05	TRANSISTOR 2SA1837	
C1302	1-107-639-11	ELECT	47MF 20% 160V	Q1303	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1303	1-126-933-11	ELECT	100MF 20% 16V	Q1304	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1305	1-126-933-11	ELECT	100MF 20% 16V	Q1305	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1308	1-106-383-00	MYLAR	0.047MF 10% 200V	Q1306	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1309	1-106-383-00	MYLAR	0.047MF 10% 200V			<RESISTOR>	
C1310	1-126-960-11	ELECT	1MF 20% 50V	R731	1-219-743-11	CARBON	100 5% 1/2W
C1312	1-161-830-00	CERAMIC	0.0047MF 500V	R732	1-260-132-11	CARBON	560K 5% 1/2W
C1313	1-102-129-00	CERAMIC	0.01MF 10% 50V	R733	1-247-807-31	CARBON	100 5% 1/4W
C1314	1-102-129-00	CERAMIC	0.01MF 10% 50V	R734	1-260-087-11	CARBON	100 5% 1/2W
C1315	1-126-933-11	ELECT	100MF 20% 16V	R735	1-249-403-11	CARBON	68 5% 1/4W
		<CONNECTOR>		R736	1-216-486-00	METAL OXIDE	8.2K 5% 3W F
CN731	* 1-564-512-11	PLUG, CONNECTOR 9P		R737	1-249-393-11	CARBON	10 5% 1/4W
CN732	* 1-564-507-11	PLUG, CONNECTOR 4P		R738	1-249-414-11	CARBON	560 5% 1/4W
CN733	* 1-564-508-11	PLUG, CONNECTOR 5P		R739	1-216-486-00	METAL OXIDE	8.2K 5% 3W F
CN734	* 1-564-513-11	PLUG, CONNECTOR 10P		R741	1-249-425-11	CARBON	4.7K 5% 1/4W
CN735	* 1-564-512-11	PLUG, CONNECTOR 9P		R742	1-260-099-11	CARBON	1K 5% 1/2W
CN736	* 1-564-512-11	PLUG, CONNECTOR 9P		R743	1-215-466-00	METAL	75K 1% 1/4W
CN737	1-785-879-11	CONNECTOR, ONE TOUCH		R744	1-260-133-11	CARBON	680K 5% 1/2W
CN738	1-695-915-11	TAB (CONTACT)		R745	1-260-099-11	CARBON	1K 5% 1/2W
CN739	1-695-915-11	TAB (CONTACT)		R746	1-249-437-11	CARBON	47K 5% 1/4W
CN740	$\Delta$ 1-251-182-11	SOCKET, CRT		R747	1-249-438-11	CARBON	56K 5% 1/4W
CN1301	* 1-564-506-11	PLUG, CONNECTOR 3P		R1301	1-215-916-00	METAL OXIDE	680 5% 3W F
CN1302	* 1-564-506-11	PLUG, CONNECTOR 3P		R1302	1-215-916-00	METAL OXIDE	680 5% 3W F
CN1303	* 1-564-506-11	PLUG, CONNECTOR 3P		R1303	1-249-400-11	CARBON	39 5% 1/4W F
CN1304	* 1-564-509-11	PLUG, CONNECTOR 6P		R1304	1-249-391-11	CARBON	6.8 5% 1/4W F
		<DIODE>		R1305	1-249-391-11	CARBON	6.8 5% 1/4W F
D731	8-719-991-33	DIODE 1SS133T-77		R1306	1-249-429-11	CARBON	10K 5% 1/4W
D732	8-719-991-33	DIODE 1SS133T-77		R1307	1-260-311-11	CARBON	39 5% 1/2W
D733	8-719-991-33	DIODE 1SS133T-77		R1308	1-249-419-11	CARBON	1.5K 5% 1/4W
D734	8-719-991-33	DIODE 1SS133T-77		R1310	1-249-441-11	CARBON	100K 5% 1/4W
D735	8-719-991-33	DIODE 1SS133T-77		R1311	1-249-419-11	CARBON	1.5K 5% 1/4W F
D736	8-719-109-84	DIODE RD5.1ESB1		R1314	1-249-419-11	CARBON	1.5K 5% 1/4W
D1304	8-719-991-33	DIODE 1SS133T-77		R1315	1-249-399-11	CARBON	33 5% 1/4W
		<COIL>		R1319	1-249-413-11	CARBON	470 5% 1/4W
L731	1-414-188-41	INDUCTOR	68UH	R1321	1-249-406-11	CARBON	120 5% 1/4W
L732	1-414-223-11	INDUCTOR	470UH	R1323	1-249-377-11	CARBON	0.47 5% 1/4W F
				R1324	1-249-421-11	CARBON	2.2K 5% 1/4W
				R1325	1-249-427-11	CARBON	6.8K 5% 1/4W
				R1327	1-249-441-11	CARBON	100K 5% 1/4W
				R1328	1-249-435-11	CARBON	33K 5% 1/4W

Les composants identifiés par une trame et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905

CG

CB

HC

REF. NO.	PART NO.	DESCRIPTION	REMARK
		<SPARKGAP>	
SG731	1-519-422-11	GAP, SPARK	
SG732	1-519-422-11	GAP, SPARK	
		<TESTPIN>	
TP731	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)	
TP732	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)	
TP733	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)	
*****			
	* A-1331-924-A	CB BOARD, COMPLETE	
		*****	
	4-382-854-11	SCREW(M3X10), P, SW (+)	
		<CAPACITOR>	
C761	1-104-664-11	ELECT 47MF 20% 25V	
C762	1-104-570-11	CERAMIC 0.001MF 10% 2KV	
C763	1-102-114-00	CERAMIC 470PF 10% 50V	
C764	1-102-112-00	CERAMIC 330PF 10% 50V	
C765	1-101-880-00	CERAMIC 47PF 5% 50V	
C767	1-162-115-00	CERAMIC 330PF 10% 2KV	
C768	1-126-964-11	ELECT 10MF 20% 50V	
C769	1-161-830-00	CERAMIC 0.0047MF 500V	
C770	1-107-662-11	ELECT 22MF 20% 250V	
		<CONNECTOR>	
CN761	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN762	* 1-564-512-11	PLUG, CONNECTOR 9P	
CN763	1-785-879-11	CONNECTOR, ONE TOUCH	
CN764	1-695-915-11	TAB (CONTACT)	
CN765	1-695-915-11	TAB (CONTACT)	
CN766	$\Delta$ 1-251-182-11	SOCKET, CRT	
		<DIODE>	
D761	8-719-991-33	DIODE 1SS133T-77	
D762	8-719-991-33	DIODE 1SS133T-77	
D763	8-719-991-33	DIODE 1SS133T-77	
D764	8-719-991-33	DIODE 1SS133T-77	
D765	8-719-991-33	DIODE 1SS133T-77	
		<COIL>	
L761	1-414-188-41	INDUCTOR 68UH	
L762	1-414-223-11	INDUCTOR 470UH	
		<NEONLAMP>	
NL761	1-517-778-21	LAMP, NEON	

REF. NO.	PART NO.	DESCRIPTION	REMARK
		<TRANSISTOR>	
Q761	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q762	8-729-326-11	TRANSISTOR 2SC2611	
Q763	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q764	8-729-200-17	TRANSISTOR 2SA1091-O	
		<RESISTOR>	
R761	1-219-743-11	CARBON 100 5% 1/2W	
R762	1-260-132-11	CARBON 560K 5% 1/2W	
R763	1-247-807-31	CARBON 100 5% 1/4W	
R764	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
R765	1-247-807-31	CARBON 100 5% 1/4W	
R766	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
R767	1-249-393-11	CARBON 10 5% 1/4W	
R768	1-249-418-11	CARBON 1.2K 5% 1/4W	
R770	1-249-404-00	CARBON 82 5% 1/4W	
R771	1-249-426-11	CARBON 5.6K 5% 1/4W	
R772	1-249-435-11	CARBON 33K 5% 1/4W	
R773	1-260-099-11	CARBON 1K 5% 1/2W	
R775	1-249-425-11	CARBON 4.7K 5% 1/4W	
R776	1-260-133-11	CARBON 680K 5% 1/2W	
R777	1-260-099-11	CARBON 1K 5% 1/2W	
R779	1-260-087-11	CARBON 100 5% 1/2W	
		<SPARKGAP>	
SG761	1-519-422-11	GAP, SPARK	
SG762	1-519-422-11	GAP, SPARK	
		<TESTPIN>	
TP761	* 1-535-881-21	TERMINAL, TP (AUTO INSERTION)	
*****			
	* A-1372-618-A	HC BOARD, COMPLETE	
		*****	
		<CAPACITOR>	
C1291	1-126-791-11	ELECT 10MF 20% 16V	
		<CONNECTOR>	
CN1291	* 1-564-518-11	PLUG, CONNECTOR 3P	
		<DIODE>	
D1291	8-719-066-43	DIODE GP1U28Y	
D1292	8-719-109-89	DIODE RD5.6ESB2	
D1293	8-719-109-89	DIODE RD5.6ESB2	

KP-48V80/53V80/61V80

RM-Y905 RM-Y905 RM-Y905



REF. NO.	PART NO.	DESCRIPTION	REMARK		
<RESISTOR>					
R1291	1-247-807-31	CARBON	100	5%	1/4W
*****					
* A-1372-619-A HA BOARD, COMPLETE *****					
<CONNECTOR>					
CN1202	* 1-564-517-11	PLUG, CONNECTOR 2P			
CN1203	* 1-564-522-11	PLUG, CONNECTOR 7P			
<DIODE>					
D1201	8-719-053-43	DIODE SLR-325VCT31 (TIMER/STANDBY)			
<RESISTOR>					
R1201	1-249-431-11	CARBON	15K	5%	1/4W
R1202	1-249-425-11	CARBON	4.7K	5%	1/4W
R1203	1-249-417-11	CARBON	1K	5%	1/4W
R1204	1-249-419-11	CARBON	1.5K	5%	1/4W
R1205	1-249-421-11	CARBON	2.2K	5%	1/4W
R1206	1-247-815-91	CARBON	220	5%	1/4W
<SWITCH>					
S1201	1-572-198-11	SWITCH, KEY BOARD (FLASH FOCUS)			
S1202	1-572-198-11	SWITCH, KEY BOARD (TV/VIDEO)			
S1203	1-572-198-11	SWITCH, KEY BOARD (VOLUME -)			
S1204	1-572-198-11	SWITCH, KEY BOARD (VOLUME +)			
S1205	1-572-198-11	SWITCH, KEY BOARD (CHANNEL -)			
S1206	1-572-198-11	SWITCH, KEY BOARD (CHANNEL +)			
S1207	1-572-198-11	SWITCH, KEY BOARD (POWER)			
*****					
* A-1372-620-A HB BOARD, COMPLETE *****					
<CAPACITOR>					
C1251	1-128-551-11	ELECT	22MF	20%	25V
C1252	1-128-551-11	ELECT	22MF	20%	25V
C1253	1-128-551-11	ELECT	22MF	20%	25V
C1254	1-128-551-11	ELECT	22MF	20%	25V
C1255	1-128-551-11	ELECT	22MF	20%	25V
<CONNECTOR>					
CN1252	* 1-564-517-11	PLUG, CONNECTOR 2P			
CN1253	* 1-564-526-11	PLUG, CONNECTOR 11P			

REF. NO.	PART NO.	DESCRIPTION	REMARK		
<DIODE>					
D1251	8-719-110-17	DIODE RD10ESB2			
D1252	8-719-110-17	DIODE RD10ESB2			
D1253	8-719-110-17	DIODE RD10ESB2			
D1254	8-719-110-17	DIODE RD10ESB2			
D1255	8-719-110-17	DIODE RD10ESB2			
D1256	8-719-110-17	DIODE RD10ESB2			
<JACK>					
J1251	1-770-361-11	TERMINAL BLOCK, S (VIDEO 2 IN)			
<RESISTOR>					
R1251	1-249-429-11	CARBON	10K	5%	1/4W
R1252	1-249-424-11	CARBON	3.9K	5%	1/4W
R1253	1-249-421-11	CARBON	2.2K	5%	1/4W
R1254	1-249-418-11	CARBON	1.2K	5%	1/4W
R1255	1-249-425-11	CARBON	4.7K	5%	1/4W
R1256	1-247-804-11	CARBON	75	5%	1/4W
R1257	1-247-895-91	CARBON	470K	5%	1/4W
R1258	1-247-895-91	CARBON	470K	5%	1/4W
R1259	1-247-804-11	CARBON	75	5%	1/4W
R1260	1-247-804-11	CARBON	75	5%	1/4W
<SWITCH>					
S1251	1-572-198-11	SWITCH, KEY BOARD (SELECT)			
S1252	1-572-198-11	SWITCH, KEY BOARD (+)			
S1253	1-572-198-11	SWITCH, KEY BOARD (-)			
S1254	1-572-198-11	SWITCH, KEY BOARD (MENU)			
S1255	1-572-198-11	SWITCH, KEY BOARD (SET UP)			
*****					
* A-1390-933-A S BOARD, COMPLETE *****					
<CONNECTOR>					
CN3001	* 1-564-506-11	PLUG, CONNECTOR 3P			
<DIODE>					
D3001	8-719-109-89	DIODE RD5.6ESB2			
<SWITCH>					
S3001	1-528-911-21	BATTERY, SOLAR			
*****					





