

ENERGY MISER

In your article entitled "Energy Miser for Your Furnace," **Radio-Electronics**, August 1982, the equation for the temperature conversion is not printed correctly. It should read:
Temp (in °F) = $1.8 \times \text{Temp (°K)} - 459.67$

The factor 1.8 is equal to the usual conversion factor of 9/5, as everybody knows. But, without the factor in the equation, there may be misunderstanding in the text.

In the description that follows the equation, the text mentioned R1 and R2 for water-temperature sensor, IC6. As far as the circuit diagram is concerned, R1 and R2 are in the air-temperature sensor IC5 circuit. You see, there is also a little mix-up here.

H. HSU

*Professor, Department of Engineering,
Ohio State University*

R-E



"It's not so bad, but I could get the same effect with a synthesizer."