 


## REMOTE CONTROL

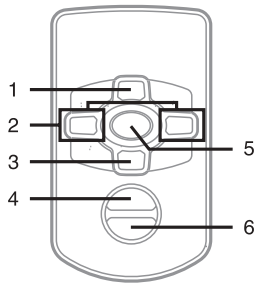

1. RANDOM/PRESET —
2. ◀▶ SKIP / ▼ / ▲ TUNING buttons
3. Ⓜ MEMORY button
4. ▶|| PLAY/PAUSE button
5. REPEAT/PRESET + button
6. ■ STOP/BAND button

### USING THE REMOTE CONTROL CORRECTLY

- Point the Remote Control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the infrared REMOTE SENSOR may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 6 meters (19 feet).

### TO CHANGE REMOTE BATTERY

1. Open the battery door.
2. Insert one CR2025 (3V) size battery.



### ATTENTION

Take out the PVC sheet before operating the Remote Control.



 
### BATTERY REPLACEMENT

When battery become weak, the operating distance of the Remote Control is greatly reduced and you will need to replace the battery.

### NOTE:

If the Remote Control is not to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.

## CARE & MAINTENANCE

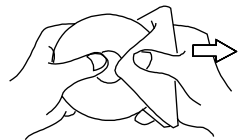

### CLEANING CD

If the CD skips or will not play, the disc may need cleaning. Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.

### CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

 
### IMPORTANT NOTICE:

- Should the CD door be opened before the reading of the CD is completed, a jamming noise may occur. This can be resolved by closing the CD door and then setting the FUNCTION switch temporarily to TAPE.
- If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

## TROUBLE SHOOTING TIPS

	Problems	Solutions
CD	System does not turn on	<ul style="list-style-type: none"> <li>• Make sure AC power plug is secure in the outlet, and outlet has power.</li> </ul>
	Disc in place but unit won't play	<ul style="list-style-type: none"> <li>• Make sure FUNCTION switch is set to CD.</li> <li>• Make sure disc label is facing up.</li> <li>• Make sure disc is clean.</li> </ul>
	Disc skips	<ul style="list-style-type: none"> <li>• Disc may be damaged or dirty; check disc.</li> <li>• Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.</li> </ul>
RADIO	Poor FM reception	<ul style="list-style-type: none"> <li>• Electrical interference in your home can cause poor reception. Move the unit away from sources of interference (especially those with motors and transformers).</li> </ul>
	Poor AM(MW) reception	<ul style="list-style-type: none"> <li>• Reposition or turn the AM(MW) loop antenna for better reception.</li> </ul>


## MICRO CD SYSTEM OPERATING INSTRUCTIONS

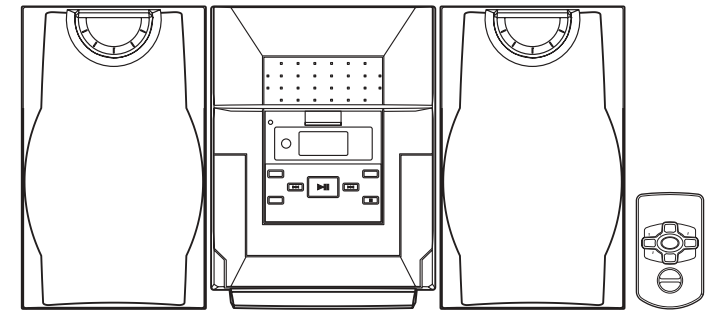

	<b>WARNING</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.	<b>WARNING:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE

### CLASS 1 LASER PRODUCT

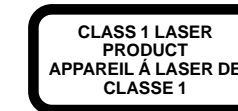 

This product contains a low power laser device.

## SPECIFICATION

### GENERAL

Power consumption:	15 W
Power source:	AC ~ 120V 60 Hz (USA and Canada)
	AC ~ 220V 50 Hz (China)
	AC ~ 230V 50 Hz (Europe)
	AC ~ 240V 50 Hz (Australia)
	AC ~ 110-120V/220-240V 50/60Hz (Others)

Specifications may be subject to change without notice.

## SAFETY PRECAUTIONS

Follow the advice below for safe and appropriate operations

### ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

### ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

### ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

### FCC INFORMATION

This device complies with part 15 of FCC Rules. Operations are subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesirable operations.

### ON CONDENSATION

 
- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, it may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

### VENTILATION WARNING

- The normal ventilation of the product shall not be impeded for intended use.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.

## PARTS IDENTIFICATION

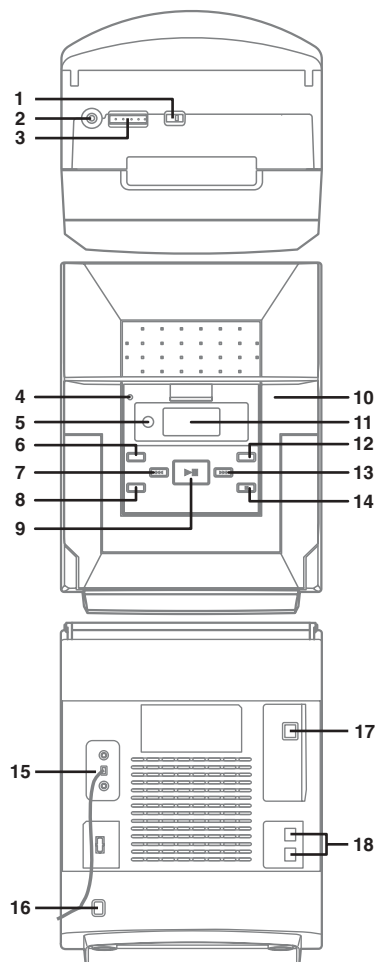

**NOTE: 1 to 3 are under the top flap**

 
1. FUNCTION switch (CD/Radio/Off)
2. PHONES jack
3. VOLUME control
4. STANDBY indicator
5. Remote sensor
6. REPEAT/PRESET+ button
7. ◀◀ SKIP/TUNING ▼ button
8. RANDOM/PRESET - button
9. ▶▶ PLAY/PAUSE button
10. CD door
11. CD display
12. ⊙ MEMORY button
13. ▶▶ SKIP/TUNING ▲ button
14. STOP/BAND button
15. FM Antenna wire
16. AC cord
17. AM/MW loop antenna
18. Speaker terminals

## SYSTEM CONNECTIONS

### SPEAKER CONNECTIONS

Connect the wires to the speaker terminals in correct position.

**NOTE: Connecting speakers other than the speakers supplied with the unit may damage the unit.**

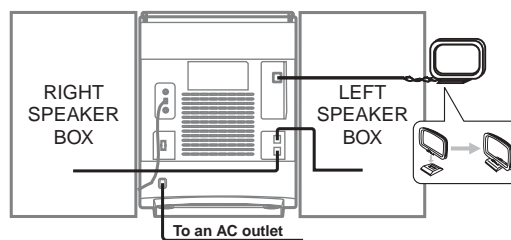

### AC POWER CONNECTING

 
Before use, check that the rated voltage of the unit matches your local voltage. Make sure speakers are connected correctly before plugging the AC power cord into an AC outlet.

**Caution:** To prevent electrical shock, match wide blade of plug to wide slot, fully insert (For USA and CANADA Only).

### FM ANTENNA

- Do not connect to an outside antenna.

## ADJUSTING THE SOUND

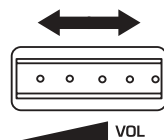

- Adjust the Volume.

### WHEN RECORDING

The VOLUME control may be adjusted with no effect on the recorded signal.

## RADIO OPERATION

### MANUAL TUNING

You can listen to your favourite radio stations by sliding the FUNCTION switch to RADIO, and then

1. Press the BAND button to choose AM(MW) or FM.
2. Press the (◀◀ / ▶▶) TUNING button to select a station.
3. Adjust the VOLUME.

### AUTOMATIC SEARCH TUNING

Press and hold the (◀◀ / ▶▶) TUNING button, still for about 1-2 seconds and release. A station is searched automatically. After tuning into a station the search stops. The search may not stop at a station with very weak signal.

### PRESETTING STATION

(Up to 20 stations, 10 stations for AM/MW band & 10 stations for FM band) You can tune into a stored station directly by entering the preset number.

 
1. Press the BAND button to select a band and tune the (◀◀ / ▶▶) TUNING buttons to choose a desired station.
2. Press the ⊙ MEMORY button, "MEMORY" indicator will blink on the display.
3. Press the PRESET + or PRESET - button to preset a number.
4. Press the ⊙ MEMORY button again to store the frequency under the selected preset number.
5. Then, repeat steps 1 to 4 to fro next preset.

### TUNING INTO A PRESET STATION

Press the BAND button to select a band and press the PRESET + or PRESET - button to select a presetted number.

### FOR BETTER RECEPTION

#### FM

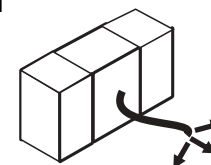

Fully unwind the wire antenna. Then extend the wire antenna and place it in the position that sounds best.

#### AM(MW)



 
Repositioning the AM(MW) loop antenna to get better AM(MW) reception.

**NOTE: DO NOT CONNECT TO AN OUTSIDE ANTENNA.**


**Note:** After listening to the radio, set the function switch to the tape position to turn the radio off.

## USING THE CD PLAYER

1. Slide the FUNCTION switch to CD. "CD" is shown on the display.

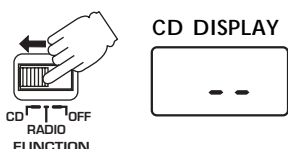

 2. Open the CD door. Place a disc in the center with the label side out and push the disc gently onto the central pivot until it clicks securely into place. Close the CD door gently. The total number of tracks will show in the display.

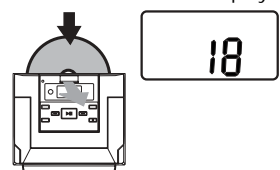

3. Press the PLAY/PAUSE button (▶▶) to start CD play.




### TO STOP PLAYBACK

 - Press the (■) STOP to stop disc play.



### TO INTERRUPT PLAYBACK

- Press the (▶▶) PLAY/PAUSE button while a CD is playing to pause play ("⏸" indicator will blink).
- Press the (▶▶) PLAY/PAUSE button again to resume play.

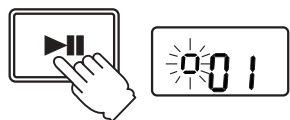

### TO SKIP TO THE BEGINNING OF A TRACK

- Pressed either one of the SKIP (◀◀) or (▶▶) button according to the desired direction, each press skips one track. During play, the first press on the skip backward (◀◀) button to the beginning of the current track.
- Playback resumes from the selected track.

## CD OPERATION

### MEMORY PLAY (IN STOP MODE)

1. Press the ⊙ MEMORY button, "MEMORY" indicator will blink on the CD display.
2. Press the (◀◀ / ▶▶) SKIP button to select the desired track.
3. Press the ⊙ MEMORY button to program a track.
4. Repeat steps 2 and 3 until all the desired tracks are programmed (up to 20 tracks).
5. Press the (▶▶) PLAY/PAUSE button. During program playback, "MEMORY" indicator will light up.

**NOTE:** Programming can only be done when the unit is in the stop mode.

### TO PLAY THE PROGRAMMED TRACKS

- After storing the desired tracks, press the (▶▶) PLAY/PAUSE button to play the program.

### TO STOP PROGRAMMED PLAY

- Press the (■) STOP button to stop playback.

### TO CLEAR THE PROGRAM

- Press the (■) STOP button and open the CD door.

## CLOCK SETTING

1. In standby mode, press the ⊙ MEMORY button, time format blinks on display.
2. Press the (◀◀ / ▶▶) TUNING/SKIP buttons to set 12 Hour or 24 Hour format.
3. Press the ⊙ MEMORY button, the Hour blinks.
4. Press the (◀◀ / ▶▶) TUNING/SKIP buttons to set correct hours.
5. Press the ⊙ MEMORY button, the Minute blinks.
6. Press the (◀◀ / ▶▶) TUNING/SKIP buttons to set correct minutes, and then press the ⊙ MEMORY button to start the clock.

## REPEAT PLAY (IN PLAY MODE)

This function allows one track, all tracks on a disc or the programmed tracks only to be played repeatedly.



### TO REPEAT THE SAME TRACK

- Press the REPEAT button once during playback, the repeat one "REPEAT" indicator will blink.



### TO REPEAT THE WHOLE DISC

- Press the REPEAT button a second time to repeat all tracks, the repeat all "REPEAT" indicator will light.



### TO CANCEL REPEAT PLAY

- Press the REPEAT button until the "REPEAT" indicator is disappeared on the display.

**OR**

- Press the (■) STOP button.

**NOTE:** Repeat play can only be done when the unit is in the play mode.

**Note:** After listening, set the FUNCTION switch to OFF.

## RANDOM PLAY

All the tracks on the disc can be played in random order.

- Press the RANDOM button. "RANDOM" appears in the display and the disc will play automatically.

### TO CANCEL RANDOM PLAY

- Press the (■) STOP or RANDOM button so that RANDOM in the display goes out.