

ONKYO SERVICE MANUAL**CD RECEIVER
MODEL CR-305X****Silver models**

UDD,UDT	120 V AC,60 Hz
UPP	230 V AC,50 Hz
UGT,UGR	220 - 230 V AC,50/60Hz

TABLE OF CONTENTS**SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FORM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

Specifications	2
Caution on replacement of optical pickup	2
Protection of eyes from laser beam during servicing	3
Service procedures	4
Front panel view	5
Rear panel view	6
Remote controller	7
Microprocessor connection diagram	8
Microprocessor terminal descriptions	9
IC Block diagram and descriptions	10
CD Mechanism exploded view	19
Replacement of optical pickup	21
Chassis exploded view parts list	22
Chassis exploded view	23
Block diagram	25
Wiring view	26
Printed circuit board view parts list	27
Schematic diagram (Amplifier section)	29
Printed circuit board view 1	31
Schematic diagram (CD & Microprocessor section)	33
Printed circuit board view 2	35
Printed circuit board view 3	37
CD Adjustment procedures	39
Clock adjustment procedures	40
Assembling of pad	41
Packing view	42

ONKYO
AUDIO COMPONENTS

SPECIFICATIONS

AMPLIFIER

Power Output:	2 x 20 watts at 4 ohms 1 kHz DIN 2 x 17 watts at 6 ohms 1 kHz DIN 2 x 15 watts at 8 ohms 1 kHz DIN 2 x 20 watts min, RMS at 4 ohms 1 kHz no more than 1 % THD (FTC rating) 2 x 25 watts at 4 ohms EIAJ
Dynamic Power:	2 x 24 watts at 4 ohms 2 x 18 watts at 8 ohms
Total Harmonic Distortion:	0.2 % at 10 watts output
IM Distortion:	0.2 % at 10 watts output
Damping Factor:	25 at 8 ohms
Sensitivity and Impedance:	TAPE/CDR/MD IN : 150 mV, 50 kohms
Frequency Response:	10 to 50,000 Hz : +0 / -3 dB
Acoustic Presence:	1 40 Hz +6.0 dB 2 80 Hz +7.5 dB 3 40 Hz +10 dB 80 Hz +8.0 dB 4 40 Hz +10 dB 80 Hz +8.0 dB 10 kHz +4.5 dB
Single-to-Noise Ratio:	100 dB (IHF A) -55 dB

CD PLAYER

Signal Readout System:	Optical non-contact
Reading Rotation:	About 500 – 200 r.p.m. (constant linear velocity)
Linear Velocity:	1.2 – 1.4 m / s
Error Correction System:	Cross Interleave Reed Solomon code
D / A Converter:	1 bit
Digital Filter:	352.8 kHz 8 times over sampling
Number of Channels:	2 (stereo)
Frequency Response:	5 Hz – 20 kHz

TUNER

Tuning range	FM: 87.9 to 107.9 MHz (200 kHz steps) (U.S. & Canadian models) 87.5 to 108.00 MHz (50 kHz steps) (Other area models)	AM: 530 to 1710 kHz (10 kHz steps) (U.S. & Canadian models) 522 to 1611 kHz (9 kHz steps) (Other area models)
Usable sensitivity		
FM:	Mono 11.2 dBf, 1.0 μ V (75 ohms IHF) 0.9 μ V (75 ohms DIN)	AM: 30 μ V
Stereo	17.2 dBf, 2.0 μ V (75 ohms IHF) 23.0 μ V (75 ohms DIN)	
50 dB Quieting sensitivity	FM: Mono 17.2 dBf, 2.0 μ V (75 ohms) Stereo 37.2 dBf, 20.0 μ V (75 ohms)	
Capture ratio	FM: 2.0 dB	
Image rejection ratio	FM: 40 dB (U.S. & Canadian models) 85 dB (Other area models)	AM: 40 dB
IF rejection ratio	FM: 90 dB	AM: 40 dB
Signal to noise ratio	FM: Mono 73 dB, IHF Stereo 67 dB, IHF	AM: 40 dB
Selectivity	FM: 50 dB DIN (\pm 300 kHz at 40 kHz Devi.)	
AM Suppression Ratio:	50 dB	
Harmonic distortion	FM: Mono 0.2% Stereo 0.3%	AM: 0.7 %
Frequency response	FM: 30 to 15,000 Hz (\pm 1.5 dB)	
Stereo separation	FM: 35 dB at 1,000 Hz 25 dB at 100 to 10,000 Hz	
Stereo threshold	FM: 17.2 dBf, 2.0 μ V (75 ohms)	

GENERAL

Power Supply:	AC 120 V, 60 Hz (U.S. & Canadian models) (Some Asian models)
	AC 230 V, 50 Hz (European models)
	AC 220-230 V, 50/60 Hz (Other area models)
Power Consumption:	60 W (U.S. & Canadian models) (Some Asian models)
	55 W (Other area models)
Dimensions:	205 W x 103 H x 362 D mm (8-1/6" x 4-1/16" x 14-1/4")
Weight:	4.0 kg (8.8 lbs)

Specifications and features are subject to change without notice
Power supply and voltage vary depending on the area in which the unit is purchased.

CAUTION ON REPLACEMENT OF OPTICAL PICKUP

The laser diode in the optical pickup block is so sensitive to static electricity, surge current and etc., that the components are liable to be broken down or its reliability remarkably deteriorated.

During repair,carefully take the following precautions.
(The following precautions are included in the service parts.)

PRECAUTIONS

- | | |
|--|---|
| 1.Ground for the work-desk.
Place a conductive sheet such as a sheet of copper (with impedance lower than 10Mohm) on the work-desk and place the set on the conductive sheet so that the chassis can be grounded. | 3. Grounding for the human body.
Be sure to put on a wrist-strap for grounding whose other end is grounded.
Be particularly careful when the workers wear synthetic fiber clothes, or air is dry. |
| 2.Grounding for the test equipments and tools.
Test equipments and toolings should be grounded in order that their ground level is the same the ground of the power source. | 4. Select a soldering iron that permits no leakage and have the tip of the iron well-grounded. |
| | 5. Do not check the laser diode terminals with the probe of a circuit tester or oscilloscope. |

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

**SERVICE WARNING : DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY.
IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.**

Laser Diode Properties

Material: GaAS/GaALAs

Wavelength: 780nm

Laser output: max. 0.5mW*

Emission Duration: continuous

*This output is the value measured at a distance about 1.8mm from the objective lens surface on the Optical Pick-up Block.

LASER WARNING LABEL

The label shown below are affixed.

1. Warning label




1. Class 1 label



SERVICE PROCEDURE

1. Replacing the fuses

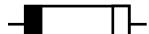 This symbol located near the fuse indicates that the fuse used is slow operating type. For continued protection against fire hazard, replace with same type fuse. For fuse rating, refer to the marking adjust to the symbol.

 Ce symbole indique que le fusible utilise est lent. Pour une protection permanente, n'utiliser que des fusibles de même type. Ce dernier est indiqué la qu le présent symbol est apposé.

REF.NO.	PART NO.	DESCRIPTION
F901	252157 	1.25A-UL/T-237, Fuse <D, DT>
	252083 	0.4A-SE-EAW, FUSE <P, GR, GT>

NOTE : <D, DT> : 120 V model only
<P, GR, GT> : 230 V model only

2. To initialize the unit

1. Press and hold down the MEMORY button, then press the After "all lighting" is displayed
2. Press the standby/on button.
After "CLEAR" is displayed, the preset memory and each mode stored in the memory, are initialized and will return to the factory settings.

3. Safety-check out

(Only U.S.A. model)

After correcting the original service problem perform the following safety check before releasing the set to the customer. Connect the insulating-resistance tester between the plug of power supply cord and terminal GND on the back panel.

Specifications: More than 10Mohm at 500V

4. Memory Preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves the contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in order to charge the back-up system.

The memory preservation period after the unit has been unplugged varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of a few weeks after the last time the unit has been unplugged. This period is shorter when the unit is exposed to a highly humid climate.

5. Changing the AM band step


With the exception of the worldwide models, a tuning step selector switch is not provided. When you change the band step, change the parts as shown below.

	To 10kHz	To 9kHz
R705	3.3k	10k
R706	5.6k	open

5. Removal of tray

1. Remove the top cover
2. Turn the locked screw to the clockwise to release the lock of gear. (Refer to fig-1)


Fig-1

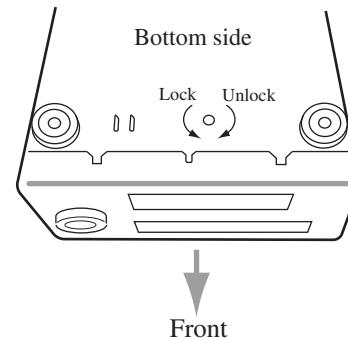

3. Pull out the tray.


4. Remove the stopper. (Refer to fig-2)

Fig-2

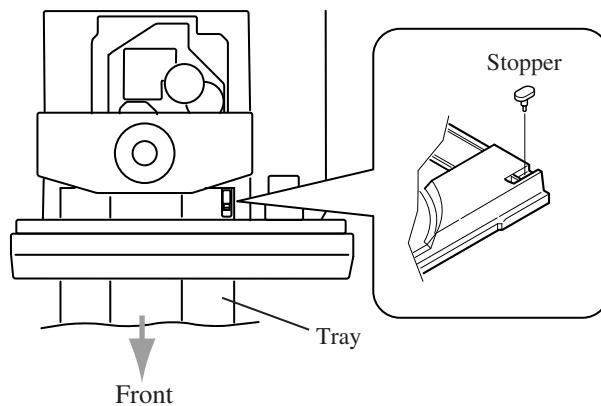


5. Press the tray stopper to the arrow mark direction and remove the tray ass'y. (Refer to fig-3)


Fig-3

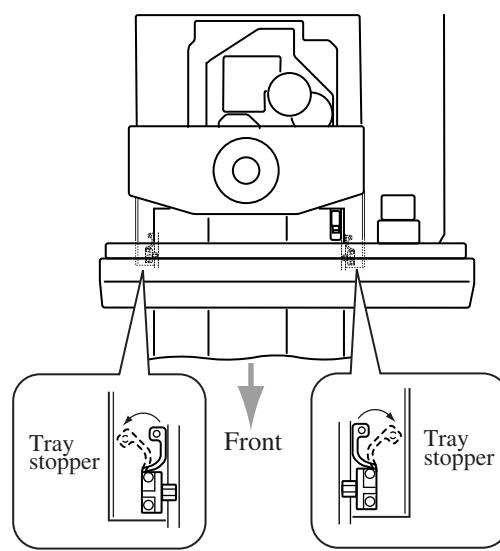

FRONT PANEL VIEW

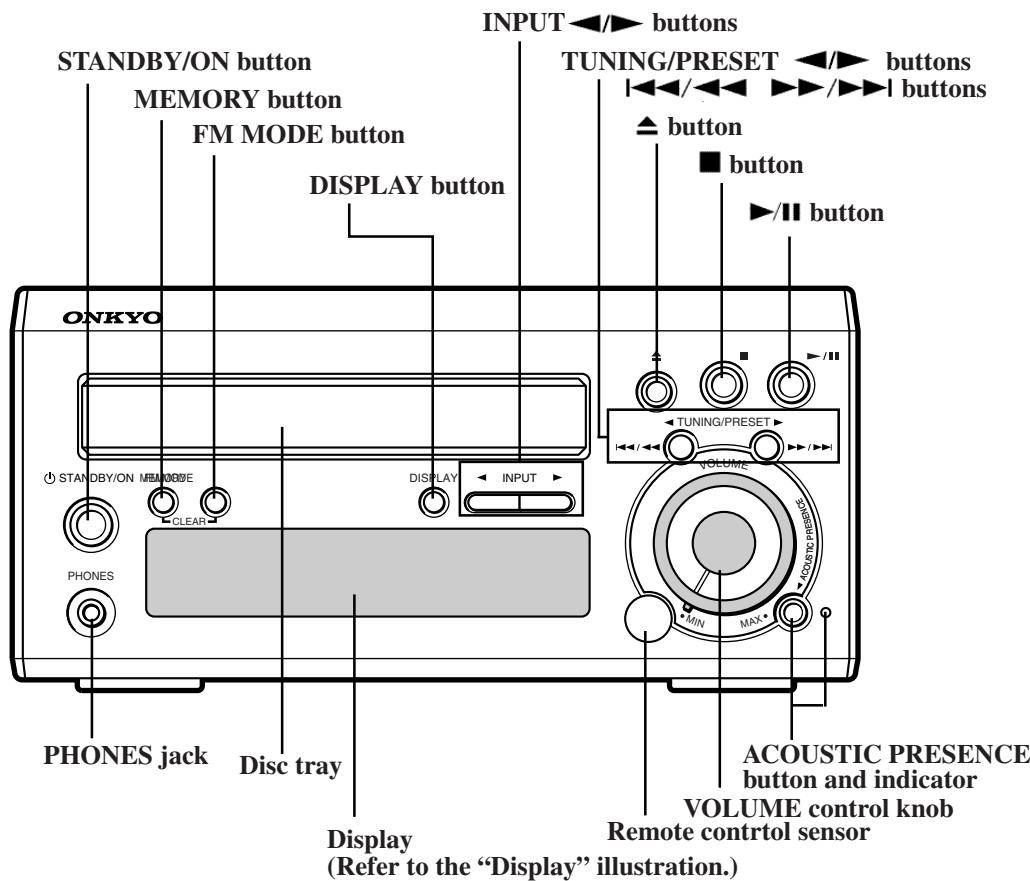


DISPLAY

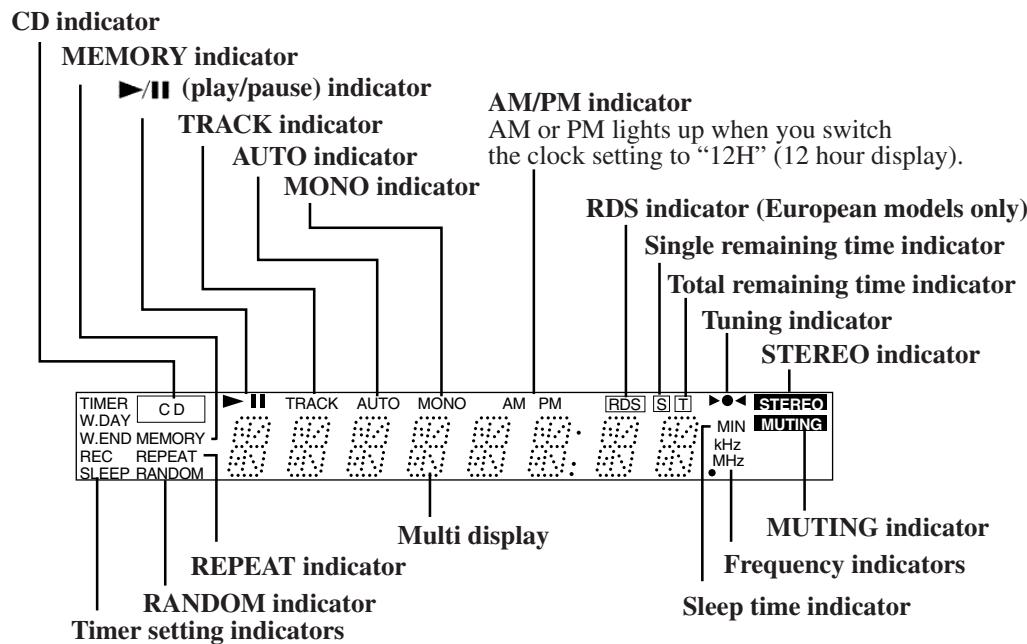


REAR PANEL VIEW


U.S. and Canadian models

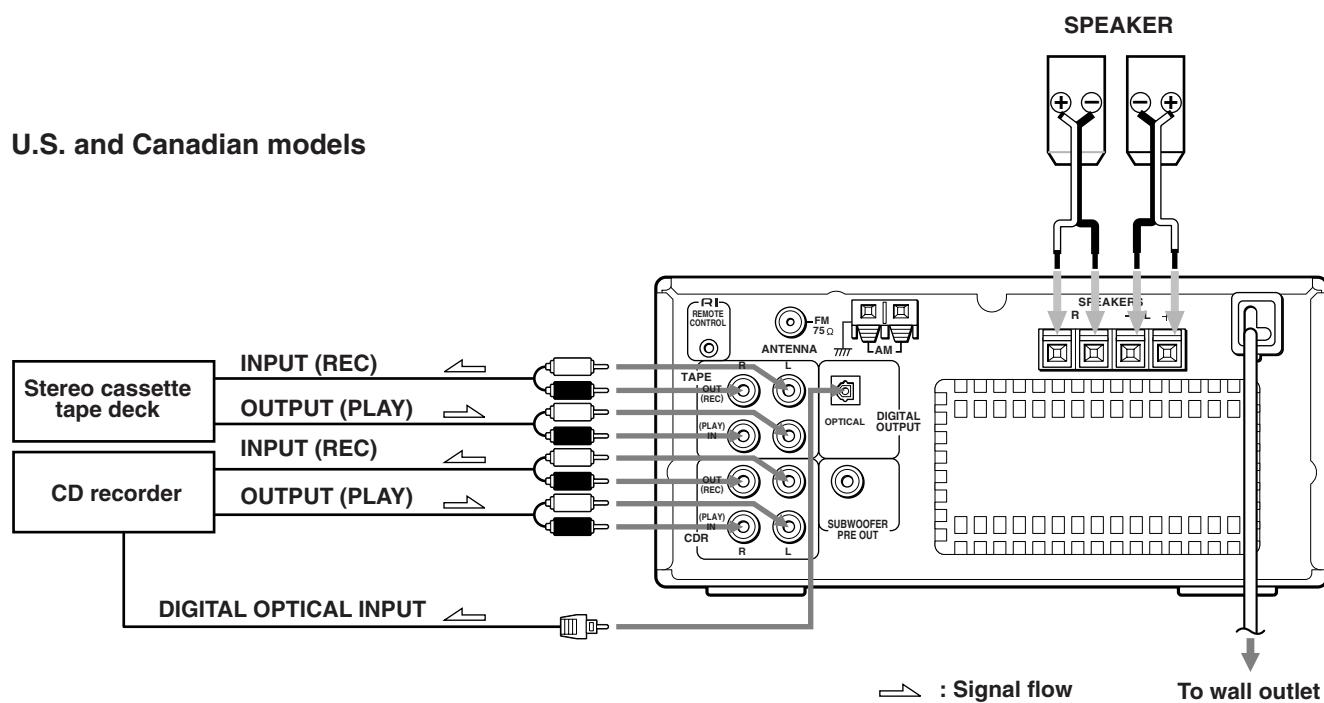


Asian and European models

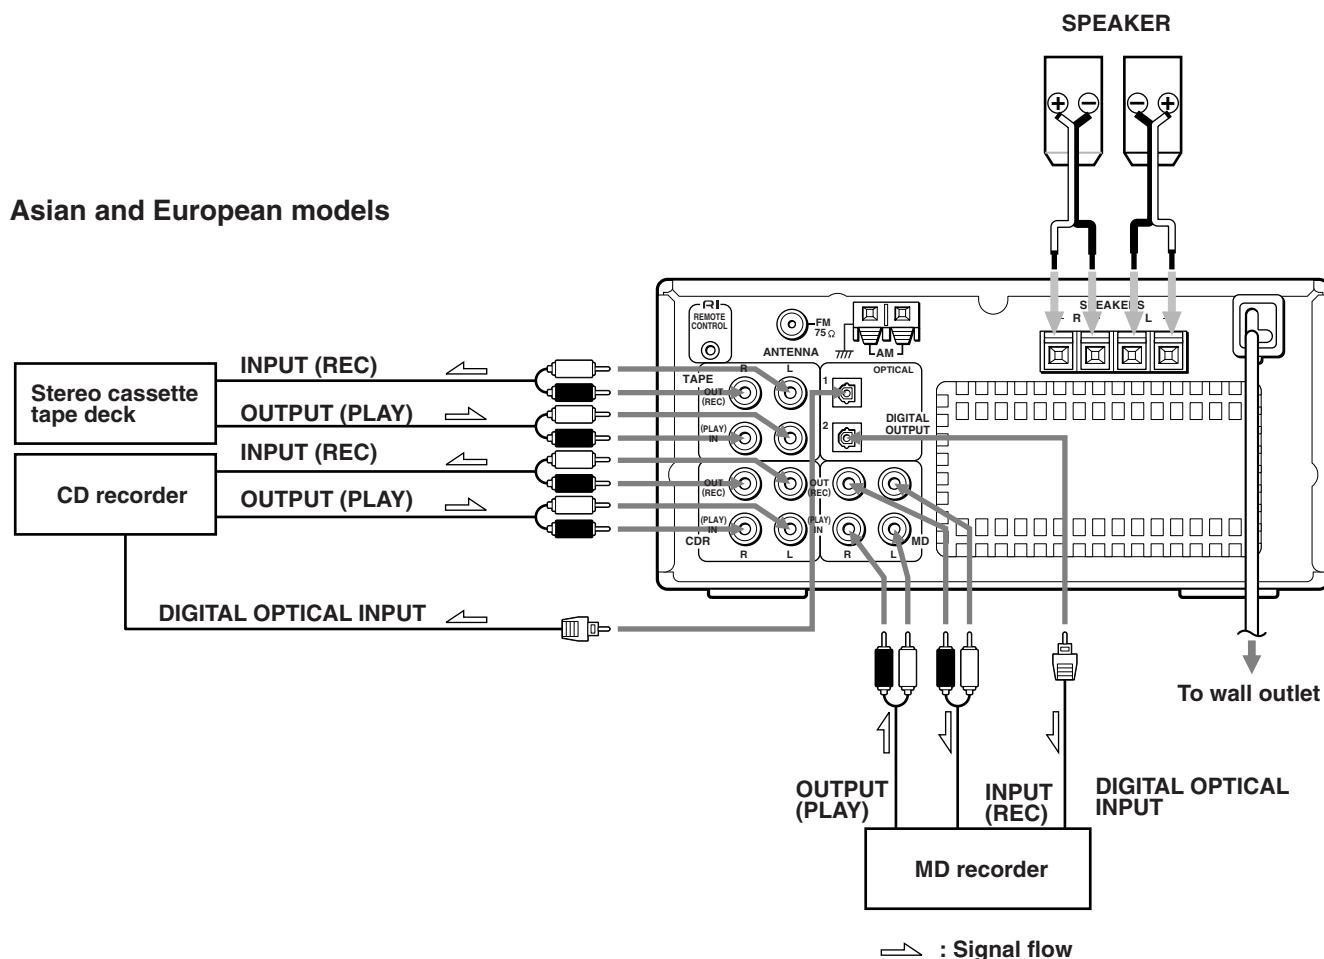

REMOTE CONTROLLER : RC-421S

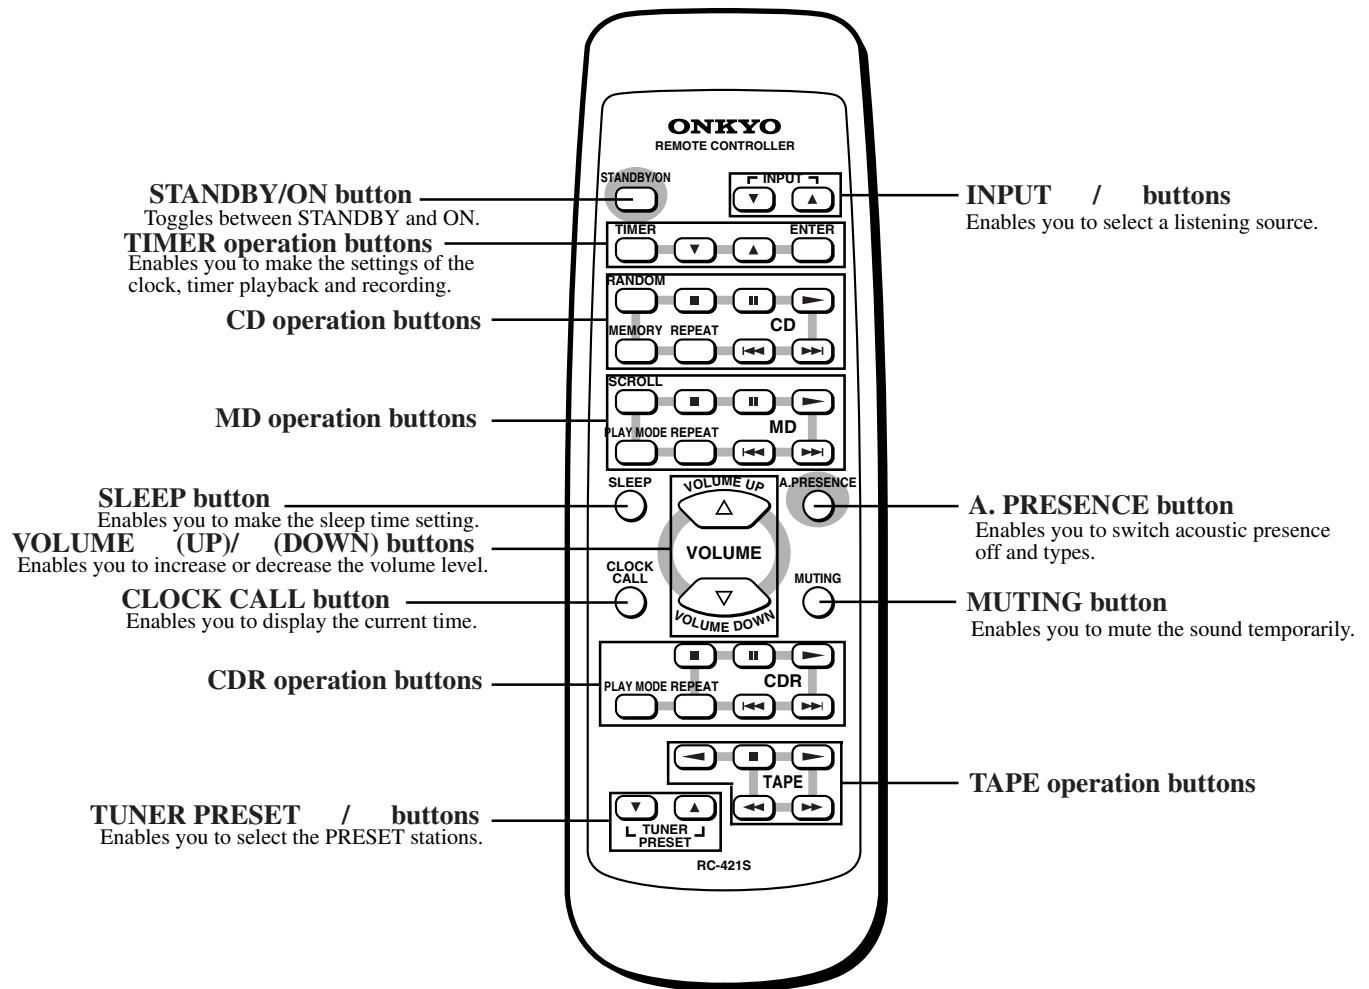

MICROPROCESSOR CONNECTION DIAGRAM

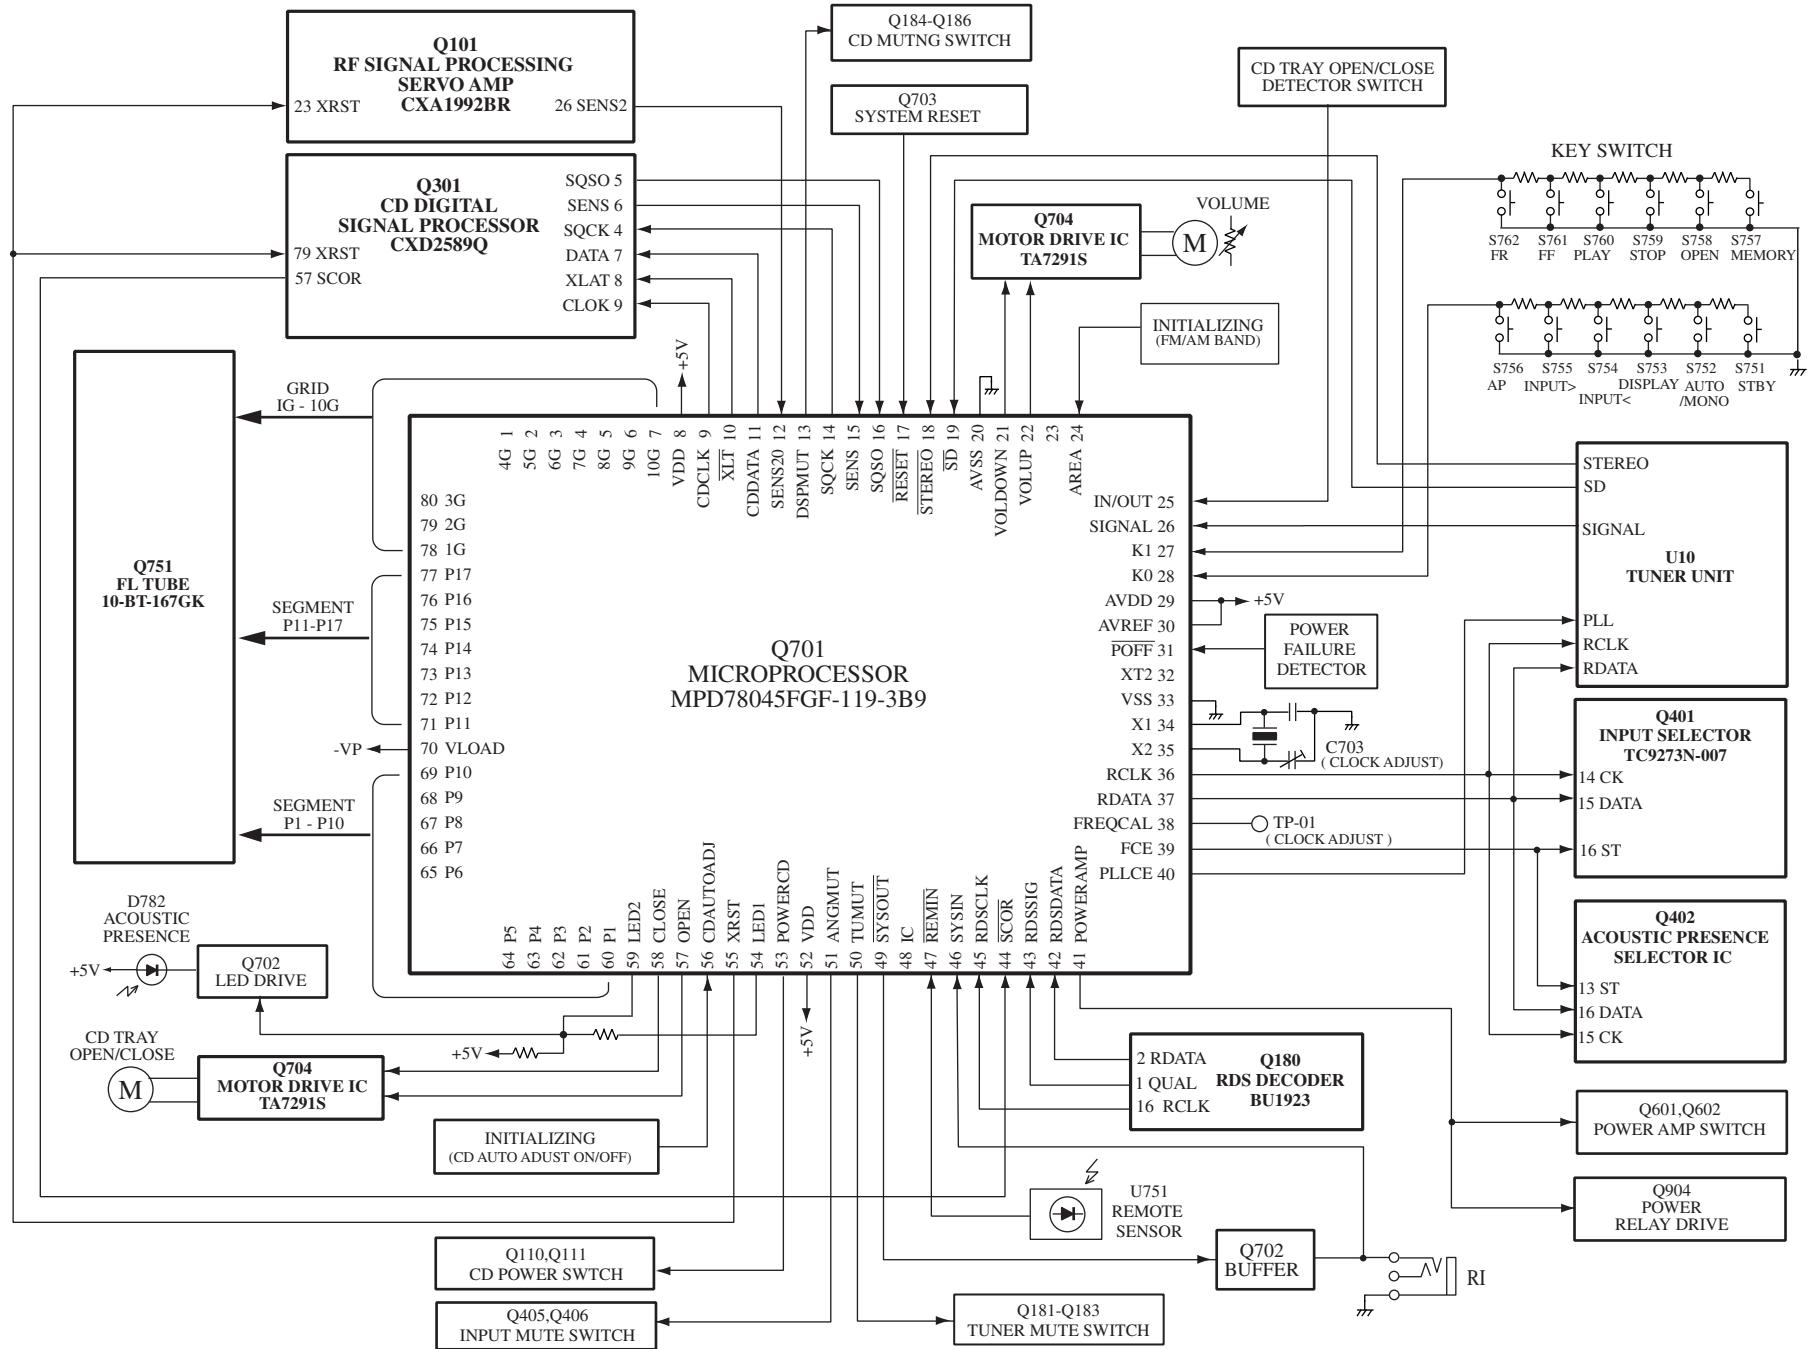


MICROPROCESSOR TERMINAL DESCRIPTION (Q701 : MPD78042GF-3B9)

NO.	Function	I/O	Description	NO.	Function	I/O	Description
1	4G	O	Grid output pins. (4G ~ 10G)	41	POWER AMP	O	Output pin for power supply control of power amplifier
2	5G	O		42	RDSDATA	I	Data input pin from RDS decoder IC.
3	6G	O		43	RDSSIG	I	Signal input pin from RDS decoder IC.
4	7G	O		44	SCOR	I	Sub code frame detection input pin from signal processing IC(CXD2589Q).
5	8G	O		45	RDSSCK	I	Clock input pin from RDS decoder IC.
6	9G	O		46	SYSIN	I	System code input pin.
7	10G	O		47	REMIN	I	Signal input pin for remote controller.
8	VDD	I		48	IC	I	Internal connection pin. Not used.
9	CDCLK	O	Command output pin to transfer the clock signal to signal processing IC(CXD2589Q).	49	SYSOUT	O	System code output pin.
10	XLT	O	Command output pin to transfer the latch signal to signal processing IC(CXD2589Q).	50	TUMUT	O	Muting control signal output pin for tuner section.
11	CDDATA	O	Command output pin to transfer the data signal to signal processing IC(CXD2589Q).	51	ANGMUT	O	Muting control signal output pin for amplifier section.
12	SENS20	I	Sense signal input pin from servo IC(CXA1992)	52	VDD	I	Power supply pin.
13	DSPMUT	O	Digital mute output pin to signal processing IC(CXD2589Q).	53	POWERCD	O	Output pin for power supply control of CD section.
14	SQCK	O	Subcode reading clock output pin to signal processing IC(CXD2589Q).	54	LED1	O	Acoustic presence indicator (red) control output pin.
15	SENS	I	Sense signal input pin from signal processing IC(CXD2589Q).	55	XRST	O	Reset signal output pin of signal processing IC and servo IC.
16	SQSO	I	Subcode data input pin from signal processing IC(CXD2589Q).	56	CDAUTOADJ	I	Set pin of self adjustment ON/OFF of CD
17	RESET	I	System reset input pin.	57	OPEN	O	CD tray open control output pin.
18	STEREO	I	FM stereo broadcast detection input pin.	58	CLOSE	O	CD tray close control output pin.
19	SD	I	Broadcast detection input pin.	59	LED2	O	Acoustic presence indicator (green) control output pin.
20	AVSS	I	Ground pin for A/D converter.	60	P1		Segment output pins. (P1 ~ P11)
21	VOLDOWN	O	Volume control output pin.	61	P2		
22	VOLUP	O	Volume control output pin.	62	P3		
23	-	Not used.		63	P4		
24	AREA	I	Initialization input pin for destination switch.	64	P5		
25	IN/OUT	I	Input pin for CD tray open/close detection switches.	65	P6		
26	SIGNAL	I	Signal level input pin for automatic memory.	66	P7		
27	K1	I	Operation key connection pin.	67	P8		
28	KO	I	Operation key connection pin.	68	P9		
29	AVDD	I	Power supply pin for A/D converter.	69	P10		
30	AVREF	I	Reference voltage input pin for A/D converter.	70	P11		
31	POFF	I	Power failure input pin.	71	VLOAD		Power supply pin for FL tube.
32	XT2	O	Sub clock connection pin. Not used.	72	P12		Segment output pins. (P12 ~ P17)
33	VSS	I	Gound pin.	73	P13		
34	X1	I	Master clock connection pin.	74	P14		
35	X2	I	Master clock connection pin.	75	P15		
36	RCLK	O	Serial clock output pin to PLL and function switch ICs (TC9273,TC9162).	76	P16		
37	RDATA	O	Serial data output pin to PLL and function switch ICs(TC9273,TC9162).	77	P17		Grid output pins. (1G ~ 3G)
38	FREQCAL	O	Frequency output terminal for clock adjustment	78	1G		
39	FCE	O	Serial latch output pin to function switch ICs(TC9273,TC9162).	79	2G		
40	PLLCE	O	Serial latch output pin to PLL IC.	80	3G		

IC BLOCK DIAGRAM AND DESCRIPTIONS

Q101:CXA1992BR (RF Signal Processing Servo Amplifier)

Block Diagram

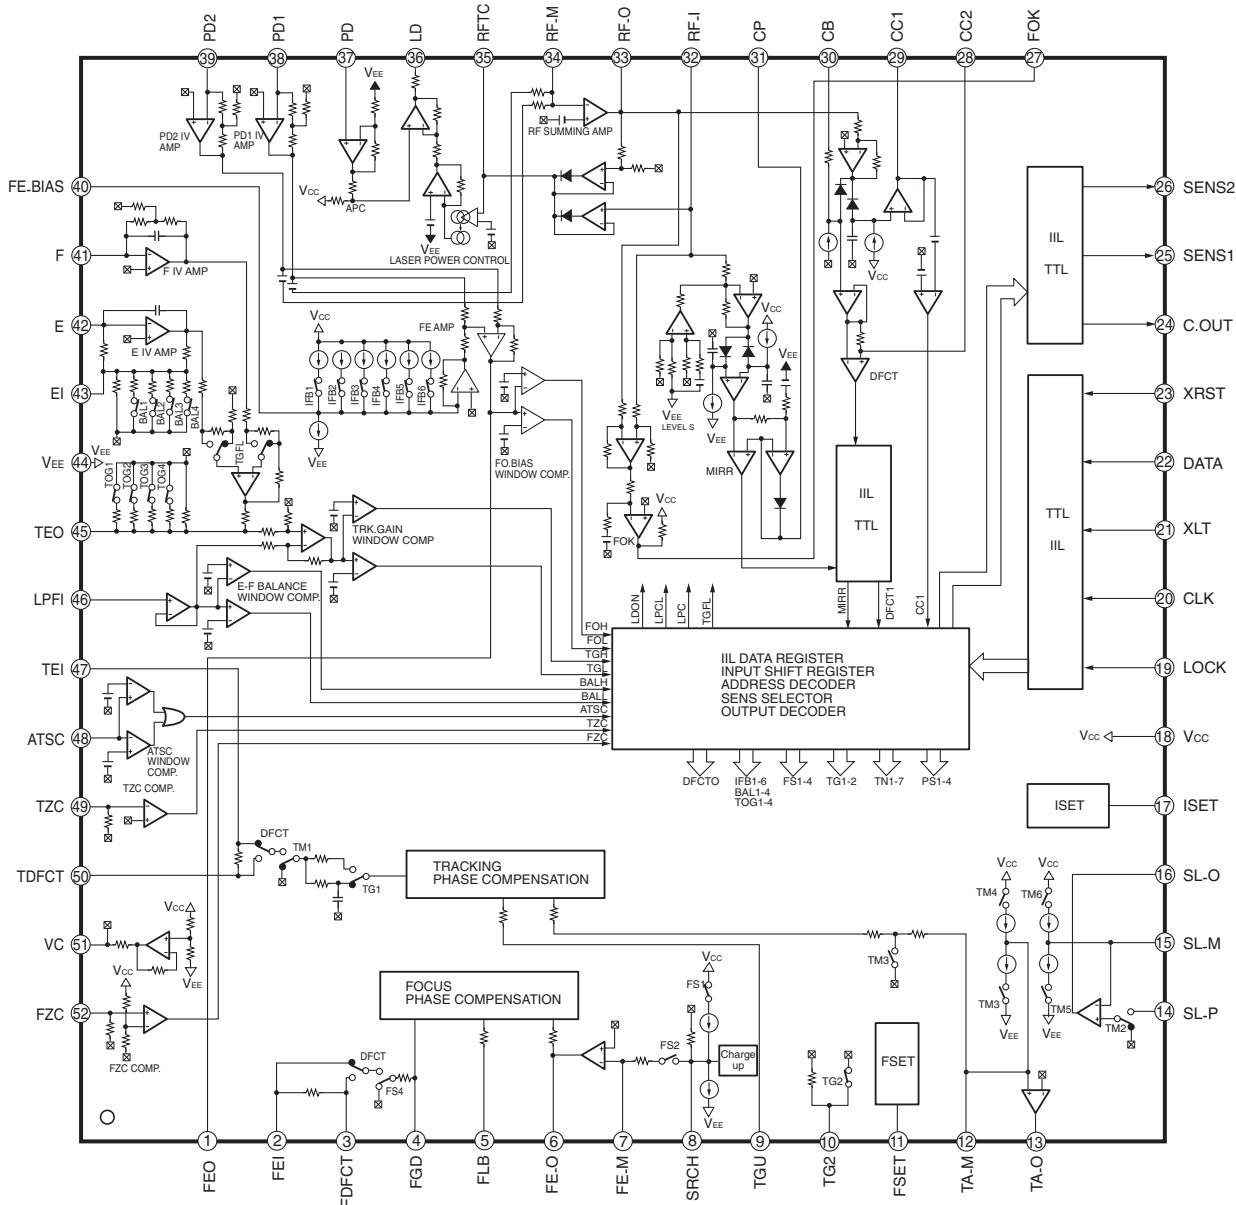


Terminal description

Pin No.	Symbol	I/O	Description	Pin No.	Symbol	I/O	Description
1	FEO	O	Focus error amplifier output. Connected internally to the window comparator input for bias adjustment.	26	SENS2	O	Outputs DFCT2, MIRR, BALL, TGL, FOL, and others according to the command from the CPU.
				27	FOK	O	Focus OK comparator output.
2	FEI	I	Focus error input.	28	CC2	I	Input for the defect bottom hold output with capacitance coupled.
3	FDFCT	I	Capacitor connection pin for defect time constant.				
4	FGD	I	Ground this pin through a capacitor for cutting the focus servo high-frequency gain.	29	CC1	O	Defect bottom hold output. Connected internally to the interruption comparator input.
5	FLB	I	External time constant setting pin for boosting the focus servo low-frequency.	30	CB	I	Connection pin for defect bottom hold capacitor.
6	FE_O	O	Focus drive output.				
7	FE_M	I	Focus amplifier inverted input.	32	RF_I	I	Input for the RF summing amplifier output with capacitance coupled.
8	SRCH	I	External time constant setting pin for generating focus search waveform.				
9	TGU	I	External time constant setting pin for switching tracking high-frequency gain.	34	RF_O	O	RF summing amplifier output. Eyepattern check point.
10	TG2	I	External time constant setting pin for switching tracking high-frequency gain.				
11	FSET	I	Peak frequency setting pin for focus and tracking phase compensation amplifier.	35	RFTC	I	External time constant setting pin during RF level control.
12	TA_M	I	Tracking amplifier inverted input.	36	LD	O	APC amplifier output.
13	TA_O	O	Tracking drive output.	37	PD	I	APC amplifier input.
14	SL_P	I	Sled amplifier non-inverted input.	38	PD1	I	RF I-V amplifier inverted input. Connect these pins to the photo diode A + C and B + D pins.
15	SL_M	I	Sled amplifier inverted input.	39	PD2	I	
16	SL_O	O	Sled drive output.	40	FE_BIAS	I	Bias adjustment of focus error amplifier. Leave this pin open for automatic adjustment.
17	ISET	I	Connect an external capacitance to set the current which determines the Focus search, Track jump, and Sled kick heights.				
18	VCC	I	Positive power supply.	43	EI	—	I-V amplifier E gain adjustment. (When not using automatic balance adjustment)
19	LOCK	I	The sled overrun prevention circuit operates when this pin is Low. (no pull-up resistance)				
20	CLK	I	Serial data transfer clock input from CPU. (no pull-up resistance)	45	TEO	O	Tracking error amplifier output. E-F signal is output.
21	XLT	I	Latch input from CPU. (no pull-up resistance)				
22	DATA	I	Serial data input from CPU. (no pull-up resistance)	47	LPFI	I	Comparator input for balance adjustment. (Input from TEO through LPF)
23	XRST	I	Reset input; resets at Low. (no pull-up resistance)				
24	C_OUT	O	Track number count signal output.	48	TEI	I	Tracking error input.
25	SENS1	O	Outputs FZC, DFCT1, TZC, BALH, TGH, FOH, ATSC, and others according to the command from CPU.	49	ATSC	I	Window comparator input for ATSC detection.
				50	TZC	I	Tracking zero-cross comparator input.
				51	TDFCT	I	Capacitor connection pin for defect time constant.
				52	VC	O	(VCC + VEE)/2 direct voltage output.
					FZC	I	Focus zero-cross comparator input.

Q301:CXD2589Q (CD Digital Signal Processor)

Bloch Diagram

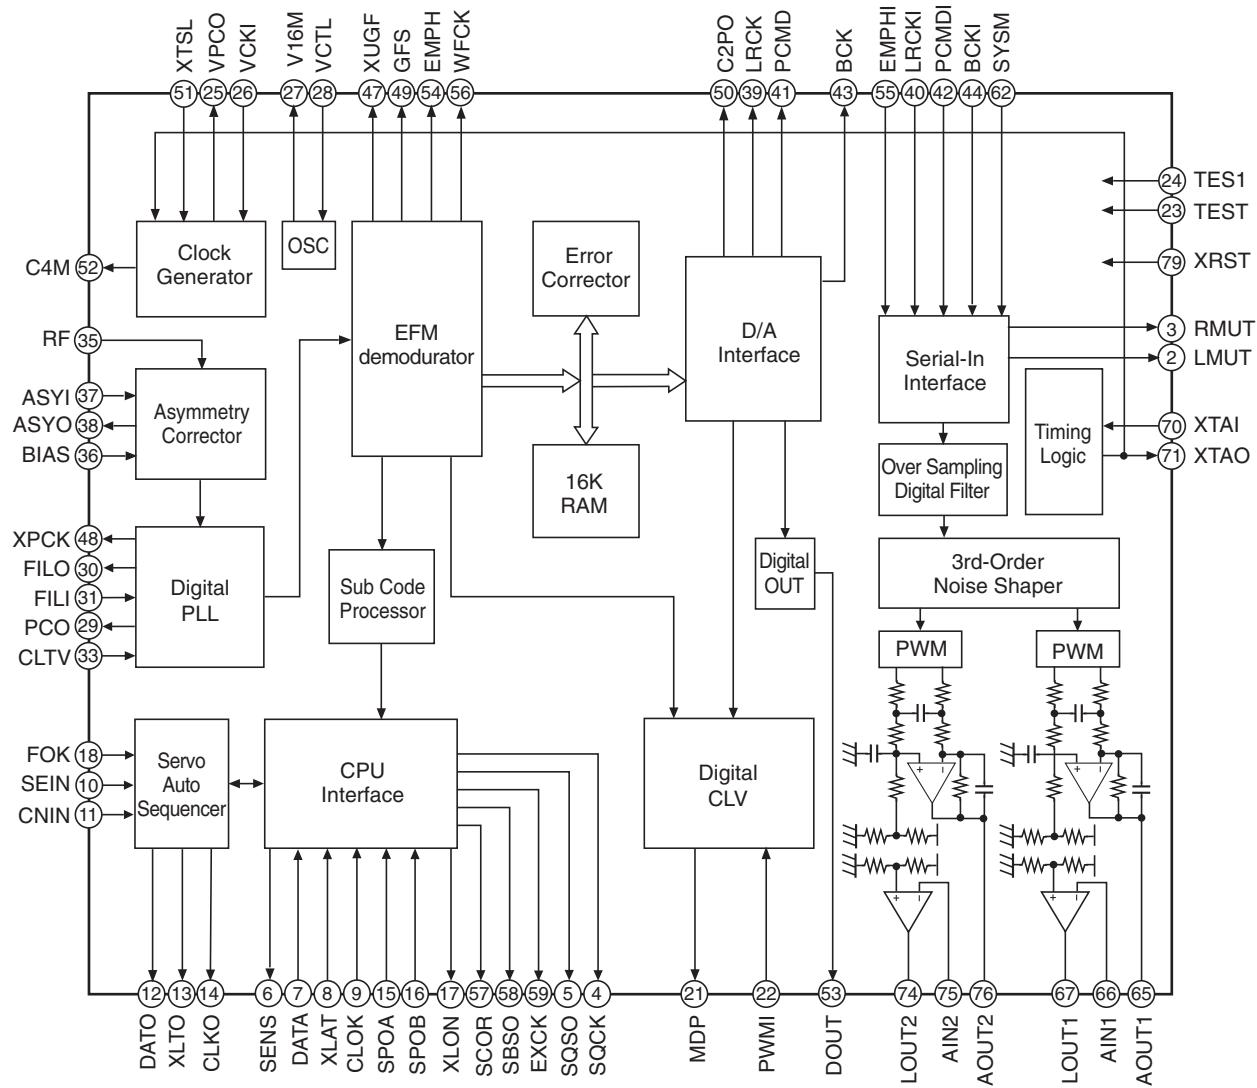

Terminal description

Pin No.	Symbol	I/O	Description	Pin No.	Symbol	I/O	Description
1	VSS	—	GND	43	BCK	O	D/A interface. Bit clock output.
2	LMUT	O	Left-channel zero detection flag.	44	BCKI	I	D/A interface. Bit clock input.
3	RMUT	O	Right-channel zero detection flag.	45	VSS	—	GND
4	SQCK	I	SQSO readout clock input.	46	VDD	—	Power supply (+5V).
5	SQSO	O	Sub Q 80-bit serial output.	47	XUGF	O	XUGF output. Switched to MNT1 or RFCK output by a command.
6	SENS	O	SENS output to CPU.	48	XPCK	O	XPLCK output. Switched to MNT0 output by a command.
7	DATA	I	Serial data input from CPU.	49	GFS	O	GFS output. Switched to MNT3 or XRAOF output by a command.
8	XLAT	I	Latch input from CPU. Serial data is latched at the falling edge.	50	C2PO	O	C2PO output. Switched to GTOP output by a command.
9	CLOK	I	Serial data transfer clock input from CPU.	51	XTSL	I	Crystal selector input. Low: 16.9344MHz; high: 33.8688MHz.
10	SEIN	I	SENS input from SSP.	52	C4M	O	4.2336MHz output. 1/4 frequency-divided VCKI output in CAV-W mode.
11	CNIN	I	Track jump count signal input.	53	DOUT	O	Digital Out output.
12	DATO	O	Serial data output to SSP.	54	EMPH	O	Outputs a high signal when the playback disc has emphasis, and a low signal when there is no emphasis.
13	XLTO	O	Serial data latch output to SSP. Latched at the falling edge.	55	EMPHI	I	Inputs a high signal when de-emphasis is on, and a low signal when de-emphasis is off.
14	CLKO	O	Serial data transfer clock output to SSP.	56	WFCK	O	WFCK output.
15	SPOA	I	Microcomputer extended interface (input A).	57	SCOR	O	Outputs a high signal when either subcode sync S0 or S1 is detected.
16	SPOB	I	Microcomputer extended interface (input B).	58	SBSO	O	Sub P to W serial output.
17	XLON	O	Microcomputer extended interface (output).	59	EXCK	I	SBSO readout clock input.
18	FOK	I	Focus OK input. Used for SENS output and the servo auto sequencer.	60	VSS	—	GND
19	VDD	—	Power supply (+5V).	61	VDD	—	Power supply (+5V).
20	VSS	—	GND	62	SYSM	I	Mute input. Active when high.
21	MDP	O	Spindle motor servo control.	63	AVSS	—	Analog GND.
22	PWMI	I	Spindle motor external control input.	64	AVDD	—	Analog power supply (+5V).
23	TEST	I	TEST pin; normally GND.	65	AOUT1	O	Left-channel analog output.
24	TES1	I	TEST pin; normally GND.	66	AIN1	I	Left-channel operational amplifier input.
25	VPCO	O	Charge pump output for the wide-band EFM PLL.	67	LOUT1	O	Left-channel LINE output.
26	VCKI	I	VCO2 oscillation input for the wide-band EFM PLL.	68	AVSS	—	Analog GND.
27	V16M	O	VCO2 oscillation output for the wide-band EFM PLL.	69	XVDD	—	Power supply for master clock.
28	VCTL	I	VCO2 control voltage input for the wide-band EFM PLL.	70	XTAI	I	Crystal oscillation circuit input. Input the external master clock via this pin.
29	PCO	O	Master PLL charge pump output.	71	XTAO	O	Crystal oscillation circuit output.
30	FILO	O	Master PLL (slave = digital PLL) filter output.	72	XVSS	—	GND for master clock.
31	FILI	I	Master PLL filter input.	73	AVSS	—	Analog GND.
32	AVSS	—	Analog GND.	74	LOUT2	O	Right-channel LINE output.
33	CLTV	I	Master VCO control voltage input.	75	AIN2	I	Right-channel operational amplifier input.
34	AVDD	—	Analog power supply (+5V).	76	AOUT2	O	Right-channel analog output.
35	RF	I	EFM signal input.	77	AVDD	—	Analog power supply (+5V).
36	BIAS	I	Constant current input of the asymmetry circuit.	78	AVSS	—	Analog GND.
37	ASYI	I	Asymmetry comparator voltage input.	79	XRST	I	System reset. Reset when low.
38	ASYO	O	EFM full-swing output (low = VSS, high = VDD).	80	VDD	—	Power supply (+5V).
39	LRCK	O	D/A interface. LR clock output f = Fs.				
40	LRCKI	I	LR clock input.				
41	PCMD	O	D/A interface. Serial data output (two's complement, MSB first).				
42	PCMDI	I	D/A interface. Serial data input (two's complement, MSB first).				

Notes) • PCMD is an MSB first, two's complement output.

• GTOP is used to monitor the frame sync protection status. (High: sync protection window open.)

• XUGF is the frame sync obtained from the EFM signal, and a negative pulse. It is the signal before sync protection.



• XPLCK is the inverse of the EFM PLL clock. The PLL is designed so that the falling edge of XPLCK and the EFM signal transition point coincide.


• GFS goes high when the frame sync and the insertion protection timing match.

• RFCK is derived with the crystal accuracy. This signal has a cycle of 136μs (during normal speed).


• C2PO represents the data error status.

• XRAOF is generated when the 16K RAM exceeds the ±4F jitter margin.

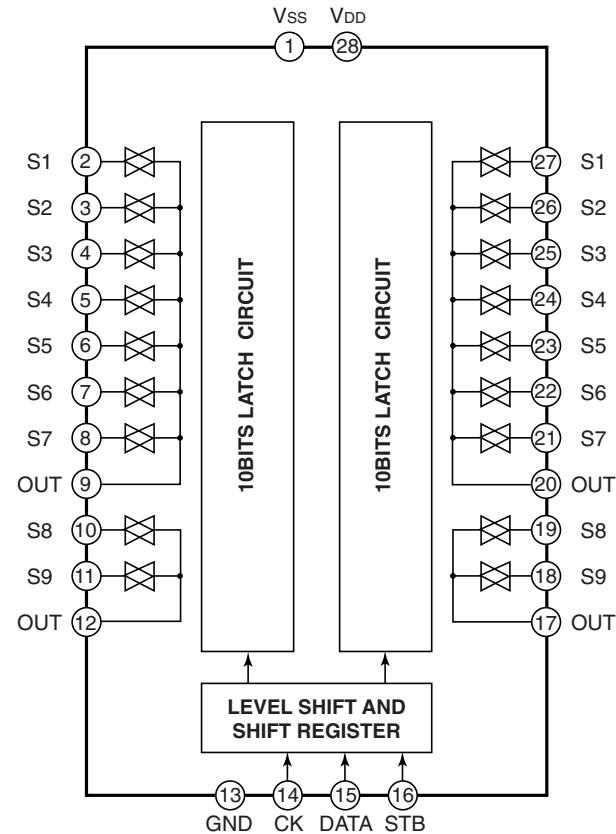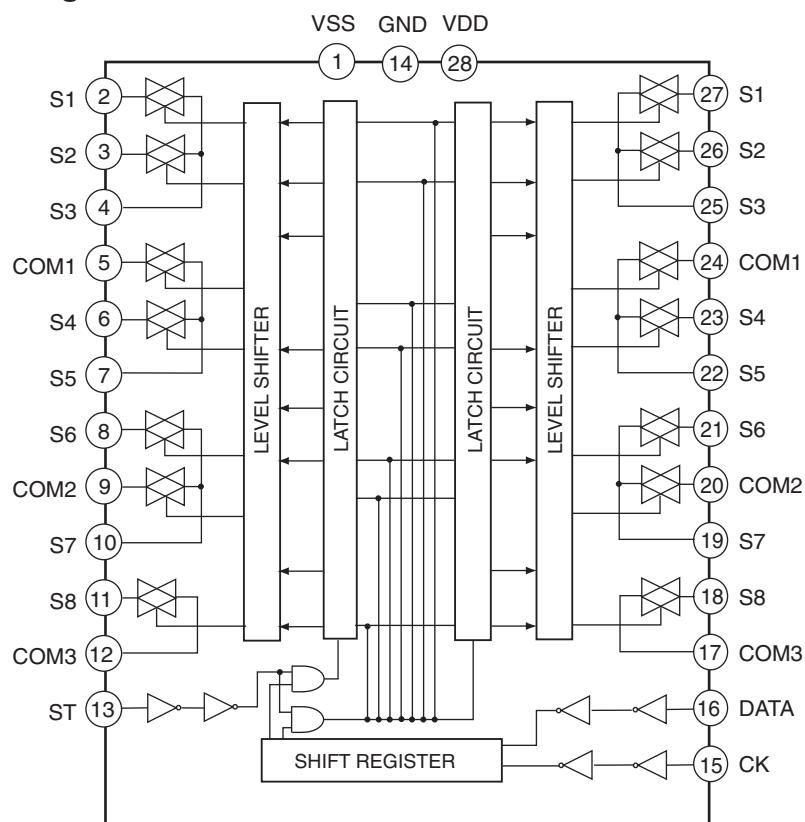Q401:TC9273N-007 (Analog function switch)**Q402:TC9162AF Analog function switch**

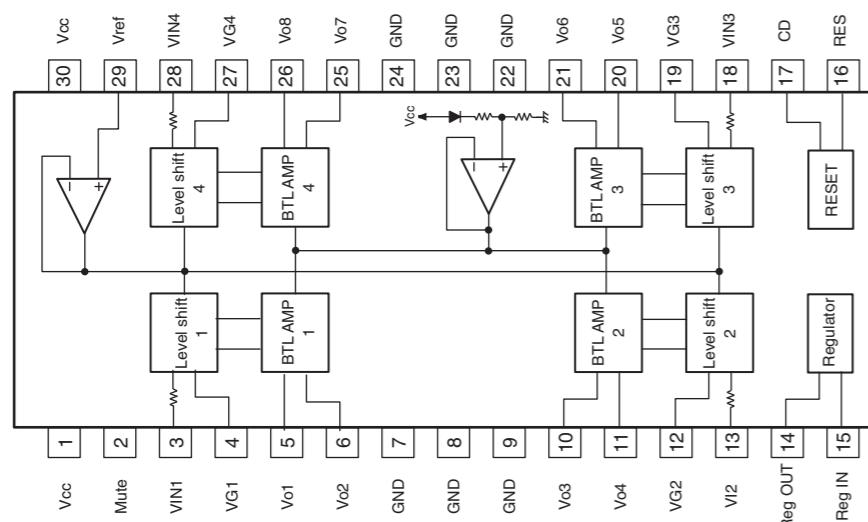
Q102:LA6541D (4-channel ridge Driver for Compact Dizcs)

Pin No.	Pin Name	Description (Function)
1	V _{CC}	Power supply (shorted with pin 30)
2	Mute	ON/OFF control for all BTL AMP outputs
3	V _{IN1}	BTL AMP 1 input
4	VG1	BTL AMP 1 input (for gain control)
5	V _{O1}	BTL AMP 1 output (non-inverting side)
6	V _{O2}	BTL AMP 1 output (inverting side)
7	GND	GND (minimum electric potential)
8	GND	GND (minimum electric potential)
9	GND	GND (minimum electric potential)
10	V _{O3}	BTL AMP 2 output (inverting side)
11	V _{O4}	BTL AMP 2 output (non-inverting side)
12	VG2	BTL AMP 2 input (for gain control)
13	V _{IN2}	BTL AMP 2 input
14	REG OUT	Connection for collector of external transistor (PNP); 5 V supply output
15	REG IN	Connection for base of external transistor (PNP)
16	RES	Reset output
17	C _D	Reset output delay time setting (with capacitor)
18	V _{IN3}	BTL AMP 3 input
19	VG3	BTL AMP 3 input (for gain control)
20	V _{O5}	BTL AMP 3 output (non-inverting side)
21	V _{O6}	BTL AMP 3 output (inverting side)
22	GND	GND (minimum electric potential)
23	GND	GND (minimum electric potential)
24	GND	GND (minimum electric potential)
25	V _{O7}	BTL AMP 4 output (inverting side)
26	V _{O8}	BTL AMP 4 output (non-inverting side)
27	VG4	BTL AMP 4 input (for gain control)
28	V _{IN4}	BTL AMP 4 input
29	V _{REF}	Reference voltage input for level shift circuit
30	V _{CC}	Power supply (shorted with pin 1)

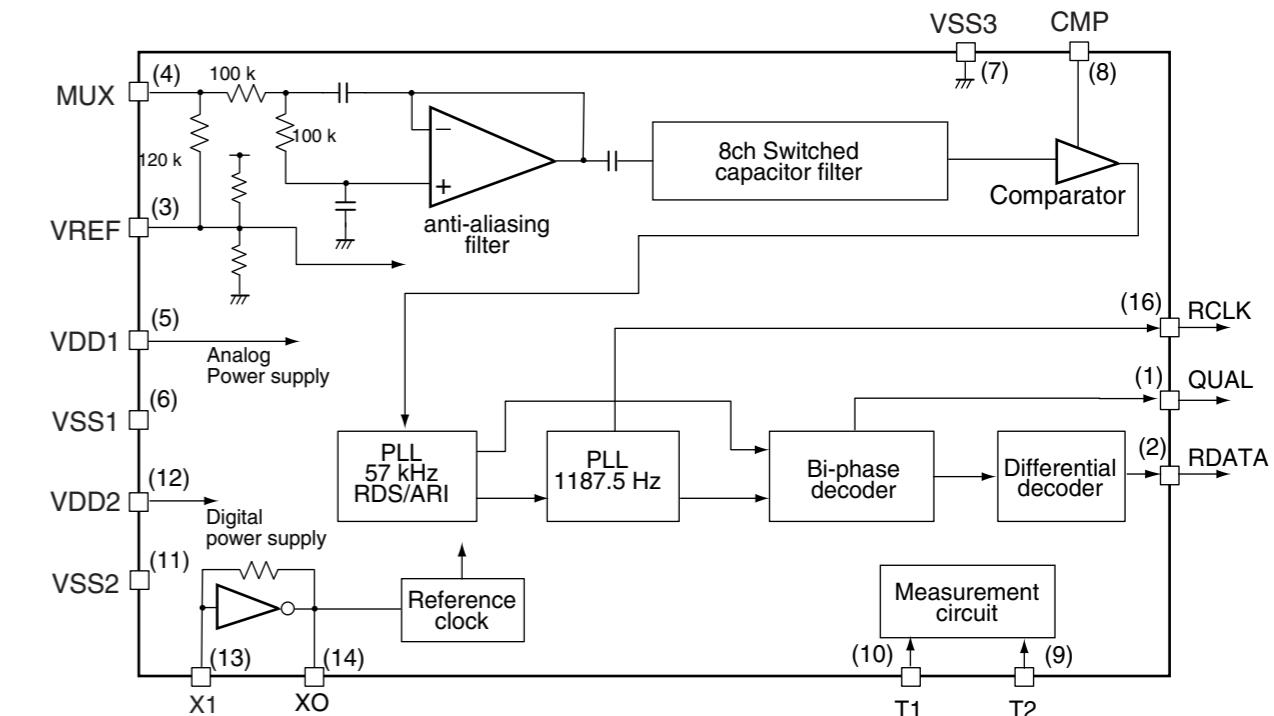Q180:BU1923 (RDS Decoder)

Pin No.	Symbol	Pin name	Function
1	QUAL	Demodulator quality	Good data : High , bad data : Low
2	RDATA	Demodulator data	Refer to output data trimming
3	Vref	Reference voltage	1/2 VDD1
4	MUX	Input	Composite signal input
5	VDD1	Analog power supply	4.5 V to 5.5 V
6	Vss1		
7	Vss3	GND	-
8	CMP	Comparator input	C-junction
9	T2	Test input	Open or connected to ground
10	T1		
11	VDD2	Digital power supply	4.5 V to 5.5 V
12	Vss2		
13	XI	Crystal oscillator	Connects to 4.332 MHz oscillator
14	XO		
15	(NC)	-	-
16	RCLK	Demodulator clock	1187.5 Hz clock


Q103:TA7291S (motor driver)

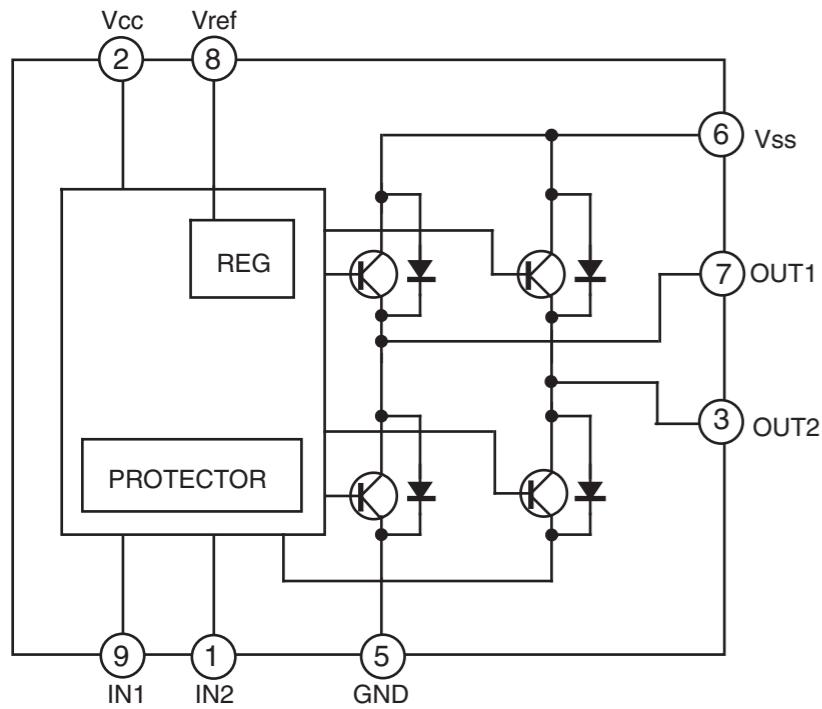



INPUT		OUTPUT		
IN1	IN2	OUT1	OUT2	MODE
0	0			STOP
1	0	H	L	CW/CCW
0	1	L	H	CCW/SW
1	1	L	L	BRAKE

CCW : Counter clockwise diection
CW : Clockwise diection

Q691:TC7WU04FU (triple inverters)

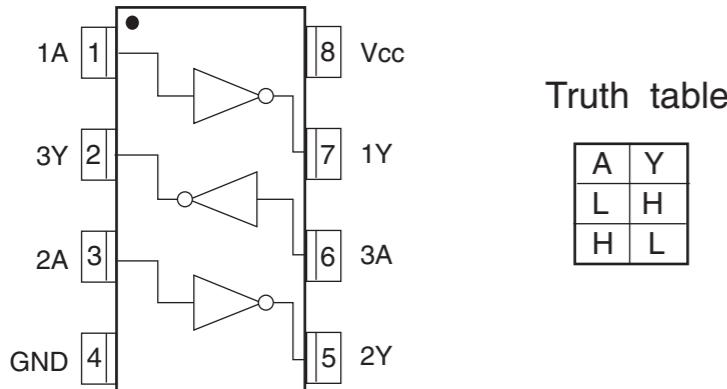


Q751 : 10BT-167GK (FL TUBE)

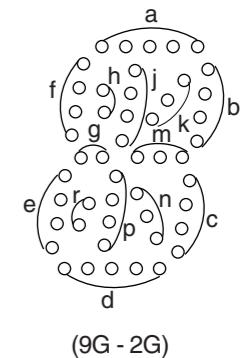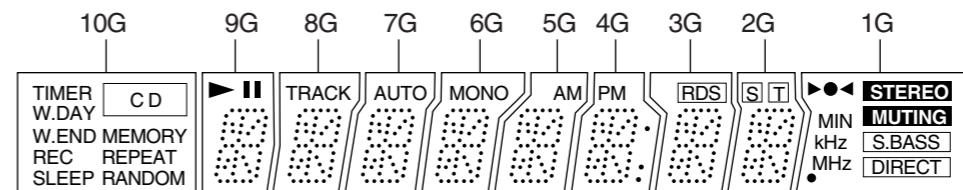


	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	-	a	a	a	a	a	a	a	a	-
P2	W.DAY	j	j	j	j	j	j	j	j	MUTING
P3	W.END	h	h	h	h	h	h	h	h	MIN
P4	MEMORY	k	k	k	k	k	k	k	k	S.BASS
P5	-	b	b	b	b	b	b	b	b	-
P6	-	f	f	f	f	f	f	f	f	-
P7	-	g	g	g	g	g	g	g	g	-
P8	REC	m	m	m	m	m	m	m	m	MHz
P9	-	c	c	c	c	c	c	c	c	-
P10	-	e	e	e	e	e	e	e	e	-
P11	REPEAT	n	n	n	n	n	n	n	n	kHz
P12	RANDOM	r	r	r	r	rr	r	r	r	DIRECT
P13	-	p	p	p	p	p	p	p	p	-
P14	-	d	d	d	d	d	d	d	d	-
P15	TIMER	▷	TRACK	AUTO	MONO	AM	PM	RDS	S	▷○◁
P16	CD	□□	-	-	-	-	Col	-	T	STEREO
P17	SLEEP	-	-	-	-	-	Dp	-	-	○

CD MECHANISM EXPLODEE VIEW(1)

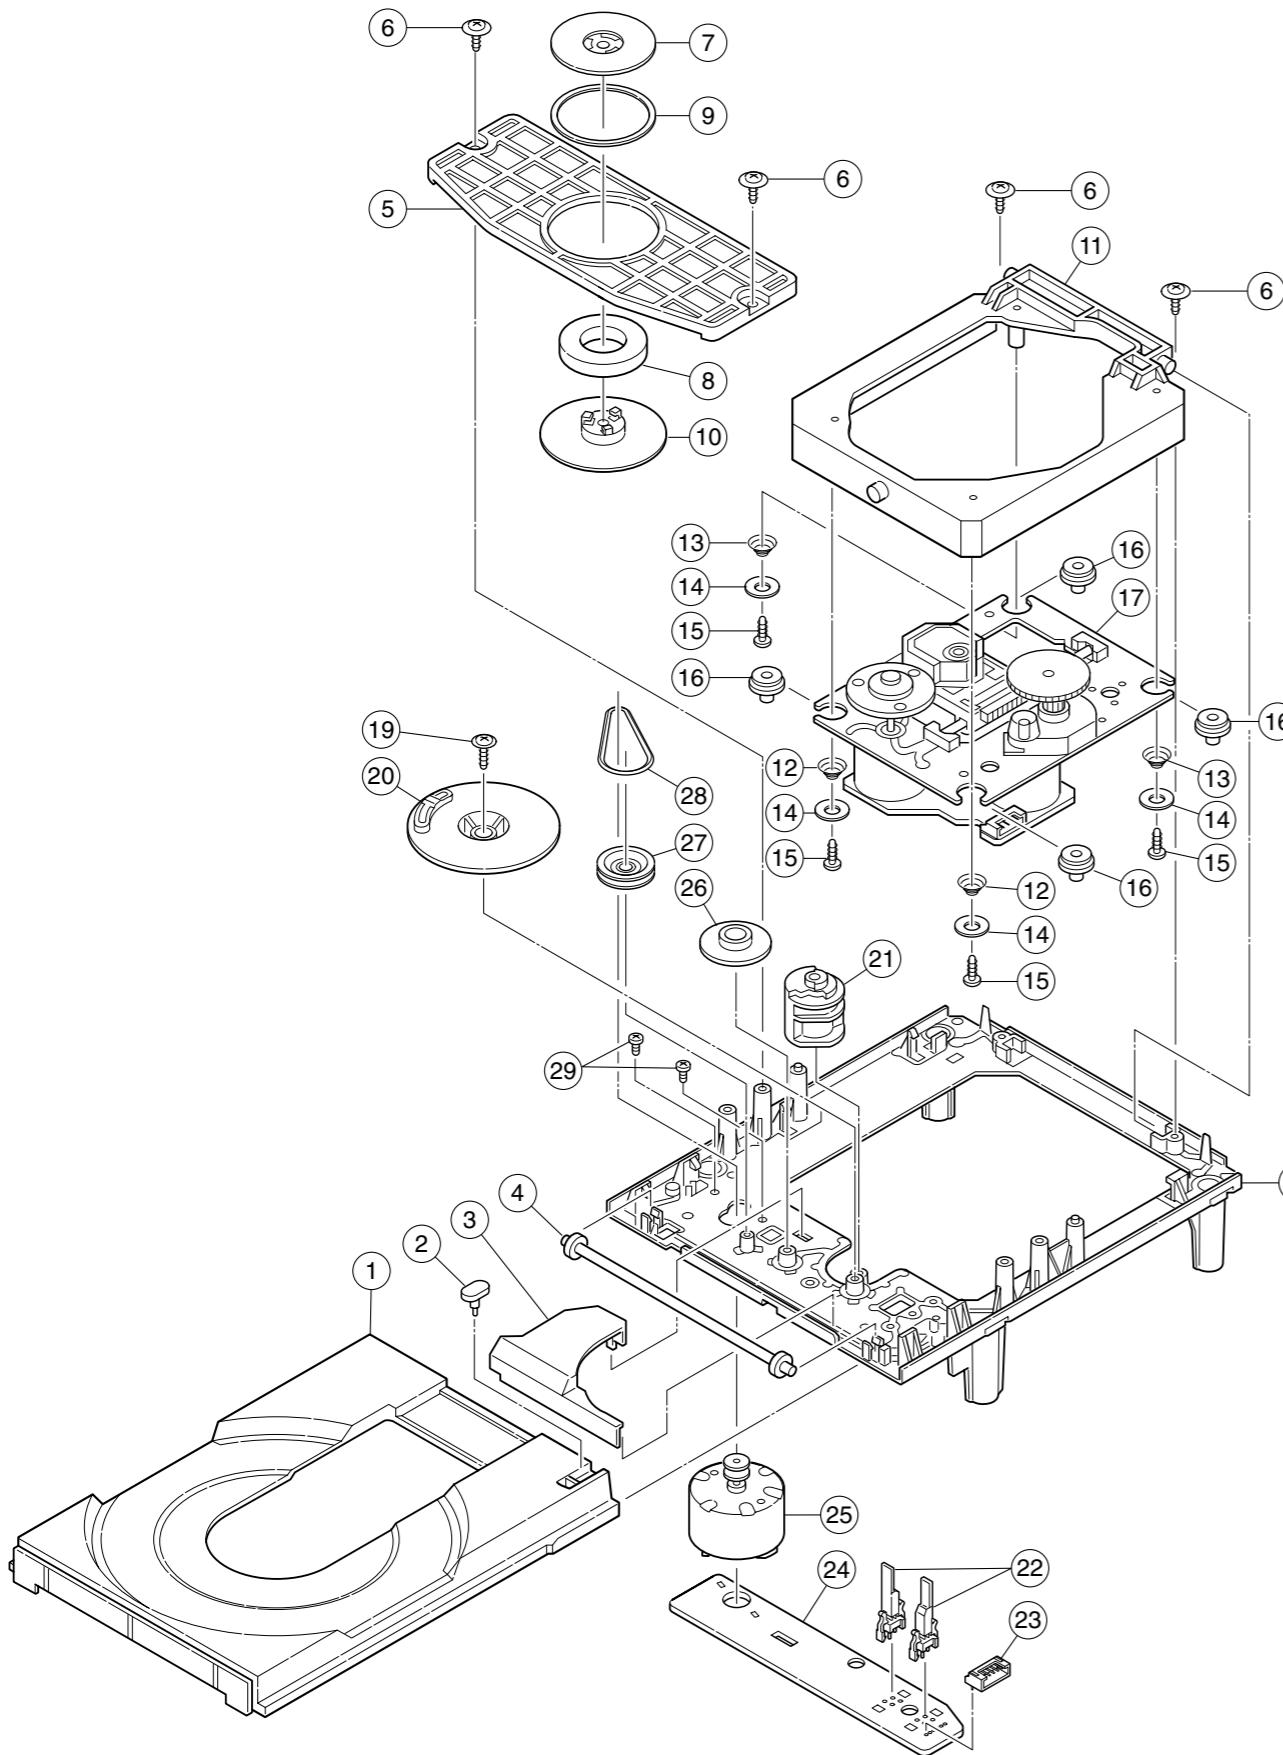

CD MECHANISM EXPLODEE VIEW(2)

pickup drive unit

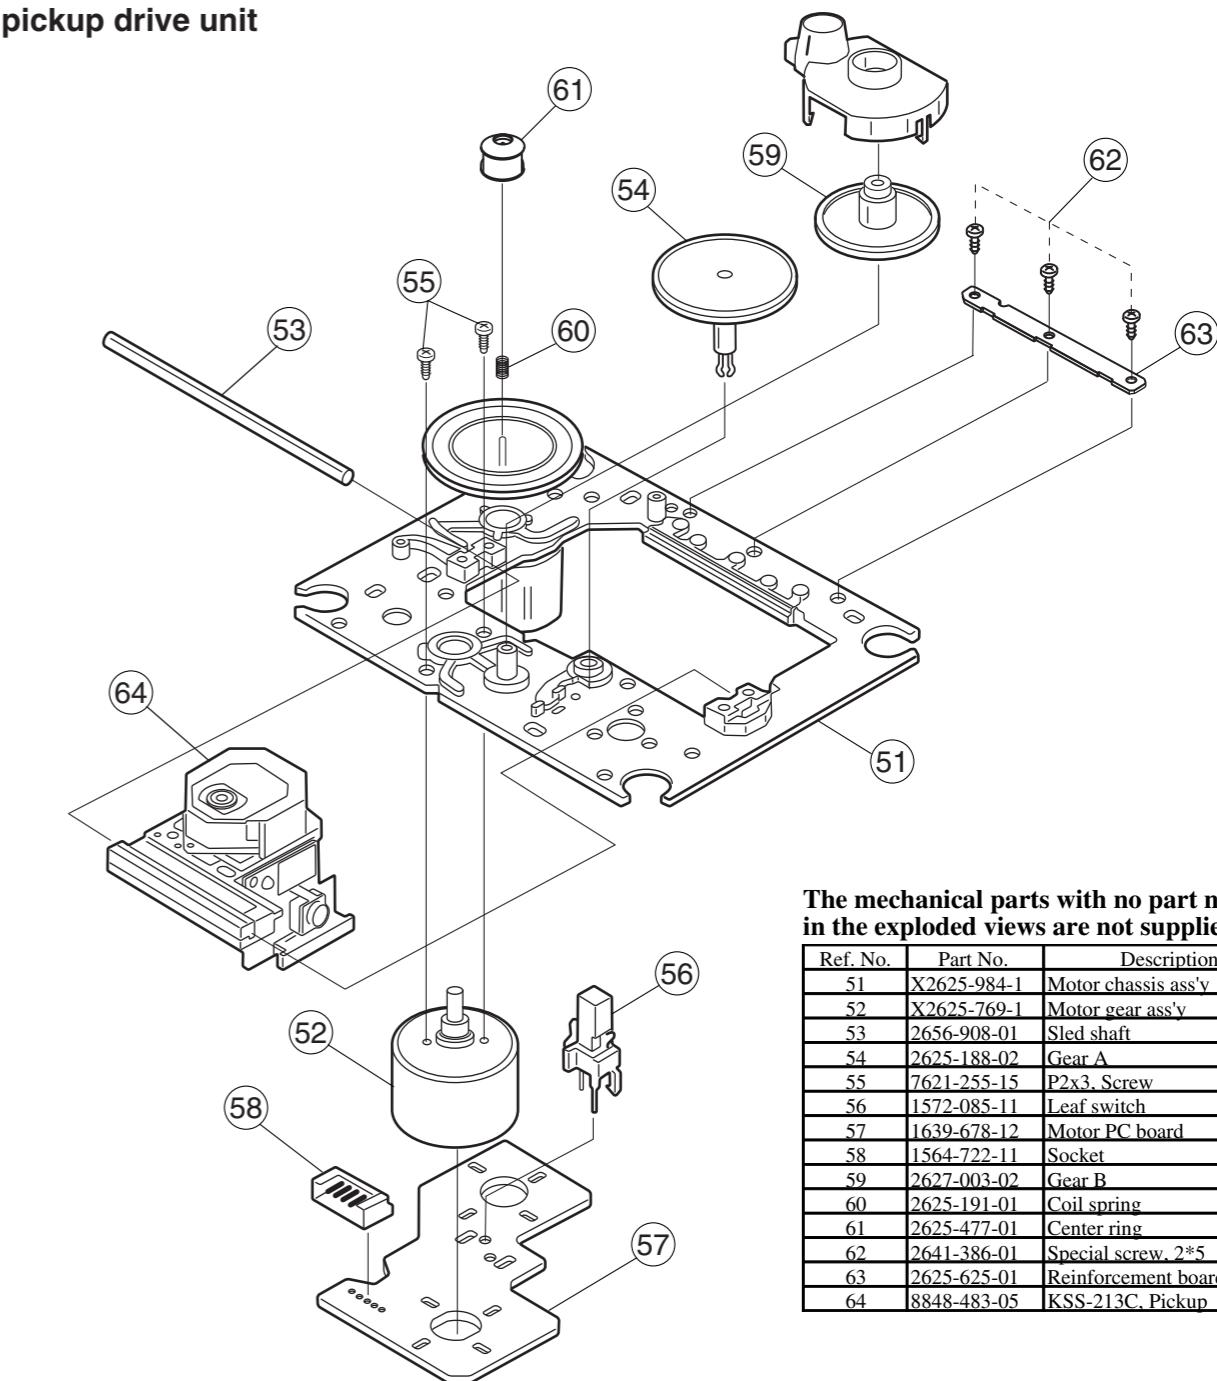

The mechanical parts with no part number in the exploded views are not supplied.

Ref. No.	Part No.	Description
51	X2625-984-1	Motor chassis ass'y
52	X2625-769-1	Motor gear ass'y
53	2656-908-01	Sled shaft
54	2625-188-02	Gear A
55	7621-255-15	P2x3, Screw
56	1572-085-11	Leaf switch
57	1639-678-12	Motor PC board
58	1564-722-11	Socket
59	2627-003-02	Gear B
60	2625-191-01	Coil spring
61	2625-477-01	Center ring
62	2641-386-01	Special screw, 2*5
63	2625-625-01	Reinforcement board
64	8848-483-05	KSS-213C, Pickup



Ref. No.	Part No.	Description
1	2646-290-01	Tray
2		Stopper
3	2625-544-01	Gear cover
4	2625-535-01	Tray Gear
5	2625-546-01	Chuck plate
6	PTPWH2.6*7,Screw	
7	2625-537-01	Chuck yoke
8	1452-493-21	Magnet
9	2625-541-02	Damper
10	2646-291-01	Chucking pulley
11	2646-288-01	Sub chassis
12	2627-236-01	Coil spring (front)
13	2627-235-01	Coil spring (back)
14	2646-289-01	Washer
15	P2.6*10,Screw	

Ref. No.	Part No.	Description
16	2627-234-01	Insulator
17		KSM-213CCM
18	2625-552-06	Main chassis
19	3319-501-51	PTPWH2.6*16, Screw
20	2625-547-01	Drive Gear
21	2625-545-04	Control cam
22	1692-667-11	Leaf switch
23	1564-721-11	Socket
24	1640-523-11	Loading motor ass'y
25	X2625-117-1	Loading motor
26	2625-274-02	Middle gear
27	2625-536-02	Loading pulley
28	3653-387-00	LM belt
29	B2.6*2.5, Screw	


REPLACEMENT OF OPIAL PICKUP

The laser diode in the optical pickup block is so sensitive to static electricity, surge current and etc. That the components are liable to be broken down or its reliability remarkably deteriorated. During repair, carefully take the following precautions.
Do not touch the optical pickup object lens with the hands.

- (1) The machine screw of four points which is the fixation of mechanism is removed, mechanism is upset, and PC which is about the bottom of mechanism is seen. (Fig-1, Fig-2)

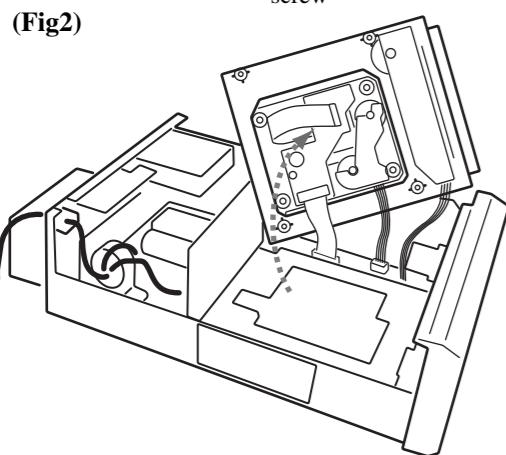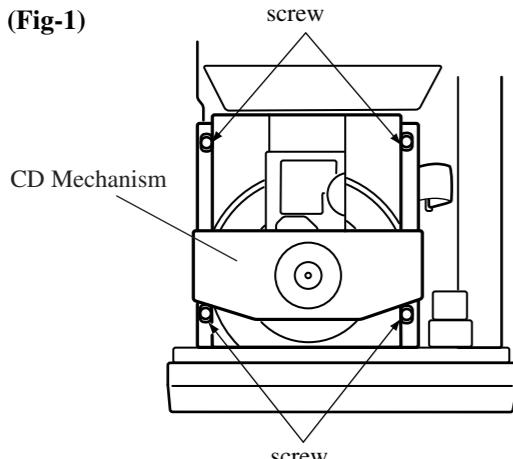


- (2) The machine screw is removed and CD connector PC board (NAETC-6883) is removed from the main body of CD mechanism. (Fig-3)

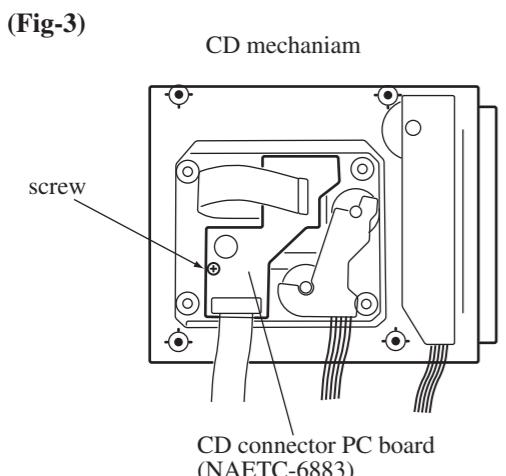


- (3) Connect J293 (or LD short terminal 2) on CD Connector PC board (NAETC-6883) first when you replace an optical pickup. (Fig-4)

(Fig-4)

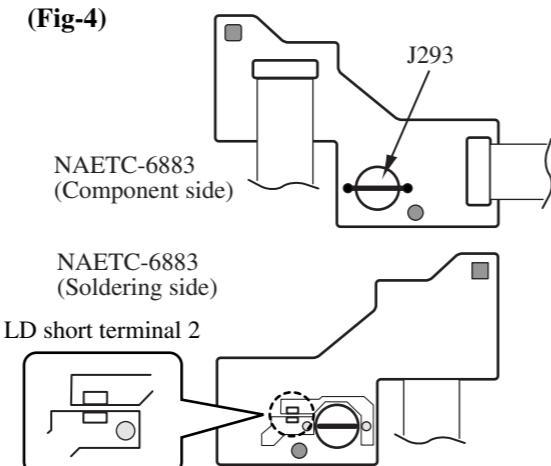

- (4) Remove socket P351 between the CD Connector PC board and the Main circuit PC board. (Fig-5)


(Fig-5)

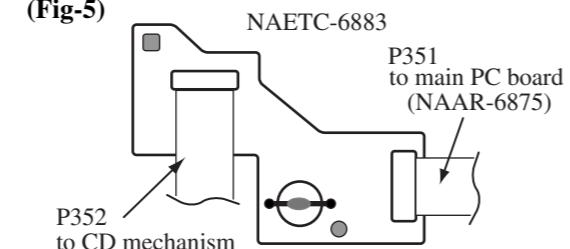

- (5) Solder the LD short terminal 1 on mechanism (Fig-6)

- (6) Disconnect the flexible flat cable P352. (Fig-6)

(Fig-6)

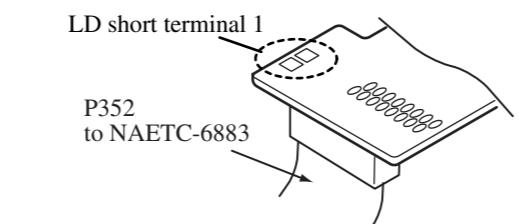

- (7) Replace the optical pickup.

- (8) Connect the flexible flat cable P352. (Fig-6)

- (9) Unsolder the LD terminal 1 on mechanism. (Fig-6)

- (10) Connect the socket P351 between CD Connector and Main circuit PC boards (NAAR-6875). (Fig-5)

- (11) Cut J293. (or Unsolder the LD terminal 2) (Fig-4)

CHASSIS EXPLODED VIEW PARTS LIST

REF.NO.	PART NO.	DESCRIPTION	REF.NO.	PART NO.	DESCRIPTION
1	27111168	Front brakcket	U1	H445574-1A	NAAF-6874-1A, Selector circuit PC board ass'y <D>
6	838130088	3TTB+8B, Self tapping screw	1H445574-1B	NAAF-6874-1B, Selector circuit PC board ass'y <P>	
7	27100384	Chassis	1H445574-1C	NAAF-6874-1C, Selector circuit PC board ass'y <DT>	
8	27190693A	KGLS-6RF, Holder	1H445574-1D	NAAF-6874-1D, Selector circuit PC board ass'y <GR, GT>	
9	27191112	KGPS-6RF, Holder	U2	1H445578-1A	NAPS-6878-1A, Power supply PC board ass'y <D>
10	27191110	Hoder, M	1H445578-1B	NAPS-6878-1B, Power supply PC board ass'y <P>	
12	2717523-1A	Leg	1H445578-1C	NAPS-6878-1C, Power supply PC board ass'y <DT>	
14	27300750	⚠ Busing, cord	1H445578-1D	NAPS-6878-1D, Power supply PC board ass'y <GR, GT>	
15	830440069	4TTC+6C(BC), Self tapping screw	U3	1H445579-1A	NADIS-6879-1A, Display circuit PC board ass'y <D>
16	831430088	3TTB+8B(BC), Self tapping screw	1H445579-1B	NADIS-6879-1B, Display circuit PC board ass'y <P>	
20	28184781	Cover, HT	1H445579-1C	NADIS-6879-1C, Display circuit PC board ass'y <DT>	
22	28184782	Top cover	1H445579-1D	NADIS-6879-1D, Display circuit PC board ass'y <GR, GT>	
23	838930088	3TTB+8B(UN), Self tapping screw	U4	1H445580-1A	NAAF-6880-1A, Power amplifier PC board ass'y <D>
24	28325775A	Knob, volume	1H445580-1B	NAAF-6880-1B, Power amplifier PC board ass'y <P>	
25	28148447	Tray panel, CD	1H445580-1C	NAAF-6880-1C, Power amplifier PC board ass'y <DT>	
26	27150456	Shield plate	1H445580-1D	NAAF-6880-1D, Power amplifier PC board ass'y <GR, GT>	
31	27122738	Rear panel <D>	U5	1H445581-1A	NAETC-6881-1A, Speaker terminal PC board ass'y <D>
32	27122739	Rear panel <P, GR, DT, GT>	1H445581-1B	NAETC-6881-1B, Speaker terminal PC board ass'y <P>	
33	838430068	3TTB+6B(BC), Self tapping screw	1H445581-1C	NAETC-6881-1C, Speaker terminal PC board ass'y <DT>	
41	27212217	Front panel <D, GR, DT, GT>	1H445581-1D	NAETC-6881-1D, Speaker terminal PC board ass'y <GR, GT>	
42	27212218	Front panel <P>	U6	1H445582-1A	NAETC-6882-1A, Digital output PC board ass'y <D>
43	27268027A	Guide, volume	1H445582-1B	NAETC-6882-1B, Digital output PC board ass'y <P>	
46	28198909	Facet	1H445582-1C	NAETC-6882-1C, Digital output PC board ass'y <DT>	
47	28191888	Clear plate	1H445582-1D	NAETC-6882-1D, Digital output PC board ass'y <GR, GT>	
50	880009	Plastic rivet, NRP-345<P, GR, GT>	U7	25136900	NCETC-6900, PC board for holder <P, GR, GT>
52	29362650	Label, Spec. <D>			
	29362700	Label, Spec. <GR>	U8	1H445575-1A	NAAR-6875-1A, CD circuit PC board ass'y <D>
	29362651	Label, Spec. <DT>	1H445575-1B	NAAR-6875-1B, CD circuit PC board ass'y <P>	
	29362699	Label, Spec. <GT>	1H445575-1C	NAAR-6875-1C, CD circuit PC board ass'y <DT>	
	29362652	Label, Spec. <P>	1H445575-1D	NAAR-6875-1D, CD circuit PC board ass'y <GR, GT>	
53	29362572A	Label, Warning <D>	U9	1H445583-1A	NAETC-6883-1A, Connector PC board ass'y <D>
	29362571	Label, Warning <P, GR, GT, DT>	1H445583-1B	NAETC-6883-1B, Connector PC board ass'y <P>	
54	29360687	Label <GR, GT, P>	1H445583-1C	NAETC-6883-1C, Connector PC board ass'y <DT>	
55	29362285	Label	1H445583-1D	NAETC-6883-1D, Connector PC board ass'y <GR, GT>	
F901	252157	⚠ 1.25A-UL/T-237, Fuse <D, DT>	U10	240134	TFCE1U114A, Tuner unit <D>
	252083	⚠ 0.4A-SE-EAW, Fuse <P, GR, GT>	240135	TFCE1E512A, Tuner unit <GR, GT, P DT>	
P302	2009990500	NSAS-10P0654, Socket			
P303	20022391210	NSAS-12P0723, Socket			
P351	2047161012	NCFC7-161012, Flexible flat cable			
P352	2042161022	NCFC2-161022, Flexible flat cable			
P701	2047360612	NCFC7-360612, Flexible flat cable			
P778	2047151012	NCFC7-151012F, flexible flat cable			
P901	253294HDK	⚠ AS-UC-2#18, Power supply cord <D, DT>			
	253287HIT	⚠ AS-CCEE, Power supply cord <GR>			
	253237HIT	⚠ AS-CEE, Power supply cord <P, GT>			
Q557, Q558	2203384 or 2203383	* 2SC3851-Y or * 2SC3851-O, Transistor			
Q559, Q560	2203394 or 2203393	* 2SA1488-Y or * 2SA1488-O, Transistor			
Q557A	27160468	Heat sink			
Q557B	801433	3SMS8W.SW+14B(BC), Special screw			
T901	2301452	⚠ NPT-1391D, Power transformer <D, DT>			
	2301454	⚠ NPT-1391G, Power transformer <GR, GT>			
	2301453	⚠ NPT-1391P, Power transformer <P>			
Z1	24800018A	NCD-170S, CD mechanism			
Z2	24840133	Boss, PCB			
Z3	24840135	Boss, PCB3			
Z5	838120080	2TTB+8P, Self tapping screw			
Z6	838426088	2.6TTB+8B(BC), Self tapping screw			

NOTE : THE COMPONENTS IDENTIFIED BY THE MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

<D> : USA & Canadian models only


<DT> : Taiwanese model only

<P> : European model only


<GR> : Chinese model only

<GT> : Asian model only


CAUTION : Replacement of the transistor of mark *, if necessary, must be made from the same beta group (HFE) as the original type.

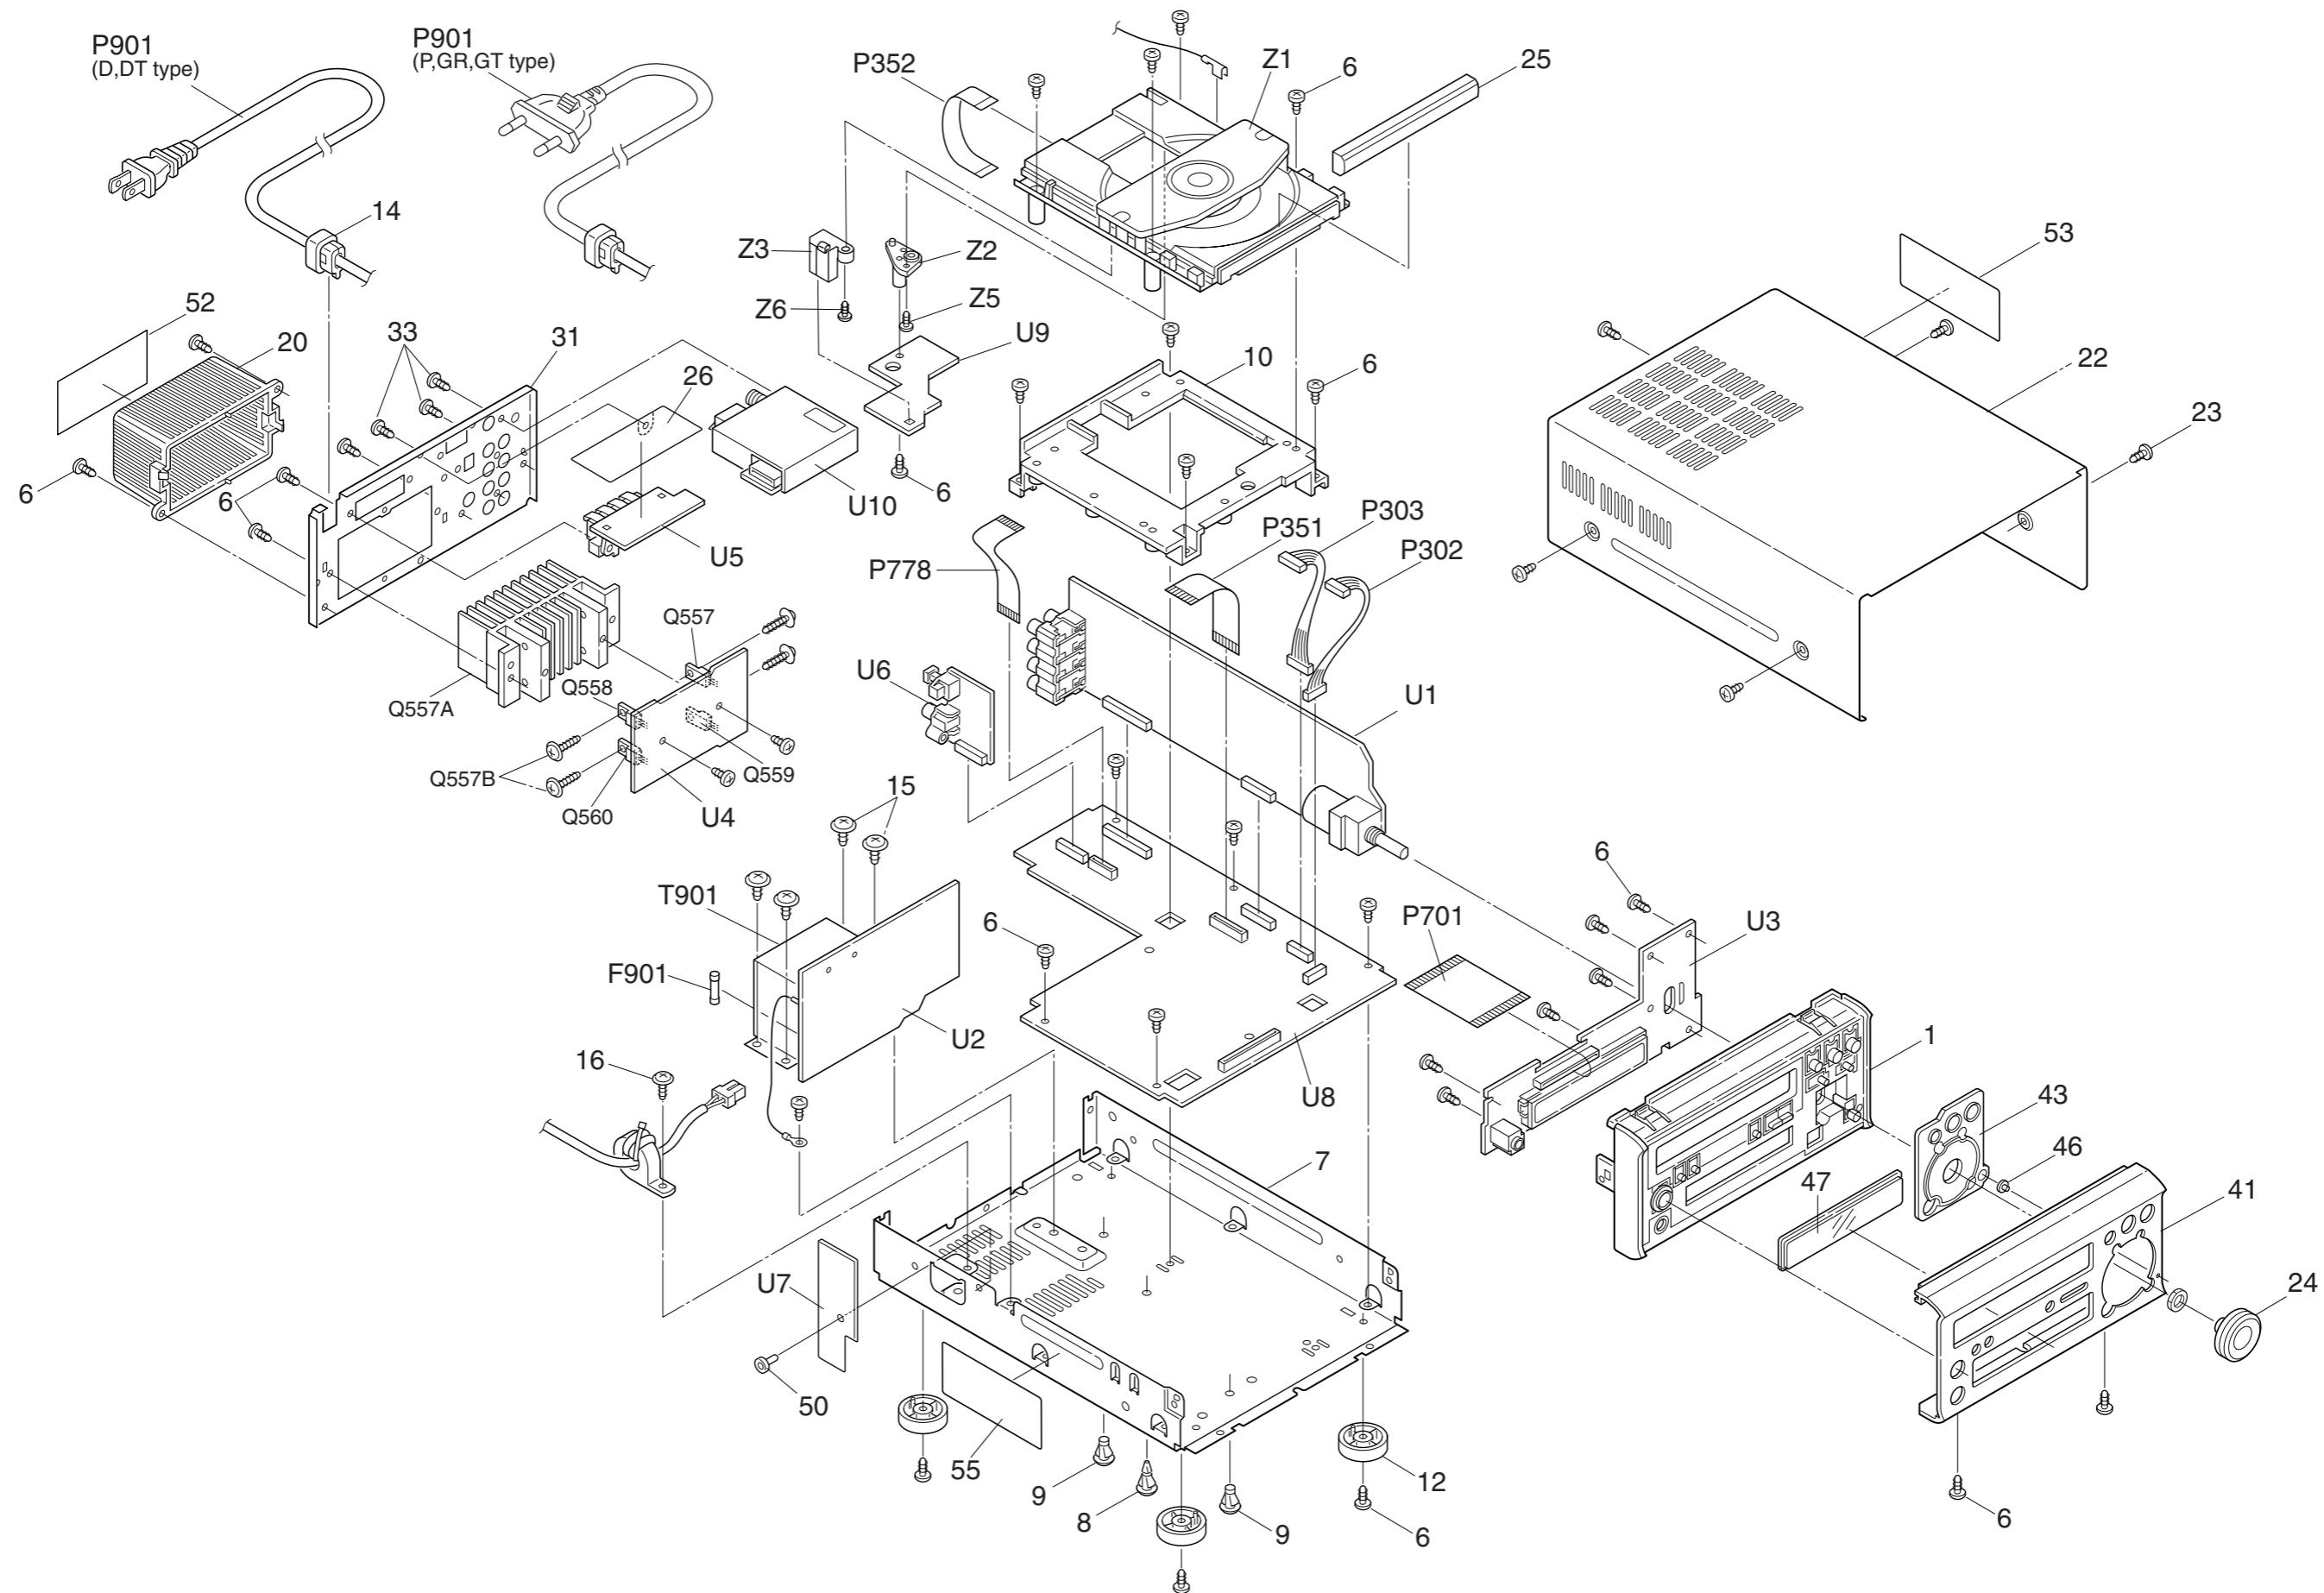CHASSIS EXPLODED VIEW

BLOCK DIAGRAM

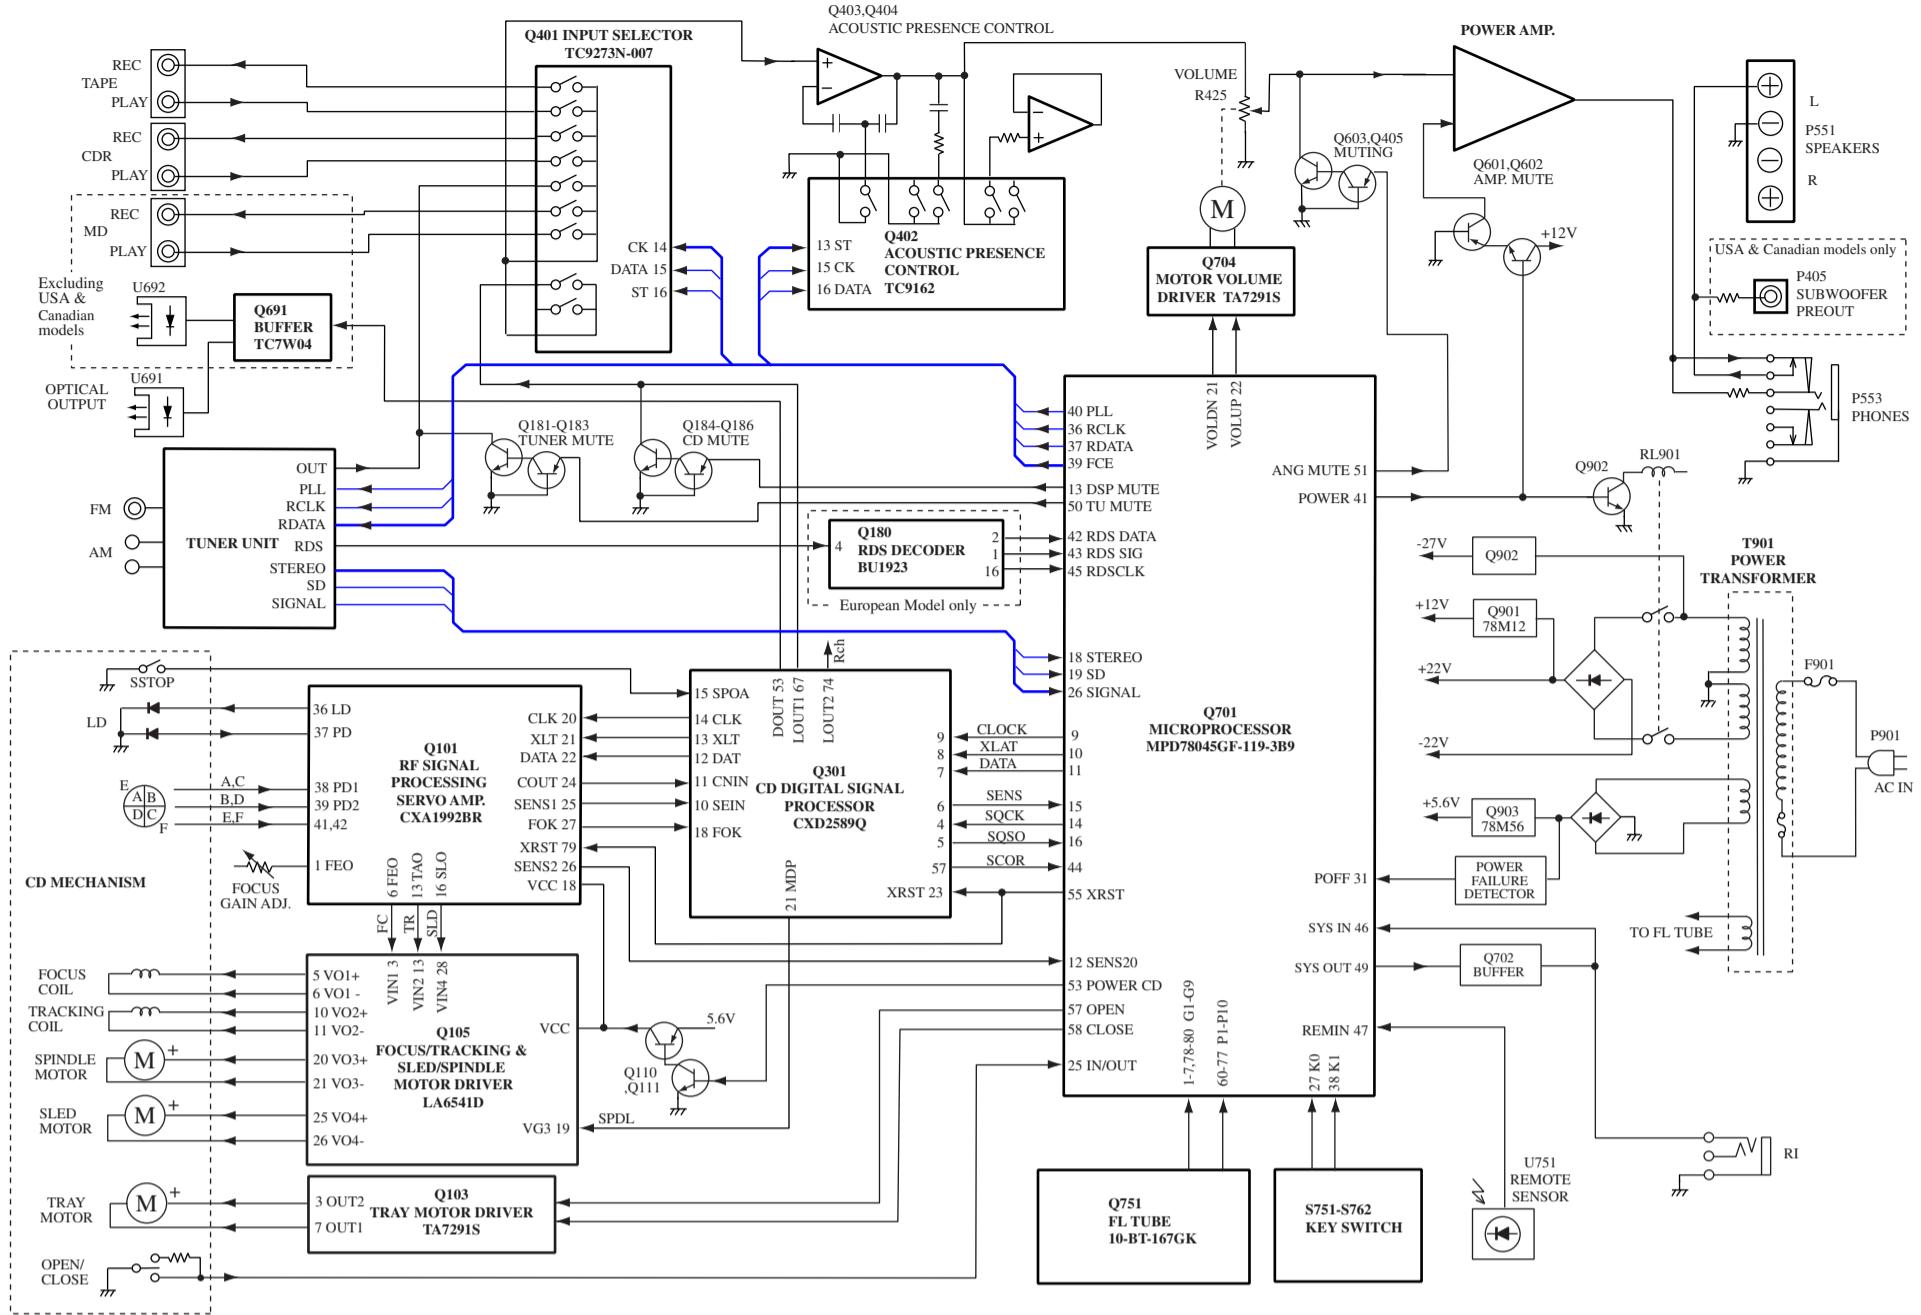

WIRING VIEW

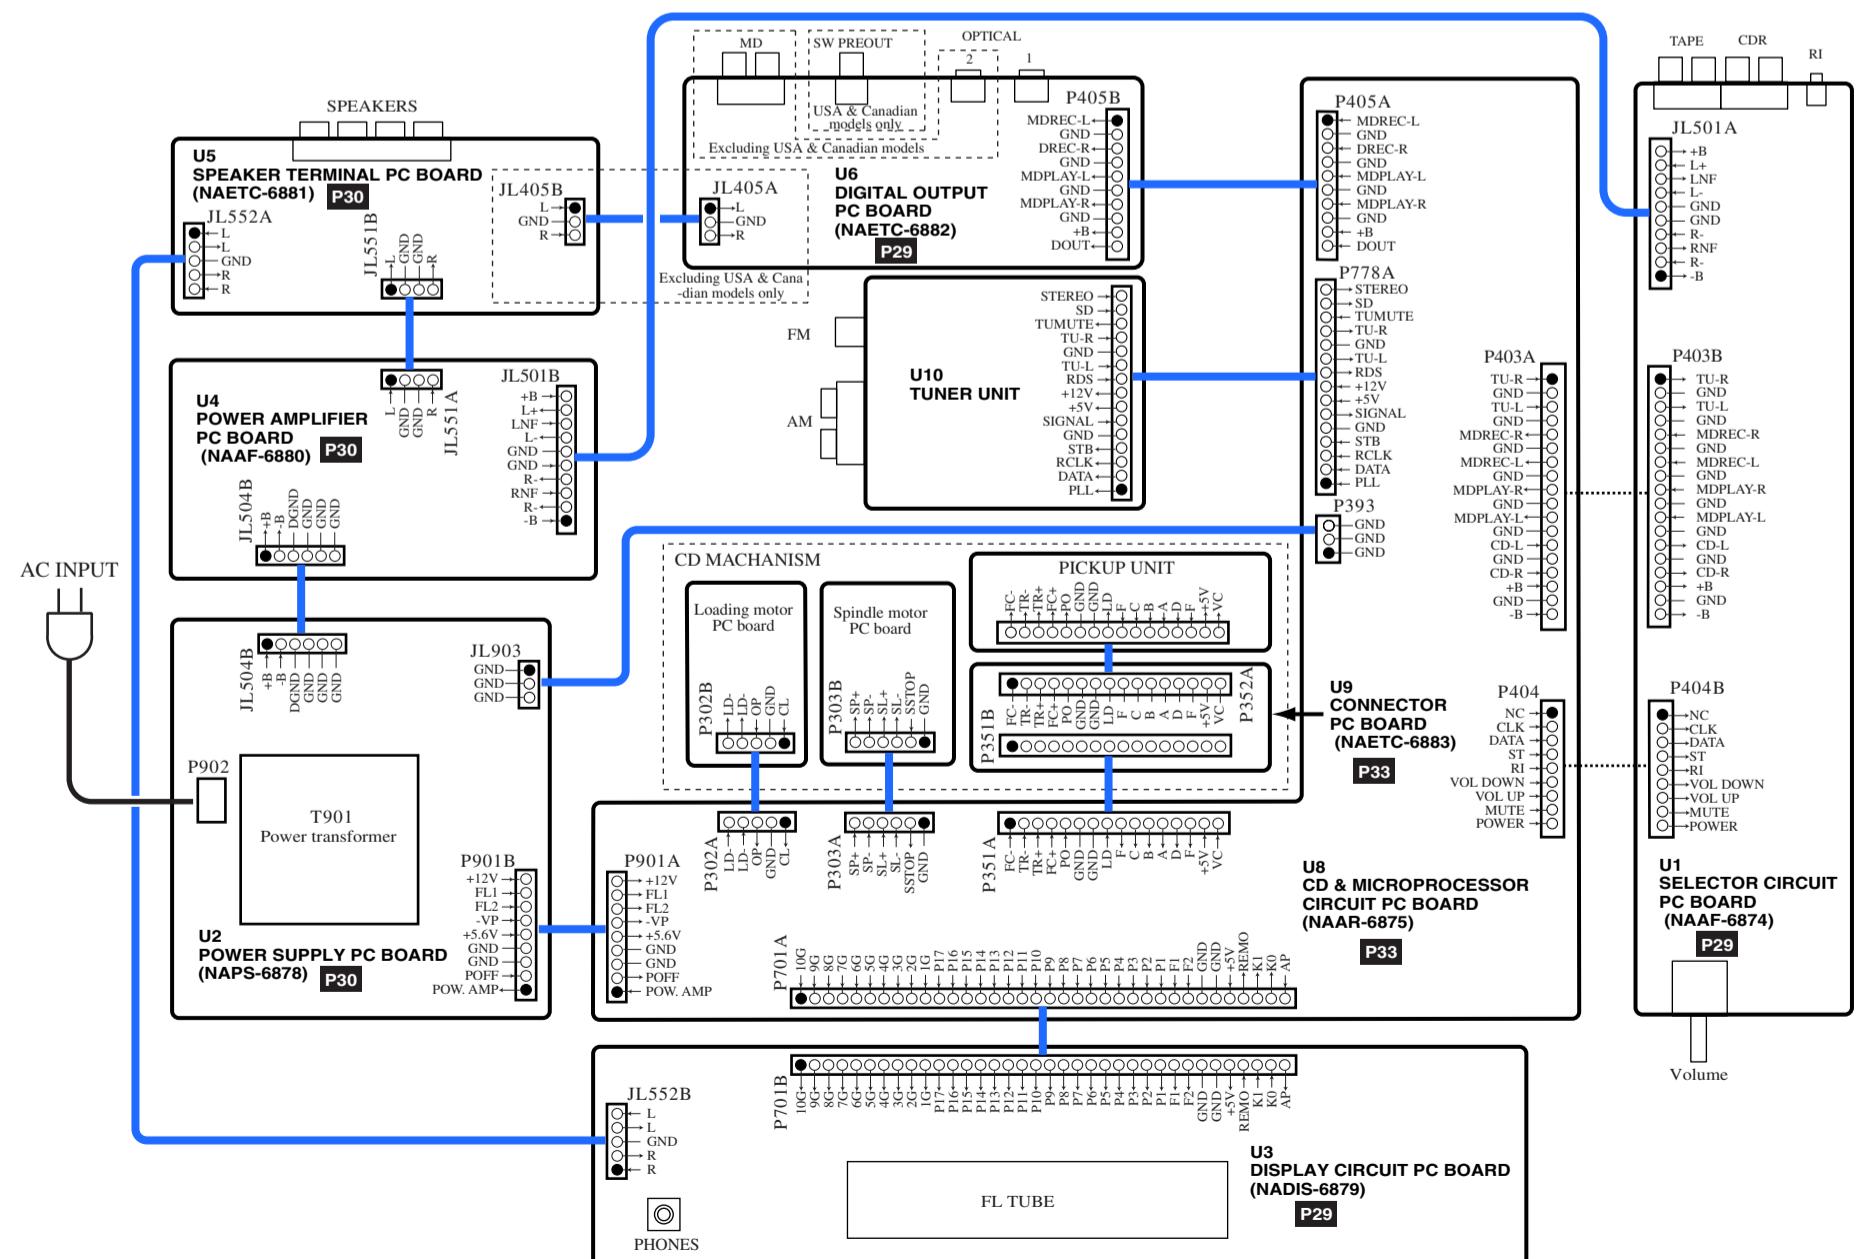


PRINTED CIRCUIT BOARD VIEW PARTS LIST

SELECTOR CIRCUIT PC BOARD (NAAF-6874-1A/-1B/-1C/-1D)

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION									
ICs														
Q401	22241072	TC9273N-007	C904,C905	354763329S	3300 μ F,35 V, Elect.									
Q402	22240981R2	TC9162AF	C907	354741009	10 μ F, 16 V, Elect.									
Q403,Q404	22241383R2	NJM4565M-D	C909	354761019	100 μ F, 35 V, Elect.									
Transistors														
Q405, Q406	2215410R2	RN1441	C913	354764709	47 μ F, 35 V, Elect.									
Q409, Q603	2214470R2	RN1402	C914	3500173S	6800 μ F, 16 V, Elect.									
Q501-Q504	2216156R2	2SC1622A-L	C918	354781019	100 μ F, 50 V, Elect.									
Q505-Q508	2213143R2	2SC2712-O	C920-C924	374722244	0.22 μ F \pm 5 %, 50 V, Plastic									
Resistors														
Q509-Q512	2211455 or 2215975	2SA1015-GR or KTA1266-GR	R901	443622204	22 \pm 5 %, 1 W, Metal oxide									
Q515-Q518	2211455 or 2215975	2SA1015-GR or KTA1266-GR	R903,R913	453530224	2.2 \pm 5 %, 1/2 W, Metal oxide									
Q601	2213143R2	2SC2712-O	R907	453534794	0.47 \pm 5 %, 1/2 W, Metal oxide									
Q602	2214375R2	2SA1162-GR	R908	443521024	1 k \pm 5 %, 1/2 W, Metal oxide									
Diodes														
D491,D492	224491300R2	UDZ13B	R911	443522704	27 \pm 5 %, 1/2 W, Metal oxide									
D501-D504	223234R2	ISS352	R912	431533355	3.3 M \pm 20 %, 1/2 W, Solid <D,DT>									
Capacitors														
C409,C410	354742209	22 μ F, 16 V, Elect.	JL903B	25055624	NPLG-3P586									
C415-C418	371126834	0.068 μ F, \pm 5 %, 50 V, Plastic	P901B	25055153	NPLG-9P137									
C421,C422	371121534	0.015 μ F, \pm 5 %, 50 V, Plastic	P902	25055676	NPLG-2P632									
C423,C424,C603	354780109	1 μ F, 50 V, Elect.	JL504B	25050270	NSCT-6P98									
C425,C426	371121544	0.15 μ F, \pm 5 %, 50 V, Plastic	Fuse holder											
C429,C430	354742209	22 μ F, 16 V, Elect.	F901A,F901B	25050065	YSH403T									
C491,C492	354742219	220 μ F, 16 V, Elect.	F901A	29361919	T400MAL250V, Fuse label <P,GR,GT,PT>									
C493,C494	354741019	100 μ F, 16 V, Elect.	P901C	27190608-1	UA-0 V0									
C495,C496	354761019	100 μ F, 35 V, Elect.	Socket											
C501,C502	354741009	10 μ F, 16 V, Elect.	Q903A	27160250	RAD-81									
C505,C506,C601	354744709	47 μ F, 16 V, Elect.	Q903B	82143010	3P+10FN(BC)									
C509-C510	354722219	220 μ F, 6.3 V, Elect.	Resistors											
C515,C516	354741009	10 μ F, 16 V, Elect.	DISPLAY CIRCUIT PC BOARD (NADIS-6879-1A/-1B/-1C/-1D)											
R427	5104333	N16RG100KBT25F, Volume	CIRCUIT NO. PART NO. DESCRIPTION											
R491,R492	443625614	560 \pm 5 %, 1 W, Metal oxide	FL Tube											
R493,R494	443522204	22 \pm 5 %, 1/2 W, Metal oxide	Q751	212141	10BT-167GK									
R495	443521024	1k \pm 5 %, 1/2 W, Metal oxide	Remote sensor											
R496	443528214	820 \pm 5 %, 1/2 W, Metal oxide	P751	241330	PIC-26043TE2									
R519-R522	443523904	39 \pm 5 %, 1/2 W, Metal oxide	Transistor											
R533,R534	443523304	33 \pm 5 %, 1/2 W, Metal oxide	Q782	2214490R2	RN1404									
R535,R536	443523904	39 \pm 5 %, 1/2 W, Metal oxide	Jacks											
P400, P401	25045575	NPJ-4PDRW389	LED											
P402	25045581R0	HSJ1501-010010, RI Jack	D782	225381	SEL2210R-TP1									
Sockets						Capacitor								
P403B	25051529	NSCT-18P1316	C752	353721019	100 μ F, 6.3 V, Elect.									
P404B	25051234	NSCT-9P1024	R567,R568	443523314	330 \pm 5 %, 1/2 W, Metal oxide									
JL501A	25055631	NPLG-10P593	P553	25045396	LGT1516-0101, Head phone jack									
POWER SUPPLY PC BOARD (NAPS-6878-1A/-1B/-1C/-1D)						CD CIRCUIT PC BOARD (NAAR-6875-1A/-1B/-1C/-1D)								
CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO. PART NO. DESCRIPTION						CIRCUIT NO. PART NO. DESCRIPTION					
ICs						ICs						P104	25055045	NPLG-4P33
Q901	222780125	78M12HF	JL552B	25051089	NSCT-5P876	Q101	22241499R3	CXA1992BR						
Q903	222780565	78M56	P701B	25052232	NSCT-36P2129	Q102	22241247	LA6541D						
Transistors						Q103	22240239	TA7291S						
Q902	2211503 or 2211504	2SA950-O or 2SA950-Y	S751- S762	25035699	NPS-111-S662	Q180	22241302	BU1923 <P>						
Q904	2213640	DTC123JS	Q751A	27191111	FL Holder	Q301	22241500R3	CXD2589Q						
Diodes						Q701	22241502R3	MPD78045FGF-119-3B9						
D901	22380022F or 22380271F	RBV402 or D3SBA20	POWER AMPLIFIER PC BOARD (NAAF-6880-1A/-1B/-1C/-1D)						Transistors					
D902-D908	22380260 or 22380035	RL1N4003 or GP104003E	Q551,Q552	2213284 or 2215864	2SC1740S-R or KTC3199-GR	Q110,Q112	2212853	2SB1068-K						
D909	224492700R2	UDZ27B	Q553,Q554	2211653 or 2211654	2SC2235-O or 2SC2235-Y	Q111,Q703	2214490R2	RN1404						
D910	224490510R2	UDZ5.1B	Q555-Q556	2211643 or 2211644	2SA965-O or 2SA965-Y	Q114	2211504	2SA950-Y						
D911	223234R2	ISS352				Q181,Q184	2214550R2	RN2404						

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
Capacitors					
C551,C552	355741009	10 μ F, 16 V, Elect.	D101,D703,D707	223234R2	1SS352
C553,C554	371124734	0.047 μ \pm 5 %, 50 V, Plastic	D701,D702,D704	22380284R2	1SR154-400
Resistors					
R557,R558	443521014	100 \pm 5 %, 1/2 W, Metal oxide	D705	224490560R2	UDZ5.6B, Zener
R559-R562	452732294F	0.22 \pm 5 %, 2 W, Metal oxide	D791	224490510R2	UDZ5.1B, Zener
R563,R564	453530824	8.2 \pm 5 %, 1/2 W, Metal oxide	L101,L351	231237K100R2	NCH-1475
Sockets					
JL501B	25051094	NSCT-10P881	X181	3010321	HC-49/U034.332 MHz <P>
JL504A	25051110	NSCT-6P897	X351	3010308	HC-49/U0316.9344M
JL551A	25051088	NSCT-4P875	X701</		

SCHEMATIC DIAGRAM (AMPLIFIER SECTION)

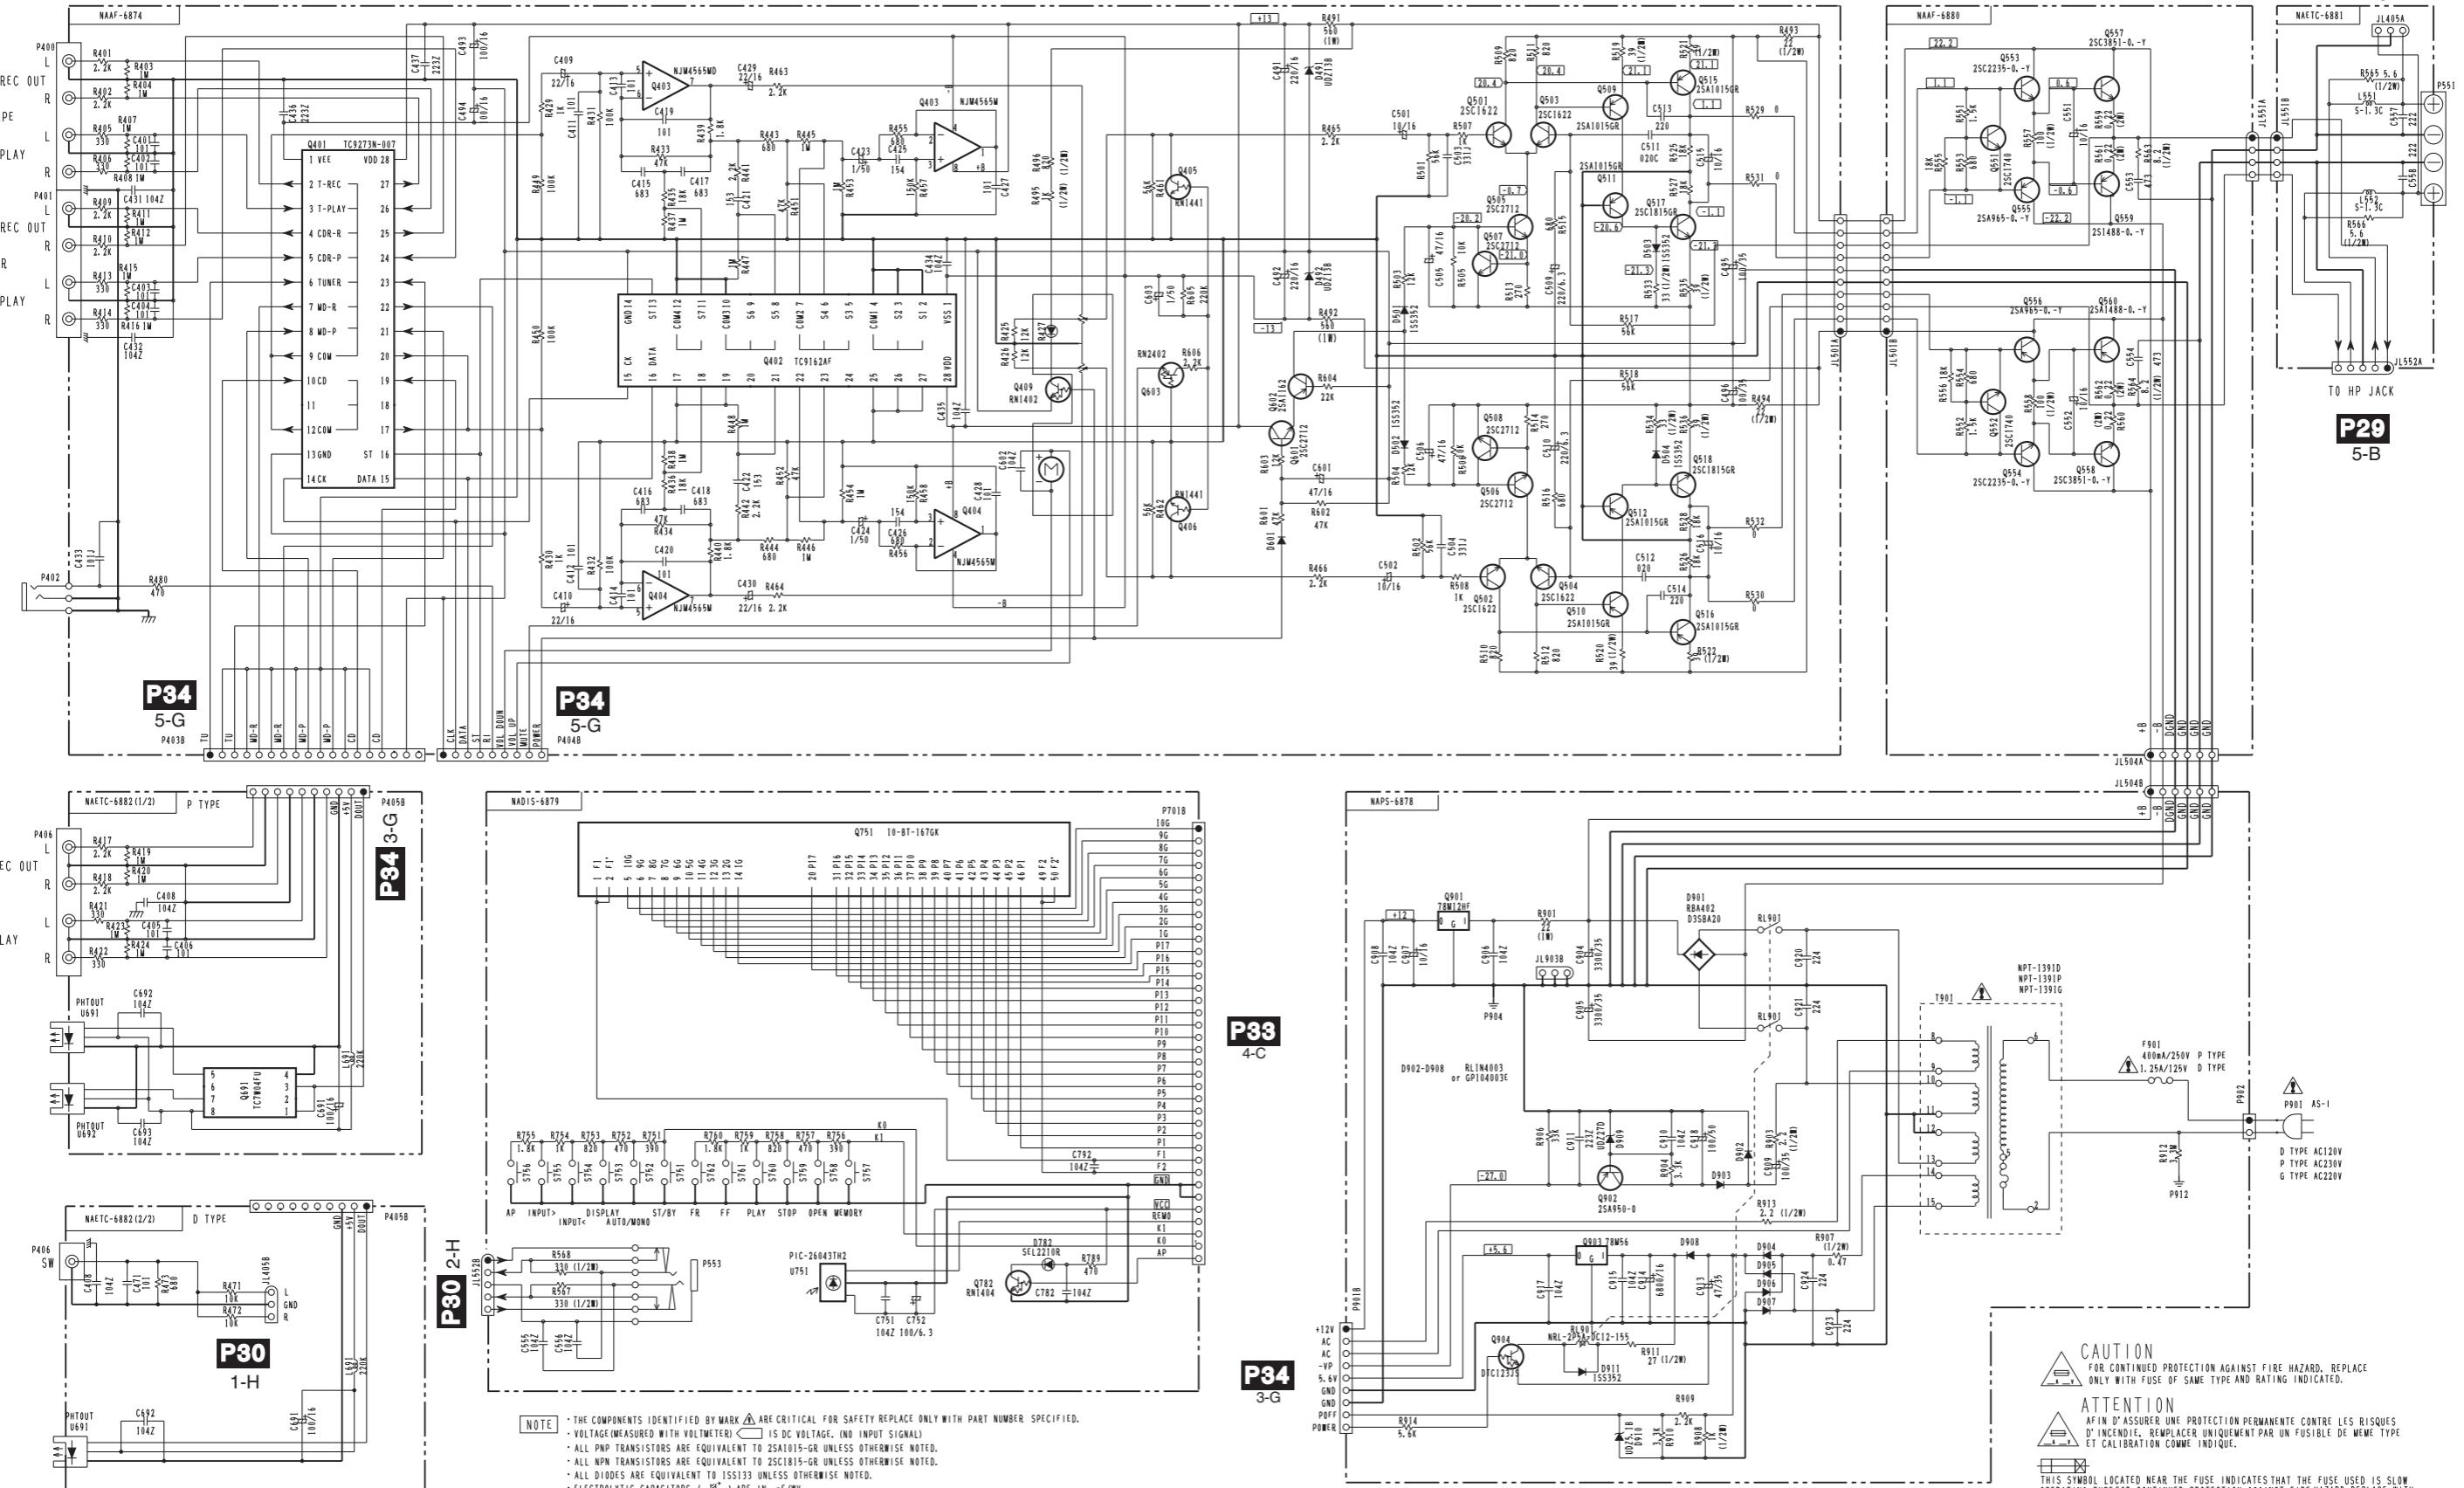

P29

5-A

P29

5-B

ATTENTION

AFIN D'ASSURER UNE PROTECTION PERMANENTE CONTRE LES RISQUES

D'INCENDIE, REMPLACER UNIQUEMENT PAR UN FUSIBLE DE MEME TYPE

ET CALIBRATION COMME INDIQUE.

THIS SYMBOL LOCATED NEAR THE FUSE INDICATES THAT THE FUSE USED IS SLOW

OPERATING TYPE FOR CONTINUED PROTECTION AGAINST FIRE HAZARD. REPLACE WITH

SAME TYPE FUSE, FOR FUSERATING REFER TO THE MARKING ADJACENT TO THE SYMBOL.

CE SYMbole INDIQUE QUE LE FUSIBLE UTILISE EST LENT POUR LA PROTECTION

PERMANENTE, N'UTILISER QUE DES FUSIBLES DE MEME TYPE. CE DERNIER EST

INDIQUE LA QU LE PRESENT SYMBOL EST APPPOSE.

A

B

C

D


E

F


G

PRINTED CIRCUIT BOARD VIEW 1


U2 POWER SUPPLY PC BOARD (NAPS-6878)
Component side

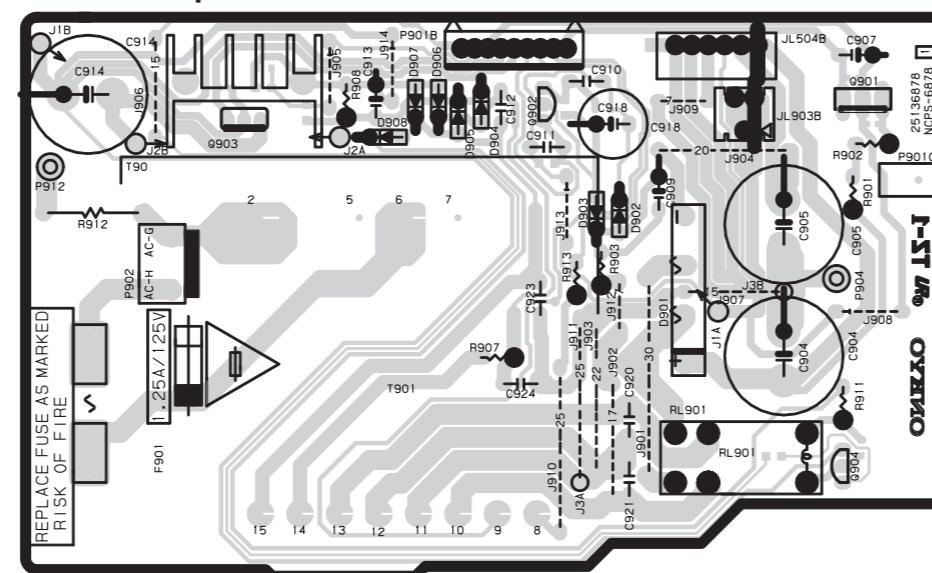


Soldering side

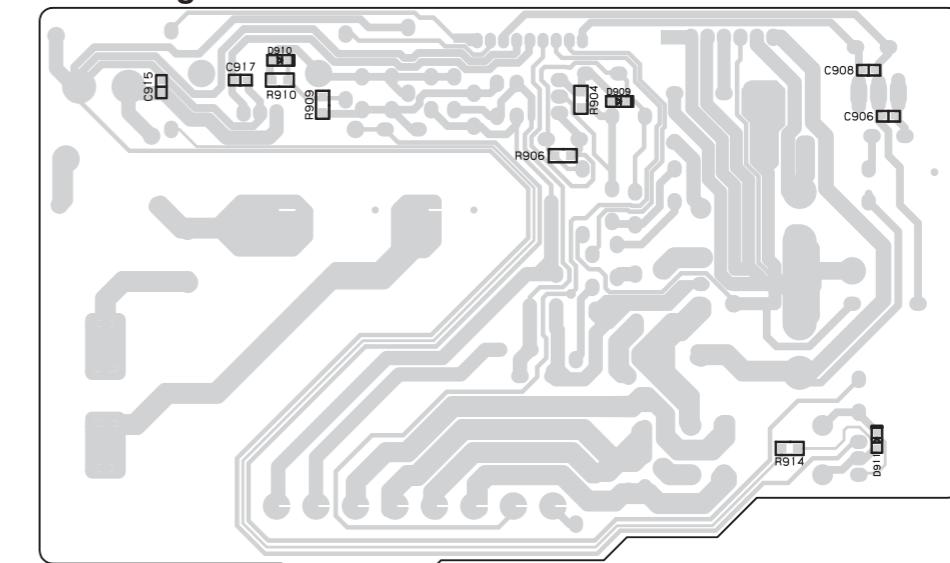


U1 SELECTOR CIRCUIT PC BOARD (NAAF-6874)
Component side

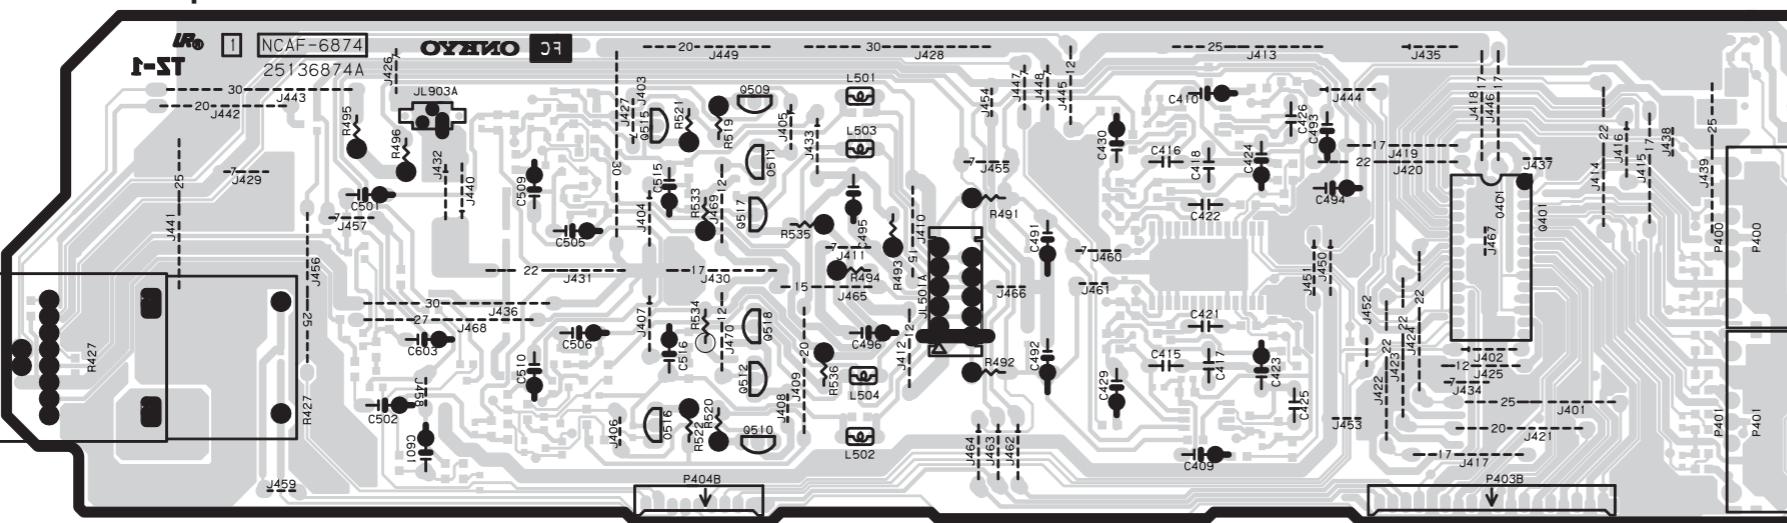


Soldering side

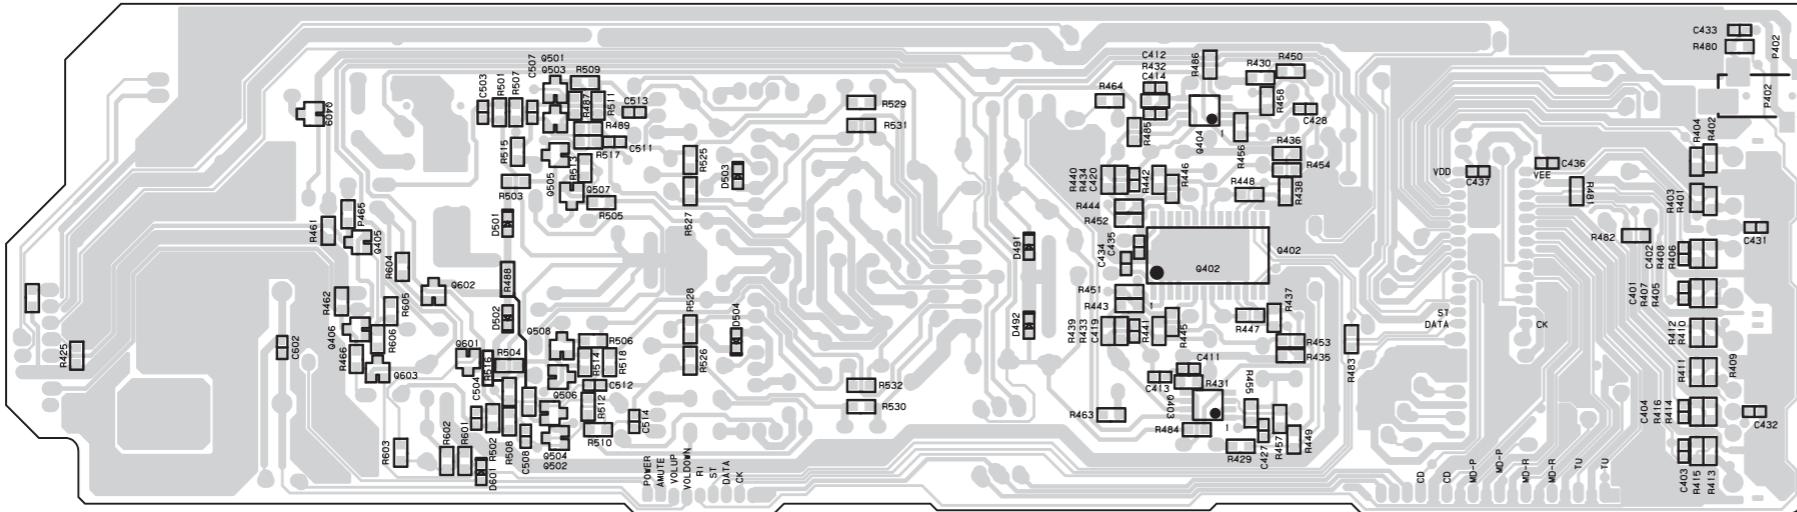


U5 SPEAKER TERMINAL PC BOARD (NAETC-6881)
Component side

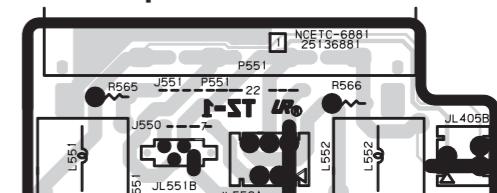


Soldering side

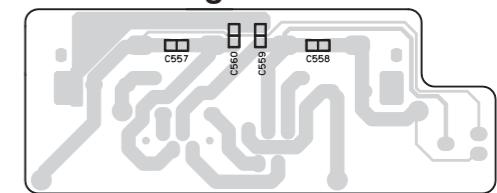


U6 DIGITAL OUTPUT PC BOARD (NAETC6882)
Component side

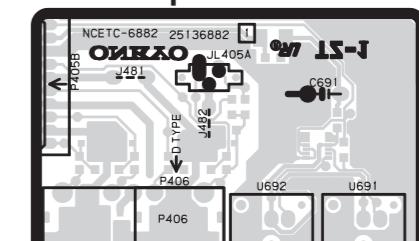

Soldering side

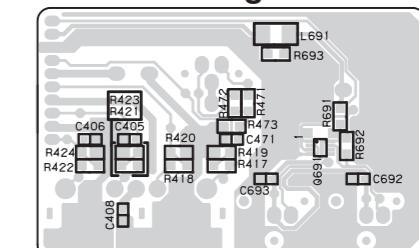


SCHEMATIC DIAGRAM (CD & MICROPROCESSOR SECTION)

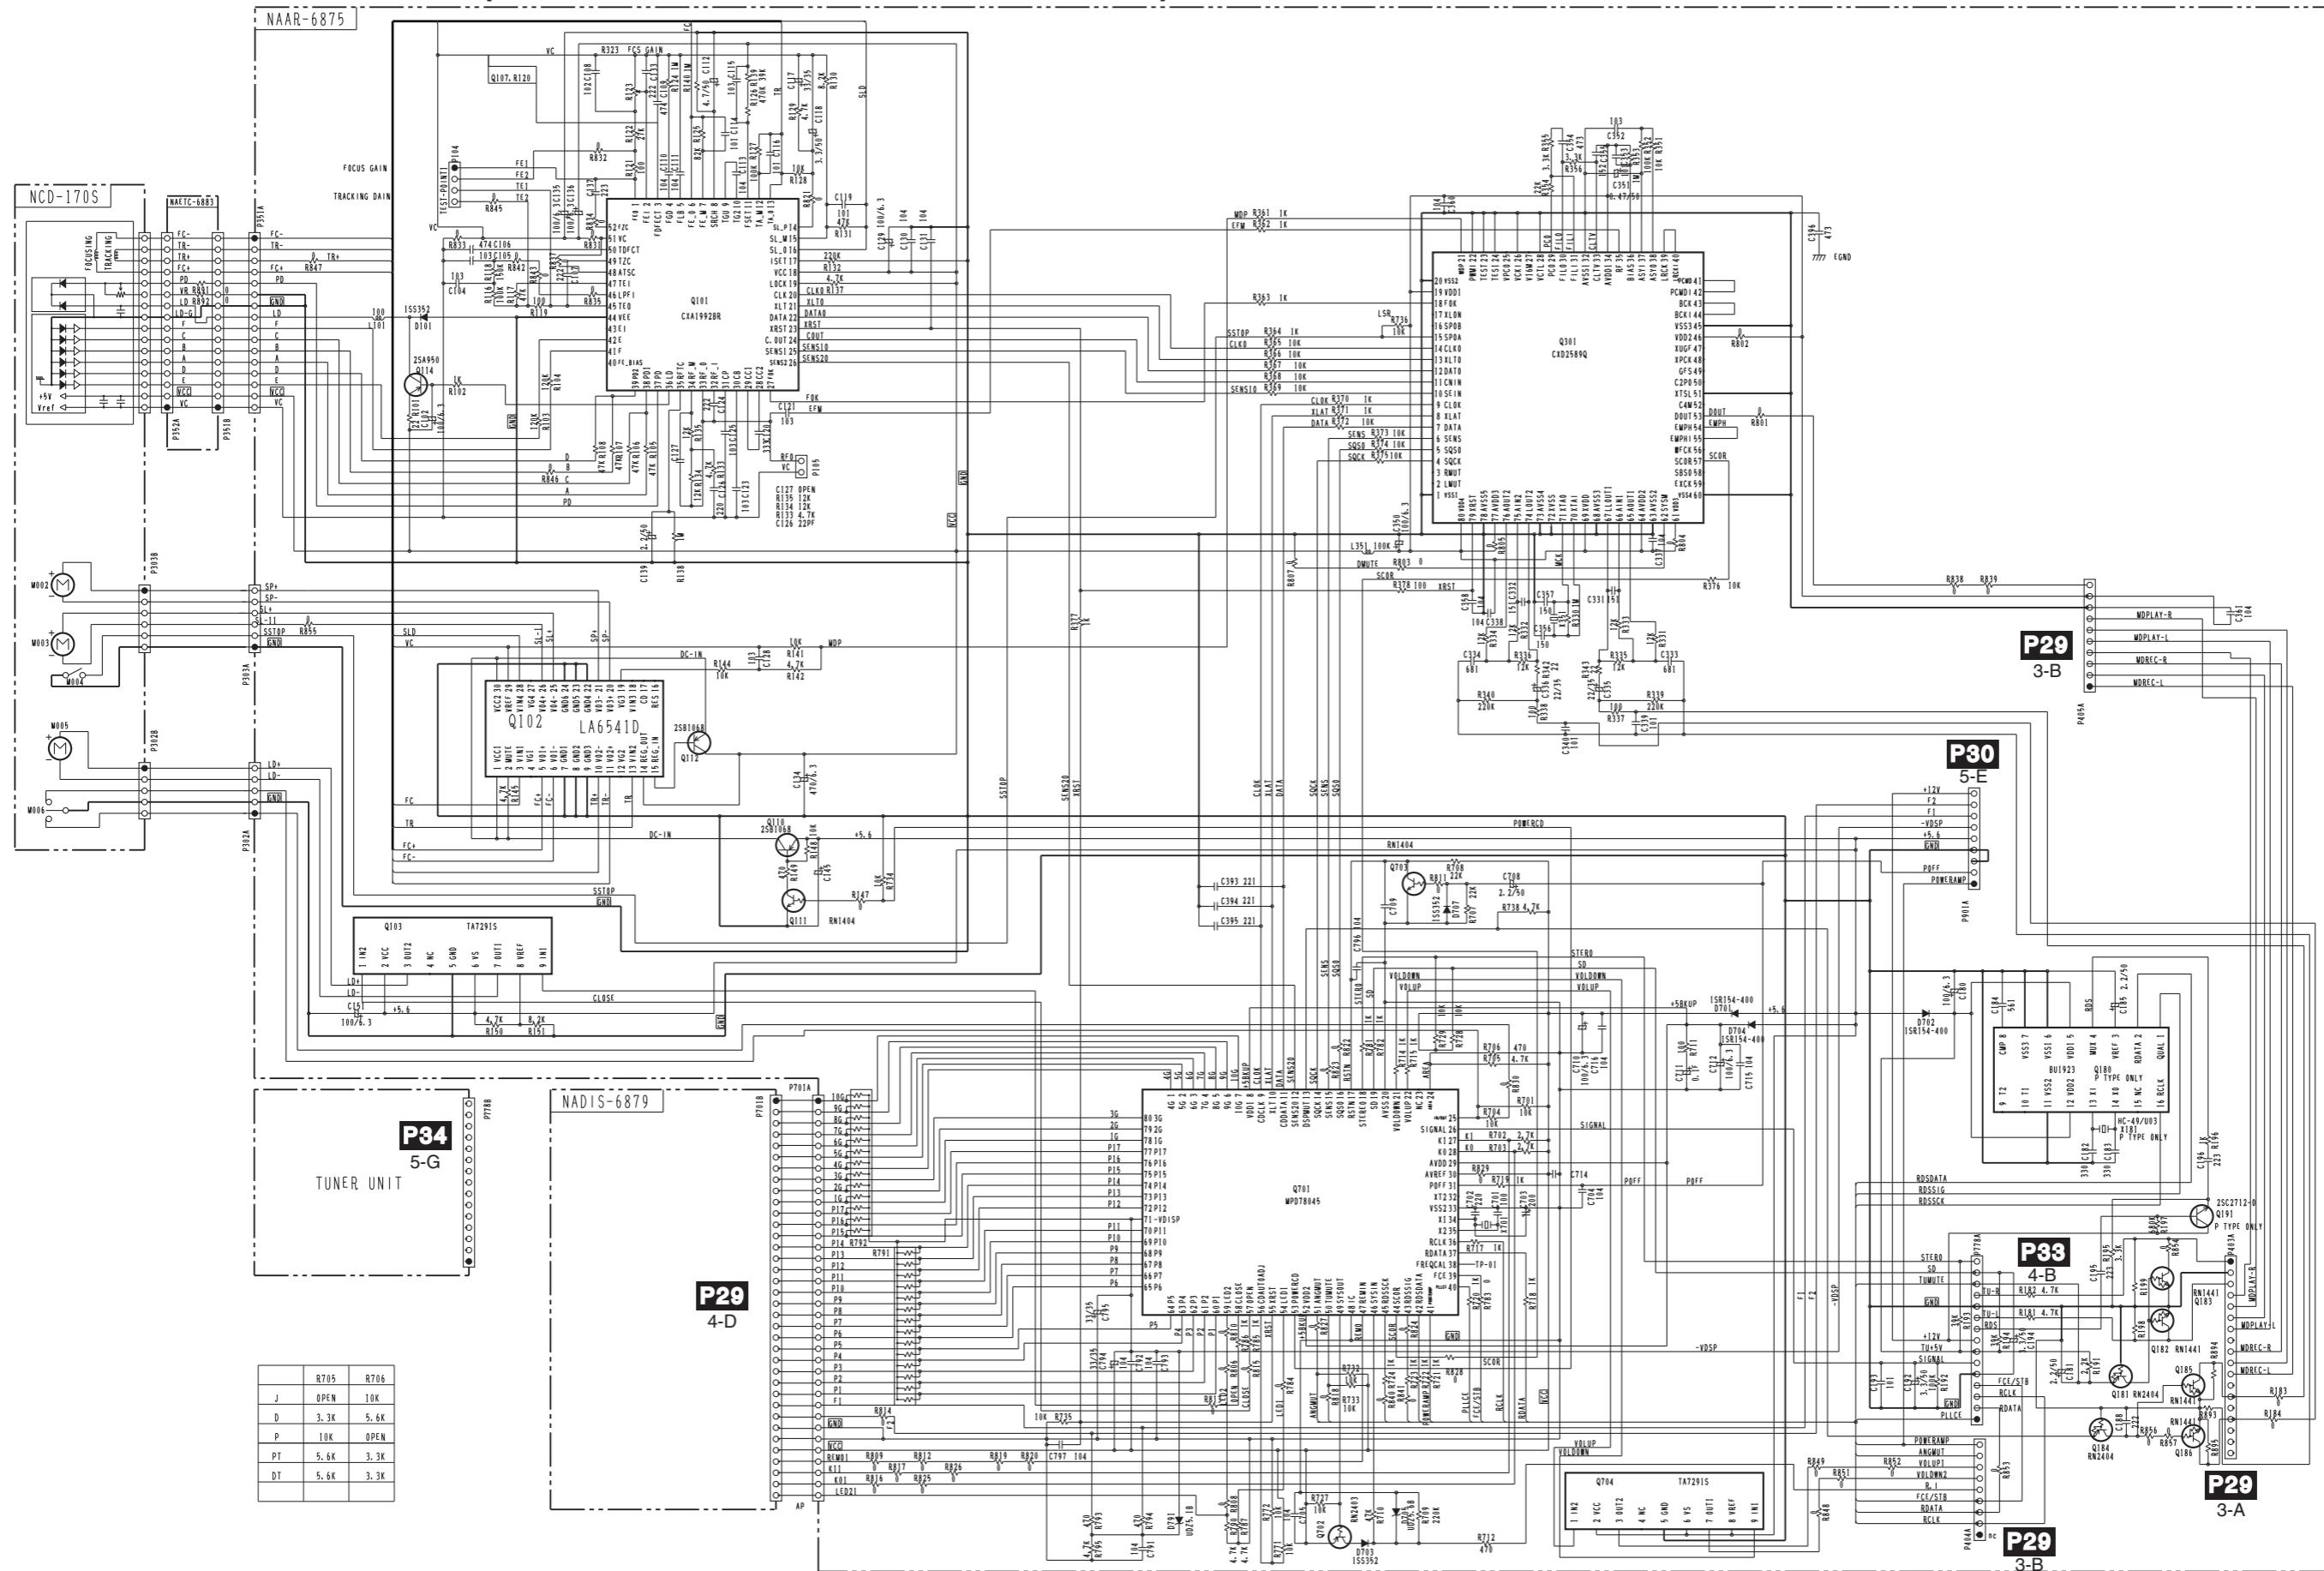



PRINTED CIRCUIT BOARD VIEW 2

U3 DISPLAY CIRCUIT PC BOARD (NADIS-6879)

Component side

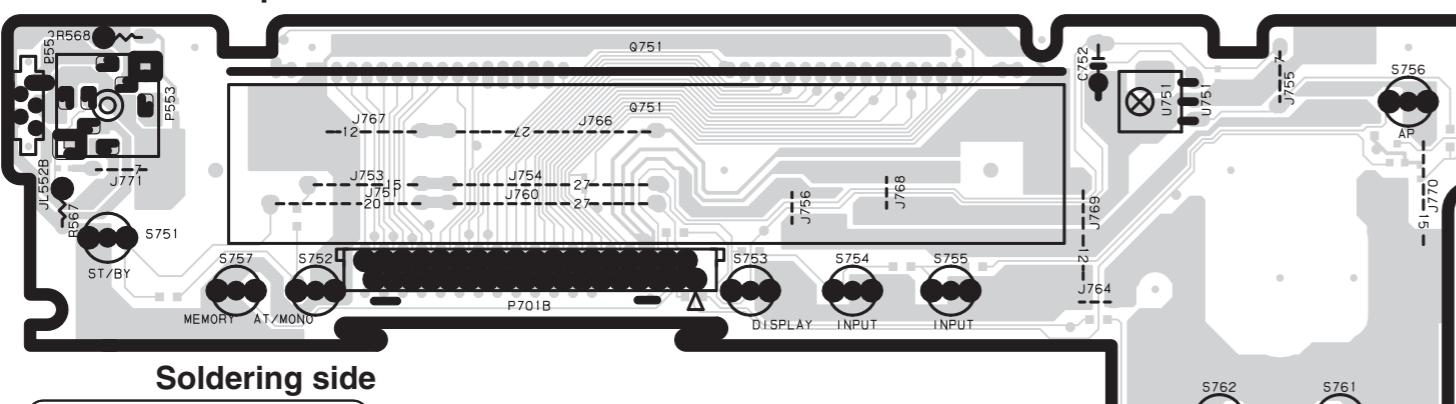


Soldering side

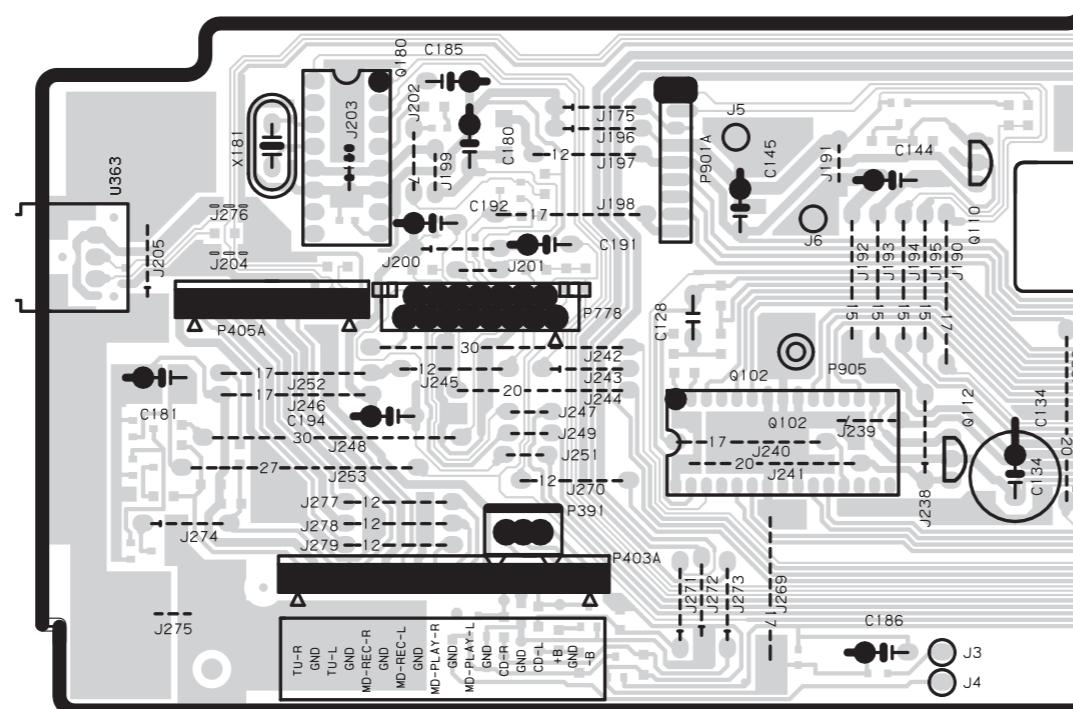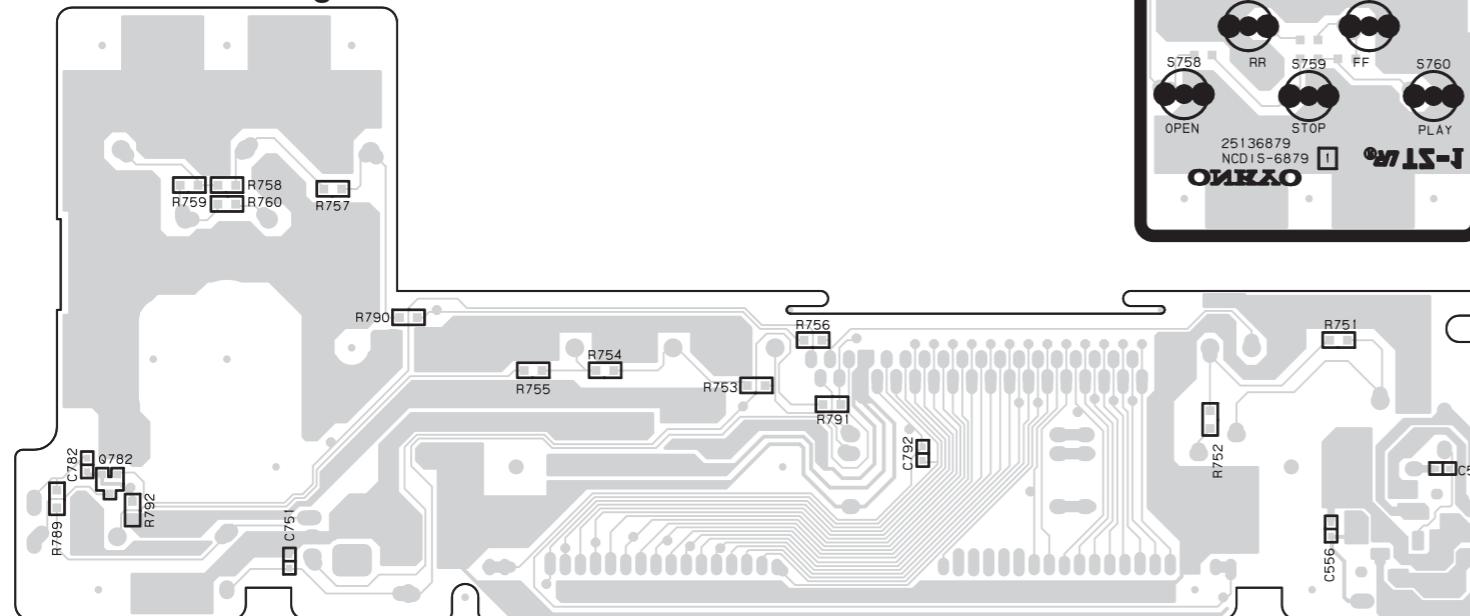

U8 CD CIRCUIT PC BOARD (NAAR-6875)


Component side

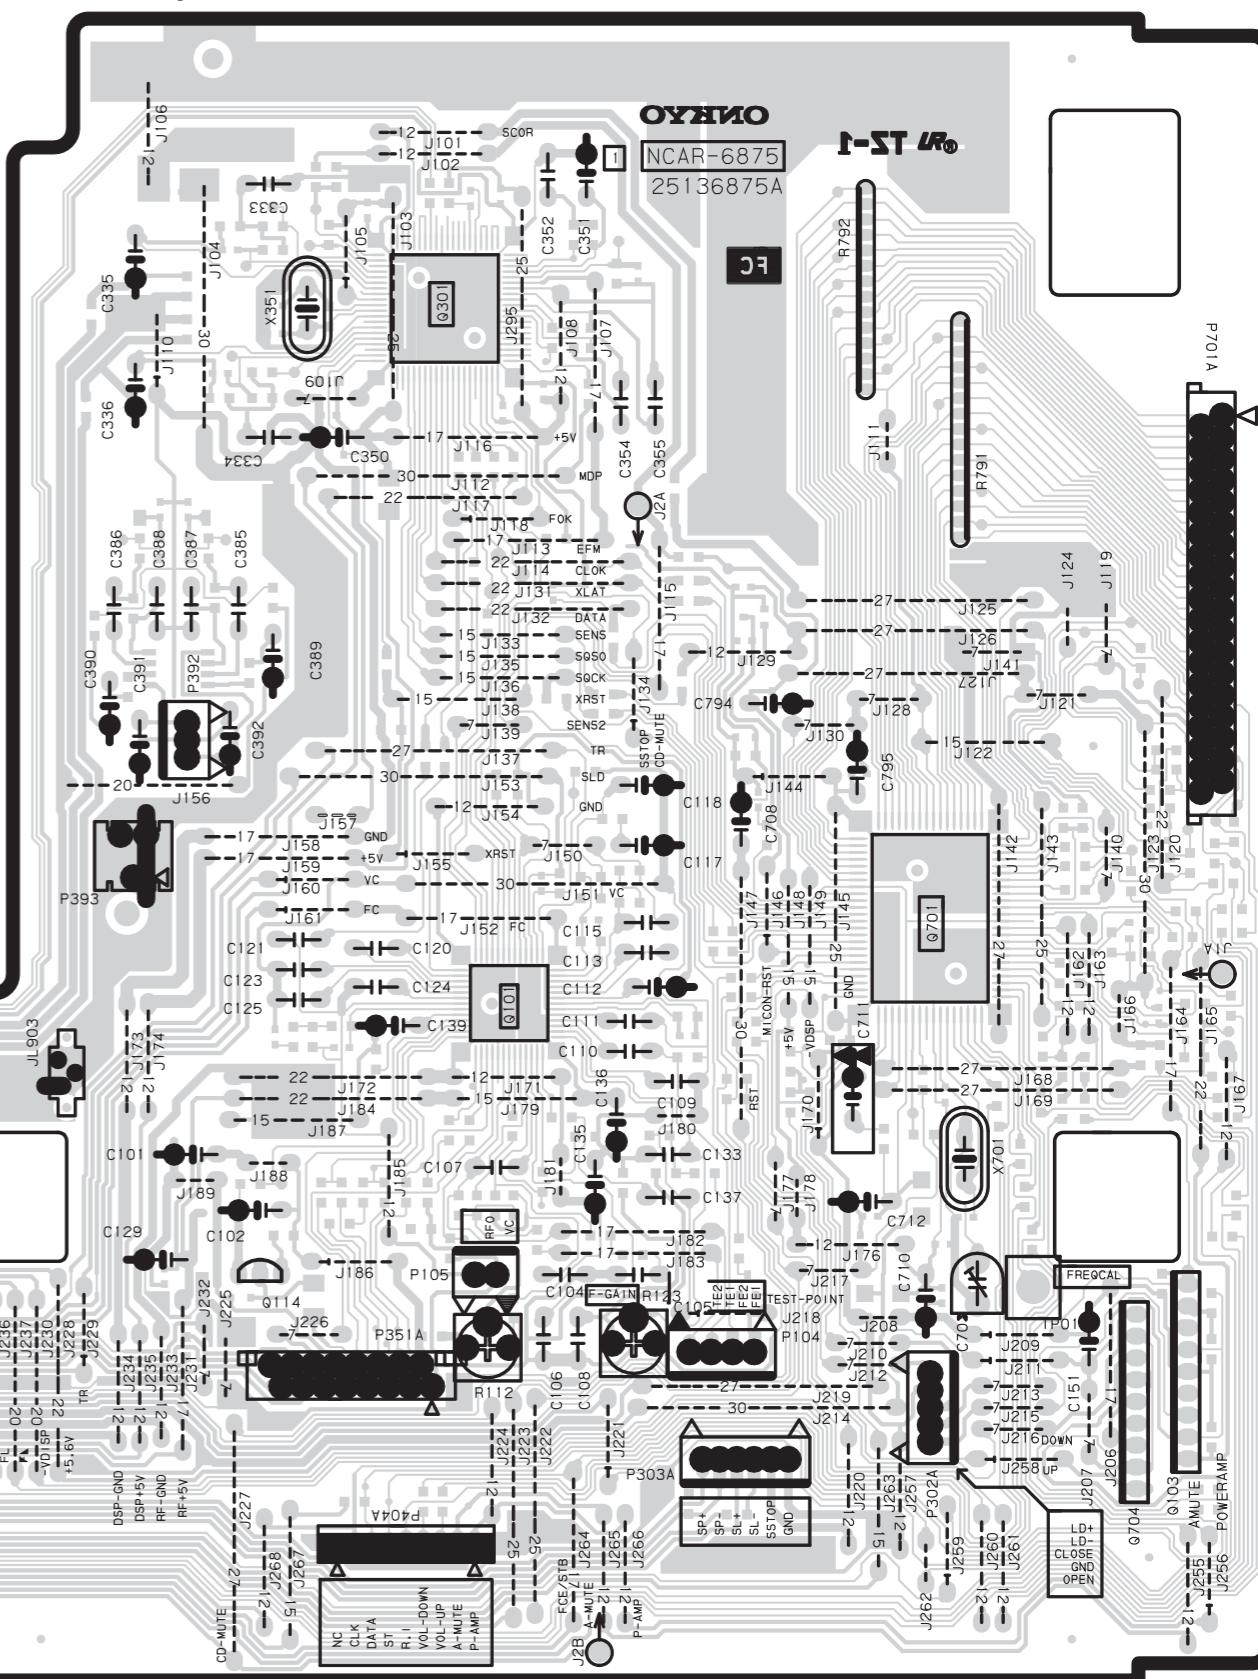



PRINTED CIRCUIT BOARD VIEW 3

U9 CONNECTOR PC BOARD (NAETC-6883)

Component side

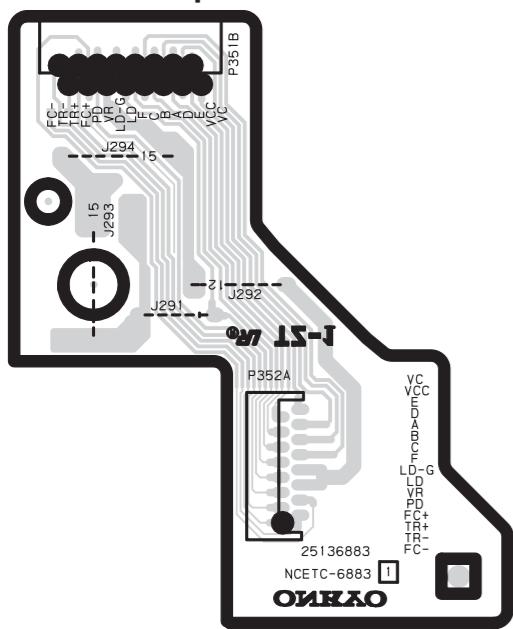


Soldering side

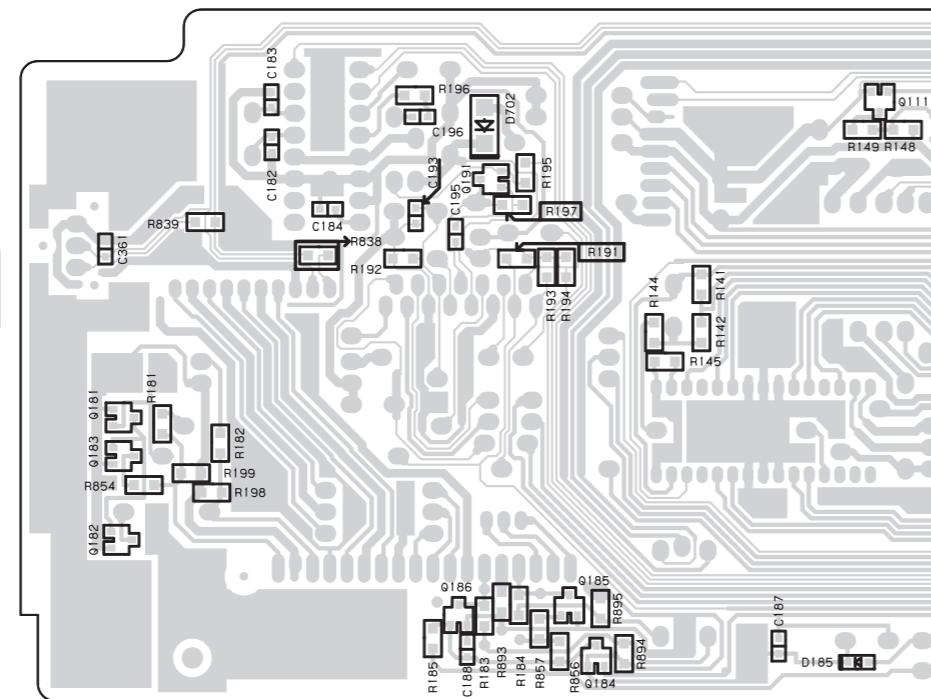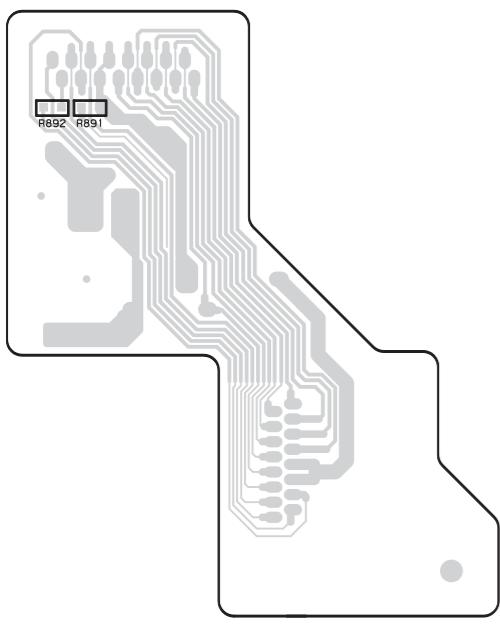


U4 POWER AMPLIFIER PC BOARD (NAAF-6880)

Component side

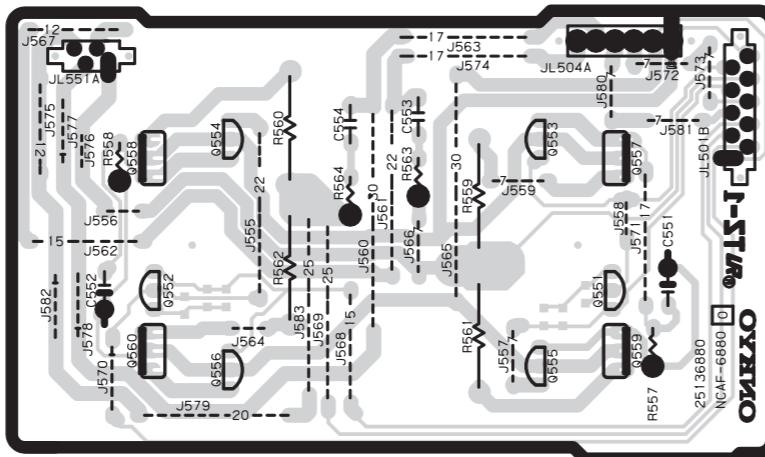


Soldering side

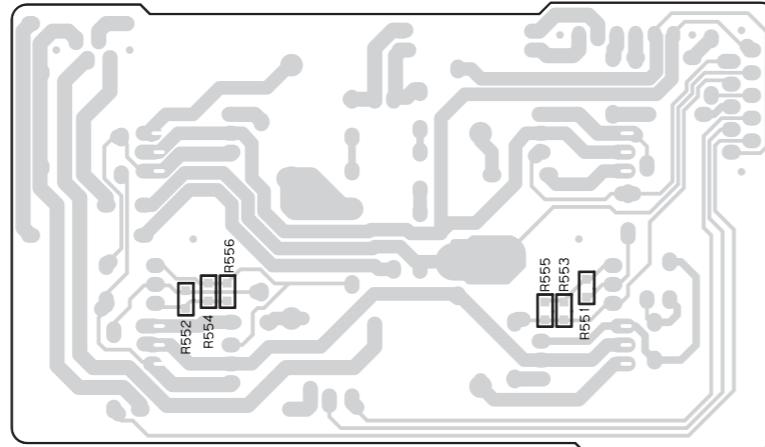

U8 CD CIRCUIT PC BOARD (NAAR-6875)

Soldering side

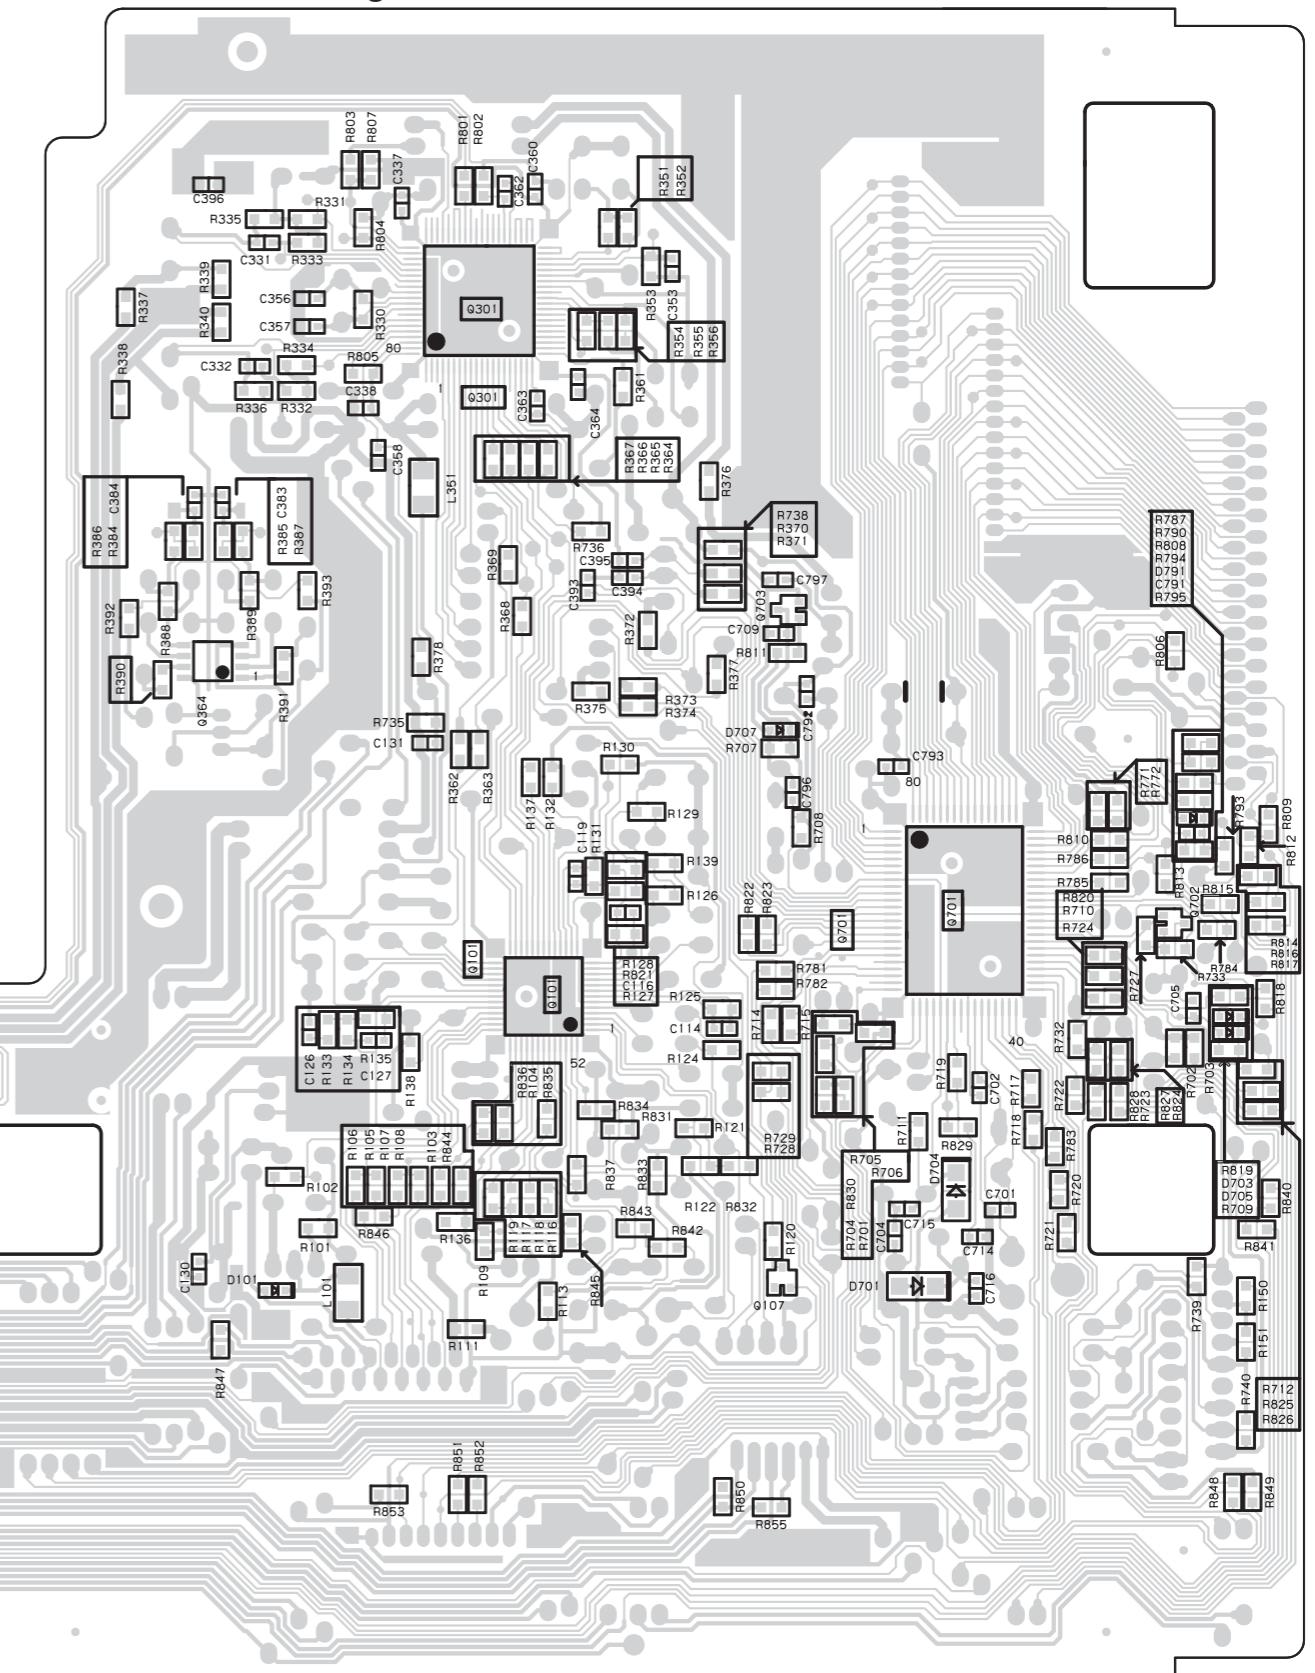

CD ADJUSTMENT PROCEDURES

Preparation

Set the trimming resistors R123 to center.

Focus gain adjustment

1. Set the output of the audio oscillator to 1 kHz and 1 ~ 1.5 VP-P
2. Connect the oscilloscope and audio oscillator as shown below. (Refer to Fig-1)
3. Load the test disc YEDS-18 on the tray and play the track 2.
4. Adjust the trimming resistor R123 so the signal of channel 2 on the oscilloscope becomes 1.25 times of channel 1. (Refer to Fig-2)
5. Remove the oscilloscope and audio oscillator.

* The adjustment of focus offset adjustment is unnecessary.

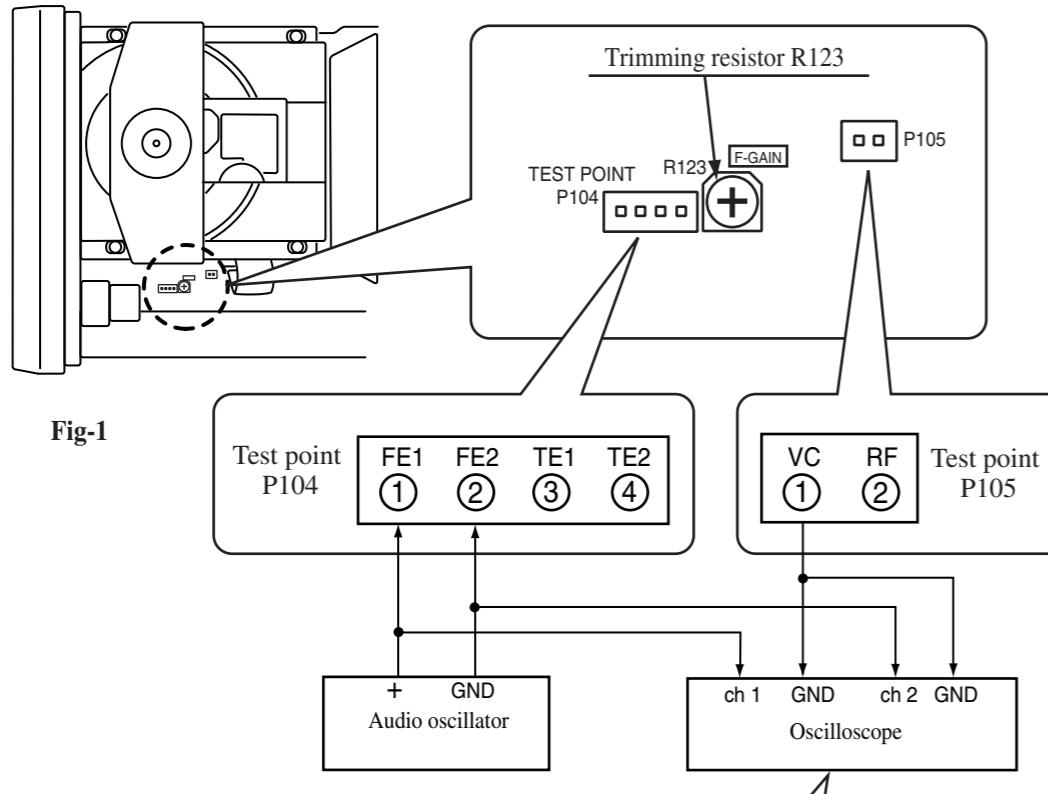


Fig-1

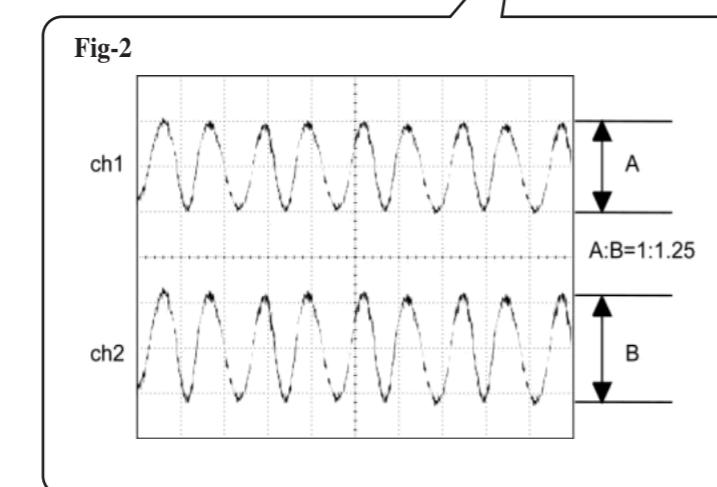


Fig-2


CLOCK ADJUSTMENT PROCEDURES

1. Connect the frequency counter to the terminal TP01 on main PC board (NAAR-6875)




2. Press and hold down the MEMORY button, then press the DISPLAY button.

(All segments on FL tube light on)


3. Adjust the trimmer capacitor C703 so that the reading of frequency counter becomes 524.288 kHz ± 1Hz.

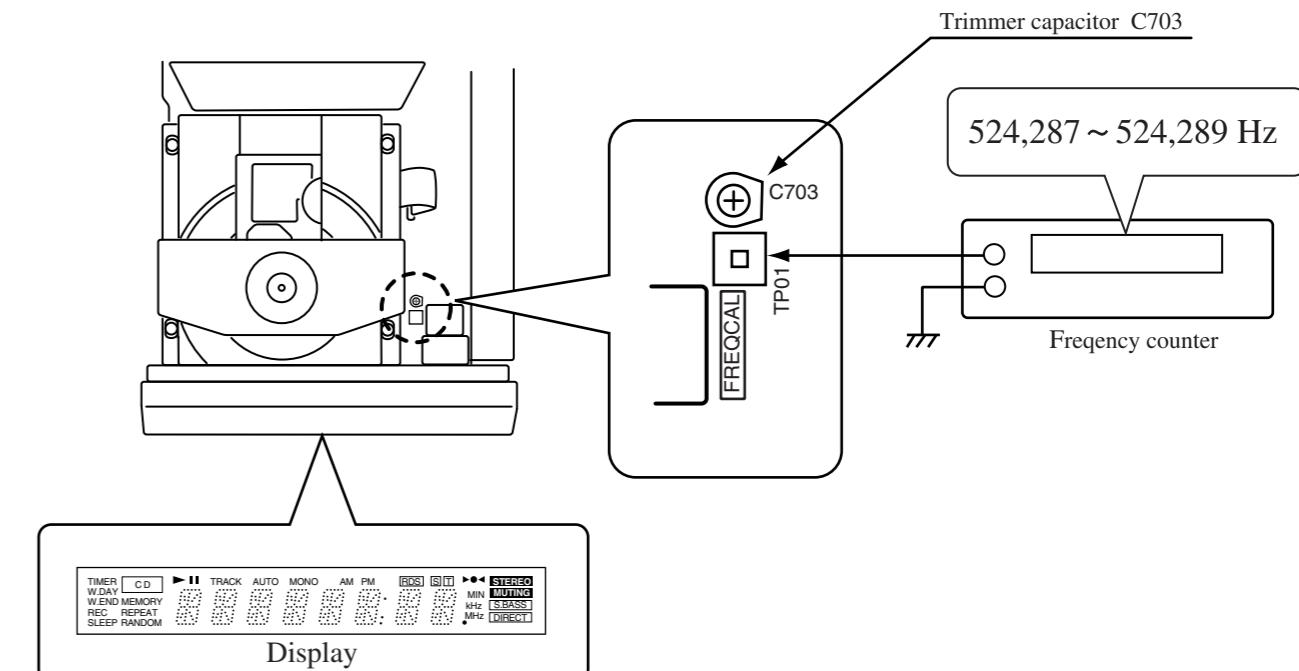

ASSEMBLING OF PAD

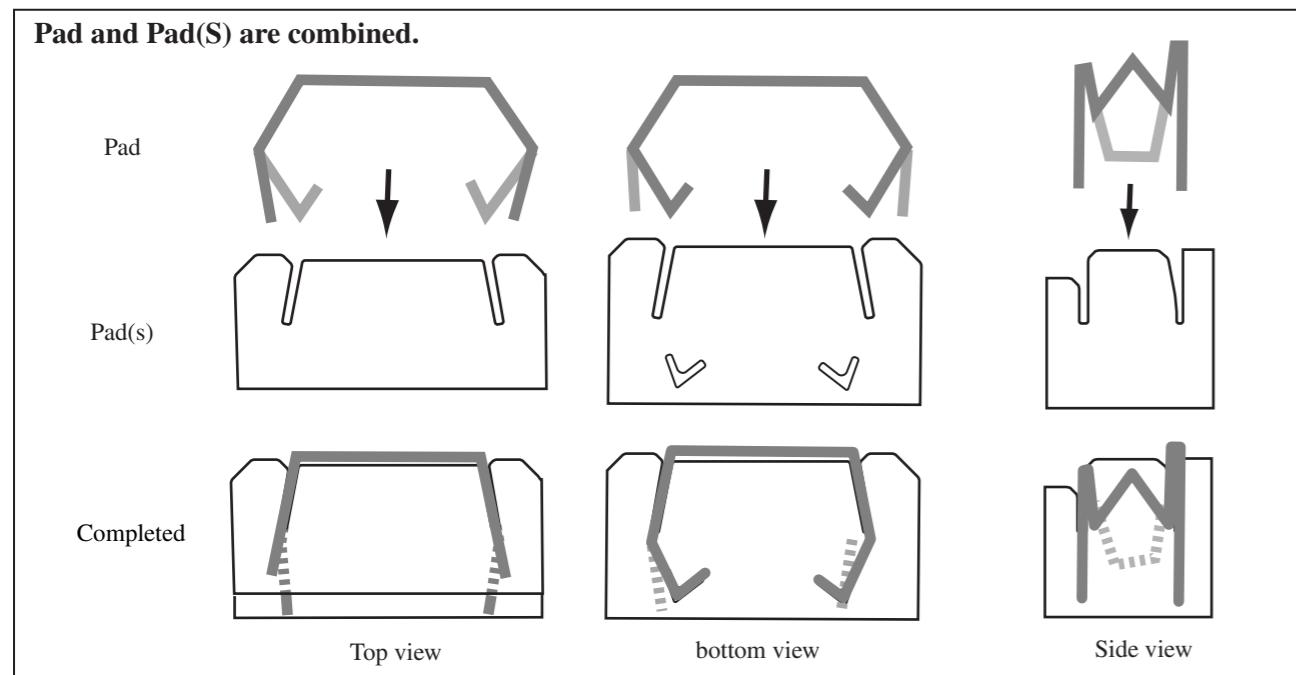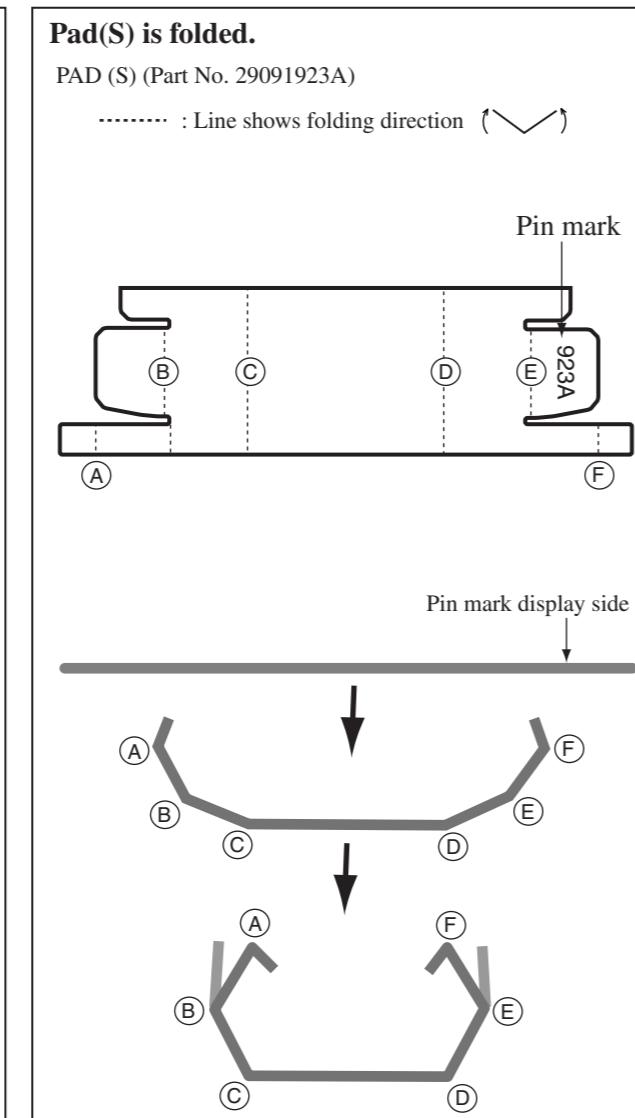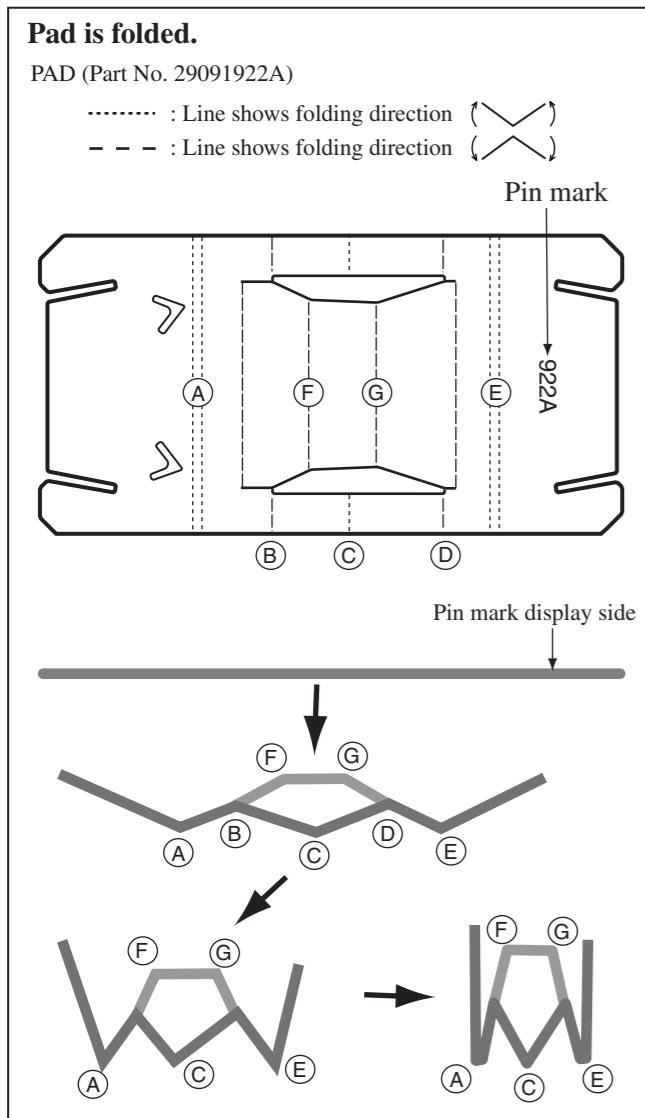

PACKING VIEW

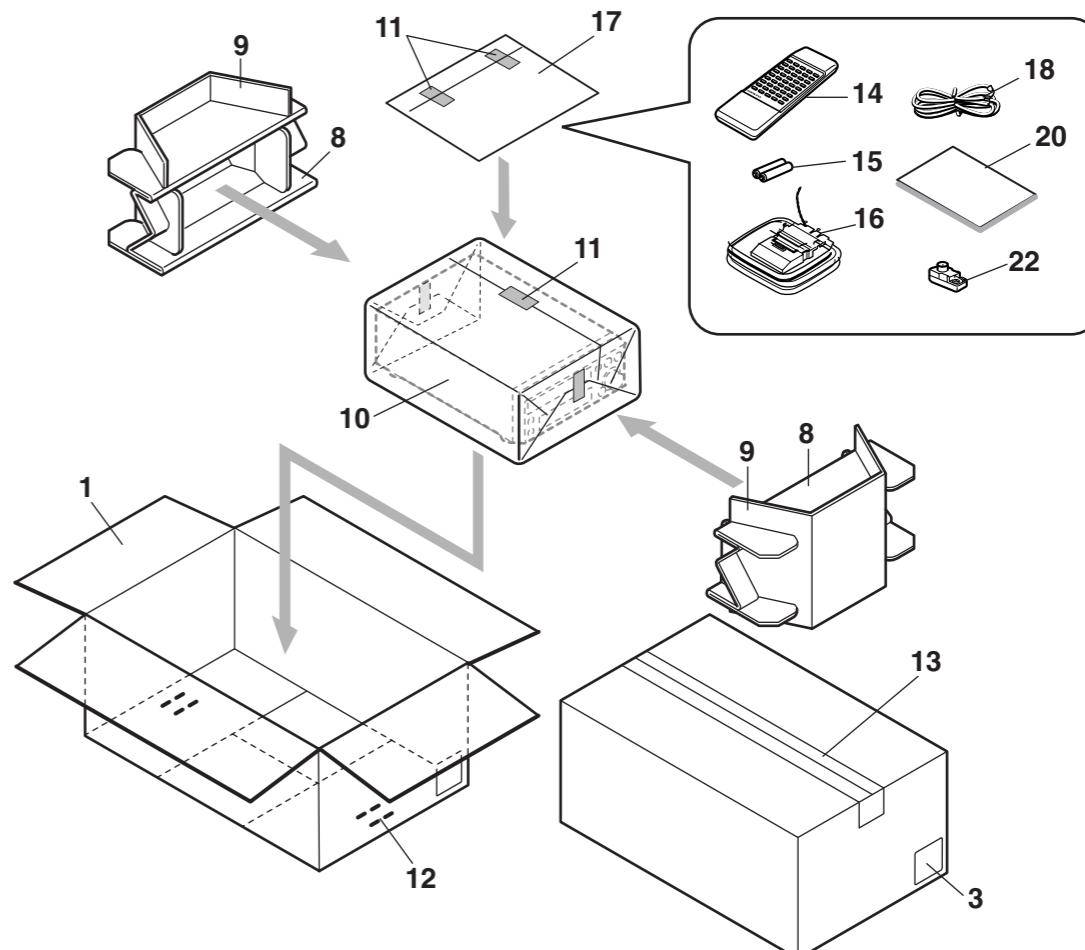

PACKING VIEW PARTS LIST

REF.NO.	PART NO.	DESCRIPTION	REF.NO.	PART NO.	DESCRIPTION
1	29053603B 29053649A 29053604B	Carton box<D,DT,GT> Carton box<GR> Carton box<P>	17	29100097-1A	Poly bag 350*250
3	29362647 29362646	Label UPC<D> Label EAN<GR,GT,P,DT>	18	292142	FM antenna<D>
8	29091922A	Pad	20	29342905 29342906	FM antenna<GR,GT,P,DT> Instruction manual E
9	29091923A	Pad (S)	29342907	Instruction manual U3FSI<P>	
10	29095835	Sheet 0.515*650*550	29342926	Instruction manual U3GDSW<P>	
11	29110149	Tape	22	25065462	Instruction manual T<GR,GT,DT>
12	282301	Staple			YAE21-0237, Antenna adapter<GR,GT,P,DT>
13	29110141	PP Tape			
14	24140421	RC-421S, Remote controller			
15	3010054	Battery, UM-3			
16	232140	NMA-3057, AM Loop antenna			

NOTE : <D> : USA & Canadian models
<DT> : Taiwanese model only
<P> : European model only
<GR> : Chinese model only
<GT> : Asian model only

ONKYO CORPORATION

Sales & Product Planning Div. : 2-1, Nishin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN
Tel: 072-831-8111 Fax: 072-833-5222

ONKYO U.S.A. CORPORATION

200 Williams Drive, Ramey, N.J. 07446, U.S.A.
Tel: 201-825-7950 Fax: 201-825-8150 E-mail: onkyo@onkyousa.com

ONKYO EUROPE ELECTRONICS GmbH

Industriestrasse 20, 82110 Germering, GERMANY
Tel: 089 84 93 20 Fax: 089 84 93 226 E-mail: info@onkyo.de

ONKYO CHINA LIMITED

Units 2102-7, Metroplaza Tower I, 223 Hing Fong Road, Kwai Chung,
N.T., HONG KONG Tel: 852 2429 3118 Fax: 852 2428 9039

