

Technical Tip:

The procedure given above will clear all consumer saved setup. It is therefore important to document customer settings before performing reset.

MODEL#	FIRST	SECOND	COMPONENT	DISPLAY
TX-DS474/484	VIDEO-1	SPEAKER-A	RECEIVER	"CLEAR"
TX-DS555	CD	POWER	RECEIVER	"CLEAR"
TX-DS575/575X	VIDEO-1	SPEAKER-A	RECEIVER	"CLEAR"
TX-DS656	CD	POWER	RECEIVER	"CLEAR"
TX-DS676	VIDEO-1	SPEAKER-A	RECEIVER	"CLEAR"
TX-DS747	CD	POWER	RECEIVER	"CLEAR"
TX-DS777	VIDEO-1	SPEAKER-A	RECEIVER	"CLEAR"
TX-DS787	VIDEO-1	REC OUT	RECEIVER	"CLEAR"
TX-DS838	VIDEO-1	SPEAKER	RECEIVER	"CLEAR"
TX-DS939	CD	VIDEO-1	RECEIVER	"CLEAR"
TX-DS989	VIDEO-1	STAND-BY	RECEIVER	"CLEAR"
DR-90	VIDEO-1	SPEAKER-A	RECEIVER/DVD	"CLEAR"
LS-V900	SPEAKER-A/B	STAND-BY	RECEIVER/DVD	"CLEAR"
TX-SV210	CD	POWER	RECEIVER	"CLEAR"
TX-SV343/A-SV240	VIDEO-1	SPEAKER-A	RECEIVER	"CLEAR"
TX-SV373	VIDEO-1	SPEAKER-A	RECEIVER	"CLEAR"
TX-SV424/A-SV640	CD	POWER	RECEIVER	"CLEAR"
TX-SV434	CD	POWER	RECEIVER	"CLEAR"
TX-SV444/454	VIDEO-1	SPEAKER-A	RECEIVER	"CLEAR"
TX-SV525/535	VIDEO-1	POWER	RECEIVER	"CLEAR"
TX-SV545/A-SV610	CD	POWER	RECEIVER	"CLEAR"
A-SV620/	VIDEO-1	POWER	RECEIVER	"CLEAR"
TX-SV636	VIDEO-1	POWER	RECEIVER	"CLEAR"
TX-SV646/A-SV420	CD	POWER	RECEIVER	"CLEAR"
TX-SV727	VIDEO-1	POWER	RECEIVER	"CLEAR"
TX-SV828THX	VIDEO-1	POWER	RECEIVER	"CLEAR"
TX-SV919THX	CD	POWER	RECEIVER	"CLEAR"
TX-SV303PRO	MEMORY	POWER	RECEIVER	"TEST"
TX-SV313PRO	MEMORY	POWER	RECEIVER	"CLEAR"
TX-SV414PRO	MEMORY	POWER	RECEIVER	"CLEAR"
TX-SV515PRO	CD	POWER	RECEIVER	"CLEAR"
TX-SV515PROII	CD	POWER	RECEIVER	"CLEAR"
TX-SV717PRO	CD	POWER	RECEIVER	"CLEAR"
TX-SV909PRO	CD	POWER	RECEIVER	"CLEAR"
TX-8210	STANDBY	CD	RECEIVER	"CLEAR"
TX-8211	TAPE-1	SELECT CTR'L	RECEIVER	"CLEAR"
TX-8410PRO	VIDEO-1	POWER	RECEIVER	"CLEAR"
TX-8511	VIDEO-1	SPEAKER-A	RECEIVER	"CLEAR"