
Maestro Boomer 2

(Wah-Wah / Volume)

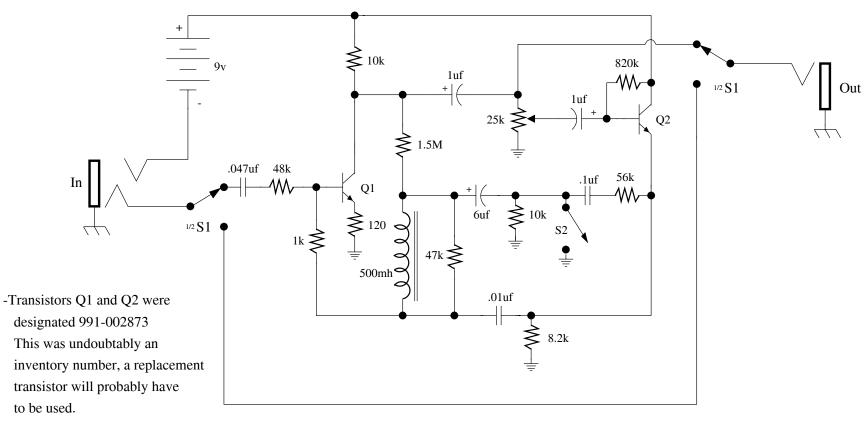

-S2 is used to switch the pedal between its modes of wah-wah (off as shown) and volume (on).

Model EG-2