

MAZDA REMOTE PROGRAMMING

How to set the keyless remote:

- 1) Sit in the driver's seat and leave the door open;
- 2) Find the door-light switch on the car at the bottom of the door opening; it's covered by black rubber and when the door closes, the interior and door lights go out; so when you push it with your hand, the same thing happens;
- 3) Insert key in the ignition and turn to on, back to off and DO NOT remove the key;
- 4) Do this three times quickly (key on, key off);
- 5) Then push the door-light switch three times;
- 6) Push the lock button on the remote twice; the chime should ring;
- 7) Wait 10-20 seconds for several chimes and you're in business.
If you're programming more than one remote at the same time, repeat step #6 at the same time so all remotes have the same program.