



Rechargeable Battery Tester

- July 16, 1985
- Dan Fraser
Vancouver.

To calibrate -

1. Connect Power supply to circuit in place of battery
2. Set To 12 Volts
3. Check for +5V on IC. pin 8. - Turn trim pot so LED 2 is out
4. Reduce voltage input to 10.95 Volts
5. Set trim pot so LED 2 just lights.
6. Turn up power supply. LED 2 should go out just over 11 volts. - See P. 2.