
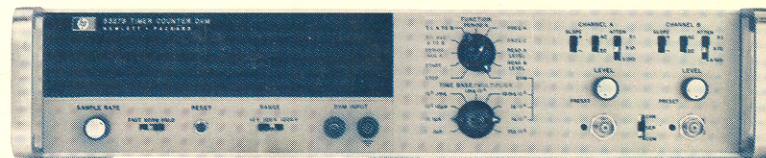


OPERATING AND SERVICE MANUAL

TIMER COUNTER DVM

5326B/5327B

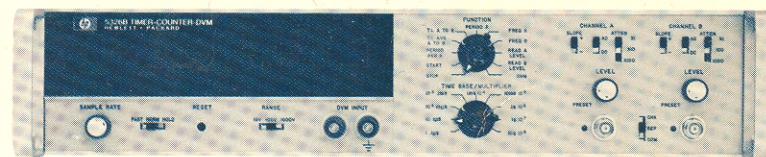

HEWLETT  PACKARD

HP MANUAL SCANS

By

Artek Media

1042 Plummer Cir. SW
Rochester, MN 55902

www.artekmedia.com

"High resolution scans of obsolete technical manuals"

**ALL HP MANUALS ARE REPRODUCED
WITH PERMISSION OF
AGILENT TECHNOLOGIES INC.**

Reproduction of this scanned document or removal of this disclaimer
Will be considered in violation of both Agilent's and Artek Media's copy rights

 
If your looking for a quality scanned technical manual in PDF format please visit our WEB site at www.artekmedia.com or drop us an email at manuals@artekmedia.com and we will be happy to email you a current list of the manuals we have available.

If you don't see the manual you need on the list drop us a line anyway we may still be able to point you to other sources. If you have an existing manual you would like scanned please write for details, This can often be done very reasonably in consideration for adding your manual to our library.

Typically the scans in our manuals are done as follows;

- 1) Typed text pages are typically scanned in black and white at 300 dpi.
- 2) Photo pages are typically scanned in gray scale mode at 600 dpi
- 3) Schematic diagram pages are typically scanned in black and white at 600 dpi unless the original manual had colored high lighting (as is the case for some 70's vintage Tektronix manuals).

Thanks



Dave & Lynn Henderson
Artek Media

5326B/5327B
TIMER/COUNTER/DVM
OPERATING AND SERVICE MANUAL

SERIAL PREFIX:

5326B-1428A
5327B-1428A

This manual applies to Model 5326B having serial prefix 1428A and HP Model 5327B having serial prefix 1428A.

SERIAL PREFIXES NOT LISTED

For serial prefixes above 1428A, a "Manual Supplement" sheet is included with this manual. For serial prefixes below 1428A, refer to Section VII of this manual.

NOTE

For 5326B's with serial prefixes earlier than 1128A, a separate manual is required. Order "Model 5326A/B 50 MHz Timer/Counter/DVM Operating and Service Manual." See NOTE above Table 7-1 on page 7-3.

Copyright HEWLETT-PACKARD COMPANY 1972
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

Printed: FEB 1975

MANUAL PART NO. 05326-90043
MICROFICHE PART NO. 05326-90044

PRINTED IN U.S.A.

HEWLETT  PACKARD

TABLE OF CONTENTS

| Section | | Page |
|---------|--|------|
| I | GENERAL INFORMATION | 1-1 |
| | 1-1. Description | 1-1 |
| | 1-4. Identification | 1-1 |
| | 1-6. Applications | 1-1 |
| | 1-8. Options | 1-1 |
| II | INSTALLATION | 2-1 |
| | 2-1. Introduction | 2-1 |
| | 2-3. Unpacking and Inspection | 2-1 |
| | 2-5. Storage and Shipment | 2-1 |
| | 2-8. Rack Installation | 2-1 |
| | 2-10. Power Connection | 2-1 |
| | 2-13. Remote Programming, Option 002 | 2-2 |
| | 2-15. Front Panel Controls | 2-2 |
| | 2-19. Remote Programming Requirements | 2-2 |
| | 2-22. Remote Programming Procedure | 2-2 |
| | 2-24. Function Selection Programming | 2-3 |
| | 2-27. Time Base Selection Programming | 2-3 |
| | 2-29. Voltmeter Programming | 2-3 |
| | 2-31. Trigger Level Programming | 2-3 |
| | 2-34. Sample Rate Adjustment | 2-3 |
| | 2-36. Remote Programming, Option 004 | 2-3 |
| | 2-38. Front Panel Controls | 2-3 |
| | 2-40. Remote Programming Requirements | 2-3 |
| | 2-43. Remote Programming Procedure | 2-4 |
| | 2-45. Function Selection Programming | 2-4 |
| | 2-48. Time Base Selection Programming | 2-4 |
| | 2-50. Signal Conditioning Programming | 2-4 |
| | 2-54. Trigger Level Programming | 2-5 |
| | 2-57. Sample Rate Adjustment | 2-5 |
| | 2-59. Sample Rate Disable-Computer Inhibit | 2-5 |
| | 2-62. Blanking Defeat | 2-5 |
| III | OPERATION | 3-1 |
| | 3-1. Introduction | 3-1 |
| | 3-3. Operating Modes | 3-1 |
| | 3-5. Totalizing Mode | 3-1 |
| | 3-7. Frequency Modes | 3-1 |
| | 3-9. Period Modes | 3-1 |
| | 3-13. Time Interval Modes | 3-1 |
| | 3-17. Digital Voltmeter Measurements | 3-2 |
| | 3-20. Ratio | 3-2 |
| | 3-23. Marker Outputs | 3-2 |
| | 3-25. Hysteresis | 3-2 |
| | 3-28. Time Interval Compensation | 3-3 |
| | 3-30. Accuracy | 3-3 |
| IV | THEORY OF OPERATION | 4-1 |
| | 4-1. Introduction | 4-1 |
| | 4-3. Logic Symbols | 4-1 |
| | 4-6. Gating and Logic | 4-1 |
| | 4-8. Integrated Circuit Operation | 4-2 |
| | 4-9. JK Master-Slave Flip-Flop | 4-2 |
| | 4-11. Time-Base Decade | 4-2 |
| | 4-13. Open-Collector Gate | 4-2 |
| | 4-15. Logic Levels | 4-3 |

TABLE OF CONTENTS (Continued)

| Section | | Page |
|---------|---|------|
| IV | THEORY OF OPERATION (Continued) | |
| | 4-17. Overall Counter Operation | 4-3 |
| | 4-22. Frequency Modes | 4-4 |
| | 4-24. Period Modes | 4-4 |
| | 4-27. Time Interval Modes | 4-4 |
| | 4-30. DVM Mode | 4-4 |
| V | MAINTENANCE | 5-1 |
| | 5-1. Introduction | 5-1 |
| | 5-3. Assembly Designations | 5-1 |
| | 5-5. Test Equipment | 5-1 |
| | 5-7. Assembly Connection Identification | 5-1 |
| | 5-9. In-Cabinet Performance Check | 5-1 |
| | 5-12. Instrument Cover Removal | 5-1 |
| | 5-14. Repair | 5-1 |
| | 5-15. Printed Circuit Component Replacement | 5-1 |
| | 5-17. Replacing Integrated Circuits | 5-2 |
| | 5-19. Adjustments | 5-2 |
| VI | REPLACEABLE PARTS | 6-1 |
| | 6-1. Introduction | 6-1 |
| | 6-4. Ordering Information | 6-1 |
| VII | OPTIONS AND MANUAL CHANGES | 7-1 |
| | 7-1. Introduction | 7-1 |
| | 7-3. Options | 7-1 |
| | 7-5. Option 001, 8-Digit Display | 7-1 |
| | 7-7. Option 002, Remote Programming | 7-1 |
| | 7-9. Option 003, Digital Recorder Output | 7-1 |
| | 7-11. Option 004, Extended Remote Programming | 7-1 |
| | 7-13. Option 010, Temperature Compensated Oscillator | 7-1 |
| | 7-15. Option 011, Oven Oscillator | 7-1 |
| | 7-17. Field Installation of Options | 7-1 |
| | 7-18. Installation of Option 001, 8th Digit | 7-1 |
| | 7-20. Installation of Option 002, Remote Programming | 7-2 |
| | 7-22. Installation of Option 003, Digital Recorder Output | 7-2 |
| | 7-24. Installation of Option 004, Extended Remote Programming | 7-2 |
| | 7-26. Installation of Option 010 and 011, Oscillator Assemblies | 7-2 |
| | 7-28. Manual Changes | 7-3 |
| | 7-30. Newer Instruments | 7-3 |
| | 7-32. Older Instruments | 7-3 |
| VIII | SCHEMATIC DIAGRAMS | 8-1 |
| | 8-1. General | 8-1 |

LIST OF TABLES

| Table | | Page |
|-------|--|------|
| 1-1. | Equipment Supplied | 1-1 |
| 1-2. | Accessories Available | 1-1 |
| 1-3. | Specifications | 1-2 |
| 2-1. | 115/230 Volt Conversion | 2-2 |
| 3-1. | Self-Check | 3-8 |
| 4-1. | Truth Table | 4-2 |
| 4-2. | Logic Levels | 4-3 |
| 5-1. | Assembly Identification | 5-1 |
| 5-2. | Recommended Test Equipment | 5-2 |
| 5-3. | In-Cabinet Performance Check | 5-3 |
| 5-4. | Adjustments | 5-9 |
| 5-5. | D.P. and Annunicator Troubleshooting | 5-11 |
| 5-6. | Frequency, D.P., and Annunicator Troubleshooting | 5-12 |
| 5-7. | DVM, D.P., and Annunicator Troubleshooting | 5-13 |
| 6-1. | Replaceable Parts, Standard Instruments | 6-3 |
| 6-2. | Replaceable Parts, Options | 6-20 |
| 6-3. | Manufacturers Code List | 6-24 |
| 7-1. | Manual Backdating Changes | 7-3 |
| 7-2. | A18 (05327-60009) Replaceable Parts | 7-6 |
| 7-3. | A18 (05327-60029) Replaceable Parts | 7-7 |
| 7-4. | A7 (05327-60004) Replaceable Parts | 7-12 |


LIST OF FIGURES

| Figure | | Page |
|--------|---|------|
| 1-1. | Model 5326B/5327B Timer/Counter/DVM | 1-0 |
| 3-1. | Hysteresis Offset | 3-3 |
| 3-2. | Hysteresis Compensation | 3-3 |
| 3-3. | Measurement Accuracy | 3-4 |
| 3-4. | Front Panel Controls and Indicators | 3-5 |
| 3-5. | Rear Panel Controls and Connectors | 3-7 |
| 3-6. | Frequency A Measurements | 3-10 |
| 3-7. | Frequency C Measurements | 3-11 |
| 3-8. | Period Measurements | 3-12 |
| 3-9. | Ratio Measurements | 3-13 |
| 3-10. | Time Interval Measurements | 3-14 |
| 3-11. | Digital Voltmeter and Read A Level, Read B Level Measurements | 3-15 |
| 3-12. | Totalize Measurements | 3-16 |
| 4-1. | Gate Symbols and Logic Comparisons | 4-1 |
| 4-2. | JK Flip-Flop | 4-2 |
| 4-3. | Time-Base Decode 1820-0412 | 4-2 |
| 4-4. | Open-Collector Gate 1820-0327 | 4-2 |
| 4-5. | Functional Block Diagram | 4-3 |
| 4-6. | Frequency A Model Flow Diagram | 4-5 |
| 4-7. | Frequency C Model Flow Diagram | 4-5 |


LIST OF FIGURES (Continued)

| Figure | Page |
|--|--------|
| 4-8. Period Mode Flow Diagram | 4-6 |
| 4-9. Period Average Mode Flow Diagram | 4-6 |
| 4-10. Time Interval Mode Flow Diagram | 4-7 |
| 4-11. Time Interval Average Mode Flow Diagram | 4-7 |
| 4-12. DVM Model Flow Diagram | 4-8 |
| 4-13. Instrument Timing Diagram | 4-9 |
| | |
| 6-1. Panel Designations | 6-2 |
| | |
| 7-1. A18 Prescaler Board Assembly (Series 1040A) (5327B Only) Schematic Diagram | 7-8 |
| 7-2. A18 Prescaler Board Assembly (Series 1116A) (5327B Only) Schematic Diagram | 7-9 |
| 7-3. A18 (05327-60009) Component Locator | 7-10 |
| 7-4. A18 (05327-60029) Component Locator | 7-11 |
| 7-5. A7 Function Control Assembly (Series 1040A) Schematic Diagram | 7-13 |
| 7-6. A7 Function Control Assembly (05327-60004) Component Locator | 7-14 |
| | |
| 8-1. Schematic Diagram Notes | 8-2 |
| 8-2. Integrated Circuit Diagrams | 8-3 |
| 8-3. Model 5327B Front and Rear Panels | 8-10 |
| 8-4. Model 5327B Top Internal View | 8-11 |
| 8-5. A1 Attenuator Assembly | 8-13 |
| 8-6. A2, A3 Amplifier/Trigger Assembly | 8-15 |
| 8-7. A4 Oscillator Assembly | 8-17 |
| 8-8. A5 Time Base Control Assembly | 8-19 |
| 8-9. A6 Sample Rate Assembly | 8-21 |
| 8-10. A7 Function Control Assembly | 8-29 |
| 8-11. A8 Display Support Assembly | 8-31 |
| 8-12. A9 Display Assembly Standard Instrument and Option 001 | 8-33 |
| 8-13. A10 Right Readout Assembly | 8-35 |
| 8-14. A11 Left Readout Assembly | 8-37 |
| 8-15. A12 Voltmeter Input Amplifier Assembly | 8-39 |
| 8-16. A13 Voltmeter V to F Converter Assembly | 8-41 |
| 8-17. A14 Voltmeter Display Control Assembly | 8-43 |
| 8-18. A15, A16 Regulator/Interconnect Board Assembly | 8-45 |
| 8-19. A17 Input C Amplifier Assembly (5326B Only) | 8-47 |
| 8-20. A18 Prescaler Board Assembly (5327B Only) | 8-49 |
| 8-21. Option 002, Remote Programming Cable Assembly and Rear Panel Connector Assembly | 8-51 |
| 8-22. Option 004, Remote Programming Cable Assembly and J10 Option 003, Digital Recorder Cable Assembly | 8-53 |
| 8-23. A1 Option 004 Programmable Attenuator Assembly | 8-55 |
| 8-24. Options 010, 011, and A16 Interconnect Circuit Board | 8-57 |
| 8-25. Interconnection Diagram | Insert |

Figure 1-1. HP Model 5326B/5327B Timer/Counter/DVM

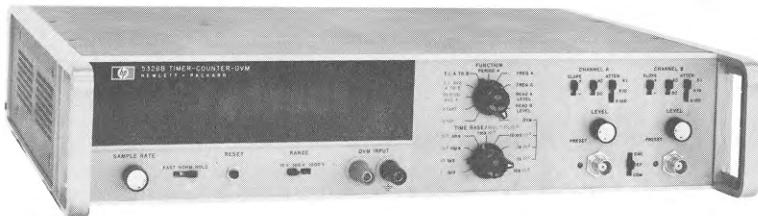

MODEL 5326B

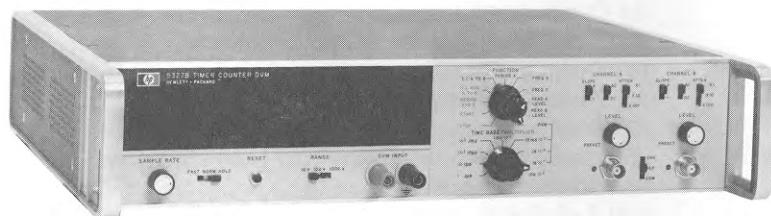

MODEL 5327B



POWER CORD

SECTION I

GENERAL INFORMATION

1-1. DESCRIPTION

1-2. The Hewlett-Packard Model 5326B/5327B are frequency counters that have a variety of functions. The basic difference between the two models is the addition of the prescaler assembly in the 5327B. This assembly increases the upper frequency limit from 50 MHz to 550 MHz. The 5326B uses a high-sensitivity, 50-ohm input amplifier in place of the prescaler.

1-3. The instrument measures frequency, period, period average, time interval, time interval average, and ratio. The DVM (digital voltmeter) portion of the instrument measures dc voltages up to 1000 volts and provides a direct readout of the voltage and polarity of the counter's trigger levels. The model features a 7-digit display (8 digits optional), 1M ohm and 50-ohm inputs, display storage, and blanking for insignificant digits in the display. Decimal point and unit readouts are displayed automatically with each operating selection. Two independent input channels are provided for time interval measurements. Each input channel has an attenuator, trigger slope selector, level control, ac-dc coupling, and an oscilloscope marker output. Table 1-3 lists the electrical and mechanical specifications.

1-4. IDENTIFICATION

1-5. Hewlett-Packard uses a two-section serial number mounted on the rear panel. Earlier instruments use an 8-digit serial number (000-00000). The first three digits are a serial prefix number; the last five digits refer to the specific instrument. Later instruments use a 9-digit serial number (0000A00000). The first four digits are the serial prefix and the last five digits refer to the specific instrument. If the serial prefix of your instrument differs from that listed on the title page of this manual, there are differences between this manual and your instrument. Lower serial prefixes are documented in Section VII, and higher serial prefixes are covered with manual change sheets included with the manual. If the change sheet is missing, contact the nearest Hewlett-Packard Sales and Service Office listed on the inside rear cover of this manual.

1-6. APPLICATIONS

1-7. The 5326B/5327B Counters are particularly adaptable to timing measurements such as pulse width, pulse repetition frequency, and propagation delay. The time interval average mode measures time interval on repetitive signals with resolution better than one nanosecond. When used with microwave

test systems, group delay, phase, and level measurements can be performed.

1-8. OPTIONS

1-9. The instrument can be ordered with the following options: Option 001, 8-digit display; Option 002, remote programming; Option 003, digital recorder outputs; Option 004, remote programming for all signal input conditions; Option 010, temperature compensated oscillator; Option 011, HP 10544A oven oscillator.

Table 1-1. Equipment Supplied

| Description | HP Part No. |
|---|-------------|
| Detachable Power Cord, 7½ ft. (231 cm) long | 8120-1378 |
| Rack Mounting Kit | 05326-60046 |

Table 1-2. Accessories Available

| Description | HP Part No. |
|---|--------------|
| Digital Recorders | 5050B, 5055A |
| Interconnect Cable, Digital Recorder, 6 ft (183 cm) | 562A-16C |
| 50-ohm BNC to BNC Coaxial Cable, 4 ft (122 cm) | 10503-6001 |
| Circuit Board Extender, 15-pin (two required) | 5060-0049 |
| Input Amplifier Circuit Board Extender | 10532-60001 |
| Circuit Board Extender, 18-pin | 5060-2041 |
| Extender Board Kit; includes two 5060-0049, and one each 5060-2041, and 10532-60001 | 10532A |

Table 1-3. Specifications

| INPUT CHANNELS A AND B | | Sensitivity: 5 mV rms. S/B 50 mV RMS Impedance: 50Ω nominal. Maximum Input: 5 volts rms; 7.5 volts peak. Trigger Level: 0 volts. |
|--|--|--|
| Range: dc coupled: 0 to 50 MHz ac coupled: 20 Hz to 50 MHz | | |
| Sensitivity: 0.1 V rms sine wave 0.3 V p-p pulse 8 ns minimum pulse width Sensitivity can be decreased by 10 or 100 times, using the ATTENUATOR switch. | | CAUTION Do not exceed voltage specification or damage will occur. |
| Impedance: 1 MΩ shunted by less than 25 pF. | | START (Totalizing and Scaling) |
| Dynamic Input Voltage Range: 0.1 to 3 V rms ac times attenuator setting. ±5 Vdc times attenuator setting. | | Range: 0 to 10 MHz. |
| Trigger Level: PRESET to center triggering about 0 V or variable over the range of -3 V to +3 V times attenuator setting. Trigger threshold band <1.0 mV, referred to input at maximum frequency. | | Factor: 1 to 10^8 selectable in decade steps. |
| Overload Protection: 250 V rms on all attenuator settings, except 25 V rms on X1 above 50 kHz. | | Output: Rear panel TIME BASE BNC. |
| Slope: Independent selection of positive or negative slope. | | Display: Channel A input divided by scaling factor. |
| Channel Inputs: Common or separate lines. | | FREQUENCY |
| Marker Outputs: Rear panel BNC's DTL pulse, low for approximately 2 μs after trigger point for A and B channels. | | Range: 0 to 50 MHz (5326B). 0 to 550 MHz (5327B). |
| INPUT CHANNEL C | | Input: Channel A; Channel C for direct and for prescaled (switchable). Channel A provides triggered frequency measurement. |
| 5327B | | Gate Times: 0.1 μs to 10 s in decade steps. |
| Range: direct: 0 to 50 MHz, dc coupled prescaled: 0 to 550 MHz, dc coupled. | | Accuracy: ±1 count displayed* ± time base accuracy |
| Sensitivity: direct: 15 mV rms. prescaled: 25 mV rms. | | Display: kHz, MHz, or GHz with positioned decimal point. |
| Impedance: 50Ω nominal. | | TIME INTERVAL |
| Maximum Input: 3.5 volts rms; 5 volts peak. | | Range: 0.1 μs to 10^8 seconds. |
| Trigger Level: 0 volts. | | Input: Channel A and B; can be common or separate. |
| 5326B | | Frequency Counted: 10 MHz to 0.1 Hz selectable in decade steps. |
| Range: 0 to 50 MHz, dc coupled. | | Accuracy: ±1 count ± time base accuracy ± trigger error.** |
| | | Display: μs, ms, seconds, or 10's of seconds with positioned decimal point. |
| | | *When prescaled by 10, ±1 count displayed is ±10 counts of the input signal. |
| | | **For any waveshape, trigger error is less than $\pm \frac{0.0025}{\text{Signal Slope (V/μs)}} \mu\text{s.}$ |

Table 1-3. Specifications (Continued)

| TIME INTERVAL AVERAGE | RATIO | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|--|----------------------|---------------|-----------------|-------------|--------------------------|--|----------------|-------------------|----------------------|-----|----------------|----------------------|--------------|-----------------|----------------------|-------|--------------|--------------|--------------|---------------|--------|--------------|--------------|--------------|---------------|
| Range: 0.15 ns to 10 seconds. | Display: (Any input Function) F_{ext} times MULTIPLIER (M). | | | | | | | | | | | | | | | | | | | | | | | | | |
| Intervals Averaged: 1 to 10^8 selectable in decade steps. | $M = 1$ to 10^8 (10 to 10^9 when prescaling) selectable in decade steps. | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input: START - Channel A; STOP - Channel B can be separate or common. | Range: Input Function: see appropriate function section. F_{ext} (external Oscillator Input) 100 Hz to 10 MHz. | | | | | | | | | | | | | | | | | | | | | | | | | |
| Frequency Counted: 10 MHz. | Model: Any input function. | | | | | | | | | | | | | | | | | | | | | | | | | |
| Accuracy: \pm time base accuracy ± 2 ns $\pm \frac{(\text{trigger error}^{**} + 100 \text{ ns})}{\sqrt{\text{intervals averaged}}}$ | Accuracy: Accuracy of selected input function \pm trigger error of F_{ext} . | | | | | | | | | | | | | | | | | | | | | | | | | |
| Dead Time: Minimum time between STOP (Channel B trigger) and START (Channel A trigger): 150 ns. | INTEGRATING DIGITAL VOLTmeter | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display: ns, μ s with positioned decimal point. | Technique: Voltage-to-frequency conversion. | | | | | | | | | | | | | | | | | | | | | | | | | |
| Read A; Read B Display: (Model 5326B and 5327B only). Trigger level of Channel A or B, displayed to hundredths of a volt. Effective trigger level is display times attenuator setting. | Voltage Ranges: Manual selection. | | | | | | | | | | | | | | | | | | | | | | | | | |
| PERIOD | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Range: 0 to 10 MHz. | <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Range</th><th style="text-align: center;">Resolution</th><th style="text-align: center;">Input Impedance</th></tr> </thead> <tbody> <tr> <td style="text-align: center;">(Vdc)</td><td style="text-align: center;">(1 sec integration time)</td><td></td></tr> <tr> <td style="text-align: center;">10</td><td style="text-align: center;">$100 \mu\text{V}$</td><td style="text-align: center;">$10 \text{ M}\Omega$</td></tr> <tr> <td style="text-align: center;">100</td><td style="text-align: center;">1 mV</td><td style="text-align: center;">$10 \text{ M}\Omega$</td></tr> <tr> <td style="text-align: center;">1000</td><td style="text-align: center;">10 mV</td><td style="text-align: center;">$10 \text{ M}\Omega$</td></tr> </tbody> </table> | Range | Resolution | Input Impedance | (Vdc) | (1 sec integration time) | | 10 | $100 \mu\text{V}$ | $10 \text{ M}\Omega$ | 100 | 1 mV | $10 \text{ M}\Omega$ | 1000 | 10 mV | $10 \text{ M}\Omega$ | | | | | | | | | | |
| Range | Resolution | Input Impedance | | | | | | | | | | | | | | | | | | | | | | | | |
| (Vdc) | (1 sec integration time) | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | $100 \mu\text{V}$ | $10 \text{ M}\Omega$ | | | | | | | | | | | | | | | | | | | | | | | | |
| 100 | 1 mV | $10 \text{ M}\Omega$ | | | | | | | | | | | | | | | | | | | | | | | | |
| 1000 | 10 mV | $10 \text{ M}\Omega$ | | | | | | | | | | | | | | | | | | | | | | | | |
| Input: Channel A. | Input: Single ended. | | | | | | | | | | | | | | | | | | | | | | | | | |
| Frequency Counted: 10 MHz to 0.1 Hz selectable in decade steps. | Polarity: Automatic polarity detection. | | | | | | | | | | | | | | | | | | | | | | | | | |
| Accuracy: ± 1 count \pm time base accuracy \pm trigger error*** | Overrange: 25% overrange on 10 V and 100 V ranges with full accuracy. | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display: μ s, ms, seconds, 10's of seconds with positioned decimal point. | Overload Protection: 1100 Vdc all ranges. | | | | | | | | | | | | | | | | | | | | | | | | | |
| PERIOD AVERAGE | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Range: 0 to 10 MHz. | Accuracy: After 10 minutes warm-up (within 90-day calibration period), time base set to 1 sec: | | | | | | | | | | | | | | | | | | | | | | | | | |
| Periods Averaged: 1 to 10^8 selectable in decade steps. | <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Range</th><th style="text-align: center;">Stability</th><th style="text-align: center;">Linearity</th><th style="text-align: center;">Zero Offset</th><th style="text-align: center;">Counter</th></tr> </thead> <tbody> <tr> <td></td><td style="text-align: center;">(% of Reading)</td><td style="text-align: center;">(% of Range)</td><td style="text-align: center;">(% of Range)</td><td></td></tr> <tr> <td style="text-align: center;">10V</td><td style="text-align: center;">$\pm 0.04\%$</td><td style="text-align: center;">$\pm 0.01\%$</td><td style="text-align: center;">$\pm 10.01\%$</td><td style="text-align: center;">± 1 count</td></tr> <tr> <td style="text-align: center;">100 V</td><td style="text-align: center;">$\pm 0.04\%$</td><td style="text-align: center;">$\pm 0.01\%$</td><td style="text-align: center;">$\pm 0.01\%$</td><td style="text-align: center;">± 1 count</td></tr> <tr> <td style="text-align: center;">1000 V</td><td style="text-align: center;">$\pm 0.08\%$</td><td style="text-align: center;">$\pm 0.01\%$</td><td style="text-align: center;">$\pm 0.01\%$</td><td style="text-align: center;">± 1 count</td></tr> </tbody> </table> | Range | Stability | Linearity | Zero Offset | Counter | | (% of Reading) | (% of Range) | (% of Range) | | 10V | $\pm 0.04\%$ | $\pm 0.01\%$ | $\pm 10.01\%$ | ± 1 count | 100 V | $\pm 0.04\%$ | $\pm 0.01\%$ | $\pm 0.01\%$ | ± 1 count | 1000 V | $\pm 0.08\%$ | $\pm 0.01\%$ | $\pm 0.01\%$ | ± 1 count |
| Range | Stability | Linearity | Zero Offset | Counter | | | | | | | | | | | | | | | | | | | | | | |
| | (% of Reading) | (% of Range) | (% of Range) | | | | | | | | | | | | | | | | | | | | | | | |
| 10V | $\pm 0.04\%$ | $\pm 0.01\%$ | $\pm 10.01\%$ | ± 1 count | | | | | | | | | | | | | | | | | | | | | | |
| 100 V | $\pm 0.04\%$ | $\pm 0.01\%$ | $\pm 0.01\%$ | ± 1 count | | | | | | | | | | | | | | | | | | | | | | |
| 1000 V | $\pm 0.08\%$ | $\pm 0.01\%$ | $\pm 0.01\%$ | ± 1 count | | | | | | | | | | | | | | | | | | | | | | |
| Input: Channel A. | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Frequency Counted: 10 MHz. | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Accuracy: \pm time base accuracy ± 1 count displayed* \pm trigger error*** | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display: ns, μ s, with positioned decimal point. | | | | | | | | | | | | | | | | | | | | | | | | | | |

***Trigger error is less than $\pm 0.3\%$ of one period
 \pm periods averaged for signals with 40 dB or better signal-to-noise ratio and 100 mV rms amplitude.

Table 1-3. Specifications (Continued)


Operating Temperature: 10°C to 40°C, <80% RH.

Measurement Time:

| | | |
|----------|----------|--|
| 1 msec | 2 digits | } Decimal points automatically displayed |
| 10 msec | 3 digits | |
| 100 msec | 4 digits | |
| 1 sec | 5 digits | |
| 10 sec | 6 digits | |

Response: <100 μs for full accuracy with a step function input.

AC Noise Rejection: Infinite for multiples of (meas-time)¹. See graph for Normal Mode Rejection below.

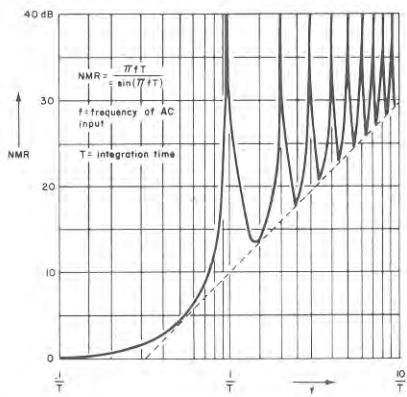

TIME BASE

Crystal Frequency: 10 MHz.

Stability: Aging Rate: <3 parts in 10⁷/mo.
Temperature: ±2.5 parts in 10⁶, 0° to 50°C.
Line Voltage: ±1 part in 10⁷ for 10% line variation.

Short-term Fluctuation: Typically <5 parts in 10⁹ rms (typical) one-second average (at constant temperature).

Oscillator Output: 10 MHz, TTL type output levels, 50Ω series impedance at rear panel BNC.

External Input: 100 Hz to 10 MHz; 1 V rms into 1 kΩ.

Time Base Output: Negative pulses, +3 V to 0 V (open circuit), typically 100 ns wide. In START, output frequency is INPUT A divided by TIME BASE/MULTIPLIER switch setting. Available at rear panel BNC.

Gate Output: TTL level pulses; low while gate open, high while gate closed. Available at rear panel BNC.

GENERAL

Display: 7 digits (8 optional).

Blanking: Suppresses display of unwanted zeros left of the most significant digit.

Display Storage: Holds reading between samples. Rear panel switch overrides storage.

Sample Rate: FAST position: Continuously variable from less than 100 μs to approximately 20 ms. NORM position: Continuously variable from less than 20 ms to approximately 5 seconds. HOLD position: Display can be held indefinitely.

Overflow: Neon indicates when display range is exceeded.

Operating Temperature: 0° to 50°C (see DVM Temperature Range).

Power Requirements: 115 or 230 volts ±10%, 50 to 60 Hz, 70 watts maximum.

Weight: Net, 16 lb. (7.4 kg). Shipping, 18 lb. 16 oz. (8.7 kg).

Accessories Furnished: Power Cord, 7½ ft. Rack Mount Kit.

DIMENSIONS

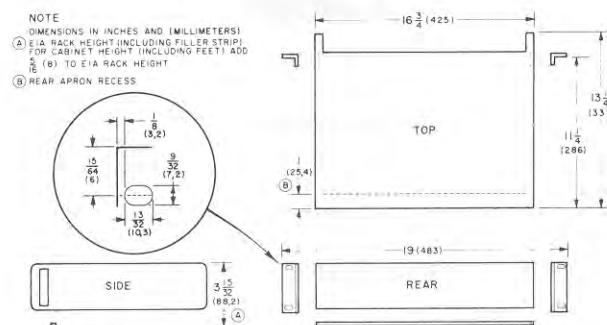


Table 1-3. Specifications (Continued)

| ACCESSORIES AVAILABLE | |
|---|--|
| HP 10503A, 50Ω BNC Cable, 4 ft (122 cm). | |
| HP 10532A, Extender Board Kit containing 2 ea. 15-pin extender 5060-0049, 1 ea. 18-pin extender 5060-2041, and 1 ea. Amplifier Extender, 10532-60001. | |
| HP 10542A, Remote Programming Interface enables interfacing between the 5326/5327 Series counter with Option 004 and 40-bit Output Register. Includes two (2) 7-bit Digital-to-Analog Converters for level controls and decoding for time base and function selector. | |
| HP Cable 562A-16C, 6 ft (183 cm) to connect 5326/5327 Series with Option 003 to HP 5050B or 5055A Digital Recorder. | |
| OPTIONS | |
| Option 001: 8-digit display. | |
| Option 002: Remote Programming. | |
| Controls: All front panel controls are single line programmable except: SEP-COM (separate-common) switch; the check function is programmable. FAST/NORM Mode. Input Attenuators. AC/DC Input Signal Coupling. | |
| Control Signal: Single line control using either contact closure to ground or DTL drive on all lines except trigger levels which are analog programmed (± 3 Vdc). | |
| Connector: Rear panel connector: HP 1251-0085; Amphenol 57-40360-375. (36-pin blue ribbon.) Mating connector: HP 1251-0084; Amphenol 57-30360-375 (not supplied). | |
| Option 003: Digital output (for numerals and polarity only). | |
| Code: 4-line 1-2-4-8 BCD, "1" state high. "0" state +0.25 V at -1 mA; "1" state: +5 V open circuit, 2.5 kΩ source impedance nominal. | |
| Print Command: +5 V to 0 V, dc coupled; occurs at end of gate. | |
| Storage: Buffer storage is provided so BCD output is constant while next measurement is being made. | |
| Inhibit Input: Inhibits gate when instrument's cycle time is less than the time required for external equipment to interrogate BCD outputs. Positive inhibit +5 Vdc. | |
| Connector: Rear panel connector: HP 1251-0087; Amphenol 57-40500-375 (50-pin blue ribbon). Mating connector: HP 1251-0086; Amphenol 57-30500-375 (not supplied). | |
| Option 004: Remote Programming including all signal input conditions. | |
| Controls: All front panel controls are programmable except FAST/NORM Mode. | |
| Control Signal: Single line control using either contact closure to ground or DTL drive on all lines except trigger levels which are analog programmable (± 3 Vdc). | |
| Connector: Rear panel connector: HP 1251-0087; Amphenol 57-40500-375 (50-pin blue ribbon). Mating Connector: HP 1251-0086; Amphenol 57-30500-375 (not supplied). | |
| Option 010 Temperature Compensated Oscillator: Aging Rate: $<1 \times 10^{-7}$ /month. Temperature Stability (0° to 50°C): $<\pm 5 \times 10^{-7}$. Short Term Fluctuation (1 sec avg) $<1 \times 10^{-9}$ rms (typical). Warm-Up: room temp crystal. Line Voltage (10% change): $<\pm 5 \times 10^{-8}$. | |
| Option 011 HP 10544A Oven Oscillator: Aging Rate: $<5 \times 10^{-10}$ /day. Temperature Stability (0° to 50°C): $<3 \times 10^{-9}$. Short Term Fluctuation (1 sec avg): $<1 \times 10^{-11}$ rms. Warm-Up: $<\pm 5 \times 10^{-9}$ in 15 min. Line Voltage (10%change): $<5 \times 10^{-9}$. | |

SECTION II

INSTALLATION

2-1. INTRODUCTION

2-2. This section contains information for unpacking, inspection, repacking, storage, and installation. The instructions for remote programming are also given in this section.

2-3. UNPACKING AND INSPECTION

2-4. If the shipping carton is damaged, as that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage (scratches, dents, broken knobs, etc.). If the instrument is damaged or fails to self-check (Self-Check Procedures, Table 3-1), notify the carrier and nearest Hewlett-Packard Sales and Service Office immediately (offices are listed at the back of this manual). Retain the shipping carton and padding material for the carrier's inspection. The sales and service office will arrange for the repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

2-5. STORAGE AND SHIPMENT

2-6. PACKAGING. To protect valuable electronic equipment during storage or shipment always use the best packaging methods available. Your Hewlett-Packard Sales and Service Office can provide packing material such as that used for original factory packaging. Contract packaging companies in many cities can provide dependable custom packaging on short notice. Here are two recommended packaging methods:

a. RUBBERIZED HAIR. Cover painted surfaces of instrument with protective wrapping paper. Pack instrument securely in strong corrugated container (350 lb/sq. in. bursting test) with 2-inch rubberized hair pads placed along all surfaces of the instrument. Insert fillers between pads and container to ensure a snug fit.

b. EXCELSIOR. Cover painted surfaces of instrument with protective wrapping paper. Pack instrument in strong corrugated container (350 lb/sq. in. bursting test) with a layer of excelsior about six inches thick packed firmly against all surfaces of the instrument.

2-7. ENVIRONMENT. Conditions during storage and shipment should normally be limited as follows:

- a. Maximum altitude: 25,000 feet.
- b. Minimum temperature: -40°F (-40°C).
- c. Maximum temperature: +167°F (+75°C).

2-8. RACK INSTALLATION

2-9. The counter is ready for bench operation as shipped from the factory. Additional parts necessary for rack mounting are packaged with the instrument. To convert to rack installation, proceed as follows:

- a. Remove tilt stand.
- b. Remove feet (press the foot-release button, slide foot toward center of instrument, and lift off).
- c. Remove adhesive-backed trim strips at front end of sides.
- d. Attach filler strip along bottom edge of front panel using two screws on outer edges of filler strip. Omit the center screw.
- e. Attach flanges to front end of sides (larger corner notch toward bottom of instrument). Instrument is now ready to mount in standard rack.

CAUTION

Ambient temperature in rack during operation should not exceed 104°F (40°C). Be sure instrument position in rack permits adequate air circulation and that nearby equipment does not discharge hot air directly on the instrument.

2-10. POWER CONNECTION

2-11. LINE VOLTAGE. The counter may be operated from either 115 or 230 volt ($\pm 10\%$) power lines with frequencies from 50 to 60 Hz. A slide switch on the rear panel permits quick conversion for operation from either voltage. Insert a narrow-blade screwdriver in the switch slot and slide the switch to the right for 230 volt operation ("230" marking exposed) or to the left for 115 volt operation ("115" marking exposed). The counter is supplied with a 115 volt fuse; be sure to change this fuse for 230 volt operation, see Table 2-1.

CAUTION

Before plugging instrument to ac power line be sure slide switch is properly positioned.

Table 2-1. 115/230 Volt Conversion

| Line Voltage Conversion | 115 Volt | 230 Volt |
|-------------------------|---|--|
| Slide Switch | Left (115) | Right (230) |
| AC Line Fuse | 1.50 Ampere (Slow-Blow) (HP 2110-0304) | 0.8 Ampere (Slow)Blow) (HP 2110-0020) |

2-12. POWER CABLE. The counter is equipped with a detachable 3-wire power cable. Proceed as follows for installation.

- a. Connect plug (3-socket connector) to ac line jack at rear of instrument.
- b. Connect plug (2-blade with round grounding pin) to 3-wire (grounded) power outlet. Exposed portions of instrument are grounded through the round pin on the plug for safety; when only 2-blade outlet is available, use connector adapter (HP Part No. 1251-0048), then connect short wire from side of adapter to ground.

2-13. REMOTE PROGRAMMING, OPTION 002

2-14. The following paragraphs describe remote programming requirements for the counter with Option 002. See Paragraph 2-36 for Option 004 programming.

2-15. Front Panel Controls

2-16. The following front-panel controls are programmable:

- a. FUNCTION
- b. TIME BASE/MULTIPLIER
- c. DVM RANGE
- d. CHECK function
- e. SLOPE
- f. SAMPLE RATE and HOLD
- g. LEVEL controls
- h. Input Selector (5327B only)
- i. RESET

2-17. The following front-panel controls are NOT programmable:

- a. AC/DC
- b. SEP-COM
- c. FAST/NORM
- d. ATTEN

2-18. The trigger level controls may be remotely programmed or the front-panel LEVEL controls may be used. It is possible to program the LEVEL controls without programming the remainder of the front-panel controls. When remote programming is used, the LEVEL controls must be set to PRESET. Display time may be remotely programmed and/or the front-panel controls may be used.

2-19. Remote Programming Requirements

2-20. All lines may be controlled by TTL or DTL signals or contact closure to ground when the unit is being remotely programmed: except the trigger levels which are programmed by an analog level (if programmed) and the display time line (Hold), J10 pin 35, which should NOT be pulled up to +5 V by less than 200Ω while programming.

2-21. When the unit is NOT being programmed (Ext line high), all the lines should be left open or pulled up to +5 V by not less than $5k\Omega$, except the trigger levels, which should be open circuited.

2-22. Remote Programming Procedure

2-23. In order to remotely program the counter, the following must be done:

- a. Set FUNCTION switch to any function by START or STOP.
- b. Ground the EXT line at rear-panel REMOTE PROGRAM connector J10(17). Ground is available at J10(36).
- c. Select the desired function.
- d. Select the desired time base.
- e. Select the desired voltmeter range, if using DVM.
- f. Select the slope (+ or -) for CHANNEL A and B. This is accomplished by grounding the Slope line for (-) and leaving it open for (+). Slope A line is J10(28), Slope B line is J10(29).
- g. Select the trigger level for input signal.
- h. Adjust the display time.
- i. Manual reset is available by grounding (<.7 V) pin 34. Check is available by grounding pin 14.

2-24. Function Selection Programming

2-25. To program the desired function, ground (<.7 V) the proper line at J10 as follows:

| | |
|------------------|---------------|
| STOP | Pin 32 |
| START | Pins 1 and 32 |
| PERIOD AVERAGE | Pin 2 |
| T.I. AVG. | Pin 3 |
| T.I. A to B | Pin 4 |
| PERIOD | Pin 5 |
| FREQ. A | Pin 6 |
| FREQ. C DIRECT | Pin 7 |
| FREQ. C PRESCALE | Pins 7 and 18 |
| READ A LEVEL | Pin 8 |
| READ B LEVEL | Pin 9 |
| DVM | Pin 10 |

2-26. Programming READ A or READ B automatically selects a 10 ms time base and a 10 V DVM range. If a program line for time base must be used, select 10 ms only (pin 24). When switching between START and STOP, do not remove the ground from pin 32.

2-27. Time Base Selection Programming

2-28. To program the Time Base, ground (<.7 V) the proper line at J10 as follows:

| | |
|----------------------------|--------|
| .1 μ s/1 | Pin 19 |
| 1 μ s/10 | Pin 20 |
| 10 μ s/10 ² | Pin 21 |
| .1 ms/10 ³ | Pin 22 |
| 1 ms/10 ⁴ | Pin 23 |
| 10 ms/10 ⁵ | Pin 24 |
| .1 s/10 ⁶ | Pin 25 |
| 1 s/10 ⁷ | Pin 26 |
| 10 s/10 ⁸ | Pin 27 |

2-29. Voltmeter Programming

2-30. When using the DVM mode, the time base should be programmed to 10 ms, .1 s, or 1 s. To program the voltmeter range, ground (<.7 V) the proper line at J10 as follows:

| | |
|--------|--------|
| 10 V | Pin 11 |
| 100 V | Pin 12 |
| 1000 V | Pin 13 |

2-31. Trigger Level Programming

2-32. To program the trigger level, the LEVEL controls must be set to PRESET. Select the trigger level by placing a dc voltage between -3.0 and +3.0 volts on the level input line (Level A = J10 pin 30, Level B = J10 pin 31). This voltage, times the attenuator setting, is the trigger level. Preset is programmed by leaving the pin open on contact closure to ground. Grounding is preferable if noise exists on the remote programming line.

2-33. The front-panel LEVEL controls may be used manually if programming of the trigger levels is undesirable. Also, note the AC/DC and ATTEN switches on the front-panel must be set manually, as they are NOT programmable.

2-34. Sample Rate Adjustment

2-35. Adjusting the display time can be accomplished in several ways:

a. Manually adjust the display time by using the front-panel SAMPLE RATE controls.

b. Set the SAMPLE RATE control cw and the FAST/NORM/HOLD switch to NORM and connect a 1 megohm pot in series with a 1.5k ohm resistor from +5 V to pin 35. This will give a display time range of about 10 ms to 5 sec. If a shorter time is desired, set the FAST/NORM/HOLD switch to FAST, which gives a range of about 50 μ s to 10 ms.

c. Set the SAMPLE RATE control cw in FAST and hold the Hold line (pin 35) to ground for the desired display time. The display will continue for about 100 μ s after the ground is released.

2-36. REMOTE PROGRAMMING, OPTION 004

2-37. The following paragraphs describe remote programming requirements for the counter with Option 004.

2-38. Front Panel Controls

2-39. All front-panel controls are programmable, except the FAST/NORM/HOLD switch. The trigger level controls may be remotely programmed, or the front-panel LEVEL controls may be used. It is possible to program the front-panel LEVEL controls without programming the remainder of the front-panel controls. When remote programming the trigger levels, the LEVEL controls must be set to PRESET. The display time may be remotely programmed and/or the front-panel controls may be used.

2-40. Remote Programming Requirements

2-41. All lines may be controlled by TTL or DTL signals or contact closure to ground when the unit is being remotely programmed: except the trigger levels

which are programmed by an analog level (if programmed) and the display time line (Hold), J10 pin 16, which should NOT be pulled up to +5 V by less than 200Ω while programming.

2-42. When the unit is NOT being programmed (EXT line high), all the lines should be left open or pulled up to +5 V by not less than 5kΩ, except the trigger levels, which should be open circuited.

2-43. Remote Programming Procedure

2-44. In order to remotely program the counter, the following must be done:

- a. Set FUNCTION switch to any position but START or STOP.
- b. Ground the EXT line at rear-panel REMOTE PROGRAM connector J10(34). Ground is available at J10(1, 2, 15).
- c. Select the desired function.
- d. Select the desired time base.
- e. Select the voltmeter range, if using DVM.
- f. Select the signal conditioning.
- g. Select the trigger level for input signal.
- h. Adjust the display time.
- i. Manual reset is available by ground (<.7 V) pin 17. Check is available by grounding pin 37.

2-45. Function Selection Programming

2-46. To program the desired function, ground (<.7 V) the proper line at J10 as follows:

| | |
|----------------------------------|-------------|
| STOP | Pin 19 |
| START | Pins 46, 19 |
| PERIOD AVG A | Pin 47 |
| T.I. AVG. | Pin 45 |
| T.I. A to B | Pin 44 |
| PERIOD | Pin 43 |
| FREQ. A | Pin 42 |
| FREQ. C DIRECT | Pin 41 |
| FREQ. C PRESCALE (5327B only) | Pin 33 |
| READ A LEVEL | Pin 48 |
| READ B LEVEL | Pin 49 |
| DVM | Pin 50 |

2-47. Programming READ A or READ B automatically selects a 10 ms time base and a 10 V DVM range. If a program line for time base must be used, select 10 ms only (pin 24). When switching between START and STOP, do not remove the ground from pin 19.

2-48. Time Base Selection Programming

2-49. To program the time base, ground (<.7 V) the proper line at J10 as follows:

| | |
|-----------------------|--------|
| .1 μs/1 | Pin 28 |
| 1 μs/10 | Pin 29 |
| 10 μs/10 ² | Pin 27 |
| .1 ms/10 ³ | Pin 26 |
| 1 ms/10 ⁴ | Pin 25 |
| 10 ms/10 ⁵ | Pin 24 |
| .1 s/10 ⁶ | Pin 30 |
| 1 s/10 ⁷ | Pin 31 |
| 10 s/10 ⁸ | Pin 32 |

2-50. Voltmeter Programming

2-51. When using the DVM mode, the time base should be programmed to 10 ms, .1 s, or 1 s. To program the voltmeter range, ground (<.7 V) the proper line at J10 as follows:

| | |
|--------|--------|
| 10 V | Pin 40 |
| 100 V | Pin 39 |
| 1000 V | Pin 38 |

2-52. Signal Conditioning Programming

2-53. Program the input conditions by grounding the proper line as follows:

| CONDITION | LINE J10 | INPUT |
|--------------|----------|--|
| AC/DC A | 11 | AC=H DC=L |
| SLOPE A | 23 | + = H - = L |
| ATTENUATOR A | 13, 14 | 13 - H, 14 - H = X1 13 - L, 14 - H = X10 13 - H, 14 - L = X100 |
| AC/DC B | 7 | AC = H DC = L |
| SLOPE B | 22 | + = H - = L |
| ATTENUATOR B | 9, 10 | 9 - H, 10 - H = X1 9 - L, 10 - H = X10 9 - H, 10 - L = X100 |
| SEP/COM | 6 | COM = L, SEP = H |
| CHECK | 37 | CHK = L |

2-54. Trigger Level Programming

2-55. To program the trigger level, the LEVEL controls must be set to PRESET. Select the trigger level by placing a dc voltage between -3.0 and +3.0 volts on the level input line (Level A = J10 pin 21, Level B = J10 pin 20). This voltage, time the attenuator setting, is the trigger level. Preset is programmed by leaving the pin open or contact closure to ground. Grounding is preferable if noise exists on the remote programming line.

2-56. The front-panel LEVEL controls may be used manually if programming of the trigger levels is undesirable.

2-57. Sample Rate Adjustment

2-58. Adjusting the display time can be accomplished in several ways:

- a. Manually adjust the display time by using the front-panel SAMPLE RATE controls.
- b. Set the SAMPLE RATE control cw and the FAST/NORM/HOLD switch to NORM and connect a 1 megohm pot in series with a 1.5k ohm resistor from +5 V to pin 16. This will give a display time range of about 10 ms to 5 sec. If a shorter time is desired, set the FAST/NORM/HOLD switch to FAST, which gives a range of about 50 μ s to 10 ms.
- c. Set the SAMPLE RATE control cw in FAST and hold the Hold line (pin 16) to ground for the desired display time. The display will continue for about 100 μ s after the ground is released.

2-59. Sample Rate Disable-Computer Inhibit

2-60. The sample rate disable line is used only with the start command to initiate a totalizing measurement. The sample rate disable command disables auto reset and enables continuous plus and minus transfer commands.

2-61. The computer inhibit command (when Low) inhibits the main gate from opening. This command may be sent from a computer to prevent the counter from making any further measurements. It may also be used as an external sample rate signal, since the command would determine the time between measurements. Auto reset and print command signals are not disabled by computer inhibit.

NOTE

DO NOT ground or otherwise program any of the remote programming lines if the unit is not being operated remotely (EXT line HIGH = not programmed remotely). The line should be left open or, at worst, be pulled up to +5 V by a source impedance of not less than 5 k Ω .

2-62. BLANKING DEFEAT

2-63. This counter is designed to blank insignificant zeros (zeros to left of data). When blanking occurs, the digital recorder output for the blanked columns is BCD 15(HHHH). To use this instrument with a digital-analog converter, it is necessary to defeat the blanking feature by repositioning the two jumpers on the A9 Display board. Move the jumpers to position 2, as shown in A9 Component Locator (Section VIII). This connects pin 10 of A9U7 and A9U8 to +5 V. Also, lift the pin 1 lead of A8U2 and connect pin 1 to ground (available at U2 pin 7).

SECTION III

OPERATION

3-1. INTRODUCTION

3-2. Section III contains the operating information required to obtain the most effective performance from the instrument. This includes a general description of the operating modes, the function of all controls and indicators, a self-check procedure, and setup procedures for making basic measurements.

3-3. OPERATING MODES

3-4. The following paragraphs describe the operating modes of totalize, frequency, period, time interval, ratio, and DVM.

3-5. Totalize Mode

3-6. START and STOP positions on the FUNCTION selector allow manual opening and closing of the counter's main gate. When the switch is in the START position, the counter does not measure frequency, but instead, counts the number of times the signal passes through the trigger point. The input signal, connected to the front-panel CHANNEL A jack, is divided by the MULTIPLIER switch setting prior to counting. For example, when the MULTIPLIER switch is set to the 1 position, every pulse is counted. When the switch is set to 10^3 , the counter registers every thousandth pulse. When the FUNCTION switch is set to STOP, the counter stops totalizing and holds the displayed count until the RESET switch is pressed or the MULTIPLIER switch setting is changed. If the FUNCTION switch is again set to START before a reset is generated, the count continues to totalize from the previously displayed value. With the FUNCTION switch set to START, the scaled input signal is available at the rear-panel TIME BASE OUTPUT jack. The unit indicators and decimal points are blanked during the totalize mode. The C light is on (in START), indicating counting is taking place.

3-7. Frequency Modes

3-8. Three frequency modes are available in the 5327B: Frequency A, Frequency C prescaled, and Frequency C direct. (The prescale operation is not included in the 5326B.) In the Frequency A mode, the input signal connects to the high impedance CHANNEL A input jack and can be conditioned with the LEVEL, SLOPE, and ATTEN controls. In the Frequency C modes, the input signal is connected to the INPUT C jack (50 ohm), located on the rear panel. The signal is not conditioned by any front-panel controls but may be counted either directly (50 MHz) or

by prescaling (550 MHz), depending on the setting of the Input Selector switch. The INPUT C of the 5326B model counts the signal directly.

3-9. Period Modes

3-10. The period and period average modes allow single period measurements or multiple period averages to be made with input frequencies into CHANNEL A of up to 10 MHz. These modes are useful for making low frequency measurements where maximum resolution is desired.

3-11. For single period measurements, the MULTIPLIER switch scales the time base frequency and selects the placement of the decimal point and determines the resolution of the measurement.

3-12. The period average mode is used for increased resolution and reduced inaccuracies. For example, if 10^2 period averaging is selected, the counter will display the average of 100 periods with the proper decimal point. In this example, trigger error is 100 times less than in a single period measurement.

3-13. Time Interval Modes

3-14. Two modes of time interval measurements can be selected: time interval and time interval average. The time interval modes measure the time between points on a single waveform or between separate input signals; thus, pulse width and phase differences can be measured. Separate slope and level controls allow variable triggering levels on either the + or - slope. Marker A and B outputs are available at the rear panel to intensity-modulate an HP 180A oscilloscope. The markers indicate the trigger point of the counter's input circuits and provide a visual means of adjusting the trigger points to measure the time interval between any two points and are useful to about 100 kHz.

3-15. In time interval measurements, Channel A opens the main gate and Channel B closes the main gate. While the main gate is open, the internal oscillator, divided by the setting of the MULTIPLIER switch, is totalized by the counter and readout on the display. The less the division factor, the more pulses of the internal oscillator there are to count and, therefore, the better the resolution and accuracy.

3-16. With time interval average, the main gate is open for the number of time intervals selected by the MULTIPLIER switch. The internal oscillator pulses (not divided) are totalized only during the individual time intervals. Once Channel B triggers, there must

be a time lapse of 150 ns before Channel A can trigger. Averaging of time intervals results in increased resolutions and reduced inaccuracies. For a further explanation of theory, refer to Paragraph 4-45 and Figure 4-9.

3-17. Digital Voltmeter Measurements

3-18. Three modes of voltmeter measurements can be selected: READ A LEVEL, READ B LEVEL, and DVM. In the READ A and B modes, the digital voltmeter indicates the trigger level of the input amplifiers. The trigger level is equal to the DVM reading times the attenuator setting. In the DVM mode, dc levels up to 1000 V can be applied. Three ranges are provided: 10 V, 100 V, and 1000 V. The 10 V and 100 V ranges have 25% over-ranging with full accuracy. Maximum input voltage any any range is 1100 V. Resolution of the DVM with a 1-second integration time is 100 μ V on the 10 V range, 1 mV on the 100 V range, and 10 mV on the 1000 V range. Since there is no over-range indicator, ranges should be changed whenever a 12.5 V readout is obtained on the 10 V range or 125 V readout on the 100 V range.

3-19. The READ A LEVEL and READ B LEVEL modes automatically select a 10 ms time base and a 10 V range. In the DVM mode, the counter displays the proper decimal point and annunciator when the time base is 10 ms, .1 s, or 1 s. A longer integration time does not result in increased accuracy.

3-20. Ratio

3-21. The counter may be used to measure the ratio of two signals in either the frequency or period mode. By setting the rear-panel OSC INT-EXT switch to EXT, the counter will accept an external signal (F_{ext}) for use as the internal oscillator. This frequency should be 100 Hz to 10 MHz at 1 V rms minimum to 5 V peak maximum. A second signal (F_A), applied to either INPUT A or C jack, is used as the comparator signal.

The MULTIPLIER switch controls the resolution of the display. For a ratio of frequencies, the Ratio = $\frac{F_A}{F_{ext}} \cdot \frac{\text{DISPLAYED NUMBER}}{\text{MULTIPLIER SETTING}}$. For a ratio of periods (P), the Ratio =

$$\frac{P_A}{P_{ext}} = \frac{F_{ext}}{F_A} = \frac{\text{DISPLAYED NUMBER}}{\text{MULTIPLIER SETTING}}$$

3-22. Disregard the units and decimal point; also, ignore any zeros to the left of the most significant digit. It makes no difference which signal is higher in frequency, as long as the two frequencies are within the specifications of their respective channels.

3-23. MARKER OUTPUTS

3-24. Two marker output jacks are mounted on the counter's rear panel. These outputs provide a negative-going 2 μ s pulse (approx.) at DTL levels each time the input signal passes through the trigger point of Channel A or B. The pulses may be used to trigger other circuits or may be applied to the Z axis of an HP 180 Oscilloscope. When using the pulses to intensity modulate an oscilloscope, note that the actual trigger point is the leading edge of the pulse. The marker's pulse width determines the upper frequency limit of the input signal. The pulses overlap on the oscilloscope trace when the period of the signal is less than the pulse width.

3-25. HYSTERESIS

3-26. Each input channel has a small amount of hysteresis (about 100 mV). If the SLOPE switch is set to "+," the trigger pulse occurs at the top of the hysteresis "window." If the SLOPE switch is set to "-", the pulse occurs on the bottom line of the window. In other words, the signal must pass through the entire hysteresis window before a trigger pulse is generated.

3-27. When measuring frequency or period, the counter positions the hysteresis band around zero (see Figure 3-1). This assumes a waveform with no dc component and the counter's LEVEL control is in the PRESET position. The input amplifier then yields maximum input sensitivity for both positions of the SLOPE switch. The offset introduces no measurement error, since the trigger point is repetitive from cycle to cycle. The trigger point is point A for + slope and point B for - slope.

3-28. Time Interval Compensation

3-29. In the time interval modes and READ A/READ B modes only, both input amplifiers have an automatic compensation network that keeps the trigger level at the same potential when switching from positive to negative slope (see Figure 3-2). The window shifts upward to accomplish this. There is the possibility, therefore, that if Point A is near the top of the signal, switching to negative slope will place a portion of the window outside the signal (C). In such case, there would be no triggering. When switching from time interval to frequency, or vice versa, the trigger point shifts by half the hysteresis band.

Figure 3-1. Hysteresis Offset


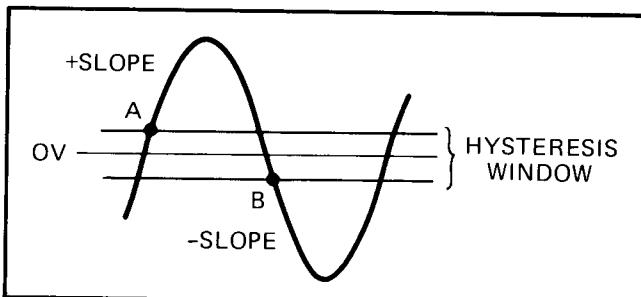


Figure 3-2. Hysteresis Compensation

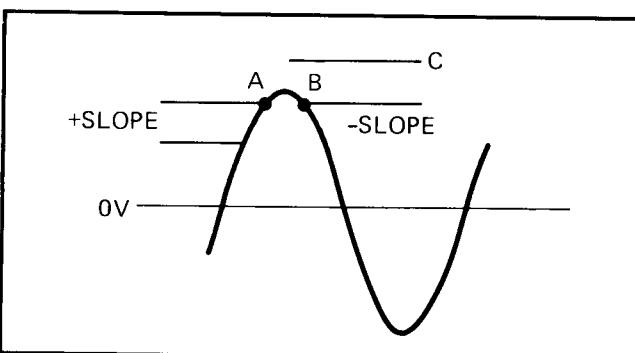

3-30. ACCURACY

3-31. FREQUENCY MEASUREMENTS. The basic counter accuracy is determined by two factors. One factor is the aging rate of the 10 MHz crystal standard in the time base (less than 3 parts in 10^7 per month). A second factor is the inherent error of ± 1 count of the display's least significant digit, which is present in all electronic counters. This error is due to phasing between the timing pulse that operates the electronic gate and the pulses that pass through the gate to the counting assembly. The chart in Figure 3-3 shows the error possible for frequency and period measurements.

3-32. The formula for determining the actual frequency is given as follows:

$$\text{error} = \pm \left(\frac{1}{f_1 \times \text{gate length (sec)}} \right) \pm E$$

The expression

$$\frac{1}{f_1 \times \text{gate length (sec)}}$$

equals the ± 1 count ambiguity, where f_1 equals measured frequency (Hz) and gate length equals the selected gate time in seconds. E equals the time base accuracy (monthly drift rate of the individual time base times the number of months since calibration, frequency change due to ambient temperature change, absolute off-set at standardization, and line voltage effects).

3-33 An example of frequency error calculation is as follows:

$$f_1 = 3 \text{ MHz } (3 \times 10^6 \text{ Hz})$$

$$\text{gate length} = .1 \text{ sec } (1 \times 10^{-1})$$

$$E = 3 \text{ parts in } 10^7 \text{ per month times 2 months} \\ = 6 \text{ parts in } 10^7$$

$$\text{error} = \frac{1}{(3 \times 10^6) (1 \times 10^{-1})} \pm \frac{6}{10^7} \\ = 3.3 \times 10^{-6} \pm 6 \times 10^{-7} = 3.9 \times 10^{-6} \\ \text{or 3.9 parts in } 10^6$$

3-34. PERIOD MEASUREMENTS. There are three factors contributing to the accuracy of period measurements:

- The aging rate of the 10 MHz crystal standard.
- The ± 1 count ambiguity.
- The trigger error for one period.

Assuming a signal-to-noise ratio of 40 dB, the trigger error is less than 0.3% at rate sensitivity. A general formula for finding the percentage error to be expected under various conditions is as follows:

$$A = 100 \left(\pm \frac{f_2}{nf_1} \pm \frac{e}{n} \pm E \right)$$

A = Accuracy in percent

f_1 = Time base frequency counted


f_2 = Frequency of input signal (Hz)

n = Number of periods averaged

e = 3×10^{-3} (trigger error for one period,
40 dB S/N at rated sensitivity.)

E = time base accuracy (monthly drift rate of individual time base times the number of months since calibration, absolute value of off-set at standardization, frequency change due to ambient temperature change, and line voltage effects). A plot of the above formula is shown in Figure 3-3.


Figure 3-3. Measurement Accuracy

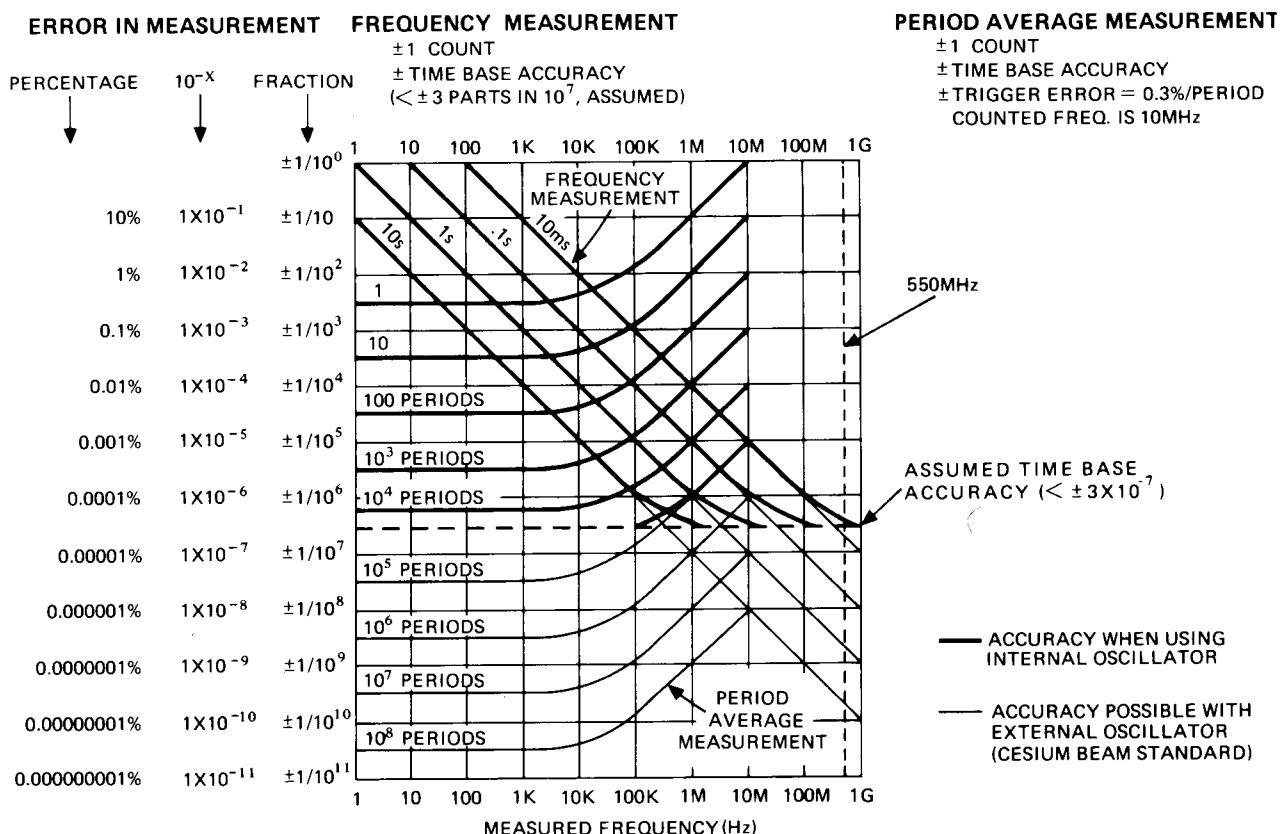

NOTE

FOR 550MHZ INPUT ($\div 10$) USE LINE TO RIGHT OF ACTUAL GATE LENGTH TO DETERMINE ACCURACY OF MEASUREMENT, SINCE ± 1 COUNT ERROR REPRESENTS ± 10 COUNTS OF INPUT SIGNAL WHEN PRESCALING BY 10.

Figure 3-4. Front Panel Controls and Indicators

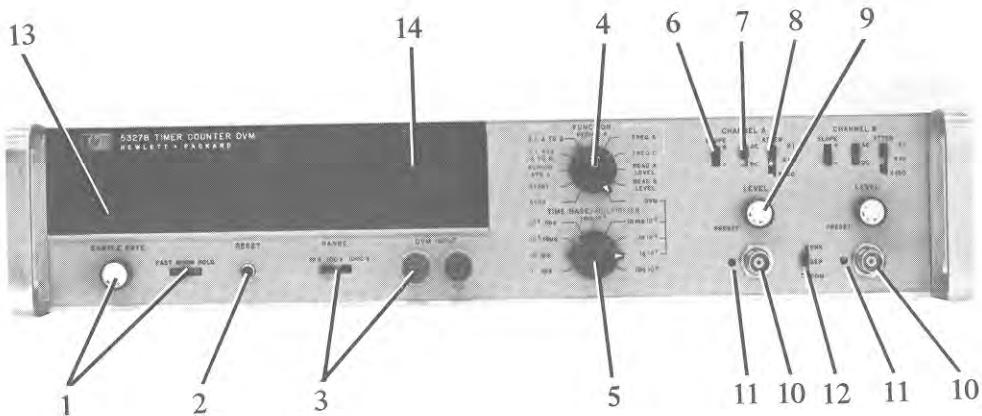


1. SAMPLE RATE control. Applies primary power. Works in conjunction with FAST/NORM/HOLD switch to control interval between measurements.
 - a. FAST - Varies display time from <100 μ s to >20 ms. STORAGE switch (rear panel) must be ON to use this mode.
 - b. NORM - Varies display time from < 20 ms to >5 seconds.
 - c. HOLD - Holds display indefinitely.
2. RESET Switch. Resets display and internal count to zero and starts new measurement.
3. RANGE - DVM INPUT. Input jack and range switch for dc integrating digital voltmeter. Maximum input level is 1100 volts.
4. FUNCTION selector. Selects mode of operation. Blue lettering matches corresponding blue lettering on TIME BASE/MULTIPLIER switch.
 - a. STOP, START - Used for totalize mode to manually open and close counter's main gate and to turn scaled output on and off. Frequency input range is 0 to 10 MHz.
 - b. PERIOD AVG A - Sets counter to measure period of signal applied to CHANNEL A input. Use MULTIPLIER switch to select number of periods to be averaged. Input frequency range is 0 to 10 MHz.
 - c. T.I. AVG A to B - Sets counter to measure average time interval, A to B. Channel A starts interval and Channel B stops the interval. Use MULTIPLIER selector to set number of time intervals to be averaged. Time interval input range is 150 ps to 10 sec; there must be a 150 ns deadtime between intervals.
 - d. T.I. A to B - Sets counter to measure time interval A to B. Channel A starts measurement and Channel B stops the measurement. T.I. input range is 0.1 μ s to 10⁸ sec. The internal time base frequency is divided by the setting of the MULTIPLIER switch and totalized for subsequent display. The more cycles of the oscillator frequency that are counted during A to B time, the better the resolution. There must be 150 ns deadtime between Channel B and Channel A trigger points.
 - e. PERIOD A - Sets counter to measure a single period of the signal applied to CHANNEL A input. Use MULTIPLIER switch to set counted internal oscillator frequency and therefore the desire resolution. Frequency input range is 0 to 10 MHz.
 - f. FREQ A - Sets counter to measure frequency applied to CHANNEL A input. Use TIME BASE switch to set gate time and resolution. Frequency input range is 0 to 50 MHz.

Figure 3-4. Front Panel Controls and Indicators (Continued)

- g. FREQ C - Similar to FREQ A, except sets counter to measure frequency applied to INPUT C jack. 50-ohm input impedance. 3.5 V rms/5 V peak maximum input. Frequency range is 0 to 550 MHz prescaled or 0 to 50 kHz direct. The the 5326B, the frequency range is 0 to 50 MHz. See INPUT C.
- h. READ A LEVEL - Sets counter to measure trigger voltage of LEVEL A control. Trigger level = DVM readout times ATTEN setting. See TIME BASE/MULTIPLIER switch.
- i. READ B LEVEL - Same as READ A LEVEL for LEVEL B control.
- j. DVM - Sets counter to measure dc voltage applied to DVM INPUT jack. Use TIME BASE/MULTIPLIER switch to select integration time and resolution.
- 5. TIME BASE/MULTIPLIER switch. The function of the switch changes with each mode of operation:
 - a. TOTALIZE - Determines scaling factor for input signal prior to counting.
 - b. PERIOD AVG A - Selects number of periods to be averaged.
 - c. T.I. AVG A to B - Selects number of time intervals to be averaged.
 - d. T.I. A to B - Selects scaling factor for internal oscillator signal.
 - e. PERIOD A - Selects scaling factor for internal oscillator signal.
 - f. FREQ A and FREQ C - Sets gate time.
 - g. READ A LEVEL and READ B LEVEL
Not operative. 10 ms integration time is automatically selected.
 - h. DVM - Selects DVM integrating time. Decimal point and measurement units are displayed for 10 ms, .1 s, and 1 s settings only.
- 6. SLOPE switch. Permits triggering on positive or negative slope of input signal.
- 7. AC-DC switch. Selects direct or capacitor coupling for input signal. Minimum input frequency on AC setting is 20 Hz.
- 8. ATTEN switch. Selects attenuation for input signal. Used in conjunction with LEVEL control to set input triggering point. Maximum input: 250 V rms on all ranges except 25 V rms on X1 range above 50 kHz. Recommended input is 0.1 V rms to 2 V rms times ATTEN setting.
- 9. LEVEL control. Used in conjunction with ATTEN switch to determine voltage at which triggering occurs. With X1 attenuator setting, level is variable ± 3 V; on X10, ± 30 V; and X100, ± 300 V.
- 10. Input jacks. Input jacks to Channels A and B. Input impedance is $1 M\Omega$ shunted by less than 25 pF. By using a 10 to 1 divider probe, input impedance can be increased to $10 M\Omega$.
- 11. Trigger lamps adjacent to input jacks indicate when amplifier triggering occurs.
- 12. CHK-SEP-COM-switch. (Check-separate-common)
 - a. CHK - Connects internal 10 MHz time base to Channels A and B circuitry to check that unit is functioning. No indication in T.I. or T.I. Avg; ignore displayed digits in period average.
 - b. COM-SEP - Connects A and B inputs in parallel when set to COM position. When applying two separate inputs, set switch to SEP. When set to COM, input impedance is $500 k\Omega$ shunted with less than 50 pF.
- 13. C (count) light. Lights when counter's main gate is open. For short-duration gate times, the annunciator circuits include a 50 ms one-shot MV to allow a visible flash of the C light.
- 14. * (asterisk). Indicates that proper units are not displayed with combination of function/time base selection. To interpret display, add a zero to the right of least significant digit displayed on the counter.

Figure 3-5. Rear Panel Controls and Connectors

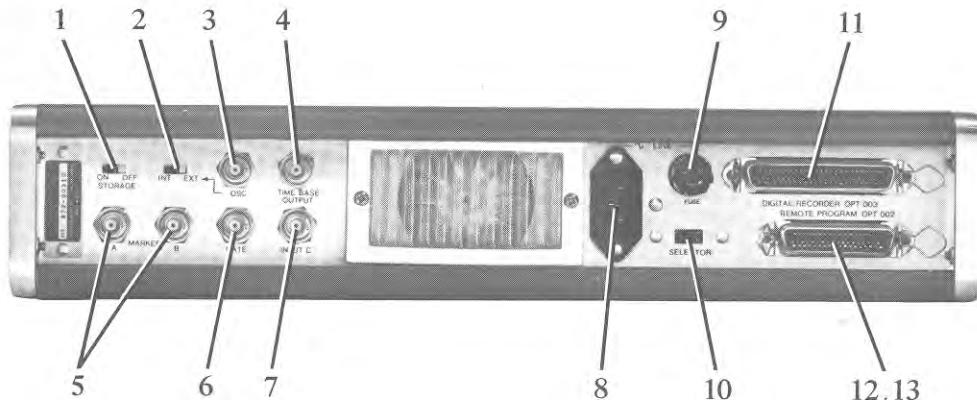

1. STORAGE switch. When set to ON, provides display storage while new measurement is being made. In OFF position, allows continuous display of counting process.
2. OSC INT-EXT switch. In INT position, selects normal counter operation using internal time base. In EXT position, permits use of external time base.
3. OSC jack. With INT-EXT switch set to INT, provides 10 MHz, >3 V p-p output (no load), 50Ω series impedance. With INT-EXT switch set to EXT, allows external time base input of 100 Hz to 10 MHz at 1 V rms (5 V peak maximum).
4. TIME BASE OUTPUT jack. Provides negative going >+3 V to 0 V pulses (open circuit), >50 ns wide. In START, frequency output is Channel A input frequency divided by MULTIPLIER setting.
5. MARKER A and B jacks. Provides marker outputs to intensity modulate HP 180 Oscilloscopes. Markers begin coincident with channel trigger points.
6. GATE jack. Provides >2.4 V output (open circuit) for external use. Has 50Ω series resistance. Output is low when counter main gate is open and high when gate is closed.
7. INPUT C (5326B). 50-ohm input for 0 to 50 MHz frequency measurements. Has dc coupling and sensitivity of 5 mV rms sine wave. Trigger level is zero volts. Maximum input is ±5 volts referenced to ground (DO NOT EXCEED).
8. INPUT C (5327B). 50-ohm input for 0 to 550 MHz frequency measurements. Has dc coupling (selector switch in PRESCALE position) and sensitivity of 25 mV rms sine wave. Maximum input is 3.5 volts referenced to ground (DO NOT EXCEED). Trigger level is zero volts. The input is dc coupled with the INPUT C switch in DIRECT position. The frequency range is 0 to 50 MHz with a sensitivity of 15 mV.
9. AC LINE. IEC type with offset pin connected to chassis.
10. AC LINE FUSE. 1.50 A at 115 V, 800 mA at 230 V.
11. 115/230 volt switch. Insert narrow screwdriver and slide switch to show desired voltage.
12. DIGITAL RECORDER connector (Option 003 only). 50-pin connector for digital recorder interconnection.
13. REMOTE PROGRAM connector (Option 002 only). 36-pin connector to allow remote control of counter modes and functions.
14. REMOTE PROGRAM connector (Option 004 only). 50-pin connector to allow remote control of counter modes and functions.


Table 3-1. Self-Check

| Time Interval Average Self Check | | |
|--|--------------|-------------|
| MULTIPLIER | DISPLAY | ANNUNCIATOR |
| 1 | .0 | μs |
| 10 | .00 | μs |
| 10^2 | .000 | μs |
| 10^3 | .0 | ns |
| 10^4 | .00 | ns |
| 10^5 | .000 | ns |
| 10^6 | .0000 | ns |
| 10^7 | .00000 | ns |
| 10^8 | .000000 | ns |
| 11. Set FUNCTION to T. I. A to B. Rotate MULTIPLIER switch as shown in the following table (Step 12) and check for proper display. | | |
| 12. Set FUNCTION to PERIOD A. Set MULTIPLIER switch as shown in the following table and check for proper display. | | |
| Time Interval and Period Self-Check | | |
| MULTIPLIER | DISPLAY | ANNUNCIATOR |
| 1* | .1 ± 1 count | μs |
| 10 | 0 | μs |
| 10^2 | .00 | ms |
| 10^3 | .0 | ms |
| 10^4 | 0 | ms |
| 10^5 | .00 | s |
| 10^6 | .0 | s |
| 10^7 | 0 | s |
| 10^8 | 0 | * |
| *NOTE: For Time Interval Self-Check, display is .0 μs for MULTIPLIER setting of 1. | | |
| 13. Set FUNCTION to FREQ A. Set TIME BASE switch as shown in table below and check for proper display. | | |
| Frequency A Self Check | | |
| TIME BASE | DISPLAY | ANNUNCIATOR |
| .1 μs | .01 | ±1 count |
| 1 μs | 10 | ±1 count |
| 10 μs | 10.0 | ±1 count |
| .1 ms | 10.00 | ±1 count |
| 1 ms | 10.000 | ±1 count |
| 10 ms | 10000.0 | ±1 count |
| .1 s | 10000.00 | ±1 count |
| 1 s | 0000.000 | ±1 count |
| | 10000.000 | ±1 count |
| 10 s | 000.0000 | ±1 count |
| | 0000.0000 | ±1 count |
| Digits noted are for reference, actual display may differ by several counts. | | |
| 10. Set FUNCTION to T.I. AVG A to B. Set MULTIPLIER as shown in table below and check for proper display. | | |

Table 3-1. Self-Check (Continued)

| | | |
|-----|--|---|
| 14. | Set FUNCTION to READ A LEVEL. Rotate CHANNEL A LEVEL to PRESET. Display should read $\pm .00$ V ± 1 count. | DVM Self-Check (with DVM Input Shorted) |
| | | TIME BASE/ MULTIPLIER |
| | | 10 ms |
| | | .1s |
| | | 1s |
| 15. | Rotate CHANNEL A LEVEL control clockwise and check that display varies from at least -3.0 to +3.0 V. | 10 V RANGE |
| | | .00 V ± 1 count |
| | | .000 V ± 1 count |
| | | .0000 V ± 1 count |
| 16. | Repeat steps 14 and 15 for READ B LEVEL. | 100 V RANGE |
| | | .0 V ± 1 count |
| | | .00 V ± 1 count |
| | | .000 V ± 10 counts |
| 17. | Set FUNCTION to DVM. Set TIME BASE and RANGE switch as shown in Table below and check for proper readout. Short DVM input terminals. | 1000 V RANGE |
| | | 0 V ± 1 count |
| | | .0 V ± 1 count |
| | | .00V ± 10 counts |

Figure 3-6. Frequency A Measurements

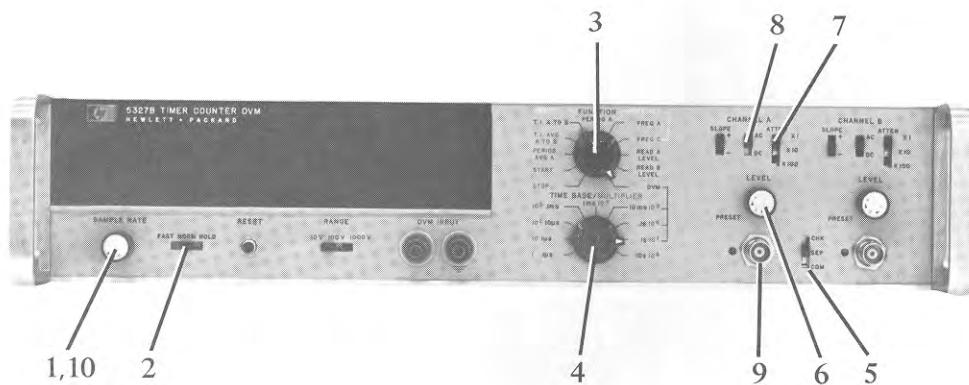


1. Set SAMPLE RATE control slightly clockwise out of OFF.
2. Set FAST/NORM/HOLD switch to NORM.
3. Set FUNCTION switch to FREQ A.
4. Set TIME BASE switch for desired gate time.
5. Set CHK-SEP-COM switch to SEP.
6. Set CHANNEL A LEVEL control to desired trigger level or to PRESET to trigger at zero volts.
7. Set ATTEN switch to match input signal amplitude.
8. Set AC-DC switch to AC or DC.
9. Connect input signal (0 to 50 MHz) to CHANNEL A input jack.
10. Adjust SAMPLE RATE control for convenient measurement interval.

NOTE

When the input signal is removed from CHANNEL A or the signal level is insufficient to trigger Channel A, the count light (C) will not cycle. This is normal for this counter and does not indicate a malfunction.

Figure 3-7. Frequency C Measurements

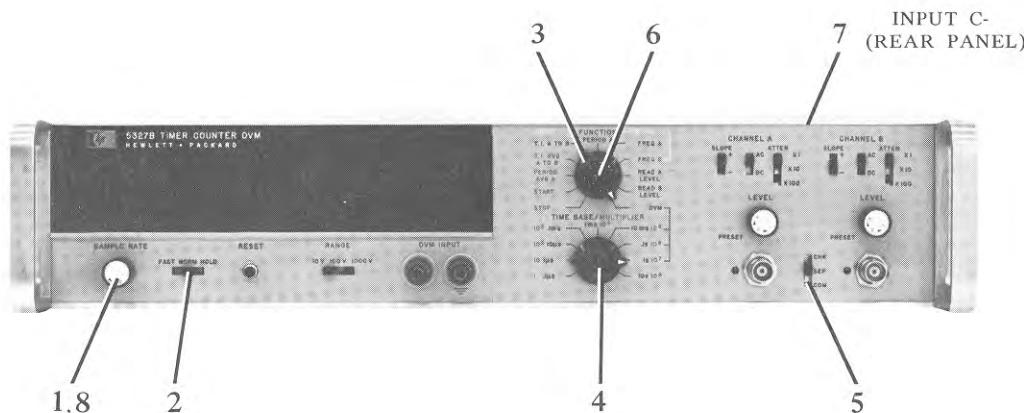

1. Set SAMPLE RATE control slightly clockwise out of OFF.
2. Set FAST/NORM/HOLD switch to NORM.
3. Set FUNCTION switch to FREQ C.
4. Set TIME BASE switch for desired resolution.
5. Set CHK-SEP-COM switch to SEP.
6. Set Input Selector switch to DIRECT.
7. Connect input signal (0 to 50 MHz, ± 5 V peak maximum, 15 mV rms minimum) to INPUT C connector (rear panel). Input impedance is 50Ω nominal.

8. Adjust SAMPLE RATE control for convenient measurement interval.


NOTE

For frequencies from 0 to 550 MHz with minimum levels of 25 mV rms, connect signal to INPUT C jack and place input selector switch in PRESCALE position.

CAUTION

Damage will occur if Input C voltage specifications are exceeded.

Figure 3-8. Period Measurements

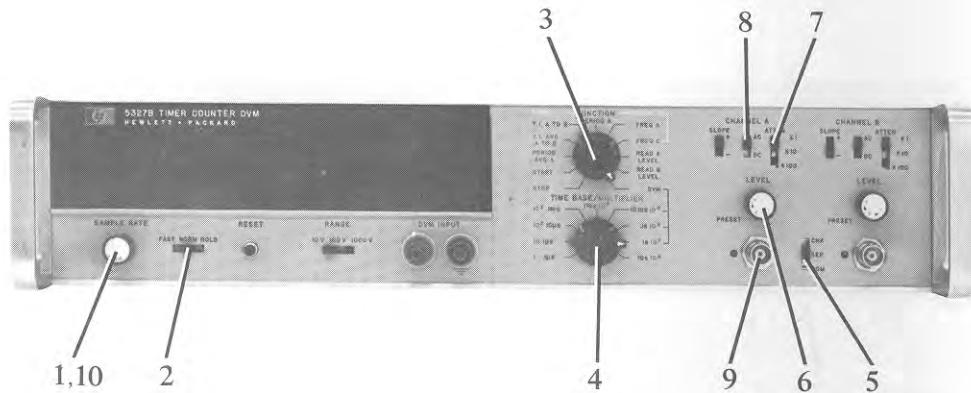


Period

1. Set SAMPLE RATE control slightly clockwise out of OFF.
2. Set FAST/NORM/HOLD switch to NORM.
3. Set FUNCTION switch to PERIOD A.
4. Set MULTIPLIER switch for desired resolution.
5. Set CHK-SEP-COM switch to SEP.
6. Set CHANNEL A LEVEL control to desired trigger level or to PRESET to trigger at zero volts.
7. Set ATTEN switch to match input signal's amplitude.
8. Set AC-DC switch to AC or DC.
9. Connect input signal (0 to 10 MHz) to CHANNEL A input jack.
10. Adjust SAMPLE RATE control for a convenient interval between measurements.

Period Average


1. Set SAMPLE RATE control slightly clockwise out of OFF.
2. Set FAST/NORM/HOLD switch to NORM.
3. Set FUNCTION switch to PERIOD AVG A.
4. Set MULTIPLIER switch to number of periods to be averaged.
5. Set CHK-SEP-COM switch to SEP.
6. Set CHANNEL A LEVEL control to desired trigger level or to PRESET to trigger at zero volts.
7. Set ATTEN switch to match input signal amplitude.
8. Set AC-DC switch to AC or DC.
9. Connect input signal (0 to 10 MHz) to CHANNEL A input jack.
10. Adjust SAMPLE RATE control for convenient measurement interval.

Figure 3-9. Ratio Measurements

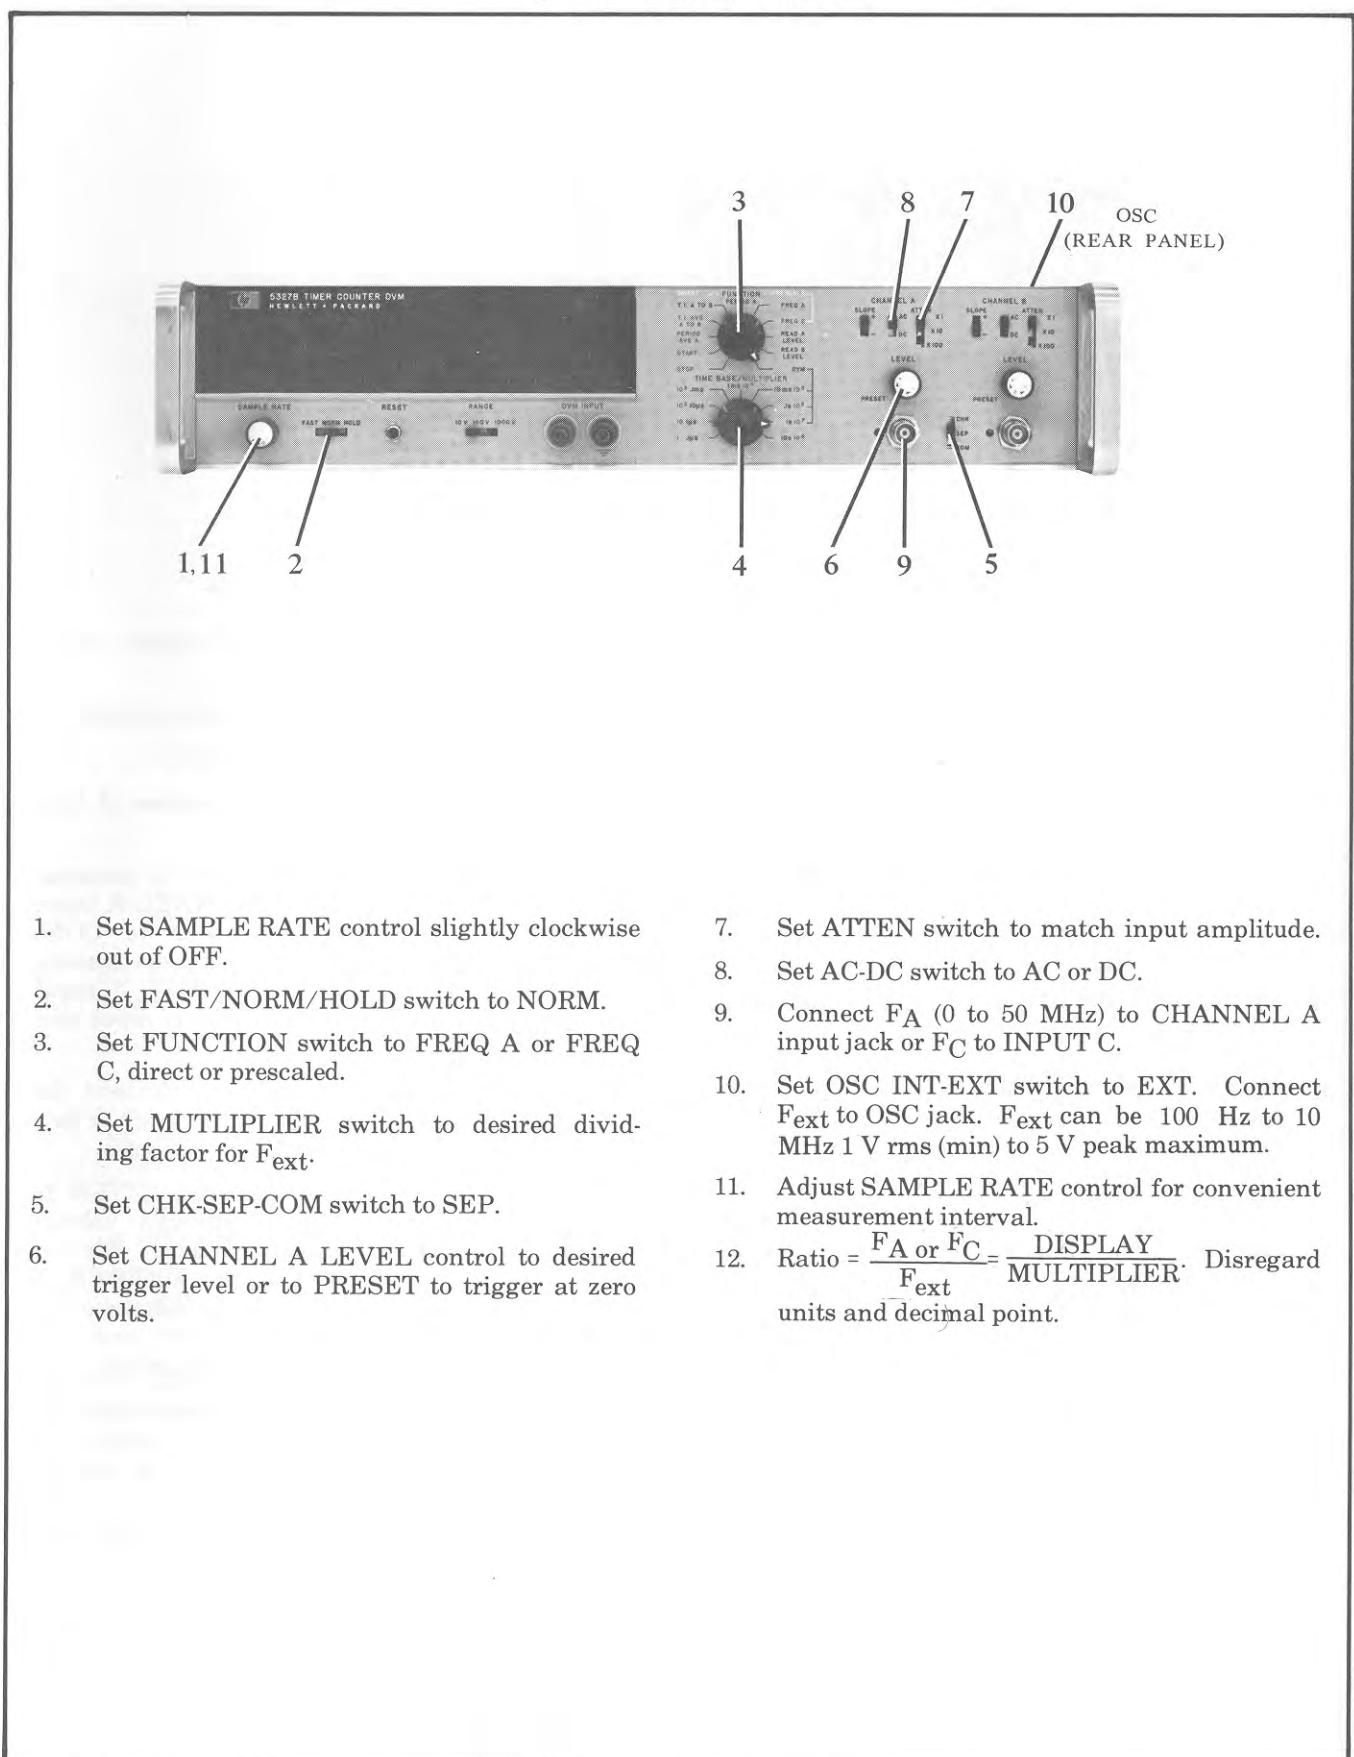

1. Set SAMPLE RATE control slightly clockwise out of OFF.
2. Set FAST/NORM/HOLD switch to NORM.
3. Set FUNCTION switch to FREQ A or FREQ C, direct or prescaled.
4. Set MULTIPLIER switch to desired dividing factor for F_{ext} .
5. Set CHK-SEP-COM switch to SEP.
6. Set CHANNEL A LEVEL control to desired trigger level or to PRESET to trigger at zero volts.
7. Set ATTEN switch to match input amplitude.
8. Set AC-DC switch to AC or DC.
9. Connect F_A (0 to 50 MHz) to CHANNEL A input jack or F_C to INPUT C.
10. Set OSC INT-EXT switch to EXT. Connect F_{ext} to OSC jack. F_{ext} can be 100 Hz to 10 MHz 1 V rms (min) to 5 V peak maximum.
11. Adjust SAMPLE RATE control for convenient measurement interval.
12. Ratio = $\frac{F_A \text{ or } F_C}{F_{ext}} = \frac{\text{DISPLAY}}{\text{MULTIPLIER}}$. Disregard units and decimal point.

Figure 3-10. Time Interval Measurements

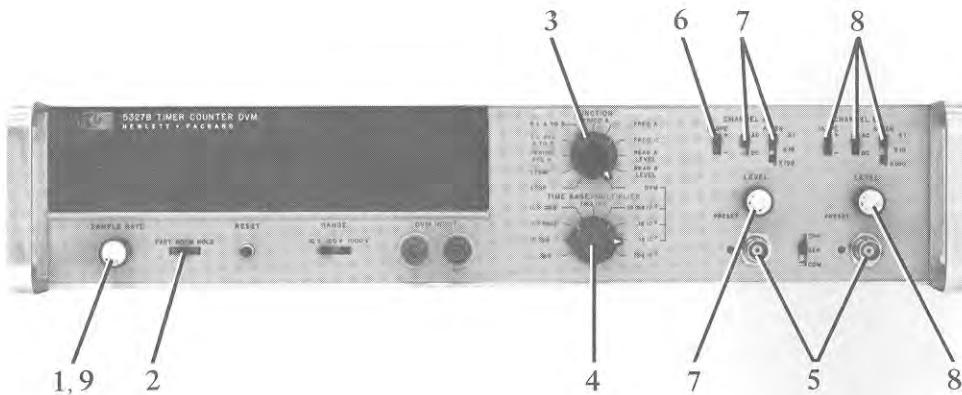

Single Time Interval

- Set SAMPLE RATE control slightly clockwise out of OFF.
- Set FAST/NORM/HOLD switch to NORM.
- Set FUNCTION switch to T.I. A to B.
- Set MULTIPLIER switch for desired resolution.
- If start-stop signals are from a common source, connect signal to CHANNEL A input and set CHK-SEP-COM switch to COM. If start-stop signals are from separate sources, connect start signal to CHANNEL A input and stop signal to CHANNEL B input and CHK-SEP-COM switch to SEP.
- Set CHANNEL A SLOPE switch to + for triggering on positive slope of signal or to - for triggering on negative slope of signal.
- Set CHANNEL A LEVEL and ATTEN switches to start measurement at desired voltage level. Select AC or DC coupling. For frequencies below 100 kHz, use MARKER A OUTPUT jack on rear panel to display starting point on an oscilloscope.
- Set CHANNEL B, AC-DC, LEVEL, SLOPE, and ATTEN controls to stop measurement at desired level. For frequencies below 100 kHz, use MARKER B OUTPUT to display stopping point on oscilloscope.
- Adjust SAMPLE RATE control for convenient measurement interval.

NOTE

There must be at least 150 ns between the STOP pulse (Channel B trigger) and the next START pulse (Channel A trigger).


Time Interval Average

- Set SAMPLE RATE control slightly clockwise out of OFF.
- Set FAST/NORM/HOLD switch to NORM.
- Set FUNCTION switch T.I. AVG A.
- Set MULTIPLIER switch to number of time intervals to be averaged.
- If start-stop signals are from a common source, connect signal to CHANNEL A input and set CHK-SEP-COM switch to COM. If start-stop signals are from separate sources, connect start signal to CHANNEL A input and stop signal to CHANNEL B input and CHK-SEP-COM switch to SEP.
- Set CHANNEL A SLOPE switch to + for triggering on positive slope of signal or to - for triggering on negative slope of signal.
- Set CHANNEL A, LEVEL, and ATTEN to start the measurement at desired voltage level. Select AC or DC coupling. For frequencies below 100 kHz, use MARKER A OUTPUT jack on rear panel to display starting point on oscilloscope.
- Set CHANNEL B, AC-DC, LEVEL, SLOPE, and ATTEN to stop the measurement at desired level. For frequencies below 100 kHz, use MARKER B OUTPUT to display stopping point on oscilloscope.
- Adjust SAMPLE RATE control for convenient measurement interval.

NOTE

STOP to START delay must be ≥ 150 ns and input range should not be 10 MHz $\times \frac{M}{N}$ (M and N integers).

Figure 3-11. Digital Voltmeter and Read A Level, Read B Level Measurements

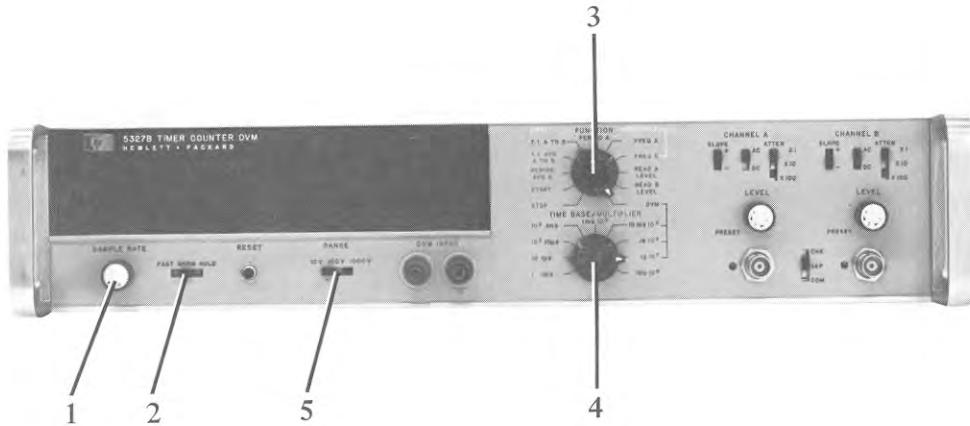


DVM

1. Set SAMPLE RATE control slightly clockwise out of OFF.
2. Set FAST/NORM/HOLD switch to NORM.
3. Set FUNCTION switch to DVM.
4. Set TIME BASE to 10 ms, .1 s, or 1 s.
(1 s setting gives maximum resolution.)
5. Set RANGE switch to match input voltage.
Do not exceed 1100 V peak input.
6. If DVM display is 12.5 V on the 10 V scale or 125 V on the 100 V scale, over-ranging has occurred and the next highest range setting should be used.

Read A and Read B Levels

1. Set SAMPLE RATE control slightly clockwise out of OFF.
2. Set FAST/NORM/HOLD switch to NORM.
3. Set FUNCTION switch to READ A LEVEL or READ B LEVEL.
4. TIME BASE is automatically selected for 10 ms integration time.
5. Trigger level is equal to DVM reading X ATTEN setting. To set trigger level, adjust LEVEL control until DVM indicates desired level.

Figure 3-12. Totalize Measurements

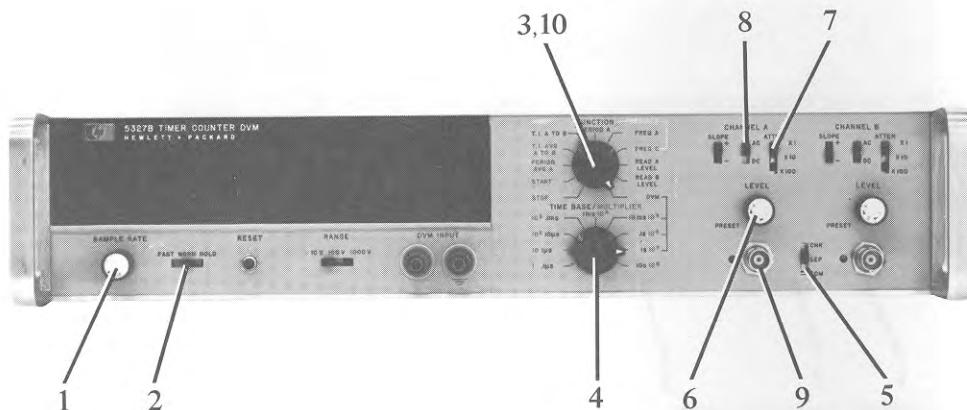

1. Set SAMPLE RATE control slightly clockwise out of OFF.
2. Set FAST/NORM/HOLD switch to NORM.
3. Set FUNCTION switch to STOP.
4. Set MULTIPLIER switch to input signal scaling factor.
5. Set CHK-SEP-COM switch to SEP.
6. Set LEVEL control to desired trigger level or to PRESET for triggering at zero volts.
7. Set ATTEN switch to match input signal's amplitude.
8. Set AC-DC switch to AC or DC.
9. Connect input signal (0 to 10 MHz) to CHANNEL A input jack.
10. Set FUNCTION switch to START.

NOTE

A scaled output of the input signal is available at the rear-panel TIME BASE OUTPUT BNC. The division is determined by the MULTIPLIER switch setting.

SECTION IV

THEORY OF OPERATION

4-1. INTRODUCTION

4-2. This section discusses the general operating principles of the instrument. Assembly description is covered in more detail in Section VIII, opposite each schematic diagram. Logic fundamentals are explained in Paragraphs 4-3 through 4-16.

4-3. LOGIC SYMBOLS

4-4. Two states exist in the binary system, 1 and 0. In positive logic, the 1 state is more positive than the 0 state. High (H) and low (L) are used to represent the 1 and 0 levels. *HIGH ALWAYS REPRESENTS THE MORE POSITIVE LEVEL, WHETHER IT BE POSITIVE OR NEGATIVE LOGIC.*











4-5. A circle at the input line of a logic symbol indicates that a low activates the function. Figure 4-1B shows that a low at both inputs produces

a high output. A circle at the output line of a logic symbol indicates a low when activated, as shown in Figure 4-1C.

4-6. Gating and Logic

4-7. Figure 4-1A represents a basic AND gate. The output is high if all inputs are high. An AND gate may have two or more inputs. Figure 4-1D represents a basic OR gate. The OR gate output is high if one or more of its inputs is high. An OR gate may have two or more inputs. An OR gate with a circle on the output is called a NOR gate. An AND gate with a circle on the output is called a NAND gate. An EXCLUSIVE NOR (Figure 4-1E) has two inputs; and the output will be low if one, but not both, of the inputs is high. The output will be high if the inputs are both low or both high.

     Figure 4-1. Gate Symbols and Logic Comparisons
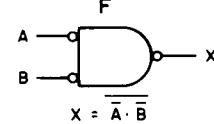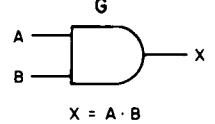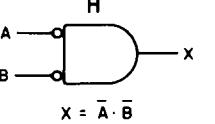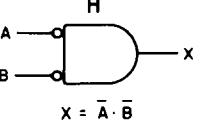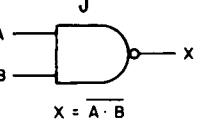
| A | B | C | D | E | | | | | | | |
|--|--|---|---|--|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| AND | INVERTED INPUT | INVERTED OUTPUT | OR | EXCLUSIVE NOR | | | | | | | |
|  |  |  |  |  | | | | | | | |
|  $X = \bar{A} \cdot \bar{B}$ |  $X = A \cdot B$ |  $X = \bar{A} \cdot \bar{B}$ |  $X = A + B$ |  $X = \bar{A} + \bar{B}$ | | | | | | | |
| A H H | B H L | X H H | A H H | B H L | X H L | A H H | B H L | X H L | A H H | B H H | X L H |
| L H L | H L L | H L L | L H L | L H L | L H L | L H H | L H L | L H L | L H L | L H H | H H H |
| L L L | L L L | L L L | L L L | L L L | L L L | H H H | L L L | L L L | L L L | L L L | H H H |

4-8. INTEGRATED CIRCUIT OPERATION

4-9. JK Master-Slave Flip-Flop

4-10. The JK master-slave flip-flop is basically a bistable multivibrator. With simultaneous high inputs to J and K, before the clock pulse, Q and \bar{Q} will change states after the clock pulse. Refer to Figure 4-2 and Table 4-1. This circuit triggers on the trailing edge (negative transition) of the clock pulse. The set (S) and reset (R) inputs operate as follows: when a low is applied to set input, \bar{Q} goes low and Q goes high; when a low is applied to reset input, Q goes low and \bar{Q} goes high. Set or reset can override all other inputs at any time.

Figure 4-2. JK Flip-Flop

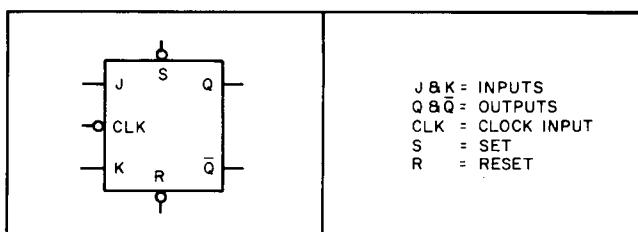



Table 4-1. Truth Table

| t_n | | $t_n + 1$ | | t_n = Before clock pulse |
|-------|---|-------------|-------------|---|
| J | K | Q | \bar{Q} | $t_n + 1$ = After clock pulse |
| L | L | Q_n | \bar{Q}_n | If J = L and K = L, then Q and \bar{Q} will not change from what they were before the clock pulse. |
| H | L | H | L | If J = H and K = L, then Q will be H and \bar{Q} will be L after the clock pulse. |
| L | H | L | H | If J = L and K = H, then Q will be L and \bar{Q} will be H after a clock pulse. |
| H | H | \bar{Q}_n | Q_n | If J = H and K = H before the clock pulse, then after the clock pulse Q and \bar{Q} will change states. |

4-11. Time-Base Decade

4-12. In the reset state, Carry Output (CO) (see Figure 4-3) is high and, if the Gate input (G) is low, Gated Output (GO) is low. Ten pulses on the Gate input produce a negative transition at the Gated Output. If the G input is high, GO is open-circuited regardless of the count. The Carry Output gives a positive transition after 10 pulses.


Figure 4-3. Time-Base Decade 1820-0412

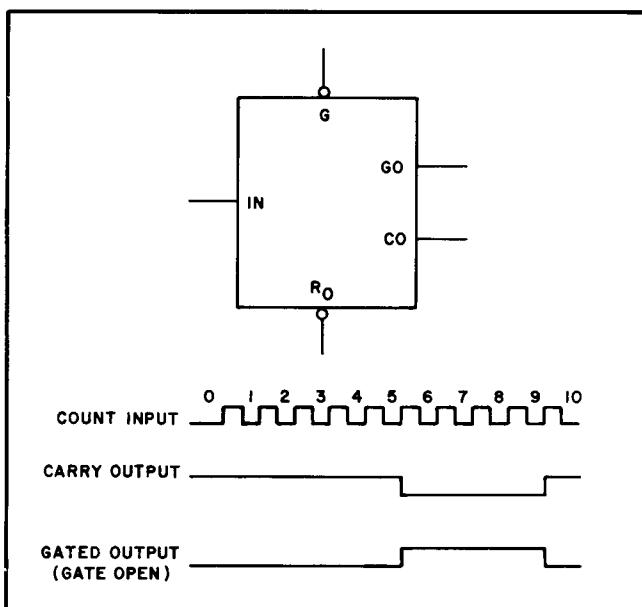

4-13. Open-Collector Gate

4-14. The output of an open-collector gate can be paralleled with gates of the same type to perform a wire-OR function, as shown in Figure 4-4. When the outputs are tied to the same line, any one of the gates can pull the line low without damaging itself.

Figure 4-4. Open-Collector Gate 1820-0327

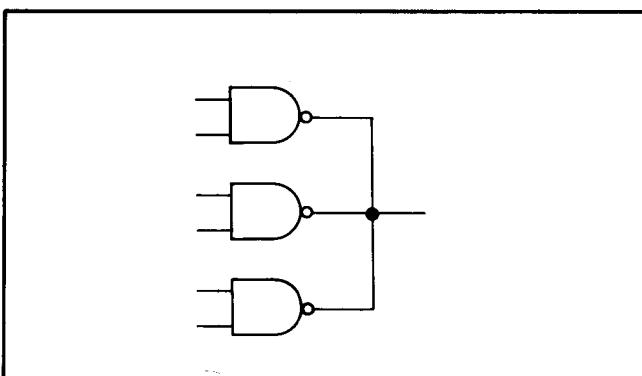

4-15. Logic Levels

4-16. This counter uses three types of logic: TTL (transistor-transistor logic), ECL (emitter-coupled logic), and DTL (diode-transistor logic). See Table 4-2 for specific logic levels.

Table 4-2. Logic Levels

| Type | H (Min) | L (Max) | Trigger | Supply |
|------|---------|---------|---------|--------|
| ECL | .7 V | -1.4 V | -1.2 V | -5.0 V |
| TTL | 2.4 V | 0.4 V | 1.5 V | 5.0 V |
| DTL | 2.6 V | 0.4 V | 1.5 V | 5.0 V |

4-17. OVERALL COUNTER OPERATION


4-18. The signal connected to CHANNEL A is conditioned by the front-panel switches of the Attenuator Assembly (Figure 4-5). These switches set the operating conditions for trigger level, coupling, and

the required slope. The Input Amplifier converts the signal into narrow pulses for more efficient usage throughout the counter. In the 5327B, INPUT C provides an alternate path through the Prescaler Assembly, which divides the signal by 10 or passes it directly to the Function Control Assembly. The path taken is determined by the setting of the front-panel Input Selector switch.

4-19. The Function Control accepts both the input signal and the 10 MHz internal oscillator pulses and routes them in accordance with the mode of operation being used. One of these signals is sent to the Time Base Assembly, which divides the signal as determined by the front panel TIME BASE/MULTIPLIER switch. The first and last pulse of the divided signal controls the length of time the main gate is open. During this time, the other signal is sent directly to the main gate for totalizing in the decade counters and is subsequently displayed. The synchronizer prevents the main gate from opening until an input signal is present.

4-20. The sample rate circuits control the interval between measurements. When the main gate closes, these circuits provide a delay, as controlled by the

Figure 4-5. Functional Block Diagram

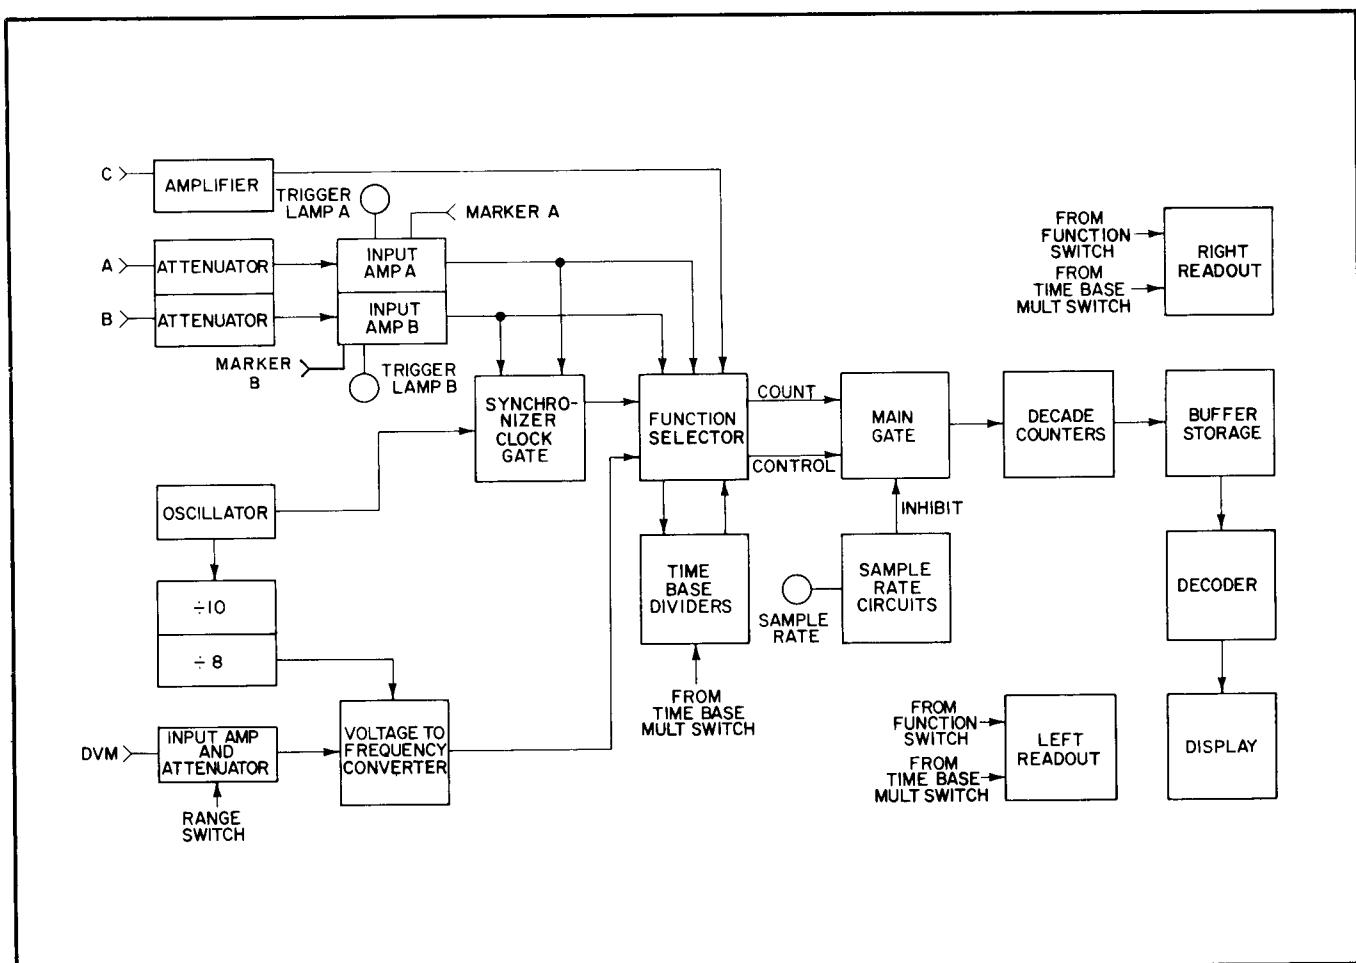

Model 5326/27B
Theory of Operation

front panel SAMPLE RATE controls. When the sample rate period has elapsed, a reset pulse is generated to reset the counter and start a new measurement.

4-21. The signal to be counted, either the internal oscillator or input signal, passes through the main gate to the decade counters. The buffer storage registers store the BCD count before it is translated into a decimal equivalent and displayed on the front panel. Also displayed on the front panel are the units of measurement and the decimal point. The left and right readout assemblies contain the unit indicators and the logic necessary to position the decimal point.

4-22. Frequency Modes

4-23. Frequency is defined as the number of periodic events per unit of time. The counter, therefore, measures an unknown signal (COUNT) for a known length of time (Figures 4-6 and 4-7). The 10 MHz internal oscillator provides the known time and controls the opening of the main gate. The Time Base Assembly divides the oscillator frequency by powers of 10 to open the main gate from 10^{-7} seconds to 10 seconds. The longer the gate is open, the more pulses of the unknown frequency are counted and, therefore, the better the resolution and accuracy.

4-24. Period Modes

4-25. In the Period Mode, the main gate is open for the period of the input signal (Figure 4-8). The Time Base dividers scale the 10 MHz oscillator signal by powers of 10 from 1 to 10^8 , as determined by the MULTIPLIER switch. This oscillator signal (COUNT) is counted during the gate time (period) by the decade counters and is subsequently displayed.

4-26. In the Period Average Mode, the MULTIPLIER switch selects the number of periods to be averaged (Figure 4-9). The Time Base dividers count the

number of periods selected with the switch and holds the main gate open until this count is complete. The Decade Counter totalizes the oscillator pulses while the main gate is open.

4-27. Time Interval Modes

4-28. In the Time Interval Mode (Figure 4-10), Channel A signal controls the start of the measurement, while Channel B signal stops the measurement. The two signals control the state of the arming flip-flop, which, in turn, enables the Clock Gate to pass oscillator pulses to the Time Base Divider. The oscillator signal is scaled, congruent with the setting of the MULTIPLIER switch, before it is passed through the main gate to the counting assemblies.

4-29. For the Time Interval Average measurements (Figure 4-11), the setting of the MULTIPLIER switch determines the number of intervals that are averaged. The oscillator signal is counted directly for the duration of each, individual time interval that is being averaged. Once the Time Base Divider totalizes the number of selected intervals, the main gate closes and the measurement is displayed. See Page 8-27 for timing diagrams and a technical description.

4-30. DVM Mode

4-31. The DVM input connects to voltmeter Input Amplifier A12 (Figure 4-12), which provides attenuation for the range selection. The output of A12 connects to Voltage-to-Frequency Converter A13. The V-to-F converter supplies a pulse-train output, whose frequency is proportional to the magnitude of the input signal. This output feeds through the main gate for subsequent counting by the decade counters. In the DVM mode, the front-panel TIME BASE switch selects the integrating time. When reading the triggering level of A or B channel, the 10 V range and 10 ms integration time are automatically selected.

Figure 4-6. Frequency A Mode Flow Diagram

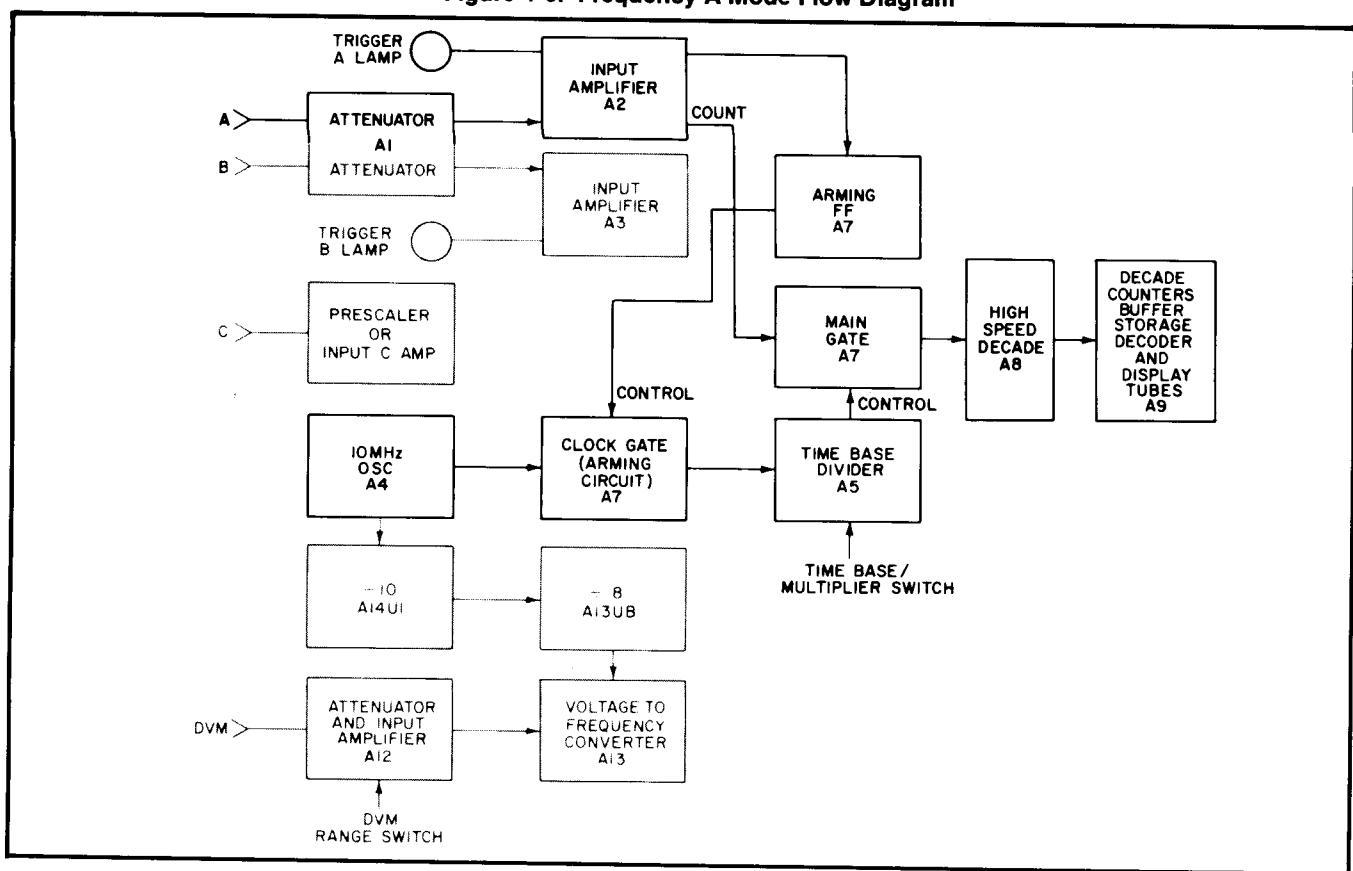


Figure 4-7. Frequency C Mode Flow Diagram

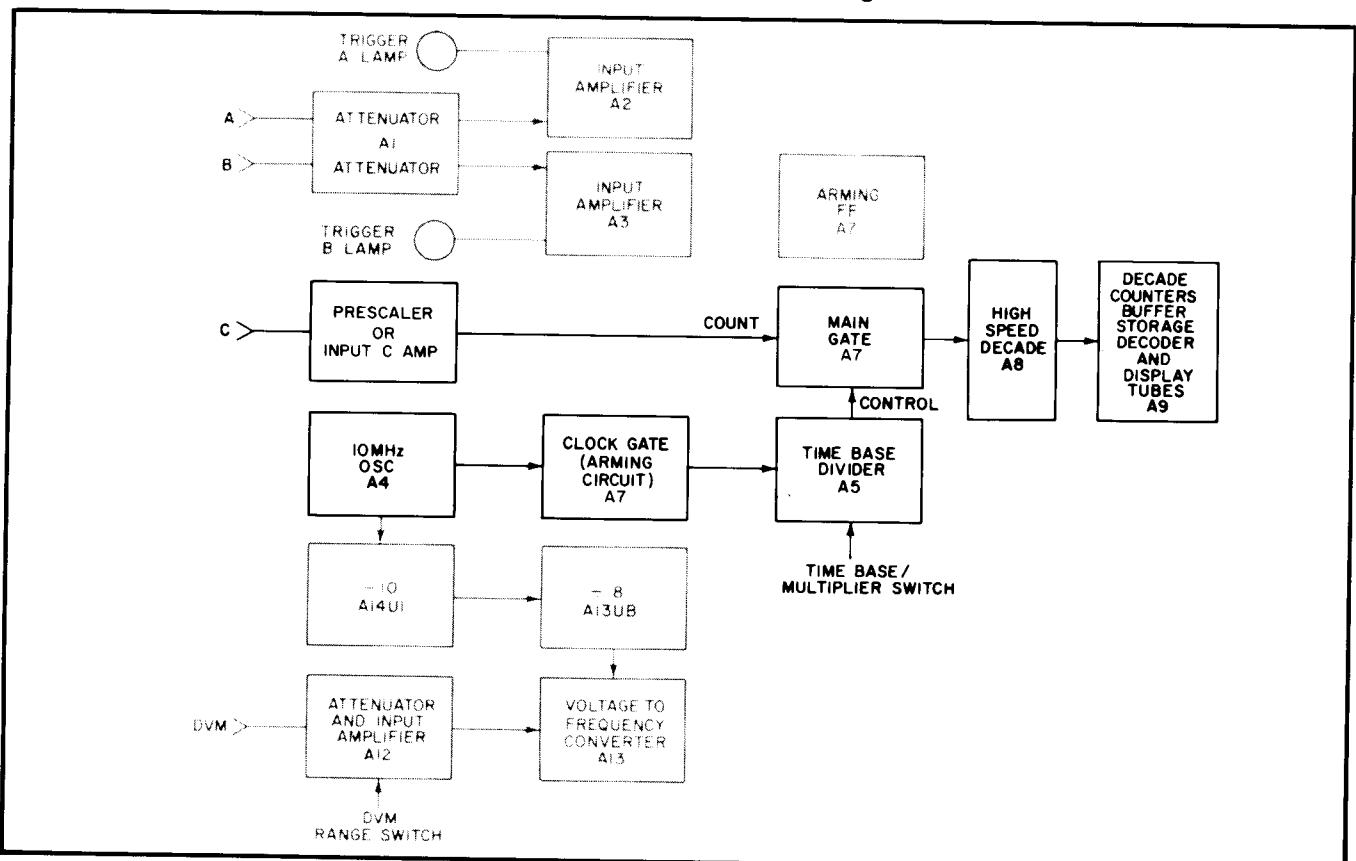


Figure 4-8. Period Mode Flow Diagram

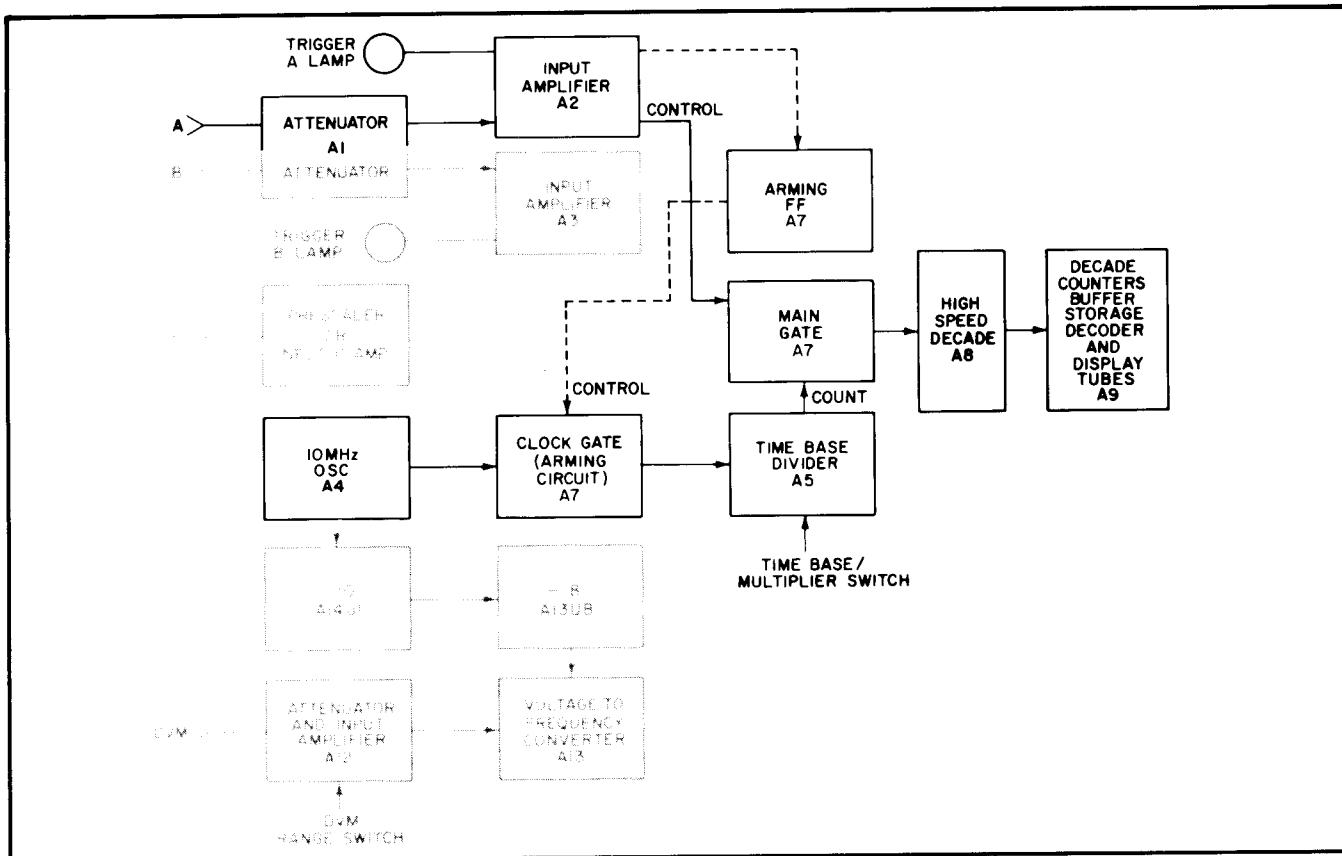


Figure 4-9. Period Average Mode Flow Diagram

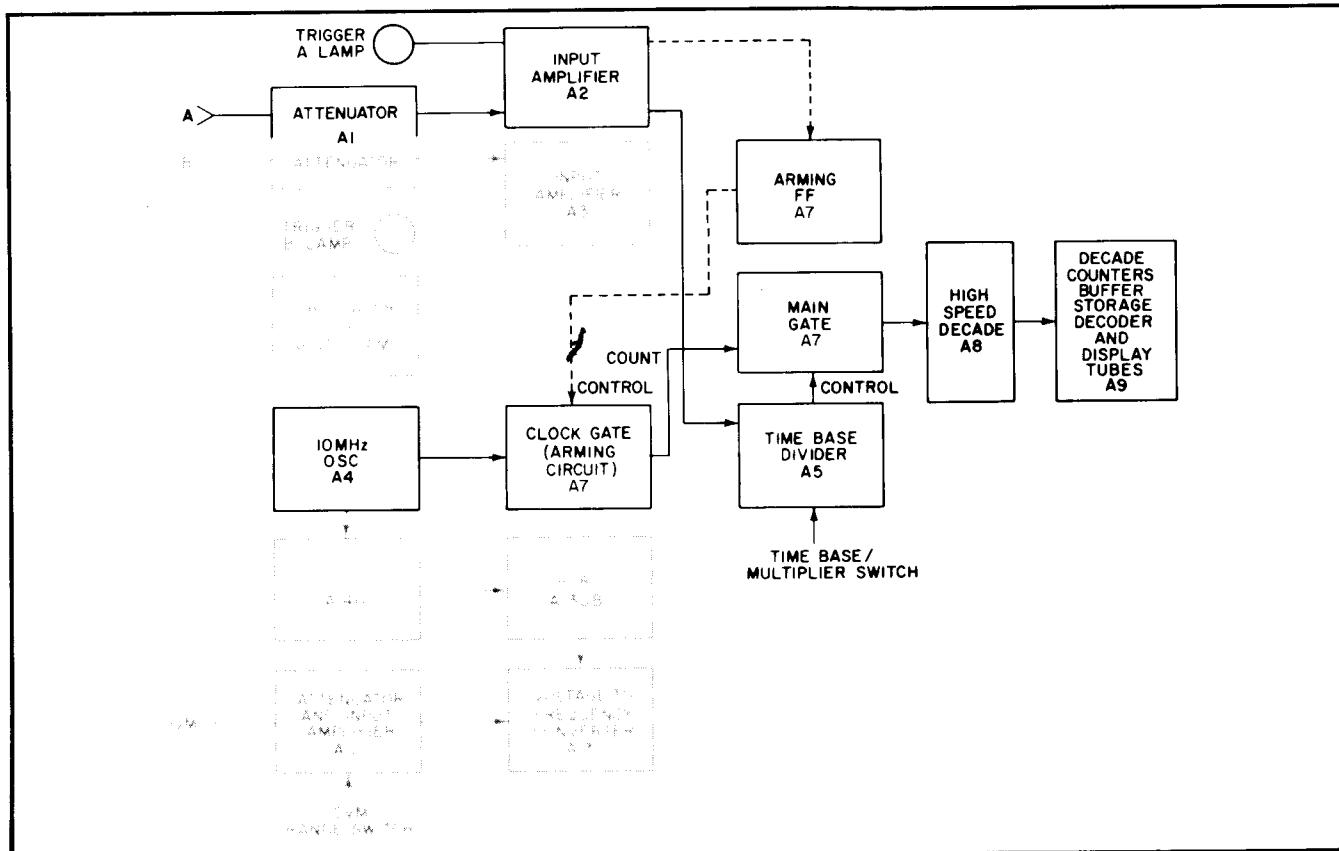


Figure 4-10. Time Interval Mode Flow Diagram


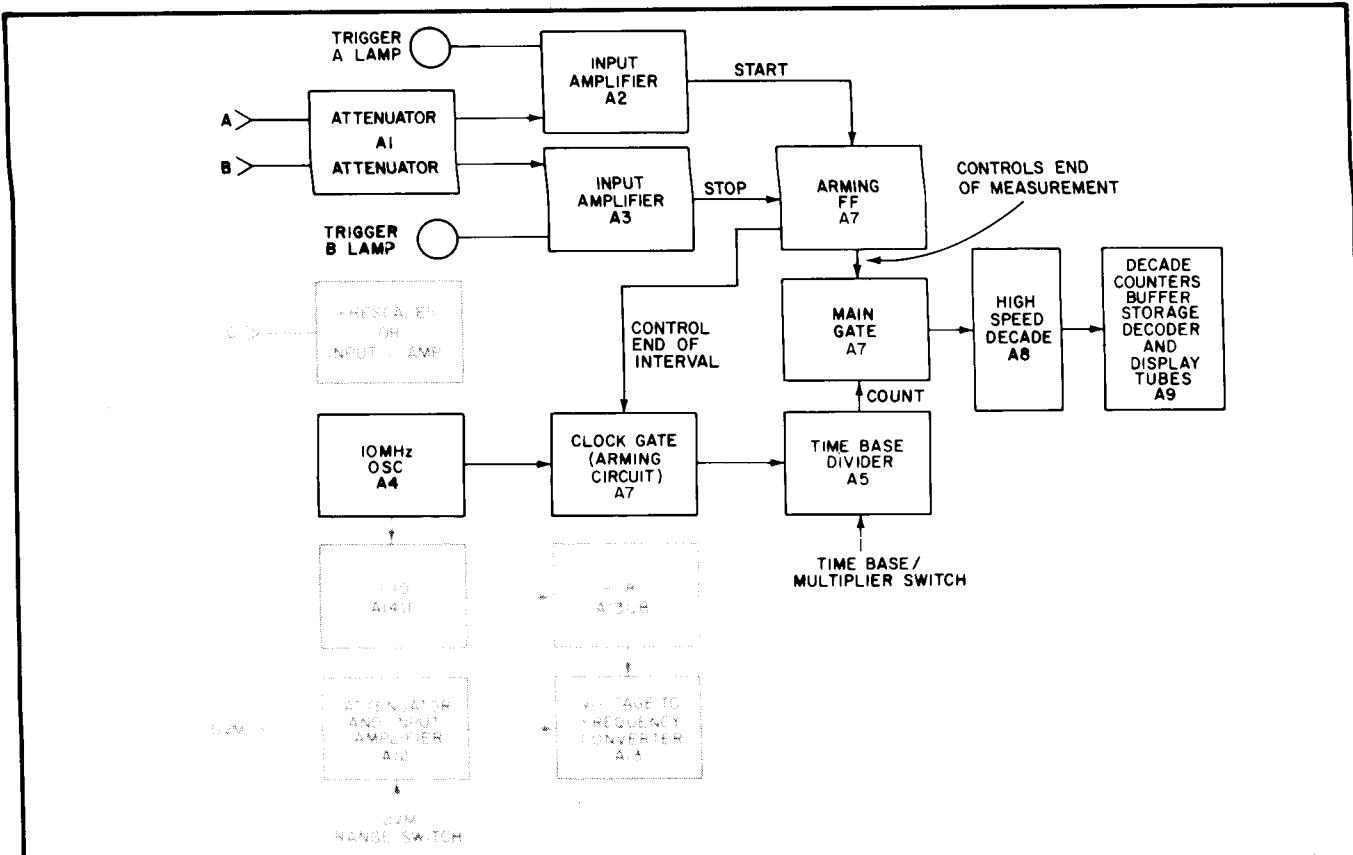


Figure 4-11. Time Interval Average Mode Flow Diagram

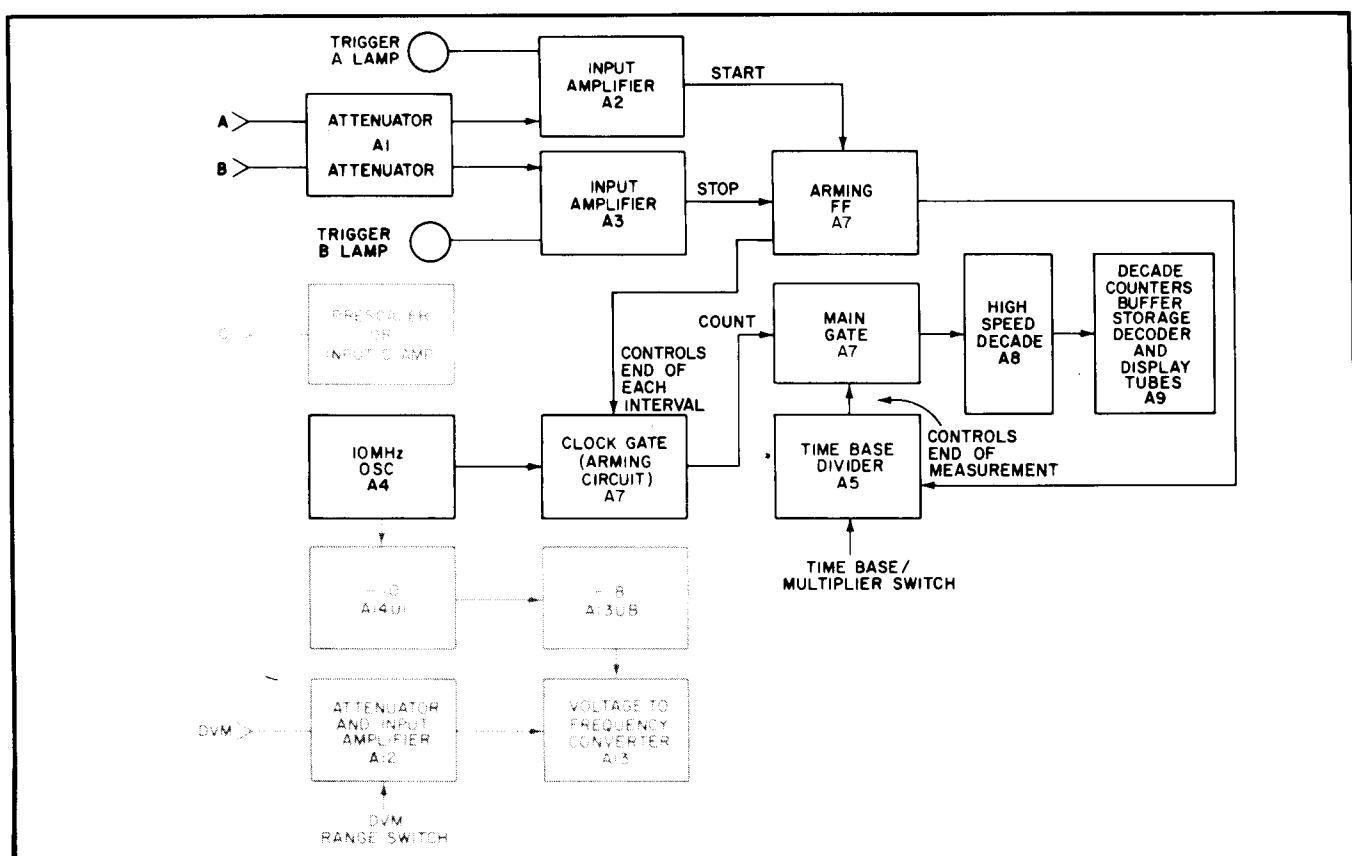

Model 5326/27B
Theory of Operation

Figure 4-12. DVM Mode Flow Diagram


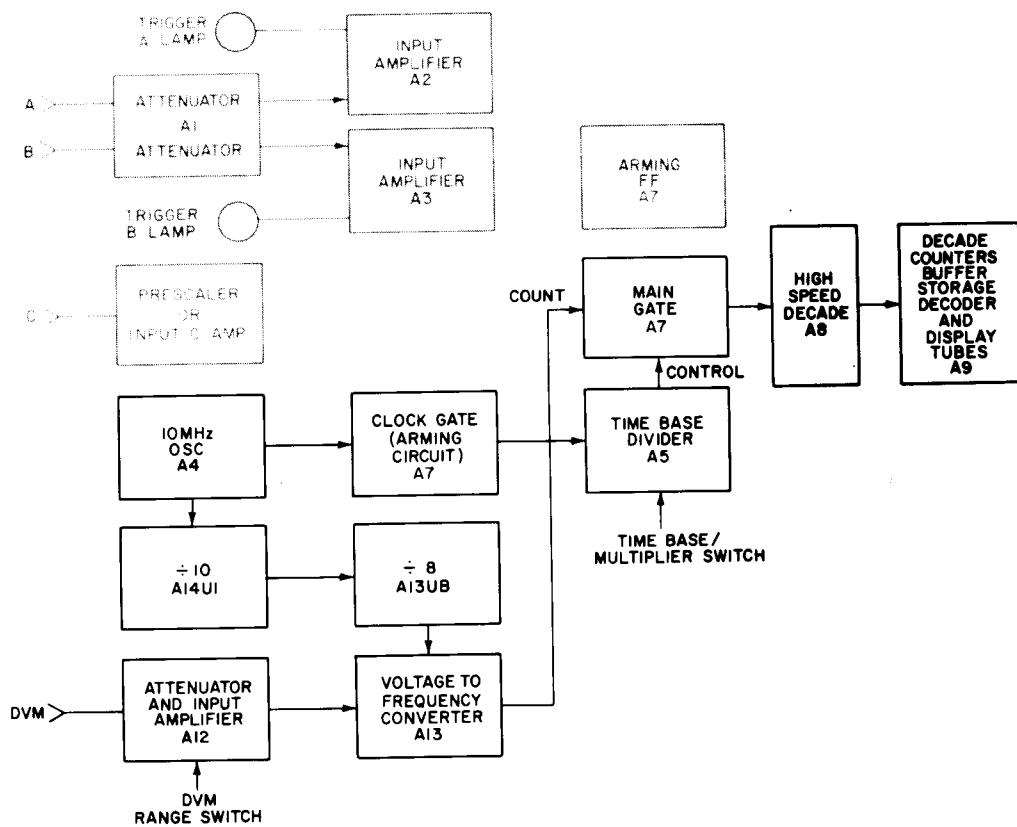


Figure 4-13. Instrument Timing Diagram

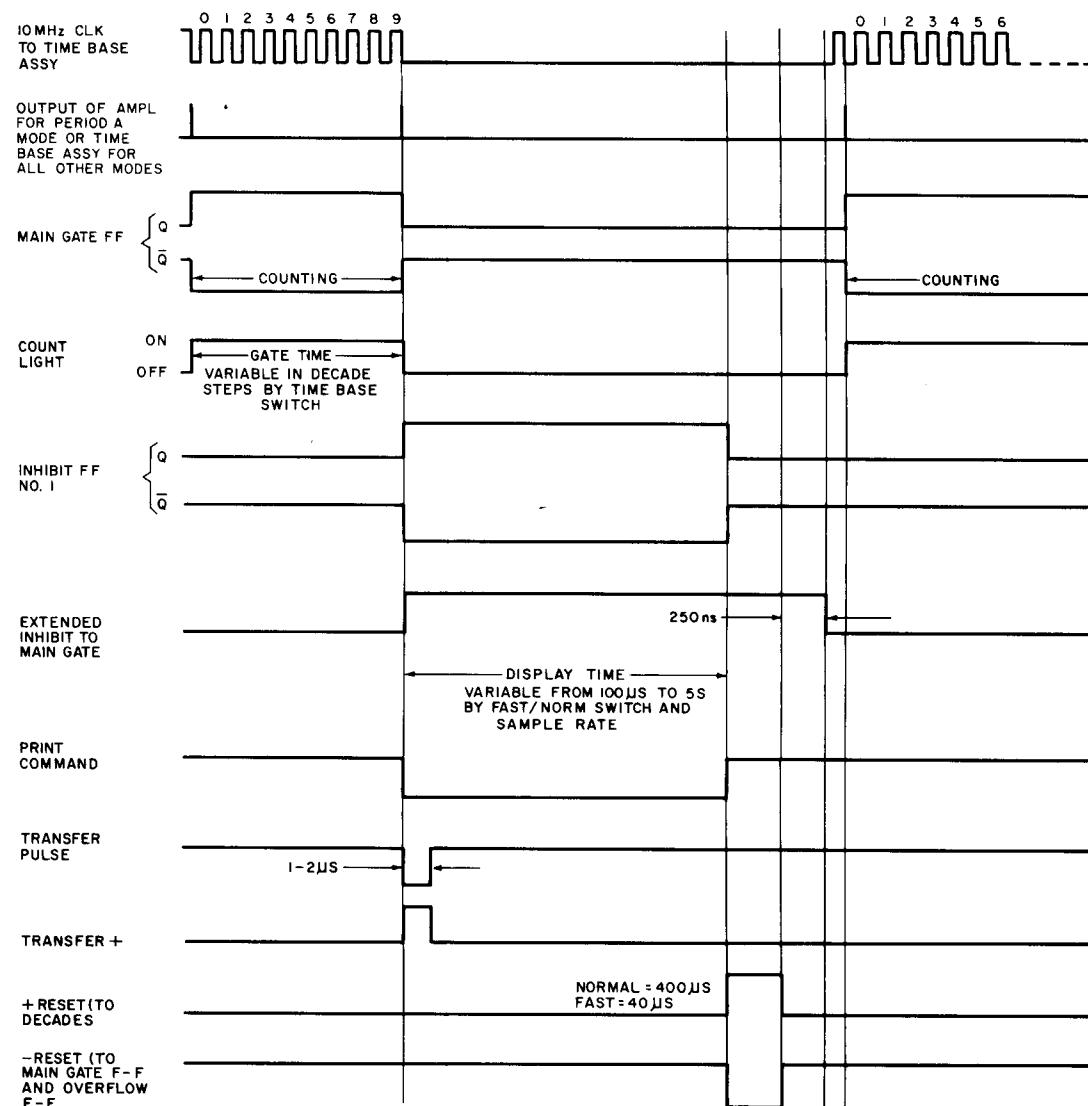

SECTION V

MAINTENANCE

5-1. INTRODUCTION

5-2. This section gives maintenance and service information. Included is a table of assemblies, recommended test equipment, in-cabinet performance checks, which may be used to verify proper counter operation, and adjustments.

5-3. ASSEMBLY DESIGNATIONS

5-4. Table 5-1 lists the designations, name, and Hewlett-Packard part number of assemblies used in this instrument.

5-5. TEST EQUIPMENT

5-6. Test equipment recommended for maintaining and checking performance is listed in Table 5-2. Test equipment having equivalent characteristics may be substituted for the equipment listed.

Table 5-1. Assembly Identification

| Assembly | Description | HP Part No. |
|----------|----------------------------|-------------|
| A1 | Attenuator | 05326-60047 |
| A1 | Attenuator (Option 004) | 05327-60034 |
| A2 | Input Amplifier | 05326-60004 |
| A3 | Input Amplifier | 05326-60004 |
| A4 | Oscillator | 05326-60002 |
| A4 | TCXO (Option 010) | 05327-60036 |
| A4 | Oven Oscillator (Opt. 011) | 10544-60011 |
| A5 | Time Base Control | 05326-60005 |
| A6 | Sample Rate | 05326-60013 |
| A7 | Function Control | 05327-60031 |
| A8 | Display Support | 05326-60009 |
| A9 | Display | 05326-60008 |
| A9 | Display (Option 001) | 05326-60025 |
| A10 | Right Readout | 05327-60008 |
| A11 | Left Readout | 05327-60007 |
| A12 | Voltmeter Input Amplifier | 05326-60016 |
| A13 | Voltmeter V-F Converter | 05326-60017 |
| A14 | DVM Logic | 05326-60015 |
| A15 | Regulator | 05327-60020 |
| A16 | Interconnect | 05327-60027 |
| A17 | Input C Amp (5326B) | 05326-60031 |
| A18 | Prescaler (5327B) | 05327-60033 |

5-7. ASSEMBLY CONNECTION IDENTIFICATION

5-8. Throughout the manual, connections to printed circuit assemblies are referred to in abbreviated form. For example, connection to A3, pin 10 is A3(10).

5-9. IN-CABINET PERFORMANCE CHECK

5-10. **GENERAL.** The performance check (Table 5-3) and test card can be used to verify proper operation of all circuits of the counter and may also be used:

- a. As part of an incoming inspection check of instrument specifications.
- b. Periodically, for instruments used in systems where maximum reliability is important.
- c. As part of a procedure to locate defective circuits.
- d. After any repairs or adjustments and before returning instrument to regular service.
- e. As a permanent record of instrument maintenance performed, because the test record pages are perforated and may be removed.

5-11. **VARIABLE LINE VOLTAGE.** During the test (Table 5-3), the counter should be connected to a variable voltage source, so the line voltage may be varied $\pm 10\%$ from nominal (115 or 230 Vac).

5-12. INSTRUMENT COVER REMOVAL

5-13. To remove top or bottom cover, remove the four screws that secure cover to instrument. Slide cover toward rear of instrument and lift off. To replace cover, reverse procedure.

WARNING

115/230 VAC AND +175 VDC SUPPLY WIRES ARE EXPOSED WHEN EITHER TOP OR BOTTOM COVER IS REMOVED. USE EXTREME CAUTION DURING TROUBLESHOOTING, ADJUSTMENT, OR REPAIR. AVOID DAMAGE TO INSTRUMENT BY REMOVING POWER BEFORE REMOVING OR REPLACING COVERS, ASSEMBLIES, OR COMPONENTS.

5-14. REPAIR

5-15. Printed Circuit Component Replacement

5-16. Component lead holes in the circuit boards have plated-through walls to ensure good electrical contact between conductors on opposite sides of the board. To prevent damage to the plating and the replacement component, apply heat sparingly, and work carefully.

5-17. Replacing Integrated Circuits

5-18. Following are two recommended methods of replacing integrated circuits:

a. SOLDER GOBBLER. This is the best method. Solder is removed from board by a soldering iron with a hollow tip connected to a vacuum source.

b. CLIP-OUT. This method should be used as a last resort only. Clip the leads as close to the base as possible. With a soldering iron and long nose pliers, carefully remove the wires from each hole. Then clean the holes.

5-19. ADJUSTMENTS

5-20. The adjustments in Table 5-4 are in the order they should be performed but should not be done unless:

a. A trouble has been repaired which would affect these values.

b. The instrument does not meet all specifications while performing the check in Table 5-3 (In-Cabinet Performance Checks).

Table 5-2. Recommended Test Equipment

| Instrument Type | Required Characteristics | Recommended Type |
|---|---|--|
| Frequency Standard | 1 MHz Output | HP 107AR |
| Oscilloscope Vertical Plug-In Time Base Plug-In | 50 MHz Bandwidth 50 mV/cm Sensitivity 50 MHz Bandwidth | HP 180A HP 1801A HP 1820A |
| Test Oscillator (two required) | 10 Hz to 10 MHz at 5 volts peak-to-peak | HP 651B |
| Audio Oscillator | 2 Hz to 100 kHz at 100 mV rms | HP 202C |
| HF Signal Generator | 50 kHz to 50 MHz at 3 V rms | HP 606B |
| VHF Signal Generator | 10 MHz to 480 MHz | HP 608F |
| Frequency Doubler | 240 - 550 MHz | HP 10515A |
| Pulse Generator | 10 MHz repetition rate, 8 ns pulse width, 0.3 volts peak-to-peak output | HP 216A |
| Electronic Counter | 0.1 Hz to 10 MHz Frequency Measurements | HP 5245L |
| Variable Line Transformer | 103 to 127 V rms and 206 to 254 V rms | Electronic Power Stat 3PF116 (115V); 3PF216 (230V) |
| Voltage Standard | 10 to 1000 volts, 0.01% accuracy | HP 741B |
| Digital Recorder | Print Rate: 10 lines/sec. Data Input: +8421 BCD parallel entry, accepts 1 = +5 V, 0 = +0.25 V. Accepts negative going +5 to 0 V print command | HP 5055A |
| DC Voltmeter | 0 to 200 Vdc, 1 % accuracy | HP 412A |
| AC VTVM | 0 to 250 Vac | HP 400F |
| RF Voltmeter | 1 mV to 3 V | HP 3406A |

Table 5-3. In-Cabinet Performance Check

1. TIME BASE STABILITY AND OUTPUT

- a. Set counter controls as follows:

| | |
|--------------------------------|--------------|
| SAMPLE RATE | Mid-position |
| FAST/NORM/HOLD | NORM |
| FUNCTION | FREQ A |
| TIME BASE/MULTIPLIER | 10s |
| SLOPE A | + |
| AC/DC | DC |
| ATTEN | X1 |
| CHK-SEP-COM | SEP |
| LEVEL | PRESET |
| STORAGE | ON |
| OSC | INT |

NOTE

Allow one-hour warm-up before proceeding to step b.

- b. Connect 1 MHz frequency standard to CHANNEL A input.
- c. A counter display of 000.0000 (1000.0000 Option 001) indicates that counter time base frequency is exactly 10 MHz. The offset between counter time base and 1 MHz frequency standard can be determined by subtracting 10 MHz from the indicated oscillator frequency.

| <u>COUNTER DISPLAY</u> | <u>A4 OSCILLATOR FREQUENCY</u> |
|------------------------|--------------------------------|
| 999.9950 kHz | 10 000 050 Hz |
| 999.9960 | 10 000 040 |
| 999.9970 | 10 000 030 |
| 999.9980 | 10 000 020 |
| 999.9990 | 10 000 010 |
| 1 000.0000 | 10 000 000 |
| 1 000.0010 | 9 999 990 |
| 1 000.0020 | 9 999 980 |
| 1 000.0030 | 9 999 970 |
| 1 000.0040 | 9 999 960 |
| 1 000.0050 | 9 999 950 |

- d. Record frequency offset on test card. For long-term stability, operate the counter continuously for at least one month. Measure frequency offset at one-month intervals.
- e. To calibrate the counter time base to the frequency standard, perform time-base adjustment in Table 5-4.

NOTE

Temperature must be held constant or compensation for temperature difference must be made whenever a frequency difference is recorded. Unless a record of the temperature and date of last calibration is available, the frequency offset should not be considered drift or aging rate of the 10 MHz crystal.

- f. To check time base stability vs. line voltage variations, connect variable transformer to counter power cord. Vary line voltage $\pm 10\%$ and record frequency difference on test card; it should be ≤ 1 part in 10^7 .
- g. To check time base stability vs. temperature, vary counter operating temperature between 0° and 50°C . Record frequency difference on test card; it should be ≤ 2.5 parts in 10^6 .

Table 5-3. In-Cabinet Performance Check (Continued)

- h. Connect oscilloscope vertical input to OSC jack on counter rear panel. Use 10:1 probe at OSC jack.
- i. Oscilloscope should display 10 MHz nominal at > 2.4 volts peak-to-peak amplitude. Record on test card.

2. DISPLAY, DECIMAL POINTS, AND DIVIDERS

Proper operation is verified in the Self-Check procedures in Table 3-1. Record on test card.

3. FREQUENCY RESPONSE AND SENSITIVITY

CHANNEL A

- a. Set counter controls as in 1a., except TIME BASE to 1s and AC/DC switch to AC. *CHK - To SEP - sep - Com*
- b. Connect a BNC T connector to CHANNEL A jack. Connect sine wave test oscillator output to T connector. Connect oscilloscope's vertical input to T connector to monitor input signal amplitude; use a 50-ohm feedthrough at oscilloscope BNC.
- c. Adjust test oscillator from 20 Hz to 50 MHz, maintaining 100 mVrms input amplitude. Counter should properly display all frequencies in this range. Record on test card.
- d. Set audio oscillator frequency to 2 Hz. Counter should not count. Switch AC/DC switch to DC. Counter should count input signal.
- e. Connect a BNC T connector to Z axis input of oscilloscope. Connect counter MARKER A and B outputs to T connector.
- f. Adjust test oscillator output for 1000 Hz at 8 volts peak-to-peak indication.
- g. Set CHANNEL A LEVEL to PRESET and check that oscilloscope marker is at 0 volts.
- h. Set CHANNEL A SLOPE to +. Vary CHANNEL A LEVEL control and check that marker is variable over at least -3.0 to +3.0 volts on the positive slope of waveform.
- i. Set CHANNEL A SLOPE to -. Vary CHANNEL A LEVEL control and check that marker dot is variable over at least -3.0 to +3.0 volts on the negative slope of waveform. Record on test card.
- j. Set CHK-SEP-COM switch on COM and repeat marker test for CHANNEL B. Record on test card.
- k. Set FUNCTION selector to READ A LEVEL. Set LEVEL A to PRESET. Display should be .00 V ±1 count.
- l. Rotate LEVEL A control clockwise just out of PRESET. Readout should be negative display of 3.00 volts or greater. Gate light should flash.
- m. Rotate LEVEL A control clockwise and check that readout decreases, crosses zero (polarity sign changes) and displays +3.00 volts or greater in the full clockwise position. Record on test card.
- n. Set FUNCTION selector to READ B LEVEL and repeat step K through M for Channel B. Record on test card.

INPUT C (for 5327B, perform all steps; for 5326B, perform steps a and f thru h).

- a. Disconnect oscilloscope and input to CHANNEL A. Remove 50Ω feedthrough and connect cable to INPUT C jack.
- b. Set FUNCTION selector to FREQ C, TIME BASE to 1s, and input selector to PRESCALE.

Table 5-3. In-Cabinet Performance Check (Continued)

- c. Use the set of frequency generators (Table 5-2) necessary to cover the input frequency from 0 to 550 MHz, while maintaining 25 mV rms input levels. Adjust TIME BASE switch as necessary for best display.
 - d. Check for stable count within stability of oscillator. Record on test card.
 - e. For 5327B, set input selector switch to DIRECT.
 - f. Set FUNCTION selector to FREQ C and TIME BASE to 1s.
 - g. Use the set of frequency generators necessary to cover the input frequency from 0 to 50 MHz, while maintaining 15 mV rms input level for the 5327B or ~~50~~ mV rms for the 5326B. Adjust TIME BASE switch as necessary for best display.
 - h. Check for stable count within stability of oscillator. Record on test card.
- 50 mV RMS 9/78*

4. PULSE OPERATION

- a. Set counter controls as follows:

| | |
|-----------------------|--------|
| FUNCTION | FREQ A |
| TIME BASE | 1 s |
| SLOPE A | + |
| AC/DC (A) | AC |
| ATTEN (A) | X1 |
| LEVEL (A) | PRESET |
| CHK-SEP-COM | SEP |
| STORAGE | ON |
| OSC | INT |

- b. Connect BNC T connector to oscilloscope vertical input. Connect pulse generator to T. Connect CHANNEL A input to T connector, using 50Ω feedthrough at the counter input.
- c. Adjust pulse generator output for 10 MHz repetition rate, 15 ns pulse width at 0.3 volts peak-to-peak indication on oscilloscope.
- d. Check that counter displays the repetition rate, count light flashes, and trigger A lamp is on. Record on test card.
- e. Remove input connection from CHANNEL A input jack. Remove 50Ω feedthrough and connect cable to INPUT C jack. Set FUNCTION selector to FREQ C. Set input selector switch to DIRECT.
- f. Check that counter displays repetition rate and count lamp flashes. Record on test card.
- g. Repeat above check for 10 kHz.

5. PERIOD AND PERIOD AVERAGE

- a. Set counter controls as in step 1a. with FUNCTION to PERIOD A and MULTIPLIER to 10^3 or as needed. Set audio oscillator to 2 Hz at 100 mVrms.
- b. Connect oscillator to CHANNEL A input, using BNC T. Connect oscilloscope to T, using 50Ω feedthrough at oscilloscope BNC.
- c. Vary audio and test oscillator frequency from 2 Hz to 10 MHz, maintaining 100 mVrms input amplitude. Vary MULTIPLIER as needed to maintain meaningful display with change of frequency. Counter should properly display the period of the frequencies in this range within accuracy spec of the instrument. Record on test card.
- d. Set FUNCTION switch to PERIOD AVG A and repeat step c. Record on test card.

Table 5-3. In-Cabinet Performance Check (Continued)

6. TIME INTERVAL AND TIME INTERVAL AVERAGE

- a. Set counter controls as follows:

| | |
|---------------------------|--------------|
| SAMPLE RATE | Mid-position |
| FAST/NORM/HOLD | NORM |
| FUNCTION | T. I. A to B |
| MULTIPLIER | 1 |
| SLOPE A | + |
| SLOPE B | - |
| AC/DC (A and B) | AC |
| ATTEN (A and B) | X1 |
| LEVEL (A and B) | PRESET |
| CHK-SEP-COM | COM |

- b. Connect test oscillator to CHANNEL A input. Set oscillator for 1 MHz output at 300 mVrms. Observe display of $.5 \mu\text{s} \pm 1 \text{ count} \pm \text{trigger error}$. Record on test card.
- c. Set FUNCTION to T. I. AVG and MULTIPLIER to 10^4 . Set signal source to < 2 MHz.* Counter should display one half the period of the input signal

$$\pm 2 \text{ ns} \pm \frac{\text{trigger error} \pm 100 \text{ ns}^{**}}{\sqrt{\text{number of intervals averaged}}}$$

7. TOTALIZE

- a. Set counter controls as follows:

| | |
|-----------------------|-------|
| FUNCTION | START |
| MULTIPLIER | 1 |
| CHK-SEP-COM | CHK |

- b. Check that display totalizes, count light (C) is on and trigger A and B lamps light. Record on test card.
- c. Using 10:1 divider probe, connect oscilloscope vertical input to TIME BASE OUTPUT jack on counter rear panel.
- d. Check that oscilloscope indicates 10 MHz negative going pulses at least 3 volts peak-to-peak, typically > 30 nsec at 50% points. Set MULTIPLIER switch to 10 and observe 1 MHz output pulses, typically 100 nsec.
- e. Disconnect oscilloscope from TIME BASE OUTPUT jack and connect TIME BASE OUTPUT to 5245L Electronic Counter input. Set 5245L for frequency measurements.
- f. Set MULTIPLIER as follows, and check for proper counter display. Record on test card.

| MULTIPLIER | 5245 DISPLAY |
|------------|--------------|
| 1 | 10 MHz |
| 10 | 1 MHz |
| 10^2 | 100 kHz |
| 10^3 | 10 kHz |
| 10^4 | 1 kHz |
| 10^5 | 100 Hz |
| 10^6 | 10 Hz |
| 10^7 | 1 Hz |
| 10^8 | .1 Hz |

*2 MHz must NOT be exact or display will be ambiguous.
** ± 1 count.

Table 5-3. In-Cabinet Performance Check (Continued)

8. RATIO

- a. Set counter controls as follows:

| | |
|----------------------------|--------|
| FUNCTION | FREQ A |
| MULTIPLIER | 10^4 |
| SLOPE A | + |
| AC/DC | AC |
| ATTEN | X1 |
| CHK-SEP-COM | SEP |
| LEVEL A | PRESET |
| OSC (rear panel) | EXT |

- b. Connect test oscillator to OSC jack, using BNC T. Connect oscilloscope to T connector, using 50Ω feedthrough at oscilloscope BNC. Set oscillator output for 10 MHz at 1 Vrms.
- c. Connect BNC T connector to counter's CHANNEL A jack. Connect second test oscillator to T connector. Connect second channel of dual channel oscilloscope vertical input to T connector, using 50Ω feedthrough at oscilloscope BNC. Set variable oscillator for 100 kHz at 100 mVrms display on oscilloscope.
- d. Check that counter displays 100. Disregard units and decimal point. Record on test card.
- e. Repeat test using 100 Hz into OSC jack and 100 kHz into CHANNEL A. Set MULTIPLIER to 10^3 . Display should be ratio of two input frequencies $\times 10^3$ (approximately 10^6). Disregard decimal point and units. Record on test card.

9. GATE OUTPUT AND SAMPLE RATE

- a. Disconnect setup.

- b. Set counter controls as follows:

| | |
|--------------------------|---------|
| FUNCTION | FREQ A |
| TIME-BASE | 1 ms |
| CHK-SEP-COM | CHK |
| FAST/NORM/HOLD | FAST |
| SAMPLE RATE | max ccw |

- c. Using 10:1 divider probe, connect oscilloscope vertical input to GATE output and observe positive pulses ≥ 2.4 V with a pulse width of $< 100 \mu s$. Record on test card.
- d. Slowly rotate SAMPLE RATE clockwise and observe that the pulse width increases.
- e. Set the TIME BASE switch to 10 ms and rotate the SAMPLE RATE fully clockwise. Observe that the pulse width is > 20 ms. Record on test card.
- f. Set FAST/NORM/HOLD to NORM and turn SAMPLE RATE fully counterclockwise, just out of OFF. Observe the positive pulse width is < 20 ms. Record on test card.
- g. Slowly rotate the SAMPLE RATE clockwise, observing an increase in the pulse width.
- h. Set TIME BASE to 1s and rotate SAMPLE RATE fully clockwise. Verify that the time between flashes of the count (C) lamp is greater than 5 seconds. Record on test card.
- i. Set FUNCTION to START and check that gate output is TTL Low (< 0.4 V).
- j. Set FUNCTION to STOP and verify that gate output is TTL High (> 2.4 V).

Table 5-3. In-Cabinet Performance Check (Cont'd)

10. DIGITAL VOLTMETER

- a. Set counter controls as follows and allow for 10-minute warmup (with covers on).

| | |
|----------------------|--------------|
| SAMPLE RATE | Mid-position |
| FAST/NORM/HOLD | NORM |
| FUNCTION | DVM |
| TIME BASE | .1s |
| RANGE | 10V |
- b. Set voltage standard for +10.000 volt output. Connect voltage standard to DVM input jack.
- c. Check that counter display is +10.000 volts ± 7 counts.
- d. Reverse voltage standard polarity and check for counter display of -10.000 volts ± 7 counts.
- e. Set counter RANGE switch to 100V. Set voltage standard for +100.00 volts output. Check that counter display of +100.00 volts ± 7 counts.
- f. Reverse voltage standard polarity and check for counter display of -100.00 volts ± 7 counts.
- g. Set counter RANGE switch to 1000V. Set voltage standard for +990.0 volts output. Counter display should be +990.0 ± 11 counts.

CAUTION

**DO NOT REVERSE VOLTAGE STANDARD POLARITY.
DAMAGE TO THE STANDARD MAY OCCUR.**

- h. Set counter RANGE switch to 10V. Counter display should be 12.500 ± 1 count.
- i. Set voltage standard for 12.490 volt output. Counter display should be 12.490 ± 7 counts.
- j. Connect a 1 M Ω , $\frac{1}{4}$ W, 1% resistor in series with the red DVM INPUT jack.
- k. Set voltage standard for 10 volts output. Counter display should be 9.090 ± 17 counts.
- l. Set RANGE switch to 100V. Counter display should be 9.09V ± 22 counts.
- m. Short DVM input terminals. Set RANGE switch as follows and check for proper readout.

| RANGE SWITCH | READOUT |
|--------------|---------------------|
| 10V | .000 ± 2 counts |
| 100V | .00 ± 2 counts |
| 1000V | .0 ± 2 counts |

11. DIGITAL RECORDER (Option 003)

- a. Set counter controls as follows:

| | |
|----------------------|--------------|
| FUNCTION | FREQ A |
| TIME BASE | .1 s |
| COM-SEP-CHK | CHK |
| FAST/NORM/HOLD | NORM |
| SAMPLE RATE | Mid-position |

- b. Connect oscilloscope to J9(48). Observe oscilloscope display a print command (drop from >2.4V to <0.4V) immediately after the C lamp goes out.
- c. Connect jumper from J9(25) to J9(22).
- d. Check that counter's main gate is inhibited. C light does not flash, and no print command pulses are generated.
- e. Verify proper output by connecting a 5055A printer on J9. Printed output should agree with counter display. Logic probe or voltmeter may be used to verify that output logic levels agree with instrument display. Record on test card.

Table 5-4. Adjustments

1. POWER SUPPLY A15

- a. Connect counter line cord to variable power transformer. Monitor output voltage with AC VTVM. Adjust transformer for 117 volt indication on VTVM.
- b. Turn counter SAMPLE RATE control clockwise out of OFF.
- c. Connect VTVM to A15 Pin 7 and adjust A15R10 for +16.5 V.
- d. Connect VTVM to A15 Pin 6 and adjust A15R13 for -16.5 V.

2. SENSITIVITY AND OFFSET A2, A3

- a. Connect a BNC T connector to CHANNEL A input jack.
- b. Connect test oscillator output to T connector.
- c. Connect oscilloscope vertical input to T connector, using 50Ω feedthrough at oscilloscope input BNC.
- d. Connect counter MARKER A output to oscilloscope Z-axis input.
- e. Adjust test oscillator for 1 kHz output at 100 mV rms.
- f. Set counter controls as follows:

| | |
|-------------------|--------|
| FUNCTION | FREQ A |
| CHK-SEP-COM | SEP |
| ATTEN | X1 |
| AC-DC | DC |
| LEVEL | PRESET |

- g. Set SLOPE A switch to - and + positions and observe marker position on oscilloscope waveform.
- h. On Input Amplifier board A2, adjust A2R2 SENS pot until + and - marker positions have a symmetrical offset about the zero volt axis for + and - slope switch positions.
- i. Adjust test oscillator for 1 kHz output at 200 mV rms.
- j. Set counter FUNCTION switch to T.I. A to B.
- k. On Input Amplifier, adjust A2R24 TRIG LEVEL pot until markers are at 0 volts for both + and - SLOPE switch positions.
- l. Repeat procedure for CHANNEL B input (Amplifier Board A3).

3. OPTION 004 ATTENUATOR A1

Set:

| | |
|-----------------|----------|
| TIME BASE | 0.1 sec. |
| AC/DC | DC |
| SEP/COM | SEP |
| ATTEN A/B | X10 |

- a. Using an HP 412A or equivalent, measure voltage at CHANNEL A jack.
- b. Adjust R56 for $< \pm 1$ mV reading.
- c. Measure voltage at CHANNEL B jack.
- d. Adjust R9 for $< \pm 1$ mV reading.
- e. Set A and B attenuators to X100 position.
- f. Measure voltage at CHANNEL B jack.
- g. Adjust R32 for $< \pm 1$ mV reading.
- h. Measure voltage at CHANNEL A jack.
- i. Adjust R33 for $< \pm 1$ mV reading.

4. OSCILLATOR A4

- a. Connect 1 MHz frequency standard to CHANNEL A jack.

b. Set counter controls as follows:

| | |
|-------------------|-------------------------------|
| CHK-SEP-COM | SEP |
| FUNCTION | FREQ A |
| TIME BASE | 10s |
| SAMPLE RATE | slightly clockwise out of OFF |

c. Remove top cover.

- d. Using insulated tuning tool, adjust A4C3 until display indicates all zeros with cover on. (Wait 10 seconds between adjustments for counter to make measurement.)

NOTE

For standard instruments without Option 001, the counter display will overflow; however, all digits are valid.

5. PRESCALER ADJUSTMENTS A18 (5327B)

- a. Set counter controls as follows:

| | |
|----------------------|----------|
| FUNCTION | FREQ C |
| TIME BASE | 0.1s |
| Input Selector | PRESCALE |

Table 5-4. Adjustments (Continued)

- b. With no input signal applied, adjust R3 offset pot for 0 V on U2 pin 4.
- c. Adjust R10 bias pot for $0.65 \pm .05$ V on U2 pin 3.
- d. Adjust R27 bias pot for $0.9 \pm .05$ V on U3 pin 3.
- e. Check that the previously adjusted voltage on U2 pin 3 is correct. If voltage has shifted, adjust R10 for proper reading and recheck U3 pin 3.
- f. Set HP VHF Signal Generator and doubler for 550 MHz at 1 V rms. Measure the output with an HP 3406A RF Voltmeter using a 50Ω termination at the probe. Connect signal source to INPUT C of counter.
- g. Reduce output level until counter's display becomes unstable. Adjust R3 for a stable display. Repeat this procedure until unable to obtain a stable reading. Increase signal level until display just becomes stable.
- h. Disconnect input and connect to voltmeter; reading should be 25 mV or less. Check other frequencies within the band.
- i. Set input selector switch to DIRECT.
- j. Change input signal to 50 MHz at 15 mV. Counter should display 50 MHz.

6. V-to-F CONVERTER AND ATTENUATOR A12, A13

- a. Set counter controls as follows:

SAMPLE RATE slightly clockwise out of
OFF

RANGE 10 V

FUNCTION DVM

TIME BASE 1s

- b. Connect a jumper lead across the DVM INPUT terminals.

- c. On Voltmeter Input Amplifier Assembly, adjust A12R31 ("ZERO" pot) for $\pm .0000$ V ± 1 count display.

- d. Disconnect jumper and connect DC Standard to DVM INPUT terminals. Set DC Standard for ± 10 V output.

- e. On V-to-F Converter Assembly, adjust A13R16 ("+" pot) for $+10.0000$ V ± 2 counts.

- f. Reverse polarity of the DC standard.
- g. Adjust A13R15 ("-" pot) for -10.0000 V ± 2 counts.
- h. Set counter RANGE switch to 100 V.
- i. Set DC Standard for +100 volt output.
- j. On Voltmeter Input Amplifier Assembly, adjust A12R21 ("100 V" pot) for $+100.000$ volts ± 2 counts on display.
- k. Reverse polarity of DC Standard and check that display is -100.000 volts ± 2 counts. If not, adjust A12R21 and repeat steps i., j., and k., until A12R21 setting gives display of $+100.000$ V ± 2 counts and -100.000 V ± 2 counts.

- l. Set counter RANGE switch to 1000 V.

CAUTION

Do not reverse polarity of voltage standard when 990 volts is applied. Damage to the voltage standard may occur.

- m. Set DC Standard for +990 volts output.
- n. On A12, adjust R24 (1000 V pot) for $+990.00 \pm 2$ counts on display.

7. INPUT C AMPLIFIER A17 (5326B)

- a. Set counter controls as follows:

FUNCTION FREQ C
TIME BASE 0.1s

- b. Set HP 606B HF Signal Generator (or equivalent) for 50 MHz at 500 mV rms. Measure the output signal of 606B with an HP 411A RF Millivoltmeter, using a 50Ω termination. Connect signal source to INPUT C of counter.

- c. Reduce output level until counter's display becomes unstable. Adjust R11 for a stable display. Repeat this procedure until unable to obtain a stable reading. Increase the signal level until display just becomes stable.

- d. Disconnect input and connect to voltmeter, reading should be less than 5 mV. Check other frequencies within the band.

Table 5-5. D.P. and Annunciator Troubleshooting

| Function Switch | Multiplier Switch | n | μ | m | s | * | Decimal | | | | | |
|-----------------|-------------------|---|-------|---|---|---|---------|--------|--------|--------|--------|--------|
| | | | | | | | 10^5 | 10^4 | 10^3 | 10^2 | 10^1 | 10^0 |
| Period AVG A | 1 | | x | | x | | | | | | x | x |
| | 10 | | x | | x | | | | | x | x | |
| | 10^2 | | x | | x | | | | | x | | |
| | 10^3 | x | | | x | | | | | | x | x |
| | 10^4 | x | | | x | | | | | x | x | |
| | 10^5 | x | | | x | | | | | x | | |
| | 10^6 | x | | | x | | | x | x | | | |
| | 10^7 | x | | | x | | | x | | | | |
| | 10^8 | x | | | x | | x | | | | | |
| T.I. AVG A to B | 1 | | x | | x | | | | | | x | x |
| | 10 | | x | | x | | | | | x | x | |
| | 10^2 | | x | | x | | | | | x | | |
| | 10^3 | x | | | x | | | | | | x | x |
| | 10^4 | x | | | x | | | | | x | x | |
| | 10^5 | x | | | x | | | | | x | | |
| | 10^6 | x | | | x | | | x | x | | | |
| | 10^7 | x | | | x | | x | | | | | |
| | 10^8 | x | | | x | | x | x | | | | |
| T.I. A to B | 1 | | x | | x | | | | | | x | x |
| | 10 | | x | | x | | | | | x | x | |
| | 10^2 | | | x | x | | | | | x | | |
| | 10^3 | | | x | x | | | | | | x | x |
| | 10^4 | | | x | x | | | | | x | | |
| | 10^5 | | | x | x | | | | | | x | |
| | 10^6 | | | | x | | | | | | | x |
| | 10^7 | | | | x | | | | | | | |
| | 10^8 | | | | x | | x | | | | | |
| Period A | 1 | | x | | x | | | | | | x | x |
| | 10 | | x | | x | | | | | x | x | |
| | 10^2 | | | x | x | | | | | x | | |
| | 10^3 | | | x | x | | | | | | x | x |
| | 10^4 | | | x | x | | | | | x | | |
| | 10^5 | | | x | x | | | | | | x | |
| | 10^6 | | | | x | | | | | | | x |
| | 10^7 | | | | x | | | | | | | |
| | 10^8 | | | | x | | x | | | | | |

Table 5-6. Frequency, D.P., and Annunciator Troubleshooting

| Function Switch | Multiplier Switch | G | k | M | Hz | Decimal | | | | | |
|------------------|-------------------|---|---|---|----|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| | | | | | | 10 ⁵ | 10 ⁴ | 10 ³ | 10 ² | 10 ¹ | 10 ⁰ |
| Freq. A | 1 | x | | | x | | | | | x | |
| | 10 | | | x | x | | | | | | x |
| | 10 ² | | | x | x | | | | | | |
| | 10 ³ | | | x | x | | | | | x | |
| | 10 ⁴ | | | x | x | | | | x | | |
| | 10 ⁵ | | x | | x | | | | | | x |
| | 10 ⁶ | | x | | x | | | | | x | |
| | 10 ⁷ | | x | | x | | | | x | | |
| | 10 ⁸ | | x | | x | | | x | | | |
| Freq. C DIRECT | 1 | x | | | x | | | | | x | |
| | 10 | | | x | x | | | | | | x |
| | 10 ² | | | x | x | | | | | | |
| | 10 ³ | | | x | x | | | | | x | |
| | 10 ⁴ | | | x | x | | | | | | x |
| | 10 ⁵ | | x | | x | | | | | | |
| | 10 ⁶ | | x | | x | | | | | x | |
| | 10 ⁷ | | x | | x | | | | x | | |
| | 10 ⁸ | | x | | x | | | x | | | |
| Freq. C PRESCALE | 1 | x | | | x | | | | | x | x |
| | 10 | x | | | x | | | | | | |
| | 10 ² | | | x | x | | | | | | |
| | 10 ³ | | | x | x | | | | | | x |
| | 10 ⁴ | | | x | x | | | | | x | |
| | 10 ⁵ | | x | | x | | | | | | |
| | 10 ⁶ | | x | | x | | | | | x | |
| | 10 ⁷ | | x | | x | | | | | | x |
| | 10 ⁸ | | x | | x | | | | x | | |

Table 5-7. DVM, D.P., and Annunciator Troubleshooting

| Function Switch | Multiplier Switch | G | k | M | Hz | V | Decimal | | | | | |
|-----------------|--|---|---|---|----|---|-----------------|-----------------|-----------------|-----------------|-----------------|--|
| | | | | | | | 10 ⁵ | 10 ⁴ | 10 ³ | 10 ² | 10 ¹ | 10 ⁰ |
| Read A Level | 1 10 10 ² 10 ³ 10 ⁴ 10 ⁵ 10 ⁶ 10 ⁷ 10 ⁸ | | | | | x | | | | | | x |
| DVM | 1 10 10 ² 10 ³ 10 ⁴ 10 ⁵ 10 ⁶ 10 ⁷ 10 ⁸ | | | | | x | | | | | | 10v 100v 10v 100v 1000v 10v 100v 1000v |

PERFORMANCE CHECK TEST CARD

Hewlett-Packard Model 5326B/5327B Test Performed by _____
Timer/Counter/DVM
Serial No. _____ Date _____

| DESCRIPTION | CHECK |
|--|---|
| 1. TIME BASE STABILITY AND OUTPUT Aging Rate: < 3 parts in 10^7 per month Line Voltage: < 1 part in 10^7 for 10% line variation Temperature: \leq 2.5 parts in 10^6 , 0-50°C Output: 10 MHz, > 2.4 volts peak-to-peak | _____ _____ _____ _____ |
| 2. DISPLAY, DECIMAL POINTS, AND DIVIDERS As per self-check procedures, Table 3-1 | _____ |
| 3. FREQUENCY RESPONSE AND SENSITIVITY Frequency A Range: 0 to 50 MHz Frequency C Range: 0 to 550 MHz (prescaled) 0 to 50 MHz (direct) Sensitivity, Frequency A: 100 mV rms Sensitivity, Frequency C (5326B): 5 mV rms Sensitivity, Frequency C (5327B Direct): 15 mV rms Sensitivity, Frequency C (5327B Prescaled): 25 mV rms Channel A Preset: 0 volts Channel A Level: +3.0 to -3.0 volts Channel B Preset: 0 volts Channel B Level: +3.0 to -3.0 volts Read A Level: +3 V to -3V Read B Level: +3 V to -3 V | _____ _____ _____ _____ _____ _____ _____ _____ _____ |
| 4. PULSE OPERATION <u>CHANNEL A</u> : Sensitivity: 0.3 volts peak-to-peak Pulse Width: 15 ns <u>INPUT C</u> : Sensitivity: 0.3 volts peak-to-peak Pulse Width: 15 ns | _____ _____ _____ |
| 5. PERIOD AND PERIOD OPERATION Frequency Range: 0 to 10 MHz at 100 mV | _____ |
| 6. TIME INTERVAL AND TIME INTERVAL AVERAGE Time Interval: 0.5 μ s at 300 mV Time Interval Average: 1/2 period of input signal | _____ |
| 7. TOTALIZE Range: 0 to 10 MHz Output: Rear panel TIME BASE BNC Factor: 1 to 10^8 in decade steps | _____ _____ _____ |

PERFORMANCE CHECK TEST CARD

8. RATIO

Range Channel A: 0 to 50 MHz
Range External Input: 100 Hz to 10 MHz

9. GATE OUTPUT AND SAMPLE RATE: Output: Step c

Step e
Step f
Step h

10. DIGITAL VOLTmeter: 10 volt range
 100 volt range
 1000 volt range
 12.490 volt check
 10 volt impedance check
 100 volt impedance check

11. DIGITAL RECORDER

Print Command: +5V to 0V
Output: Corresponds to input data

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphabetical order of their reference designators and indicates the description and HP Part Number of each part, together with any applicable notes. The table includes the following information.

- a. Description of part (see abbreviations below).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-2.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (TQ column).

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION

6-5. To obtain replacement parts, address order of inquiry to your local Hewlett-Packard Sales and Service Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard part numbers.

6-6. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

| REFERENCE DESIGNATORS | |
|-----------------------|---|
| A | = assembly |
| B | = motor |
| BT | = battery |
| C | = capacitor |
| CP | = coupler |
| CR | = diode |
| DLL | = delay line |
| DS | = device signaling (lamp) |
| E | = misc electronic part |
| F | = fuse |
| FL | = filter |
| IC | = integrated circuit |
| J | = jack |
| K | = relay |
| L | = inductor |
| LS | = loud speaker |
| M | = meter |
| MK | = microphone |
| MP | = mechanical part |
| P | = plug |
| Q | = transistor |
| R | = resistor |
| RT | = thermistor |
| S | = switch |
| T | = transformer |
| TB | = terminal board |
| TP | = test point |
| U | = integrated circuit |
| V | = vacuum, tube, neon bulb, photocell, etc. |
| VR | = voltage regulator |
| W | = cable |
| X | = socket |
| Y | = crystal |
| Z | = tuned cavity, network |
| ABBREVIATIONS | |
| A | = amperes |
| AFC | = automatic frequency control |
| AMPL | = amplifier |
| BFO | = beat frequency oscillator |
| BE CU | = beryllium copper |
| BH | = binder head |
| BP | = bandpass |
| BR&S | = brass |
| BWO | = backward wave oscillator |
| CCW | = counter-clockwise |
| CER | = ceramic |
| CMO | = cabinet mount only |
| COEF | = coefficient |
| COM | = common |
| COMP | = composition |
| COMPL | = complete |
| CONN | = connector |
| CP | = cadmium plate |
| CRT | = cathode-ray tube |
| CW | = clockwise |
| DEPC | = deposited carbon |
| DR | = drive |
| ELECT | = electrolytic |
| ENCAP | = encapsulated |
| EXT | = external |
| F | = farads |
| FH | = flat head |
| FIL H | = fillister head |
| FXD | = fixed |
| G | = giga (10^9) |
| GE | = germanium |
| GL | = glass |
| GRD | = ground(ed) |
| H | = henries |
| HDW | = hardware |
| HEX | = hexagonal |
| HG | = mercury |
| HR | = hour(s) |
| HZ | = hertz |
| IF | = intermediate freq |
| IMPG | = impregnated |
| INCD | = incandescent |
| INCL | = include(s) |
| INS | = insulation(ed) |
| INT | = internal |
| K | = kilo = 1000 |
| LH | = left hand |
| LIN | = linear taper |
| LK WASH | = lock washer |
| LOG | = logarithmic taper |
| LPF | = low pass filter |
| M | = milli = 10^{-3} |
| MEG | = meg = 10^6 |
| MET FLM | = metal film |
| MET OX | = metallic oxide |
| MFR | = manufacturer |
| MHZ | = mega hertz |
| MINAT | = miniature |
| MOM | = momentary |
| MOS | = metal oxide substrate |
| MTG | = mounting |
| MY | = "mylar" |
| N | = nano (10^{-9}) |
| N/C | = normally closed |
| NE | = neon |
| NI PL | = nickel plate |
| N/O | = normally open |
| NOM | = nominal |
| NPO | = negative positive zero (zero temperature coefficient) |
| NPN | = negative-positive-negative |
| NRFR | = not recommended for field replacement |
| NSR | = not separately replaceable |
| OBD | = order by description |
| OH | = oval head |
| OX | = oxide |
| P | = peak |
| PC | = printed circuit |
| PF | = picofarads = 10^{-12} farads |
| PH BRZ | = phosphor bronze |
| PHL | = Phillips |
| PIV | = peak inverse voltage |
| PNP | = positive-negative-positive |
| P/O | = part of |
| POLY | = polystyrene |
| PORC | = porcelain |
| POS | = position(s) |
| POT | = potentiometer |
| PP | = peak-to-peak |
| PT | = point |
| PWV | = peak working voltage |
| R | = rectifier |
| RF | = radio frequency |
| RH | = round head or right hand |
| RMO | = rack mount only |
| RMS | = root-mean square |
| RWV | = reverse working voltage |
| S-B | = slow-blow |
| SCR | = screw |
| SE | = selenium |
| SECT | = section(s) |
| SEMICON | = semiconductor |
| SI | = silicon |
| SIL | = silver |
| SL | = slide |
| SPG | = spring |
| SPL | = special |
| SST | = stainless steel |
| SR | = split ring |
| STL | = steel |
| TA | = tantalum |
| TD | = time delay |
| TGL | = toggle |
| THD | = thread |
| TI | = titanium |
| TOL | = tolerance |
| TRIM | = trimmer |
| TWT | = traveling wave tube |
| U | = micro = 10^{-6} |
| VAR | = variable |
| VDCW | = dc working volts |
| W' | = with |
| W | = watts |
| WIV | = working inverse voltage |
| WW | = wirewound |
| W'0 | = without |

Model 5326/27B
Replaceable Parts

Figure 6-1. Panel Designations

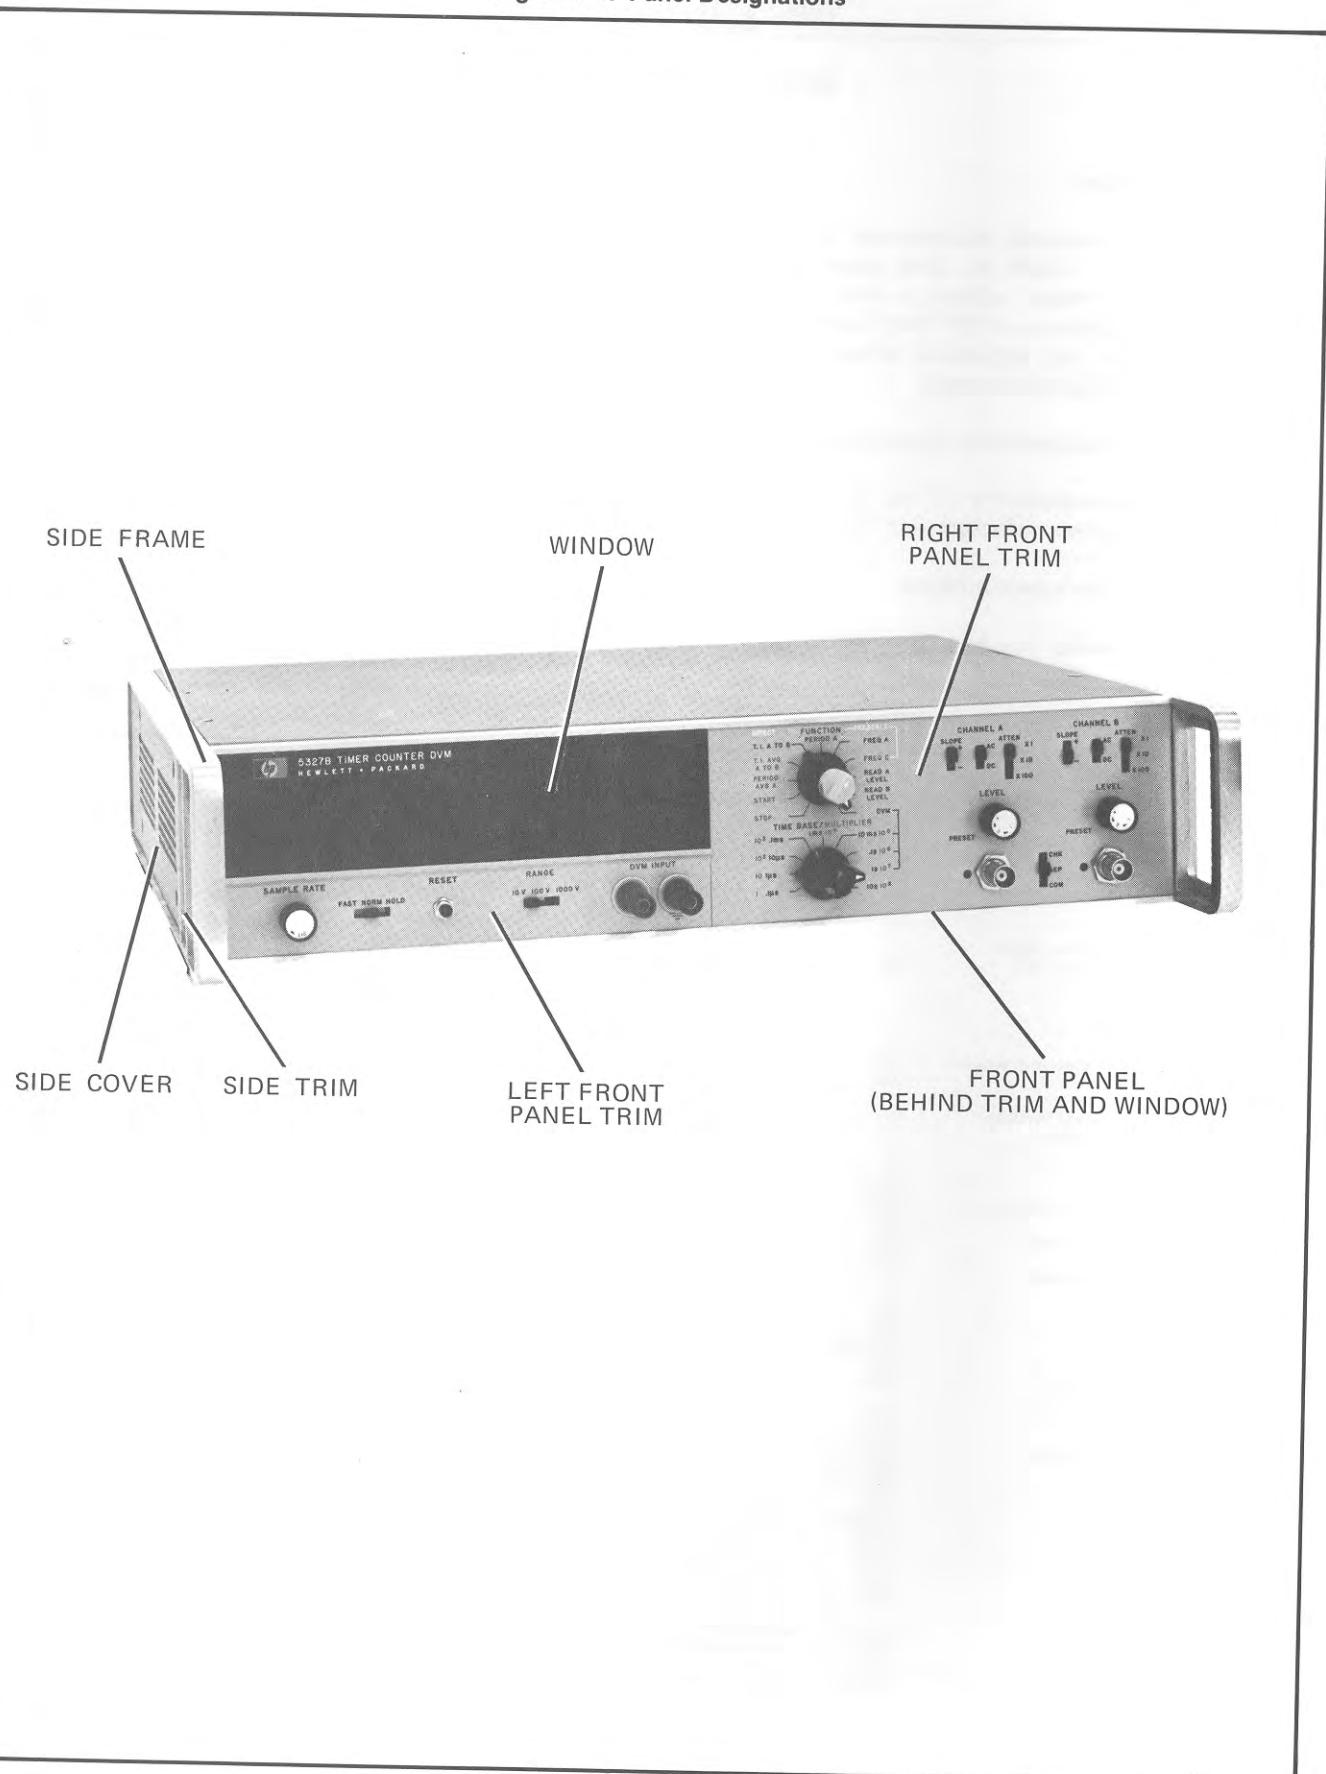


Table 6-1. Replaceable Parts, Standard Instruments

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|---|----------|-----------------|
| A1 | 05326-60047 | 1 | ATTENUATOR ASSY (SERIES 1224A) (LOADED ON 05326-20047 BLANK BOARD) | 28480 | 05326-60047 |
| | | | NOTE 1 A1R24 & A1R26 ARE NOT INCLUDED WHEN A1 IS ORDERED; ORDER A1R24 & R26 SEPARATELY | | |
| A1C1 | 0160-2244 | 2 | C:FXD CER 3.0+/-0.25 PF 500VDCW | 28480 | 0160-2244 |
| A1C2 | 0160-0939 | 2 | C: FXD MICA 430 PF 5% 300 VDCW | 28480 | 0160-0939 |
| A1C3 | 0160-0378 | 2 | C:FXD MICA 27PF 5% | 72136 | RDM15E270J5S |
| A1C4 | 0160-0161 | 4 | C:FXD MY 0.01 UF 10% 200VDCW | 56289 | 192P10392-PTS |
| A1C5 | 0160-2140 | 2 | C:FXD CER 470 PF +80-20% 1000VDCW | 91418 | TYPE B |
| A1C6 | 0160-2930 | 19 | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A1C7 | 0160-2197 | 2 | C: FXD MICA 10 PF 5% | 72136 | RDM15C100J3C |
| A1C8 | 0160-2146 | 2 | C:FXD CER 0.02 UF +80-20% 100VDCW | 91418 | TA |
| A1C9 | 0160-2930 | 2 | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A1C10 | 0160-2244 | | C:FXD CER 3.0+/-0.25 PF 500VDCW | 28480 | 0160-2244 |
| A1C11 | 0160-0939 | | C: FXD MICA 430 PF 5% 300 VDCW | 28480 | 0160-0939 |
| A1C12 | 0160-0378 | | C:FXD MICA 27PF 5% | 72136 | RDM15E270J5S |
| A1C13 | 0160-0161 | | C:FXD MY 0.01 UF 10% 200VDCW | 56289 | 192P10392-PTS |
| A1C14 | 0160-2140 | | C:FXD CER 470 PF +80-20% 1000VDCW | 91418 | TYPE B |
| A1C15 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A1C16 | 0160-2197 | | C:FXD MICA 10 PF 5% | 72136 | RDM15C100J3C |
| A1C17 | 0160-2146 | | C:FXD CER 0.02 UF +80-20% 100VDCW | 91418 | TA |
| A1CR1 | 1910-0016 | 24 | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A1CR2 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A1CR3 | 1901-0376 | 6 | DIODE:SILICON 35V | 28480 | 1901-0376 |
| A1CR4 | 1901-0376 | | DIODE:SILICON 35V | 28480 | 1901-0376 |
| A1CR6 | 1902-0041 | 4 | DIODE:BREAKDOWN 5.11V 5% | 04713 | SZ10939-98 |
| A1CR7 | 1902-0041 | | DIODE:BREAKDOWN 5.11V 5% | 04713 | SZ10939-98 |
| A1CR9 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A1CR10 | 1901-0376 | | DIODE:SILICON 35V | 28480 | 1901-0376 |
| A1CR11 | 1901-0376 | | DIODE:SILICON 35V | 28480 | 1901-0376 |
| A1CR13 | 1902-0041 | | DIODE:BREAKDOWN 5.11V 5% | 04713 | SZ10939-98 |
| A1CR14 | 1902-0041 | | DIODE:BREAKDOWN 5.11V 5% | 04713 | SZ10939-98 |
| A1DS1 | 2140-0047 | 2 | LAMP:NEON GLOW 0.8 MILLIAMPS | 08806 | A1C |
| A1DS2 | 2140-0047 | | LAMP:NEON GLOW 0.8 MILLIAMPS | 08806 | A1C |
| A1J1 | 1251-0472 | 2 | CONNECTOR:PC 12 CONTACTS | 71785 | 252-06-30-300 |
| A1J2 | 1251-0472 | | CONNECTOR:PC 12 CONTACTS | 71785 | 252-06-30-300 |
| A1J3 | 1250-1163 | 2 | CONNECTOR:RF BNC INPUT | 28480 | 1250-1163 |
| A1J4 | 1250-1163 | | CONNECTOR:RF BNC INPUT | 28480 | 1250-1163 |
| A1Q1 | 1855-0334 | 2 | TSTR:SI FET DUAL N-CHANNEL | 17856 | DN377 |
| A1Q2 | 1855-0334 | | TSTR:SI FET DUAL N-CHANNEL | 17856 | DN377 |
| A1R1 | 0683-2235 | 4 | R:FXD COMP 22K OHM 5% 1/4W | 01121 | CB 2235 |
| A1R2 | 0683-9145 | 4 | R:FXD COMP 910K OHM 5% 1/4W | 01121 | CB 9145 |
| A1R3 | 0683-1015 | 21 | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A1R4 | 0757-0947 | 2 | R:FXD COMP 9100 OHM 2% 1/4W | 28480 | 0757-0947 |
| A1R5 | 0757-0973 | 4 | R:FXD COMP 110K OHM 2% 1/4W | 28480 | 0757-0973 |
| A1R6 | 0683-1055 | | R:FXD COMP 1 MEGOHM 5% 1/4W | 01121 | CB 1055 |
| A1R7 | 0757-0973 | | R:FXD COMP 110K OHM 2% 1/4W | 28480 | 0757-0973 |
| A1R8 | 0683-2215 | 8 | R:FXD COMP 220 OHM 5% 1/4W | 01121 | CB 2215 |
| A1R9 | 0683-4715 | 8 | R:FXD COMP 470 OHM 5% 1/4W | 01121 | CB 4715 |
| A1R10 | 0683-1055 | | R:FXD COMP 1 MEGOHM 5% 1/4W | 01121 | CB 1055 |
| A1R11 | 0683-3325 | 19 | R:FXD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A1R12 | 0683-4715 | | R:FXD COMP 470 OHM 5% 1/4W | 01121 | CB 4715 |
| A1R13 | 0683-4715 | | R:FXD COMP 470 OHM 5% 1/4W | 01121 | CB 4715 |
| A1R14 | 0683-2225 | 24 | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A1R15 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A1R16 | 0683-2235 | | R:FXD COMP 22K OHM 5% 1/4W | 01121 | CB 2235 |
| A1R17 | 0683-9145 | | R:FXD COMP 910K OHM 5% 1/4W | 01121 | CB 9145 |
| A1R18 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A1R19 | 0757-0947 | | R:FXD COMP 9100 OHM 2% 1/4W | 28480 | 0757-0947 |
| A1R20 | 0757-0973 | | R:FXD COMP 110K OHM 2% 1/4W | 28480 | 0757-0973 |
| A1R21 | 0683-1055 | | R:FXD COMP 1 MEGOHM 5% 1/4W | 01121 | CB 1055 |
| A1R22 | 0757-0973 | | R:FXD COMP 110K OHM 2% 1/4W | 28480 | 0757-0973 |
| A1R23 | 0683-2215 | | R:FXD COMP 220 OHM 5% 1/4W | 01121 | CB 2215 |
| A1R24 | 2100-3228 | 2 | R:VAR COMP 10K OHM 20% LIN 1/2W (SEE NOTE 1 ABOVE) | 28480 | 2100-3228 |
| A1R25 | 0683-1055 | | R:FXD COMP 1 MEGOHM 5% 1/4W | 01121 | CB 1055 |
| A1R26 | 2100-3228 | | R:VAR COMP 10K OHM 20% LIN 1/2W (SEE NOTE 1 ABOVE) | 28480 | 2100-3228 |
| A1R27 | 0683-4715 | | R:FXD COMP 470 OHM 5% 1/4W | 01121 | CB 4715 |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|--------------------|
| A1R28 | 0683-3325 | | R:FXD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A1R29 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A1R30 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A1R31 | 0683-1005 | 6 | R:FXD COMP 10 OHM 5% 1/4W | 01121 | CB 1005 |
| A1R32 | 0683-1005 | | R:FXD COMP 10 OHM 5% 1/4W | 01121 | CB 1005 |
| A1R33 | 0683-1005 | | R:FXD COMP 10 OHM 5% 1/4W | 01121 | CB 1005 |
| A1R34 | 0683-1005 | | R:FXD COMP 10 OHM 5% 1/4W | 01121 | CB 1005 |
| A1S1 | 3101-1598 | 1 | SWITCH:SLIDE DP3 POSITION | 28480 | 3101-1598 |
| A1S2 | 3101-1595 | 2 | SWITCH:SLIDE DP3 POSITIONS | 78488 | SS-93 |
| A1S3 | 3101-1595 | | SWITCH:SLIDE DP3 POSITIONS | 78488 | SS-93 |
| A1S4 | 3101-1596 | 4 | SWITCH:SLIDE DPDT MINIATURE | 78488 | SS-91-1 |
| A1S5 | 3101-1594 | 2 | SWITCH:SLIDE DPDT | 28480 | 3101-1594 |
| A1S6 | 3101-1594 | | SWITCH:SLIDE DPDT | 28480 | 3101-1594 |
| A1S7 | 3101-1596 | | SWITCH:SLIDE DPDT MINIATURE | 78488 | SS-91-1 |
| A1S8 | | | PART OF R24 | | |
| A1S9 | | | PART OF R26 | | |
| A2 | 05326-60004 | 2 | INPUT AMPLIFIER ASSY (SERIES 972) (LOADED ON 05326-20004 BLANK BOARD) | 28480 | 05326-60004 |
| A2C1 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A2C2 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A2C3 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A2C4 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A2C5 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A2C6 | 0160-0153 | 4 | C:FXD MY 0.001 UF 10% 200VDCW | 56289 | 192P10292-PTS |
| A2C7 | 0170-0055 | 6 | C:FXD MY 0.1UF 20% 200VDCW | 56289 | 192P10402 |
| A2C8 | 0170-0055 | | C:FXD MY 0.1UF 20% 200VDCW | 56289 | 192P10402 |
| A2C9 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A2C10 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A2CR1 | 1902-0049 | 3 | DIODE:BREAKDOWN 6.19V 5% | 04713 | SZ10939-122 |
| A2CR2 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A2CR3 | 1901-0040 | 28 | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A2CR4 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A2CR5 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A2L1 | 9140-0144 | | COIL:FXD RF 4.7 UH | 28480 | 28480 |
| A2L2 | 9100-2255 | | COIL:CHOKE 0.47 UH 10% | 28480 | 9100-2255 |
| A2L3 | 9140-0144 | | COIL:FXD RF 4.7 UH | 28480 | 9140-0144 |
| A2L4 | 9140-0144 | | COIL:FXD RF 4.7 UH | 28480 | 9140-0144 |
| A2L5 | 9100-2255 | | COIL:CHOKE 0.47 UH 10% | 28480 | 9100-2255 |
| A2L6 | 9140-0144 | | COIL:FXD RF 4.7 UH | 28480 | 9140-0144 |
| A2L7 | 9140-0144 | | COIL:FXD RF 4.7 UH | 28480 | 9140-0144 |
| A2L8 | 9140-0142 | 4 | COIL:FXD RF 2.20 UH 10% | 82142 | 05-4436-4K |
| A2L9 | 9140-0144 | | COIL:FXD RF 4.7 UH | 28480 | 9140-0144 |
| A2L10 | 9140-0144 | | COIL:FXD RF 4.7 UH | 28480 | 9140-0144 |
| A2Q1 | 1854-0092 | 25 | TSTR:SI NPN | 80131 | 2N3563 |
| A2Q2 | 1853-0015 | 20 | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q3 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q4 | 1854-0345 | 6 | TSTR:SI NPN | 80131 | 2N5179 |
| A2Q5 | 1854-0345 | | TSTR:SI NPN | 80131 | 2N5179 |
| A2Q6 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q7 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q8 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A2Q9 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q10 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q11 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q12 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q13 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A2Q14 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A2Q15 | 1854-0071 | 23 | TSTR:SI NPN (SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A2Q16 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A2Q17 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A2Q18 | 1854-0365 | 8 | TSTR:SI NPN | 80131 | 2N4410 |
| A2Q19 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A2Q20 | 1854-0071 | | TSTR:SI NPN (SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A2R1 | 0683-6835 | 3 | R:FXD COMP 68K OHM 5% 1/4W | 01121 | CB 6835 |
| A2R2 | 2100-2520 | 2 | R:VAR CERMET 50 OHM 20% TYPE V 1/2W | 28480 | 2100-2520 |
| A2R3 | 0683-2215 | | R:FXD COMP 220 OHM 5% 1/4W | 01121 | CB 2215 |
| A2R4 | 0683-2405 | 2 | R:FXD COMP 24 OHM 5% 1/4W | 01121 | CB 2405 |
| A2R5 | 0683-3625 | 5 | R:FXD COMP 3600 OHM 5% 1/4W | 01121 | CB 3625 |
| A2R6 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A2R7 | 0683-3025 | 7 | R:FXD COMP 3000 OHM 5% 1/4W | 01121 | CB 3025 |
| A2R8 | 0683-1025 | 36 | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |

See introduction to this section for ordering information

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|---|----------|--------------------|
| A2R9 | 0698-3113 | 5 | R:FXD CARBON 100 OHM 5% 1/8W | 28480 | 0698-3113 |
| A2R10 | 0698-3381 | 4 | R:FXD COMP 150 OHM 5% 1/8W | 28480 | 0698-3381 |
| A2R11 | 0698-5175 | 4 | R:FXD COMP 360 OHM 5% 1/8W | 28480 | 0698-5175 |
| A2R12 | 0698-3379 | 2 | R:FXD COMP 68 OHM 5% 1/8W | 28480 | 0698-3379 |
| A2R13 | 0698-3375 | 2 | R:FXD COMP 33 OHM 5% 1/8W | 28480 | 0698-3375 |
| A2R14 | 0683-1525 | 13 | R:FXD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A2R15 | 0698-5180 | 4 | R:FXD COMP 2K OHM 5% 1/8W | 28480 | 0698-5180 |
| A2R16 | 0698-5175 | | R:FXD COMP 360 OHM 5% 1/8W | 28480 | 0698-5175 |
| A2R17 | 0698-3381 | | R:FXD COMP 150 OHM 5% 1/8W | 28480 | 0698-3381 |
| A2R18 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A2R19 | 0698-3113 | | R:FXD CARBON 100 OHM 5% 1/8W | 28480 | 0698-3113 |
| A2R20 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A2R21 | 0683-3025 | | R:FXD COMP 3000 OHM 5% 1/4W | 01121 | CB 3025 |
| A2R22 | 0683-3625 | | R:FXD COMP 3600 OHM 5% 1/4W | 01121 | CB 3625 |
| A2R23 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A2R24 | 2100-2521 | 2 | R:VAR FLM 2000 OHM 10% LIN 1/2W | 28480 | 2100-2521 |
| A2R25 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A2R26 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A2R27 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A2R28 | 0683-6815 | 9 | R:FXD COMP 680 OHM 5% 1/4W | 01121 | CB 6815 |
| A2R29 | 0683-6815 | | R:FXD COMP 680 OHM 5% 1/4W | 01121 | CB 6815 |
| A2R30 | 0683-4725 | 5 | R:FXD COMP 4700 OHM 5% 1/4W | 01121 | CB 4725 |
| A2R31 | 0683-1035 | 22 | R:FXD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A2R32 | 0683-3315 | 6 | R:FXD COMP 330 OHM 5% 1/4W | 01121 | CB 3315 |
| A2R33 | 0683-1035 | | R:FXD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A2R34 | 0683-3315 | | R:FXD COMP 330 OHM 5% 1/4W | 01121 | CB 3315 |
| A2R35 | 0683-1035 | | R:FXD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A2R36 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A2R37 | 0683-2235 | | R:FXD COMP 22K OHM 5% 1/4W | 01121 | CB 2235 |
| A2R38 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A2R39 | 0683-2215 | | R:FXD COMP 220 OHM 5% 1/4W | 01121 | CB 2215 |
| A2R40 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A2R41 | 0683-1525 | | R:FXD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A2R42 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A2R43 | 0683-3035 | 2 | R:FXD COMP 30K OHM 5% 1/4W | 01121 | CB 3035 |
| A2R44 | 0683-3015 | 7 | R:FXD COMP 300 OHM 5% 1/4W | 01121 | CB 3015 |
| A2R45 | 0683-3315 | | R:FXD COMP 330 OHM 5% 1/4W | 01121 | CB 3315 |
| A2R46 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A2R47 | 0683-1065 | 2 | R:FXD COMP 10M OHM 5% 1/4W | 01121 | CB 1065 |
| A2R48 | 0683-2055 | 2 | R:FXD COMP 2 MEGOHM 5% 1/4W | 01121 | CB 2055 |
| A2R49 | 0683-2715 | 5 | R:FXD COMP 270 OHM 5% 1/4W | 01121 | CB 2715 |
| A2R50 | 0683-2715 | | R:FXD COMP 270 OHM 5% 1/4W | 01121 | CB 2715 |
| A2U1 | 1820-0238 | 2 | INTEGRATED CIRCUIT:DTL 2 INPUT NOR GATE | 04713 | MC 1810P |
| A2U2 | 1820-0142 | 3 | INTEGRATED CIRCUIT:4 INPUT,2-OR/NOR | 04713 | MC1004P |
| A3 | | | SAME AS A2, USE PREFIX A3 | | |
| A4 | 05326-60002 | 1 | OSCILLATOR ASSY (SERIES 1032) (LOADED ON 05326-20002 BLANK BOARD) | 28480 | 05326-60002 |
| A4C1 | 0160-0161 | | C:FXD MY 0.01 UF 10% 200VDCW | 56289 | 192P10392-PTS |
| A4C2 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A4C3 | 0121-0059 | 1 | C:VAR CER 2-8 PF 300VDCW | 28480 | 0121-0059 |
| A4C4 | 0160-2264 | 1 | C:FXD CER 20 PF 5% 500VDCW | 72982 | 301-000-COGO-200J |
| A4C5 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A4L1 | 9100-2276 | 1 | COIL/CHOKE 100 UH 10 ⁻³ | 28480 | 9100-2276 |
| A4Q1 | 1850-0158 | 1 | TSTR:GE PNP | 80131 | 2N2635 |
| A4R1 | 0698-4037 | 1 | R:FXD MET FLM 46.4 OHM 1% 1/8W | 28480 | 0698-4037 |
| A4R2 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A4R3 | 0683-3015 | | R:FXD COMP 300 OHM 5% 1/4W | 01121 | CB 3015 |
| A4R4 | 0683-3015 | | R:FXD COMP 300 OHM 5% 1/4W | 01121 | CB 3015 |
| A4U1 | 1820-0142 | | INTEGRATED CIRCUIT:4 INPUT,2-OR/NOR | 04713 | MC1004P |
| A4Y1 | 0410-0405 | 1 | CRYSTAL=QUARTZ 10 MHZ | 28480 | 0410-0405 |
| A5 | 05326-60005 | 1 | TIME BASE CONTROL ASSY (SERIES 972) (LOADED ON 05326-20005 BLANK BOARD) | 28480 | 05326-60005 |
| A5C1 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|---|----------|--------------------|
| A5C2 | 0160-0127 | 1 | C:FWD CER 1.0 UF 20% 25VDCW | 56289 | 5C13CS-CML |
| A5C3 | 0180-0291 | 2 | C:FWD ELECT 1.0 UF 10% 35VDCW | 56289 | 150D105X9035A2-DYS |
| A5C4 | 0160-2150 | 5 | C:FWD MICA 33 PF 5% | 56289 | 0160-2150 |
| A5C5 | 0160-2204 | 2 | C:FWD MICA 100PF 5% | 28480 | RDM15F101J3C |
| A5CR1 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 72136 | FDG1088 |
| A5Q1 | 1854-0092 | | TSTR:SI NPN | 07263 | |
| A5Q2 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A5Q3 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 80131 | 2N3563 |
| A5Q4 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A5Q5 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A5Q6 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A5R1 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 28480 | 1854-0071 |
| A5R2 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A5R3 | 0683-5105 | 4 | R:FWD COMP 51 OHM 5% 1/4W | 01121 | CB 1035 |
| A5R4 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 5105 |
| A5R5 | 0683-4715 | | R:FWD COMP 470 OHM 5% 1/4W | 01121 | CB 4715 |
| A5R6 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A5R7 | 0683-1225 | | R:FWD COMP 1200 OHM 5% 1/4W | 01121 | CB 1225 |
| A5R8 | 0683-1025 | | FACTORY SELECTED VALUE. | 01121 | |
| A5R9 | 0683-1025 | | R:FWD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A5R10 | 0683-2215 | | R:FWD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A5R11 | 0683-6835 | | R:FWD COMP 220 OHM 5% 1/4W | 01121 | CB 2215 |
| A5R12 | 0683-3325 | | R:FWD COMP 68K OHM 5% 1/4W | 01121 | CB 6835 |
| A5R13 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A5R14 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A5R15 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A5R16 | 0683-1025 | | R:FWD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A5R17 | 0683-1025 | | R:FWD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A5R18 | 0683-2225 | | R:FWD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A5R19 | 0683-2225 | | R:FWD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A5R20 | 0683-5105 | | R:FWD COMP 51 OHM 5% 1/4W | 01121 | CB 5105 |
| A5R21 | 0683-5105 | | R:FWD COMP 51 OHM 5% 1/4W | 01121 | CB 5105 |
| A5U1 | 1820-0412 | 7 | INTEGRATED CIRCUIT:DECade DIVIDER | 28480 | 1820-0412 |
| A5U2 | 1820-0412 | | INTEGRATED CIRCUIT:DECade DIVIDER | 28480 | 1820-0412 |
| A5U3 | 1820-0412 | | INTEGRATED CIRCUIT:DECade DIVIDER | 28480 | 1820-0412 |
| A5U4 | 1820-0412 | | INTEGRATED CIRCUIT:DECade DIVIDER | 28480 | 1820-0412 |
| A5U5 | 1820-0054 | 4 | IC:TTL QUAD 2-INPT NAND GATE | 01295 | SN740CN |
| A5U6 | 1820-0412 | | INTEGRATED CIRCUIT:DECade DIVIDER | 28480 | 1820-0412 |
| A5U7 | 1820-0412 | | INTEGRATED CIRCUIT:DECade DIVIDER | 28480 | 1820-0412 |
| A5U8 | 1820-0412 | | INTEGRATED CIRCUIT:DECade DIVIDER | 28480 | 1820-0412 |
| A5U9 | 1820-0413 | 2 | INTEGRATED CIRCUIT:DECade DIVIDER | 28480 | 1820-0412 |
| A5U10 | 1820-0174 | 1 | IC:TTL DECADE DIVIDER 12.5 MHZ MIN. | 28480 | 1820-0413 |
| | | | IC:TTL HEX INVERTER | 01295 | SN7404N |
| A6 | 05326-60013 | 1 | SAMPLE RATE ASSY (SERIES 1224A) (LOADED ON 05326-20013 BLANK BOARD) | 28480 | 05326-60013 |
| A6C1 | 0160-2201 | 1 | C:FWD MICA 51 PF 5% | 72136 | RDM15E510J1C |
| A6C2 | 0160-0134 | 1 | C:FWD MICA 220PF 5% 300VDCW | 14655 | RDM15F221J3C |
| A6C3 | 0180-0228 | 1 | C:FWD ELECT 22 UF 10% 15VDCW | 56289 | 1500226X9015B2-DYS |
| A6C4 | 0160-0166 | 1 | C:FWD MY 0.068 UF 10% 200VDCW | 56289 | 192P68392-PTS |
| A6C5 | 0140-0193 | 1 | C:FWD MICA 82 PF 5% | 28480 | 0140-0193 |
| A6C6 | 0160-0153 | | C:FWD MY 0.001 UF 10% 200VDCW | 56289 | 192P10292-PTS |
| A6C7 | 0160-2199 | 2 | C:FWD MICA 30 PF 5% 300VDCW | 28480 | C160-2199 |
| A6C8 | 0160-0153 | | FACTORY SELECTED PART | 56289 | 192P10292-PTS |
| A6C9 | 0180-0291 | | C:FWD MY 0.001 UF 10% 200VDCW | 56289 | 150D105X9035A2-DYS |
| A6C10 | 0160-0161 | | C:FWD MY 0.01 UF 10% 200VDCW | 56289 | 192P10392-PTS |
| A6C11 | 0180-0114 | | C:FWD ELECT 4.0 UF +100-10% 25VDCW | 28480 | 0180-0114 |
| A6C12 | 0180-0114 | | C:FWD ELECT 4.0 UF +100-10% 25VDCW | 28480 | 0180-0114 |
| A6CR1 | 1901-0040 | 6 | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A6CR2 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A6CR3 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A6CR4 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A6CR5 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A6CR7 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A6CR8 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A6CR9 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A6CR10 | 1901-C040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A6CR11 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A6Q1 | 1854-0071 | | TSTR:SI NPN(Selected From 2N3704) | 28480 | 1854-0071 |
| A6Q2 | 1854-0071 | | TSTR:SI NPN(Selected From 2N3704) | 28480 | 1854-0071 |

See introduction to this section for ordering information

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|-----------------|
| A6Q3 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A6Q4 | 1854-0009 | | TSTR:SI NPN | 80131 | 2N709 |
| A6Q5 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A6Q6 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A6Q7 | 1854-0215 | 1 | TSTR:SI NPN | 80131 | 2N3904 |
| A6Q8 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A6Q9 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A6Q10 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A6Q11 | 1854-0009 | | TSTR:SI NPN | 80131 | 2N709 |
| A6Q12 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A6Q13 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A6R1 | 0683-1015 | | R:FWD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A6R2 | 0683-1525 | | R:FWD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A6R3 | 0683-5125 | | R:FWD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A6R4 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R5 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R6 | 0683-5125 | | R:FWD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A6R7 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R8 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A6R9 | 0683-3015 | | R:FWD COMP 300 OHM 5% 1/4W | 01121 | CB 3015 |
| A6R10 | 0683-2025 | 6 | R:FWD COMP 2000 OHM 5% 1/4W | 01121 | CB 2025 |
| A6R11 | 0683-2735 | 5 | R:FWD COMP 27K OHM 5% 1/4W | 01121 | CB 2735 |
| A6R12 | 0683-5125 | | R:FWD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A6R13 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A6R14 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R15 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A6R16 | 0683-5125 | | R:FWD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A6R17 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A6R18 | 0683-3325 | | R:FWD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A6R19 | 0683-5115 | 8 | R:FWD COMP 510 OHM 5% 1/4W | 01121 | CB 5115 |
| A6R20 | 0683-2735 | | R:FWD COMP 27K OHM 5% 1/4W | 01121 | CB 2735 |
| A6R21 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R22 | 0683-3915 | 3 | R:FWD COMP 390 OHM 5% 1/4W | 01121 | CB 3915 |
| A6R23 | 0683-2025 | | R:FWD COMP 2000 OHM 5% 1/4W | 01121 | CB 2025 |
| A6R24 | 0683-6215 | 1 | R:FWD COMP 620 OHM 5% 1/4W | 01121 | CB 6215 |
| A6R25 | 0683-1525 | | R:FWD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A6R26 | 0683-2025 | | R:FWD COMP 2000 OHM 5% 1/4W | 01121 | CB 2025 |
| A6R27 | 0683-3025 | | R:FWD COMP 3000 OHM 5% 1/4W | 01121 | CB 3025 |
| A6R28 | 0683-9115 | | R:FWD COMP 910 OHM 5% 1/4W | 01121 | CB 9115 |
| A6R29 | 0683-1525 | | R:FWD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A6R30 | 0683-2415 | 2 | R:FWD COMP 240 OHM 5% 1/4W | 01121 | CB 2415 |
| A6R31 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R32 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R33 | 0683-2735 | | R:FWD COMP 27K OHM 5% 1/4W | 01121 | CB 2735 |
| A6R34 | 0683-2735 | | R:FWD COMP 27K OHM 5% 1/4W | 01121 | CB 2735 |
| A6R35 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R36 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R37 | 0683-2045 | 1 | R:FWD COMP 200K OHM 5% 1/4W | 01121 | CB 2045 |
| A6R38 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R39 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A6R40 | 0683-4735 | 2 | R:FWD COMP 47K OHM 5% 1/4W | 01121 | CB 4735 |
| A6R41 | 0683-1525 | | R:FWD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A6R42 | 0683-1015 | | R:FWD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A6R43 | 0683-4735 | | R:FWD COMP 47K OHM 5% 1/4W | 01121 | CB 4735 |
| A6R44 | 0683-1015 | | R:FWD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A6U1 | 1820-0054 | | IC:TTL QUAD 2-INPT NAND GATE | 01295 | SN7400N |
| A6U2 | 1820-0272 | 1 | IC:ECL TYPE D F/F | 04713 | MC1022P |
| A6U3 | 1820-0068 | 1 | IC:TTL TRIPLE 3-INPUT POS NAND GATE | 12040 | SN7410N |
| A6U4 | 1820-0054 | | IC:TTL QUAD 2-INPT NAND GATE | 01295 | SN7400N |
| A6U5 | 1820-0328 | 1 | IC:TTL QUAD 2-INPT NOR GATE | 04713 | SN7402N |
| A6U6 | 1820-0147 | 4 | IC:ECL TRIPLE 3-INPT NOR GATE | 04713 | MC1007P |
| A7 | 05327-60031 | 1 | BOARD ASSY:FUNCTION CONTROL (SERIES 1312A) (LOADED ON 05327-20004 BLANK BOARD) | 28480 | 05327-60031 |
| A7C1 | 0160-2306 | 1 | C: FXD MICA 27 PF 5% | 28480 | 0160-2306 |
| A7C2 | 0150-0042 | 1 | C: FXD TI 4.7 PF 5% 500VDCW | 78488 | TYPE GA |
| A7C3 | 0160-2150 | 1 | C: FXD MICA 33 PF 5% 300VDCW | 28480 | 0160-2150 |
| A7CR1 | 1901-0535 | 2 | FACTORY SELECTED PART | | |
| A7R1 | 0683-1125 | 4 | DIODE:HYBRID HOT CARRIER | 28480 | 1901-0535 |
| A7R2 | 0683-1825 | 6 | R:FWD COMP 1100 OHM 5% 1/4W | 01121 | CB 1125 |
| A7R3 | 0683-1825 | | R:FWD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A7R4 | 0683-1025 | | R:FWD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| | | | R:FWD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|---|----------|-----------------|
| A9U14 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-0116 |
| A9U15 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-0116 |
| A9U17 | 1820-0729 | | IC:DECODER-DIVIDER | 28480 | 1820-0729 |
| A9U18 | 1820-0092 | 6 | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U19 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U20 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U21 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U22 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U23 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9XU8 | 1200-0477 | 3 | INTEGRATED CIRCUIT:DECODER-DIVIDER SOCKET:IC | 28480 | 1820-0092 |
| A9XU16 | 1200-0477 | | SOCKET:IC | 28480 | 1200-0477 |
| A9XU24 | 1200-0477 | | SOCKET:IC | 28480 | 1200-0477 |
| A10 | 05327-60008 | 1 | RIGHT READOUT ASSY (SERIES 1116A, REV. B) (LOADED ON 05327-20008 BLANK BOARD) | 28480 | 05327-60008 |
| | 05326-00009 | 2 | BRACKET:READOUT | 28480 | 05326-00009 |
| | 05326-80008 | 1 | INDICATOR:MASK (U,N,S) | 28480 | 05326-80008 |
| | 05326-80009 | 1 | INDICATOR:MASK (V,M,HZ) | 28480 | 05326-80009 |
| | 05326-80010 | 1 | INDICATOR:MASK (*,K,G) | 28480 | 05326-80010 |
| A10CR1 | 05330-40002 | 2 | BLOCK:ANNUNCIATOR | 28480 | 05330-40002 |
| A10CR2 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A10DS1 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A10DS2 | 2140-0313 | 14 | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A10DS3 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A10DS4 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A10DS5 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A10DS6 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A10DS7 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A10DS8 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A10DS9 | 2140-0313 | | LAMP:NEON GLCW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A10Q1 | 1854-0009 | | TSTR:SI NPN | 08806 | C2A-B |
| A10Q2 | 1854-0009 | | TSTR:SI NPN | 80131 | 2N709 |
| A10Q3 | 1854-0009 | | TSTR:SI NPN | 80131 | 2N709 |
| A10Q4 | 1854-0474 | 16 | TSTR:SI NPN | 80131 | 2N709 |
| A10Q5 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10Q6 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10Q7 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10Q8 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10Q9 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10Q10 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10Q11 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10Q12 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10Q13 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A10R1 | 0683-5125 | | R:FWD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A10R2 | 0683-5125 | | R:FWD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A10R3 | 0683-5125 | | R:FWD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A10R4 | 0683-3025 | | R:FWD COMP 3000 OHM 5% 1/4W | 01121 | CB 5125 |
| A10R5 | 0683-2025 | | R:FWD COMP 2000 OHM 5% 1/4W | 01121 | CB 3025 |
| A10R6 | 0683-2025 | | R:FWD COMP 2000 OHM 5% 1/4W | 01121 | CB 2025 |
| A10R7 | 0683-3025 | | R:FWD COMP 3000 OHM 5% 1/4W | 01121 | CB 2025 |
| A10R8 | 0683-5135 | 6 | R:FWD COMP 51K OHM 5% 1/4W | 01121 | CB 3025 |
| A10R9 | 0683-5135 | | R:FWD COMP 51K OHM 5% 1/4W | 01121 | CB 5135 |
| A10U1 | 1820-0274 | 12 | IC:DTL QUAD 2-INPT OR GATE | 01121 | CB 5135 |
| A10U2 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A10U3 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A10U4 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A10U5 | 1820-0310 | 1 | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A10U6 | 1820-0273 | 4 | IC:DTL TRIPLE 3-INPUT NAND GATE | 04713 | SC6910PK |
| A10U7 | 1820-0273 | | IC:DTL QUAD 2-INPT AND GATE | 28480 | 1820-0273 |
| | 0510-0207 | | IC:DTL QUAD 2-INPT AND GATE STANDOFF: PRESS-IN | 28480 | 1820-0273 |
| | | | | 28480 | 0510-0207 |
| A11 | 05327-60007 | 1 | LEFT READOUT ASSY (SERIES 1104A, REV. A) (LOADED ON 05327-20007 BLANK BOARD) | 28480 | 05327-60007 |

See introduction to this section for ordering information

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|---|-----|--|---|--|
| A11C1 | 05326-00009 05326-80002 05326-80011 05330-40002 0160-2200 | 1 | BRACKET:READOUT INDICATOR:MASK INDICATOR:MASK (EXT, C, OF) BLOCK:ANNUNCIATOR C:FXD MICA 43 PF 5% | 28480 28480 28480 28480 72136 | 05326-00009 05326-80002 05326-80011 05330-40002 RDM15E430J3C |
| A11DS1 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A11DS2 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A11DS3 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A11DS4 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A11DS5 | 2140-0313 | | LAMP:NEON GLOW FROSTED 1.9 MILLIAMPS | 08806 | C2A-B |
| A11Q1 | 1854-0071 | | TSTR:SI NPN (SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A11Q2 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A11Q3 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A11Q4 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A11Q5 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A11Q6 | 1854-0474 | | TSTR:SI NPN | 28480 | 1854-0474 |
| A11R1 | 0683-2035 | 1 | R:FXD COMP 20K OHM 5% 1/4W | 01121 | CB 2035 |
| A11R2 | 0683-1035 | | R:FXD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A11R3 | 0683-5125 | | R:FXD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A11R4 | 0683-5135 | | R:FXD COMP 51K OHM 5% 1/4W | 01121 | CB 5135 |
| A11R5 | 0683-2025 | | R:FXD COMP 2000 OHM 5% 1/4W | 01121 | CB 2025 |
| A11R6 | 0683-5135 | | R:FXD COMP 51K OHM 5% 1/4W | 01121 | CB 5135 |
| A11R7 | 0683-5125 | | R:FXD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A11R8 | 0683-5135 | | R:FXD COMP 51K OHM 5% 1/4W | 01121 | CB 5135 |
| A11R9 | 0683-5125 | | R:FXD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A11R10 | 0683-1525 | | R:FXD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A11R11 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A11R12 | 0683-5125 | | R:FXD COMP 5100 OHM 5% 1/4W | 01121 | CB 5125 |
| A11R13 | 0683-5135 | | R:FXD COMP 51K OHM 5% 1/4W | 01121 | CB 5135 |
| A11U1 | 1820-0054 | | IC:TTL QUAD 2-INPT NAND GATE | 01295 | SN7400N |
| A11U2 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A11U3 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A11U4 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A11U5 | 1820-0327 | 1 | IC:TTL QUAD 2-INPT NAND GATE | 04713 | SN7401N |
| A11U6 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A11U7 | 1820-0273 | | IC:DTL QUAD 2-INPT AND GATE | 28480 | 1820-0273 |
| A11U8 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| | 0510-0207 | | STANDOFF: PRESS-IN | 28480 | 0510-0207 |
| A12 | 05326-60016 | 1 | VOLTMETER INPUT AMPLIFIER ASSY (SERIES 1048A) (LOADED ON 05326-20016 BLANK BOARD) | 28480 | 05326-60016 |
| A12C1 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A12C2 | 0160-2307 | 1 | C:FXD MICA 47 PF 5% | 28480 | 0160-2307 |
| A12C3 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A12C4 | 0160-2930 | | C:FXD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A12CR2 | 1901-0376 | | DIODE:SILICON 35V | 28480 | 1901-0376 |
| A12CR3 | 1901-0376 | | DIODE:SILICON 35V | 28480 | 1901-0376 |
| A12CR4 | 1902-3083 | 1 | DIODE BREAKDOWN:4.64V 2% | 28480 | 1902-3083 |
| A12CR5 | 1902-0049 | | DIODE:BREAKDOWN 6.19V 5% | 04713 | SZ10939-122 |
| A12CR6 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A12K1 | 0490-0853 | 1 | RELAY:1 OHM 1500 VDC | 28480 | 0490-0853 |
| A12K2 | | | NOT ASSIGNED | | |
| A12K3 | 0490-0764 | 4 | RELAY:REED 0.1 AMP | 28480 | 0490-0764 |
| A12K4 | 0490-0764 | | RELAY:REED 0.1 AMP | 28480 | 0490-0764 |
| A12K5 | 0490-0764 | | RELAY:REED 0.1 AMP | 28480 | 0490-0764 |
| A12K6 | 0490-0764 | | RELAY:REED 0.1 AMP | 28480 | 0490-0764 |
| A12Q1 | 1850-0099 | 1 | TSTR:GE PNP | 80131 | 2N964 |
| A12Q2 | | | NOT ASSIGNED | | |
| A12Q3 | 1853-0020 | 7 | TSTR:SI PNP (SELECTED FROM 2N3702) | 28480 | 1853-0020 |
| A12Q4 | 1853-0020 | | TSTR:SI PNP (SELECTED FROM 2N3702) | 28480 | 1853-0020 |
| A12Q5 | 1853-0020 | | TSTR:SI PNP (SELECTED FROM 2N3702) | 28480 | 1853-0020 |
| A12Q6 | 1853-0020 | | TSTR:SI PNP (SELECTED FROM 2N3702) | 28480 | 1853-0020 |
| A12Q7 | 1855-0049 | 1 | TSTR:SI FET N-CHANNEL DUAL | 28480 | 1855-0049 |
| A12Q8 | 1854-0087 | 2 | TSTR:SI NPN | 80131 | 2N3417 |
| A12Q9 | 1854-0087 | | TSTR:SI NPN | 80131 | 2N3417 |
| A12Q10 | 1853-0036 | 1 | TSTR:SI PNP | 80131 | 2N3906 |
| A12R3 | 0698-7618 | 14 | R:FXD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R4 | 0698-7618 | | R:FXD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R5 | 0686-3045 | 3 | R:FXD COMP 300K OHM 5% 1/2W | 01121 | EB 3045 |
| A12R6 | 0698-7618 | | R:FXD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|---|----------|--------------------|
| A12R7 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R8 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R9 | 0686-3045 | | R:FWD COMP 300K OHM 5% 1/2W | 01121 | EB 3045 |
| A12R10 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R11 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R12 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R13 | 0686-3045 | | R:FWD COMP 300K OHM 5% 1/2W | 01121 | EB 3045 |
| A12R14 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R15 | 0698-7535 | 1 | R:FWD FLM 98.5K OHM 0.5% 1/8W | 28480 | 0698-7535 |
| A12R16 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R17 | 0757-0466 | 1 | R:FWD MET FLM 110K OHM 1% 1/8W | 28480 | 0757-0466 |
| A12R18 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R19 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R20 | 0698-3152 | 1 | R:FWD MET FLM 3.48K OHM 1% 1/8W | 28480 | 0698-3152 |
| A12R21 | 2100-2503 | 2 | R:VAR CERMET 20K OHM 10% TYPE P | 28480 | 2100-2503 |
| A12R22 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R23 | 0698-7618 | | R:FWD FLM 888K OHM 1.0% 1/4W | 28480 | 0698-7618 |
| A12R24 | 2100-2503 | | R:VAR CERMET 20K OHM 10% TYPE P | 28480 | 2100-2503 |
| A12R25 | 0683-8245 | 1 | R:FWD COMP 820K OHM 5% 1/4W | 01121 | CB 8245 |
| A12R26 | 0683-9145 | | R:FWD COMP 910K OHM 5% 1/4W | 01121 | CB 9145 |
| A12R27 | 0683-3925 | | R:FWD COMP 3900 OHM 5% 1/4W | 01121 | CB 3925 |
| A12R28 | 0686-1645 | 1 | R:FWD COMP 160K OHM 5% 1/2W | 01121 | EB 1645 |
| A12R29 | 0698-3442 | 1 | R:FWD MET FLM 237 OHM 1% 1/8W | 28480 | 0698-3442 |
| A12R30 | 0698-3136 | 2 | R:FWD MET FLM 17.8K OHM 1% 1/8W | 28480 | 0698-3136 |
| A12R31 | 2100-2931 | 1 | R:VAR CERMET 500 OHM 10% TYPE P 3/4W | 28480 | 2100-2931 |
| A12R32 | 0698-3136 | | R:FWD MET FLM 17.8K OHM 1% 1/8W | 28480 | 0698-3136 |
| A12R33 | 0683-1035 | | R:FWD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A12R34 | 0683-9145 | | R:FWD COMP 910K OHM 5% 1/4W | 01121 | CB 9145 |
| A12U1 | 1820-0223 | 4 | INTEGRATED CIRCUIT:OPERATIONAL AMPL. | 28480 | 1820-0223 |
| A13 | 05326-60017 | 1 | VOLTMETER V-F CONVERTER ASSY (SERIES 1032A) (LOADED ON 05326-20017 BLANK BOARD) | 28480 | 05326-60017 |
| A13C1 | 0180-0197 | | C:FWD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A13C2 | 0180-0197 | | C:FWD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A13C3 | 0180-0197 | | C:FWD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A13C4 | 0180-0197 | | C:FWD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A13C5 | 0160-2150 | | C:FWD MICA 33 PF 5% | 28480 | 0160-2150 |
| A13C6 | 0160-2150 | | C:FWD MICA 33 PF 5% | 28480 | 0160-2150 |
| A13C7 | 0160-2930 | | C:FWD CER 0.01 UF +80-20% 100VDCW | 91418 | TA |
| A13C8 | 0170-0055 | | C:FWD MY 0.1UF 20% 200VDCW | 56289 | 192P10402 |
| A13C9 | 0160-2150 | | C:FWD MICA 33 PF 5% | 28480 | 0160-2150 |
| A13C10 | 0170-0055 | | C:FWD MY 0.1UF 20% 200VDCW | 56289 | 192P10402 |
| A13C11 | 0160-2150 | | C:FWD MICA 33 PF 5% | 28480 | 0160-2150 |
| A13C13 | 0160-2249 | 1 | C:FWD CER 4.7 PF 500VDCW | 72982 | 3C1-NPO-4.7 PF |
| A13CR1 | 1902-0680 | 2 | DIODE:TC REF. JEDEC TYPE | 04713 | 1N827 |
| A13CR2 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A13CR3 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A13CR4 | 1902-0680 | | DIODE:TC REF. JEDEC TYPE | 04713 | 1N827 |
| A13CR5 | 1901-0179 | 5 | DIODE:SILICON 15WV | 28480 | 1901-0179 |
| A13CR6 | 1901-0179 | | DIODE:SILICON 15WV | 28480 | 1901-0179 |
| A13CR7 | 1901-0535 | | DIODE:HYBRID HOT CARRIER | 28480 | 1901-0535 |
| A13CR8 | 1901-0179 | | DIODE:SILICON 15WV | 28480 | 1901-0179 |
| A13CR9 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A13CR10 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A13CR11 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A13CR12 | 1901-0179 | | DIODE:SILICON 15WV | 28480 | 1901-C179 |
| A13CR13 | 1901-0179 | | DIODE:SILICON 15WV | 28480 | 1901-0179 |
| A13Q1 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A13Q2 | 1853-0020 | | TSTR:SI PNP(SELECTED FROM 2N3702) | 28480 | 1853-C020 |
| A13Q3 | 1855-0056 | 1 | TSTR:SI FET | 80131 | 2N4342 |
| A13Q4 | 1855-0081 | | TSTR:SI FET | 80131 | 2N5245 |
| A13Q5 | 1854-0009 | | TSTR:SI NPN | 80131 | 2N709 |
| A13Q6 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A13Q7 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A13Q8 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A13Q9 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A13Q10 | 1854-0071 | | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A13R1 | 0683-1525 | | R:FWD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A13R2 | 0757-0421 | 2 | R:FWD MET FLM 825 OHM 1% 1/8W | 28480 | 0757-C421 |

See introduction to this section for ordering information

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|-----------------|
| A13R3 | 0757-0421 | | R:FXD MET FLM 825 OHM 1% 1/8W | 28480 | 0757-0421 |
| A13R4 | 0683-1525 | | R:FXD COMP 1500 OHM 5% 1/4W | 01121 | CB 1525 |
| A13R5 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A13R6 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A13R7 | 0698-3160 | 2 | R:FXD MET FLM 31.6K OHM 1% 1/8W FACTORY SELECTED PART | 28480 | 0698-3160 |
| A13R8 | 0757-0398 | 2 | R:FXD MET FLM 75 OHM 1% 1/8W | 28480 | 0757-C398 |
| A13R9 | 0757-0398 | | R:FXD MET FLM 75 OHM 1% 1/8W | 28480 | 0757-0398 |
| A13R10 | 0698-3160 | | R:FXD MET FLM 31.6K OHM 1% 1/8W FACTORY SELECTED PART | 28480 | 0698-3160 |
| A13R11 | 0698-7610 | 4 | R:FXD FLM 1.74K OHM 0.5% 1/8W | 28480 | 0698-7610 |
| A13R12 | 0757-0384 | 2 | R:FXD FLM 20 OHM 1% 1/8W | 28480 | 0757-0384 |
| A13R13 | 0757-0384 | | R:FXD FLM 20 OHM 1% 1/8W | 28480 | 0757-0384 |
| A13R14 | 0698-7610 | | R:FXD FLM 1.74K OHM 0.5% 1/8W | 28480 | 0698-7610 |
| A13R15 | 2100-2705 | 2 | R:VAR CERMET 1K OHM 10% TYPE P 3/4W | 28480 | 2100-2705 |
| A13R16 | 2100-2705 | | R:VAR CERMET 1K OHM 10% TYPE P 3/4W | 28480 | 2100-2705 |
| A13R17 | 0698-7610 | | R:FXD FLM 1.74K OHM 0.5% 1/8W | 28480 | 0698-7610 |
| A13R18 | 0683-3325 | | R:FXD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A13R21 | 0698-7610 | | R:FXD FLM 1.74K OHM 0.5% 1/8W | 28480 | 0698-7610 |
| A13R24 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A13R27 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A13R28 | 0683-4715 | | R:FXD COMP 470 OHM 5% 1/4W | 01121 | CB 4715 |
| A13R29 | 0683-3325 | | R:FXD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A13R30 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A13R31 | 0683-3915 | | R:FXD COMP 390 OHM 5% 1/4W | 01121 | CB 3915 |
| A13R32 | 0683-6815 | | R:FXD COMP 680 OHM 5% 1/4W | 01121 | CB 6815 |
| A13R33 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A13R34 | 0683-5615 | 2 | R:FXD COMP 560 OHM 5% 1/4W | 01121 | CB 5615 |
| A13R35 | 0683-3615 | 2 | R:FXD COMP 360 OHM 5% 1/4W | 01121 | CB 3615 |
| A13R36 | 0683-3615 | | R:FXD COMP 360 OHM 5% 1/4W | 01121 | CB 3615 |
| A13R37 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A13R38 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A13R39 | 0683-4725 | | R:FXD COMP 4700 OHM 5% 1/4W | 01121 | CB 4725 |
| A13R40 | 0683-3915 | | R:FXD COMP 390 OHM 5% 1/4W | 01121 | CB 3915 |
| A13R41 | 0683-3325 | | R:FXD COMP 3300 OHM 5% 1/4W | 01121 | CB 3325 |
| A13U1 | 1820-0223 | | INTEGRATED CIRCUIT:OPERATIONAL AMPL. | 28480 | 1820-0223 |
| A13U2 | 1820-0223 | | INTEGRATED CIRCUIT:OPERATIONAL AMPL. | 28480 | 1820-0223 |
| A13U3 | 1820-0223 | | INTEGRATED CIRCUIT:OPERATIONAL AMPL. | 28480 | 1820-0223 |
| A13U4 | 1820-0212 | | IC:ECL QUAD LINE RECEIVER | 04713 | MC1020P |
| A13U5 | 1820-0213 | 1 | IC:ECL DUAL R-S F/F | 04713 | MC1014P |
| A13U6 | 1820-0276 | 1 | INTEGRATED CIRCUIT:DIGITAL | 04713 | MC 1033P |
| A13U7 | 1820-0145 | | IC:DIGITAL QUAD 2-INPT NOR GATE | 28480 | 1820-0145 |
| A13U8 | 1820-0209 | 1 | INTEGRATED CIRCUIT:DIGITAL | 28480 | 1820-0209 |
| A14 | 05326-60015 | 1 | VOLTMETER DISPLAY CONTROL ASSY (SERIES 944A) (LOADED ON 05326-20015 BLANK BOARD) | 28480 | 05326-60015 |
| A14CR1 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A14CR2 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A14CR3 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A14CR4 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A14CR5 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A14CR6 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A14CR7 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A14R1 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A14R2 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A14R3 | 0683-1035 | | R:FXD COMP 10K OHM 5% 1/4W | 01121 | CB 1035 |
| A14R4 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A14R5 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A14R6 | 0683-2225 | | R:FXD COMP 2.2K OHM 5% 1/4W | 01121 | CB 2225 |
| A14U1 | 1820-0413 | | IC:TTL DECADE DIVIDER 12.5 MHZ MIN. | 28480 | 1820-0413 |
| A14U2 | 1820-0094 | | IC:DTL QUAD 2-INPT GATE | 04713 | SC6903PK |
| A14U3 | 1820-0094 | | IC:DTL QUAD 2-INPT GATE | 04713 | SC6903PK |
| A14U4 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-C274 |
| A14U5 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A14U6 | 1820-0273 | | IC:DTL QUAD 2-INPT AND GATE | 28480 | 1820-0273 |
| A14U7 | 1820-0274 | | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|------------------------|-----|--|-------------------------|---|
| A15 | 05327-60020 | 1 | BOARD ASSY:POWER SUPPLY (SERIES 1428A) (LOADED ON 05326-20020 BLANK BOARD) | 28480 | 05327-60020 |
| | 0510-0207 2200-0145 | 3 | NUT:CAPTIVE 4-40 X 0.188 LG SCREW:PAN HD POZI DR 4-40 X 0.438 | 2848C 0000C | 0510-0207 QBD |
| A15C1 | 5040-0409 0160-0163 | 1 | SPACER:SHIELD C:FXD MY 0.033 UF 10% 200VDCW | 2848C 5628S | 5C40-0409 192P33392-PTS |
| A15C2 | 0180-0114 | 1 | C:FXD ELECT 4.0 UF +100-10% 25VDCW | 2848C | 0180-0114 |
| A15C3 | 0180-0114 | 1 | C:FXD ELECT 4.0 UF +100-10% 25VDCW | 2848C | 0180-0114 |
| A15C4 | 0180-0114 | 1 | C:FXD ELECT 4.0 UF +100-10% 25VDCW | 28480 | 0180-0114 |
| A15C5 | 0180-0114 | 28 | C:FXD ELECT 4.0 UF +100-10% 25VDCW C:FXD CER 1000 PF 20% 100VDCW C:FXD CER 1000 PF 20% 100VDCW | 28480 80031 80031 | 0180-0114 CW2059X7R102M CW2059X7R102M |
| A15C6 | 0160-3878 | 2 | C:FXD CER 0.01 UF 20% 50VDCW C:FXD CER 0.01 UF 20% 50VDCW | 96733 96733 | G5048X103M G5048X103M |
| A15C7 | 0160-3878 | 2 | C:FXD CER 0.01 UF 20% 50VDCW | 96733 | G5048X103M |
| A15C8 | 0160-3277 | 2 | C:FXD CER 0.01 UF 20% 50VDCW | 96733 | G5048X103M |
| A15C9 | 0160-3277 | 2 | C:FXD CER 0.01 UF 20% 50VDCW | 96733 | G5048X103M |
| A15CR1 | 1902-3002 | 2 | DIODE BREAKDOWN:2.37V 5% | 28480 | 1902-3002 |
| A15CR2 | 1902-0551 | 2 | DIODE BREAKDOWN:6.19V 5% | 28480 | 1902-0551 |
| A15CR3 | 1902-0551 | 2 | DIODE BREAKDOWN:6.19V 5% | 28480 | 1902-0551 |
| A15CR4 | 1902-3002 | 2 | DIODE BREAKDOWN:2.37V 5% | 28480 | 1902-3002 |
| A15CR5 | 1901-0040 | 2 | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A15CR6 | 1902-3094 | 4 | DIODE BREAKDOWN:5.11V 2% | 28480 | 1902-3094 |
| A15CR7 | 1902-3094 | 4 | DIODE BREAKDOWN:5.11V 2% | 28480 | 1902-3094 |
| A15CR8 | 1901-0040 | 4 | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A15CR9 | 1902-3094 | 4 | DIODE BREAKDOWN:5.11V 2% | 28480 | 1902-3094 |
| A15CR10 | 1902-3094 | 4 | DIODE BREAKDOWN:5.11V 2% | 28480 | 1902-3094 |
| A15CR11 | 1902-3394 | 1 | DIODE BREAKDOWN:75 V 2% | 28480 | 1902-3394 |
| A15CR12 | 1902-3429 | 1 | DIODE BREAKDOWN:100 V 2% | 28480 | 1902-3429 |
| A15CR13 | 1901-0033 | 2 | DIODE:SILICON 100MA 180WV | 07263 | FD336S |
| A15CR14 | 1901-0033 | 2 | DIODE:SILICON 100MA 180WV | 07263 | FD336S |
| A15CR15 | 1901-0044 | 4 | DIODE:SILICON 20MA/1V | 28480 | 1901-0044 |
| A15CR16 | 1901-0044 | 4 | DIODE:SILICON 20MA/1V | 28480 | 1901-0044 |
| A15CR17 | 1901-0044 | 4 | DIODE:SILICON 20MA/1V | 28480 | 1901-0044 |
| A15CR18 | 1901-0044 | 4 | DIODE:SILICON 20MA/1V | 28480 | 1901-0044 |
| A15F1 | 2110-0487 | 1 | FUSE:1/20 AMP | 2848C | 2110-0487 |
| A15Q1 | 1854-0300 | 1 | TSTR:SI NPN | 28480 | 1854-0300 |
| A15Q1 | 1205-0018 | 2 | HEAT SINK:SEMICONDUCTOR | 05820 | 203-CB |
| A15Q2 | 1853-0073 | 1 | TSTR:SI PNP | 28480 | 1853-0073 |
| A15Q2 | 1205-0018 | 1 | HEAT SINK:SEMICONDUCTOR | 05820 | 203-CB |
| A15Q3 | 1854-0039 | 1 | TSTR:SI NPN | 80131 | 2N3053 |
| A15Q3 | 1205-0033 | 2 | HEAT SINK:SEMICONDUCTOR | 05820 | 207-CB |
| A15Q4 | 1853-0012 | 1 | TSTR:SI PNP | 80131 | 2N2904A |
| A15Q4 | 1205-0033 | 1 | HEAT SINK:SEMICONDUCTOR | 05820 | 207-CB |
| A15Q5 | 1854-0232 | 1 | TSTR:SI NPN(SELECTED FROM 2N3440) | 28480 | 1854-0232 |
| A15Q5 | 1205-0061 | 1 | HEAT SINK:SEMICONDUCTOR | 05820 | 209-CB |
| A15Q6 | 1853-0020 | 1 | TSTR:SI NPN(SELECTED FROM 2N3702) | 28480 | 1853-0020 |
| A15Q7 | 1854-0071 | 1 | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A15Q8 | 1854-0474 | 1 | TSTR:SI NPN | 28480 | 1854-0474 |
| A15Q9 | 1854-0071 | 1 | TSTR:SI NPN(SELECTED FROM 2N3704) | 28480 | 1854-0071 |
| A15Q10 | 1853-0020 | 1 | TSTR:SI NPN(SELECTED FROM 2N3702) | 28480 | 1853-0020 |
| A15R1 | 0683-2735 | 1 | R:FXD COMP 27K OHM 5% 1/4W | 01121 | CB 2735 |
| A15R2 | 0683-1015 | 1 | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A15R3 | 0683-1015 | 1 | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A15R4 | 0683-3925 | 1 | R:FXD COMP 3900 OHM 5% 1/4W | 01121 | CB 3925 |
| A15R5 | 0683-3925 | 1 | R:FXD COMP 3900 OHM 5% 1/4W | 01121 | CB 3925 |
| A15R6 | 0698-5479 | 1 | R:FXD COMP 8.2 OHM 5% 1/2W | 01121 | EB 82G5 |
| A15R7 | 0683-6815 | 1 | R:FXD COMP 680 OHM 5% 1/4W | 01121 | CB 6815 |
| A15R8 | 0683-6815 | 1 | R:FXD COMP 680 OHM 5% 1/4W | 01121 | CB 6815 |
| A15R9 | 0683-1325 | 2 | R:FXD COMP 1300 OHM 5% 1/4W | 01121 | CB 1325 |
| A15R10 | 2100-2093 | 2 | R:VAR COMP 200 OHM 30% LIN 1/8W | 28480 | 2100-2093 |
| A15R11 | 0683-6815 | 2 | R:FXD COMP 680 OHM 5% 1/4W | 01121 | CB 6815 |
| A15R12 | 0683-6815 | 2 | R:FXD COMP 680 OHM 5% 1/4W | 01121 | CB 6815 |
| A15R13 | 2100-2093 | 2 | R:VAR COMP 200 OHM 30% LIN 1/8W | 28480 | 2100-2093 |
| A15R14 | 0683-1325 | 2 | R:FXD COMP 1300 OHM 5% 1/4W | 01121 | CB 1325 |
| A15R15 | 0683-0275 | 4 | R:FXD COMP 2.7 OHM 5% 1/4W | 01121 | CB 2765 |
| A15R16 | 0683-0275 | 4 | R:FXD COMP 2.7 OHM 5% 1/4W | 01121 | CB 2765 |
| A15R17 | 0683-0275 | 2 | R:FXD COMP 2.7 OHM 5% 1/4W | 01121 | CB 2765 |
| A15R18 | 0683-0275 | 2 | SOCKET, MINIATURE: SINGLE | 01121 | CB 2765 |
| A15XF1 | 1251-3205 | 2 | | 00779 | 2-331272-7 |

See introduction to this section for ordering information

**Model 5326/5327B
Replaceable Parts**

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|------------------------------|-----------------------|------------|--|-----------------|------------------------|
| A16 | 05327-60027 | 1 | BOARD ASSY:CONNECTOR (SERIES 1224A) (LOADED ON 05327-20027 BLANK BOARD) | 28480 | 05327-60027 |
| A16C1 | 0180-2352 | 1 | C:FXD ELECT 6000 UF +75-10% 15VDCW | 28480 | 0180-2352 |
| A16C2 | 0180-2296 | 1 | C:FXD ELECT 4000 UF +75-10% 15VDCW | 56289 | 39D167-DSB(SE) |
| A16C3 | 0180-1962 | 1 | C:FXD AL ELECT 15 UF +50-10% 250VDCW | 56289 | 39D156F250EJ4-DSB |
| A16C4 | 0180-2382 | 2 | C:FXD AL ELECT 1500 UF +75-10% 30VDCW | 56289 | 39D293 |
| A16C5 | 0180-2382 | | C:FXD AL ELECT 1500 UF +75-10% 30VDCW | 56289 | 39D293 |
| A16C6 | 0160-2204 | | C:FXD MICA 100PF 5% | 72136 | RDM15F101J3C |
| A16CR1 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A16CR2 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A16CR3 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A16CR4 | 1901-0028 | 2 | DIODE:SILICON 0.75A 400PIV | 04713 | SR1358-9 |
| A16CR5 | 1901-0028 | | DIODE:SILICON 0.75A 400PIV | 04713 | SR1358-9 |
| A16CR6 | 1901-0029 | 4 | DIODE:SILICON 600 PIV | 28480 | 1901-0029 |
| A16CR7 | 1901-0029 | | DIODE:SILICON 600 PIV | 28480 | 1901-0029 |
| A16CR8 | 1901-0029 | | DIODE:SILICON 600 PIV | 28480 | 1901-0029 |
| A16CR9 | 1901-0029 | | DIODE:SILICON 600 PIV | 28480 | 1901-0029 |
| A16CR10 | 1901-0415 | 4 | DIODE:SILICON 50 PIV 3A | 28480 | 1901-0415 |
| A16CR11 | 1901-0415 | | DIODE:SILICON 50 PIV 3A | 28480 | 1901-0415 |
| A16CR12 | 1901-0415 | | DIODE:SILICON 50 PIV 3A | 28480 | 1901-0415 |
| A16CR13 | 1901-0415 | | DIODE:SILICON 50 PIV 3A | 28480 | 1901-0415 |
| A16CR14 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A16CR15 | 1910-0016 | | DIODE:GE 60 WIV | 28480 | 1910-0016 |
| A16CR16 | 1901-0460 | 2 | DIODE:SILICON 3-JUNCTION STABISTOR | 03508 | ST8523 |
| A16CR17 | 1901-0460 | | DIODE:SILICON 3-JUNCTION STABISTOR | 03508 | ST8523 |
| A16CR18 | 1910-0034 | 1 | DIODE:GERMANIUM 25V | 28480 | 1910-0034 |
| A16Q1 | 1854-0009 | | TSTR:SI NPN | 80131 | 2N709 |
| A16R1 | 0812-0021 | 2 | R:FXD WW 0.47 OHM 5% 3W | 28480 | 0812-0021 |
| A16R2 | 0812-0021 | | R:FXD WW 0.47 OHM 5% 3W | 28480 | 0812-0021 |
| A16R3 | 0686-2045 | 1 | R:FXD COMP 200K OHM 5% .5W | 01121 | EB 2045 |
| A16R4 | 0683-0825 | 1 | R:FXD COMP 8.2 OHM 5% 1/4W | 01121 | CB 8265 |
| A16R5 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A16R6 | 0683-5115 | | R:FXD COMP 510 OHM 5% 1/4W | 01121 | CB 5115 |
| A16R7 | 0698-3153 | 2 | R:FXD MET FLM 3.83K OHM 1% 1/8W | 28480 | 0698-3153 |
| A16R8 | 0757-0439 | 1 | R:FXD MET FLM 6.81K OHM 1% 1/8W | 28480 | 0757-0439 |
| A16U1 | 1820-0196 | 1 | IC:LINEAR VOLTAGE REGULATOR(INPUT) | 28480 | 1820-0196 |
| A16XA1 | | | NOT ASSIGNED | | |
| A16XA2 | 1251-1886 | 11 | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA3 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA4 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA5 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA6 | 1251-2134 | 4 | CONNECTOR:PC (2X18)36 CONTACTS | 71785 | 252-18-30-340 |
| A16XA7 | 1251-2134 | | CONNECTOR:PC (2X18)36 CONTACTS | 71785 | 252-18-30-340 |
| A16XA8 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA9 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA10 | 1251-2134 | | CONNECTOR:PC (2X18)36 CCNTACTS | 71785 | 252-18-30-340 |
| A16XA11 | 1251-2134 | | CONNECTOR:PC (2X18)36 CCNTACTS | 71785 | 252-18-30-340 |
| A16XA12 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA13 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA14 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA15 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A16XA16 | | | NOT ASSIGNED | | |
| A16XA17 | | | NOT ASSIGNED | | |
| A16XA18 | 1251-1886 | | CONN:PC 30-CONTACT (2X15) | 71785 | 252-15-30-340 |
| A17 | 05326-60031 | 1 | BOARD ASSY:INPUT C AMPLIFIER (SERIES 1312A) 53268 ONLY (LOADED ON 05326-20031 BLANK BOARD) | 28480 | 05326-60031 |
| A17C1 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A17C2 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A17C3 | 0160-2049 | 4 | C:FXD CER FEED-THRU 5000 PF +80-20% | 28480 | 0160-2049 |
| A17C4 | 0160-2049 | | C:FXD CER FEED-THRU 5000 PF +80-20% | 28480 | 0160-2049 |
| A17C5 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A17C6 | 0180-0106 | 2 | C:FXD ELECT 60 UF 20% 6VDCW | 28480 | 0180-0106 |
| A17C7 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A17C8 | 0180-0106 | | C:FXD ELECT 60 UF 20% 6VDCW | 28480 | 0180-0106 |
| A17C9 | 0150-0055 | 2 | C:FXD TI DIODIDE 10 PF 5% 500VDCW | 78488 | TYPE GA |
| A17C10 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A17C11 | 0150-0045 | 1 | C:FXD TI 8.2 PF 5% 500VDCW | 78488 | TYPE GA |
| A17C12 | 0150-0055 | | C:FXD TI DIODIDE 10 PF 5% 500VDCW | 78488 | TYPE GA |
| A17C13 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A17CR1 | 1901-0047 | 2 | DIODE JUNCTION:SILICON 20PIV | 28480 | 1901-0047 |
| A17CR2 | 1901-0047 | | DIODE JUNCTION:SILICON 20PIV | 28480 | 1901-0047 |
| A17CR3 | 1912-0009 | 1 | DIODE TUNNEL:GERMANIUM 1N3712 | 03508 | 1N3712 SPEC |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|--------------------|
| A17J1 | 1250-0836 | 2 | CONNECTOR:RF SUB-MINIATURE | 98291 | 50-053-0000 |
| A17L1 | 9100-2259 | 1 | COIL/CHOKE 1.50 UH 10% | 59800 | 1025-24 |
| A17L2 | 9100-2260 | | COIL/CHOKE RF 1.80 UH 10% | 82142 | 09-4436-3K |
| A17L3 | 9140-0142 | | COIL:FXD RF 2.20 UH 10% | 82142 | 09-4436-4K |
| A17L4 | 9100-2256 | 1 | COIL/CHOKE 0.56 UH 10% | 13015 | 09-4426-3K |
| A17Q1 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A17Q2 | 1853-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A17Q3 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A17Q4 | 1854-0345 | | TSTR:SI NPN | 80131 | 2N5175 |
| A17R1 | 0760-0012 | 1 | R:FXD MET OX 51 OHM 2% 1W | 28480 | 0760-0012 |
| A17R2 | 0758-0093 | 1 | R:FXD MET OX 56 OHM 5% 1/4W | 28480 | 0758-0093 |
| A17R3 | Q683-1045 | | R:FXD COMP 100K OHMS 5% 1/4W | 01121 | CB 1045 |
| A17R4 | 0683-7515 | | R:FXD COMP 750 OHM 5% 1/4W | 01121 | CB 7515 |
| A17R5 | 0683-1515 | | R:FXD COMP 150 OHM 5% 1/4W | 01121 | CB 1515 |
| A17R6 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A17R7 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A17R8 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A17R9 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A17R10 | 0683-2215 | | R:FXD COMP 220 OHM 5% 1/4W | 01121 | CB 2215 |
| A17R11 | 2100-2633 | 2 | R:VAR CERMET 1K OHM 10% LIN 1/2W | 28480 | 2100-2633 |
| A17R12 | 0683-2015 | 3 | R:FXD COMP 200 OHM 5% 1/4W | 01121 | CB 2015 |
| A17R13 | 0683-2015 | | R:FXD COMP 200 OHM 5% 1/4W | 01121 | CB 2015 |
| A17R14 | 0683-1515 | | R:FXD COMP 150 OHM 5% 1/4W | 01121 | CB 1515 |
| A17R15 | 0683-5105 | | R:FXD COMP 51 OHM 5% 1/4W | 01121 | CB 5105 |
| A17R16 | 0683-7515 | | R:FXD COMP 750 OHM 5% 1/4W | 01121 | CB 7515 |
| A17R17 | 0683-1045 | | R:FXD COMP 100K OHMS 5% 1/4W | 01121 | CB 1045 |
| A17R18 | 0683-1225 | | R:FXD COMP 1200 OHM 5% 1/4W | 01121 | CB 1225 |
| A17R19 | 0683-3625 | | R:FXD COMP 3600 OHM 5% 1/4W | 01121 | CB 3625 |
| A17R21 | 0698-3153 | | R:FXD MET FLM 3.83K OHM 1% 1/8W | 28480 | 0698-3153 |
| A17R22 | 0757-0284 | 1 | R:FXD MET FLM 150 OHM 1% 1/8W | 28480 | 0757-0284 |
| A17R23 | 0757-0280 | 1 | R:FXD MET FLM 1K OHM 1% 1/8W | 28480 | 0757-0280 |
| A17R24 | 0683-4715 | | R:FXD COMP 470 OHM 5% 1/4W | 01121 | CB 4715 |
| A17R25 | 0683-5615 | | R:FXD COMP 560 OHM 5% 1/4W | 01121 | CB 5615 |
| A17R26 | 0757-0416 | 1 | R:FXD MET FLM 511 OHM 1% 1/8W | 28480 | 0757-0416 |
| A17U1 | 1858-0004 | 1 | TSTR ARRAY:SI NPN DUAL DIFF. AMPL. | 28480 | 1858-0004 |
| A17U2 | 1820-0147 | | IC:ECL TRIPLE 3-INPT NOR GATE | 04713 | MC1007P |
| | 05326-00031 | 1 | SHIELD:NOISE | 28480 | 05326-00031 |
| A18 | 05327-60033 | 1 | BOARD ASSY:HIGH SENSITIVITY PRESCALER (SERIES 1248A) (LOADED ON 05327-20033 BLANK BOARD) | 28480 | 05327-60033 |
| A18C1 | 0180-0228 | | C:FXD ELECT 22 UF 10% 15VDCW | 56289 | 150D226X9015B2-DYS |
| A18C2 | 0160-2049 | | C:FXD CER FEED-THRU 5000 PF +80-20% | 28480 | 0160-2049 |
| A18C3 | 0160-3879 | 3 | C:FXD CER 0.01 UF 20% 100VDCW | 72982 | 8121-B112-X7R-103M |
| A18C4 | 0160-2049 | | C:FXD CER FEED-THRU 5000 PF +80-20% | 28480 | 0160-2049 |
| A18C5 | 0180-0228 | | C:FXD ELECT 22 UF 10% 15VDCW | 56289 | 150D226X9015B2-DYS |
| A18C6 | 0160-3879 | | C:FXD CER 0.01 UF 20% 100VDCW | 72982 | 8121-B112-X7R-103M |
| A18C7 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C8 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C9 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C10 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C11 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C12 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C13 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C14 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C15 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C16 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C17 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C18 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C19 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C20 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C21 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C22 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C23 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C24 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C25 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C26 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C27 | 0160-3878 | 2 | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18C28 | 0160-3879 | | C:FXD CER 0.01 UF 20% 100VDCW | 72982 | 8121-B112-X7R-103M |
| A18C29 | 0160-3878 | | C:FXD CER 1000 PF 20% 100VDCW | 80031 | CV2059X7R102M |
| A18CR1 | 1901-0050 | | DIODE:SI 200 MA AT 1V | 07263 | FDA 6308 |
| A18CR2 | 1901-0050 | | DIODE:SI 200 MA AT 1V | 07263 | FDA 6308 |

See introduction to this section for ordering information

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|----------------------------------|----------|-----------------|
| A18CR3 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A18CR4 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A18CR5 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A18CR6 | 1901-0040 | | DIODE:SILICON 50 MA 30 WV | 07263 | FDG1088 |
| A18F1 | 2110-0436 | 2 | FUSE:1/10 AMP 125V | 28480 | 2110-0436 |
| A18F2 | 2110-0436 | | FUSE:1/10 AMP 125V | 28480 | 2110-0436 |
| A18J1 | 1250-0836 | | CONNECTOR:RF SUB-MINIATURE | 98291 | 50-053-0000 |
| A18L1 | 9100-1788 | 2 | COIL:CHOKE | 02114 | VK200-10/48 |
| A18L2 | 9100-1788 | | COIL:CHOKE | 02114 | VK200-10/48 |
| A18Q1 | 1854-0345 | | TSTR:SI NPN | 80131 | 2N5179 |
| A18Q2 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A18R1 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R2 | 0698-5996 | 2 | R:FXD COMP 560 OHM 5% 1/8W | 28480 | 0698-5996 |
| A18R3 | 2100-2633 | | R:VAR CERMET 1K OHM 10% LIN 1/2W | 28480 | 2100-2633 |
| A18R4 | 0683-3925 | | R:FXD COMP 3900 OHM 5% 1/4W | 01121 | CB 3925 |
| A18R5 | 0698-3378 | 5 | R:FXD CARBON 51 OHM 5% 1/8W | 28480 | 0698-3378 |
| A18R6 | 0698-3378 | | R:FXD CARBON 51 OHM 5% 1/8W | 28480 | 0698-3378 |
| A18R7 | 0698-3111 | 5 | R:FXD COMP 30 OHM 5% 1/8W | 28480 | 0698-3111 |
| A18R8 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R9 | 0683-2015 | | R:FXD COMP 200 OHM 5% 1/4W | 01121 | CB 2015 |
| A18R10 | 2100-2413 | 2 | FACTORY SELECTED VALUE | | |
| A18R11 | 0698-6283 | 2 | R:VAR FLM 200 OHM 10% LIN 1/2W | 28480 | 2100-2413 |
| A18R12 | 0683-1505 | 2 | R:FXD COMP 10 OHM 5% 1/8W | 01121 | BB 1005 |
| A18R13 | 0698-3374 | 4 | R:FXD COMP 15 OHM 5% 1/4W | 01121 | CB 1505 |
| A18R14 | | | R:FXD CARBON 20 OHM 5% 1/8W | 28480 | 0698-3374 |
| A18R15 | 0698-5180 | | NOT ASSIGNED | | |
| A18R16 | 0698-3378 | | R:FXD COMP 2K OHM 5% 1/8W | 28480 | 0698-5180 |
| A18R17 | 0698-3374 | | R:FXD CARBON 51 OHM 5% 1/8W | 28480 | 0698-3378 |
| A18R18 | 0683-4315 | 5 | R:FXD CARBON 20 OHM 5% 1/8W | 28480 | 0698-3374 |
| A18R19 | 0698-5180 | | R:FXD COMP 430 OHM 5% 1/4W | 01121 | CB 4315 |
| A18R20 | 0698-3111 | | | | |
| A18R21 | 0698-5996 | | R:FXD COMP 2K OHM 5% 1/8W | 28480 | 0698-5180 |
| A18R22 | 0698-4131 | 4 | R:FXD COMP 30 OHM 5% 1/8W | 28480 | 0698-3111 |
| A18R23 | 0698-4131 | | R:FXD COMP 56 OHM 5% 1/8W | 28480 | 0698-4131 |
| A18R24 | 0698-3111 | | R:FXD COMP 56 OHM 5% 1/8W | 28480 | 0698-4131 |
| A18R25 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R26 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A18R27 | 2100-2413 | | FACTORY SELECTED VALUE. | | |
| A18R28 | 0698-6283 | | R:VAR FLM 200 OHM 10% LIN 1/2W | 28480 | 2100-2413 |
| A18R29 | 0698-5177 | 2 | | | |
| A18R30 | 0698-5177 | | R:FXD COMP 10 OHM 5% 1/8W | 01121 | BB 1005 |
| A18R31 | 0683-1505 | | R:FXD COMP 820 OHM 5% 1/8W | 28480 | 0698-5177 |
| A18R32 | | | R:FXD COMP 820 OHM 5% 1/8W | 28480 | 0698-1505 |
| A18R33 | 0698-3374 | 1 | R:FXD COMP 15 OHM 5% 1/4W | 01121 | CB 1505 |
| A18R34 | 0698-8073 | | NOT ASSIGNED | | |
| A18R35 | 0698-3378 | | R:FXD CARBON 20 OHM 5% 1/8W | 28480 | 0698-3374 |
| A18R36 | 0698-3111 | | R:FXD COMP 1.6K OHM 5% 1/8W | 01121 | BB 1625 |
| A18R37 | 0698-3378 | | R:FXD CARBON 51 OHM 5% 1/8W | 28480 | 0698-3378 |
| A18R38 | 0698-3374 | | R:FXD COMP 30 OHM 5% 1/8W | 28480 | 0698-3111 |
| A18R39 | 0683-4315 | | R:FXD COMP 430 OHM 5% 1/4W | 01121 | CB 4315 |
| A18R40 | 0698-4131 | | R:FXD COMP 56 OHM 5% 1/8W | 28480 | 0698-4131 |
| A18R41 | 0698-5563 | 1 | R:FXD CARBON 180 OHM 5% 1/8W | 28480 | 0698-5563 |
| A18R42 | 0698-4131 | | R:FXD COMP 56 OHM 5% 1/8W | 28480 | 0698-4131 |
| A18R43 | 0698-3111 | | R:FXD COMP 30 OHM 5% 1/8W | 28480 | 0698-3111 |
| A18R44 | 0698-3113 | | R:FXD CARBON 100 OHM 5% 1/8W | 28480 | 0698-3113 |
| A18R45 | | | NOT ASSIGNED | | |
| A18R46 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R47 | 0683-3905 | 1 | R:FXD COMP 39 OHM 5% 1/4W | 01121 | CB 3905 |
| A18R48 | 0683-8215 | 1 | | | |
| A18R49 | 0683-1025 | | R:FXD COMP 820 OHM 5% 1/4W | 01121 | CB 8215 |
| A18R50 | 0683-4315 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R51 | 0683-4315 | | R:FXD COMP 430 OHM 5% 1/4W | 01121 | CB 4315 |
| A18R52 | 0683-4315 | | R:FXD COMP 430 OHM 5% 1/4W | 01121 | CB 4315 |
| A18R53 | | | NOT ASSIGNED | | |
| A18U1 | 5088-7002 | 1 | IC:LIMITER | 28480 | 5088-7C02 |
| A18U2 | 1826-0084 | 1 | IC:LINEAR | 28480 | 1826-0084 |
| A18U3 | 1826-0085 | 1 | IC: LINEAR | 28480 | 1826-0085 |
| OR | | | | | |
| A18U3 | 1826-0151 | 1 | IC: LINEAR | 28480 | 1826-0151 |
| A18U4 | 1820-0736 | 1 | IC: DIGITAL | 28480 | 1820-0736 |
| OR | | | | | |
| A18U4 | 1820-0558 | 1 | IC: DUAL-BINARY | 28480 | 1820-0558 |
| A18U5 | 1820-0714 | 1 | IC: DIGITAL QUINARY DIVIDER | 28480 | 1820-0714 |
| A18U6 | 1820-0489 | | IC: ECL | 28480 | 1820-0489 |
| A18U7 | 1821-0001 | 2 | TRANSISTOR ARRAY:SI NPN | 02735 | CA3046 |
| A18U8 | 1821-0001 | | TRANSISTOR ARRAY:SI NPN | 02735 | CA3046 |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|-----------------|
| A18U9 | 1820-0802 | 1 | IC:ECL QUAD 2-INPT NOR GATE | 04713 | MC10102L |
| | | | CHASSIS PARTS | | |
| B1 | 3150-0039 | 1 | FILTER:AIR | 28480 | 3150-C039 |
| B1 | 3140-0030 | 1 | MOTOR:SHADED POLE | 28480 | 3140-C030 |
| B1 | 3160-0035 | 1 | FAN:IMPELLER AXIAL 2-1/4 DIAM | 04870 | 2 1/4 RHF 125 S |
| B1 | 5212A-12B | 1 | BRACKET:FAN | 28480 | 5212A-12B |
| C1 | 0160-3043 | 1 | C:FXD CER 2 X 0.005 UF 20% 250VAC | 56289 | 29C147A-CDH |
| F1 | 2110-0020 | 1 | FUSE:0.8A 250V SLOW-BLOW | 75915 | 313-800S |
| F1 | 2110-0304 | 1 | FUSE:CARTRIDGE 1.5 AMP 250V SLOW-BLOW | 71400 | MDX-1-1/2A |
| F1 | 1400-0084 | 1 | FUSEHOLDER:EXTRACTOR POST TYPE | 75915 | 342014 |
| J1 | 1510-0075 | 1 | BINDING POST ASSY:BLACK | 28480 | 1510-0075 |
| J1 | 1510-0074 | 1 | BINDING POST ASSY:SAFETY RED INSULATOR | 28480 | 1510-0074 |
| J2 | 1250-1253 | 5 | CONNECTOR:RF BNC MOUNT JACK | 24931 | 28JR194-1 |
| J3 | 1250-1253 | | CONNECTOR:RF BNC MOUNT JACK | 24931 | 28JR194-1 |
| J4 | 1250-1253 | | CONNECTOR:RF BNC MOUNT JACK | 24931 | 28JR194-1 |
| J5 | 1250-1253 | | CONNECTOR:RF BNC MOUNT JACK | 24931 | 28JR194-1 |
| J6 | 1250-1253 | | CONNECTOR:RF BNC MOUNT JACK | 24931 | 28JR194-1 |
| J8 | 1251-2357 | 1 | SOCKET:3-PIN MALE POWER RECEPTACLE | 82385 | EAC-301 |
| J11 | 1250-0212 | 1 | CONNECTOR:JACK CHASSIS BNC | 95712 | 30409-1 |
| P1 | 5060-0109 | 2 | CONNECTOR:15 CONTACTS | 28480 | 5060-0109 |
| Q1 | 1853-0233 | 1 | TSTR:SI PNP | 01295 | TIP 32 |
| Q1 | 05327-20024 | 2 | HEAT SINK FOR Q1 AND Q2 | 28480 | 05327-20024 |
| Q2 | 1854-0420 | 1 | TSTR:SI NPN | 28480 | 1854-0420 |
| Q2 | 05327-20024 | | HEAT SINK FOR Q1 AND Q2 | 28480 | 05327-20024 |
| R1 | 2100-2961 | 1 | R:VAR COMP 1 MEGOHM 10% 10 CLOG 1/4W | 28480 | 2100-2961 |
| R1 | 00180-67403 | 2 | KNOB ASSY | 28480 | 00180-67403 |
| S1 | | | PART OF R1 | | |
| S2 | 3101-1599 | 2 | SWITCH:SLIDE DP3T 0.5A 125V AC/DC (FAST-NORM-HOLD) | 28480 | 3101-1599 |
| S3 | 3101-1216 | 1 | SWITCH:PUSHBUTTON SPST (RESET) | 82385 | 8S-1034 |
| S4 | 3101-1599 | | SWITCH:SLIDE DP3T 0.5A 125V AC/DC (RANGE) | 28480 | 3101-1599 |
| S5 | 05326-60018 | 1 | SWITCH ASSY:TIME BASE(WIRED) | 28480 | 05326-60018 |
| S6 | 05326-60020 | 1 | SWITCH ASSY:FUNCTION (WIRED) 5326B | 28480 | 05326-60020 |
| S6 | 05327-60017 | 1 | SWITCH ASSY:FUNCTION (WIRED) 5327B | 28480 | 05327-60017 |
| S7 | 3101-1596 | | SWITCH:SLIDE DPDT MINIATURE (OSC-INT/EXT) | 78488 | SS-91-1 |
| S8 | 3101-1596 | | SWITCH:SLIDE DPDT MINIATURE (STORAGE) | 78488 | SS-91-1 |
| S9 | 3101-1234 | 1 | SWITCH:SLIDE DPDT (SELECTOR 115/230V) | 82385 | 11A-1242 |
| T1 | 9100-3020 | 1 | TRANSFORMER:POWER | 28480 | 9100-3020 |
| | | | OTHER CABINET PARTS | | |
| | 0460-0114 | 12 | TAPE:POLYURETHANE 1-1/4 IN WIDE | 85471 | TESAMOLL-2 |
| | 1490-0030 | 1 | STAND:TIILT | 28480 | 1490-C030 |
| | 5000-0050 | 2 | TRIM:SIDES | 28480 | 5000-C050 |
| | 5060-0729 | 2 | FRAME ASSY:3 X 11(SIDE) | 28480 | 5060-0729 |
| | 5060-0767 | 5 | FOOT ASSY:FM | 28480 | 5C60-0767 |
| | 05326-00001 | 1 | PANEL:FRONT | 28480 | 05326-00001 |
| | 05326-00032 | 1 | PANEL:REAR | 28480 | 05327-00032 |
| | 05326-00008 | 1 | INSULATOR | 28480 | 05326-00008 |
| | 05326-00011 | 1 | PLATE:CONNECTOR, LONG (J9 COVER) | 28480 | 05326-00011 |
| | 05327-20016 | | WINDOW (5327B) | 28480 | |
| | 05326-20006 | 1 | WINDCW (5326B) | 28480 | 05326-20006 |
| | 7120-1254 | 1 | TRADEMARK (HP LOGO) | 28480 | 7120-1254 |
| | | | PAINTED CABINET PARTS | | |
| | 05325-00009 | 1 | COVER:BOTTOM(OPT X95) | 28480 | 05325-00009 |
| | 05330-00033 | 1 | BOTTOM COVER | 28480 | 05330-00033 |
| | 05326-00006 | 1 | PANEL:FRONT PANEL TRIM (OPT A85/X95) | 28480 | 05326-00006 |
| | 05327-00007 | 1 | PANEL:RIGHT FRONT TRIM(5327B)STANDARD | 28480 | 05327-00007 |
| | 05326-00026 | 1 | PANEL:RIGHT FRONT TRIM(5326B)STANDARD | 28480 | 05326-00026 |
| | 05326-00025 | 1 | PANEL:LEFT FRONT TRIM(STANDARD) | 28480 | 05326-00025 |
| | 05326-00007 | 1 | PANEL:LEFT FRONT PANEL TRIM (5326B) OPT A85/X95 | 28480 | 05326-00007 |
| | 05326-00029 | 1 | SIDE COVER:STANDARD COLOR | 28480 | 05326-00029 |
| | 05326-00021 | 2 | SIDE COVER:OPT X95 | 28480 | 05326-00021 |
| | 05326-00022 | 1 | TOP COVER(OPT X95) | 28480 | 05326-00022 |

See introduction to this section for ordering information

Table 6-1. Replaceable Parts, Standard Instruments (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|---|----------------|-----------------------|---|---|---|
| 05326-00030 05326-60029 05326-60029 05326-60046 | | 1 2 1 1 | TOP COVER:STANDARD COVER KIT:RACK MOUNT(OPT A85/X95) KIT:RACK MOUNT(OPT A85/X95) KIT:RACK MOUNT(STANDARD) CONSISTING OF: | 28480 28480 28480 28480 | 05326-00030 05326-60029 05326-60029 05326-60046 |
| 2370-0012 2510-0047 5020-0706 5020-0707 05326-40002 | | 3 4 1 1 1 | SCREW:SST FLAT HD PHL DR 6-32 X 1/4 SCREW:PAN HD POZI DR 8-32 X 0.438" LG BRACKET:LEFT BRACKET:RIGHT STRIP:FILLER GRAY | 28480 00000 28480 28480 28480 | 2370-0012 0BD 5020-0706 5020-0707 05326-40002 |
| 0370-0104 | | 2 | INTERNAL AND OTHER PARTS KNOB: BLK BAR W/ARROW 1/4" SHAFT (FUNCTION (FUNCTION 5326B)) | 28480 | 0370-0104 |
| 0340-0734 0340-0733 0340-0765 0370-0104 | | 2 2 2 1 | INSULATOR: BINDING POST, RED INSULATOR: BINDING POST, BLACK INSULATOR: TRANSISTOR KNOB: BLK BAR W/ARROW 1/4" SHAFT (TIME BASE) | 28480 28480 28480 28480 | 0340-0734 0340-0733 0340-0765 0370-0104 |
| 0370-0163 1200-0147 01821-67401 | | 1 1 2 | KNOB: BAR BLK 0.500" DIA (FUNCTION 5327B) BUSHING: TRANSISTOR KNOB: TRIGGER LEVEL | 28480 28480 28480 | 0370-0163 1200-0081 01821-67401 |
| 05326-20046 05326-60032 05326-60021 05326-00019 05326-00018 | | 1 1 1 2 1 | BOARD:BLANK (REAR PANEL CONNECTOR) CABLE ASSY:POWER CABLE ASSY:VOLTMETER SPACER(DVM JACKS, WHITE) CHASSIS | 28480 28480 28480 28480 28480 | 05326-20046 05326-60032 05326-60021 05326-00019 05326-00018 |
| 05326-00010 05327-60011 05326-00033 5040-0345 8120-1378 | | 1 1 1 4 1 | SHIELD:NIXIE CABLE ASSY:PRESCALER ADAPTER:CONNECTOR INSULATOR:DVM JACKS, JADE GRAY CABLE ASSY:AC POWER CORD | 28480 28480 28480 28480 70903 | 05326-00010 05327-60011 05326-00033 5040-0345 KH-7081 |
| 5060-0109 5040-0170 | | 5 | CONNECTOR:15 CONTACTS GUIDE:PLUG-IN PC BOARD | 28480 28480 | 5060-0109 5040-0170 |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-2. Replaceable Parts, Options

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|-----------------|
| A9 | 05326-60025 | 17 | (OPTION 001 (8 DIGIT DISPLAY) DELETE A9 05326-60008 AND REPLACE WITH A9 05326-60025. DISPLAY ASSY (SERIES 1032A) LOADED ON 05326-20008 BLANK BOARD. | 28480 | 05326-60025 |
| A9DS1 | 1970-0042 | 8 | TUBE:NUMERICAL INDICATOR | 83594 | B-5750-S |
| A9DS1 | 1200-0405 | 8 | SOCKET:TUBE FOR 5700 SERIES | 83594 | SK 207 |
| A9DS2 | 1970-0042 | | TUBE:NUMERICAL INDICATOR | 83594 | B-5750-S |
| A9DS2 | 1200-0405 | | SOCKET:TUBE FOR 5700 SERIES | 83594 | SK 207 |
| A9DS3 | 1970-0042 | | TUBE:NUMERICAL INDICATOR | 83594 | B-5750-S |
| A9DS3 | 1200-0405 | | SOCKET:TUBE FOR 5700 SERIES | 83594 | SK 207 |
| A9DS4 | 1970-0042 | | TUBE:NUMERICAL INDICATOR | 83594 | B-5750-S |
| A9DS4 | 1200-0405 | | SOCKET:TUBE FOR 5700 SERIES | 83594 | SK 207 |
| A9DS5 | 1970-0042 | | TUBE:NUMERICAL INDICATOR | 83594 | B-5750-S |
| A9DS5 | 1200-0405 | | SOCKET:TUBE FOR 5700 SERIES | 83594 | SK 207 |
| A9DS6 | 1970-0042 | | TUBE:NUMERICAL INDICATOR | 83594 | B-5750-S |
| A9DS6 | 1200-0405 | | SOCKET:TUBE FOR 5700 SERIES | 83594 | SK 207 |
| A9DS7 | 1970-0042 | | TUBE:NUMERICAL INDICATOR | 83594 | B-5750-S |
| A9DS7 | 1200-0405 | | SOCKET:TUBE FOR 5700 SERIES | 83594 | SK 207 |
| A9DS8 | 1970-0042 | | TUBE:NUMERICAL INDICATOR | 83594 | B-5750-S |
| A9DS8 | 1200-0405 | | SOCKET:TUBE FOR 5700 SERIES | 83594 | SK 207 |
| A9R1 | 0683-1025 | 2 | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A9R2 | 0698-8431 | 8 | R:FXD COMP 7500 OHM 5% 1/4W | 28480 | 0698-8431 |
| A9R3 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A9R4 | 0698-8431 | | R:FXD COMP 7500 OHM 5% 1/4W | 28480 | 0698-8431 |
| A9R5 | 0698-8431 | | R:FXD COMP 7500 OHM 5% 1/4W | 28480 | 0698-8431 |
| A9R6 | 0698-8431 | | R:FXD COMP 7500 OHM 5% 1/4W | 28480 | 0698-8431 |
| A9R7 | 0698-8431 | | R:FXD COMP 7500 OHM 5% 1/4W | 28480 | 0698-8431 |
| A9R8 | 0698-8431 | | R:FXD COMP 7500 OHM 5% 1/4W | 28480 | 0698-8431 |
| A9R9 | 0698-8431 | | R:FXD COMP 7500 OHM 5% 1/4W | 28480 | 0698-8431 |
| A9R10 | 0683-1005 | 2 | R:FXD COMP 10 OHM 5% 1/4W | 01121 | CB 1005 |
| A9R11 | 0698-8431 | | R:FXD COMP 7500 OHM 5% 1/4W | 28480 | 0698-8431 |
| A9R12 | 0683-1005 | | R:FXD COMP 10 OHM 5% 1/4W | 01121 | CB 1005 |
| A9U1 | 1820-0275 | 1 | IC:ECL TO TTL QUAD 2-INPT OR TRANS. | 04713 | MC1039P |
| A9U2 | 1820-0119△ | 7 | IC:TTL BLANKING DECADE COUNTER | 28480 | 1820-0119 |
| A9U3 | 1820-0119△ | | IC:TTL BLANKING DECADE COUNTER | 28480 | 1820-0119 |
| A9U4 | 1820-0119△ | | IC:TTL BLANKING DECADE COUNTER | 28480 | 1820-C119 |
| A9U5 | 1820-0119△ | | IC:TTL BLANKING DECADE COUNTER | 28480 | 1820-0119 |
| A9U6 | 1820-0119△ | | IC:TTL BLANKING DECADE COUNTER | 28480 | 1820-0119 |
| A9U7 | 1820-0119△ | | IC:TTL BLANKING DECADE COUNTER | 28480 | 1820-0119 |
| A9U8 | 1820-0119△ | | IC:TTL BLANKING DECADE COUNTER | 28480 | 1820-0119 |
| A9U9 | 1820-0116 | 8 | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-0116 |
| A9U10 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-0116 |
| A9U11 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-0116 |
| A9U12 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-0116 |
| A9U13 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-C116 |
| A9U14 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-0116 |
| A9U15 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-C116 |
| A9U16 | 1820-0116 | | IC:4-BIT BUFF STORE GATED OUTS | 2848C | 1820-0116 |
| A9U17 | 1820-0729 | 1 | IC:DECODER-DIVIDER | 28480 | 1820-0729 |
| A9U18 | 1820-0092 | 7 | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U19 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U20 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U21 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U22 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U23 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9U24 | 1820-0092 | | INTEGRATED CIRCUIT:DECODER-DIVIDER | 28480 | 1820-0092 |
| A9XU8 | 1200-0477 | 3 | SOCKET:IC | 2848C | 1200-0477 |
| A9XU16 | 1200-0477 | | SOCKET:IC | 2848C | 1200-0477 |
| A9XU24 | 1200-0477 | | SOCKET:IC | 2848C | 1200-0477 |

See introduction to this section for ordering information

△FOR THIS INSTRUMENT, 1820-0232's ARE DIRECTLY INTERCHANGEABLE WITH THE 1820-0119's.

Table 6-2. Replaceable Parts, Options (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|--|---|--------|--|---|---|
| J10 W2P1 W2P2 | 05327-60013 1251-0085 5060-0113 1200-0063 | 1 | OPTION 002 (REMOTE PROGRAMMING). DELETE 5060-0109 15 CONTACT CONNECTOR AND ADD 05327-60013 CABLE ASSY. | 28480 28480 28480 28480 | 05327-60013 1251-0085 5060-0113 1200-0063 |
| | | 1 | CABLE ASSY:PROGRAMMING CONNECTOR:FEMALE 36-PIN MINAT CONNECTOR:45 CONTACT LUG:CRIMP | 28480 28480 28480 28480 | |
| | | | OPTION 003 (DIGITAL OUTPUT). ADD 05326-60012 CABLE ASSY. | | |
| J9 W1P1 W1P2 | 1251-0087 1251-2262 1251-2262 | 1 2 | CONNECTOR:FEMALE 50-PIN MINAT CONNECTOR:PC(2 X 10) 20 CONTACTS CONNECTOR:PC(2 X 10) 20 CONTACTS | 28480 76530 76530 | 1251-0087 251-10-30-400 251-10-30-400 |
| | 05327-60034 | 1 | OPTION 004 BOARD ASSY:REMOTE ATTENUATOR (SERIES 1224A) (LOADED ON 05327-20034 BLANK BOARD). | 28480 | 05327-60034 |
| A1C1 A1C2 A1C3 | 0150-0031 0150-0031 0140-0221 | 2 2 | C:FXD TI 2 PF .5% 500VDCW C:FXD TI 2 PF .5% 500VDCW C:FXD MICA 220 PF 1% | 78488 78488 28480 | TYPE GA TYPE GA 0140-0221 |
| A1C4 A1C5 A1C6 A1C7 A1C8 | 0140-0221 0160-0207 0160-0207 0140-0149 0140-0149 | 2 2 | C:FXD MICA 220 PF 1% C:FXD MYLAR 0.01UF 5% 200VDCW C:FXD MYLAR 0.01UF 5% 200VDCW C:FXD MICA 470 PF 5% C:FXD MICA 470 PF 5% | 28480 28480 28480 72136 72136 | 0140-0221 0160-0207 0160-0207 DM15F471J35 DM15F471J35 |
| A1C9 A1C10 A1C11 A1C12 A1C13 | 0160-2055 0160-3028 0160-2055 0160-3028 0140-0199 | 2 2 | C:FXD CER 0.01 UF +80-20% 100VDCW C:FXD CER 10PF 10% 75VDCW C:FXD CER 0.01 UF +80-20% 100VDCW C:FXD CER 10PF 10% 75VDCW C:FXD MICA 240 PF 5% | 56289 12574 56289 12574 28480 | C023F101F103Z522-COH MIN-C-10-K C023F101F103Z522-COH MIN-C-10-K 0140-0199 |
| A1C14 A1CR1 A1CR2 A1CR3 A1CR4 | 0140-0199 1910-0016 1910-0016 1910-0016 1902-0025 | 8 | C:FXD MICA 240 PF 5% DIODE:GE 60 WIV DIODE:GE 60 WIV DIODE:GE 60 WIV DIODE:BREAKDOWN:10-0V 5% 400 MW | 28480 28480 28480 28480 28480 | 0140-0199 1910-0016 1910-0016 1910-0016 1902-0025 |
| A1CR5 A1CR6 A1CR7 A1CR8 A1CR9 | 1902-0057 1910-0016 1906-0024 1906-0024 1906-0025 | 1 4 | DIODE BREAKDOWN:6.49V DIODE:GE 60 WIV DIODE ASSY:SI DIODE ASSY:SI DIODE ASSY:SI | 28480 28480 28480 28480 28480 | 1902-0057 1910-0016 1906-0024 1906-0024 1906-0025 |
| A1CR10 A1CR11 A1CR12 A1CR13 A1CR14 | 1906-0025 1901-0040 1901-0040 1901-0040 1901-0040 | 10 | DIODE ASSY:SI DIODE:SILICON 50 MA 30 WV DIODE:SILICON 50 MA 30 WV DIODE:SILICON 50 MA 30 WV DIODE:SILICON 50 MA 30 WV | 28480 07263 07263 07263 07263 | 1906-0025 FDG1088 FDG1088 FDG1088 FDG1088 |
| A1CR15 A1CR16 A1CR17 A1CR18 A1CR19 | 1910-0016 1901-0040 1901-0040 1910-0016 1901-0040 | | DIODE:GE 60 WIV DIODE:SILICON 50 MA 30 WV DIODE:SILICON 50 MA 30 WV DIODE:GE 60 WIV DIODE:SILICON 50 MA 30 WV | 28480 07263 07263 28480 07263 | 1910-0016 FDG1088 FDG1088 1910-0016 FDG1088 |
| A1CR20 A1CR21 A1CR22 A1CR23 A1CR24 | 1901-0040 1906-0025 1906-0025 1906-0024 1906-0024 | | DIODE:SILICON 50 MA 30 WV DIODE ASSY:SI DIODE ASSY:SI DIODE ASSY:SI DIODE ASSY:SI | 07263 28480 28480 28480 28480 | FDG1088 1906-0025 1906-0025 1906-0024 1906-0024 |
| A1CR25 A1CR26 A1CR27 A1CR28 A1CR29 | 1901-0376 1901-0376 1901-0376 1901-0376 1901-0040 | 4 | DIODE:SILICON 35V DIODE:SILICON 35V DIODE:SILICON 35V DIODE:SILICON 35V DIODE:SILICON 50 MA 30 WV | 28480 28480 28480 28480 07263 | 1901-0376 1901-0376 1901-0376 1901-0376 FDG1088 |
| A1CR30 A1CR31 A1CR32 A1CR33 A1CR34 | 1910-0016 1910-0016 1902-0041 1902-0041 1902-0041 | | DIODE:GE 60 WIV DIODE:GE 60 WIV DIODE:BREAKDOWN 5.11V 5% DIODE:BREAKDOWN 5.11V 5% DIODE:BREAKDOWN 5.11V 5% | 28480 28480 04713 04713 04713 | 1910-0016 1910-0016 SZ10939-98 SZ10939-98 SZ10939-98 |
| A1CR35 A1CR36 A1DS1 A1DS2 A1J1 | 1902-0041 1901-0040 2140-0047 2140-0047 1251-0472 | 2 | DIODE:BREAKDOWN 5.11V 5% DIODE:SILICON 50 MA 30 WV LAMP:NEON GLOW 0.8 MILLIAMPS LAMP:NEON GLOW 0.8 MILLIAMPS CONNECTOR:PC 12 CONTACTS | 04713 07263 08806 08806 71785 | SZ10939-98 FDG1088 A1C A1C 252-06-30-300 |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-2. Replaceable Parts, Options (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|------------------------------------|----------|-----------------|
| A1J2 | 1251-0472 | 2 | CONNECTOR:PC 12 CONTACTS | 71785 | 252-06-30-300 |
| A1J3 | 1250-1163 | | CONNECTOR:RF BNC INPUT | 28480 | 1250-1163 |
| A1J4 | 1250-1163 | | CONNECTOR:RF BNC INPUT | 28480 | 1250-1163 |
| A1K1 | 0490-0399 | 5 | RELAY:REED ASSY, 1200 OHM 12VDC | 28480 | 0490-0399 |
| A1K2 | 0490-0399 | | RELAY:REED ASSY, 1200 OHM 12VDC | 28480 | 0490-0399 |
| A1K3 | 0490-0399 | | RELAY:REED ASSY, 1200 OHM 12VDC | 28480 | 0490-0399 |
| A1K4 | 0490-0399 | | RELAY:REED ASSY, 1200 OHM 12VDC | 28480 | 0490-0399 |
| A1K5 | 0490-0399 | | RELAY:REED ASSY, 1200 OHM 12VDC | 28480 | 0490-0399 |
| A1Q1 | 1854-0039 | 1 | TSTR:SI NPN | 80131 | 2N3053 |
| A1Q2 | 1853-0001 | 1 | TSTR:SI PNP (SELECTED FROM 2N1132) | 28480 | 1853-C001 |
| A1Q3 | 1854-0215 | 6 | TSTR:SI NPN | 80131 | 2N3904 |
| A1Q4 | 1854-0215 | | TSTR:SI NPN | 80131 | 2N3904 |
| A1Q5 | 1853-0036 | 4 | TSTR:SI PNP | 80131 | 2N3906 |
| A1Q6 | 1853-0036 | | TSTR:SI PNP | 80131 | 2N3906 |
| A1Q7 | 1854-0215 | | TSTR:SI NPN | 80131 | 2N3904 |
| A1Q8 | 1854-0215 | | TSTR:SI NPN | 80131 | 2N3904 |
| A1Q9 | 1853-0036 | | TSTR:SI PNP | 80131 | 2N3906 |
| A1Q10 | 1853-0036 | | TSTR:SI PNP | 80131 | 2N3906 |
| A1Q11 | 1854-0215 | | TSTR:SI NPN | 80131 | 2N3904 |
| A1Q12 | 1854-0215 | | TSTR:SI NPN | 80131 | 2N3904 |
| A1Q13 | 1855-0334 | 2 | TSTR:SI FET DUAL N-CHANNEL | 17856 | DN377 |
| A1Q14 | 1855-0334 | | TSTR:SI FET DUAL N-CHANNEL | 17856 | DN377 |
| A1R1 | 0698-6123 | 2 | R:FXD COMP 20K OHM 5% 1/8W | 28480 | 0698-6123 |
| A1R2 | 0698-6123 | | R:FXD COMP 20K OHM 5% 1/8W | 28480 | 0698-6123 |
| A1R3 | 0698-5565 | 6 | R:FXD CARBON 2-2K OHM 5% 1/8W | 28480 | 0698-5565 |
| A1R4 | 0698-5565 | | R:FXD CARBON 2-2K OHM 5% 1/8W | 28480 | 0698-5565 |
| A1R5 | 0686-1515 | 1 | R:FXD COMP 150 OHM 5% 1/2W | 01121 | EB 1515 |
| A1R6 | 0686-1815 | 1 | R:FXD COMP 150 OHM 5% 1/2W | 01121 | EB 1815 |
| A1R7 | 0698-3381 | 6 | R:FXD COMP 150 OHM 5% 1/8W | 28480 | 0698-3381 |
| A1R8 | 0698-3381 | | R:FXD COMP 150 OHM 5% 1/8W | 28480 | 0698-3381 |
| A1R9 | 2100-2633 | 2 | R:VAR CERMET 1K OHM 10% LIN 1/2W | 28480 | 2100-2633 |
| A1R10 | 0698-5103 | 2 | R:FXD COMP 430 OHM 5% 1/8W | 28480 | 0698-5103 |
| A1R11 | 0698-5103 | | R:FXD COMP 430 OHM 5% 1/8W | 28480 | 0698-5103 |
| A1R12 | 0698-7965 | 2 | R:FXD COMP 330K OHM 5% 1/8W | 01121 | BB 3345 |
| A1R13 | 0698-7966 | 2 | R:FXD COMP 680K OHM 5% 1/8W | 01121 | BB 6845 |
| A1R14 | 0698-7966 | | R:FXD COMP 680K OHM 5% 1/8W | 01121 | BB 6845 |
| A1R15 | 0698-7965 | | R:FXD COMP 330K OHM 5% 1/8W | 01121 | BB 3345 |
| A1R16 | 0757-0467 | 2 | R:FXD MET FLM 121K OHM 1% 1/8W | 28480 | 0757-0467 |
| A1R17 | 0757-0467 | | R:FXD MET FLM 121K OHM 1% 1/8W | 28480 | 0757-0467 |
| A1R18 | 0698-3381 | | R:FXD COMP 150 OHM 5% 1/8W | 28480 | 0698-3381 |
| A1R19 | 0683-3015 | 2 | R:FXD COMP 300 OHM 5% 1/4W | 01121 | CB 3015 |
| A1R20 | 0698-3381 | | R:FXD COMP 150 OHM 5% 1/8W | 28480 | 0698-3381 |
| A1R21 | 0683-3015 | | R:FXD COMP 300 OHM 5% 1/4W | 01121 | CB 3015 |
| A1R22 | 0698-5568 | 2 | R:FXD CARBON 36K OHM 5% 1/8W | 28480 | 0698-5568 |
| A1R23 | 0698-6244 | 4 | R:FXD COMP 3+3K OHM 5% 1/8W | 01121 | BB 3325 |
| A1R24 | 0698-5568 | | R:FXD CARBON 36K OHM 5% 1/8W | 28480 | 0698-5568 |
| A1R25 | 0698-6244 | | R:FXD COMP 3+3K OHM 5% 1/8W | 01121 | BB 3325 |
| A1R26 | 0683-1515 | 2 | R:FXD COMP 150 OHM 5% 1/4W | 01121 | CB 1515 |
| A1R27 | 0683-1515 | | R:FXD COMP 150 OHM 5% 1/4W | 01121 | CB 1515 |
| A1R28 | 0698-6381 | 2 | R:FXD COMP 11K OHM 5% 1/8W | 28480 | 0698-6381 |
| A1R29 | 0698-6381 | | R:FXD COMP 11K OHM 5% 1/8W | 28480 | 0698-6381 |
| A1R30 | 0698-7097 | 4 | R:FXD COMP 1 MEGOHM 5% 1/8W | 01121 | BB 1055 |
| A1R31 | 0698-7097 | | R:FXD COMP 1 MEGOHM 5% 1/8W | 01121 | BB 1055 |
| A1R32 | 2100-2574 | 2 | R:VAR CERMET 500 OHM 10% LIN 1/2W | 28480 | 2100-2574 |
| A1R33 | 2100-2574 | | R:VAR CERMET 500 OHM 10% LIN 1/2W | 28480 | 2100-2574 |
| A1R34 | 0698-7964 | 2 | R:FXD COMP 100K OHM 5% 1/8W | 01121 | BB 1045 |
| A1R35 | 0698-7964 | | R:FXD COMP 100K OHM 5% 1/8W | 01121 | BB 1045 |
| A1R36 | 0698-3381 | | R:FXD COMP 150 OHM 5% 1/8W | 28480 | 0698-3381 |
| A1R37 | 0698-3381 | | R:FXD COMP 150 OHM 5% 1/8W | 28480 | 0698-3381 |
| A1R38 | 0698-5174 | 4 | R:FXD COMP 200 OHM 5% 1/8W | 28480 | 0698-5174 |
| A1R39 | 0698-5174 | | R:FXD COMP 200 OHM 5% 1/8W | 28480 | 0698-5174 |
| A1R40 | 0698-6984 | 2 | R:FXD COMP 470 OHM 5% 1/8W | 28480 | 0698-6984 |
| A1R41 | 0698-6984 | | R:FXD COMP 470 OHM 5% 1/8W | 28480 | 0698-6984 |
| A1R42 | 0698-7097 | | R:FXD COMP 1 MEGOHM 5% 1/8W | 01121 | BB 1055 |
| A1R43 | 0698-7097 | | R:FXD COMP 1 MEGOHM 5% 1/8W | 01121 | BB 1055 |
| A1R44 | 0698-6244 | | R:FXD COMP 3+3K OHM 5% 1/8W | 01121 | BB 3325 |
| A1R45 | 0698-6244 | | R:FXD COMP 3+3K OHM 5% 1/8W | 01121 | BB 3325 |
| A1R46 | 0698-5561 | 2 | R:FXD COMP 6+8 OHM 5% 1/8W | 28480 | 0698-5561 |
| A1R47 | 0698-5561 | | R:FXD COMP 6+8 OHM 5% 1/8W | 28480 | 0698-5561 |
| A1R48 | 0698-5174 | | R:FXD COMP 200 OHM 5% 1/8W | 28480 | 0698-5174 |
| A1R49 | 2100-3228 | 2 | R:VAR COMP 10K OHM 20% LIN 1/2W | 28480 | 2100-3228 |
| A1R50 | 0698-5174 | | R:FXD COMP 200 OHM 5% 1/8W | 28480 | 0698-5174 |
| A1R51 | 2100-3228 | | R:VAR COMP 10K OHM 20% LIN 1/2W | 28480 | 2100-3228 |
| A1R52 | 0698-5565 | | R:FXD CARBON 2-2K OHM 5% 1/8W | 28480 | 0698-5565 |

Continued on
next page

See introduction to this section for ordering information

Table 6-2. Replaceable Parts, Options (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|-----------------|
| A1R53 | 0698-5565 | | R:FXD CARBON 2.2K OHM 5% 1/8W | 28480 | 0698-5565 |
| A1R54 | 0698-5565 | | R:FXD CARBON 2.2K OHM 5% 1/8W | 28480 | 0698-5565 |
| A1R55 | 0698-5565 | | R:FXD CARBON 2.2K OHM 5% 1/8W | 28480 | 0698-5565 |
| A1R56 | 2100-2633 | | R:VAR CERMET 1K OHM 10% LIN 1/2W | 28480 | 2100-2633 |
| A1S1 | 3101-1598 | 3 | SWITCH:SLIDE DP3 POSITION | 28480 | 3101-1598 |
| A1S2 | 3101-1598 | | SWITCH:SLIDE DP3 POSITION | 28480 | 3101-1598 |
| A1S3 | 3101-1598 | | SWITCH:SLIDE DP3 POSITION | 28480 | 3101-1598 |
| A1S4 | 3101-1596 | 4 | SWITCH:SLIDE DPDT MINIATURE | 78488 | SS-91-1 |
| A1S5 | 3101-1596 | | SWITCH:SLIDE DPDT MINIATURE | 78488 | SS-91-1 |
| A1S6 | | | PART OF R49 | | |
| A1S7 | | | PART OF R51 | | |
| A1S8 | 3101-1596 | | SWITCH:SLIDE DPDT MINIATURE | 78488 | SS-91-1 |
| A1S9 | 3101-1596 | | SWITCH:SLIDE DPDT MINIATURE | 78488 | SS-91-1 |
| A1U1 | 1820-0274 | 1 | IC:DTL QUAD 2-INPT OR GATE | 28480 | 1820-0274 |
| A1U2 | 1820-0287 | 2 | IC:DIGITAL QUAD 2-INPT NAND GATE | 28480 | 1820-0287 |
| A1U3 | 1820-0625 | 1 | IC:HTL TRIPLE LEVEL TRANSLATOR(TTL-HTL) | 04713 | MC666P |
| A1U4 | 1820-0287 | | IC:DIGITAL QUAD 2-INPT NAND GATE | 28480 | 1820-0287 |
| J10 | 1251-0087 | | CONNECTOR:FEMALE 50-PIN MINAT | 28480 | 1251-0087 |
| W2 | 05327-60019 | 1 | CABLE ASSY | 28480 | 05327-60019 |
| W2 | 1200-0063 | 1 | LUG:CRIMP | 28480 | 1200-0063 |
| A4 | 05327-60036 | 1 | OPTION 010 (NOT FIELD REPAIRABLE). TEMPERATURE CONTROLLED OSCILLATOR | 28480 | 05327-60036 |
| A4 | | | OPTION 011.(NOT FIELD REPAIRABLE, | | |
| A4 | 10544-60011 | 1 | OVEN CONTROLLED OSCILLATOR FOR REPLACEMENT OR REPAIR, ORDER REBUILT ASSY 10544-60511.) | 28480 | 10544-60011 |

See introduction to this section for ordering information

Model 5326/27B
Replaceable Parts

Table 6-3. Manufacturers Code List

| Mfr. No. | Manufacturer Name | Address | Zip Code |
|----------|--|--------------------------|----------|
| 00000 | No M/F Description for this Mfg Number | | |
| 00000 | U.S.A. Common | Any Supplier of U.S.A. | |
| 00779 | AMP Inc. | Harrisburg, Pa. | 77105 |
| 01121 | Allen Bradley Co. | Milwaukee, Wis. | 53204 |
| 01295 | Texas Instruments Inc. Semi. Comp. Div. | Dallas, Tex. | 75231 |
| 02114 | Ferroxcube Corp. | Saugerties, N.Y. | 12477 |
| 02735 | RCA Solid State & Receiving Tube Div. | Somerville, N.J. | 08876 |
| 03508 | G.E. Co. Semiconductor Prod. Dept. | Syracuse, N.Y. | 13201 |
| 04713 | Motorola Semiconductor Prod. Inc. | Phoenix, Ariz. | 85008 |
| 04870 | P M Motor Co. | Westchester, Ill. | 60156 |
| 05820 | Wakefield Engineering Inc. | Wakefield, Mass. | 01880 |
| 07263 | Fairchild Camera & Inst. Corp. Semicon. Div. | Mountain View, Calif. | 94040 |
| 08806 | G.E. Co. Miniature Lamp Dept. | Cleveland, Ohio | 44112 |
| 12040 | National Semiconductor Corp. | Danbury, Conn. | 06810 |
| 12574 | Gulton Ind. Inc. Data System Div. | Albuquerque, N.M. | 87108 |
| 13019 | Airco Supply Co. Inc. | Wichita, Kans. | 67213 |
| 14655 | Cornell Dublier Elect. Div. Federal Pacific Elect. Co. | Newark, N.J. | 07105 |
| 17856 | Siliconix Inc. | Sunnyvale, Calif. | 94086 |
| 24931 | Specialty Connector Co. Inc. | Indianapolis, Ind. | 46227 |
| 28480 | Hewlett-Packard Co. Corporate HQ | Your Nearest HP Office | |
| 56289 | Sprague Electric Co. | N. Adams, Mass. | 01247 |
| 70903 | Belden Corp. | Chicago, Ill. | 60644 |
| 71400 | Bussman Mfg. Div. McGraw-Edison Co. | St. Louis, Mo. | 63017 |
| 71785 | Cinch Mfg. Co. Div. TRW Inc. | Elk Grove Village, Ill. | |
| 72136 | Electro Motive Mfg. Co. Inc. | Willimantic, Conn. | 06226 |
| 72982 | Erie Technological Prod. Inc. | Erie, Pa. | 16512 |
| 75915 | Littlefuse Inc. | Des Plaines, Ill. | 60016 |
| 76530 | Cinch Monadnock Mills Div. TRW Inc. | City of Industry, Calif. | 91746 |
| 78488 | Stackpole Carbon Co. | St. Marys, Pa. | 15857 |
| 80031 | Mepco Div. Sessions Clock Co. | Morristown, N.J. | 07960 |
| 80131 | Electronic Industries Association | Washington, D.C. | 20006 |
| 82142 | Airco Speer Elect. Comp. | Du Bois, Pa. | 15801 |
| 82389 | Switchcraft Inc. | Chicago, Ill. | 60630 |
| 83594 | Burroughs Corp. Elect. Comp. Div. | Plainsfield, N.J. | 07061 |
| 85471 | Boyd A.B. Co. | San Francisco, Calif. | 94103 |
| 91418 | Radio Materials Co. | Chicago, Ill. | 60646 |
| 95712 | Bendix Corp. The Microwave Device Div. | Franklin, Ind. | 46131 |
| 96733 | San Fernando Elect. Mfg. Co. | San Fernando, Calif. | 91341 |
| 98291 | Sealectro Corp. | Mamaroneck, N.Y. | 10544 |
| 99800 | Delevan Electronics Corp. | E. Aurora, N.Y. | 14052 |

SECTION VII

OPTIONS AND MANUAL CHANGES

7-1. INTRODUCTION

7-2. This section contains information necessary to adapt this manual to older instruments. Also included are installation procedures for available options. Refer to Section II for remote programming requirements.

7-3. OPTIONS

7-4. Options 001 through 004, 010 and 011 are available for the 5326B and 5327B Models. The purpose of each option is described in the following paragraphs.

7-5. Option 001, 8-Digit Display

7-6. Option 001 is the addition of an eighth digit to the display assembly. This addition becomes the most significant digit and extends the counter's resolution at higher frequencies. The digit is always blanked if the reading is "0". Option 001 consists of A9 Display Assembly 05326-60025 in place of 05326-60008.

7-7. Option 002, Remote Programming

7-8. Option 002 allows the counter to be computer controlled from a 36-pin connector on the counter's rear panel. Programming instructions are given in Section II. A schematic diagram is included in Section VIII.

7-9. Option 003, Digital Recorder Output

7-10. The data displayed on the counter's front panel can be permanently recorder by connecting a printer to the counter via Option 003. The necessary signals are coupled from A9 Display Assembly to an HP 5055A or 5050B Digital Recorder through J9 on the counter's rear panel (also, see Table 1-1 for specifications and Section VIII for pin references).

7-11. Option 004, Extended Remote Programming

7-12. This option is similar to Option 002 except it includes the remote programming of the AC/DC, SEP-COM-CHK, FAST/NORM, and ATTEN switches. Remote programming of the attenuator board is achieved by connecting the DTL input lines in parallel with the front panel switches (connected at cable points 1 through 8). When the counter is being externally controlled, the A COM line goes high. This high turns off diodes CR6, 18, 2, 3, 15, 30, 31, and 1, and disables the front panel switches.

7-13. Option 010 Temperature Compensated Oscillator

7-14. Option 010 consists of a Temperature Compensated Oscillator (TCXO) (05327-60036) in place of Oscillator Assembly A4 (05326-60002). This option is available for 5326B instruments with Serial Prefix 1240A and above and 5327B instruments with prefix 1224A and above. The TCXO is not field repairable.

7-15. Option 011 Oven Oscillator

7-16. Option 011 consists of an HP Oven Oscillator (10544-60011) in place of Oscillator Assembly A4 (05326-60002). This option is available for 5326B instruments with Serial Prefix 1240A and above and 5327B instruments with prefix 1224A and above. The oven oscillator is not field repairable, for replacement or repair, order rebuilt assembly 10544-60511.

7-17. FIELD INSTALLATION OF OPTIONS

7-18. Installation of Option 001, 8th Digit

7-19. Parts required to install this option are:

1820-0119 Decade Counter U8
1820-0116 Buffer Storage U16
1820-0092 Decoder Driver U24
1970-0042 Display Tube DS8

a. Remove right and left readout boards, A10 and A11.

b. Remove two screws holding display tube shield and remove shield.

c. Remove display board A9 and display support board A8 from the counter by pulling up on the display support board A8. Separate A8 from A9.

d. Install parts on A9 as shown in the component location photo on Figure 8-12 of this manual, and plug in place.

e. Clip out resistor R10. Install blanking jumper as per schematic and Paragraph 2-62.

f. Perform Self-Check in Table 3-1. Especially note that the OF (overflow) lamp lights when the left-most digit changes from 9 to 0.

7-20. Installation of Option 002, Remote Programming

7-21. To install remote programming capability in units not so equipped, order remote cable assembly HP Part No. 05327-60013, two 4-40 x $\frac{1}{4}$ -inch machine screws, and one 6-32 x $\frac{5}{8}$ -inch machine screw with hex nut.

a. Remove the plate covering the lower opening in the rear panel for Option 002.

b. The rear-panel interconnect board containing the wiring for the rear-panel BNC's and switches must be removed. To accomplish this, remove the nuts holding the rear-panel BNC's.

c. Remove two screws holding P1A, and 1 $\frac{1}{8}$ -inch-long, black, pressure connector to the motherboard A16.

d. Remove side covers and six screws holding rear panel. Loosen one side frame. Pull rear panel away from the instrument.

e. Remove the rear-panel interconnect board from the instrument and separate it from P1A by removing two screws.

f. Feed the pressure connector through the hole in rear-panel and mount rear-panel connector J10, with screws removed earlier. Position J10 with pin 1 near the side frame.

g. Assemble the rear-panel interconnect board and the new 5-inch-long pressure connector P1 with three 6-32 x $\frac{5}{8}$ -inch screws and hex nuts. Be certain that proper contact is made between interconnect board and P1.

h. Attach P1 to the motherboard using four 4-40 x $\frac{1}{4}$ -inch screws. Do not tighten screws. Route cable as shown in the top internal photo of instrument, Figure 8-4.

CAUTION

SCREWS LONGER THAN $\frac{1}{4}$ -INCH WILL DAMAGE P1.

i. Gently reinstall rear panel. Install BNC lock nuts so that the board is still moveable.

j. Observe the alignment of the connector in the motherboard. Tighten the four screws holding P1 to the motherboard, making sure to maintain proper contact.

k. Check contact alignment of P1 with motherboard and with the rear-panel interconnect board. If necessary, loosen the screws in P1 and shift slightly to obtain proper terminal contact.

l. Tighten BNC lock nuts and reassemble instrument.

m. Run a complete performance check on the unit to verify that remote programming is working properly.

7-22. Installation of Option 003, Digital Recorder Output

7-23. Order digital recorder cable assembly HP Part Number 05326-60012.

a. Remove the plate covering the upper opening in the rear panel.

b. Remove right and left readout boards A10 and A11. Remove two screws holding the display tube shield and remove shield. Remove display support board A8 and the display board A9 by pulling up on A8.

c. Feed the two connectors of the recorder cable through the rear panel and mount J9 on the rear panel, using the screws previously removed. Position J9 so pin 1 is near the side frame.

d. Slide the connectors on the A9 Board. The connector with the long wires attaches to J1 and is positioned so that pin 1 is toward the front of the instrument. The other connector attaches to J2, and pin 1 is toward the rear of the instrument.

e. Position the P1 cable so it passes between A8 and A11, completely clearing A8. Reinstall A8 and A9.

f. Route the cable around T1 and in front of A8 assembly.

g. Reassemble unit and run a proof-of-performance check of the digital output to verify that the option is installed properly.

7-24. Installation of Option 004, Extended Remote Programming

7-25. Field installation of Option 004 is not available.

7-26. Installation of Option 010 and 011, Oscillator Assemblies

7-27. Remove the standard oscillator A4 and insert the option into the XA4 connector. The Option 011 assembly must be mounted to the interconnect board with two 6 x 32, $\frac{5}{8}$ -inch screws. Place the fiber washers on the underside of the board.

7-28. MANUAL CHANGES

7-29. This manual applies directly to Models 5326B and 5327B that have serial prefixes 1428A (see Paragraph 1-4).

7-30. NEWER INSTRUMENTS

7-31. As changes are made, newer instruments may have serial prefixes that are not listed in this manual. The manual for these instruments are supplied with a manual change sheet, containing the required information. If this sheet is missing, contact the nearest Hewlett-Packard Sales and Service Office for information.

7-32. Older Instruments

7-33. To adapt this manual to instruments having a serial prefix prior to 1428A, perform the backdating that applies to your instrument serial prefix as listed in Table 7-1 below.

NOTE

For 5326B's with serial prefixes earlier than 1128A, a separate manual is required. Order "Model 5326A/B 50 MHz Timer/Counter/DVM Operating and Service Manual," HP Part Number 05326-90030.

Table 7-1. Manual Backdating Changes

| 5326B | 5327B | Change |
|--------------|-------|--------------------------|
| 1312A | 1312A | 12 |
| 1240A | 1248A | 1,12 |
| ---- | 1224A | 1,2,12 |
| 1224A | ---- | 1,3,5,12 |
| ---- | 1220A | 1,2,3,4,12 |
| 1208A | ---- | 1,3,4,5,12 |
| ---- | 1140A | 1,2,3,4,5,12 |
| ---- | 1132A | 1,2,3,4,5,6,8,12 |
| 1140A | ---- | 1,3,4,5,8,12 |
| 1136A | ---- | 1,3,4,5,8,9,12 |
| 1128A | ---- | 1,3,4,5,7,8,9,10,12 |
| See Above | 1116A | 1,2,3,4,5,6,8,9,10,12 |
| Above | 1104A | 1,2,3,4,5,6,8,9,10,11,12 |

CHANGE 1

Page 6-9, Table 6-1:
Change A9R2, R4-9 and R11 to "0683-7525"
Change board series number to 1224A.

Page 6-14, Table 6-1:
Change A15R1 to "0683-2035, R:FXD COMP
20K OHM 5% 1/2W 01121 CB 2035."

Change A15R6 to "0686-1505 R:FXD COMP
15 OHM 5% 1/2W 01121 EB 1505."

Delete "A15F1 2110-460 FUSE: 1/32 AMP."

Delete "A15XF1 1400-0110 FUSE HOLDER."

Page 8-45, Figure 8-18:

Change A15 R1 to "20K."

Change A15 R6 to "15 OHM."

Delete F1. Q8 emitter connects directly to XA15 (1,A).

Change board series number to 1224A.

CHANGE 2

Page 1-2, Table 1-3:

Under INPUT CHANNEL C RANGE;
change to "1 kHz - 50 MHz, ac coupled."
Change sensitivity to direct "5 mV rms pre-scaled 100 mV rms."

Page 6-16, Table 6-1:

Replace parts listing for A18 (05327-60033)
with Table 7-2 (parts list for 05327-60009) and
Table 7-3 (parts list for 05327-60029). Instruments
with series prefix 1224 and below could
have either the 05327-60009 or 05327-60029
boards installed.

Page 8-48, Figure 8-20:

Replace A18 schematic diagram with Figure
7-1 (05327-60009) and Figure 7-2 (05327-
60029). Instruments with serial prefix 1224
and below could have either board installed.
Replace A18 component locator with Figure 7-3
(05327-60009) and Figure 7-4 (05327-60029).

Page 6-18, Table 6-1:

Add "A19 05327-60032 Protection Board."
Add "A19 05327-20032 Blank Board."
Add "A19C1,2 0180-0228 C:FXD TANT 22 UF
10% 15 V."
Add "A19CR1,2 1901-0050 DIODE:
SILICON."
Add "A19F1 2110-0436 FUSE: 0.1 AMP."
Add A19J1 1250-1408 CONNECTOR:RF
SUBMINIATURE.
Add A19J1 1250-1835 CONNECTOR:RF
SUBMINIATURE.
Add A19XF1A/B 1251-3205 SOCKET:
MINIATURE (2).

CHANGE 3

Page 1-1, Paragraph 1-9:

Pages 7-1 and 7-2, Paragraphs 7-13 through
7-15, 7-26, and 7-27: Delete reference to
Options 010 and 011 oscillators. Options 010
and 011 were available for 5326B instruments
with Serial Prefix 1240A and above
and for 5327B with Serial Prefix 1224A and
above.

Model 5326/27B
Options and Manual Changes

Page 6-6, Table 6-1:
Delete A6R44. Change board series to 1132A.

Page 8-21, Figure 8-9:
On schematic, delete A6R44. A6C10 connects directly to A6(2).

Page 6-9, Table 6-1:
Change A9 series number to 1224A.
Delete A9R11, A9R12, A9XDS8, A9XU8, 16 and 24.

Page 8-33, Figure 8-12:
Change Note 3 to read R10 is wired to B for Option 001.

Page 6-15, Table 6-1:
Delete A16C6, A16CR18, A16Q1, A16R4, A16R5, A16R6, A16R7, A16R8, and A16U1.

Page 8-57, Figure 8-24:
Delete schematic diagram and component locator.

Page 6-7, Table 6-1:
Delete parts list for A7 (05327-60031) and replace with Table 7-4 (parts list for A7, 05327-60004).

Page 8-29, Figure 8-10:
Replace A7 schematic with Figure 7-5 (schematic for A7 05327-60004). Replace component locator with Figure 7-6.

CHANGE 4

Page 6-3, Table 6-1:
Change A1 part number to 05326-60003.
Change A1R24 and R26 to 2100-2905.

Page 6-19, Table 6-1:
Change 05326-00032 Rear Panel to 05326-00004.
Add 05326-00012 Plate:Connector, Short (J10 Cover).
Add 05326-20028 Board:Blank (Rear Panel Interconnect).
Delete 05326-00033 Adapter:Connector.
Delete 05326-20046 Board, Rear Panel Connector.

CHANGE 5

Page 6-18, Table 6-1:
Delete A19 and all A19 listed parts.

Pages 7-7 and 7-8, Figures 7-1 and 7-2:
Delete A19 protection board from Schematic diagrams.

Page 1-2, Table 1-3:
Under INPUT CHANNEL C Maximum Input, change to "5 Volts rms; 7.5 volts peak."

CHANGE 6

Some instruments with serial prefix 1208 and below have standard colors of light gray panels with blue textured cabinet. For replacement, order Option X95 parts listed in Section VI.

CHANGE 7

Pages 6-15 and 6-16, Table 6-1:
Change A17CR3 to "1912-0007."
Change A17Q4 to "1854-0092."
Change "A17R21 to 0683-3625 R:FXD COMP 3600 OHM 5% 1/4W 01121 CB 3625."
Change A17R22 to "0683-1515 R:FXD COMP 150 OHM 5% 1/4W 01121 CB 1515."
Change A17R23 to "0683-1025 R:FXD 1000 OHM 5% 1/4W 01121 CB 1025."
Change A17R26 to "0683-5615 R:FXD COMP 560 OHM 5% 1/4W 01121 CB 5615."
Delete "05326-00031 SHIELD: NOISE."
Change board series to "1128A."

Page 8-47, Figure 8-19:
Change A17R21 to "3600 OHMS."
Change A17R26 to "560 OHMS."
Change A17CR3 to "1912-0007."
Change A17Q4 to "1854-0092."
Change board series to "1128."

CHANGE 8

Page 6-14, Table 6-1:
Delete A15C8 and description.
Change board series to "1132A."

Page 8-45, Figure 8-18:
Delete A15C8.

CHANGE 9

Page 6-18, Table 6-1:
Change T1 part number to 9100-2888.

Page 6-14, Table 6-1:
Change A15CR15-18 to "1901-0040."
Change A15R17, 18 to "0683-0395 R:FXD 3.9 OHM 5% 1/4W 01121 CB 3965."
Change Board series numbers to "1040A."

Page 8-45, Figure 8-18:
Change A15R17, 18 to 3.9 OHM.
Change A15CR15-18 to "1901-0040."
Change Board series to "1040A."

Page 7-11, Table 7-4:
Change A7C2 to "0160-0333 C:FXD MICA 15 PF 5% 500 VDCW 00853 RDM15C15OD3C."
Change A7 Board Series to 1040A.

Page 8-29, Figure 8-10:
Change A7C2 to 15 PF.

Page 6-7, Table 6-1:
Change A6R19 to "0683-2025 R: FXD
COMP 2000 OHM 5% 1/4W 01121 CB 2025."
Change A6 Board Series Number to 1036A.

CHANGE 10

Page 6-14, Table 6-1:
Change part number of A16 Board Assembly
Connector to read 05327-60006, Series Number
1104A. Change 05327-20027 blank board to
05327-20006.

Page 8-45, Figure 8-18, A16 schematic:
Change A16 part number from 05327-60027
to 05327-60006.

CHANGE 11

Table 6-1:
Change part numbers to read:
COVER-SIDE 3x11 5000-0729, 2 ea.
COVER-TOP 05325-00008, 1 ea.
INSULATOR (Q1&Q2) 0340-0162, 1 ea.

NOTE

If replacement of any of the above
parts is required, replace with new
parts listed in Table 6-1.

CHANGE 12

Page 6-14, Table 6-1:
Change A15F1 from 2110-0487 (1/20 A) to
2110-0460 (1/32 A).
Change A15R6 from 0698-5479 (8.2 OHM)
to 0686-1305 (13 OHM); MFR PART NO.
EB 82G5 to EB 1305.
Change A15XF1 from 1251-3205 Qty 2 to
1400-0110 Qty 1; Change description from
SOCKET, MINIATURE: SINGLE to
BODY: FUSEHOLDER; Change MFR
CODE from 00779 to 71400; Change MFR
PART NO. from 2-331272-7 to "P/O HWA
FUSEHOLDER."
Change A15 board series from 1428A to
1312A.

Page 8-45, Figure 8-18, A15 Schematic
Diagram:

Change A15F1 value from 1/20A to 1/32A.
Change A15R6 value from 8.2 ohm to 13 ohm.
Change board series from 1428A to 1312A.

Model 5326/27B
Options and Manual Changes

Table 7-2. A18 (05327-60009) Replaceable Parts

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|------------------------|-----|---|----------------|---------------------------|
| A18 | 05327-60009 | 1 | PRESCALER ASSY (SERIES 1040A) (LOADED ON 05327-20009 BLANK BOARD) | 28480 | 05327-60009 |
| A18C1 | 3050-0062 0180-0197 | 2 | WASHER:FLAT, BAKELITE C:FXD ELECT 2-2 UF 10% 20VDCW | 00000 56289 | 0BD 1500225X9020A2-DYS |
| A18C2 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C3 | 0180-0106 | | C:FXD ELECT 60 UF 20% 6VDCW | 28480 | 0180-0106 |
| A18C4 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C5 | 0180-0106 | | C:FXD ELECT 60 UF 20% 6VDCW | 28480 | 0180-0106 |
| A18C7 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C8 | 0140-0225 | 2 | C:FXD MICA 300 PF 1% | 28480 | 0140-0225 |
| A18C9 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C10 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C11 | 0180-0197 | | C:FXD ELECT 2-2 UF 10% 20VDCW | 56289 | 1500225X9020A2-DYS |
| A18C12 | 0180-0197 | | C:FXD ELECT 2-2 UF 10% 20VDCW | 56289 | 1500225X9020A2-DYS |
| A18C13 | 0160-2049 | 4 | C:FXD CER FEED-THRU 5000 PF +80-20% | 28480 | 0160-2049 |
| A18C14 | 0160-2049 | | C:FXD CER FEED-THRU 5000 PF +80-20% | 28480 | 0160-2049 |
| A18CR1 | 1902-3002 | | DIODE BREAKDOWN:2.37V 5% | 28480 | 1902-3002 |
| A18CR2 | 1912-0007 | | DIODE:TUNNEL EIA TYPE IN3714 | 03508 | IN3714 SPEC |
| A18CR3 | 1902-3048 | | DIODE BREAKDOWN:SILICON 3.48V 5% | 28480 | 1902-3048 |
| A18J1 | 1250-0836 | | CONNECTOR:RF SUB-MINIATURE | 98291 | 50-053-0000 |
| A18L2 | 9100-2251 | | COIL:FXD RF 0.22 UH 10% | 28480 | 9100-2251 |
| A18Q1 | 1553-0015 | | TSTR:SI PNP | 80131 | 2N3640 |
| A18Q2 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A18Q3 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A18R1 | 2100-2633 | | R:VAR CERMET 1K OHM 10% LIN 1/2W | 28480 | 2100-2633 |
| A18R2 | 2100-2521 | | R:VAR FLM 2000 OHM 10% LIN 1/2W | 28480 | 2100-2521 |
| A18R3 | 0683-5105 | | R:FXD COMP 51 OHM 5% 1/4W | 01121 | CB 5105 |
| A18R4 | 0683-5105 | | R:FXD COMP 51 OHM 5% 1/4W | 01121 | CB 5105 |
| A18R5 | 0683-1045 | | R:FXD COMP 100K OHMS 5% 1/4W | 01121 | CB 1045 |
| A18R6 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R7 | 0698-3378 | | R:FXD CARBON 51 OHM 5% 1/8W | 28480 | 0698-3378 |
| A18R8 | 0683-1815 | | R:FXD COMP 180 OHM 5% 1/4W | 01121 | CB 1815 |
| A18R9 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A18R10 | 0683-2215 | | R:FXD COMP 220 OHM 5% 1/4W | 01121 | CB 2215 |
| A18R11 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A18R12 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A18R13 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A18R14 | 0683-2015 | | R:FXD COMP 200 OHM 5% 1/4W | 01121 | CB 2015 |
| A18R15 | 0683-2015 | | R:FXD COMP 200 OHM 5% 1/4W | 01121 | CB 2015 |
| A18R16 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R17 | 0683-1515 | 2 | R:FXD COMP 150 OHM 5% 1/4W | 01121 | CB 1515 |
| A18R18 | 0683-4315 | | R:FXD COMP 430 OHM 5% 1/4W | 01121 | CB 4315 |
| A18R19 | 0683-3315 | | R:FXD COMP 330 OHM 5% 1/4W | 01121 | CB 3315 |
| A18R20 | 0683-8205 | | R:FXD COMP 82 OHM 5% 1/4W | 01121 | CB 8205 |
| A18R21 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A18R22 | 0683-2025 | | R:FXD COMP 2000 OHM 5% 1/4W | 01121 | CB 2025 |
| A18R23 | 0683-3315 | | R:FXD COMP 330 OHM 5% 1/4W | 01121 | CB 3315 |
| A18R24 | 0683-2405 | | R:FXD COMP 24 OHM 5% 1/4W | 01121 | CB 2405 |
| A18U1 | 5088-7002 | | IC:LIMITER | 28480 | 5088-7002 |
| A18U2 | 5088-7001 | | IC:AMP AND TRIG | 28480 | 5088-7001 |
| A18U3 | 1820-0736 | | IC:DIGITAL | 28480 | 1820-0736 |
| A18U4 | 1820-0714 | 1 | IC:DIGITAL QUINARY DIVIDER | 28480 | 1820-0714 |
| A18U5 | 1820-0489 | | IC:ECL | 28480 | 1820-0489 |
| A18U6 | 1820-0147 | | IC:ECL TRIPLE 3-INPT NOR GATE | 04713 | MC1007P |
| A18U7 | 1858-0004 | | TSTR ARRAY:SI NPN DUAL DIFF. AMPL. | 28480 | 1858-0004 |
| A18XU2 | 1251-1556 | 45 | CONNECTOR:SINGLE CONTACT | 00779 | 2-330808-8 |

See introduction to this section for ordering information

Model 5326/27B
Options and Manual Changes

Table 7-3. A18 (05327-60029) Replaceable Parts

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|---|----------|--------------------|
| A18 | 05327-60029 | 1 | BOARD ASSY:PRESCALER (SERIES 1116A) (LOADED ON 05327-20029 BLANK BOARD) | 28480 | 05327-60029 |
| A18C1 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A18C2 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C3 | 0180-0106 | | C:FXD ELECT 60 UF 20% 6VDCW | 28480 | 0180-0106 |
| A18C4 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C5 | 0180-0106 | | C:FXD ELECT 60 UF 20% 6VDCW | 28480 | 0180-0106 |
| A18C6 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C7 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C8 | 0140-0225 | 1 | C:FXD MICA 300 PF 1% | 28480 | 0140-0225 |
| A18C9 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C10 | 0160-0975 | | C:FXD CER 0.001 UF 20% 75VDCW | 12574 | SSM-.001-98 |
| A18C11 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A18C12 | 0180-0197 | | C:FXD ELECT 2.2 UF 10% 20VDCW | 56289 | 150D225X9020A2-DYS |
| A18C13 | 0160-2049 | | C:FXD CER FEED-THRU 5000 PF +80-20% | 28480 | 0160-2049 |
| A18C14 | 0160-2049 | | C:FXD CER FEED-THRU 5000 PF +80-20% | 28480 | 0160-2049 |
| A18CR1 | 1902-3002 | | DIODE BREAKDOWN=2.37V 5% | 28480 | 1902-3002 |
| A18CR2 | 1912-0007 | | DIODE=TUNNEL EIA TYPE 1N3714 | 03508 | 1N3714 SPEC |
| A18CR3 | 1902-3048 | 1 | DIODE BREAKDOWN=SILICON 3.48V 5% | 28480 | 1902-3048 |
| A18J1 | 1250-0836 | | CONNECTOR:RF SUB-MINIATURE | 98291 | 50-053-0000 |
| A18L1 | 9140-0158 | | COIL:FXD RF 1 UH 10% | 99800 | 1025-20 |
| A18L2 | 9100-2251 | | COIL:FXD RF 0.22 UH 10% | 28480 | 9100-2251 |
| A18Q1 | 1853-0015 | 1 | TSTR:SI PNP | 80131 | 2N3640 |
| A18Q2 | 1854-0345 | | TSTR:SI NPN | 80131 | 2N5179 |
| A18Q3 | 1854-0092 | | TSTR:SI NPN | 80131 | 2N3563 |
| A18R1 | 2100-2633 | | R:VAR CERMET 1K OHM 10% LIN 1/2W | 28480 | 2100-2633 |
| A18R2 | 2100-2521 | | R:VAR FLM 2000 OHM 10% LIN 1/2W | 28480 | 2100-2521 |
| A18R3 | 0683-5105 | | R:FXD COMP 51 OHM 5% 1/4W | 01121 | CB 5105 |
| A18R4 | 0683-5105 | | R:FXD COMP 51 OHM 5% 1/4W | 01121 | CB 5105 |
| A18R5 | 0683-1045 | | R:FXD COMP 100K OHMS 5% 1/4W | 01121 | CB 1045 |
| A18R6 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R7 | 0698-3378 | 1 | R:FXD CARBON 51 OHM 5% 1/8W | 28480 | 0698-3378 |
| A18R8 | 0683-1815 | 1 | R:FXD COMP 180 OHM 5% 1/4W | 01121 | CB 1815 |
| A18R9 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A18R10 | 0683-2215 | | R:FXD COMP 220 OHM 5% 1/4W | 01121 | CB 2215 |
| A18R11 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A18R12 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A18R13 | 0683-1825 | | R:FXD COMP 1800 OHM 5% 1/4W | 01121 | CB 1825 |
| A18R14 | 0683-2015 | | R:FXD COMP 200 OHM 5% 1/4W | 01121 | CB 2015 |
| A18R15 | 0683-2015 | | R:FXD COMP 200 OHM 5% 1/4W | 01121 | CB 2015 |
| A18R16 | 0683-1025 | | R:FXD COMP 1000 OHM 5% 1/4W | 01121 | CB 1025 |
| A18R17 | 0683-1515 | 1 | R:FXD COMP 150 OHM 5% 1/4W | 01121 | CB 1515 |
| A18R18 | 0683-4315 | | R:FXD COMP 430 OHM 5% 1/4W | 01121 | CB 4315 |
| A18R19 | 0683-5115 | | R:FXD COMP 510 OHM 5% 1/4W | 01121 | CB 5115 |
| A18R20 | 0683-8205 | 1 | R:FXD COMP 82 OHM 5% 1/4W | 01121 | CB 8205 |
| A18R21 | 0683-1015 | | R:FXD COMP 100 OHM 5% 1/4W | 01121 | CB 1015 |
| A18R22 | 0683-2025 | | R:FXD COMP 2000 OHM 5% 1/4W | 01121 | CB 2025 |
| A18R23 | 0683-3315 | | R:FXD COMP 330 OHM 5% 1/4W | 01121 | CB 3315 |
| A18R24 | 0683-2405 | | R:FXD COMP 24 OHM 5% 1/4W | 01121 | CB 2405 |
| A18R25 | 0698-3374 | 1 | R:FXD CARBON 20 OHM 5% 1/8W | 28480 | 0698-3374 |
| A18R26 | 0683-3615 | | R:FXD COMP 360 OHM 5% 1/4W | 01121 | CB 3615 |
| A18R27 | 0683-2715 | | R:FXD COMP 270 OHM 5% 1/4W | 01121 | CB 2715 |
| A18R28 | 2100-2670 | 1 | R:VAR CERMET 20 OHM 30% LIN 1/2W | 28480 | 2100-2670 |
| A18U1 | 5088-7002 | 1 | IC:LIMITER | 28480 | 5088-7002 |
| A18U2 | 5088-7001 | 1 | IC:AMP AND TRIG | 28480 | 5088-7001 |
| A18U3 | 1820-0736 | 1 | IC:DIGITAL | 28480 | 1820-0736 |
| A18U4 | 1820-0784 | 1 | IC:BINARY-QUINARY | 28480 | 1820-0784 |
| A18U5 | 1820-0489 | | IC:ECL | 28480 | 1820-0489 |
| A18U6 | 1820-0147 | | IC:ECL TRIPLE 3-INPT NOR GATE | 04713 | MC1007P |
| A18U7 | 1858-0004 | | TSTR ARRAY:SI NPN DUAL DIFF. AMPL. | 28480 | 1858-0004 |
| A18U8 | 1820-0790 | 1 | IC:DIGITAL | 28480 | 1820-0790 |
| A18XU2 | 1251-1556 | 31 | CONNECTOR: SINGLE CONTACT | 00779 | 2-330808-8 |
| A18XU4 | 1251-1556 | | CONNECTOR: SINGLE CONTACT | 00779 | 2-330808-8 |
| A18XU4 | 1205-0243 | 1 | HEAT DISSIPATOR | 28480 | 1205-0243 |
| A18XU4 | 1205-0244 | 1 | RETAINER | 28480 | 1205-0244 |
| A18XU4 | 0520-0129 | 2 | SCREW: PAN HD POZI DR 2-56 X 0.312" LG | 00000 | 0BD |
| A18XU4 | 0610-0001 | 2 | NUT: HEX 2-56 X 0.188" | 00000 | 0BD |
| | 3050-0062 | 1 | WASHER: FLAT, BAKELITE | 00000 | 0BD |
| | 3050-0079 | 2 | WASHER: NYLON 0.1875" OD | 00000 | 0BD |

See introduction to this section for ordering information

Model 5326/27B
Options and Manual Changes

Figure 7-1. A18 Prescaler Board Assembly (5327B Only)



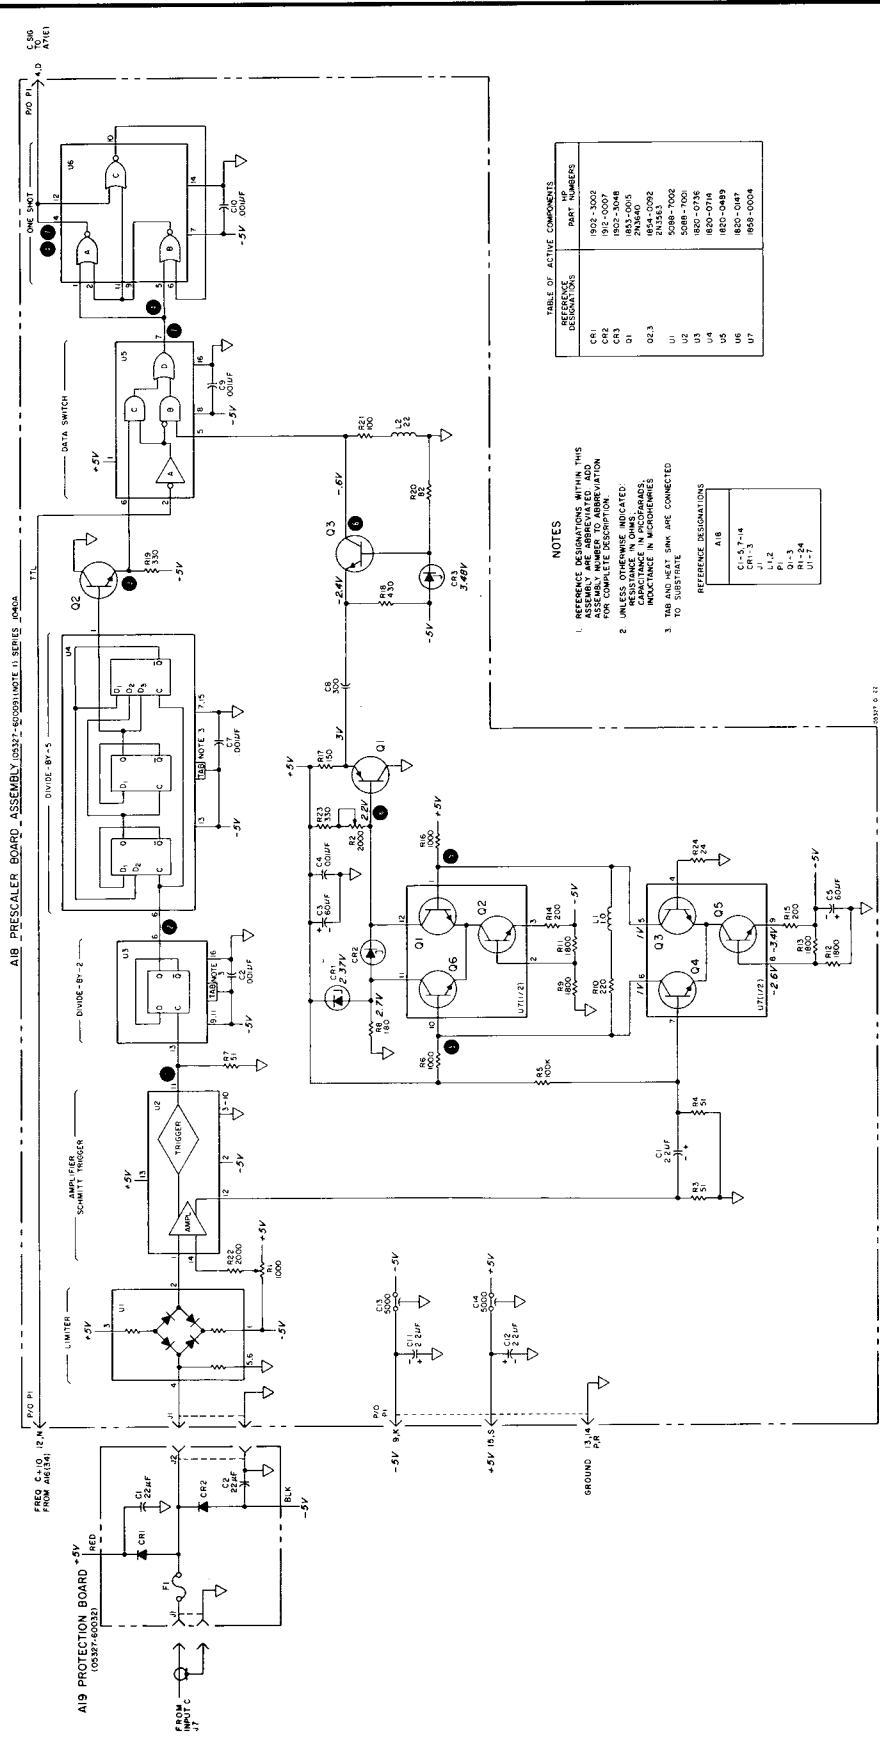


Figure 7-2. A18 Prescaler Board Assembly (5327B Only)

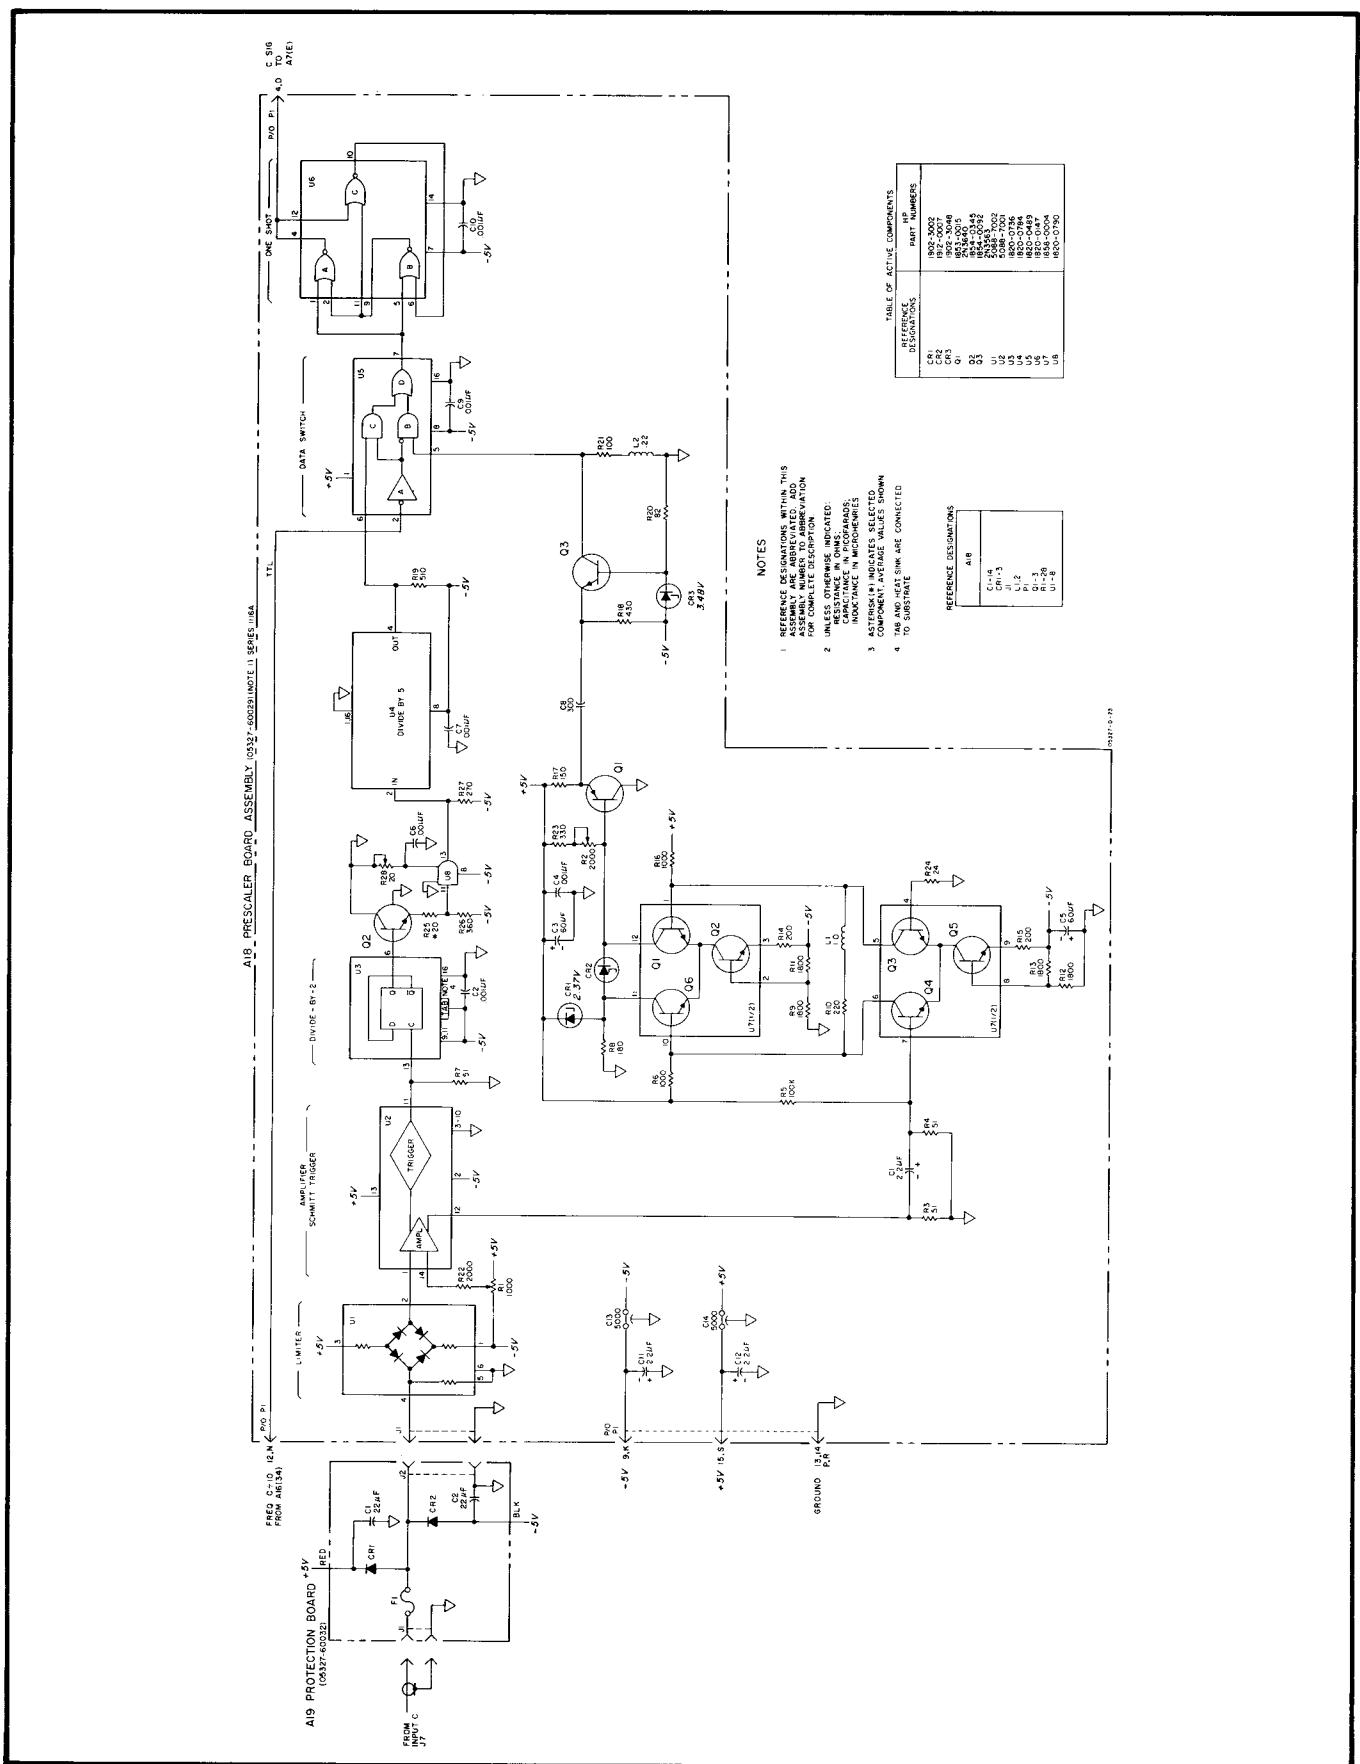

Model 5326/27B Options and Manual Changes

Figure 7-3. A18 (05327-60009) Component Locator

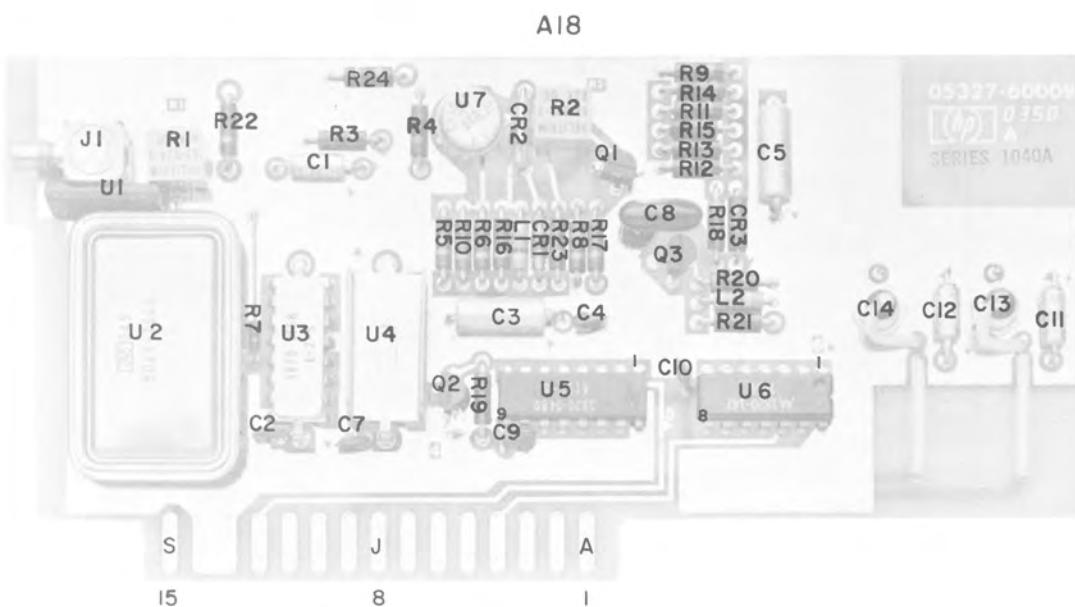

SECTION VIII

SCHEMATIC DIAGRAMS

8-1. GENERAL

8-2. This section contains the following:

- a. Schematic diagram notes.
- b. Schematics.
- c. Component locators.
- d. IC outline drawings.
- e. Waveforms.
- f. Simplified block diagrams.
- g. Theory of operation.
- h. Troubleshooting.

Model 5326/27B
Schematic Diagrams

Figure 8-1. Schematic Diagram Notes


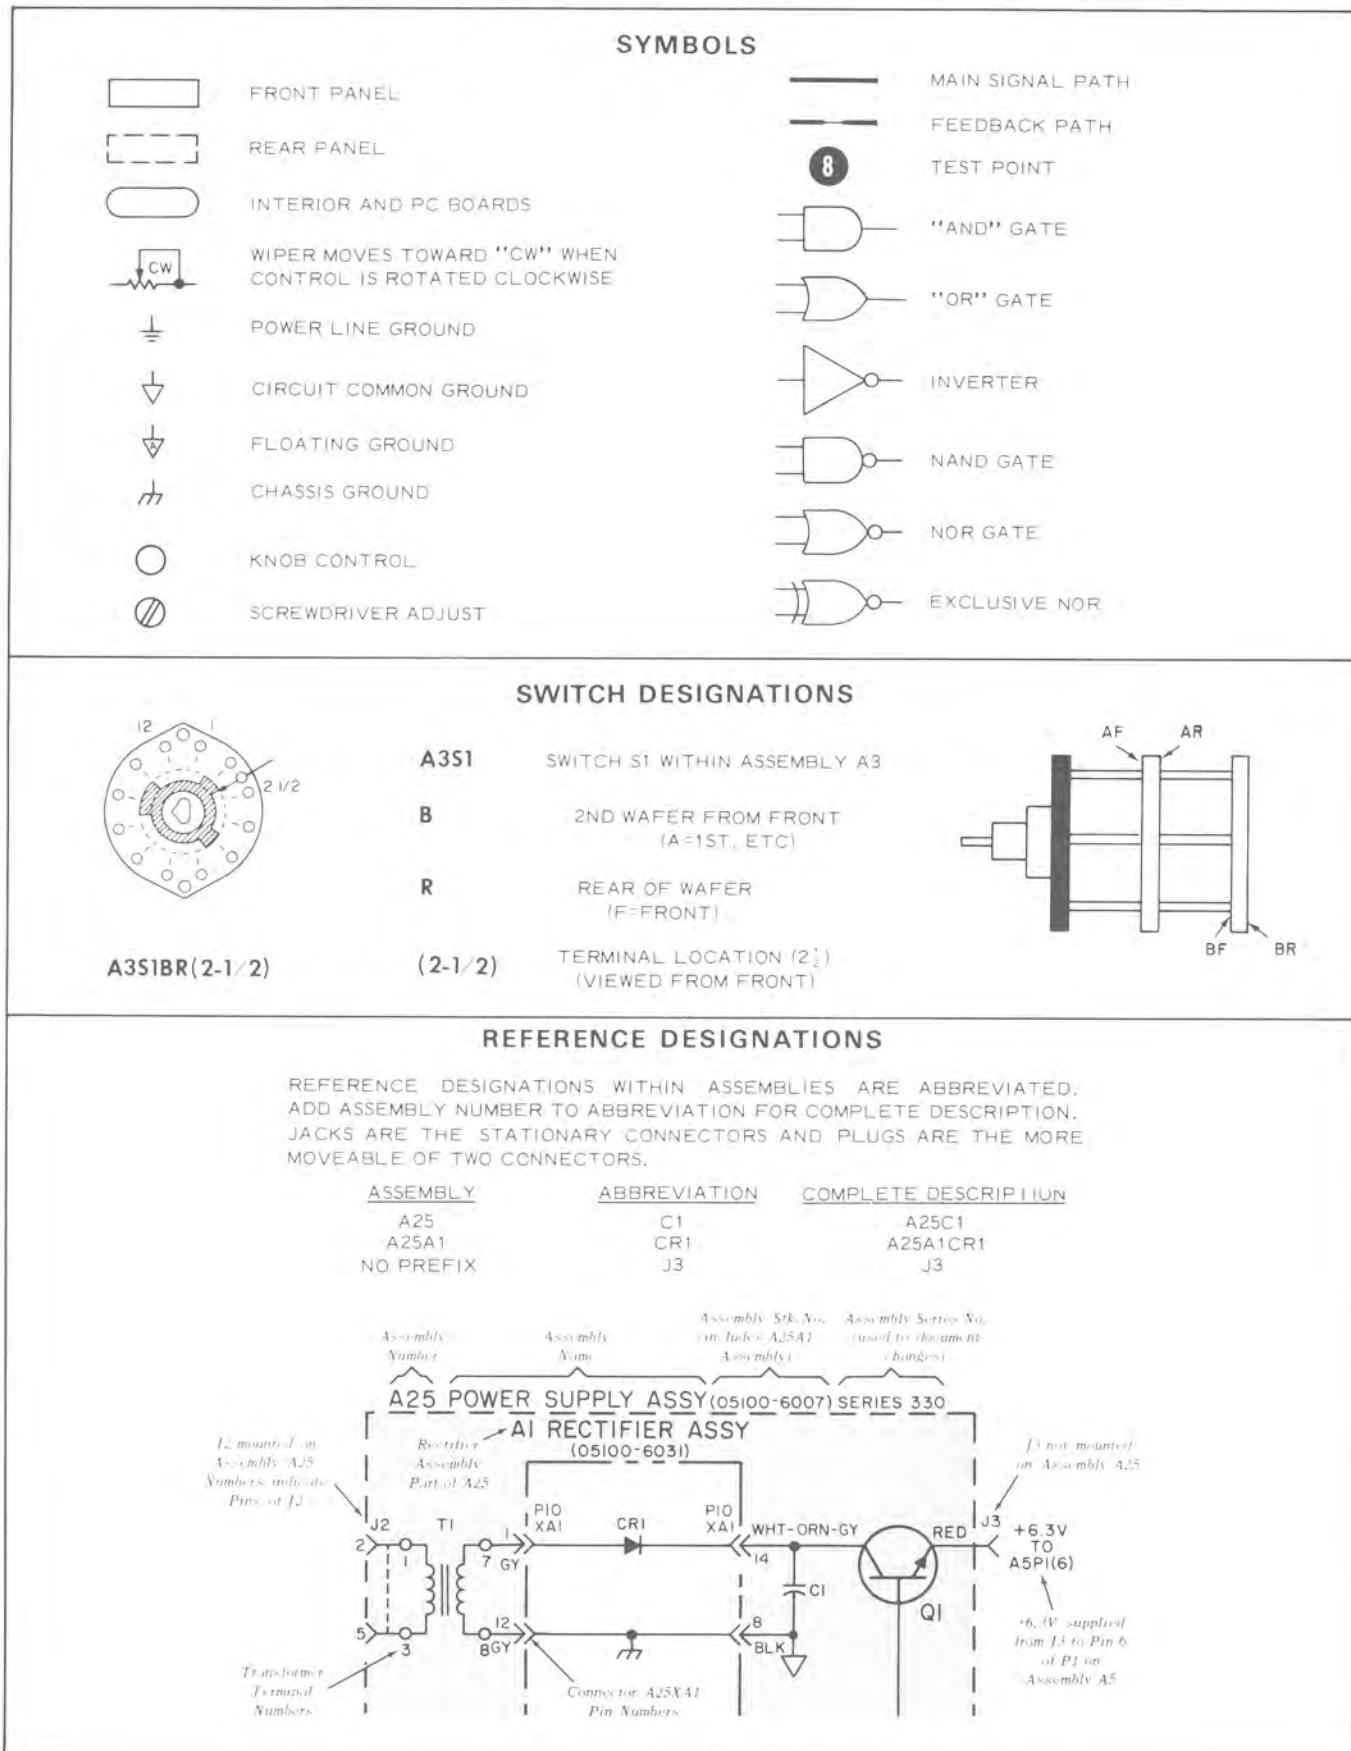



Figure 8-2. Integrated Circuit Diagrams

1820-0054

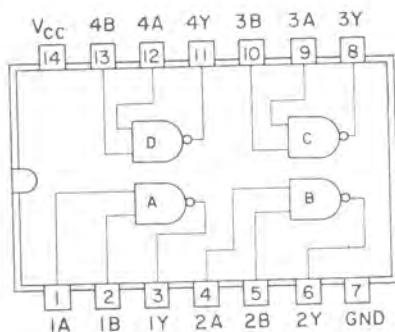


1820-0054(SN7400N)
QUADRUPLE 2-INPUT POSITIVE NAND GATE
NOTE: POSITIVE LOGIC Y = AB

1820-0068

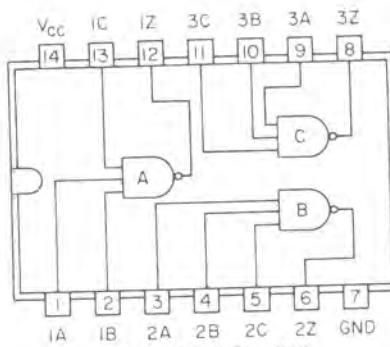

1820-0068(SN7410N)
TRIPLE 3-INPUT POSITIVE NAND GATE
POSITIVE LOGIC Y = ABC


1820-0092

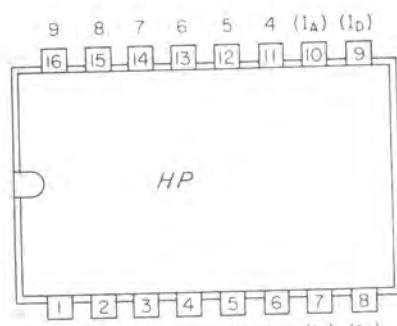

1820-0092
DRIVER
NEGATIVE LOGIC

| I _A (1) | I _B (2) | I _C (4) | I _D (8) | "ON" OUTPUT |
|--------------------|--------------------|--------------------|--------------------|-------------|
| H | H | H | H | 0 |
| L | H | H | H | 1 |
| H | L | H | H | 2 |
| L | L | H | H | 3 |
| H | H | L | H | 4 |
| L | H | L | H | 5 |
| H | L | L | H | 6 |
| L | L | L | H | 7 |
| H | H | H | L | 8 |
| L | H | H | L | 9 |
| BCD 10-15 | | | | NONE |


1820-0094

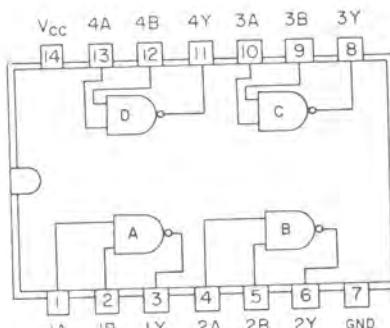

1820-0094(MC846P)
QUADRUPLE 2 INPUT POSITIVE NAND GATE
NOTE: POSITIVE LOGIC Y = \overline{AB}

Figure 8-2. Integrated Circuit Diagrams (Continued)

1820-0102

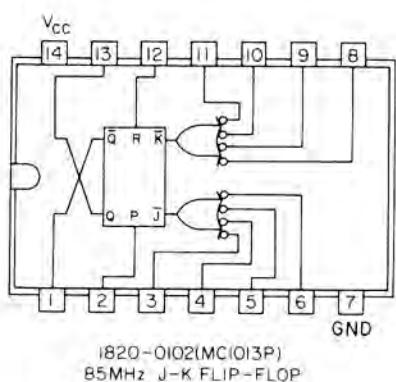

| R-S TRUTH TABLE | | |
|-----------------|---|-----------|
| R | S | Q^{n+1} |
| 1 | 2 | 13 |
| 0 | 0 | Q^n |
| 0 | 1 | 1 |
| 1 | 0 | 0 |
| 1 | 1 | ND |

ALL J-K INPUTS
ARE STATIC


| $\bar{J_D}$ | $\bar{K_D}$ | Q^{n+1} |
|-------------|-------------|-------------|
| * | * | $1\bar{3}$ |
| 0 | 0 | Q^n |
| 0 | 1 | 0 |
| 1 | 0 | 1 |
| 1 | 1 | \bar{Q}^n |

ALL OTHER J-K
INPUTS AND THE
R-S INPUTS ARE
AT A "0" LEVEL

| CLOCKED J-K TRUTH TABLE | | | |
|----------------------------|---|----|----|
| J | K | Cd | Qn |
| . | . | . | I3 |
| Φ | Φ | 0 | Qn |
| 0 | 0 | 1 | Qn |
| 0 | 1 | 1 | 1 |
| 1 | 0 | 1 | 0 |

ALL OTHER J-K
INPUTS AND THE
R-S INPUTS ARE
AT A "0" LEVEL

1820-0117

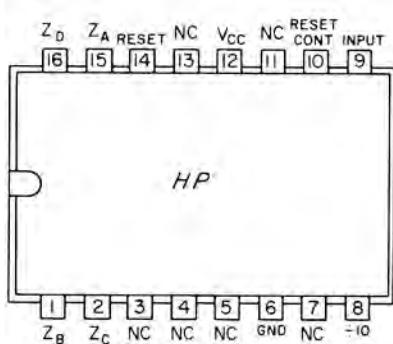


1820-0117,0119,0232
BLANKING DECADE COUNTER
NEGATIVE LOGIC 1 = LOW
0 = HIGH

| TRUTH TABLE | | OUTPUT | | | |
|----------------------------------|---|--------|---|---|---|
| INPUT PULSE | | A | B | C | D |
| 0 | H | H | H | H | H |
| 1 | L | H | H | H | H |
| 2 | H | L | H | H | H |
| 3 | L | L | H | H | H |
| 4 | H | H | L | H | H |
| 5 | L | H | L | H | H |
| 6 | H | L | L | H | H |
| 7 | L | L | L | H | H |
| 8 | H | H | H | L | L |
| 9 | L | H | H | L | L |
| RESET CONTROL HIGH & RESET PULSE | | H | H | H | H |
| RESET CONTROL LOW & RESET PULSE | | L | L | L | L |

POSITIVE PULSE APPLIED TO RESET WILL


- RESET A,B,C & D TO LOW IF RESET CONTROL IS LOW.
- RESET A,B,C & D TO HIGH IF RESET CONTROL IS HIGH
- $\frac{1}{10}$ OUTPUT WILL ALWAYS BE RESET TO HIGH STATE

1820-0142

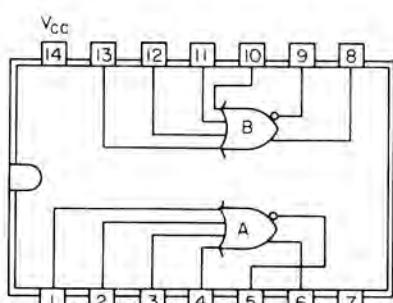

POSITIVE LOGIC:


V_{EE} 1820-0142(MC1004P)
ECL DUAL 4-INPUT 2-OR,2-NOR

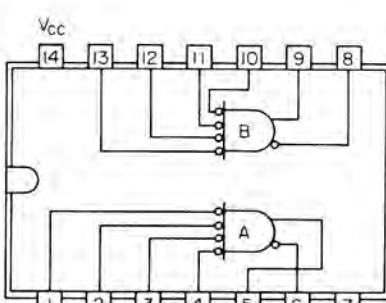


NEGATIVE LOGIC:

Figure 8-2. Integrated Circuit Diagrams (Continued)

1820-0145

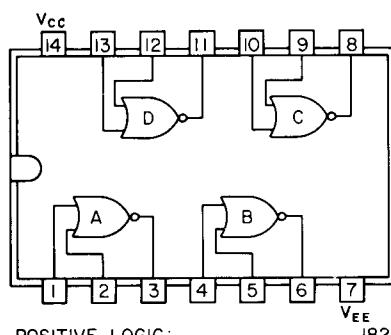


POSITIVE LOGIC:
 $3 = 1+2$

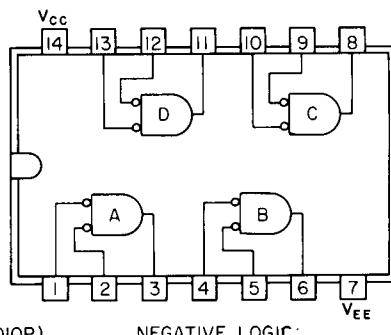

1820-0145(MC1010P)
ECL QUAD 2-INP NOR


NEGATIVE LOGIC:
 $3 = 1 \cdot 2^{\prime}$

1820-0147


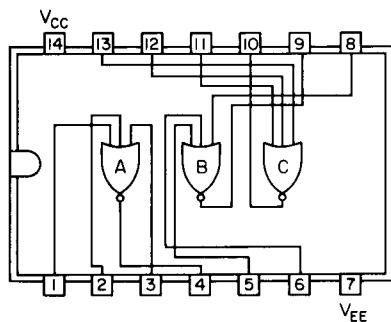


1820-0147 (MC1007P)
TRIPLE 3-INPUT GATES

1820-0174

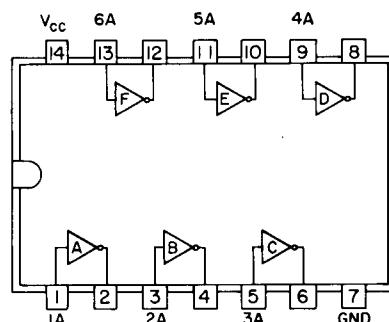


1820-0198 and 1820-0199

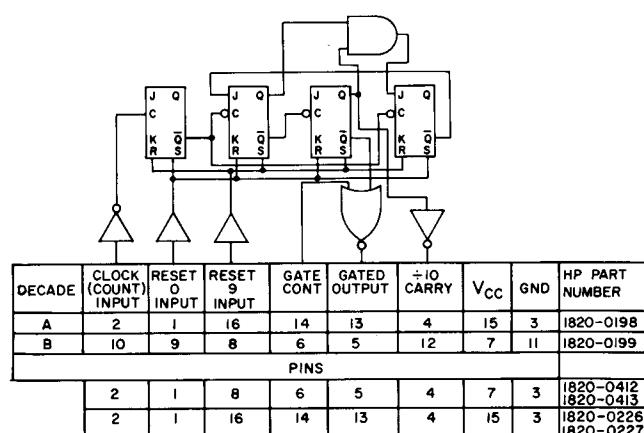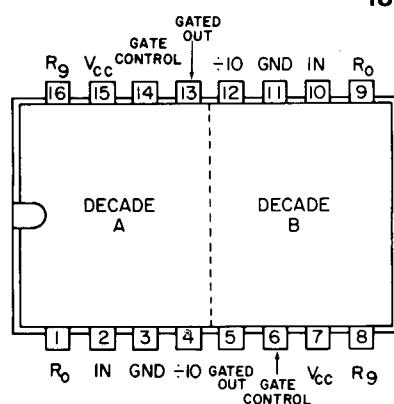

Model 5326/27B
Schematic Diagrams


Figure 8-2. Integrated Circuit Diagrams (Continued)

1820-0201

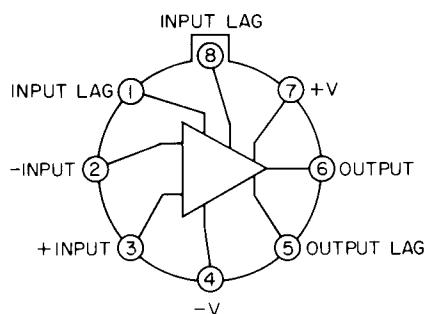


1820-0201(MC1439G)
OPERATIONAL AMPLIFIER

1820-0212

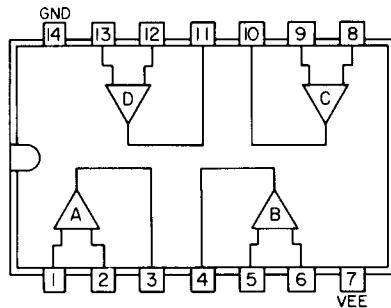

1820-0212
QUADRUPLE LINE RECEIVER

1820-0209

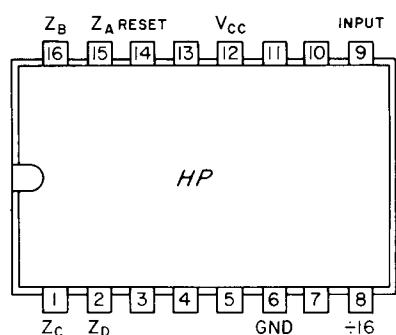


1820-0209
DIVIDE BY 16 COUNTER
NEGATIVE LOGIC I=LOW
O=HIGH

TRUTH TABLE

| IN | A | B | C | D |
|----|---|---|---|---|
| 0 | L | L | L | L |
| 1 | H | L | L | L |
| 2 | L | H | L | L |
| 3 | H | H | L | L |
| 4 | L | L | H | L |
| 5 | H | L | H | L |
| 6 | L | H | H | L |
| 7 | H | H | H | L |
| 8 | L | L | L | H |
| 9 | H | L | L | H |
| 10 | L | H | L | H |
| 11 | H | H | L | H |
| 12 | L | L | H | H |
| 13 | H | L | H | H |
| 14 | L | H | H | H |
| 15 | H | H | H | H |

THE $\div 16$ OUTPUT WILL GO HIGH ON COUNT 8 AND LOW ON COUNT 16 OR RESET

1820-0213

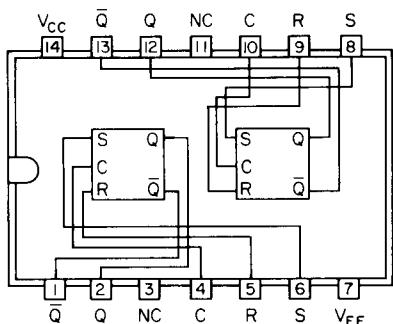


1820-0213(MC1014P)
DUAL RS FF

TRUTH TABLE

| R | S | C | Q^{n+1} |
|---|---|---|-----------|
| 0 | I | I | I |
| I | 0 | I | O |
| 0 | O | I | Q^n |
| I | I | I | ND |
| * | * | O | Q^n |

* EITHER STATE
N.D.=NOT DEFINED


1820-0223

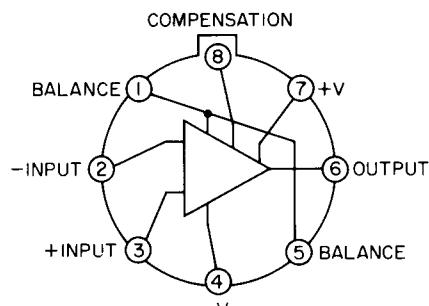

1820-0223(LM301A)
OPERATIONAL AMPLIFIER


Figure 8-2. Integrated Circuit Diagrams (Continued)

1820-0238

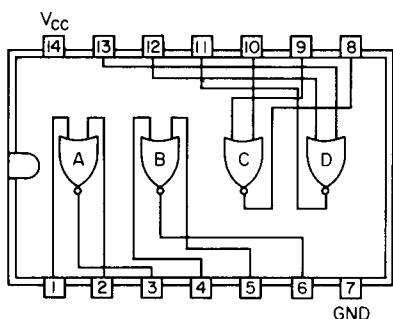


1820-0238 (MC 1810P)
QUAD 2-INPUT NOR GATES

1820-0253

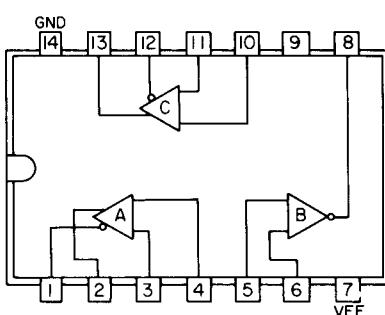

1820-0253
TRIPLE DIFFERENTIAL AMPLIFIER

1820-0272

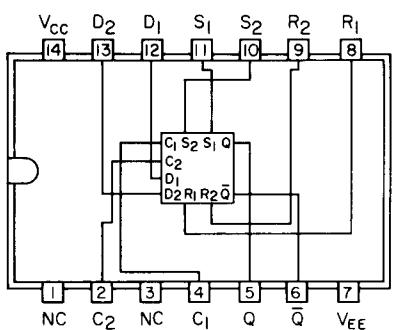

1820-0272 (MC 1022P)
TYPE "D" FLIP-FLOP

CLOCKED TRUTH TABLE

| D | C | Q^{n+1} | \bar{Q}^{n+1} |
|----------|--------|-----------|-----------------|
| 12 OR 13 | 2 OR 4 | 5 | 6 |
| 0 | 0 | Q^n | \bar{Q}^n |
| 1 | 0 | Q^n | \bar{Q}^n |
| 0 | I* | 0 | I |
| I | I* | I | 0 |


*A "I" OR CLOCK INPUT IS DEFINED FOR THIS FLIP-FLOP AS A CHANGE IN LEVEL FROM A LOW INPUT TO A HIGH INPUT.

R-S TRUTH TABLE

| R | S | Q^{n+1} | \bar{Q}^{n+1} |
|--------|---------|-----------|-----------------|
| 8 OR 9 | 0 OR 11 | 5 | 6 |
| 0 | 0 | Q^n | \bar{Q}^n |
| 0 | I | I | 0 |
| I | 0 | 0 | I |
| I | I | N.D. | N.D. |


N.D. = NOT DEFINED

1820-0273

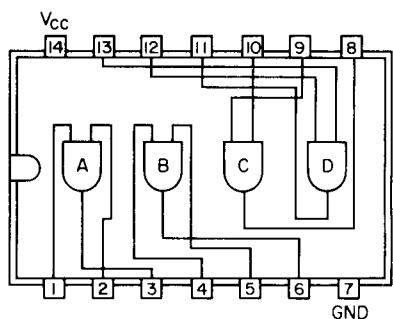

1820-0273 (MC 1806P)
QUAD 2-INPUT AND GATES

1820-0274

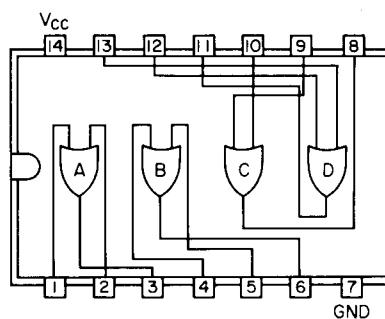


1820-0274 (MC 1808P)
QUAD 2-INPUT OR GATES

Model 5326/27B
Schematic Diagrams


Figure 8-2. Integrated Circuit Diagrams (Continued)

1820-0275

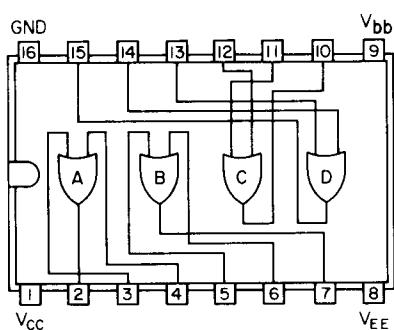

1820-0275 (MC 1039P)
QUAD TRANSLATOR 2-INPUT OR GATES


1820-0276

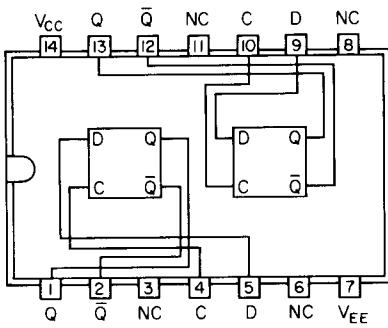

| D | C | Q^{n+1} |
|---|---|-----------|
| 0 | I | Q^n |
| I | I | Q^n |
| 0 | O | O |
| I | O | I |


1820-0276 (MC 1033P)
DUAL RS FF

1820-0307

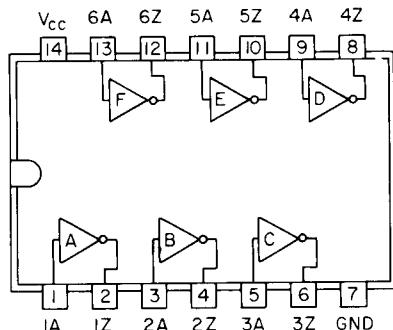


1820-0175, 0307(MC1027D)
HEX INVERTER

1820-0327

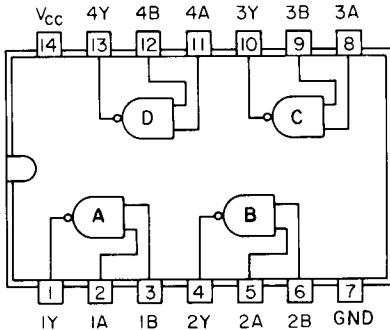

1820-0327(SN740IN)
QUAD 2-INPUT NAND WITH OPEN COLLECTOR
POSITIVE LOGIC: $Y = \overline{AB}$


1820-0328

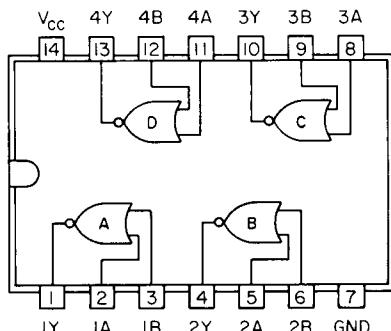


1820-0328(SN7402N)
QUAD 2-INPUT NOR GATE
POSITIVE LOGIC: $Y = A + B$

Figure 8-2. Integrated Circuit Diagrams (Continued)


1820-0558

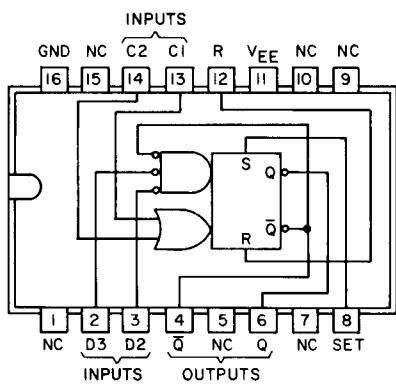

1820-0561

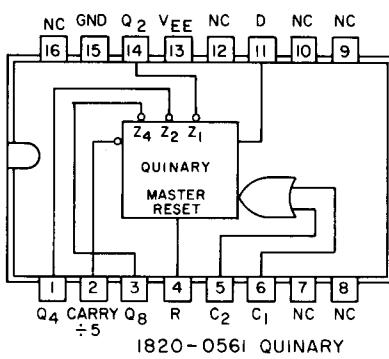

1858-0004

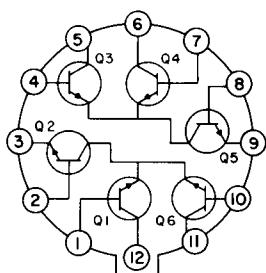

1858-0004
TRANSISTOR ARRAY
(BOTTOM VIEW)

Model 5326/27B
Schematic Diagrams

Figure 8-3. Model 5327B Front and Rear Panels



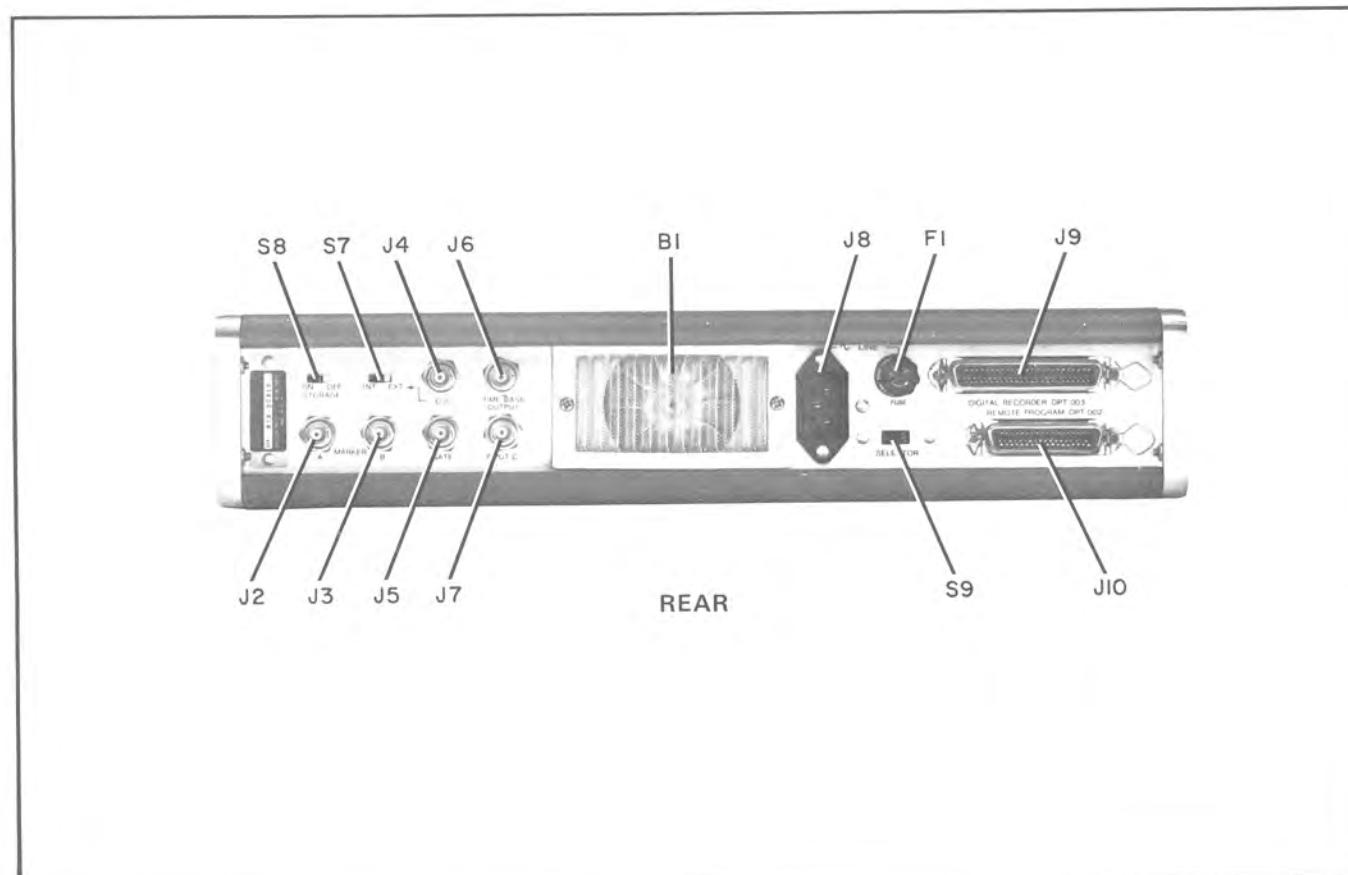


Figure 8-4. Model 5327B Top Internal View

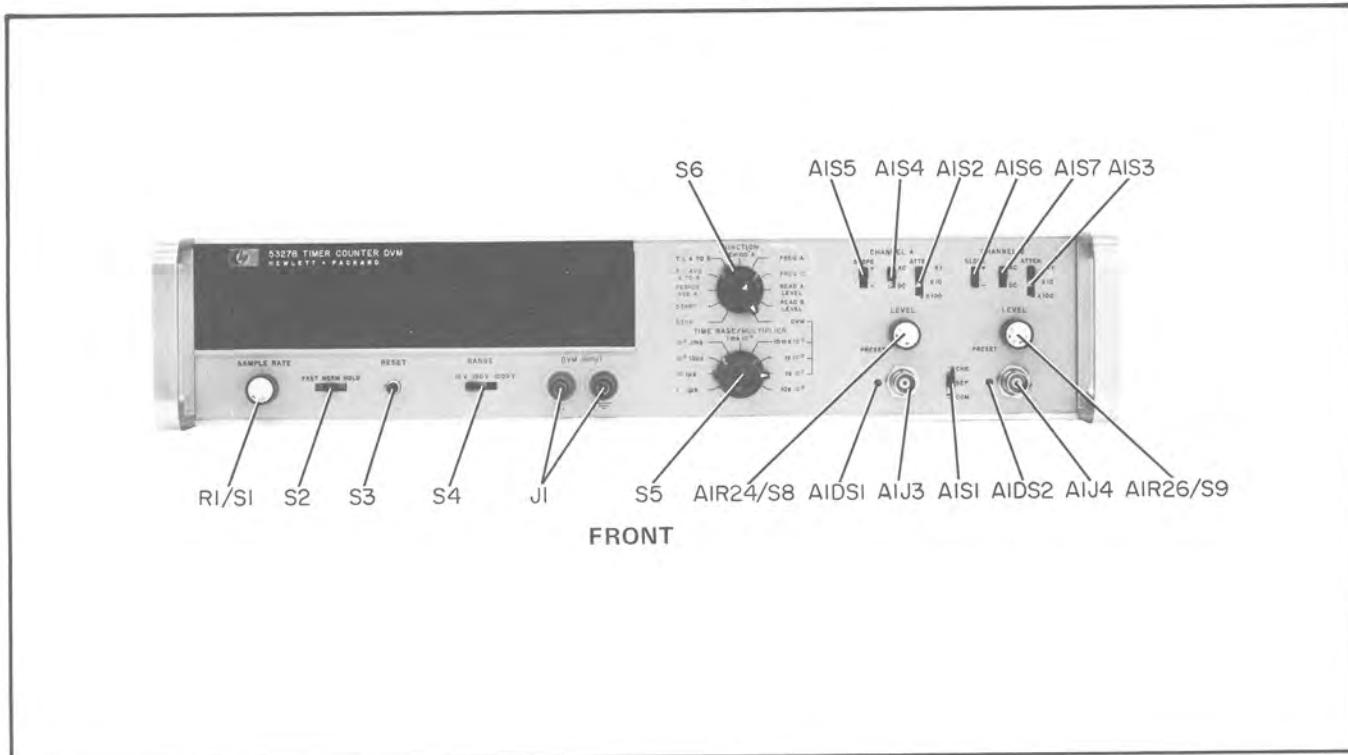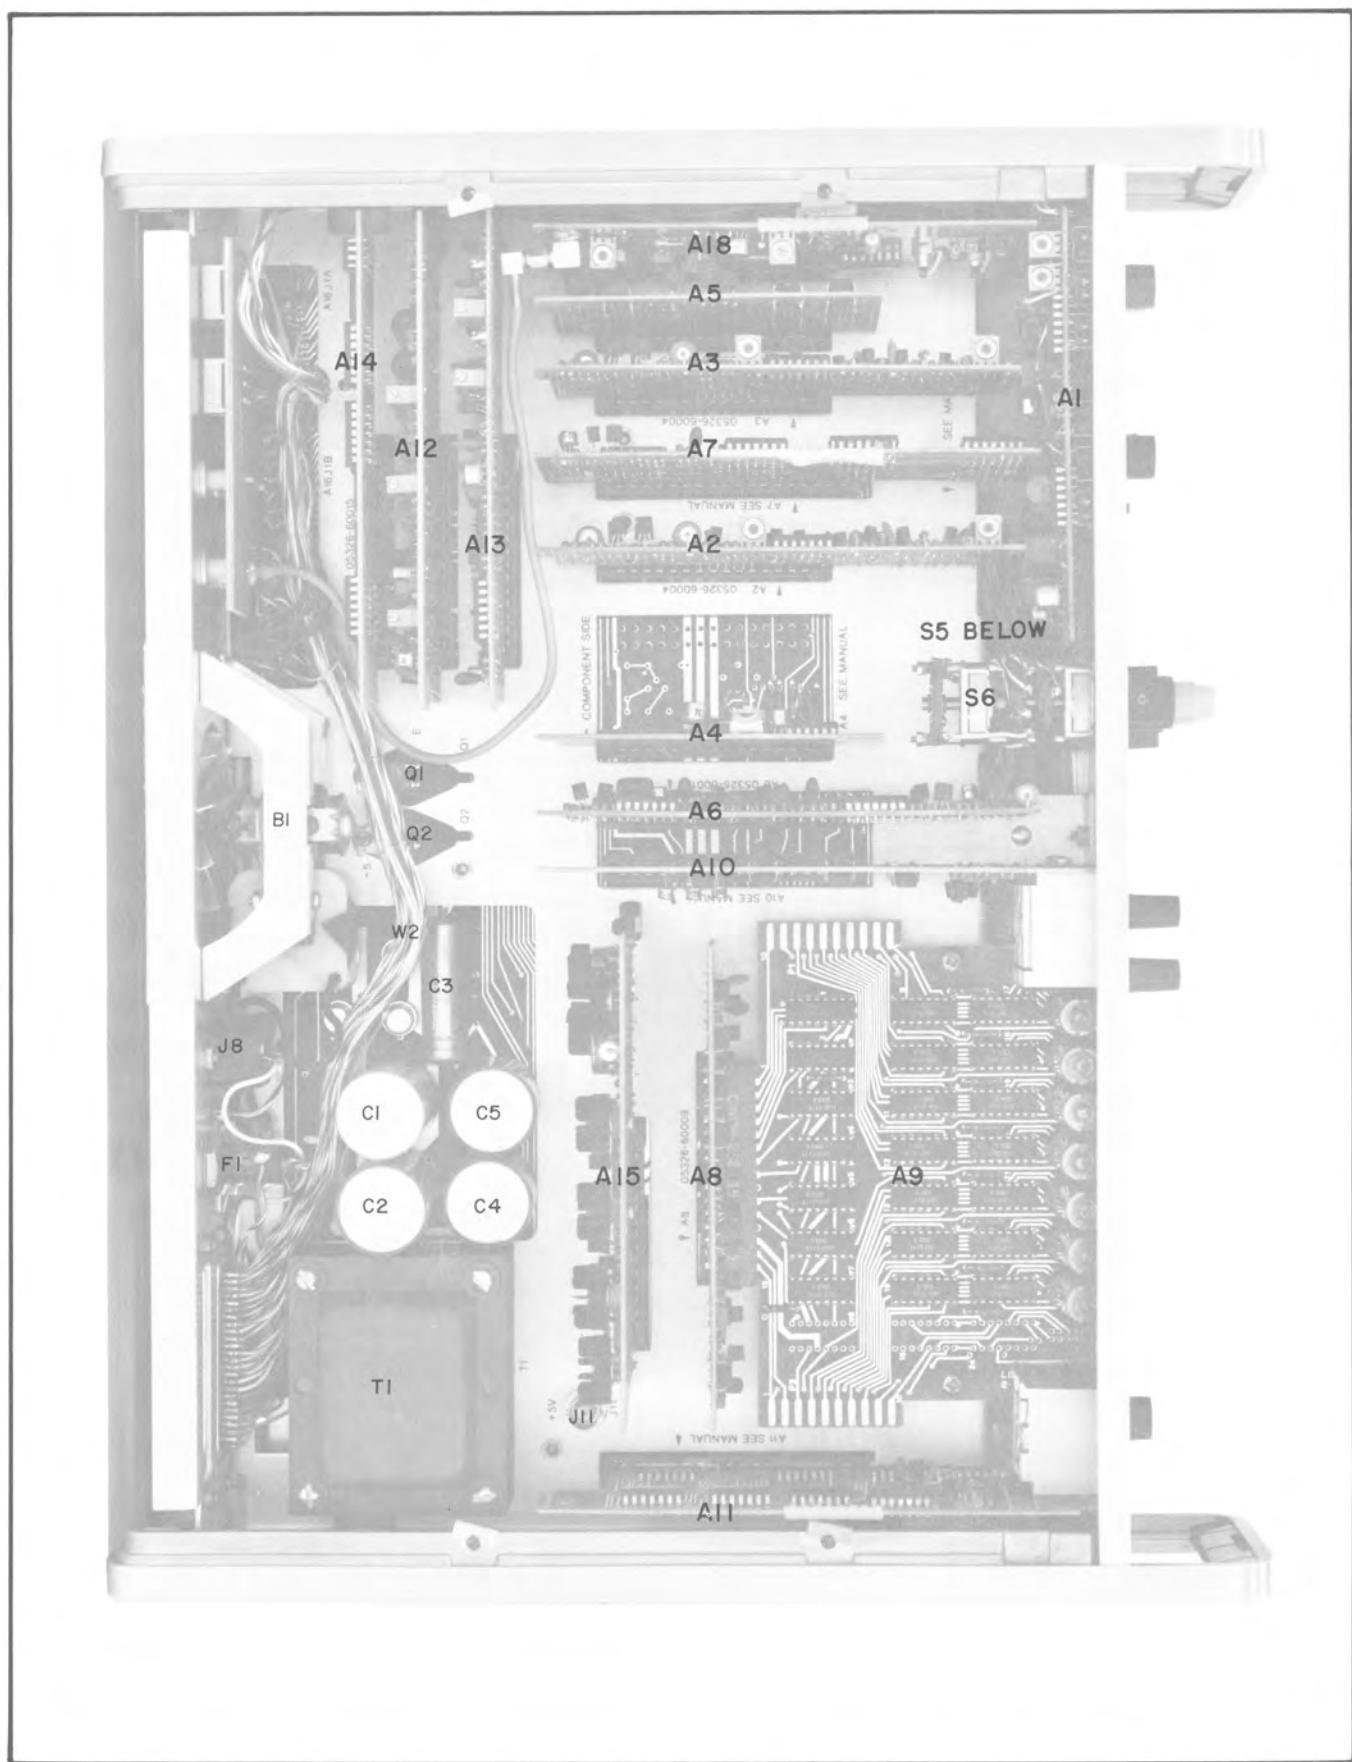

A1 ATTENUATOR OPERATION

Attenuator Assembly A1 consists of two input attenuator channels. Since the channels are identical, only Channel A will be described. Channel A input signals are routed through J3 to the attenuator network. When ATTEN switch S2 is set to X1, the full input signal is fed to the gate of Q1A. With the ATTEN switch in X10, R2, R5, C1, and C3 serve as a 10:1 voltage divider. In the X100 position, the 100:1 divider consists of R2, R4, C1, and C2. R3 provides damping.


When AC/DC switch S4 is set to AC, C4 is in series with the signal path. CR3 and CR4 limit the input amplitude to Q1A to approximately ± 5.8 volts. R7 and R8 provide current limiting. C5 compensates Q1A input capacitance.

Q1A and Q1B form a differential amplifier connected as source followers. The outputs are fed to A2 via pins 5 and 6 of J1. LEVEL potentiometer R24 determines the trigger level on Q1B gate. The trigger level can be preset to zero volts or varied from -3 to +3 volts; or with the LEVEL control set to PRESET, an external trigger level can be applied at J10 to A1J1(D) for remote programming. Diodes CR6 and CR7 develop 5 volts for the input protection and level pots. R12 adds symmetry to the voltage range of R24. R11 lowers the impedance of Q1B gate circuit to limit stray charges and false triggering. R10 and C8 form a filter to prevent noise from triggering the differential amplifier.

When SLOPE switch S5 is set to -, a ground is supplied via CR2 to J1 pin A. This sets amplifier trigger A2 to trigger on the negative slope of the input signal. When remote programming is used, J1(C) is held high to disable the SLOPE switches and the CHK switch.


COM-SEP-CHK switch S1 connects inputs A and B in parallel when set to COM and grounds J2(C) via CR1 for the check mode.

A1 contains trigger lights DS1 and DS2 and current limiters R1 and R2. CR1, CR2, and CR9 eliminate interaction of the remote programming signals.

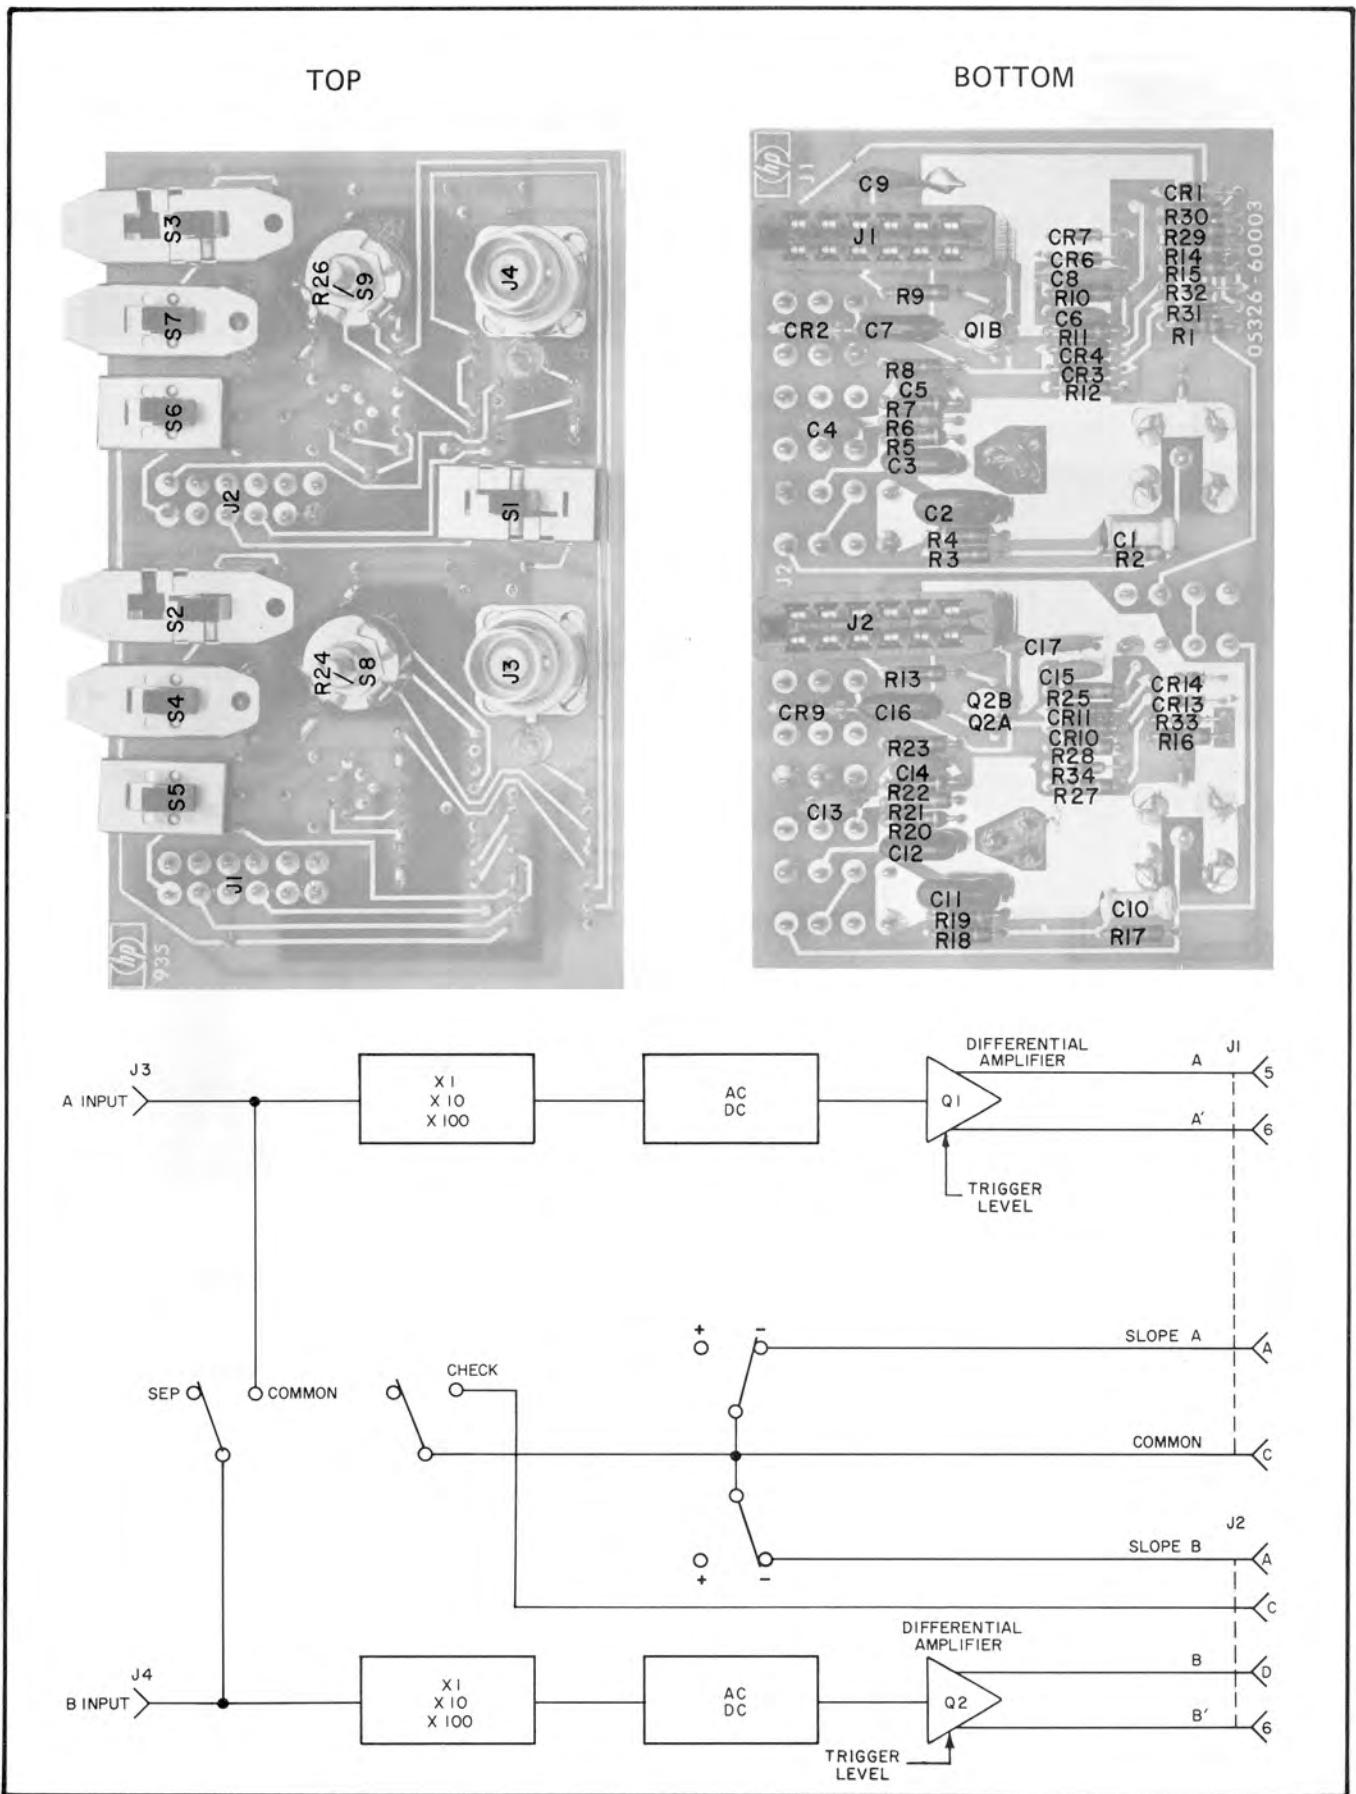



AI ATTENUATOR ASSEMBLY (05326-600)

CHANNEL A

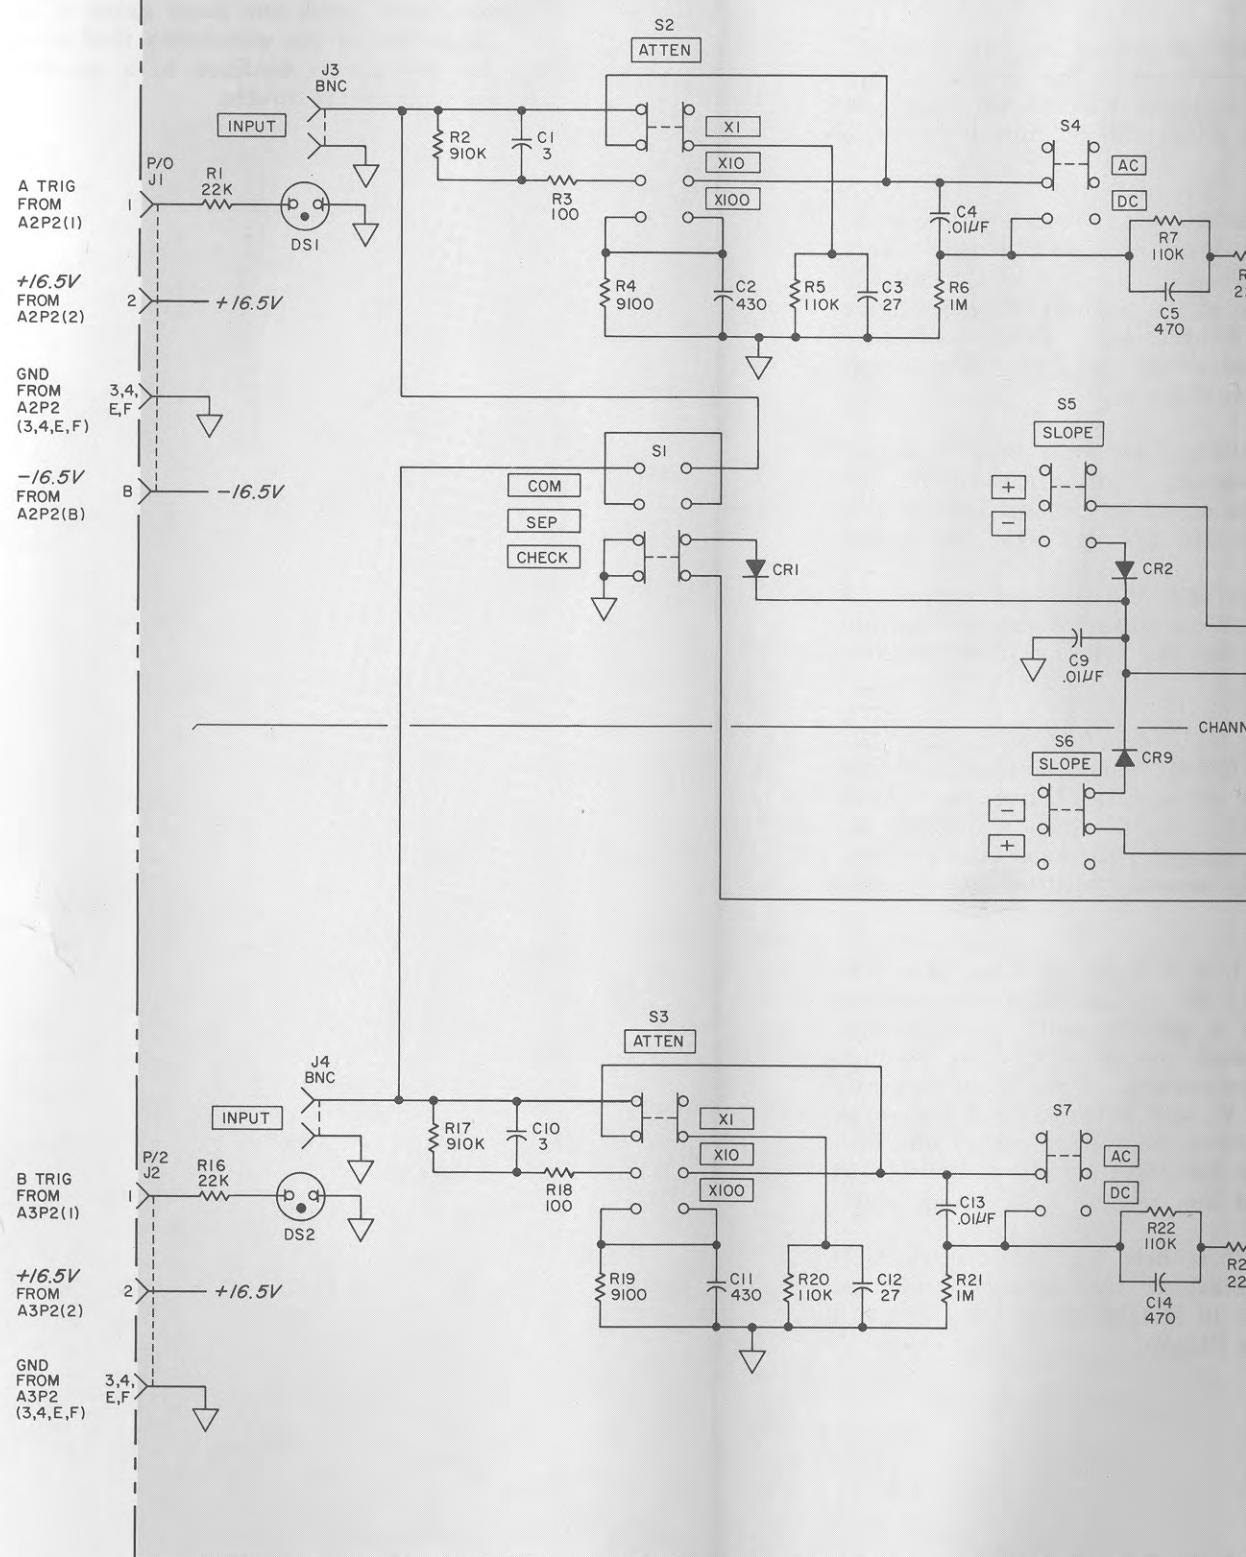

AI ATTENUATOR ASSEMBLY (05326-60047) (NOTE 1) SERIES 1224

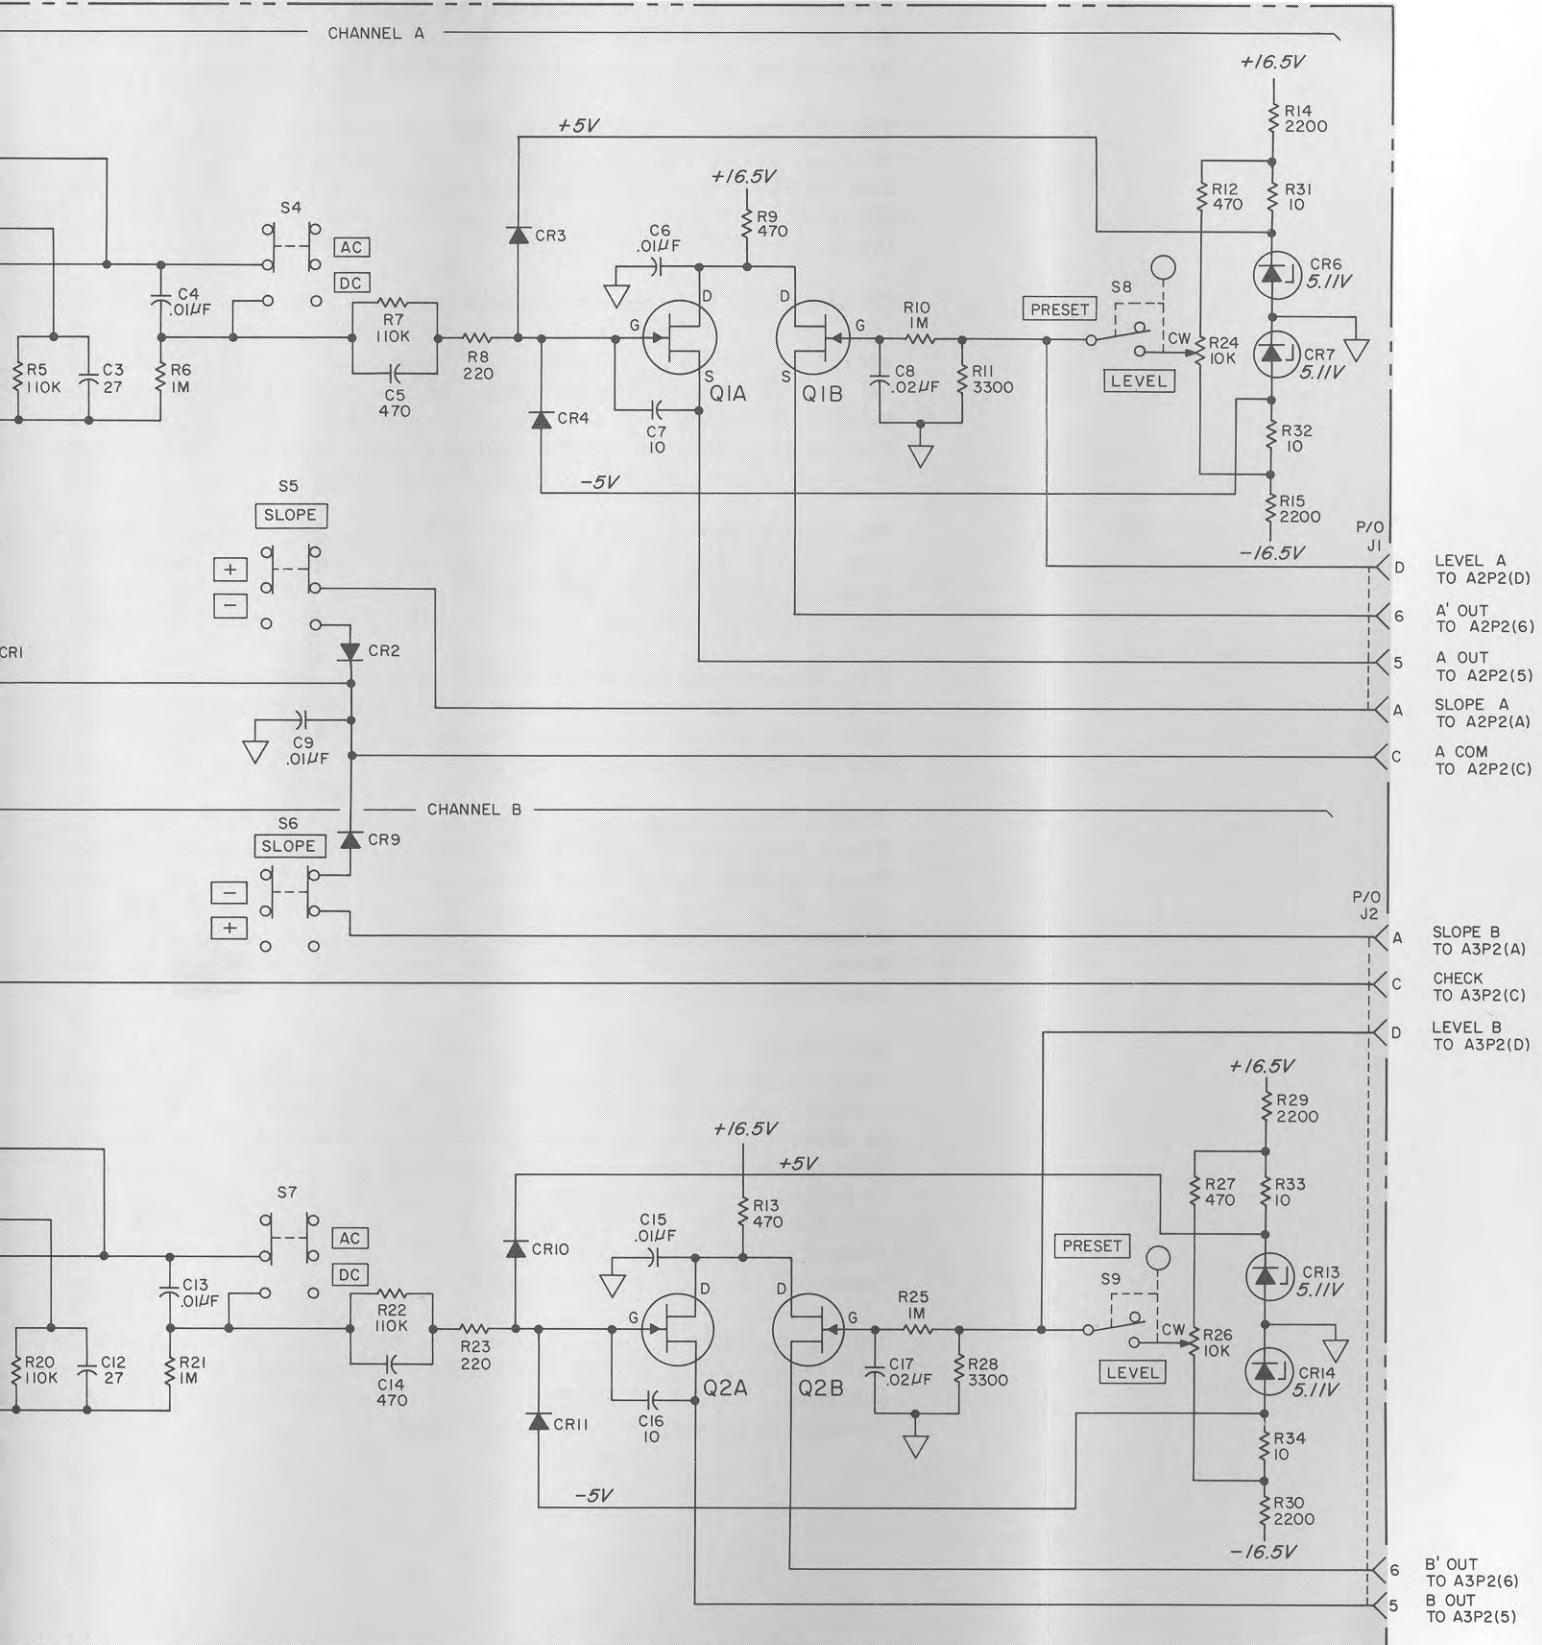

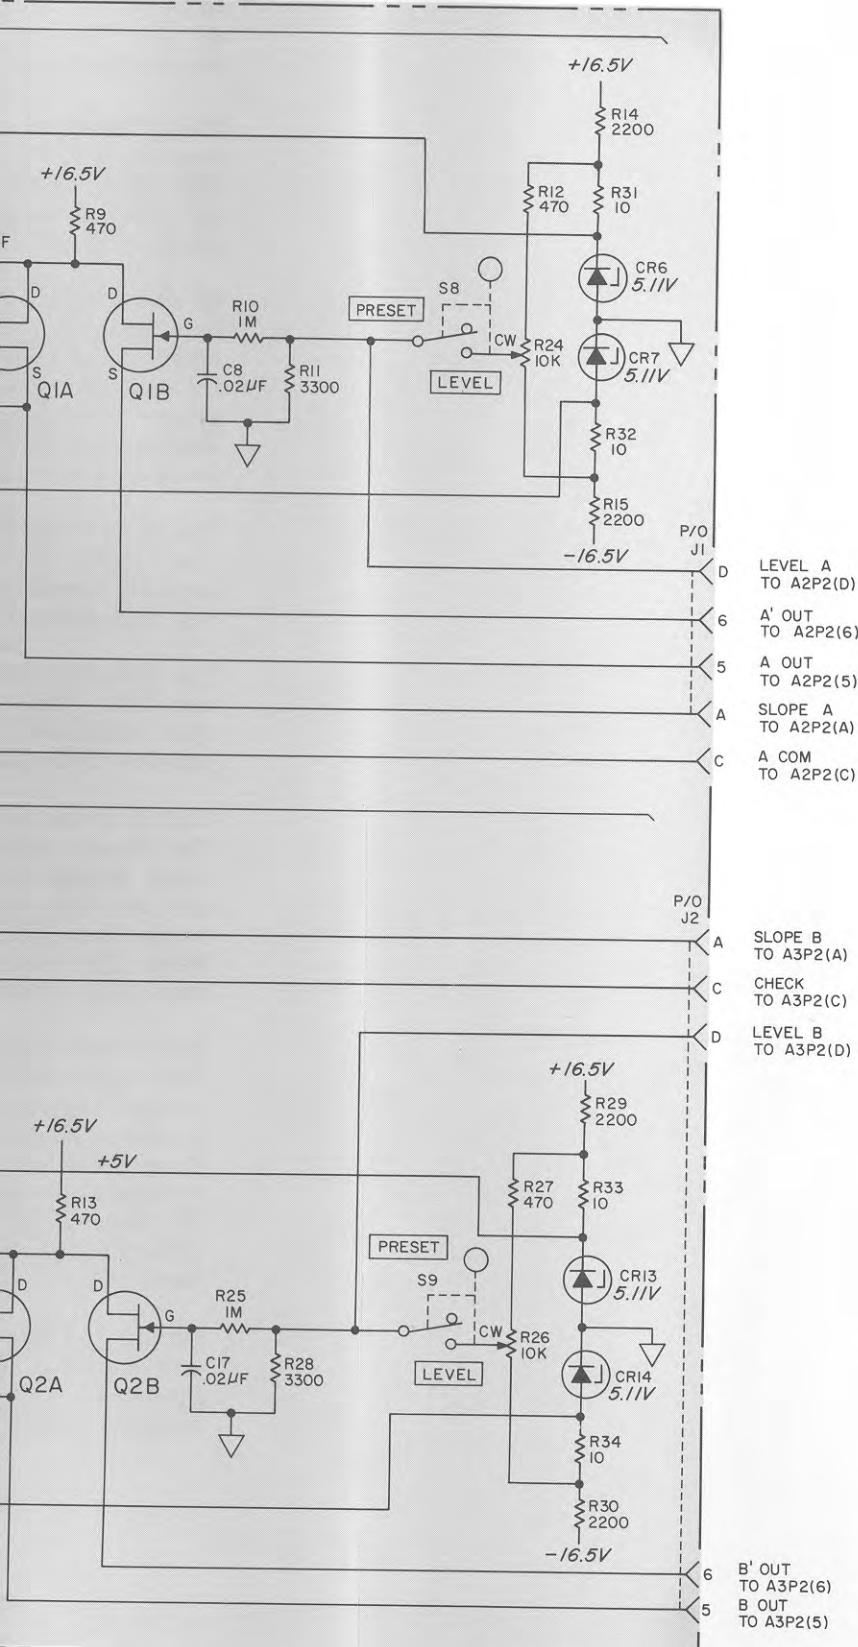

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;

REFERENCE DESIGNATIONS

| A1 |
|---|
| CI-17 CRI-4,6,7, 9-11,13,14 DS1,2 JI-4 Q1,2 R1-34 SI-9 |

TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|---|--|
| CR1,2,9 CR3,4,10,11 CR6,7,13,14 Q1,2 | I901-0016 I901-0376 I902-0041 I855-0334 |


05326-D-1A

COMPLETE PARTS LIST FOR THIS ASSEMBLY IS LOCATED ON PAGE 6-3.

Figure 8-5. A1 Attenuator Assembly

A2 TROUBLESHOOTING

When tracing the signal through the amplifier assembly, a good starting point is the collector of Q4, test point 4. With a sine wave input and the LEVEL control set to zero, this waveform should always resemble a square wave, due to the action of the Schmitt Trigger. A second check would be test point 6. If no signal is available there, check the slope gates of U1 and transistors Q9-Q12. Make use of the waveforms that are provided on this page. Once the problem is confined to a general area, use dc voltage checks to pinpoint the trouble.

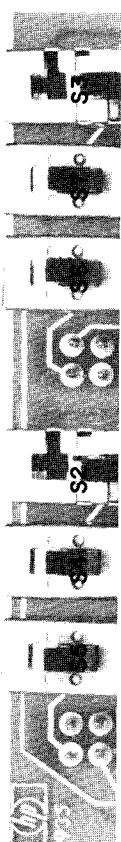

J3
A INPUT

SEP Q

J4
B INPUT

Figure 8-5
A1 ATTENUATOR ASSEMBLY

(See Page 8-13)

A2, A3 AMPLIFIER/trigger operation

Two input amplifier assemblies are provided: A2 for Channel A and A3 for Channel B. Since the assemblies are identical, only one will be described. The input signal and the trigger level are received from A1 via P2(5) and P2(6) respectively. Potentiometer R2 is adjusted to cancel out offset voltages due to imbalances in the circuit.

The differential amplifier (Q1 and Q8) serves to clip a small window out of the input signal waveform. The outputs of Q1 and Q8 drive another differential amplifier Q2 and Q6. Q2 and Q6 inject a current drive input to differential Schmitt trigger Q3, Q4, Q5, and Q7.

Q3 and Q7 are common base amplifiers, which present a low input impedance and high output impedance to Q4 and Q5. This arrangement allows for greater high-speed operation of Q4 and Q5. C2 and R15 reduce the hysteresis of the Schmitt trigger to give greater reliability at the high frequencies. Two out-of-phase signals from this circuit are routed to Q9 and Q10. The output levels shift from approximately +0.8 to +0.5 volts.

The SLOPE switch on A1 drives U1D(11) low for a +slope selection and U1A(3) low for a -slope selection. This allows either the in-phase signal or the out-of-phase signal to be switched to Q13 via Q10 and Q12 for +slope or via Q9 and Q11 for -slope.

The differentiator circuit consists of Q13 and feedback network L8 and R32. The circuit develops 10 ns pulses at the collector of Q13. CR3 and CR4 bias Q13 so that the collector circuit is compatible with ECL output driver U2B.


U2A(6) drives trigger-lamp driver Q16, Q17, Q18, Q19, and Q20. The circuit consists of RS FF Q16-Q17 and one-shot Q19-Q20. When U2A(6) is low, Q16 turns off and Q17 turns on. With Q17 on, Q18 cuts off to drive P1(1) high, which will light the trigger lamp DS1 on A1. As C8 charges, Q20 base goes positive. When Q20 base is approximately ground potential, the one-shot fires to turn off Q19 and Q17.

The marker circuit, Q15 and Q14, is a pulse stretcher that provides a low marker output at P1(12, N). When the input amplifier circuits trigger, U2B(8) provides a positive spike to Q14 base to drive Q14 collector below ground and allow CR5 to conduct. This makes the charge on C6 more positive. When U2B(8) returns to logical zero (approximately -1.6 V), Q14 is back biased and turns off, allowing Q15 to turn on to drive the marker output line low. After C6 has discharged through R36, Q14 turns on again, Q15 turns off, and the marker output line returns to the high state.



During the check mode, A1P1(C) is held high to disable U2B and enable U2A. With U2B disabled, the marker pulses are inhibited. With U2A enabled, the 10 MHz check signal at P1(4,D) connects to the amplifier output line P1(5,E).


Model 5326/27B
Schematic Diagrams

Part of Figure 8-6. Input Amplifier Assembly

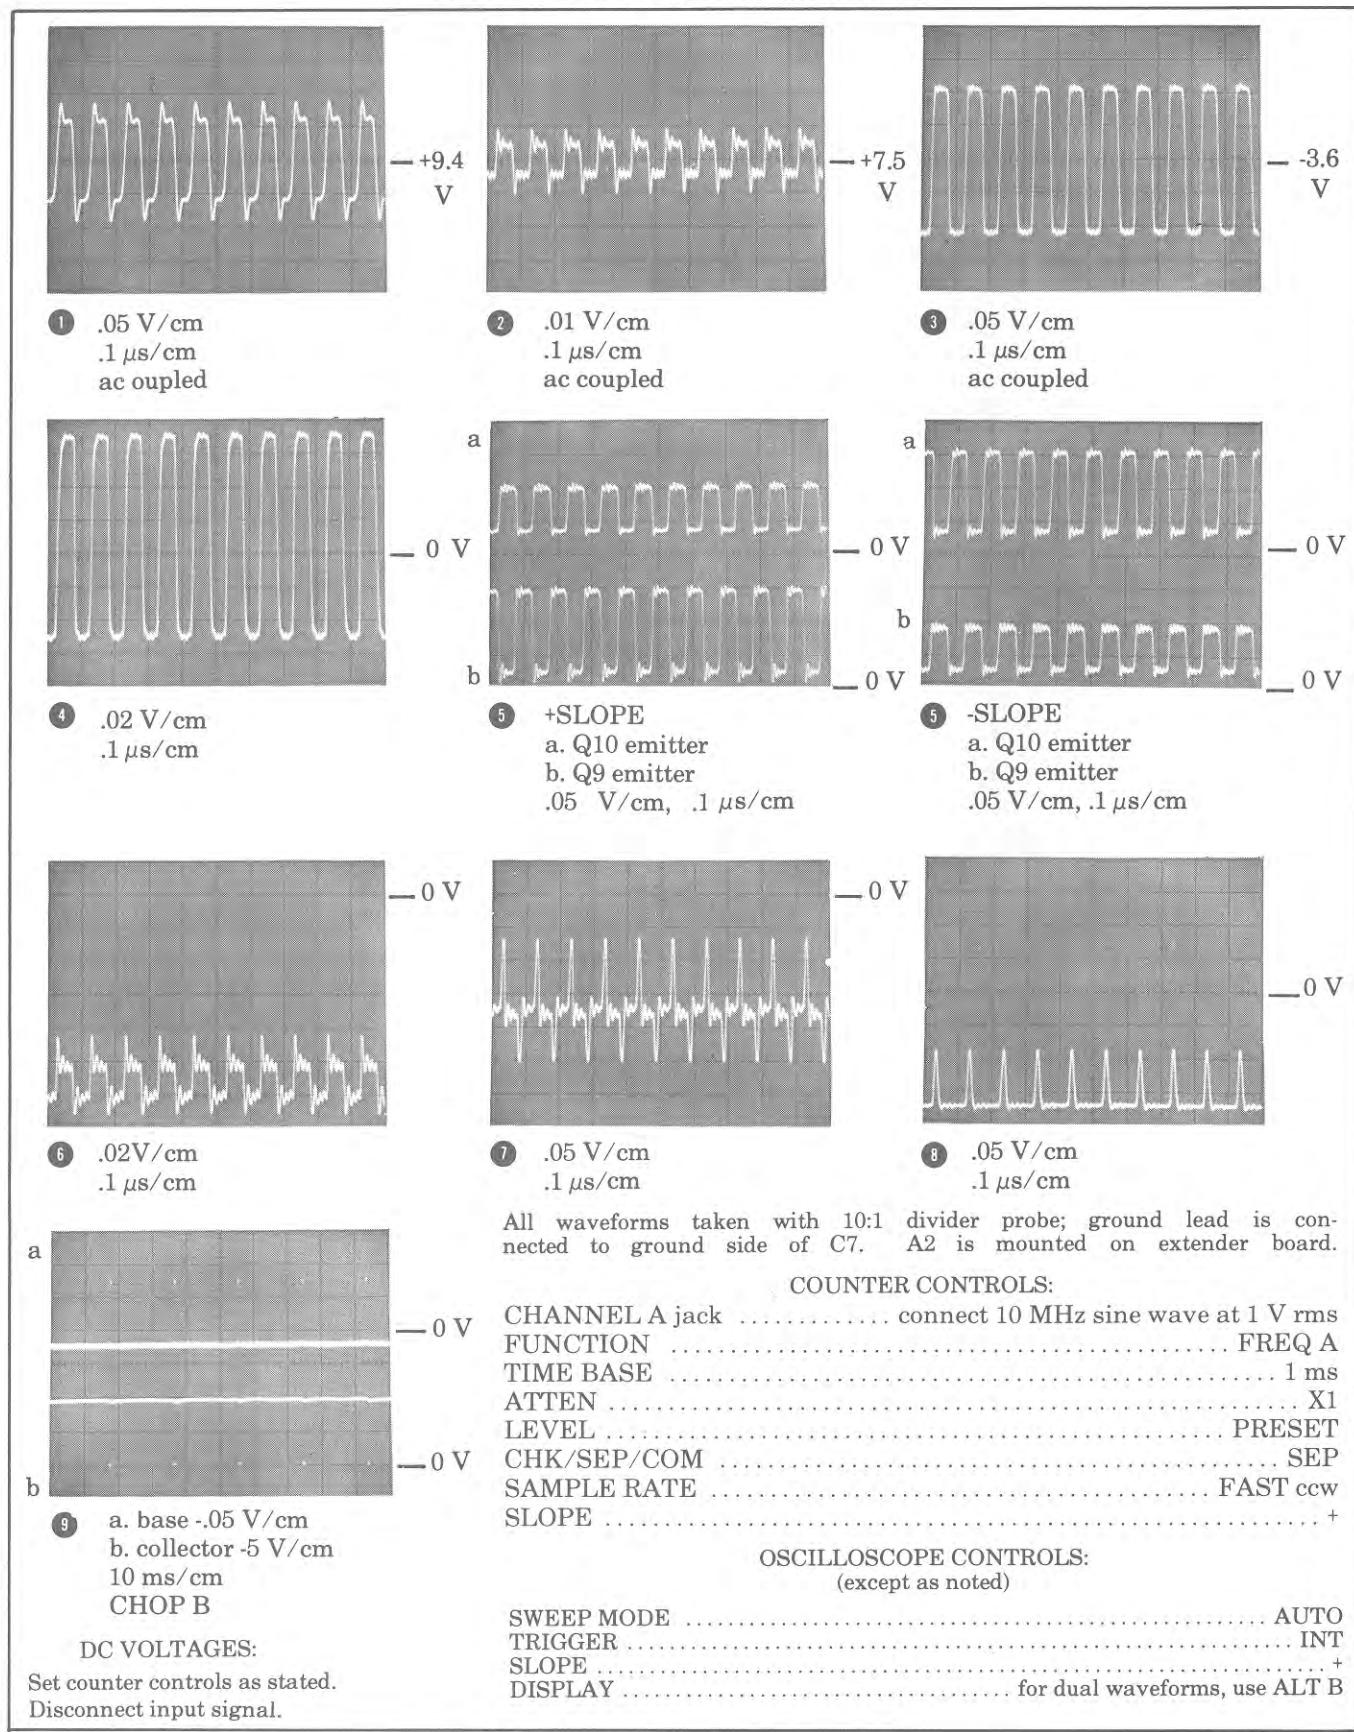

MORE DATA UNDER FOLD

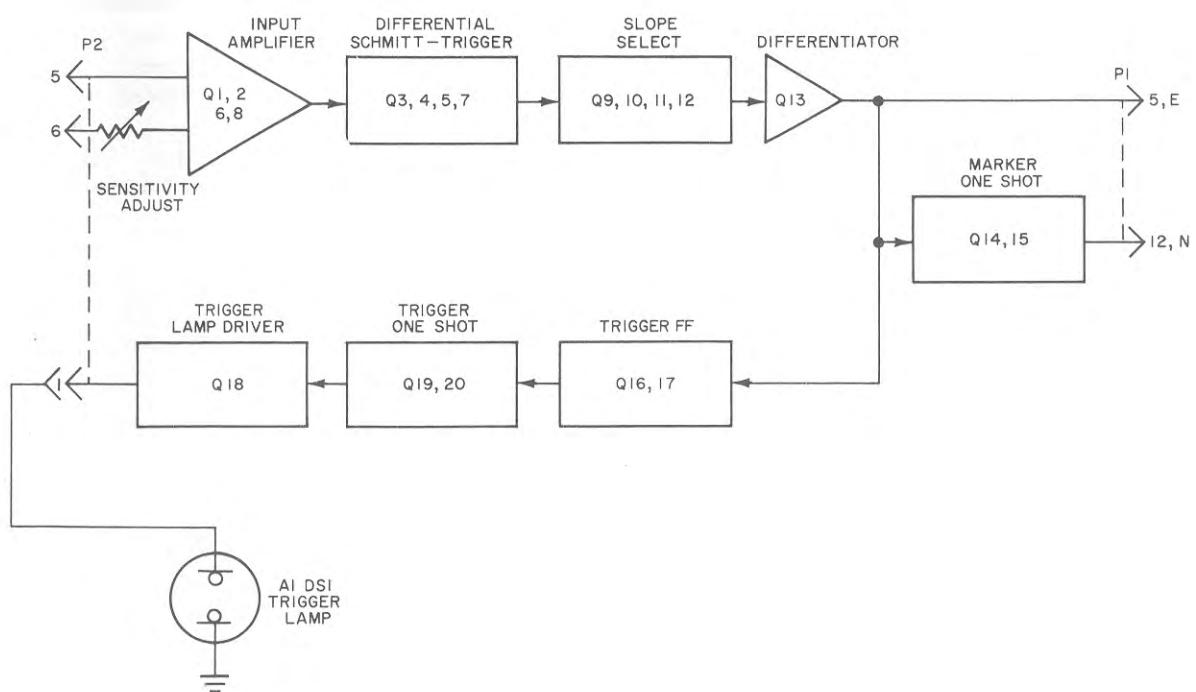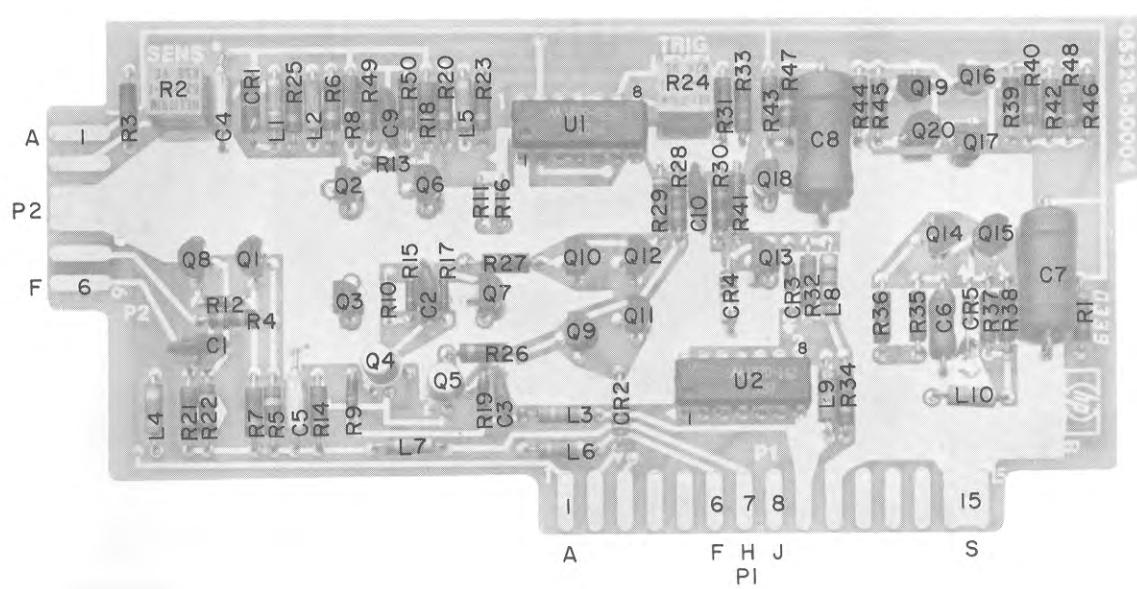

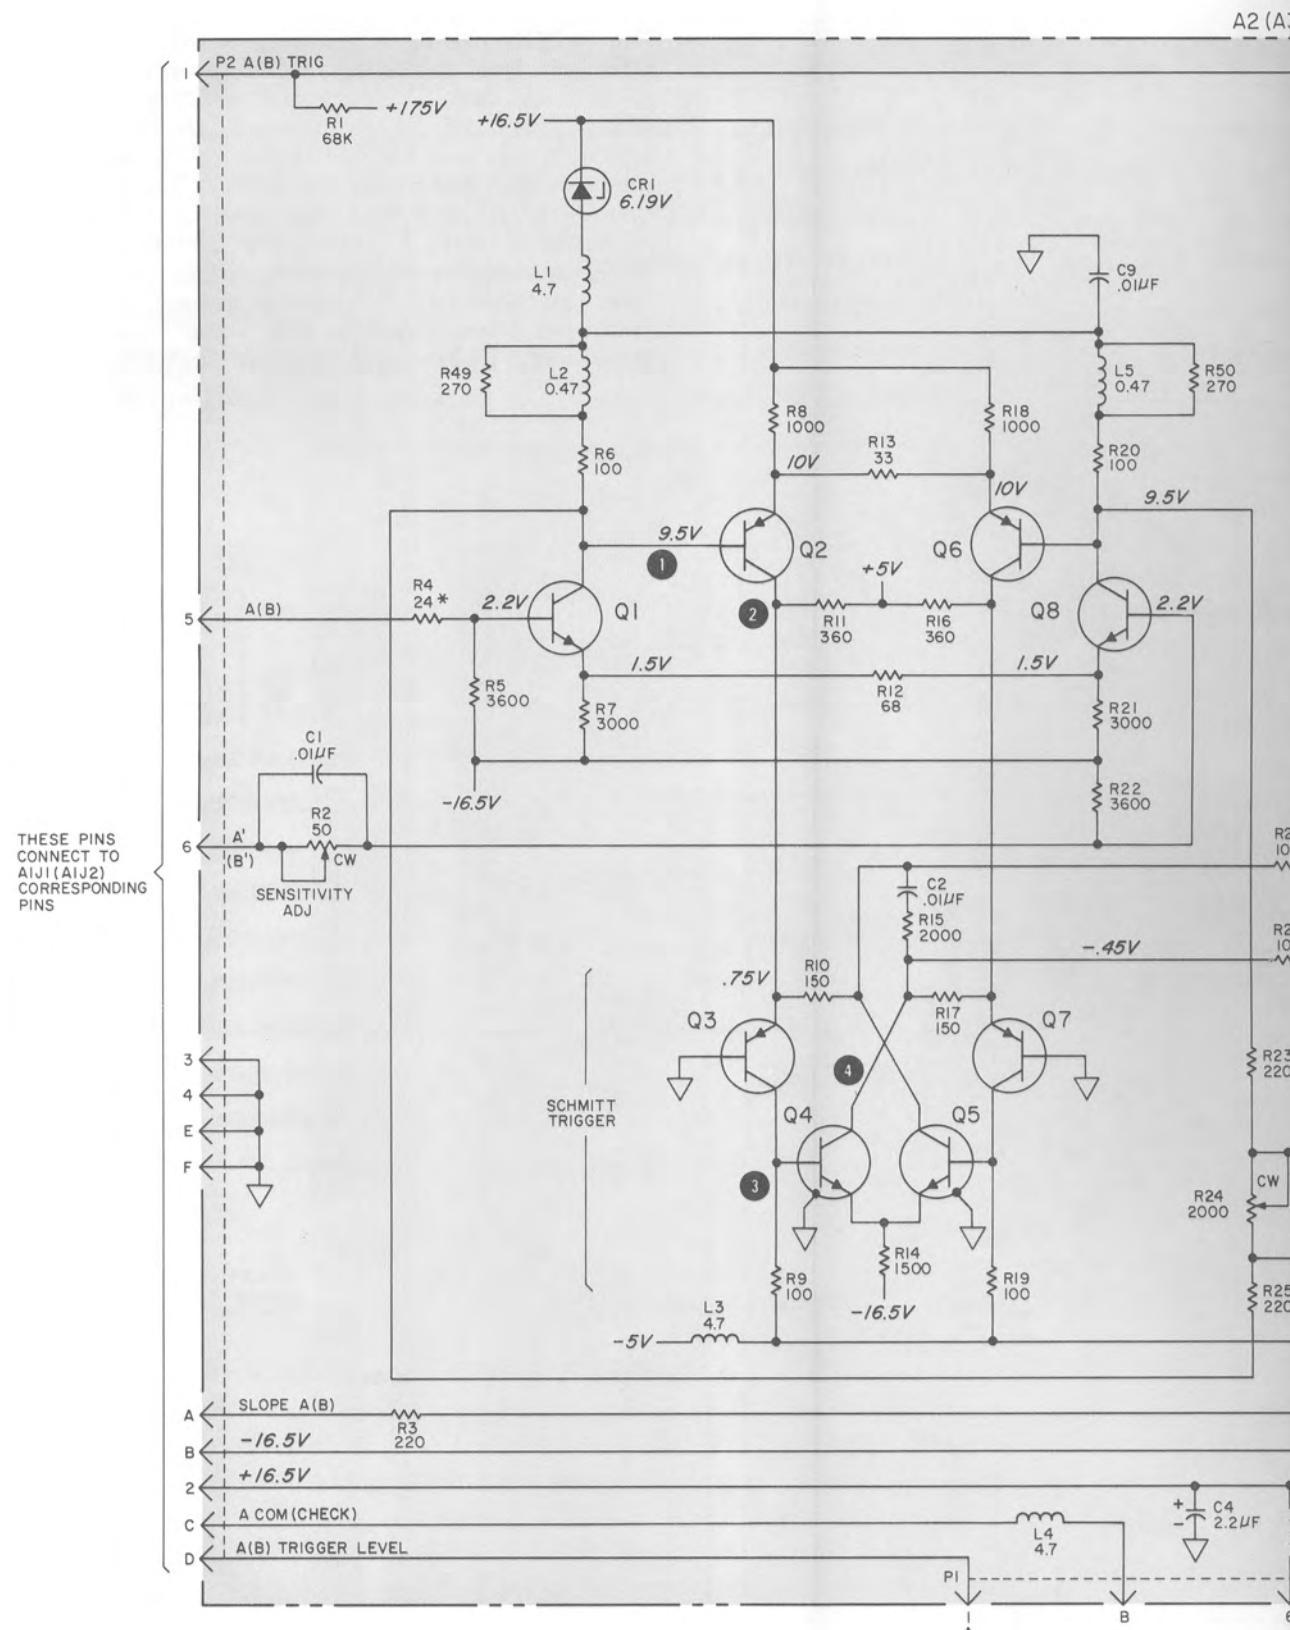

A2

TO
AI6JC(10),
AI2(E)


A3

TO
AI6JC(2),
AI2(E)

TO
A715),
AI6JB(15)


FROM
H...

A2 (A3) INPUT AMPLIFIER ASSEMBLY (05326-60004) (NOTE 1) SERIES 972


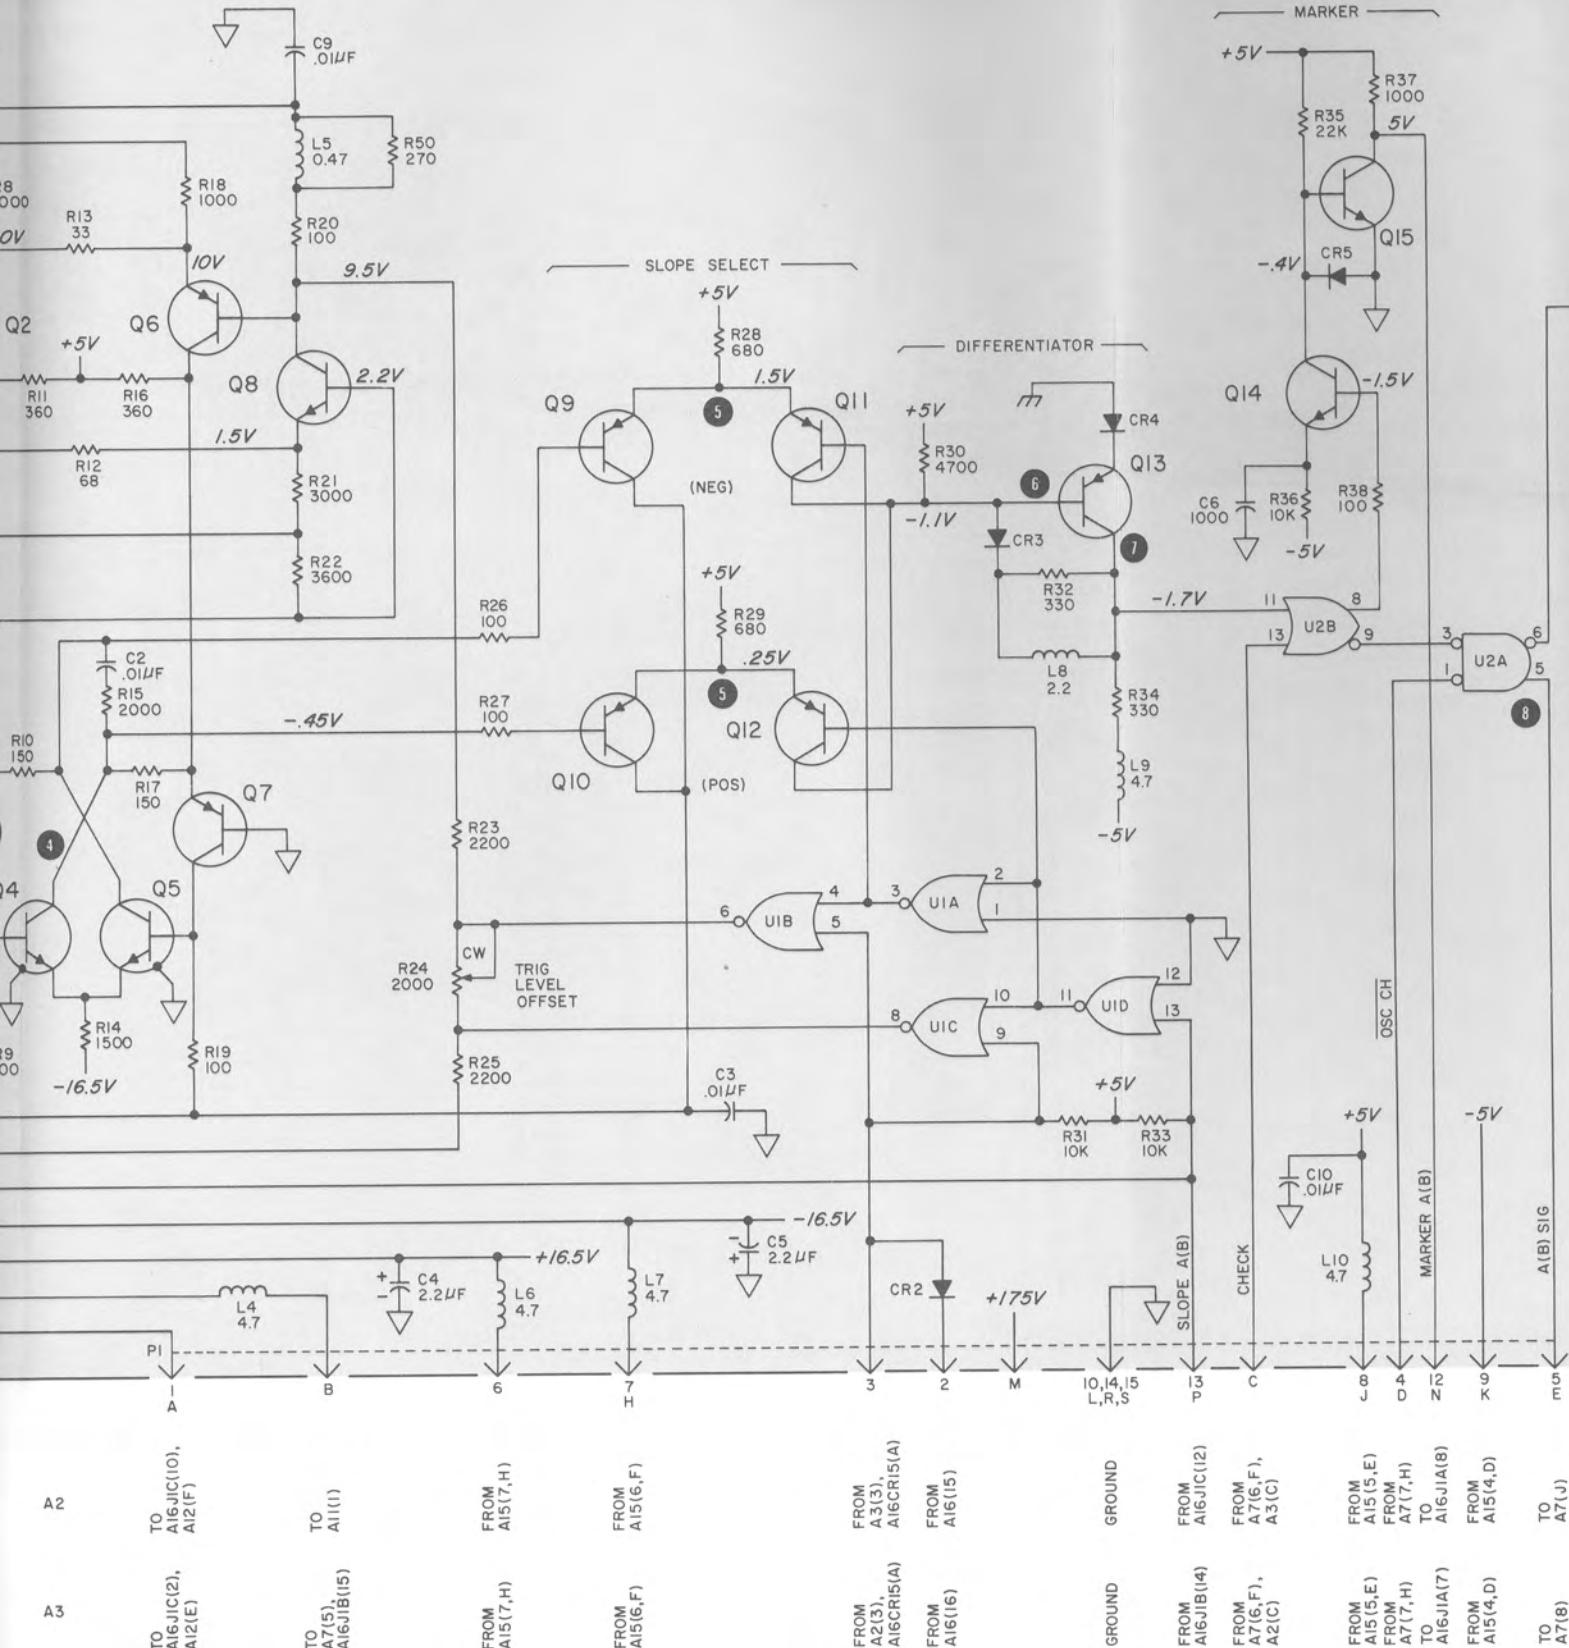


Model 5326/27B
Schematic Diagrams


R ASSEMBLY (05326-60004) (NOTE 1) SERIES 972

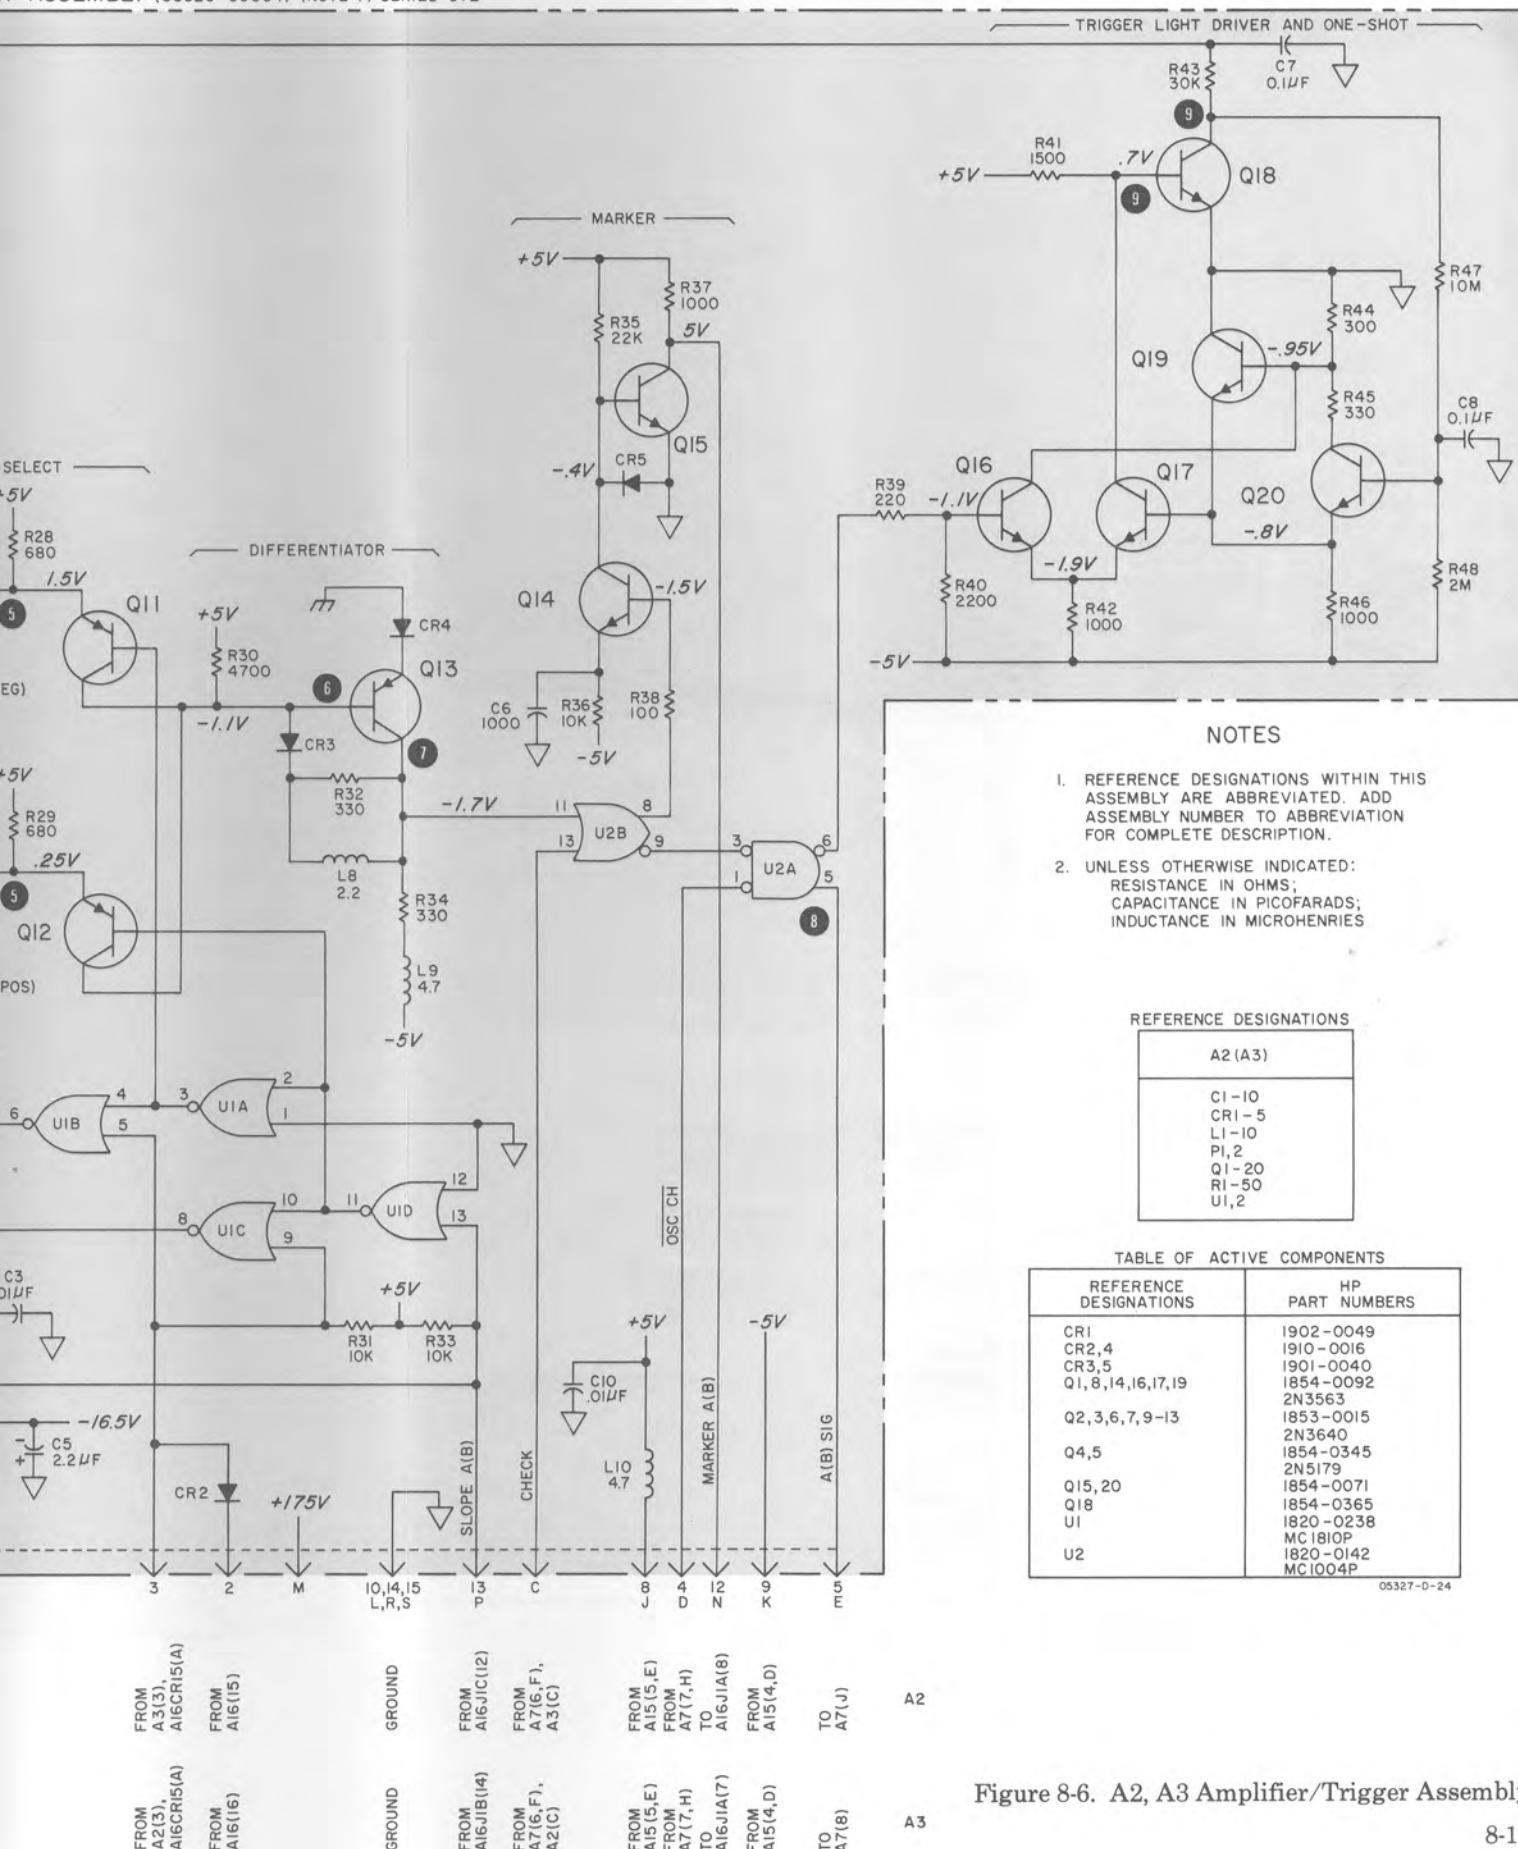


Part of Figure 8-7. A4 Oscillator Assembly

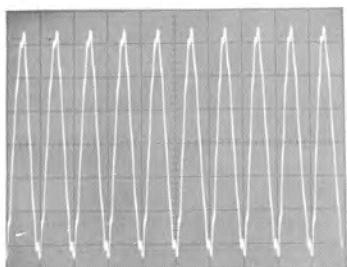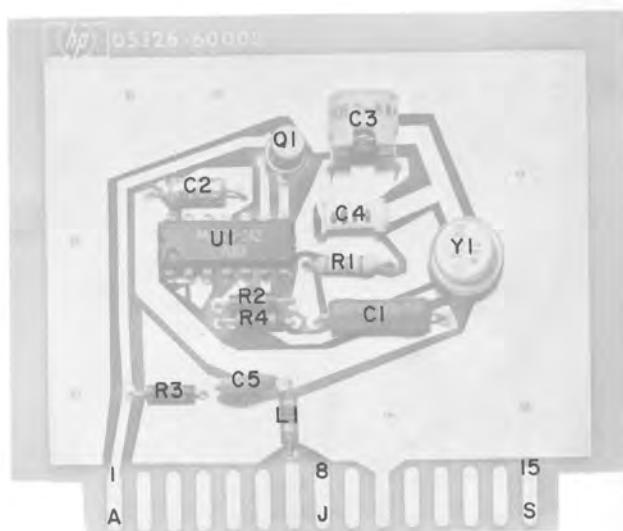


① .01 V/cm
.1 μ s/cm
ac coupled

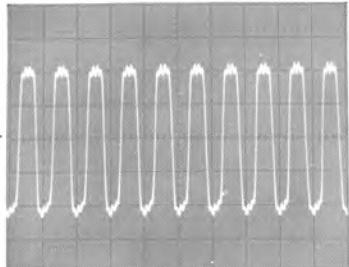

② .02 V/cm
.1 μ s/cm
ac coupled

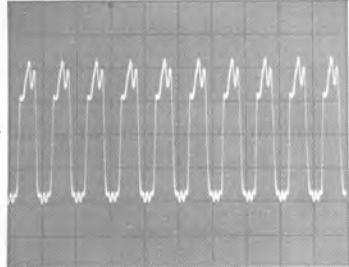

③ .02 V/cm
.1 μ s/cm
ac coupled

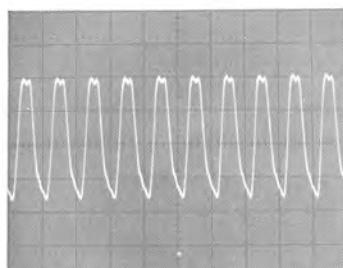


④ .1 V/cm
.1 μ s/cm

All waveforms taken through 10:1 divider probe. Divider probe's 8 $\frac{1}{2}$ " ground lead is connected to ground side of C5.

COUNTER CONTROLS:


INT-EXT (rear panel) INT

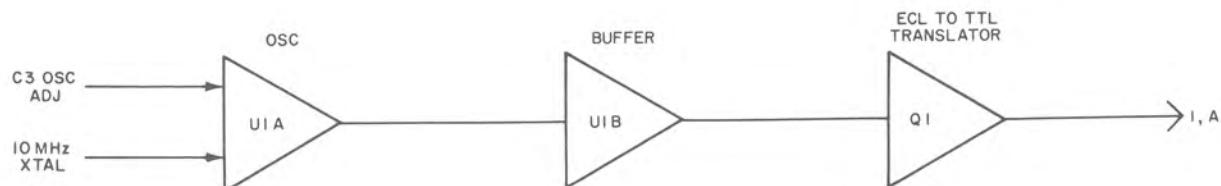


A4 OSCILLATOR OPERATION

Model 5326/27B
Schematic Diagrams

The 10 MHz oscillator assembly consists of oscillator U1A, buffer U1B, and level shifter Q1. U1A operates like an amplifier with positive feedback. The positive feedback path is from the noninverted output of U1A(6) through 10 MHz crystal Y1, trimmer capacitor C3, and C4 to U1A(4). Negative feedback is used to establish the input bias for U1A. The negative feedback path consists of R1 and R2. The inverted output of U1A(5) connects to buffer U1B(10). The buffer provides isolation between the oscillator and the output. The outputs of U1B(8) and (9) switch from approximately 3.5 to 4.25 volts. When one output is 3.5 volts, the other output is 4.25 volts. Level shifter Q1 converts the output of U1B to an approximate square wave of 0 to +4 volts.

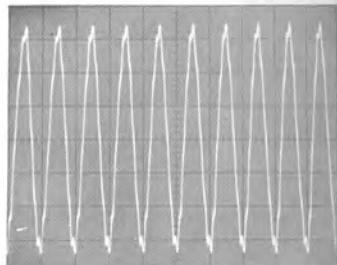

① .01 V/cm
.1 μ s/cm
ac coupled

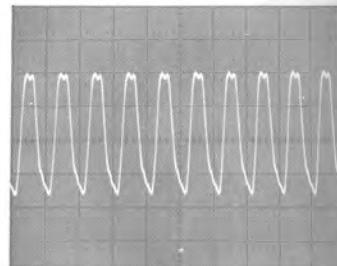

④ .1 V/cm
.1 μ s/cm


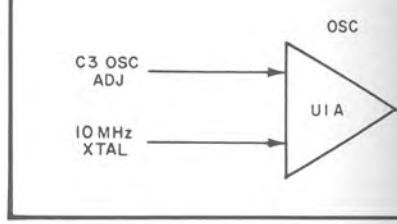


Figure 8-6
A2, A3 AMPLIFIER/TRIGGER ASSEMBLY

(See Page 8-15)

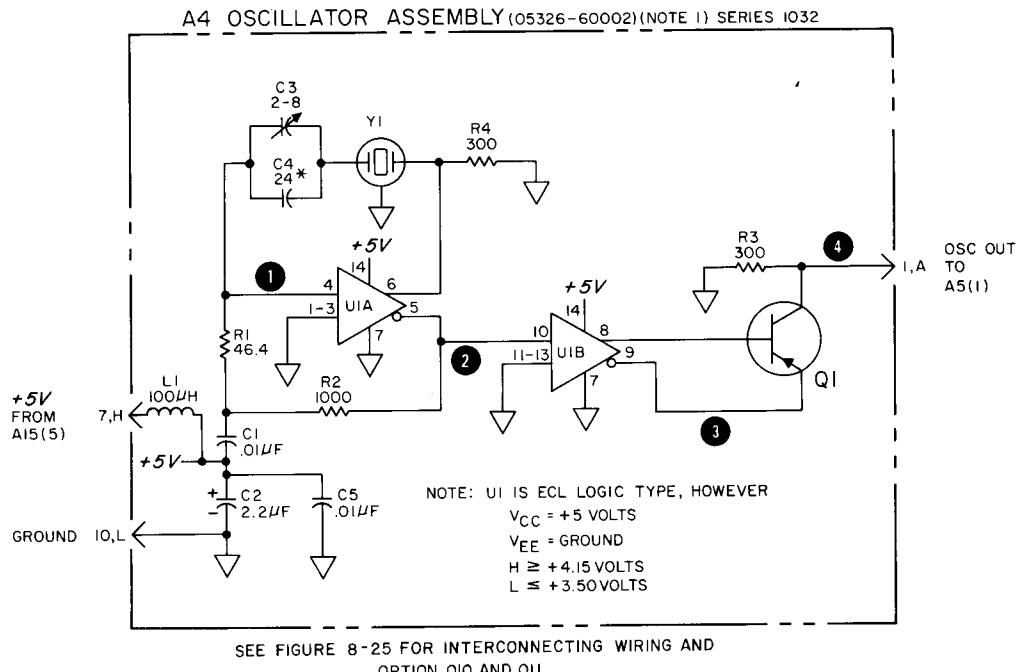

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;
INDUCTANCE IN MICROHENRIES
3. ASTERISK (*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN

| REFERENCE DESIGNATIONS | |
|------------------------|--|
| A4 | |
| C1-5 | |
| L1 | |
| Q1 | |
| R1-4 | |
| UI | |
| Y1 | |

TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|------------------------|---------------------|
| Q1 | I850-0158 2N2635 |
| UI | I820-0142 |
| Y1 | 0410-0405 |

Figure 8-7. A4 Oscillator Assembly

Part of Figure 8-8. Time Base Control Assembly

A5 TIME BASE OPERATION

This assembly contains 8 decade dividers, which are controlled by TIME BASE switch S5. The input signal is 10 MHz for the frequency mode. For the totalize and period-average modes, the decade dividers receive INPUT A signals.

When a particular decade receives a gate-enable signal the corresponding gated output line is enabled. For example, if S5 is set to .1 second U1(6) is grounded. This gates the divided signal out on U1(5). The gated outputs are connected together on a common line to C5. C5 differentiates the high to low transitions into approximately 100 ns pulses at U5C(8). When S5 is set to .1 μ s, the input signal bypasses the decade dividers and passes through U10D and U5D. The output of U5C feeds through U10C to A7 and also through U10E to the rear-panel TIME BASE OUTPUT jack J6.

Q1 and Q2 form an ECL to TTL translator. When the main gate opens (low is main-gate enable), Q2 turns on the start one-shot Q3/Q4. During short gate-length times, this holds the gate lamp enable line low for approximately 50 ms to extend the time the gate lamp is on. When Q1 collector goes high, a low is developed


at U10F(12) and routed to the GATE OUT jack J5.



U5A and U5B select either the internal or external oscillator signal. When S7 is set to EXT, the internal oscillator signal is inhibited and the external oscillator signal passes through Schmitt trigger Q5 and Q6 to U5B and XA5(13).

A5 TROUBLESHOOTING


When troubleshooting the Time Base Dividers, place the FUNCTION switch to START and CHK/SEP/COM to CHK. Step the TIME BASE switch through each position and note the counter's display. When the counter stops totalizing, check for a low on pin 6 of the selected decade. If the counter does not totalize for any position of the TIME BASE switch, the problem is in the circuitry of U10B, U10C, or U5C. Before the gated output is sent to the A7 Function Selector, it is differentiated by C5 and R18. This produces extremely sharp pulses, which are best observed when the gate time is 0.1 μ s (TIME BASE switch).

To check the operation of the Gate Lamp one-shot, check for waveform 5 and 6 with SAMPLE RATE switch to NORM. The Collector of Q3 should be Low for about 50 ms, regardless of the gate time.

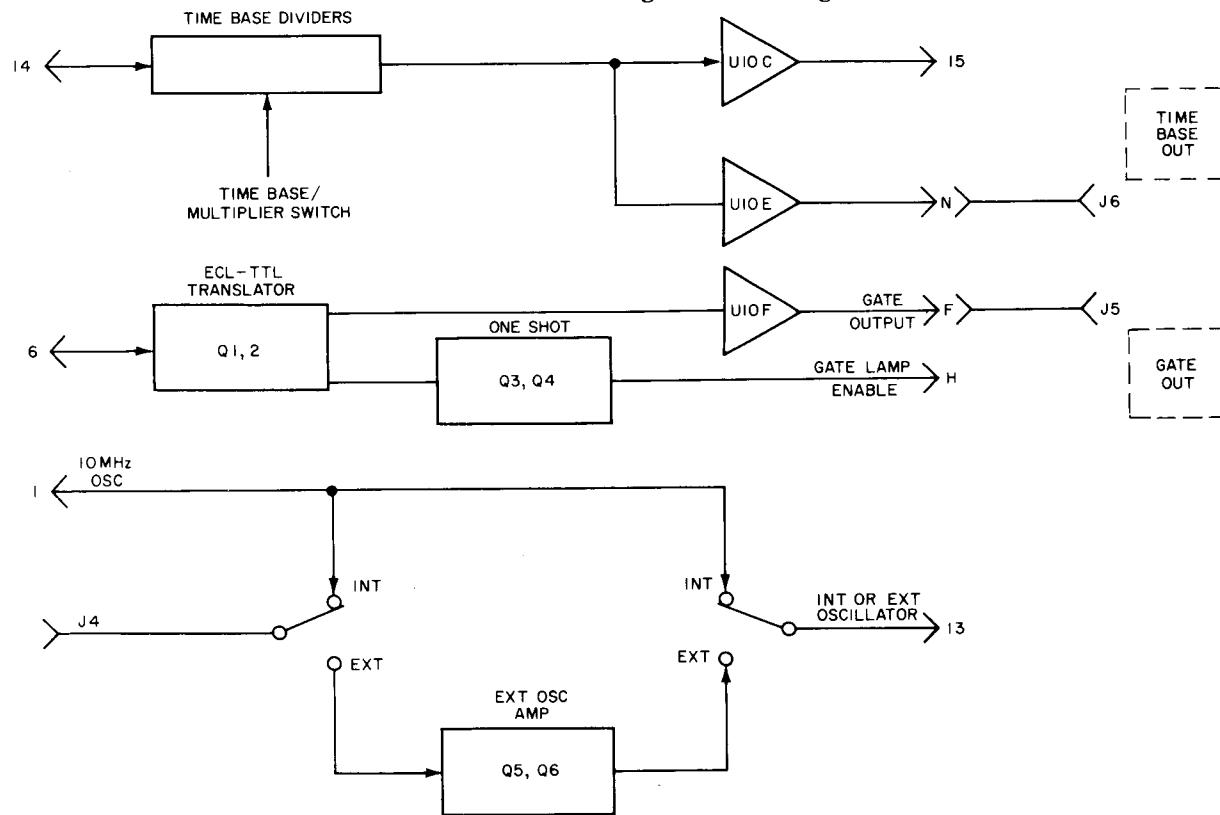


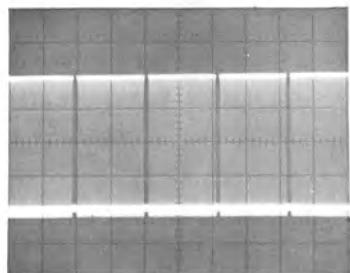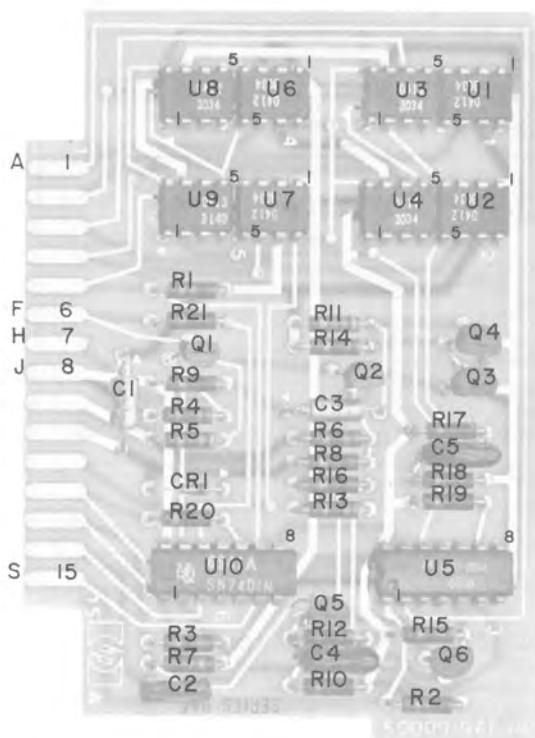


1 .1 V/cm
.5 ms/cm

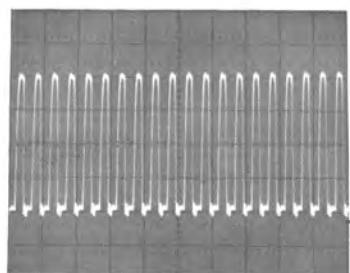


2 .1 V/cm
.2 μ s/cm

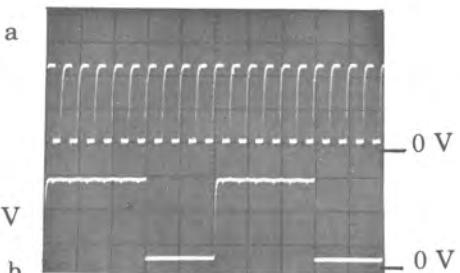


3 a. U7(2) .2 V/cm
b. U7(4) 2 μ s/cm

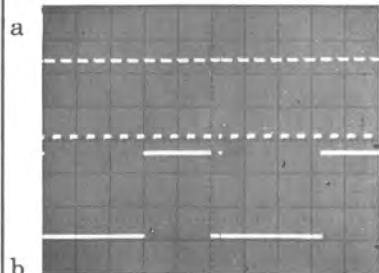

4 a. U2(2) .2 V/cm
b. U2(5) .2 ms/cm

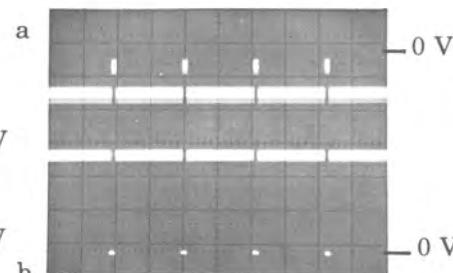

5 a. Q1 base - .1 V/cm
b. Q1 collector - .2 V/cm
.5 ms/cm

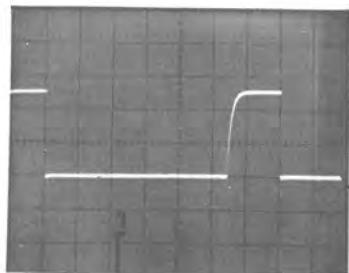

6 .2 V/cm
10 ms/cm
SAMPLE RATE - NORM
SWEEP MODE - NORM

COUNTER CONTROLS: (except as noted)

Use settings of A2 Assembly

DC VOLTAGES:

Set counter controls as stated.


Disconnect input signal. Push RESET.

All waveforms taken with 10:1 divider probe; ground lead is connected to ground side of C1. A5 is mounted on extender board.

OSCILLOSCOPE CONTROLS:

(except as noted)

Use settings of A2 Assembly

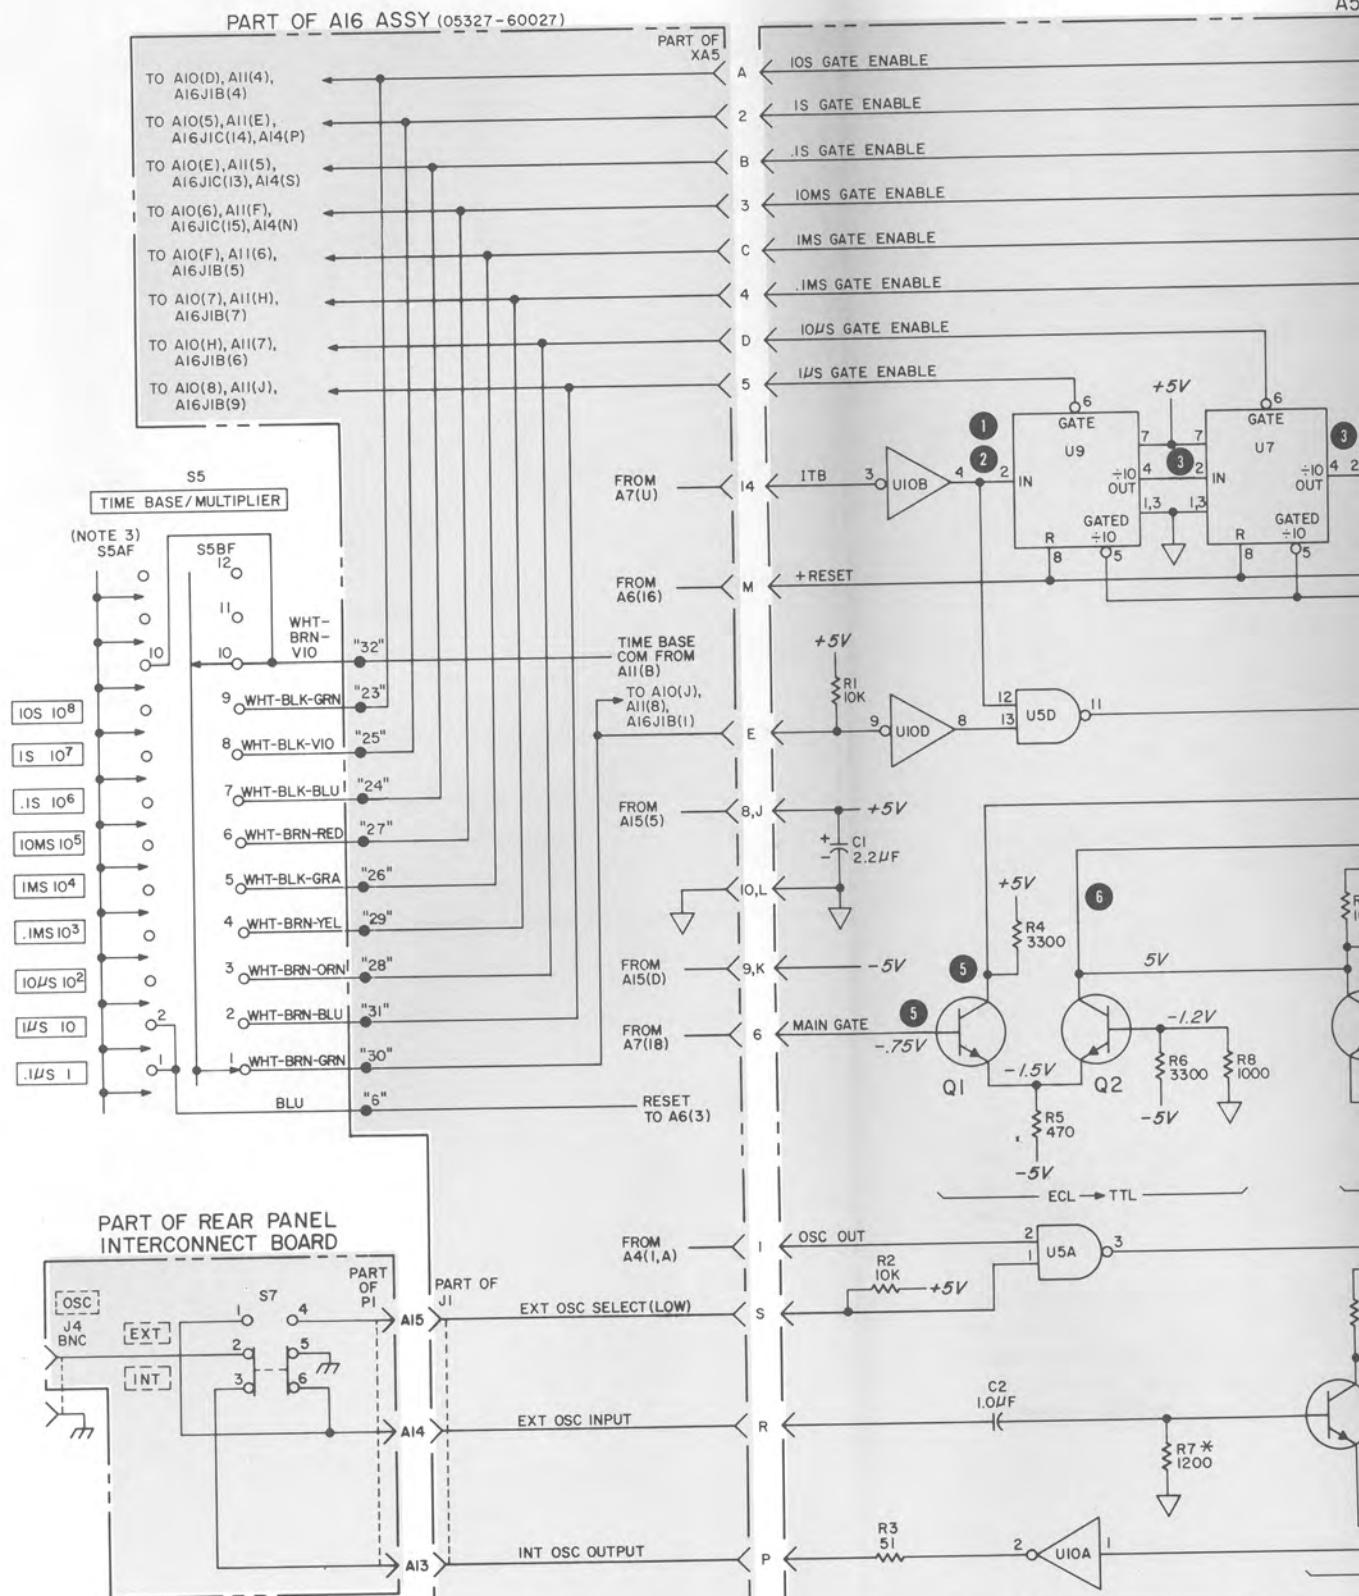

TROL ASSEMBLY (05326-60005) (NOTE 1) SERIES 972 REV A


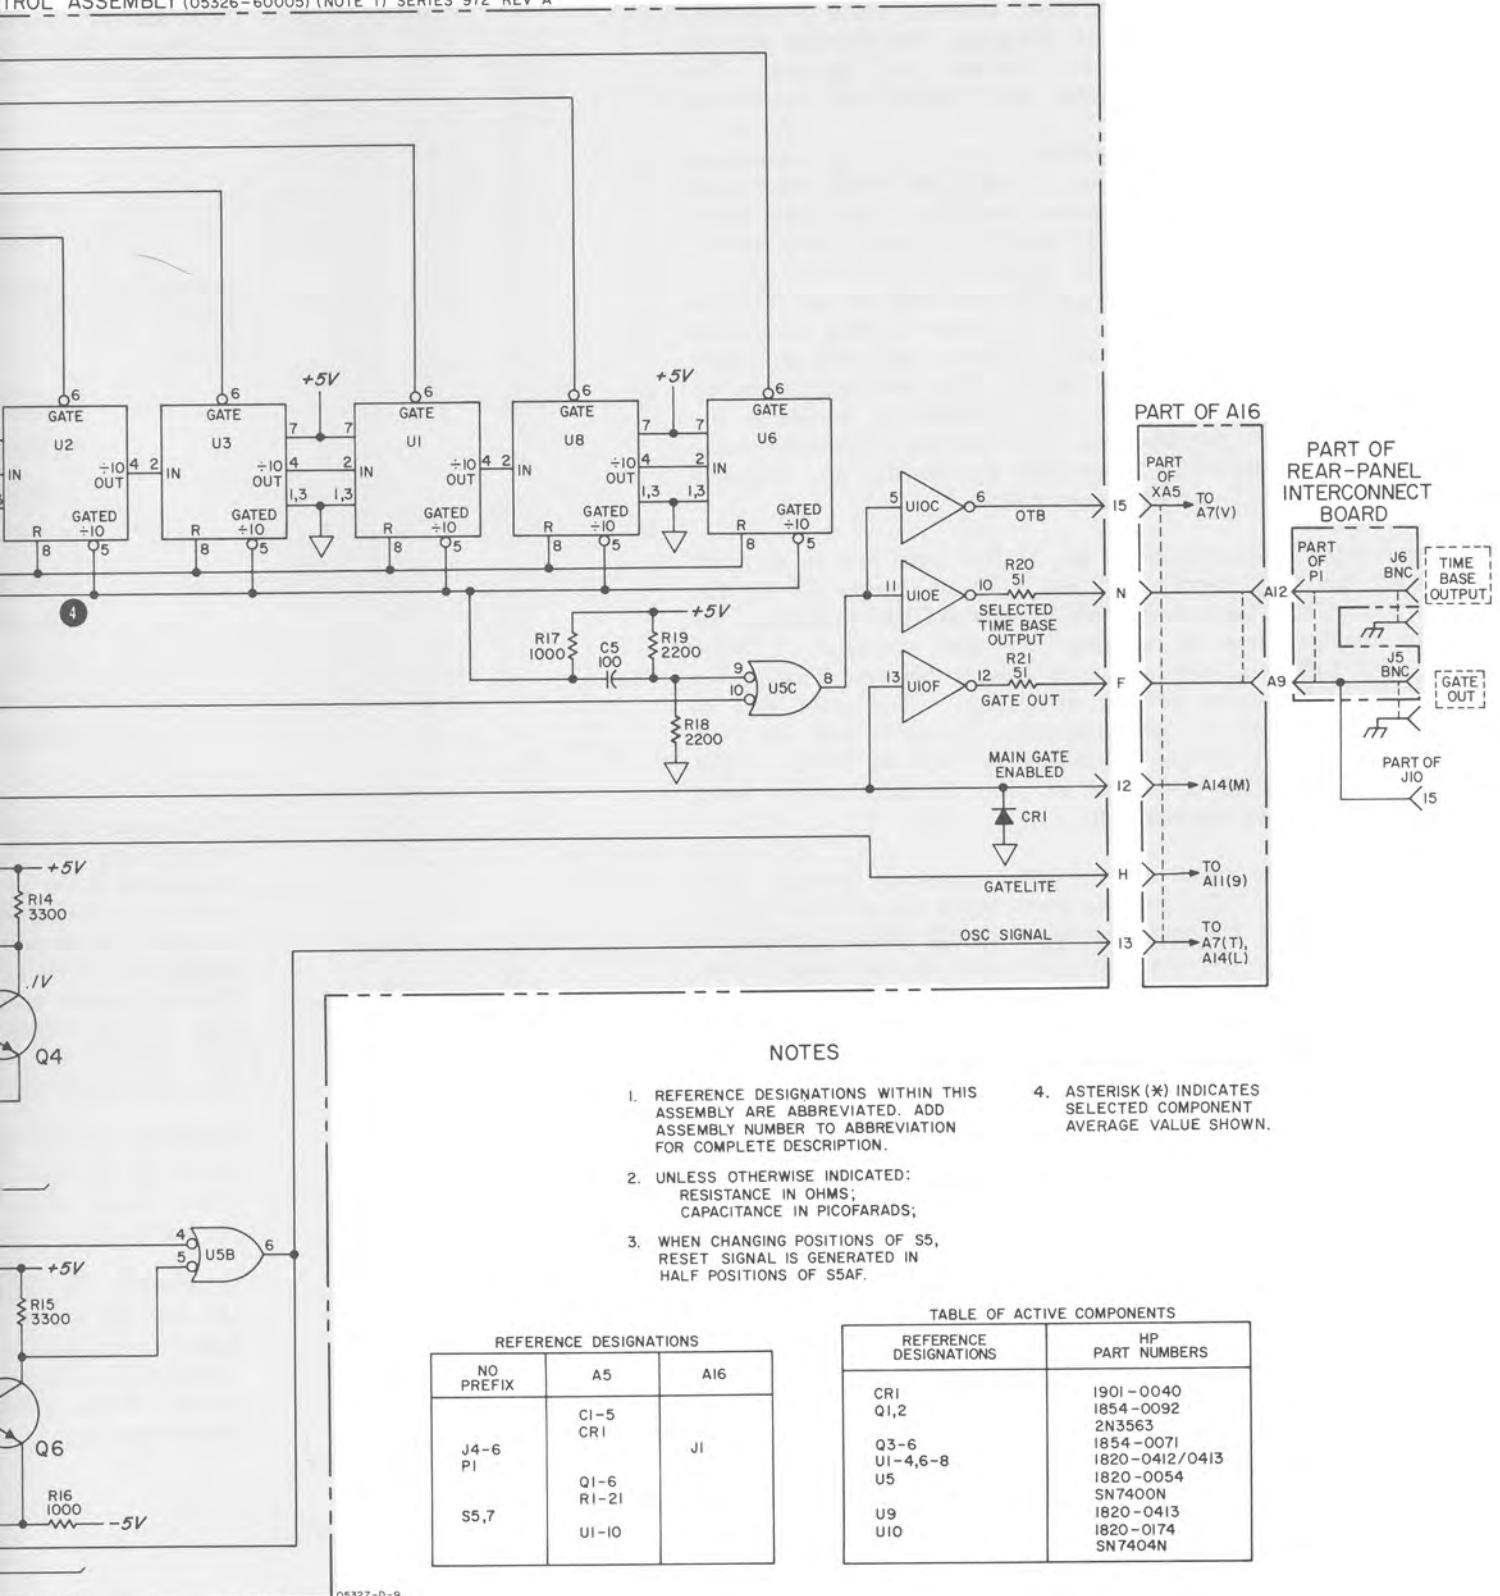


Figure 8-8. A5 Time Base Control Assembly

Model 5326/27B Schematic Diagrams

Part of Figure 8-9. A6 Sample Rate Assembly

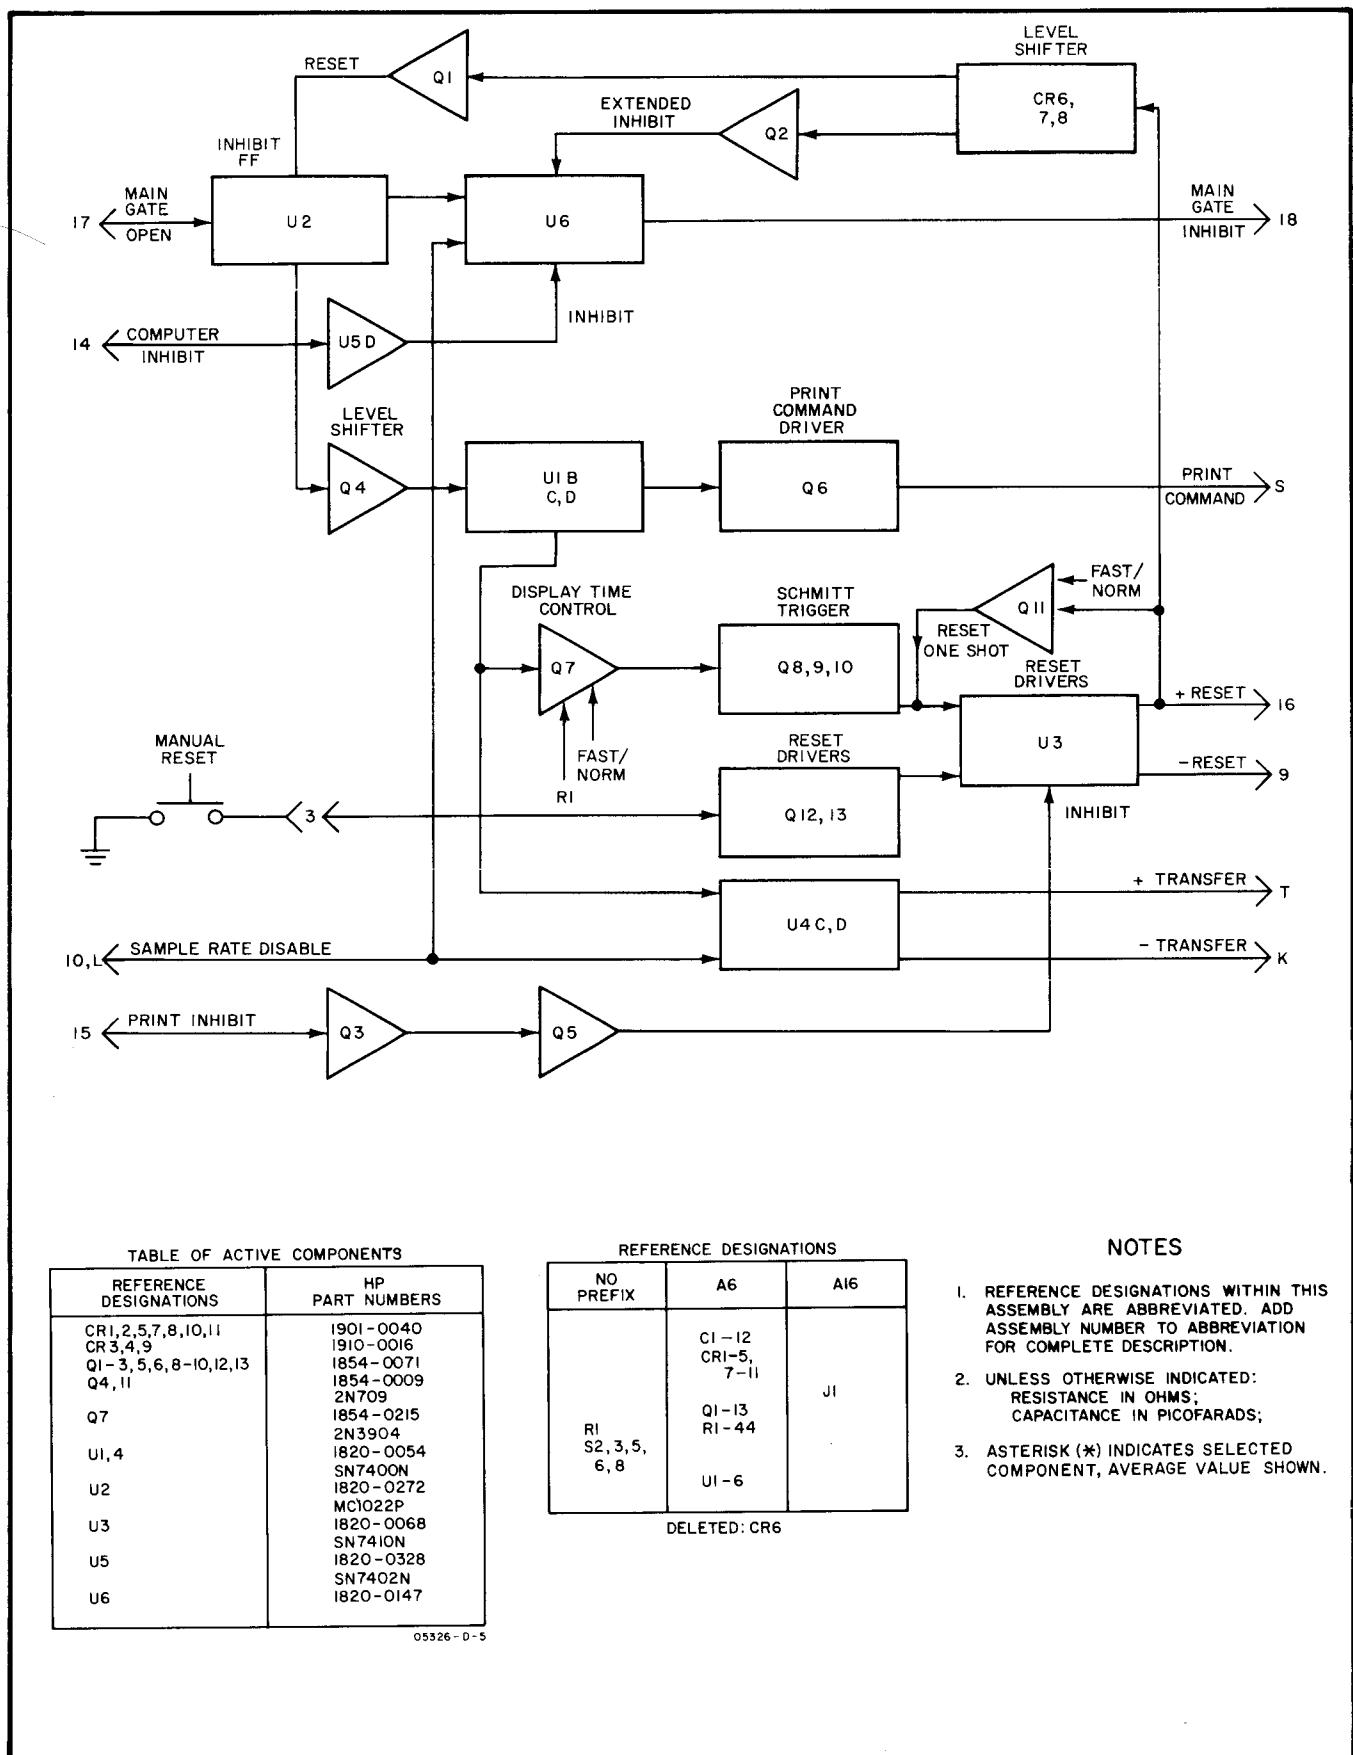

| TABLE OF ACTIVE COMPONENTS | |
|----------------------------|----------------------|
| REFERENCE DESIGNATIONS | HP PART NUMBERS |
| CRI,2,5,7,8,10,11 | I901-0040 |
| CR3,4,9 | I910-0016 |
| Q1-3,5,6,8-10,12,13 | I854-0071 |
| Q4,11 | I854-0009 2N709 |
| Q7 | I854-0215 2N3904 |
| UI,4 | I820-0054 SN7400N |
| U2 | I820-0272 MC1022P |
| U3 | I820-0068 SN7410N |
| U5 | I820-0328 SN7402N |
| U6 | I820-0147 |

| REFERENCE DESIGNATIONS | | |
|-------------------------|---|-----|
| NO PREFIX | A6 | AI6 |
| RI S2, 3, 5, 6, 8 | CI - I2 CRI-5, 7-11 QI - I3 RI - 44 UI - 6 | JI |

05326 - D - 5

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;
 3. ASTERISK (*) INDICATES SELECTED COMPONENT, AVERAGE VALUE SHOWN.

ard is best accomplished when procedure given below examines circuit is in a working, but static, or listed. The schematic shows ed. These levels should be used

E

signal when per-

MAND DRIVER, and SAMPLE shooting, perform the procedure

..... FREQ A

..... 1 s

..... HOLD

..... +

..... SEP

..... ON

..... full cw

..... full ccw

(or lamp fires)

set these circuits to the point es. Varying the LEVEL control gate for 1-second, and pin 17 U2 sets when the gate closes set with the SAMPLE RATE ts, check for a Low on U5C(8). and a Low on U1D(6). Check collector sets Low. The main l now be High. The collector

sample rate inhibit gates are STORAGE switches and by a ntrols set as above, check for

itt Trigger and Q7 should be . Set the counter controls as waveform five, the repetition rate ne, but pulse width remains the the SAMPLE RATE controls,

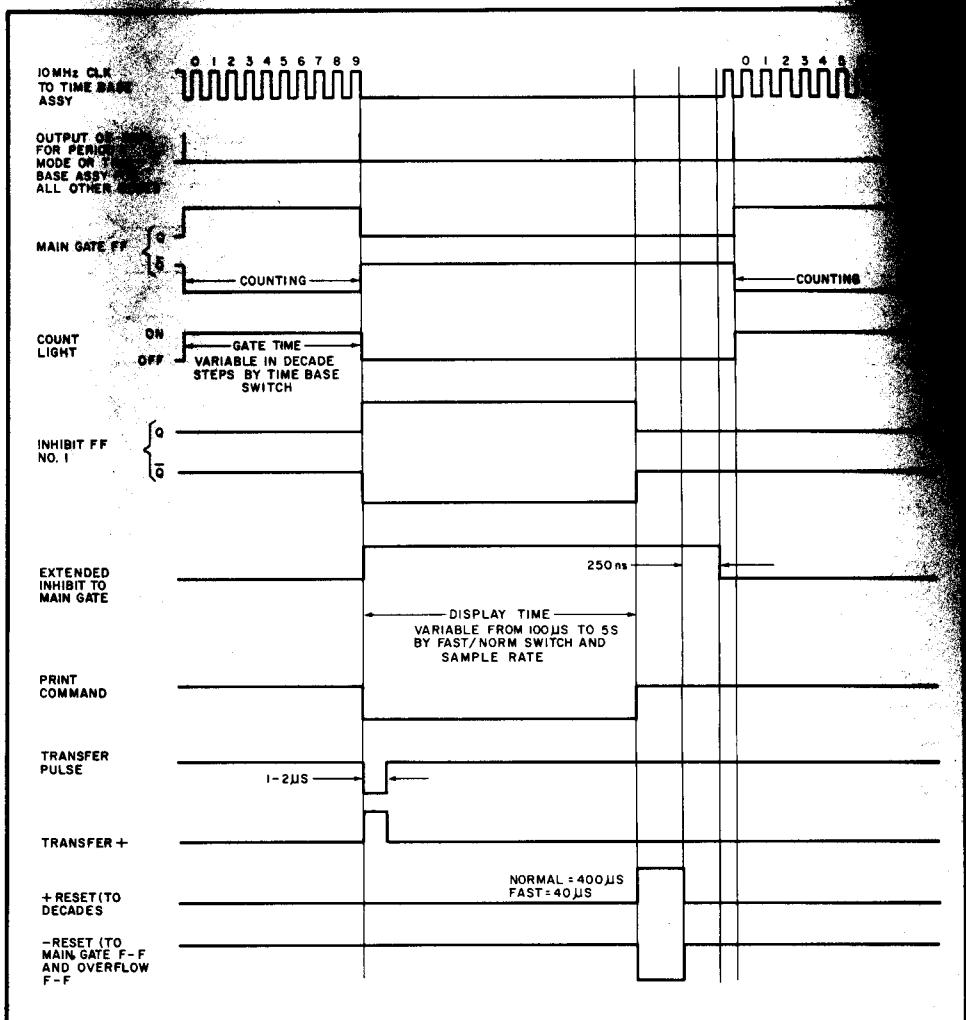


Figure 8-8
A5 TIME BASE CONTROL ASSEMBLY

A6 TROUBLESHOOTING

rates for the input
us operating modes.
er, print command,
the circuits receive
reset signals. The
play-hold functions.

following operating
to FAST, no printer
nd main gate open.
, which sets inhibit
o generate a high
ated at Q4 collector
er inhibit is present
oint, and the high
e resulting high on
ector, which is the
on U1B(6) activates
positive and negative

goes low to turn off
charge C4 for the
ORM position. R1
required to bring
Schmitt Trigger Q8
The reset will be
1A(3) will go low,
ut at A6(16). The
n addition to being

using through level
on Q1 and applies
2, which maintains
of the reset pulse.
ain-gate circuits are

a sufficiently long
ely 40 μ s or 400 μ s,
For NORM sample
The sample rate
mode and maintains
s main-gate inhibit
base through CR2.

o maintain transfer
s the reset one-shot
is depressed (reset
same time to clear
n-gate inhibit, even
signal is low if the
ASE or FUNCTION
generated between

Troubleshooting the Sample Rate board is best accomplished when the board is in a static state. The procedure given below examines each section separately when the circuit is in a working, but static, condition. Perform the tests in order listed. The schematic shows the circuit levels after RESET is pushed. These levels should be used as a reference.

NOTE

Do not use an input signal when performing the tests below.

MAIN GATE INHIBIT, PRINT COMMAND DRIVER, and SAMPLE RATE ONE-SHOT. Before troubleshooting, perform the procedure below.

| | |
|--------------------------|----------|
| FUNCTION switch | FREQ A |
| TIME BASE switch | 1 s |
| SAMPLE RATE switch | HOLD |
| SLOPE switch | + |
| CHK/SEP/COM | SEP |
| STORAGE switch | ON |
| LEVEL control | full cw |
| Push RESET | |
| LEVEL | full ccw |

(Note that trigger lamp fires)

The purpose of this procedure is to set these circuits to the point immediately after the main gate closes. Varying the LEVEL control triggers a pulse to open the main gate for 1-second, and pin 17 goes Low during the gate time. U2 sets when the gate closes (positive transition) and remains set with the SAMPLE RATE switch set to HOLD. Once U2 sets, check for a Low on U5C(8). This generates a High on U1C(8) and a Low on U1D(6). Check that U4C(8) pulses High and Q6 collector sets Low. The main gate inhibit line at U6B(9) should now be High. The collector of Q7 is not now affected.

SAMPLE RATE INHIBIT. The sample rate inhibit gates are controlled by the FUNCTION and STORAGE switches and by a print inhibit signal. With the controls set as above, check for the levels shown on the schematic.

SCHMITT TRIGGER. The Schmitt Trigger and Q7 should be checked by using an input signal. Set the counter controls as listed under the waveforms. In waveform five, the repetition rate of the pulses changes with gate time, but pulse width remains the same. Pulse width changes with the SAMPLE RATE controls, but not spacing.

A6 SAMPLE RATE OPERATION

The sample-rate circuits determine interrogation rates for the input signal and provide several functions for the various operating modes. These functions include generating reset, transfer, print command, and main-gate inhibit signals. In addition, the circuits receive computer inhibit, printer inhibit, and manual reset signals. The circuits also serve to control storage and display-hold functions.

As an example of operation, assume the following operating conditions: STORAGE to ON, SAMPLE RATE to FAST, no printer inhibit, no computer inhibit, no manual reset, and main gate open. At the end of the gate time, Pin 17 goes high, which sets inhibit flip-flop U2. This sends a signal to U6C to generate a high inhibit at U6B(9). In addition, a low is generated at Q4 collector to trigger the sample rate one-shot if no printer inhibit is present at U5B(6). The display time starts at this point, and the high at U5C(10) generates a low at U1D(11). The resulting high on U1C(8) turns on Q6, giving a low at the collector, which is the print command. Also at this time, the low on U1B(6) activates U4C through differentiator C5 to generate the positive and negative transfer signals at pins T and K, respectively.

When the sample rate one-shot is set, U1B(6) goes low to turn off Q7, allowing the +5 V supply and R41 - R1 to charge C4 for the display time. C3 is also connected for the NORM position. R1 varies the display time by varying the time required to bring Q8 base to a sufficient plus value to trigger Schmitt Trigger Q8 through Q10. This gives a high at U1A(1). The reset will be delayed until there is no print inhibit. U1A(3) will go low, generating a high at U3B(6), which is fed out at A6(16). The negative reset at U3C(8) is fed out at pin 9 in addition to being used to reset the sample rate one-shot.

The positive reset is used on A6 after passing through level shifter CR7 and CR8. The positive reset turns on Q1 and applies an ECL high to clear U2 and also turns on Q2, which maintains inhibit approximately 200 ns after the end of the reset pulse. At this time, the inhibit goes low and the main-gate circuits are free to function.

Q11 circuitry is a reset one-shot that ensures a sufficiently long reset pulse. The reset pulse width is approximately 40 μ s or 400 μ s, as determined by the FAST/NORM switch. For NORM sample rates. S2 switches C10 in parallel with C8. The sample rate disable line (pins 10, L) is low during START mode and maintains continuous transfer through CR3 and prohibits main-gate inhibit through U4B in addition to holding down Q8 base through CR2. This prevents the reset from being generated.

When STORAGE is OFF, U5A is activated to maintain transfer through CR4. The manual reset (pin 3) holds the reset one-shot in the ON state as long as the RESET button is depressed (reset low). It also maintains the transfer during the same time to clear the display. In addition, it turns on the main-gate inhibit, even if the main gate is open. The manual reset signal is low if the RESET button is depressed or if the TIME BASE or FUNCTION switch is between positions. (No reset is generated between start and stop positions.)

A6 TROUBLESHOOTING

Troubleshooting the board is in a section separated by each section separator condition. Perform the circuit levels as a reference.

Do not formi



MAIN GATE INHIBIT RATE ONE-SHOT below.

FUN
TIME
SAM
SLOP
CHK
STOP
LEV
Push
LEV


The purpose of the immediately after triggers a pulse that goes Low during (positive transition) switch set to HOLD. This generates a that U4C(8) pulse gate inhibit line of Q7 is not now af

SAMPLE RATE controlled by the print inhibit signal the levels shown on


SCHMITT TRIGGER checked by using listed under the width of the pulses change same. Pulse width but not spacing.

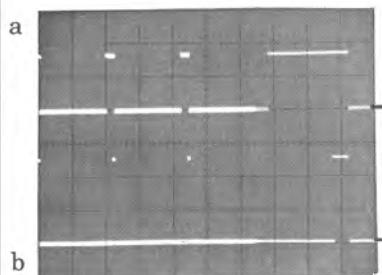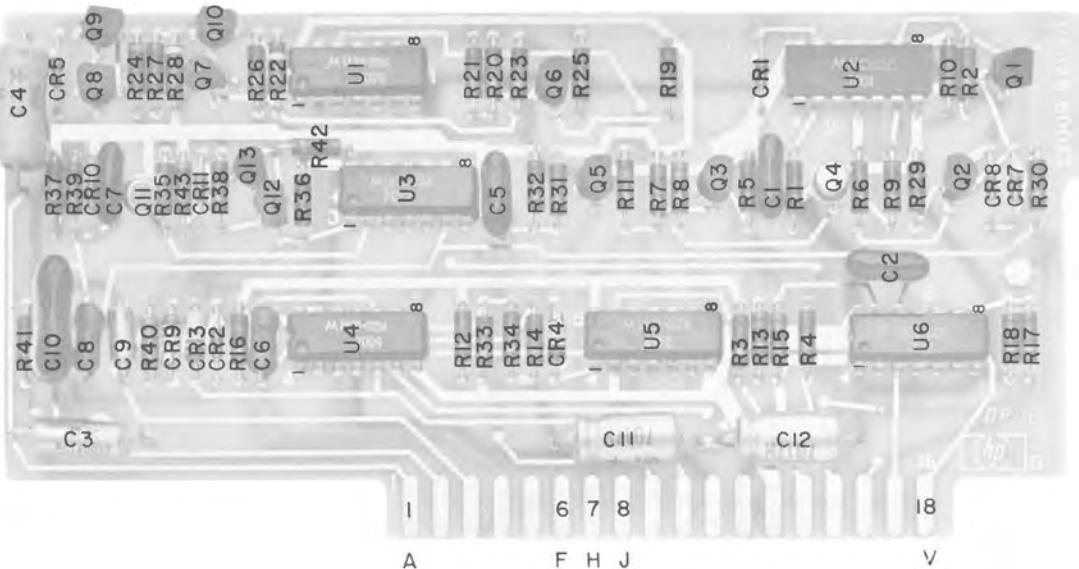


- ① a. U2(2)
b. U2(9)
.05 V/cm
SWEEP to MIXED
MAIN — .5 ms/cm
DELAYED — 50 μ s/cm

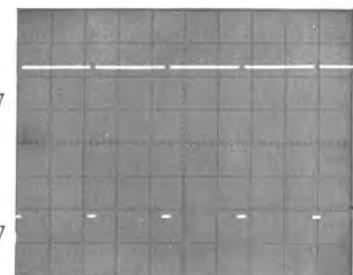


② .1 V/cm
.5 ms/cm

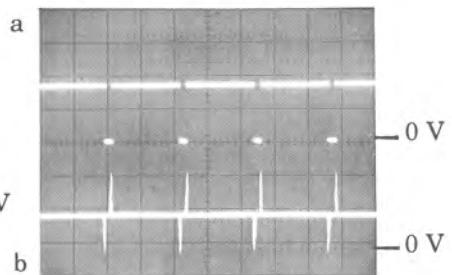


- ③ a. U1(6)
b. U1(9)
.2 V/cm
.5 ms/cm

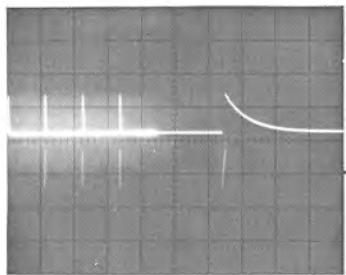

- ④ .2 V/cm
SWEEP to MIXED
MAIN — 1 ms/cm
DELAYED — 10 μ s/cm

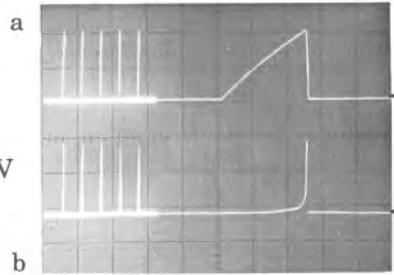

- ⑤ a. Q7 — .1 V/cm
b. Q10 — .05 V/cm
SWEEP to MIXED
MAIN — 2 ms/cm
DELAYED — 20 μ s/cm

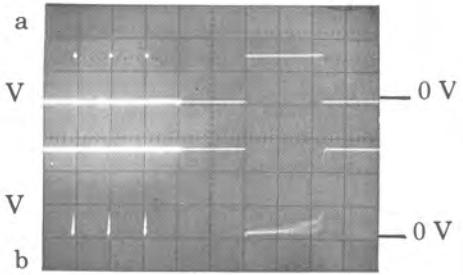

- ⑥ a. U3(6)
b. Q11 collector
.2 V/cm
SWEEP to MIXED
MAIN — 1 ms/cm
DELAYED — 10 μ s/cm

All waveforms taken with 10:1 divider probe; ground lead is connected to ground side of C11. A6 is mounted on extender board.


OSCILLOSCOPE CONTROLS:
Use settings of A2 Assembly

DC VOLTAGES:
Set counter controls as stated.
Disconnect input signal.
Push RESET.


HE,LE — ECL levels
H,L — TTL levels

COUNTER CONTROLS:
Use settings of A2 Assembly

A6 SAMPLE RATE BOARD ASSEM

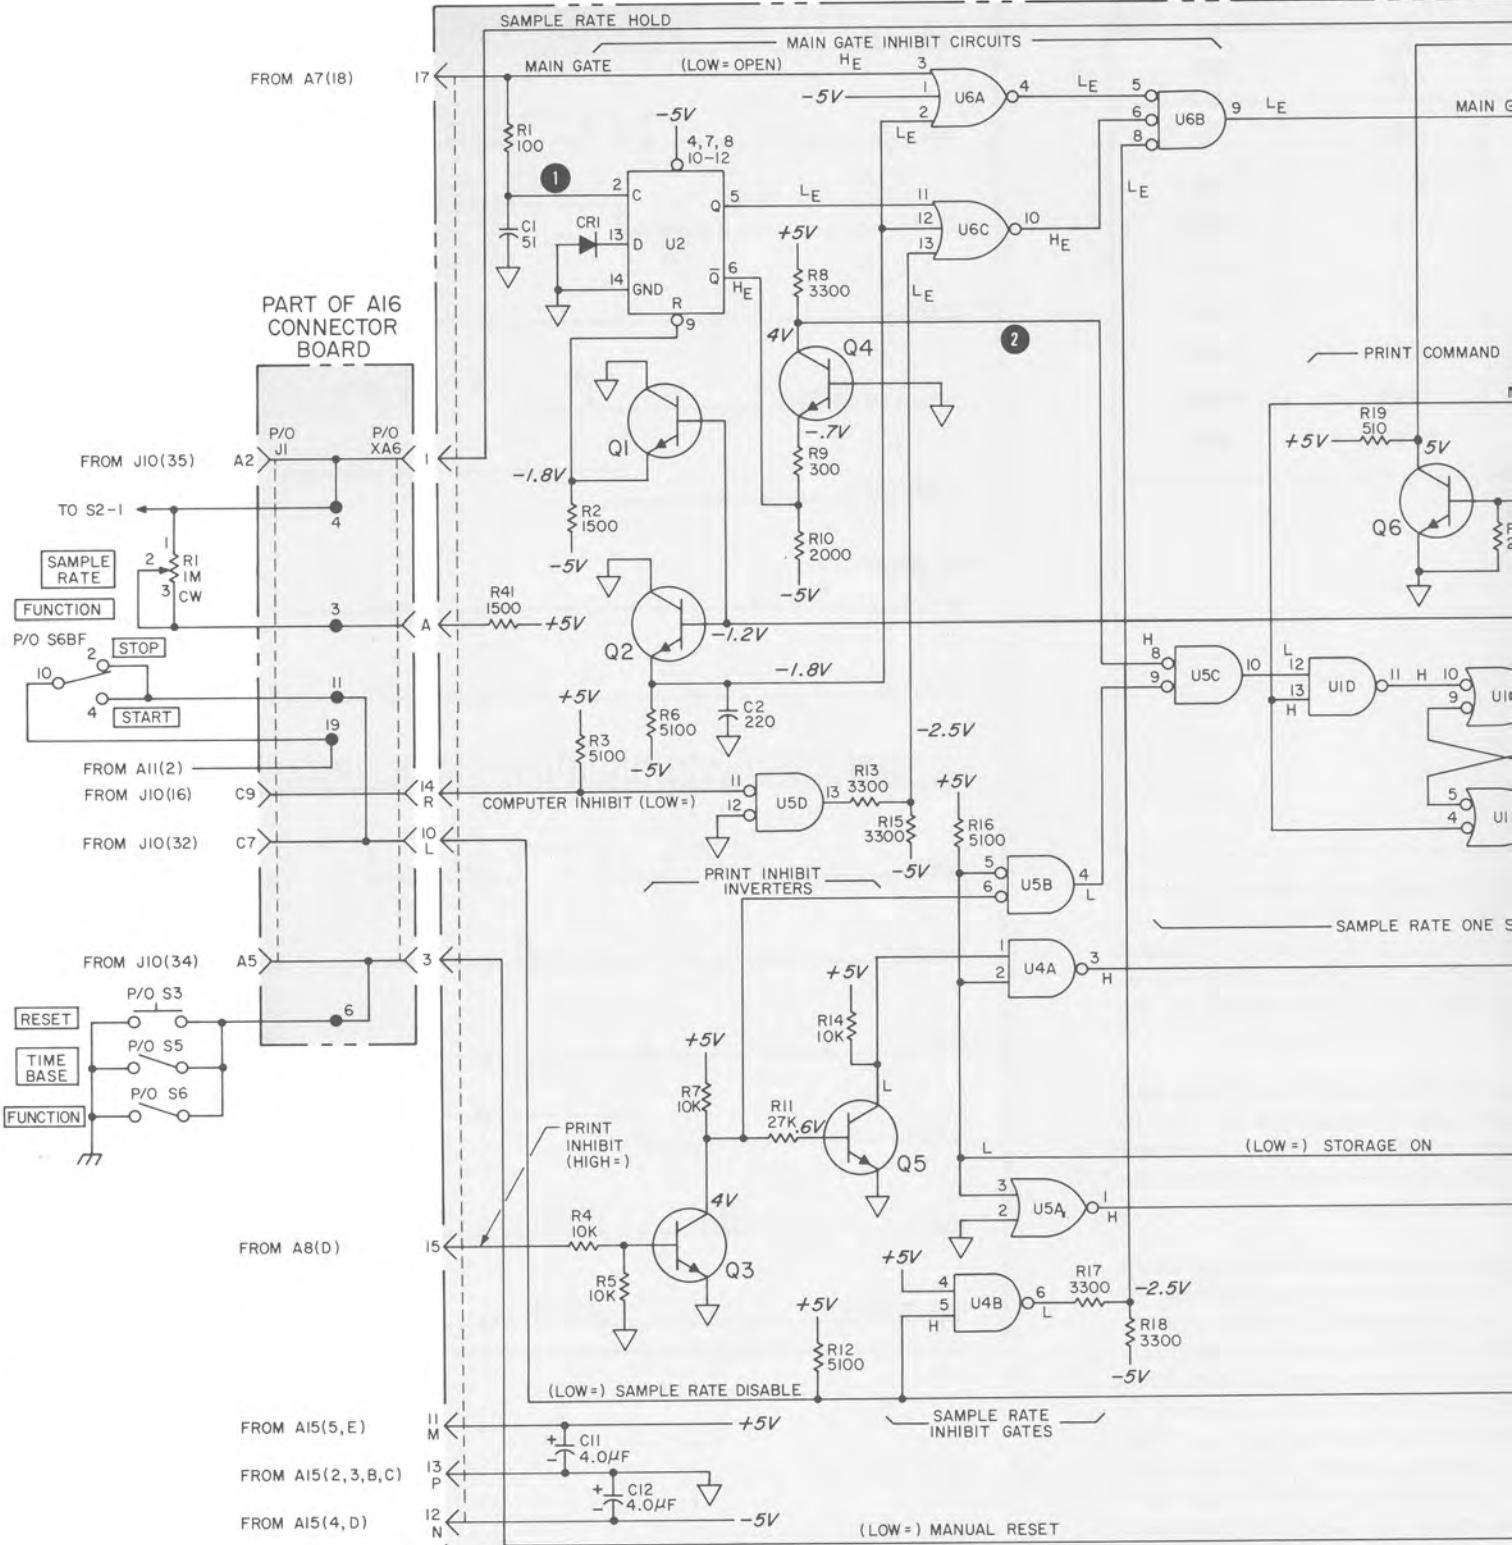

A6 SAMPLE RATE BOARD ASSEMBLY (05326-60013) (NOTE 1) SERIES 1132

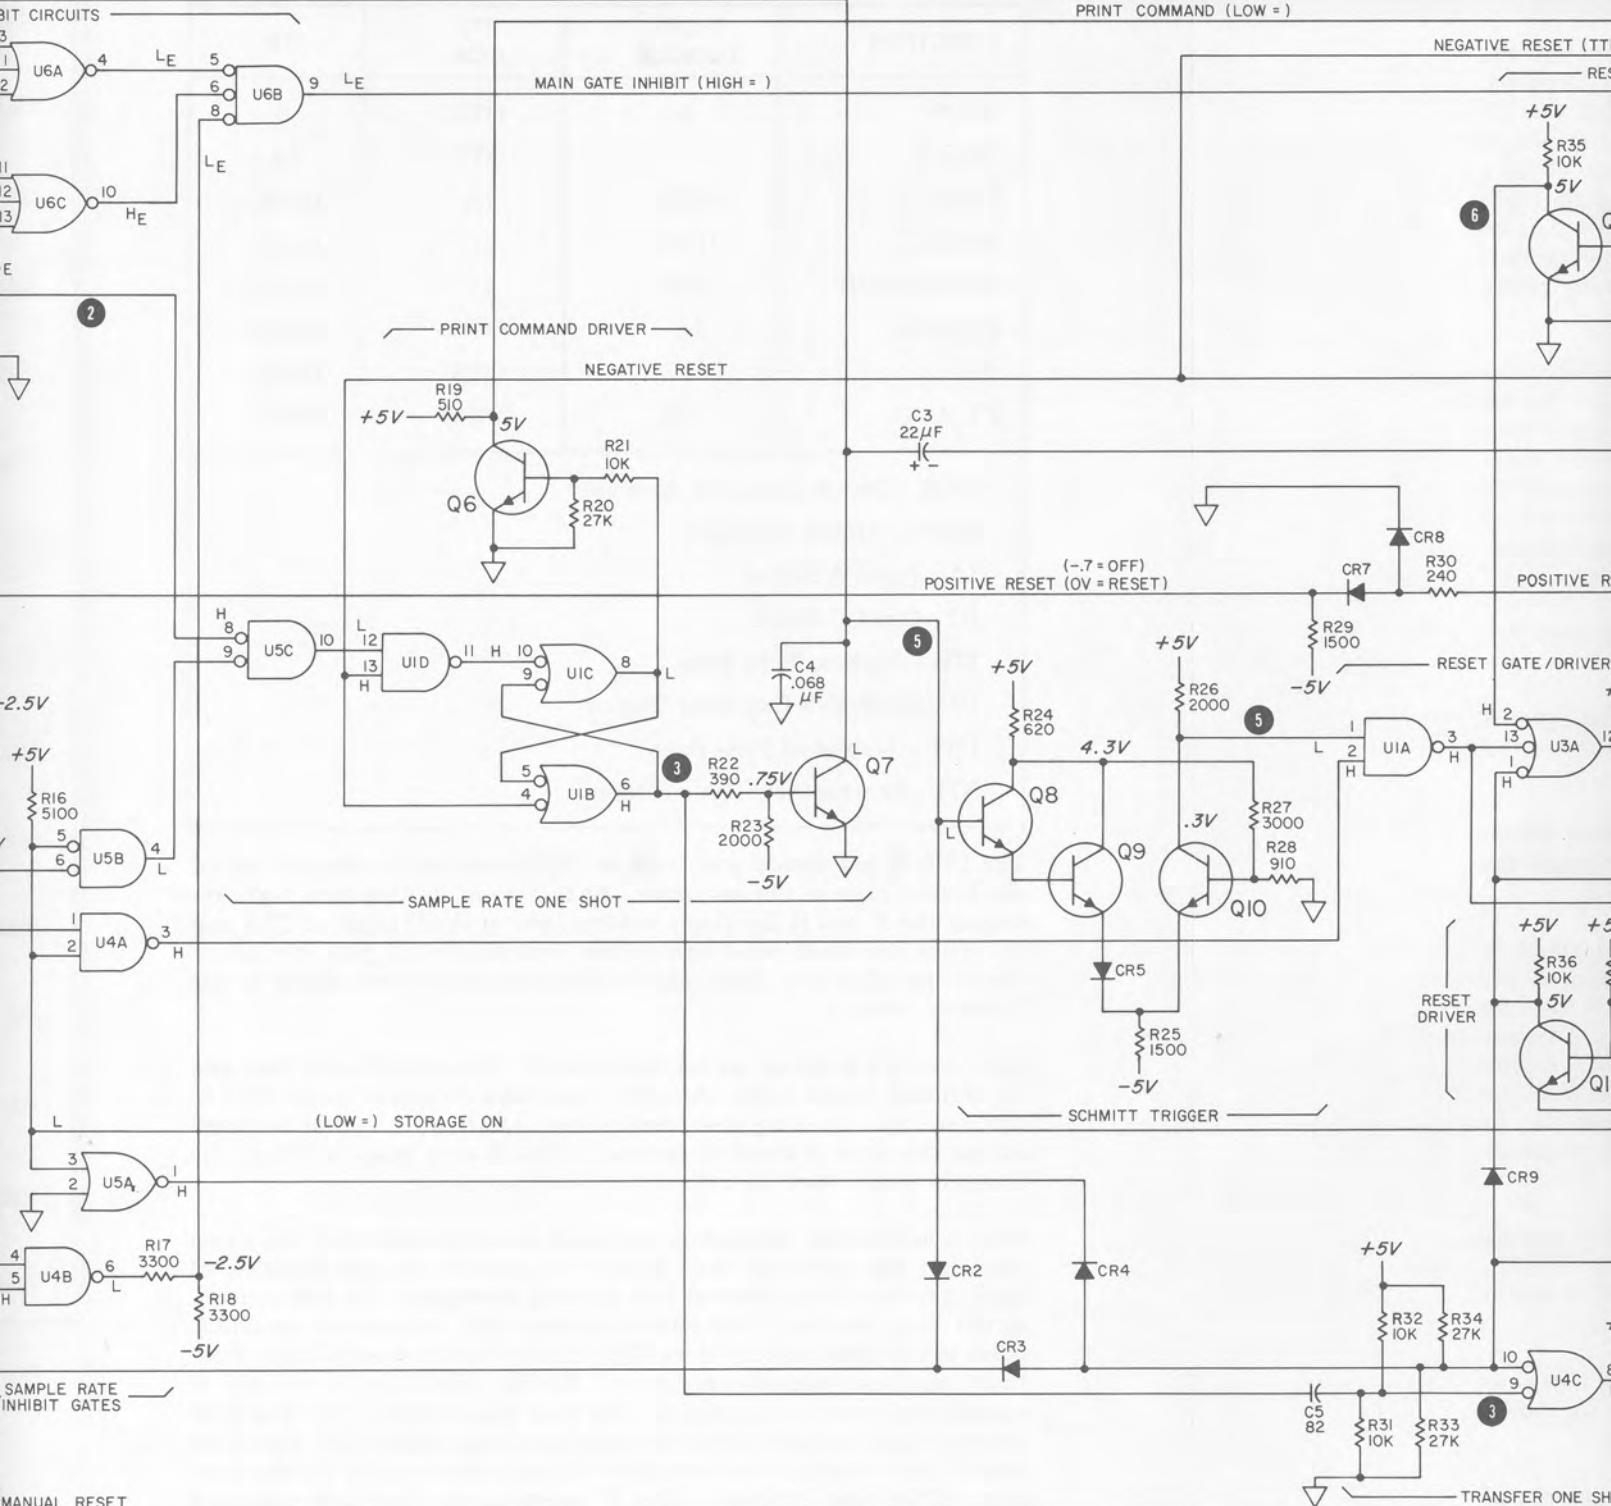

(NOTE 1) SERIES 1132


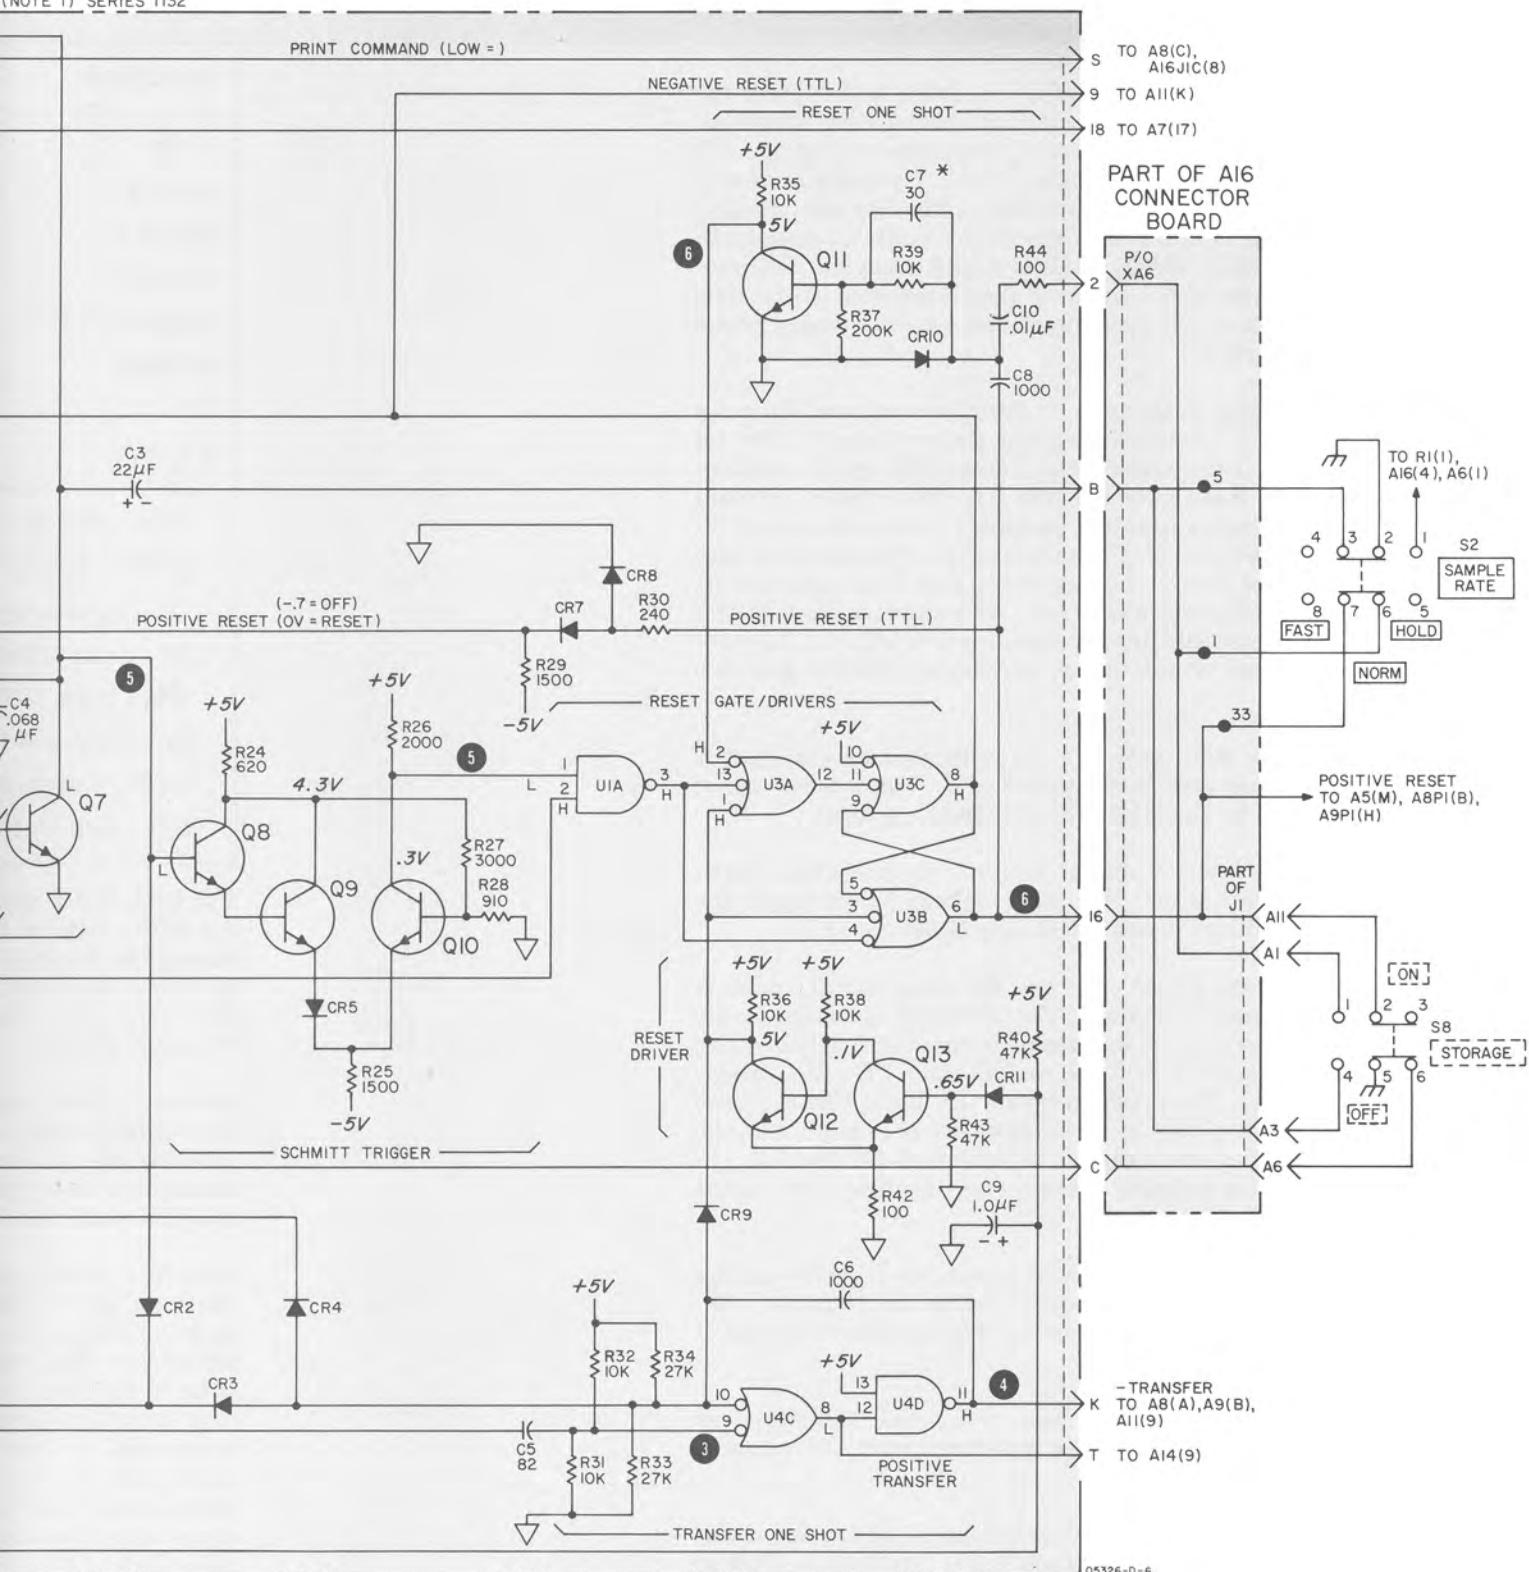


Figure 8-9. A6 Sample Rate Assembly

Model 5326/27B
Schematic Diagrams

Part of Figure 8-10. A7 Function Control Assembly

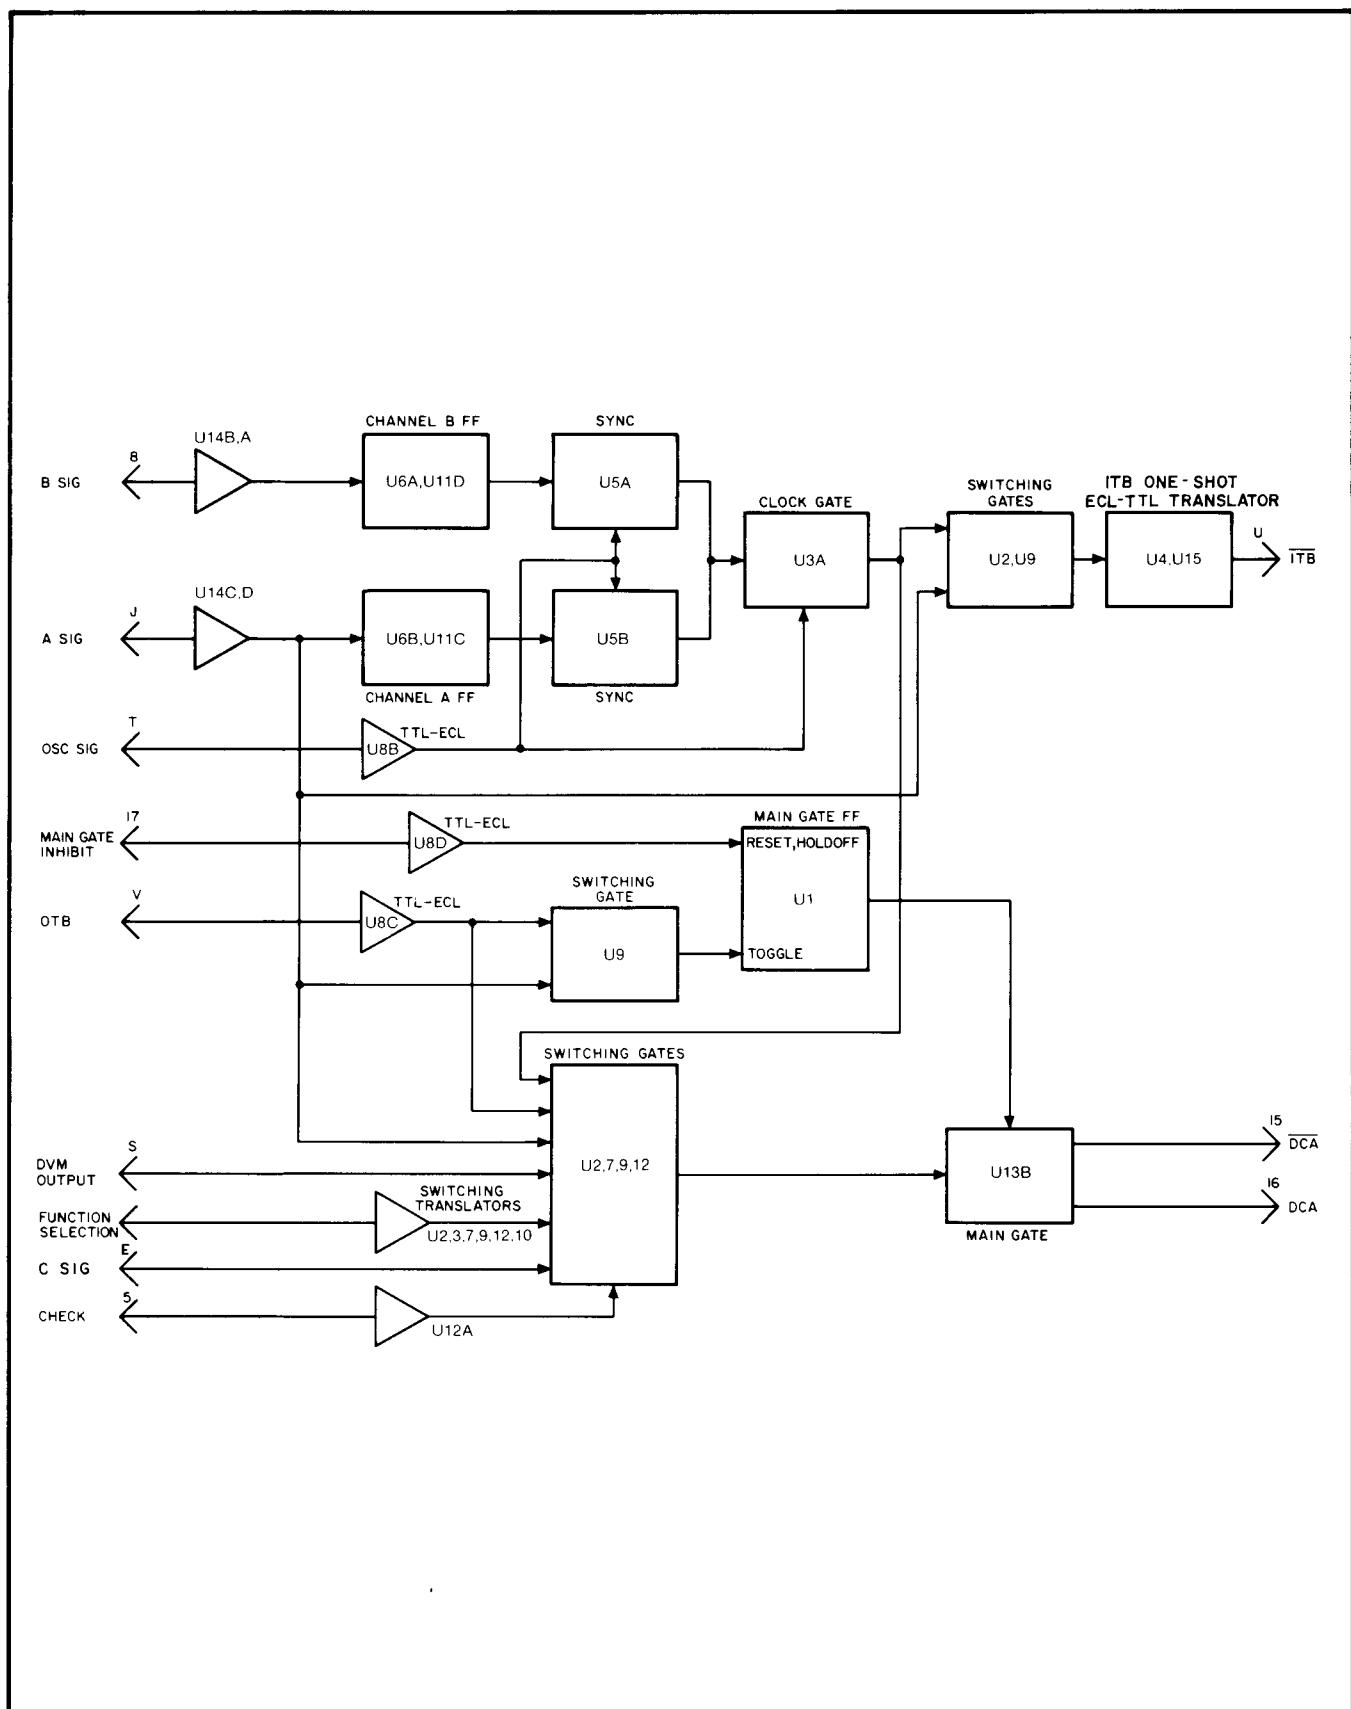

MORE DATA UNDER THIS FOLD

pin 18). The oscillator signal goes low, and is set out through the delay. When the B signal occurs, the sets U5A, closing the clock gate.

Interconnections

| TO DCA | ITB |
|--------|------|
| OTB | 0 |
| OTB | IA |
| IA | GOSC |
| IC | GOSC |
| IV | GOSC |
| OTB | GOSC |
| OTB | GOSC |
| GOSC | STI |

oly

t

al

U6(11) and waits about 50 ns for t this point, U6(10) goes high, re gows at the D input of U5A and os positive, U6(10) goes low (about d U5A and B are closed to the

an A, U5A would be set first, and could take about 150 ns for U5A to oove; so if an A signal occurred . If the B-to-a delay is>150 ns, the described above.

input synchronizers work the same d) is counted for the duration of being averaged. The first input A enables U3A to gate an oscillator e dividers are now set to zero, from

During this time, a channel B e first time interval; but this first in gate was closed. The time base to pass clock pulses for the dur intervals, the time base returns a

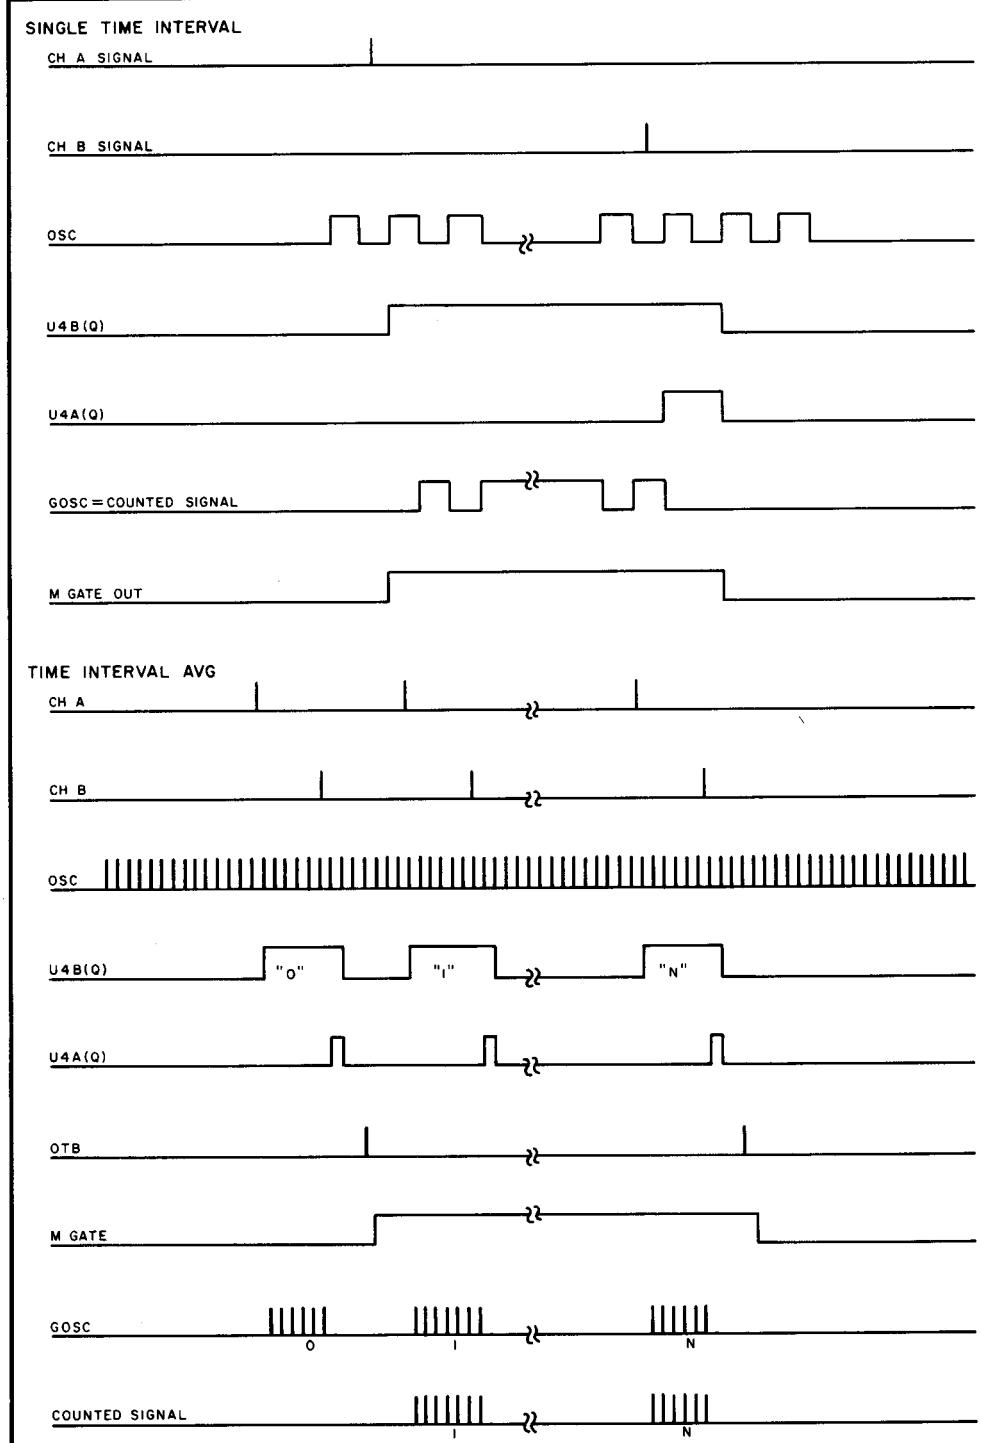


Figure 8-9
A6 SAMPLE RATE ASSEMBLY

one-shots, and trans-time base, and input counting assemblies. For each function of the

node will explain the to the other functions. Main gate inhibit (pin 17) (A). Upon the arrival of flip-flop sets, making oscillator signal (pin 9) and arms the oscillator connected to the time negative-going pulses

the 1st and Nth pulse front panel). The 1st ECL by U8 and then This opens the main counts the signal (in of the 2nd time base gate U13B and signal- returns a High MINH timer U5, and ITB one-display. MINH goes low

gged by the input A A. The counted signal switch setting.

the time base, which these pulses toggle the periods of A.

input signal, which is Q C operation is the timer U5B is held on by ion TTL/ECL trans-REQ A, FREQ C, etc) k-ohm pullups on the ifier A2 and A3. In negative 10 ns pulses

, but U1 is set contin- by the output of U5B. chronizer U5A and B

pleted, the flip-flops en reset. Two condi-

ignal, the A signal will flip-flop (see Timing oscillator occurs after ate and instructing A6

that the measurement has started (pin 18). The oscillator signal goes to the time base and is divided, returns, and is set out through the main gate to A8 for subsequent display. When the B signal occurs, the leading edge of the next clock pulse sets U5A, closing the clock gate.

Table I. Functional Interconnections

| FUNCTION | MGFF TOGGLE | TO DCA | ITB |
|-----------|-------------|--------|------|
| STOP | 0 | OTB | 0 |
| START | 1 | OTB | IA |
| FREQ A | OTB | IA | GOSC |
| FREQ C | OTB | IC | GOSC |
| DVM+RA+RB | OTB | IV | GOSC |
| PERIOD | IA | OTB | GOSC |
| T.I. | 1 | OTB | GOSC |
| T.I. AVG. | OTB | GOSC | STI |

DCA - Decade Counting Assembly

GOSC - Gated Oscillator

IA - Input A Signal

IC - Input C Signal

ITB - Input to Time Base

IV - DVM V-F Converter Output

OTB - Output of Time Base

STI - Synchronized Time Interval

The U5A \bar{Q} low signal goes back to U6(11) and waits about 50 ns for the falling edge of the oscillator. At this point, U6(10) goes high, resetting the A and B flip-flops, putting lows at the D input of U5A and B. When the clock pulse again rises positive, U6(10) goes low (about the 10 ns after the clock edge) and U5A and B are closed to the "cleared" state.

Second — if a B signal occurs before an A, U5A would be set first, and no counting would occur. Also, it would take about 150 ns for U5A to complete the resetting described above; so if an A signal occurred during this time, it would be ignored. If the B-to-a delay is >150 ns, the A signal would start the interval as described above.

With time interval averaging, the input synchronizers work the same way, but the oscillator (not divided) is counted for the duration of each individual time interval that is being averaged. The first input A signal sets flip-flop U5B, which enables U3A to gate an oscillator pulse to the time base dividers. The dividers are now set to zero, from their previous reset-to-nine state. During this time, a channel B signal was received to complete the first time interval; but this first interval is not counted, since the main gate was closed. The time base output pulse enables the main gate to pass clock pulses for the duration of the time interval. After N intervals, the time base returns a pulse to close the main gate.

A7 FUNCTION CONTROL OPERATION

This assembly contains the gating, flip-flops, one-shots, and translators necessary to interconnect the oscillator, time base, and input channel signals to the time base and decade counting assemblies. Table 1 lists the functional interconnections for each function of the counter.

An example of the operation in the FREQ A mode will explain the typical circuit operation. This will be expanded to the other functions. Assuming the start of a new measurement, main gate inhibit (pin 17) has just gone low (at the end of the display time). Upon the arrival of the first subsequent channel A input, channel A flip-flop sets, making U5B(9) High. Upon the next leading edge of the oscillator signal (pin T, TTL levels; U8B(4) ECL levels), U6B sets and arms the oscillator gate U3A. The gated oscillator signal is then connected to the time base input one-shot U4, which generates 50 ns, negative-going pulses to the time base input (pin U).

The time base will return a pulse upon receipt of the 1st and Nth pulse delivered from pin U ($N = \text{multiplier setting on front panel}$). The 1st pulse arriving at pin V is translated from TTL to ECL by U8 and then goes on to toggle (set) main gate flip-flop U1. This opens the main gate (U13B), and the decade counting assembly counts the signal (in this case, input A — see Table I). Upon the arrival of the 2nd time base output pulse, U1 toggles closed, shutting main gate U13B and signaling A6 to start the display cycle (pin 18). A6 returns a High MINH (pin 17) and the main gate flip-flop U1, synchronizer U5, and ITB one-shot U4 are locked closed at the end of the display. MINH goes low and the cycle repeats.

In the period mode, the main gate F-F U1 is toggled by the input A signal so that it is set for exactly one period of A. The counted signal is the oscillator divided by the MULTIPLIER switch setting.

In period average, the input A signal goes to the time base, which generates a pulse on the 1st and Nth pulse. These pulses toggle the main gate, and the oscillator is counted during N periods of A.

In START, the main gate is held open and the input signal, which is scaled by the time base, is counted. The FREQ C operation is the same as FREQ A, except that the input synchronizer U5B is held on by U10. IC's U2, 3, 7, 8, 9, 10, and 12 are combination TTL/ECL translators and data switches. The function inputs (FREQ A, FREQ C, etc) are TTL low true and are pulled up by internal 10k-ohm pullups on the translators. U8(3) is the check signal to Amplifier A2 and A3. In normal it is low; while in check, it is high with negative 10 ns pulses at 10 MHz.

In time interval, the operation is similar to period, but U1 is set continuously. MGATE OUT (pin 18) is now controlled by the output of U5B. The following explanation describes how the synchronizer U5A and B works in a time interval mode.

Assuming a display cycle has just been completed, the flip-flops formed by U11 and U6 and U5 sections have been reset. Two conditions can occur.

First — if a channel A signal occurs before a B signal, the A signal will set the channel A flip-flop before the B sets the B flip-flop (see Timing Diagram). When the first leading edge of the oscillator occurs after the A F-F is set, U5B is set, opening the clock gate and instructing A6

that the measure to the time base main gate to A& leading edge of


| FUNCTION |
|--------------|
| STOP |
| START |
| FREQ A |
| FREQ C |
| DVM+RA+RB |
| PERIOD |
| T.I. |
| T.I. AVG. |
| DCA - Deca |
| GOSC - Gat |
| IA - Input A |
| IC - Input C |
| ITB - Input |
| IV - DVM V |
| OTB - Outp |
| STI - Synch |

The U5A \bar{Q} low, the falling edge setting the A and B. When the clock the 10 ns after “cleared” state.

Second — if a B signal no counting would complete the register during this time. A signal would s


With time interval way, but the oscillator each individual oscillator signal sets flip-flop pulse to the time base their previous oscillator signal was received. If the interval is not completed, the output pulse enables the operation of the time base flip-flop pulse to close the

FREQ A Flow Diagram
Part of Figure 8-10. A7 Function Control Assembly

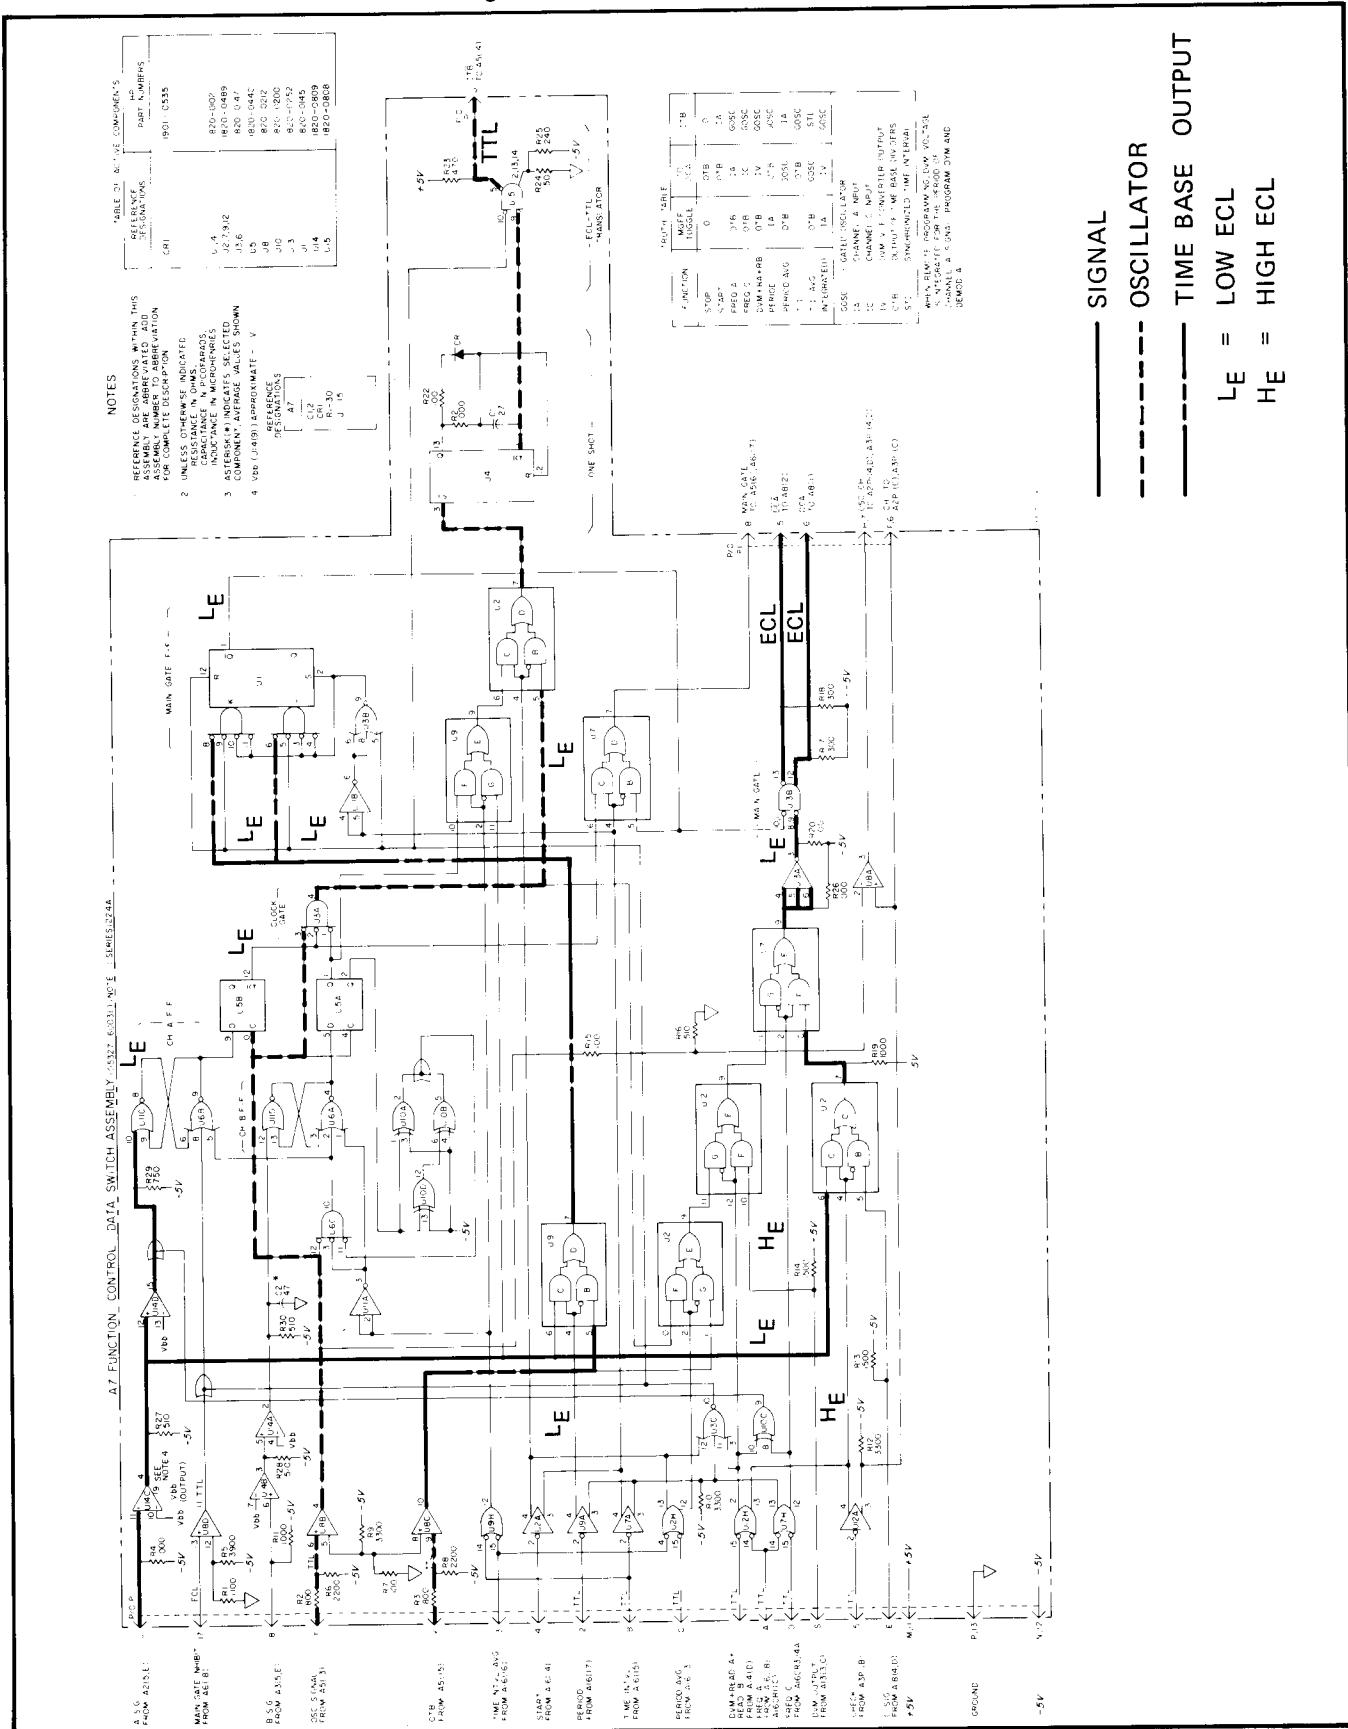


Model 5326/27B
Schematic Diagrams

Period Flow Diagram
Part of Figure 8-10. A7 Function Control Assembly

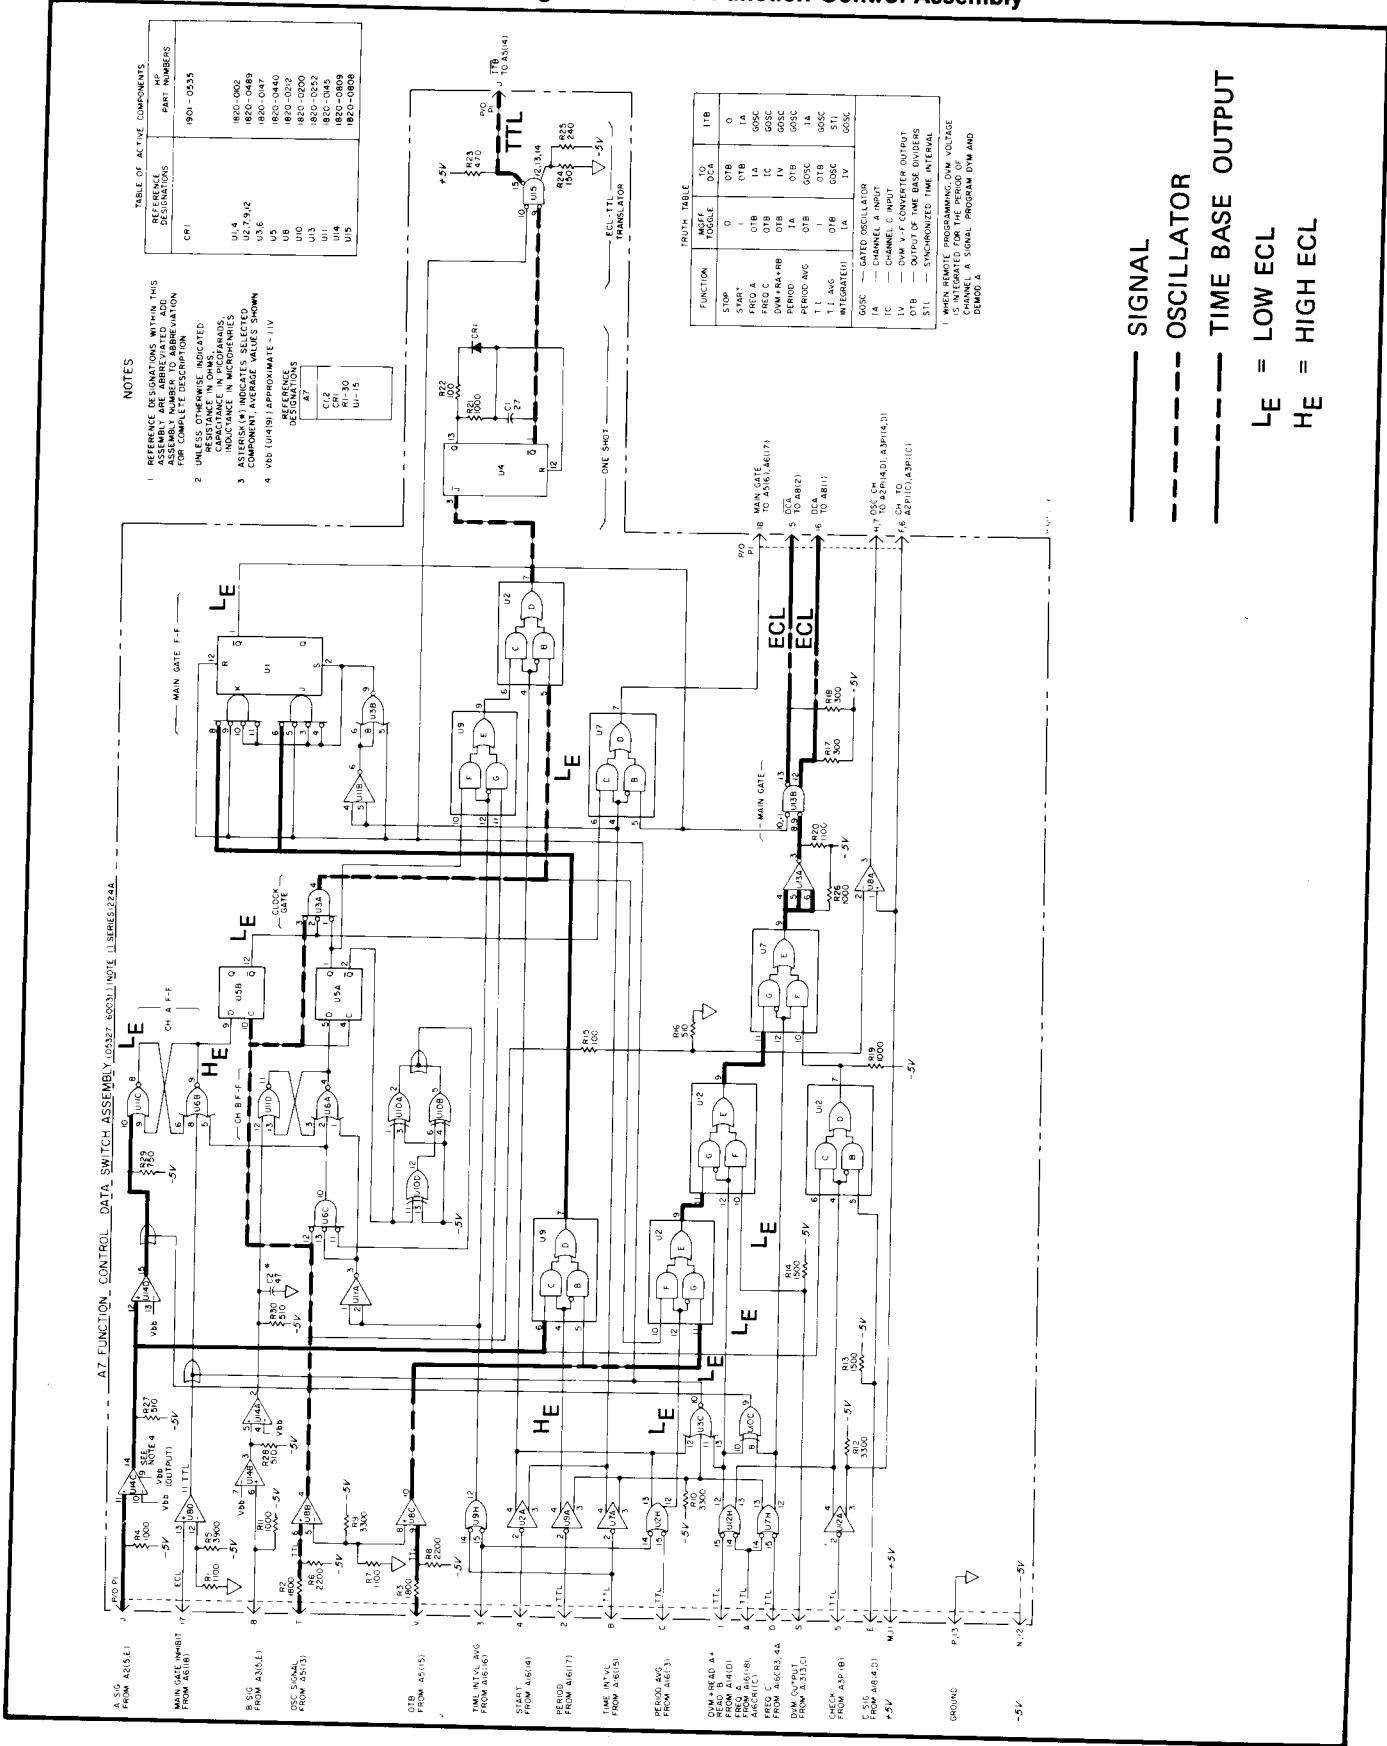


Period Average Flow Diagram

Part of Figure 8-10. A7 Function Control Assembly

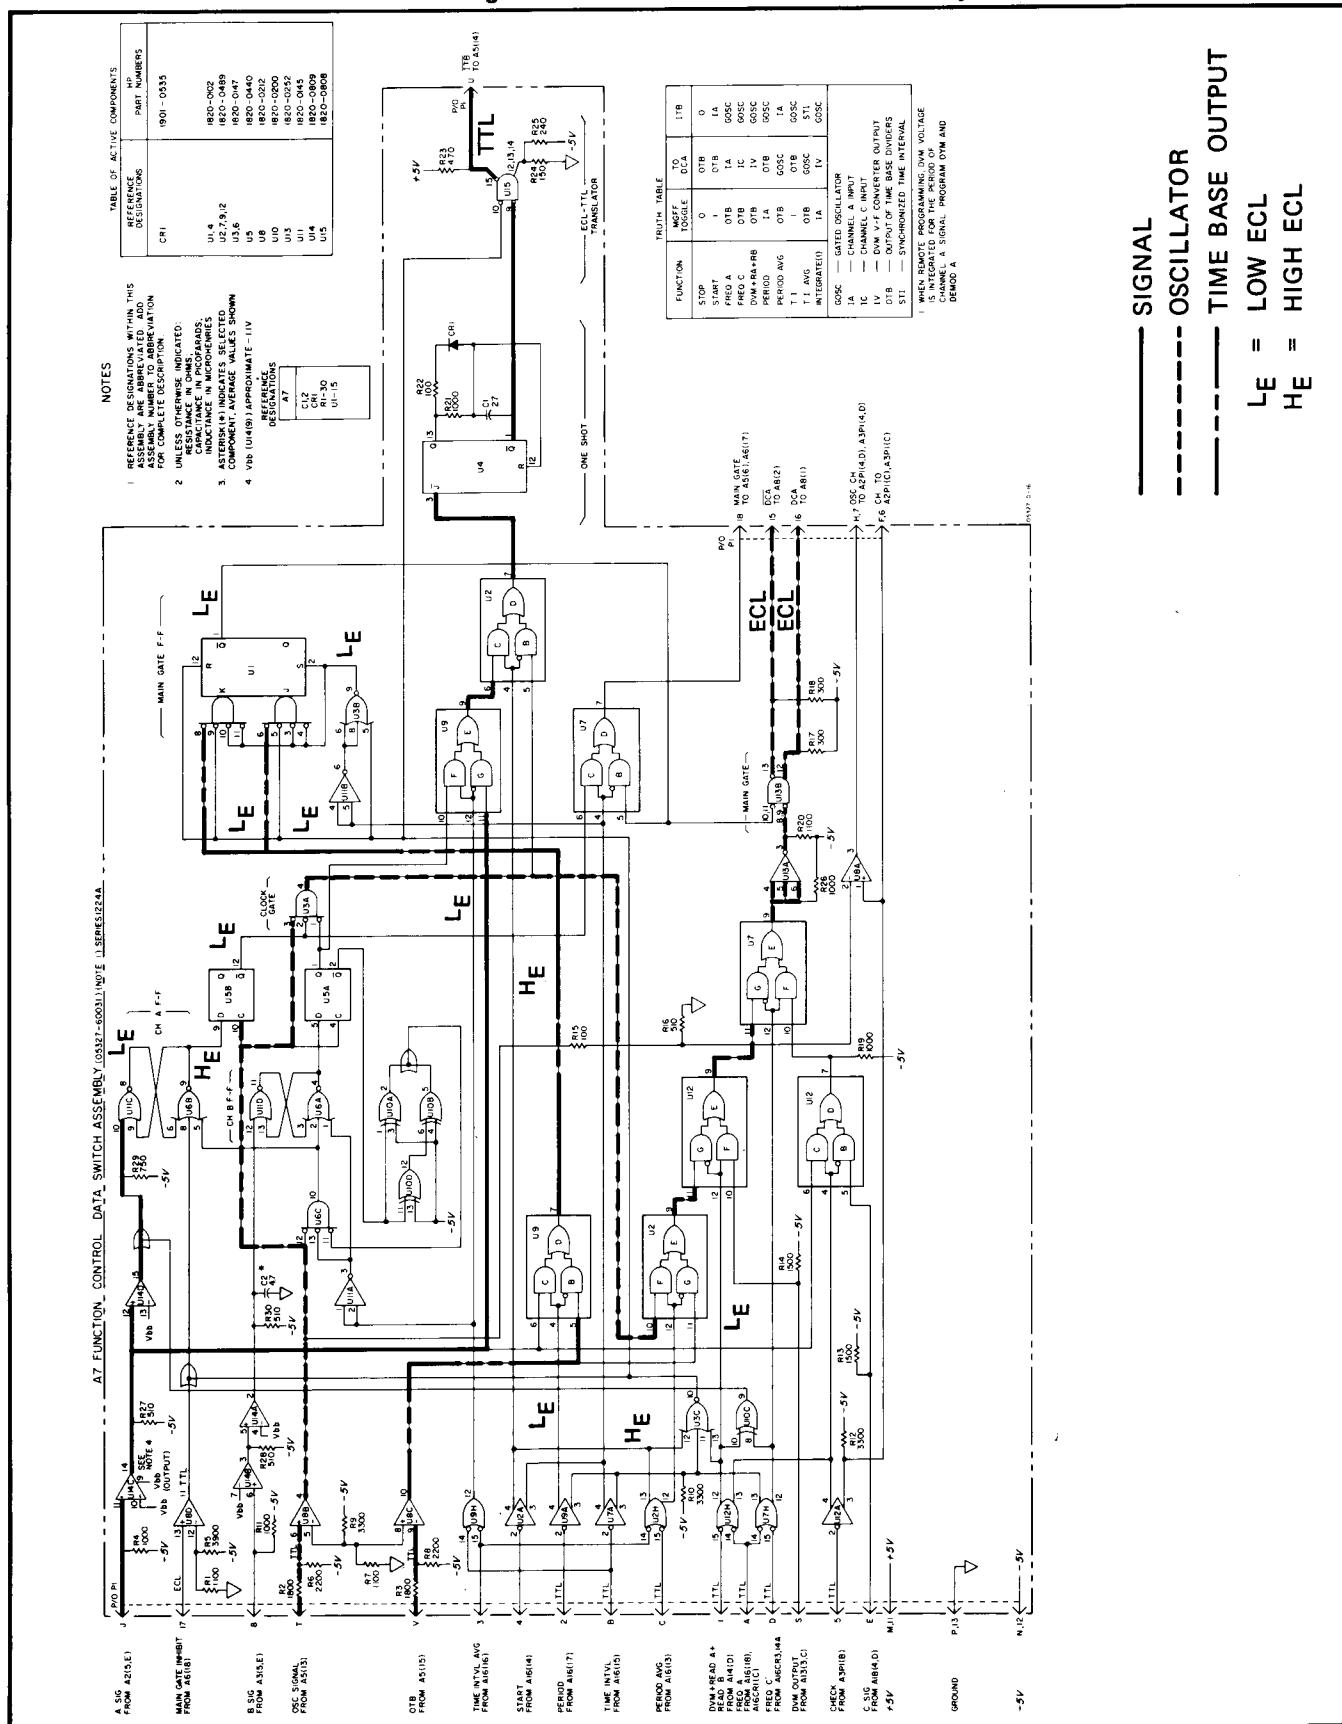


Model 5326/27B
Schematic Diagrams

Time Interval Flow Diagram
Part of Figure 8-10. A7 Function Control Assembly

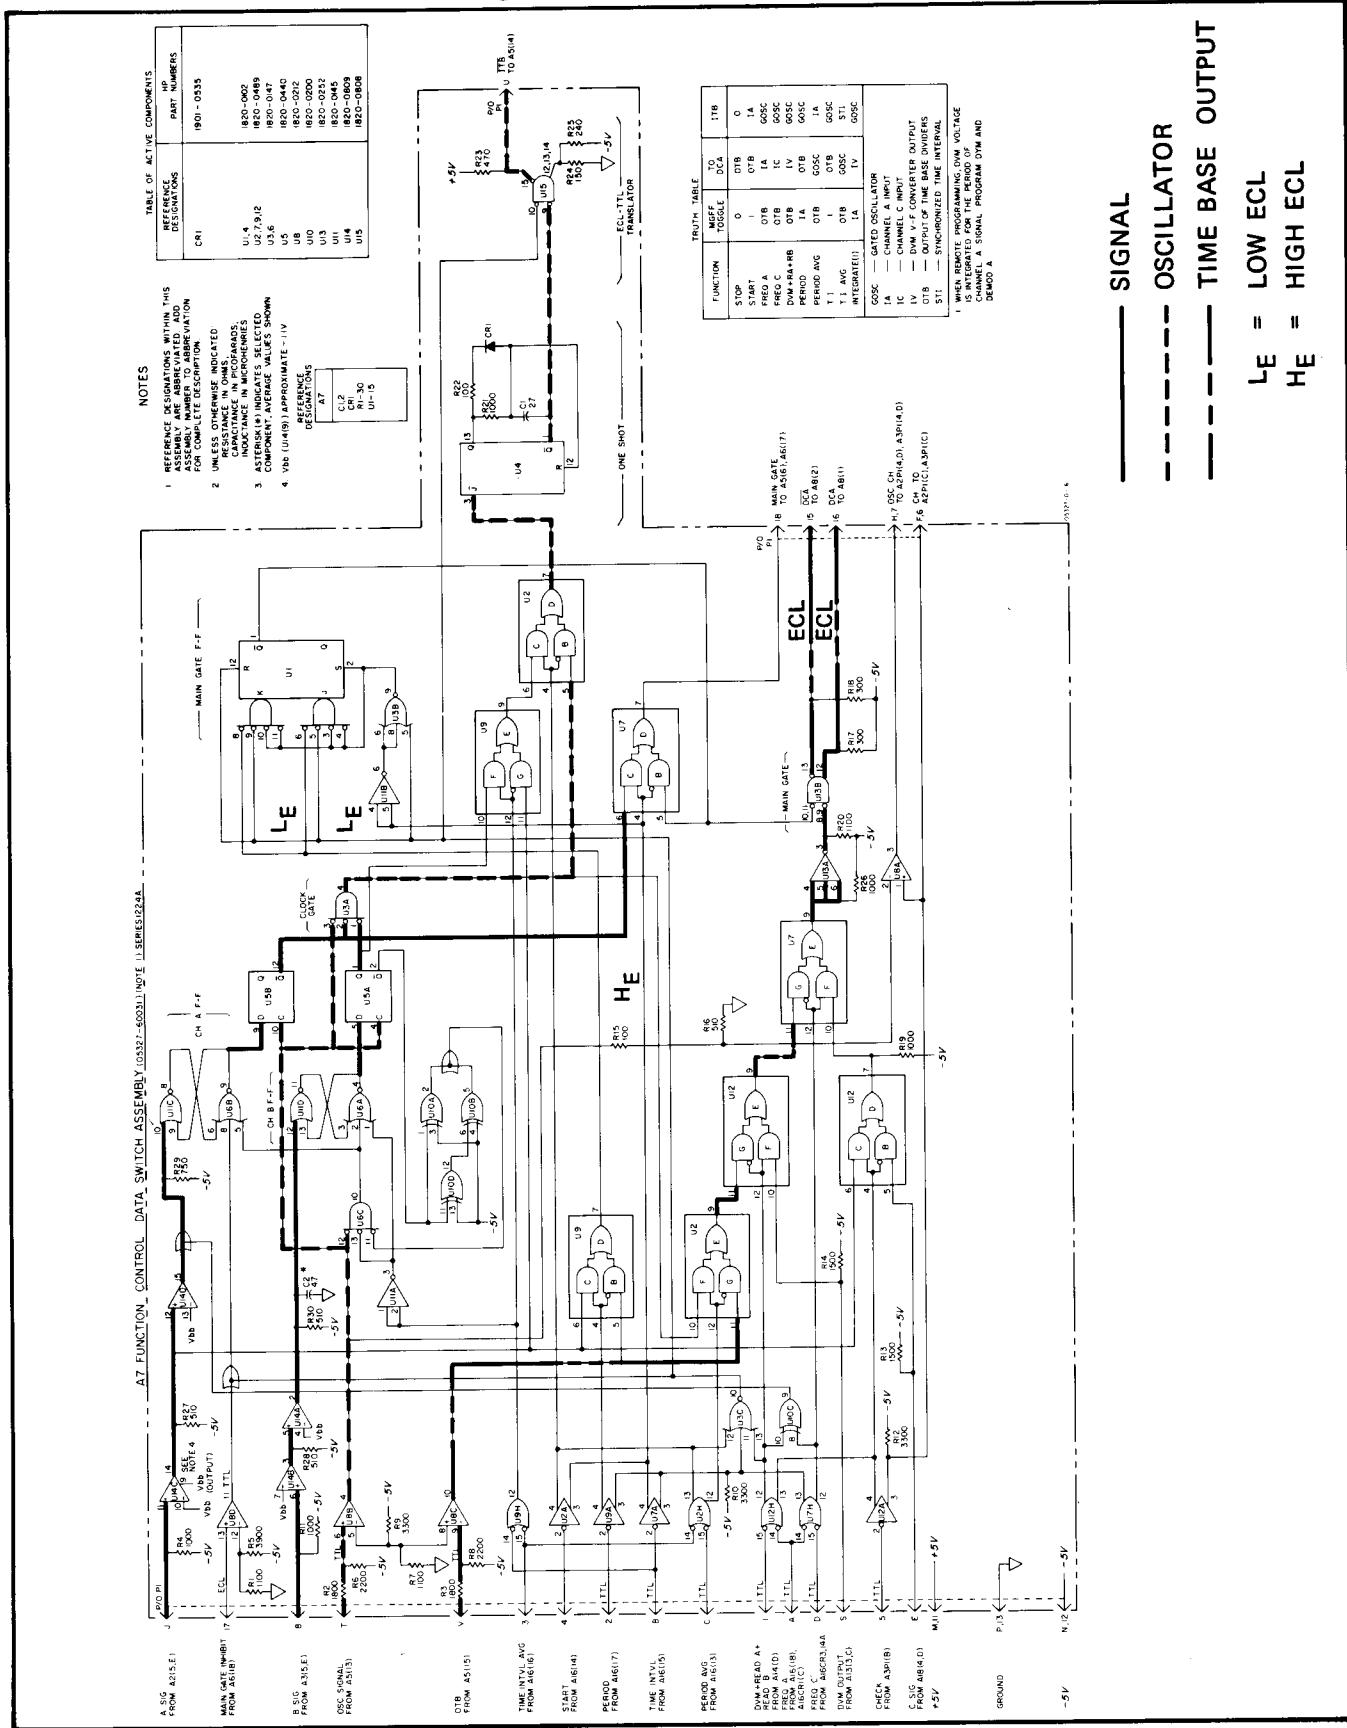

Time Interval Average Flow Diagram


Part of Figure 8-10. A7 Function Control Assembly

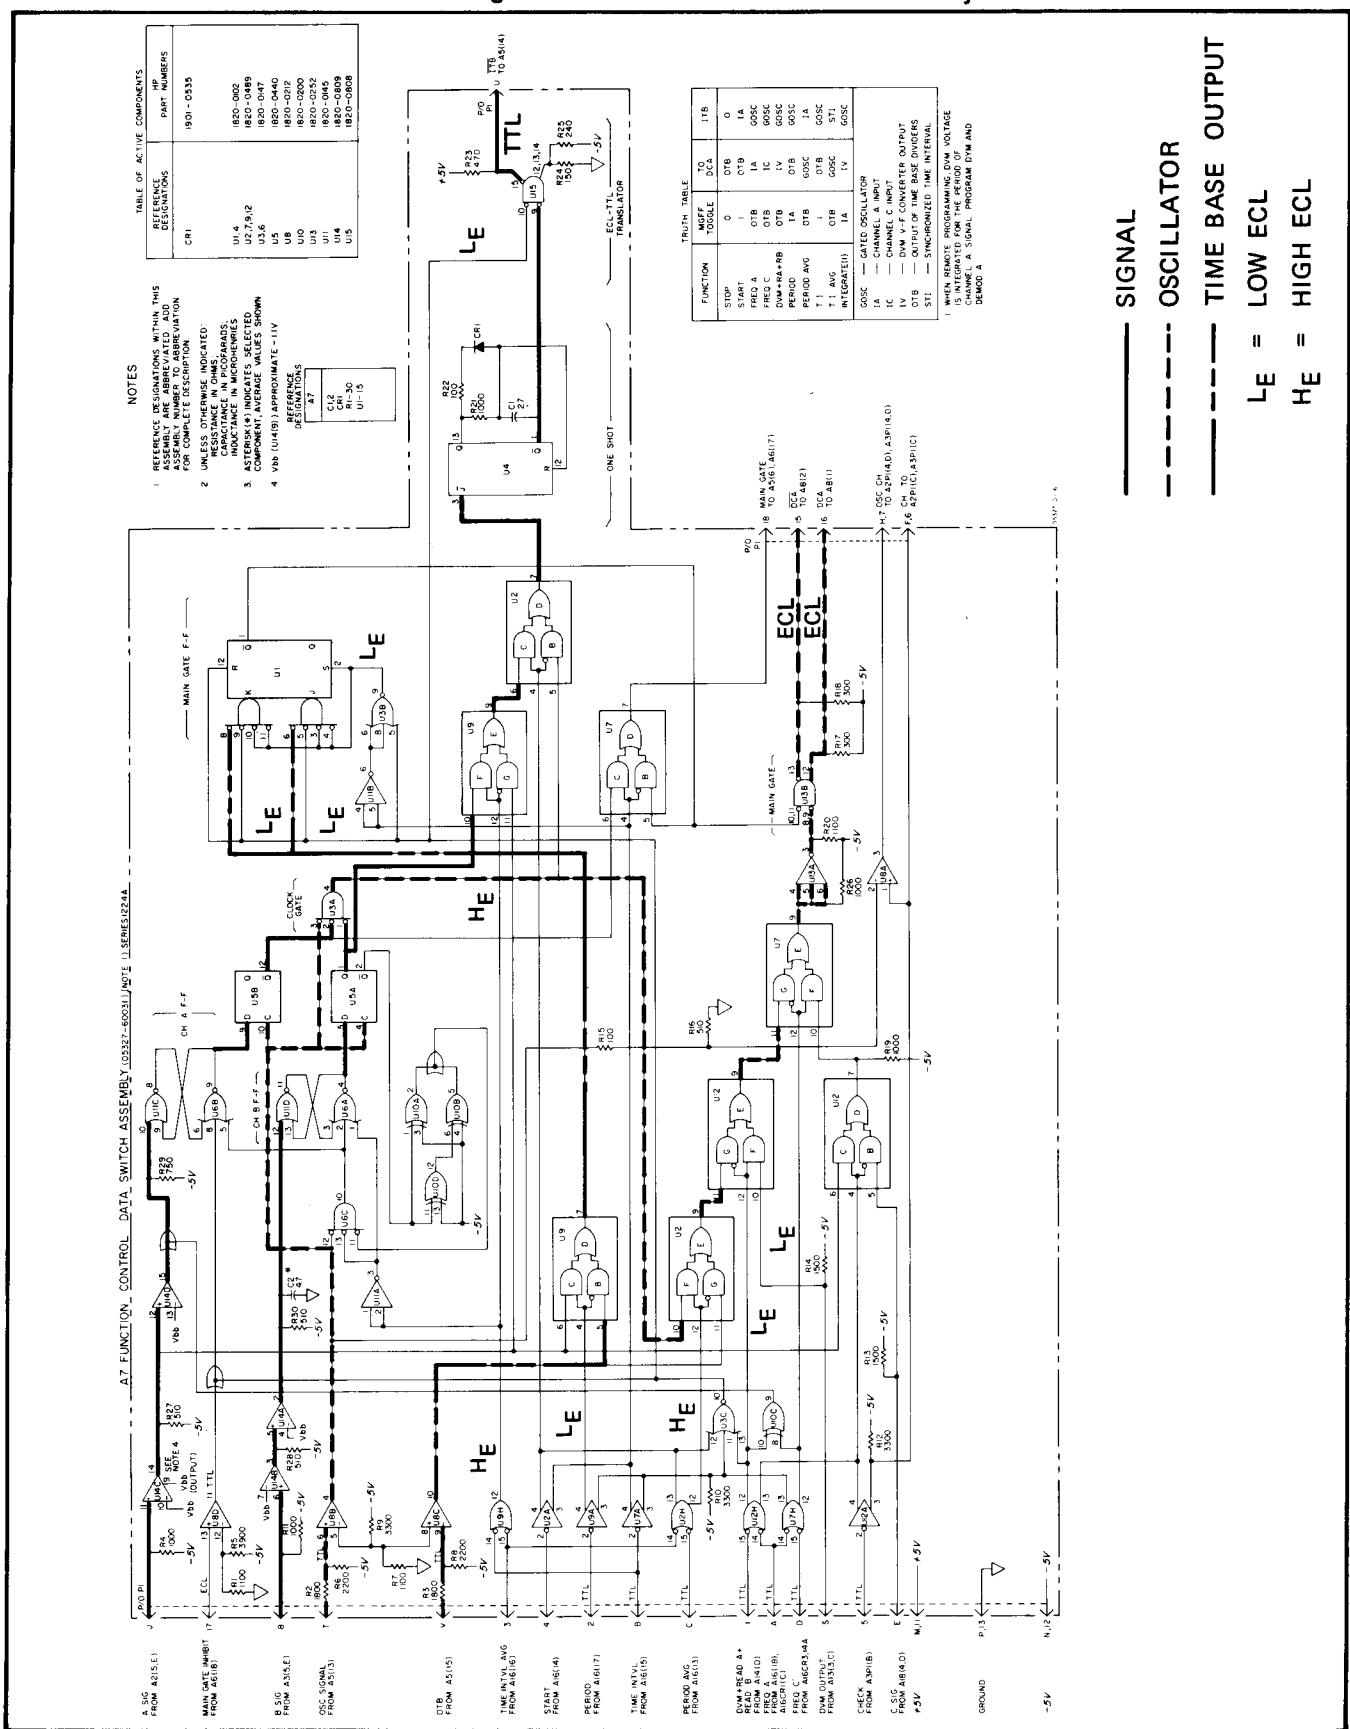

Model 5326/27B Schematic Diagrams

DVM Flow Diagram

Part of Figure 8-10. A7 Function Control Assembly

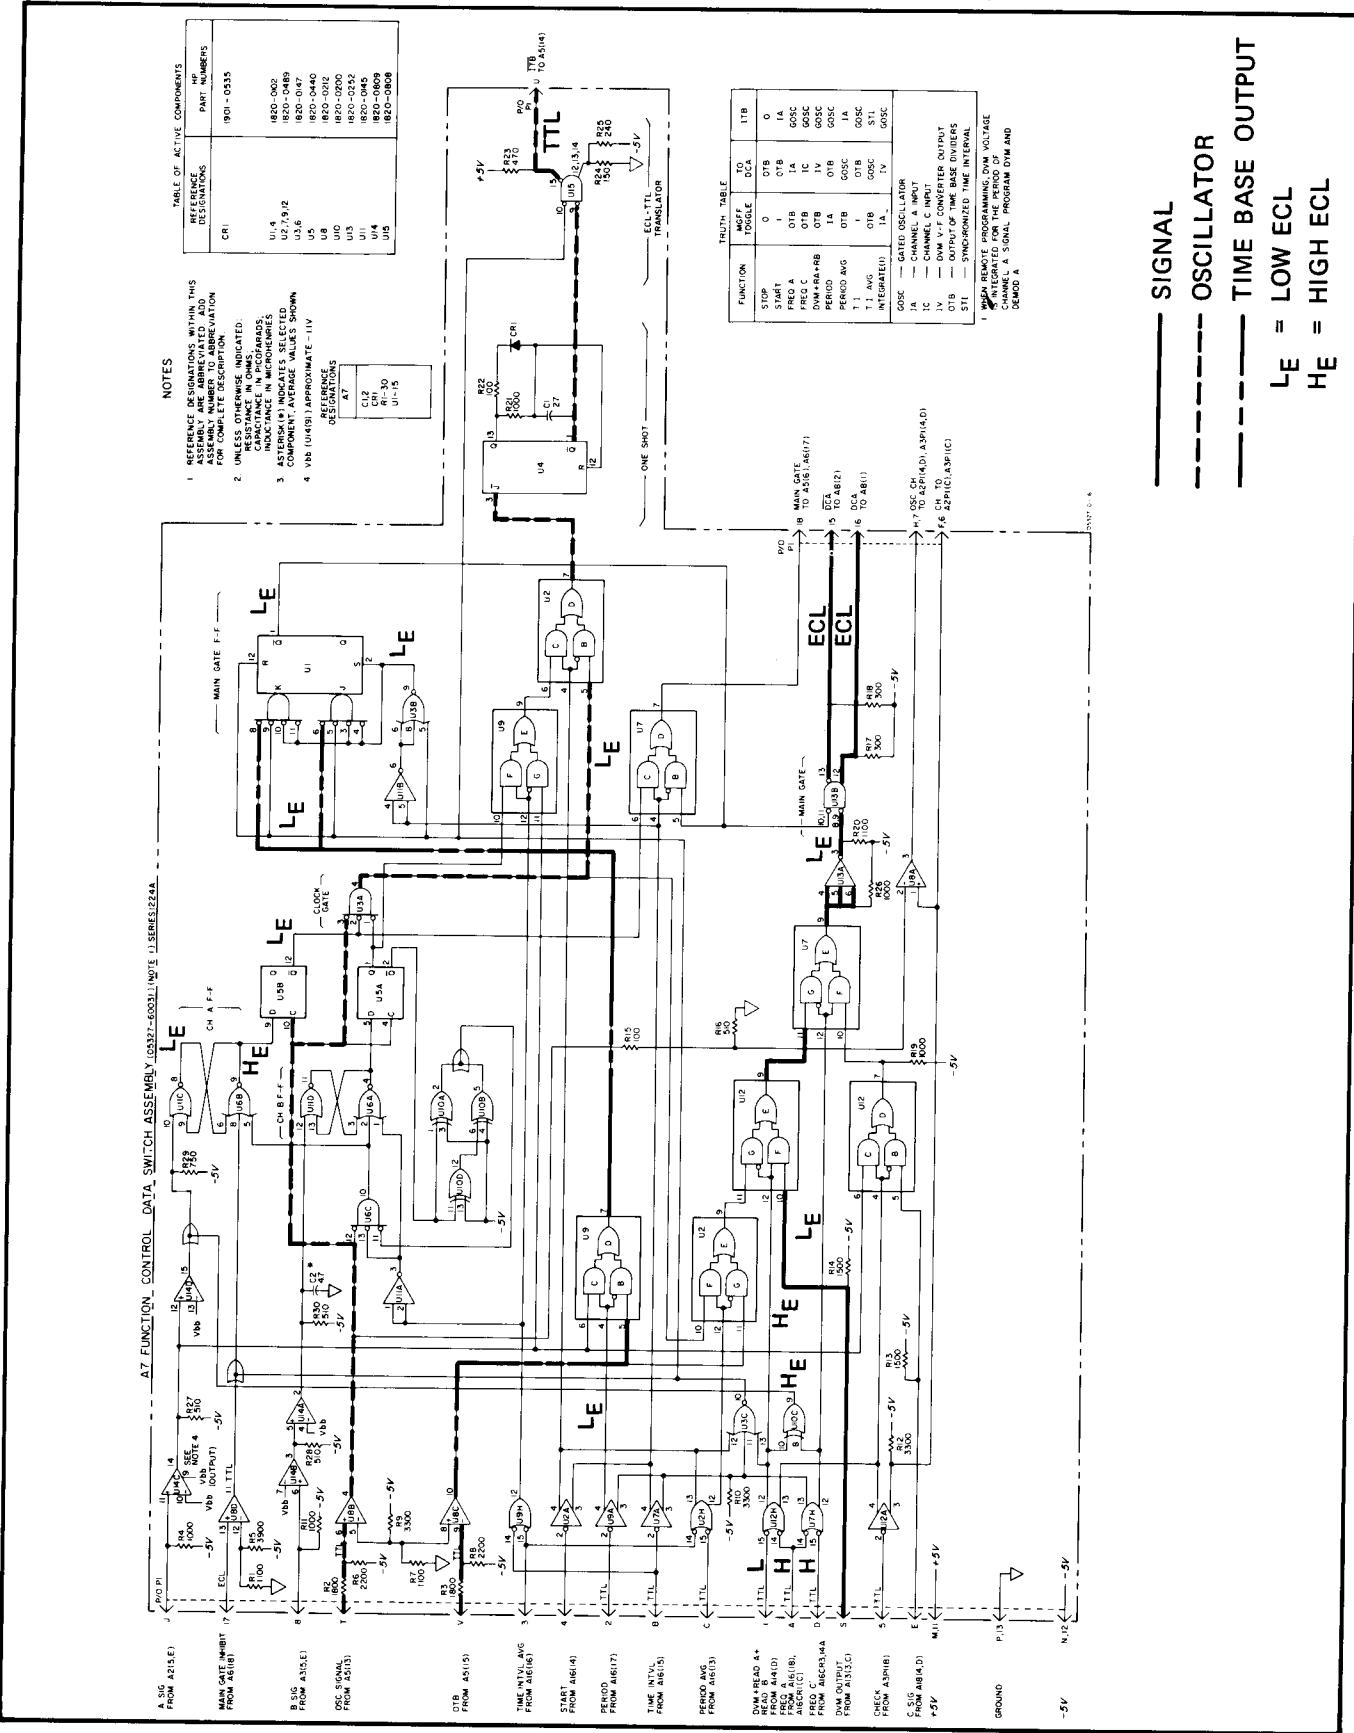

Decimal Point and Blanking

Before testing the decimal point and blanking circuitry, set the CHK/SEP/COM switch to SEP and disconnect the input signal.

DECIMAL POINT. To check the decimal point circuitry, set FUNCTION switch to PERIOD AVG and position the TIME BASE switch to pull the required D.P. line Low.

| LINE | MULTIPLIER POSITION | DRIVER |
|-------|---------------------|--------|
| D.P.0 | 1 | Q8 |
| D.P.1 | 10 | Q7 |
| D.P.2 | 10^2 | Q6 |
| D.P.3 | 10^6 | Q5 |
| D.P.4 | 10^7 | Q4 |
| D.P.5 | 10^8 | Q3 |

BLANKING. To check the blanking circuitry, set the FUNCTION switch to PERIOD AVG and MULTIPLIER switch to 1. All digits, except the first one, should now be blanked. If another digit is lit, check that line at A8J1 for a High level, which indicates a problem on that line.

Figure 8-10
A7 FUNCTION CONTROL ASSEMBLY

A8 DISPLAY SUPPORT OPERATION

The display support assembly A8 serves to interconnect the display assembly A9 with the interconnect assembly A16. In addition, A8 contains a high-speed decade counter, decimal point drivers, and blanking (logic) circuits.

The high-speed decade consists of four JK flip-flops U3 through U6. The line receiver, Q2 and Q9, serves to reduce noise levels on the signal from A7 prior to driving U3(6, 9). U3 divides by two and the combination of U4 through U6 divides by five. The decade supplies BCD outputs to A9 via J1(5, 4, 2, 3) for the 10^0 display tube. The D output is also used as the carry output to the next decade counter on A9. Q1 translates the positive TTL reset signal to ECL levels to reset the high-speed decade to zero.

Decimal point drivers Q3 through Q8 work in conjunction with logic circuits on A11 to light the proper decimal points. R15 and R17 provide operating bias for Q3 through Q8. R19, R20, and R23 are current limiters. R2 and R3 provide 87.5 volts pre-bias for the OFF decimal points. R5 through R10 connect the off decimals to the pre-bias voltage to eliminate background glow.

As an example of operation, when a ground is received at P1(S) from A11, Q5 conducts. With Q5 on, decimal point enable line 3 (DP3) is pulled to ground to light the decimal point on A9DS4(10^3). Also with P1(S) low, U1D(11) is high to unblank A9 U4. When U1D(11) goes high, U1B(6) and U1A(3) are also high to unblank A9U3 and U2. This unblanks A9DS4, DS3, and DS2. DS5 and DS6 remain blanked. DS1 is never blanked, and DS7 and DS8 (Option 001) will always be blanked.

CR2 and CR3 are included for use with the digital recorder Option 003. When overflow occurs, P1(M) and J1(15) go low. CR2 and CR3 cause J1(14 and R) to also go low. When J1(15, 14, R) are low, the recorder will print a zero on the annunciator line. R21 and R24 are pull-up resistors.

A8 TROUBLESHOOTING

High Speed Decade

If a problem in the High-Speed Decade is not readily apparent when checking for the correct waveforms, a step-through method may be preferable. Set the counter as follows:

1. MULTIPLIER switch to 10^7 .
2. CHK/SEP/COM switch to CHK.
3. FUNCTION switch to START.
4. Press RESET.

The High-Speed Decade consists of a weighted decade counter driving a display. A table below shows the FUNCTION settings for each digit. (refer to the table for their levels)

U4 pin 3 and U4 pin 4

| DISPLAY |
|---------|
| 1 |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |

reconnect the display
A16. In addition,
decimal point drivers,

blocks U3 through U6.
noise levels on the
vides by two and the
The decade supplies
the 10^0 display tube.
to the next decade
reset signal to ECL

onjunction with logic
points. R15 and R17
R19, R20, and R23
.5 volts pre-bias for
nect the off decimals
ow.

is received at P1(S)
point enable line 3
point on A9DS4(10^3).
lank A9 U4. When
also high to unblank
DS2. DS5 and DS6
and DS7 and DS8


the digital recorder
and J1(15) go low.
low. When J1(15),
on the annunciator


not readily apparent
step-through method

The High-Speed Decade has four output lines that are binary weighted DCBA . Release the RESET button and note the counter's display. A typical problem is as follows: The display counts 1....2....3....0....1....2....3....0. When the display reads "0," set the FUNCTION switch to STOP and check the C line for a Low (refer to the table below). Check the input lines of the IC, since their levels depend on the state of other IC's in the circuit (note U4 pin 3 and U6 pin 13). The levels given below are ECL.

| | A | B | C | D |
|---------|---------|-------|-------|-------|
| DISPLAY | U3(13) | U4(1) | U5(1) | U6(1) |
| 1 | L | H | H | H |
| 2 | H | L | H | H |
| 3 | L | L | H | H |
| 4 | H | H | L | H |
| 5 | L | H | L | H |
| 6 | H | L | L | H |
| 7 | L | L | L | H |
| 8 | H | H | H | L |
| 9 | L | H | H | L |
| 10 | H | H | H | H |
| 11 | REPEATS | | | |

A7 FUNCTION CONTROL DATA SWITCH ASSEMBLY (05327-60031) (NOTE 1)

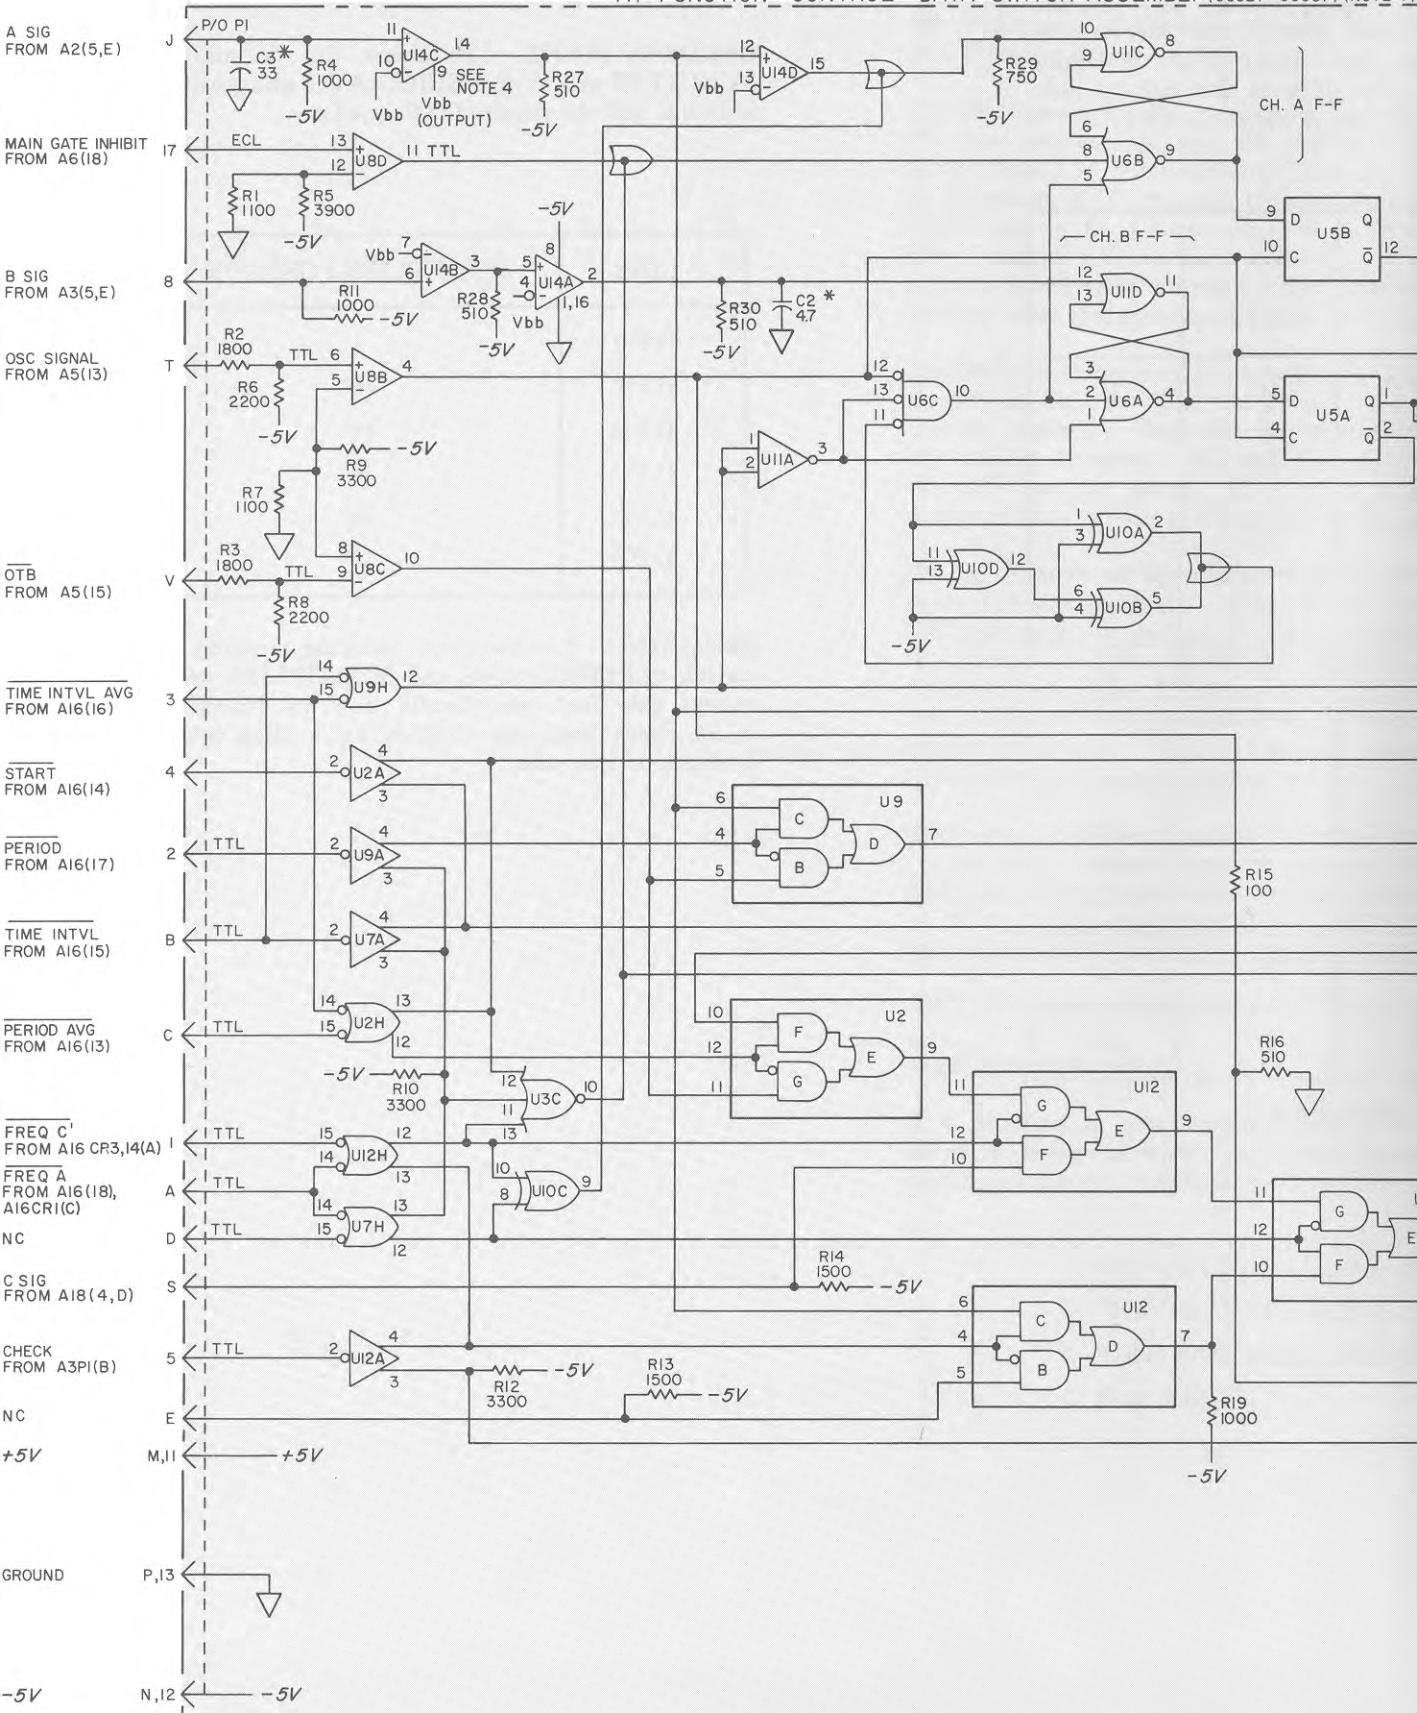

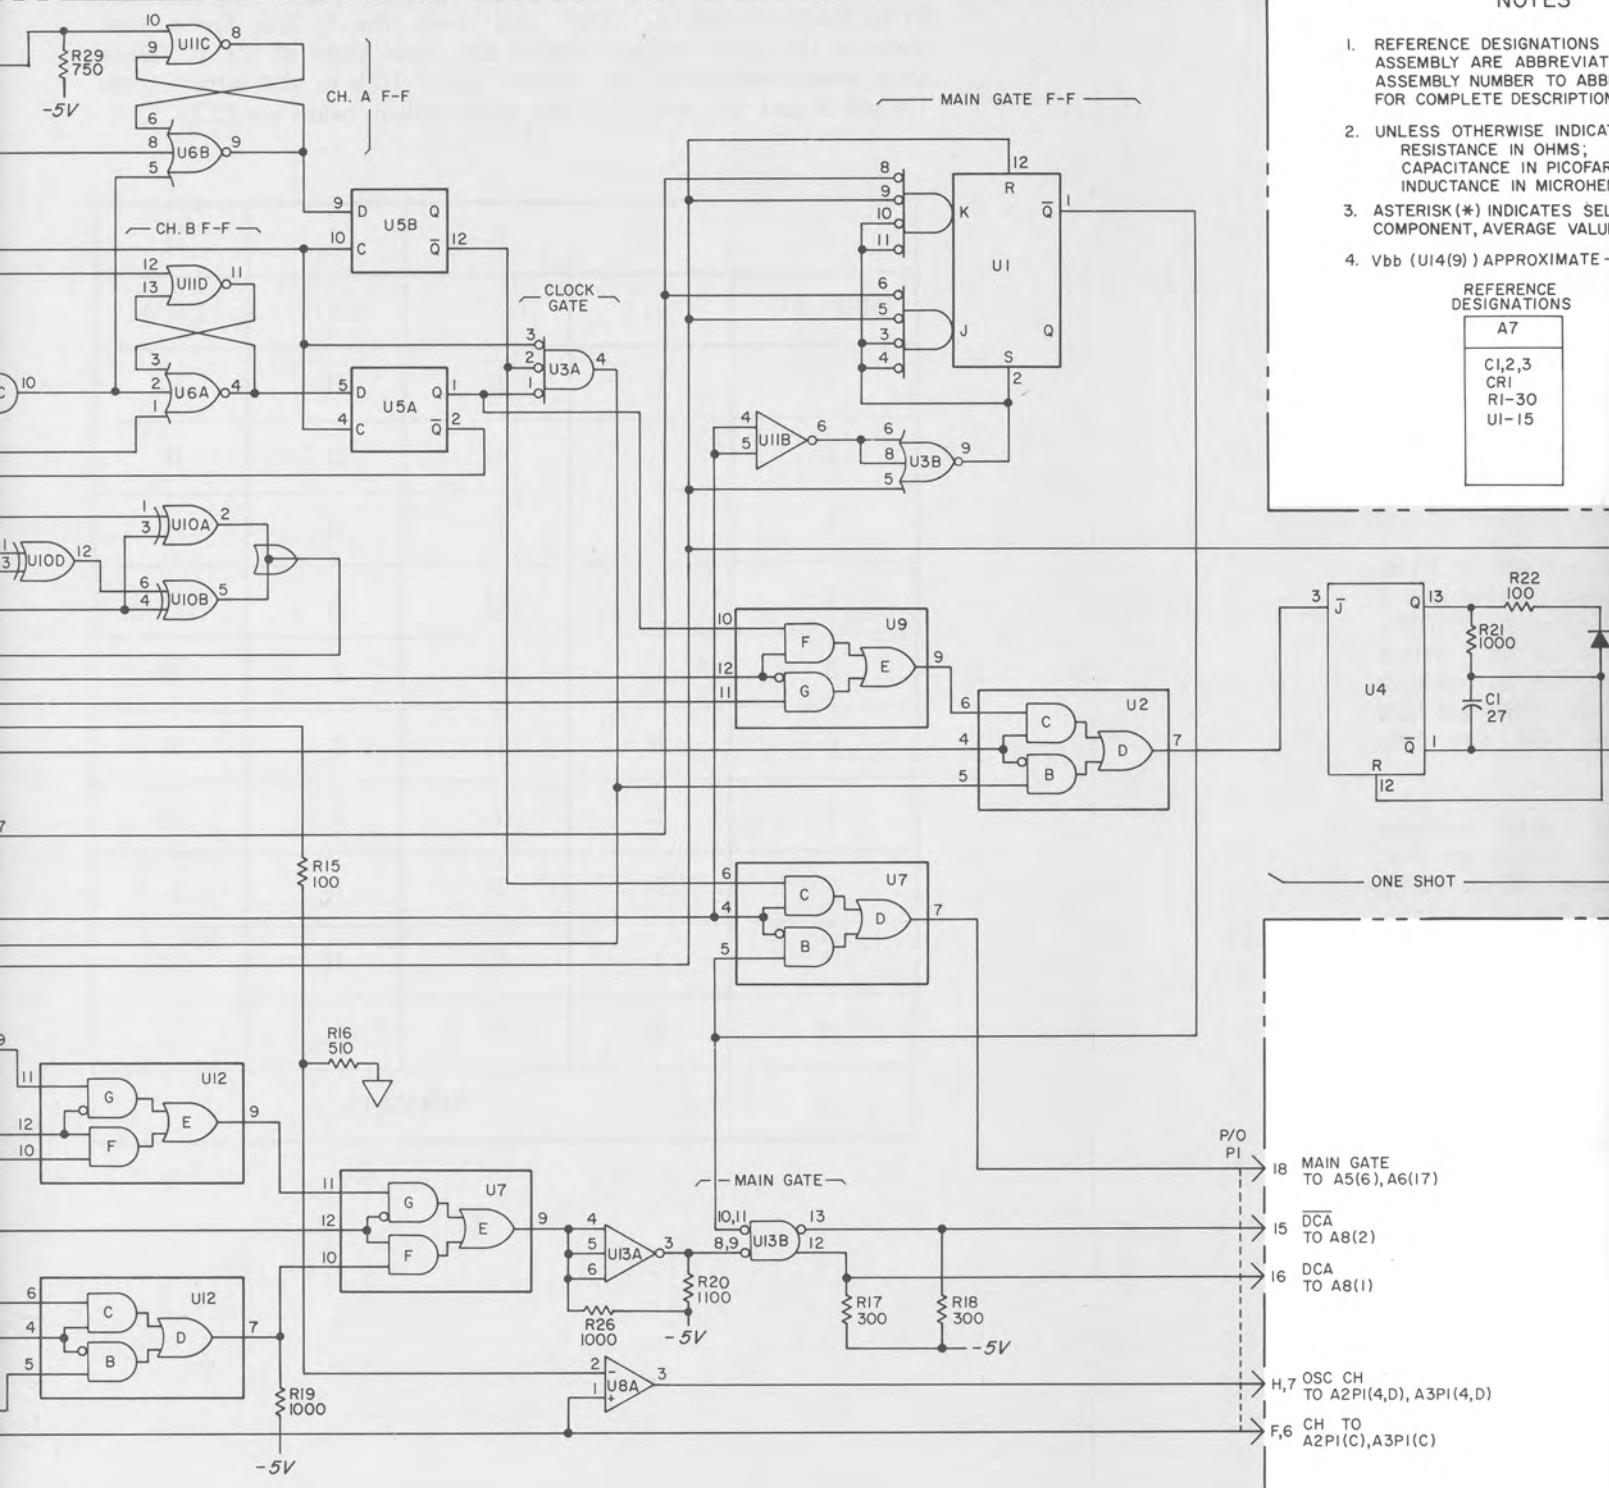

1. REFERENCE DESIGNATIONS ASSEMBLY ARE ABBREVIATED ASSEMBLY NUMBER TO ABBR FOR COMPLETE DESCRIPTION
2. UNLESS OTHERWISE INDICATED, RESISTANCE IN OHMS; CAPACITANCE IN PICOFARAD; INDUCTANCE IN MICROHENRY
3. ASTERISK (*) INDICATES SEL COMPONENT, AVERAGE VALUE
4. V_{bb} (UI4(9)) APPROXIMATE -

REFERENCE DESIGNATIONS

| |
|--------|
| A7 |
| C1,2,3 |
| CRI |
| R1-30 |
| UI-15 |


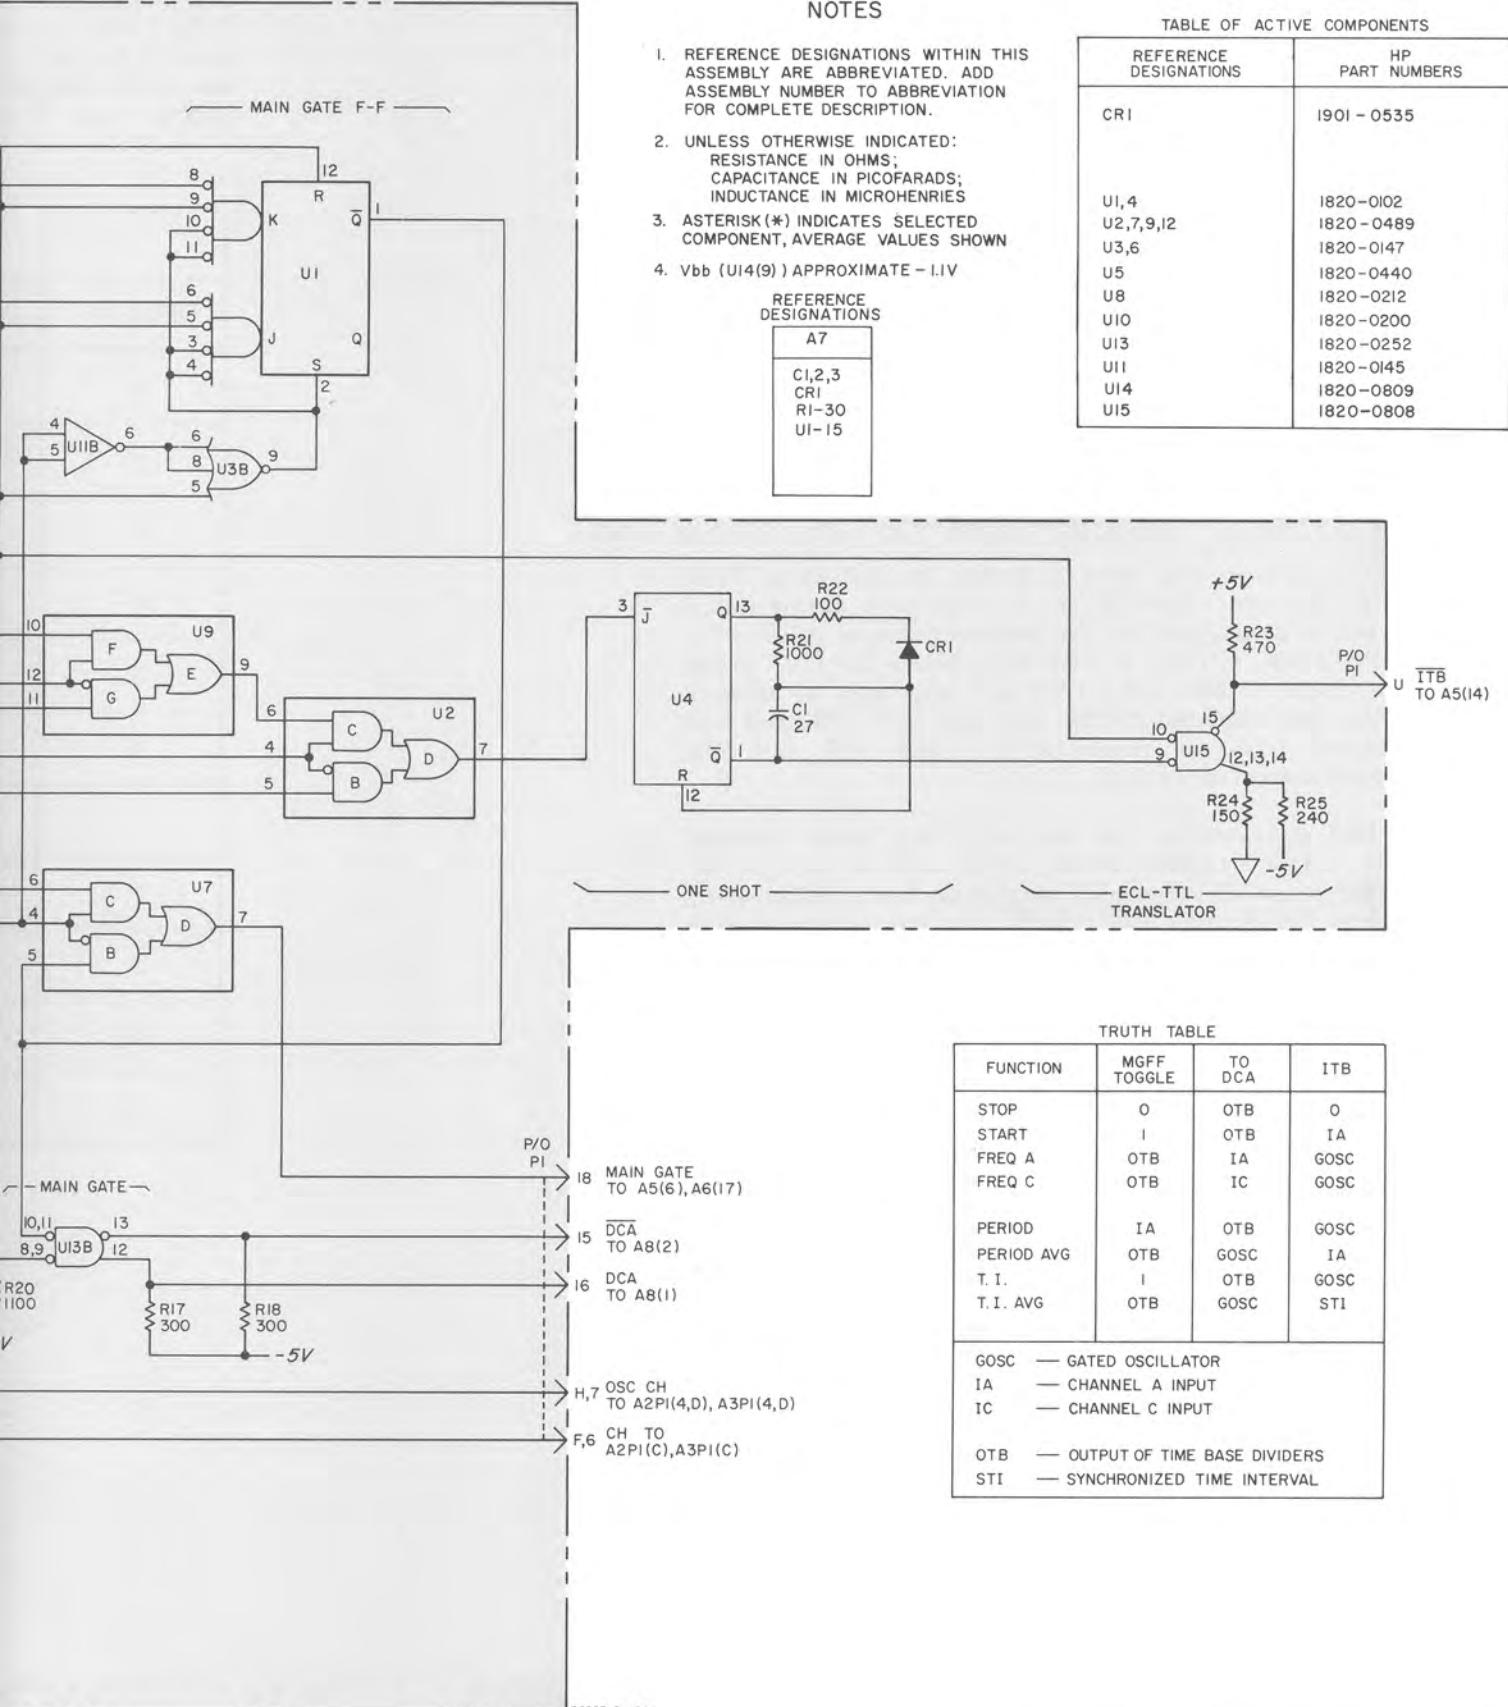


Figure 8-10. A7 Function Control Assembly

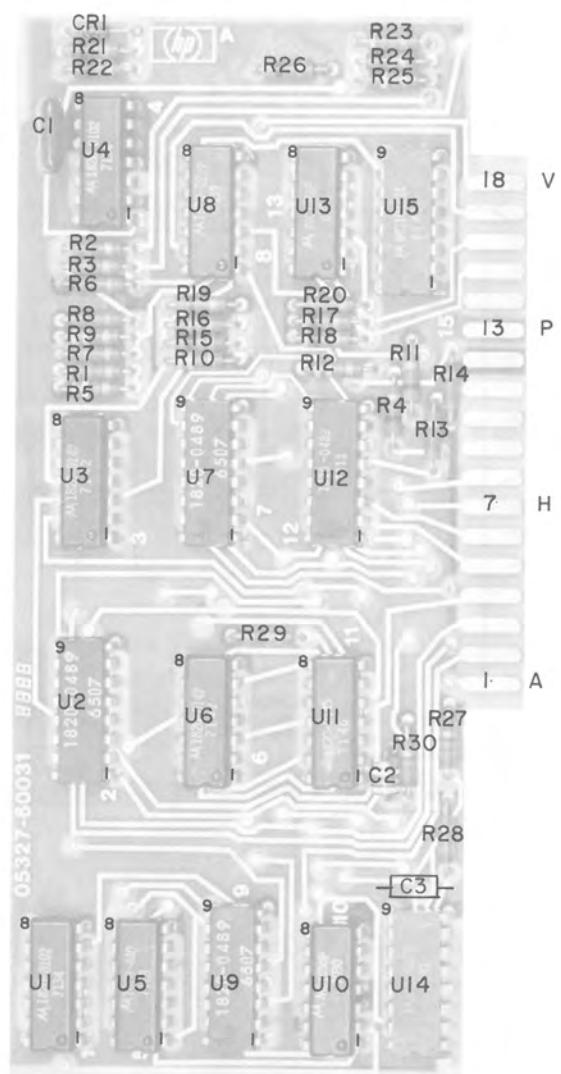

output lines that are binary
T button and note the counter's
follows: The display counts
display reads "0," set the
check the C line for a Low
the input lines of the IC, since
other IC's in the circuit (note
s given below are ECL.

| | C | D |
|---|-------|-------|
| 0 | U5(1) | U6(1) |
| | H | H |
| | H | H |
| | H | H |
| | L | H |
| | L | H |
| | L | H |
| | L | H |
| | H | L |
| | H | L |
| | H | H |

REPEATS

Decimal Point and Blanking

Before testing the decimal point and blanking circuitry, set the CHK/SEP/COM switch to SEP and disconnect the input signal.


DECIMAL POINT. To check the decimal point circuitry, set FUNCTION switch to PERIOD AVG and position the TIME BASE switch to pull the required D.P. line Low.

| LINE | MULTIPLIER POSITION | DRIVER |
|-------|---------------------|--------|
| D.P.0 | 1 | Q8 |
| D.P.1 | 10 | Q7 |
| D.P.2 | 10^2 | Q6 |
| D.P.3 | 10^6 | Q5 |
| D.P.4 | 10^7 | Q4 |
| D.P.5 | 10^8 | Q3 |



BLANKING. To check the blanking circuitry, set the FUNCTION switch to PERIOD AVG and MULTIPLIER switch to 1. All digits, except the first one, should now be blanked. If another digit is lit, check that line at A8J1 for a High level, which indicates a problem on that line.

Model 5326/27B Schematic Diagrams


Part of Figure 8-11. A8 Display Support Assembly

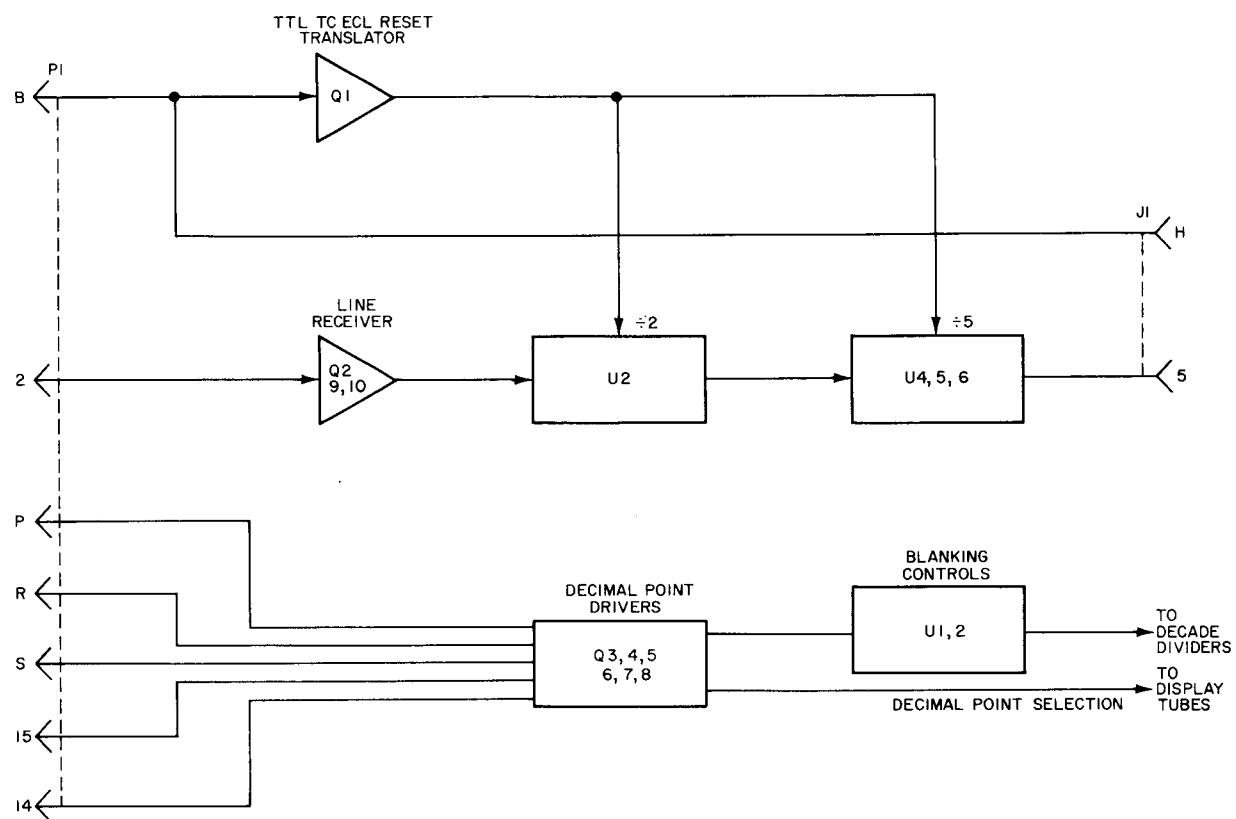


MORE DATA UNDER THIS FOLD

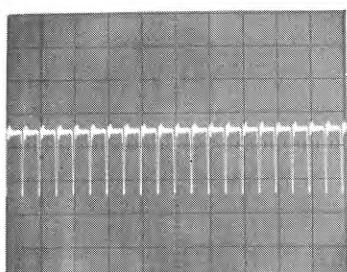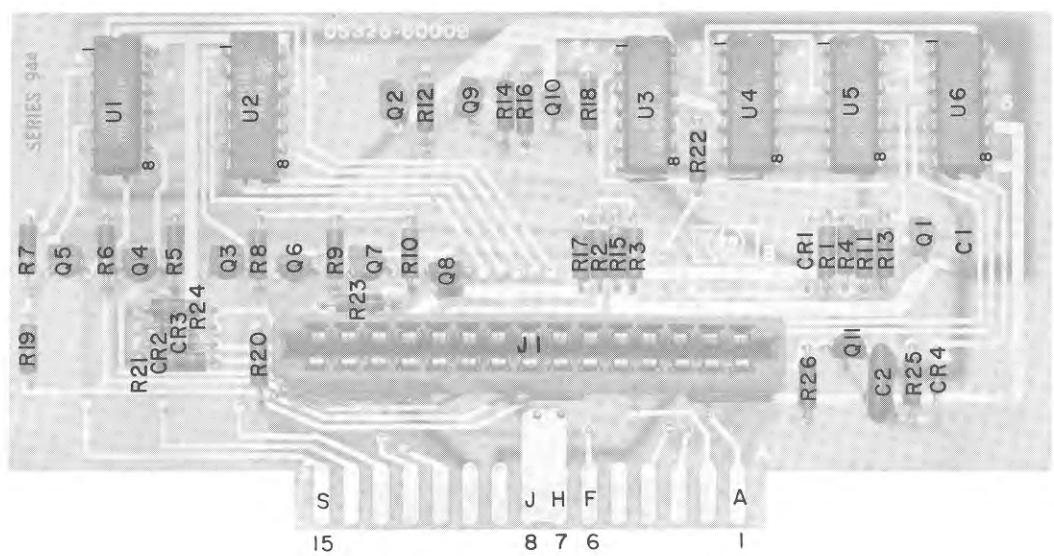


1

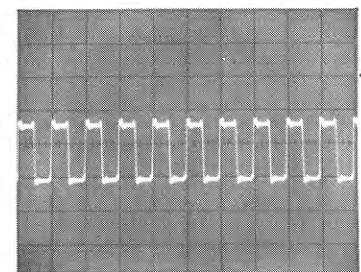


2

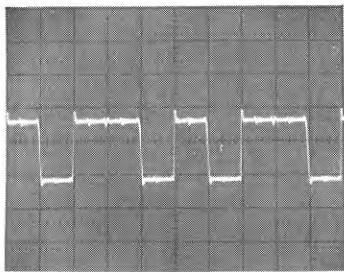

-0 V

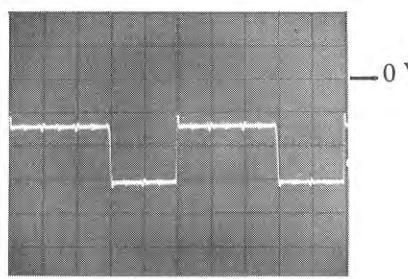

4

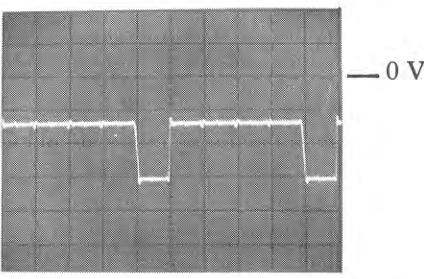

5

All waveforms taken with 10:1 divider probe; ground lead is connected to junction of R15, R3.

COUNTER CONTROLS:

Use settings of A2 Assembly

DC VOLTAGES:

Set counter controls as stated.
Disconnect input signal.
Push RESET.

HE,LE — ECL Levels
H,L — TTL Levels

OSCILLOSCOPE CONTROLS:



VOLTS/CM05 V/cm


TIME/CM $.2 \mu\text{s}/\text{cm}$


SWEET MODE **AUTO**

TRIGGER INT

SLOPE +

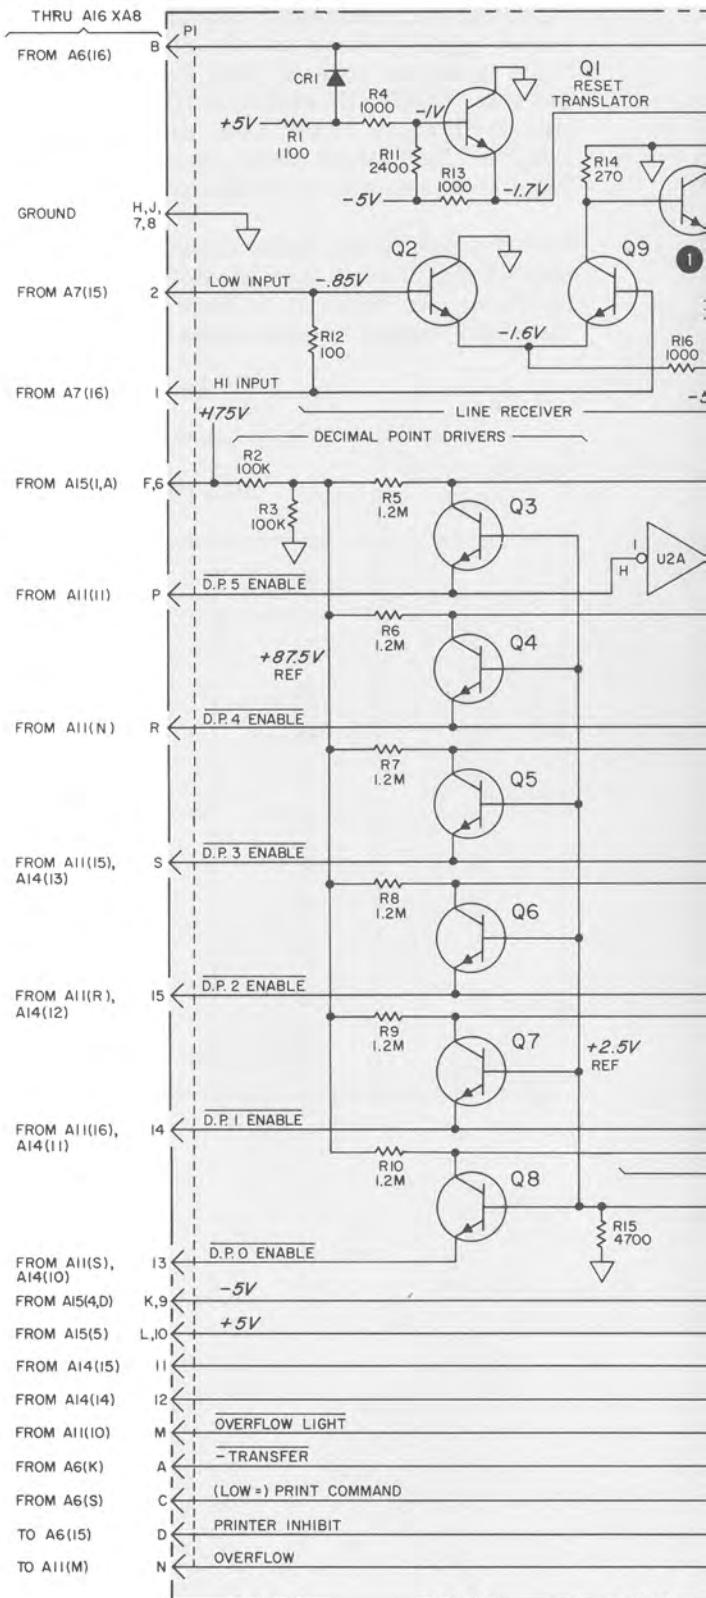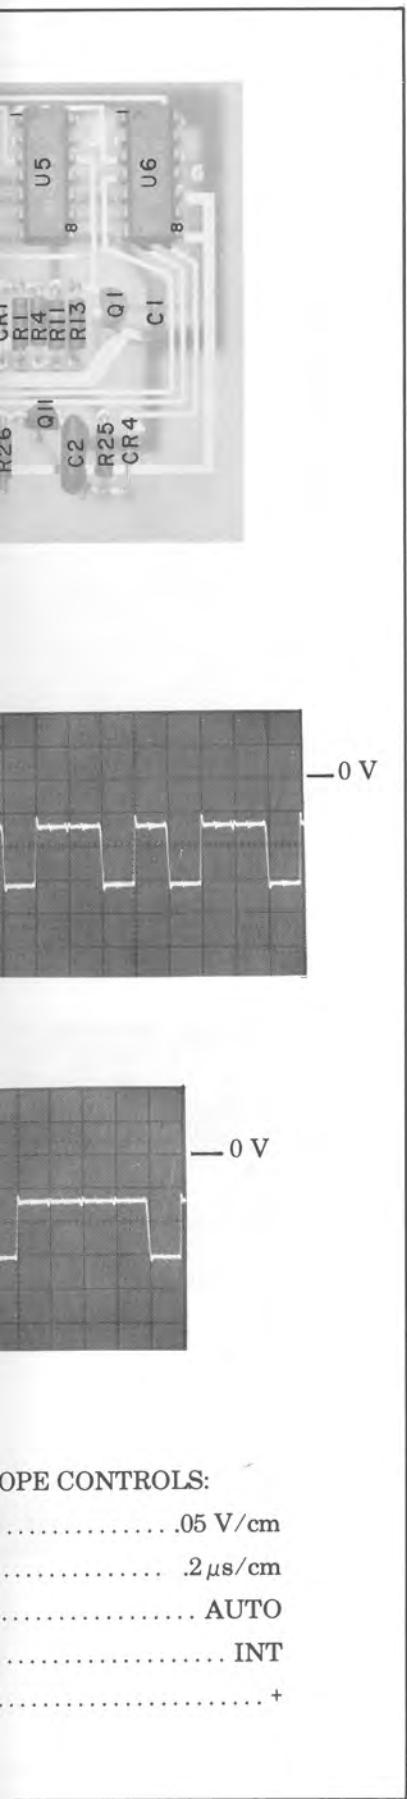

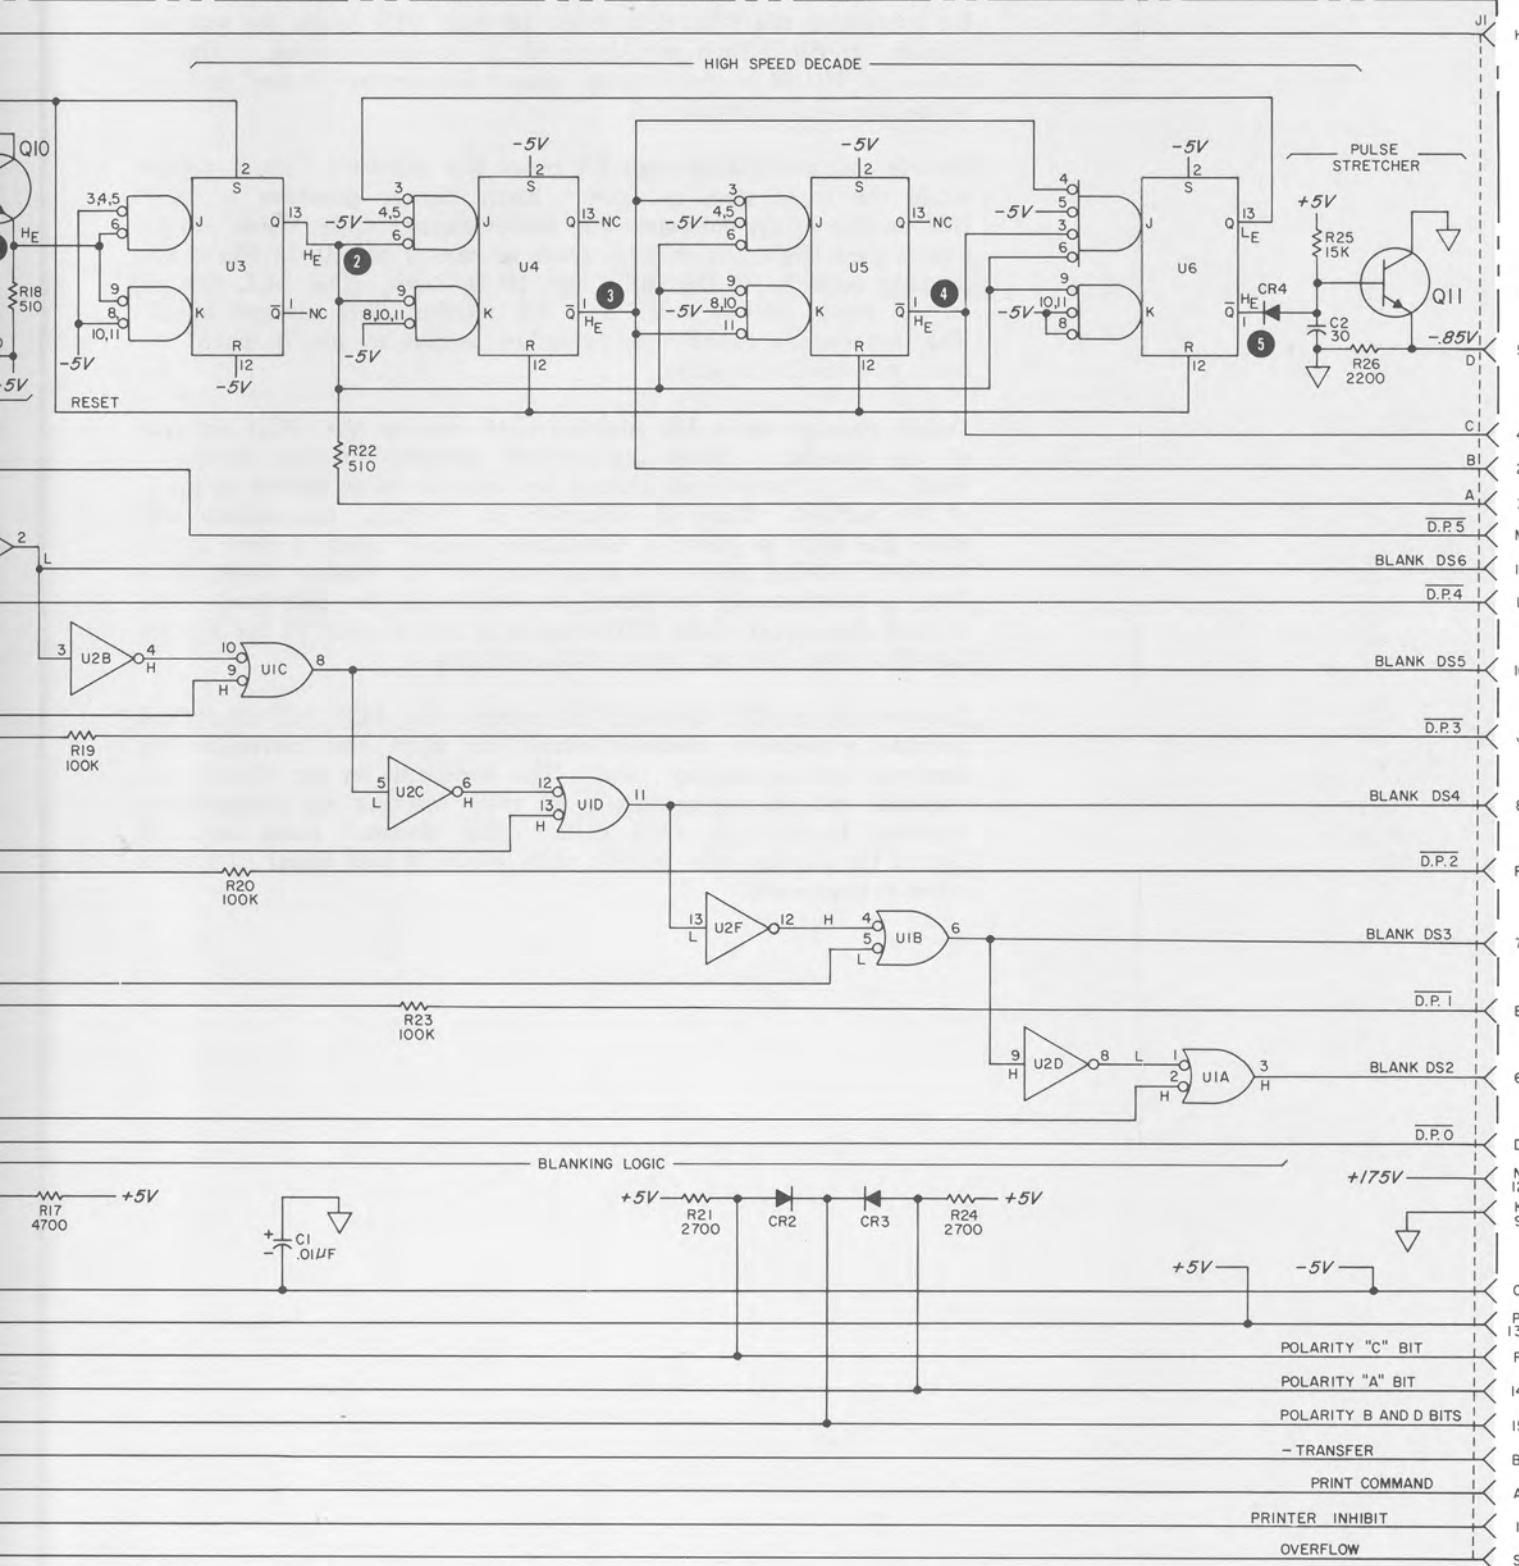

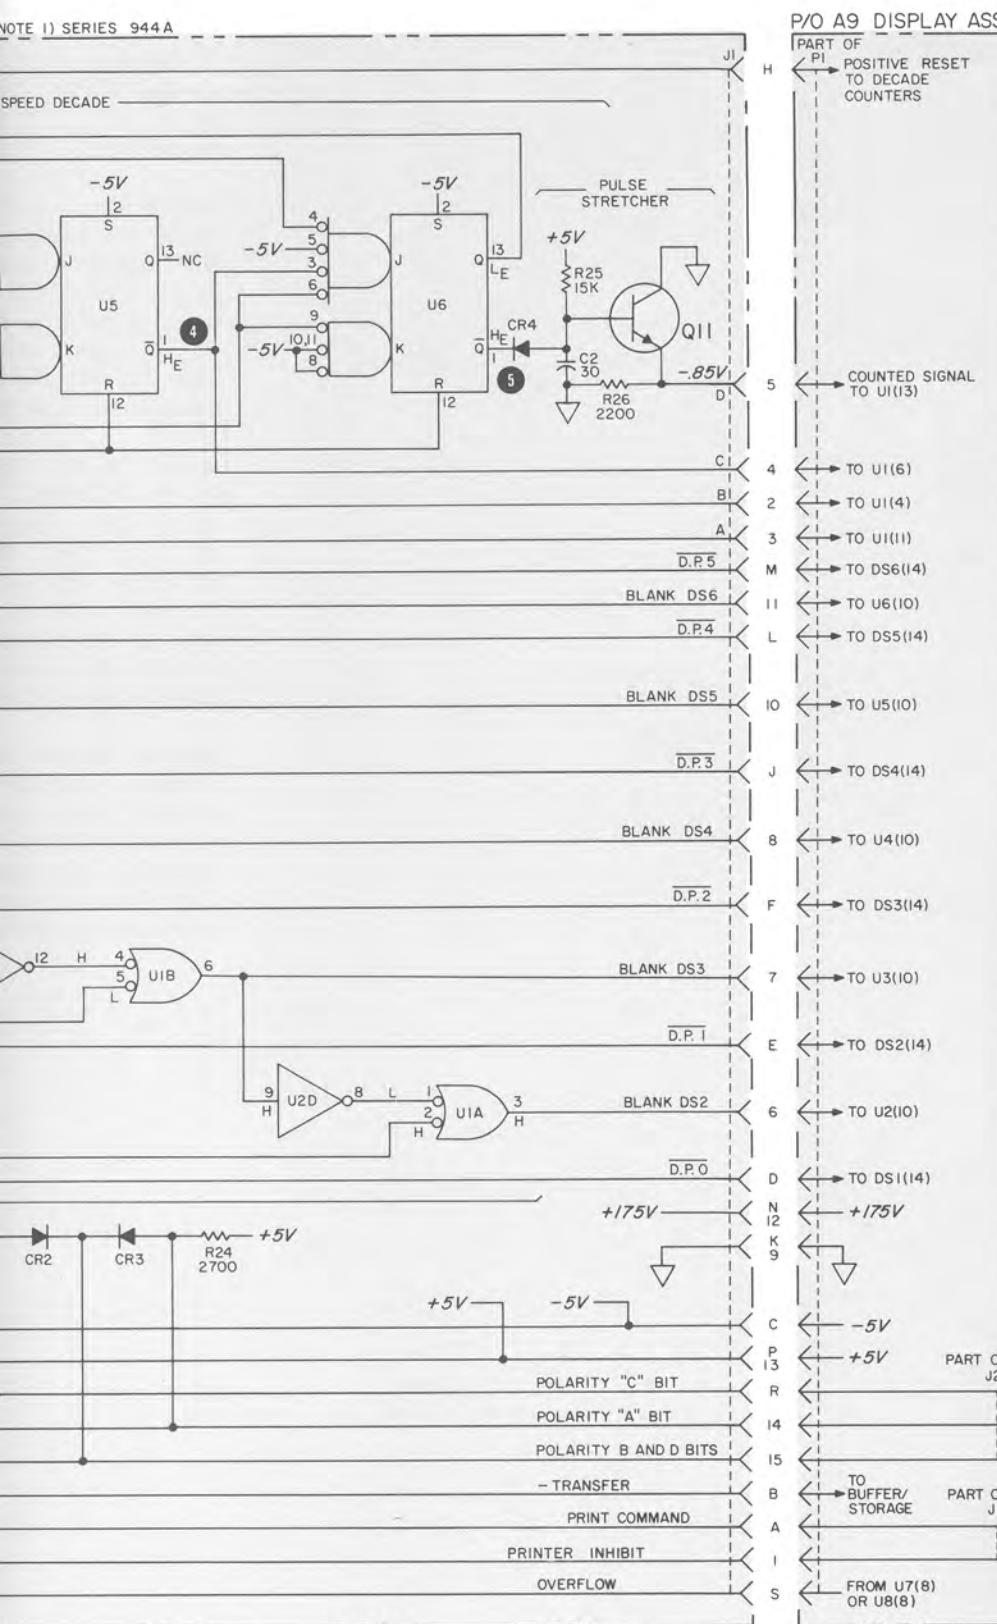

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
 2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;

REFERENCE DESIGNATIONS

| A8 | A9 |
|---|------------|
| C1,2 CRI-4 JI PI QI-II RI-26 U1-6 | J1,2 PI |



TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|---------------------------|----------------------|
| CR1,4 | 1901-0040 |
| CR2,3 | 1910-0016 |
| Q1,2,9-II | 1854-0092 2N3563 |
| Q3-8 | 1854-0365 2N4410 |
| U1 | 1820-0094 MC846P |
| U2 | 1820-0307 MC836F |
| U3 | 1820-0143 MC1027 |
| U4-6 | 1820-0102 MC1013P |


Figure 8-11. A8 Display Support Assembly

Model 5326/27B
Schematic Diagrams


Part of Figure 8-12. A9 Display Assembly (Option 001)

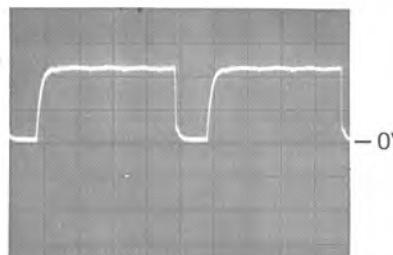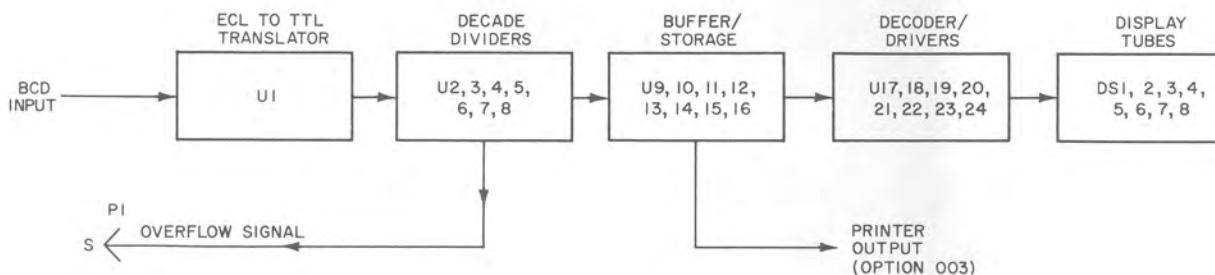

U1(15)
.2 V/cm
.2 μs/cm

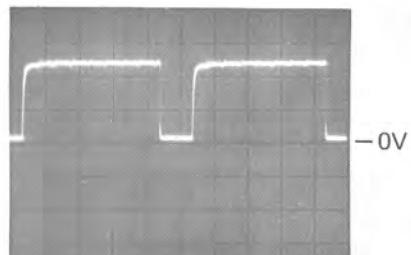


U2(8)
.2 V/cm
2 μs/cm

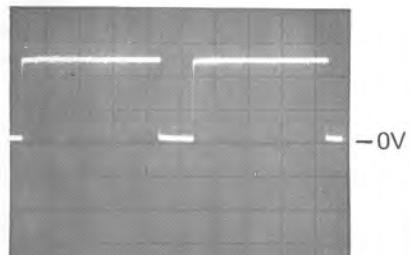


U3(8)
.2 V/cm
20 μs/cm



U4(8)
.2 V/cm
.2 ms/cm

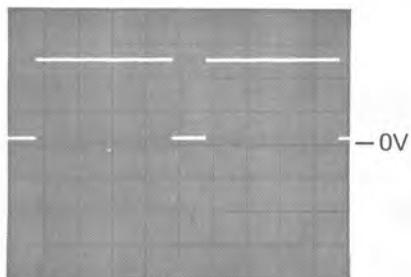

U5(8)
.2 V/cm
2 ms/cm

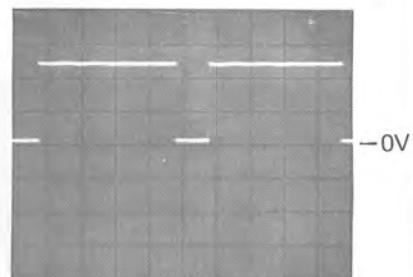

U6(8)
.2 V/cm
20 ms/cm

All waveforms dc coupled through 10:1 probe. Center line of graticule is zero volts. Triggering is internal ac.

| COUNTER CONTROLS: | |
|-------------------|-------|
| FUNCTION | START |
| MULTIPLIER | 1 |
| CHK/NORM | CHK |

MORE DATA UNDER THIS FOLD

A9 TROUBLESHOOTING

The A9 Display Assembly may be set up for troubleshooting with either of two methods. A highly accurate oscillator may be used for a front-panel input signal. Any difference in count from the input signal is then immediately obvious on the display. Check for the proper signal division of the decade counter in previous column. As an alternate method, place the CHK/SEP/COM switch in CHK and the FUNCTION switch in START. Allow the count to totalize until the problem occurs; then, set the FUNCTION switch to STOP. Use the TIME BASE switch to adjust the rate of counting. When the problem appears, check the circuitry of that column.

Start by checking the Buffer-Storage outputs (U9-U15) for the BCD code of the number that should be displayed, rather than what is displayed (see Table 1). Check that the Buffer-Storage code pulls the proper decimal line low on the BCD-to-Decimal Decoder.

Table 1

| DISPLAYED DIGIT | BUFFER STORAGE BCD (TTL) | | | |
|-----------------|--------------------------|---|---|---|
| | 8 | 4 | 2 | 1 |
| 0 | H | H | H | H |
| 1 | H | H | H | L |
| 2 | H | H | L | H |
| 3 | H | H | L | L |
| 4 | H | L | H | H |
| 5 | H | L | H | L |
| 6 | H | L | L | H |
| 7 | H | L | L | L |
| 8 | L | H | H | H |
| 9 | L | H | H | L |
| Blank | L | L | L | L |

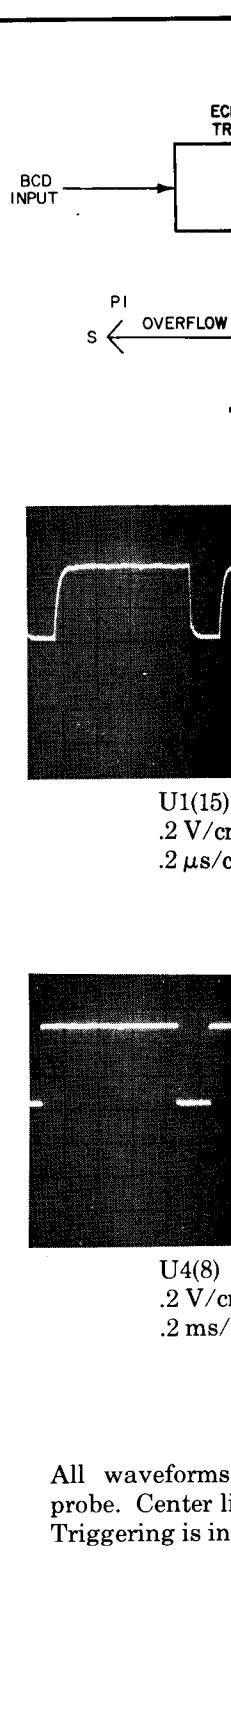


Figure 8-11
A8 DISPLAY SUPPORT ASSEMBLY

(See Page 8-31)

A9 DISPLAY ASSEMBLY OPERATION

Display assembly A9 contains decade counters U2 through U7, buffer storage units U9 through U15, BCD to decimal converters U17 through U23, and display tubes DS1 through DS7.

U1 translates the ECL data from A8 into TTL levels for use by circuits on A9. Each translator of U1 is noninverting. The D output at U1(15) is the counted signal divided by 10 and is used as the input to 10^1 decade U2.

Decade counters U2 through U7 count the number of input pulses while the main gate is open. Each decade provides a -8421 BCD output to the corresponding buffer storage unit. When pin 14 (reset) goes High, the decades reset to zero if pin 10 is High; the decades reset to 15 (blank) if pin 10 is Low. The ECL decade on A8 never blanks. U7 and U8 (Option 001) always blank. The last decade supplies an overflow output at pin 8 when the count exceeds the capacity.

Buffer storage units U9 through U15 receive the BCD outputs of the decades. When the counter operates in the storage-on mode, data is transferred when a low transfer pulse arrives at pin 5 of the buffers. When the transfer line is high, the buffers will store the data to allow a continuous display while a new measurement is being made. During storage-off or totalize mode, BCD data is continuously fed from the buffers to the decoders. The buffers also supply +8421 BCD outputs to A9 J1 and J2 for further distribution to J9 when Option 003 is included.

Decoder drivers U17 through U23 receive the -8421 BCD data and provide a decoded decimal output to light the corresponding numeral on the display tube. The terminal for an illuminated numeral will be approximately +2 volts whereas an extinguished numeral is typically +100 volts. The decimal point terminal (14) of the display tube is <5 volts when lit and about 87.5 volts when extinguished.

A9 TROUBLESHOOTING

The A9 Display Assembly can be checked in either of two methods. A front-panel input signal is then impressed upon the proper signal driver. As an alternate method, the FUNCTION switch is set until the problem is found. Use the TIME BASE switch to determine the problem appears.

Start by checking the code of the number displayed (see Table 1) for the proper decimal digit.

| DISPLAYED DIGIT |
|-----------------|
| 0 |
| 1 |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| Blank |

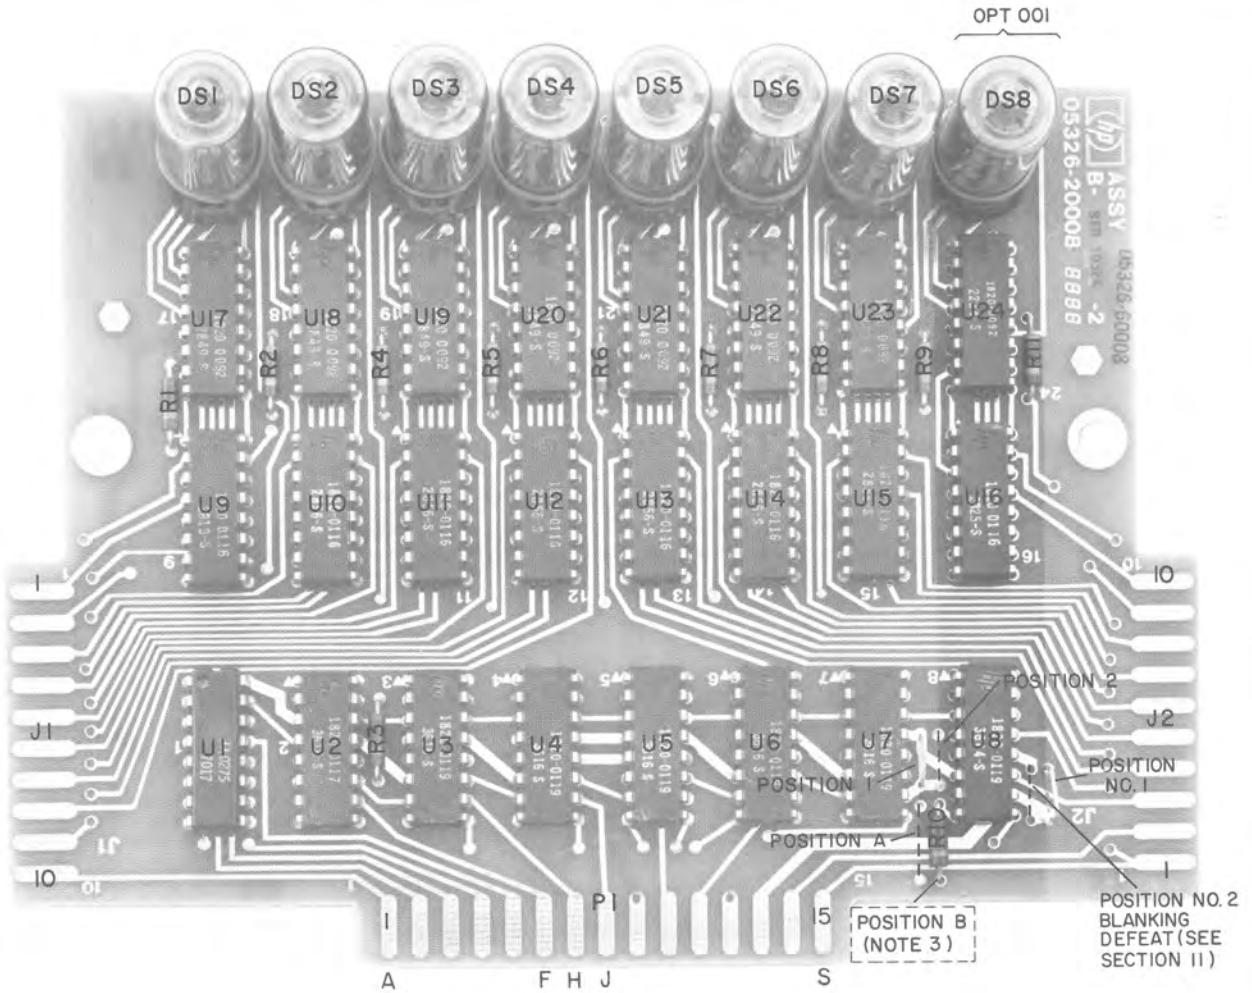


TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|------------------------|------------------------|
| A8 CR2,3 | I901-0016 |
| A9 | |
| UI | I820-0275 |
| U2 | MC1039P |
| U3-8 | I820-0119 |
| U9-16 | I820-0119/0232 |
| UI7 | I820-0116 |
| UI8-24 | I820-0729 I820-0092 |


05326-0-28


REFERENCE DESIGNATIONS

| NO PREFIX | A8 | A9 |
|-----------|-------------------|--|
| W1P1, P2 | CR2,3 J1 P1 | DS1-8 J1, 2 P1 RI-11 UI-24 |

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS;
3. CLIP OUT RESISTOR R10 FOR OPTION 100.

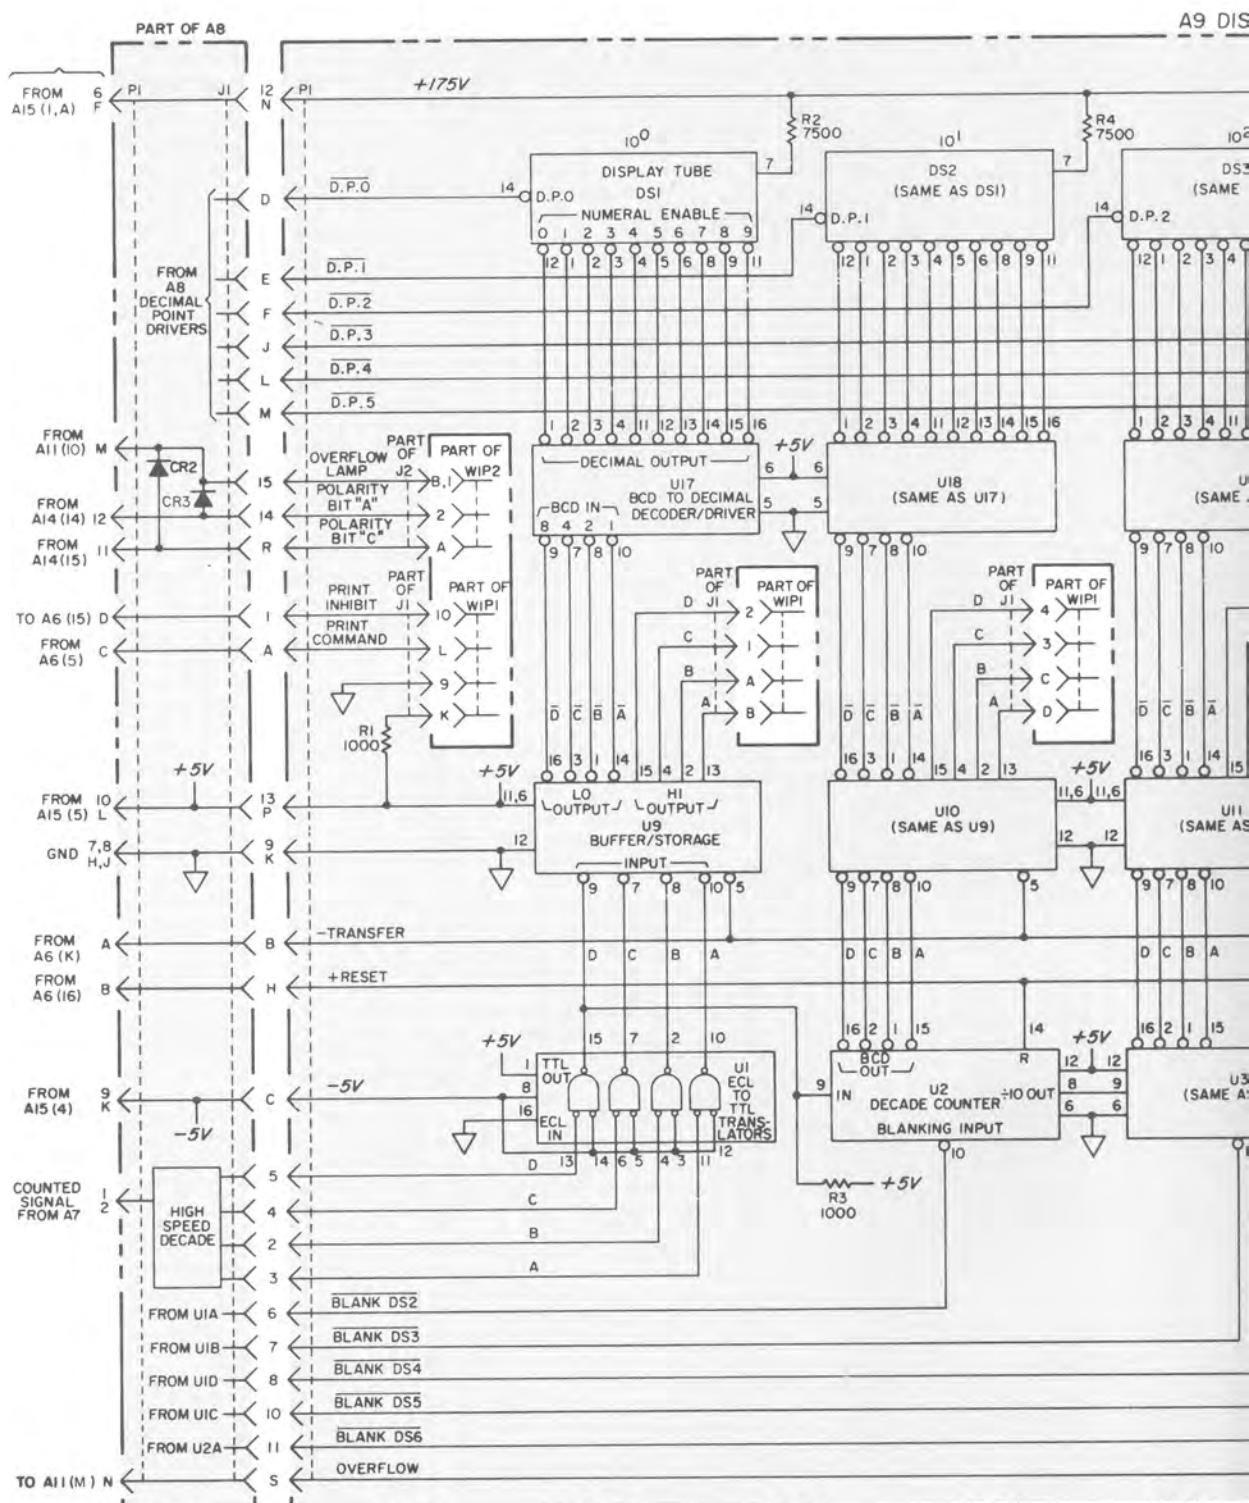

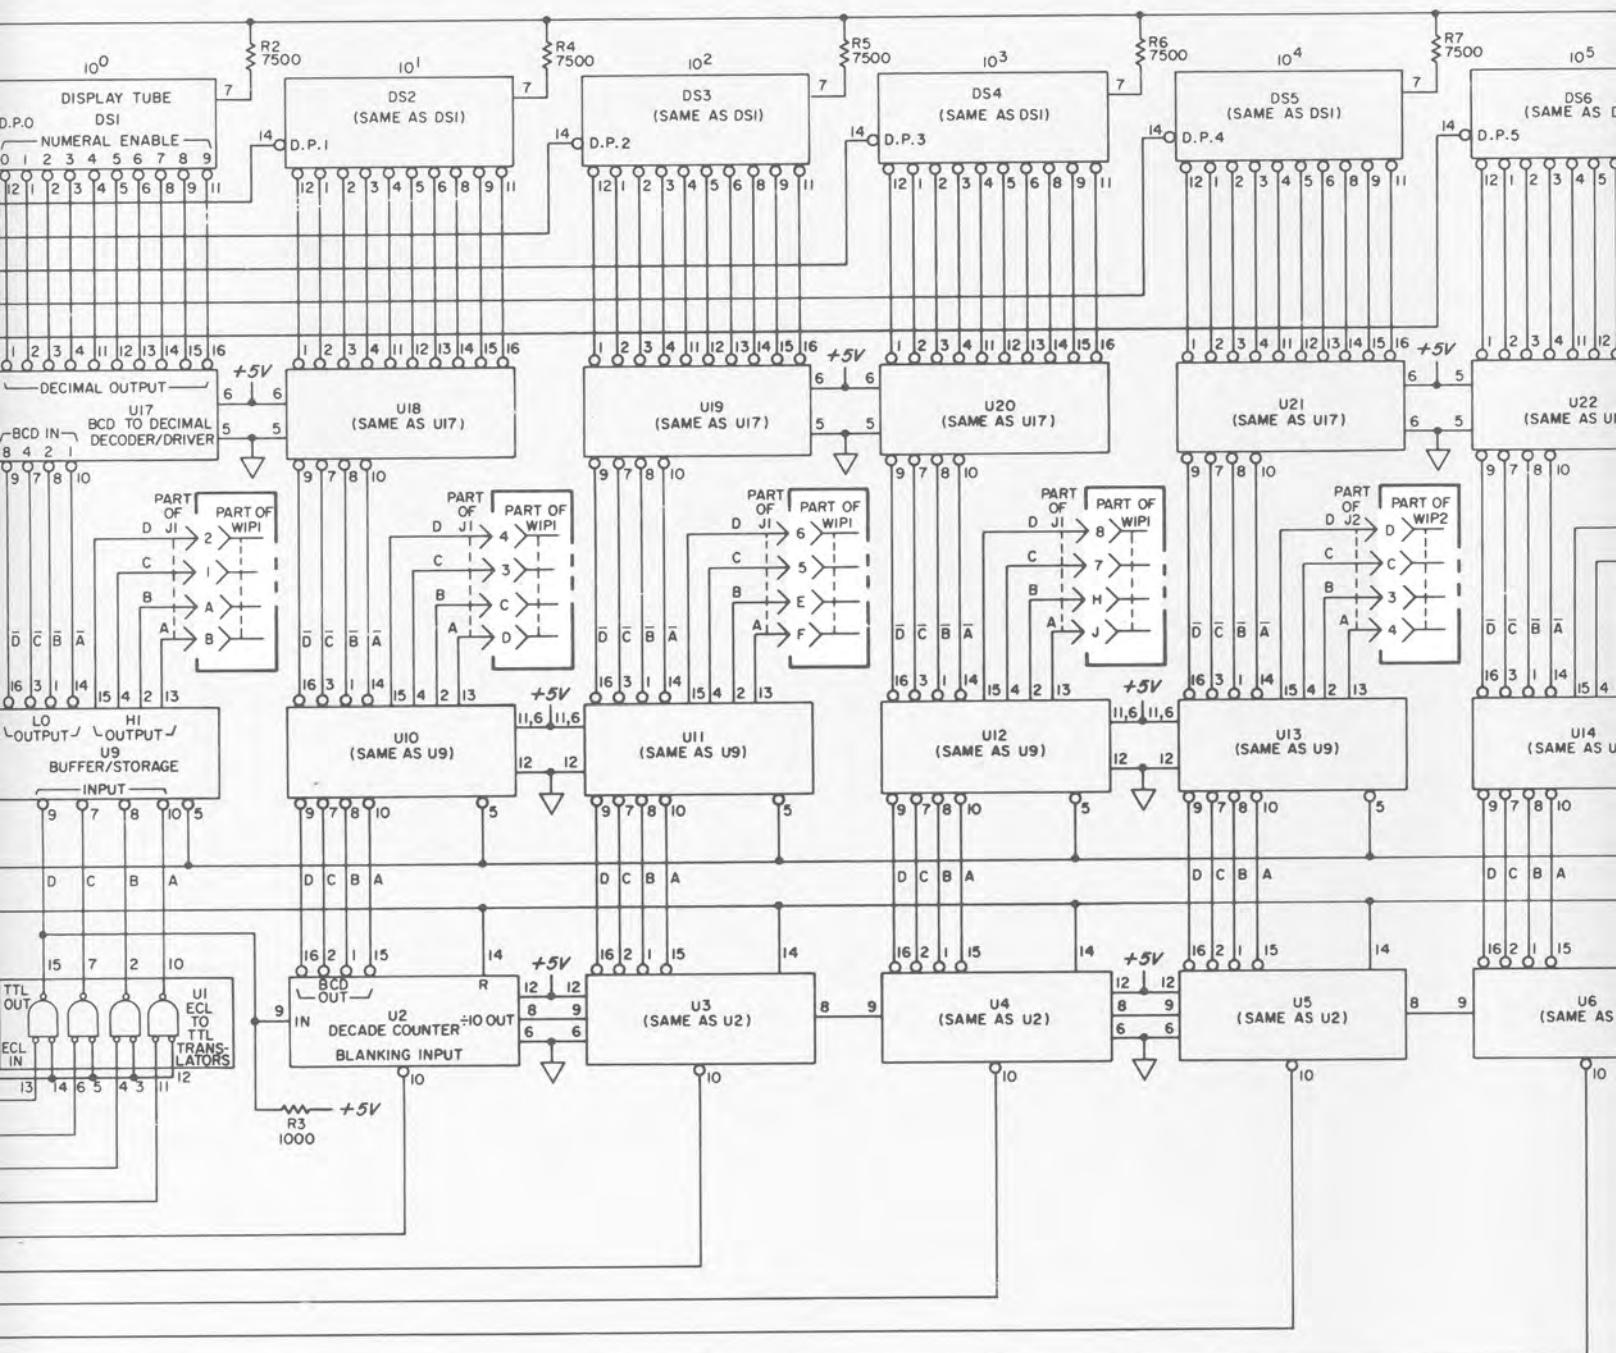

I) OPTION 001 (05326-60025) (NOTE I) SERIES IO32 REV B

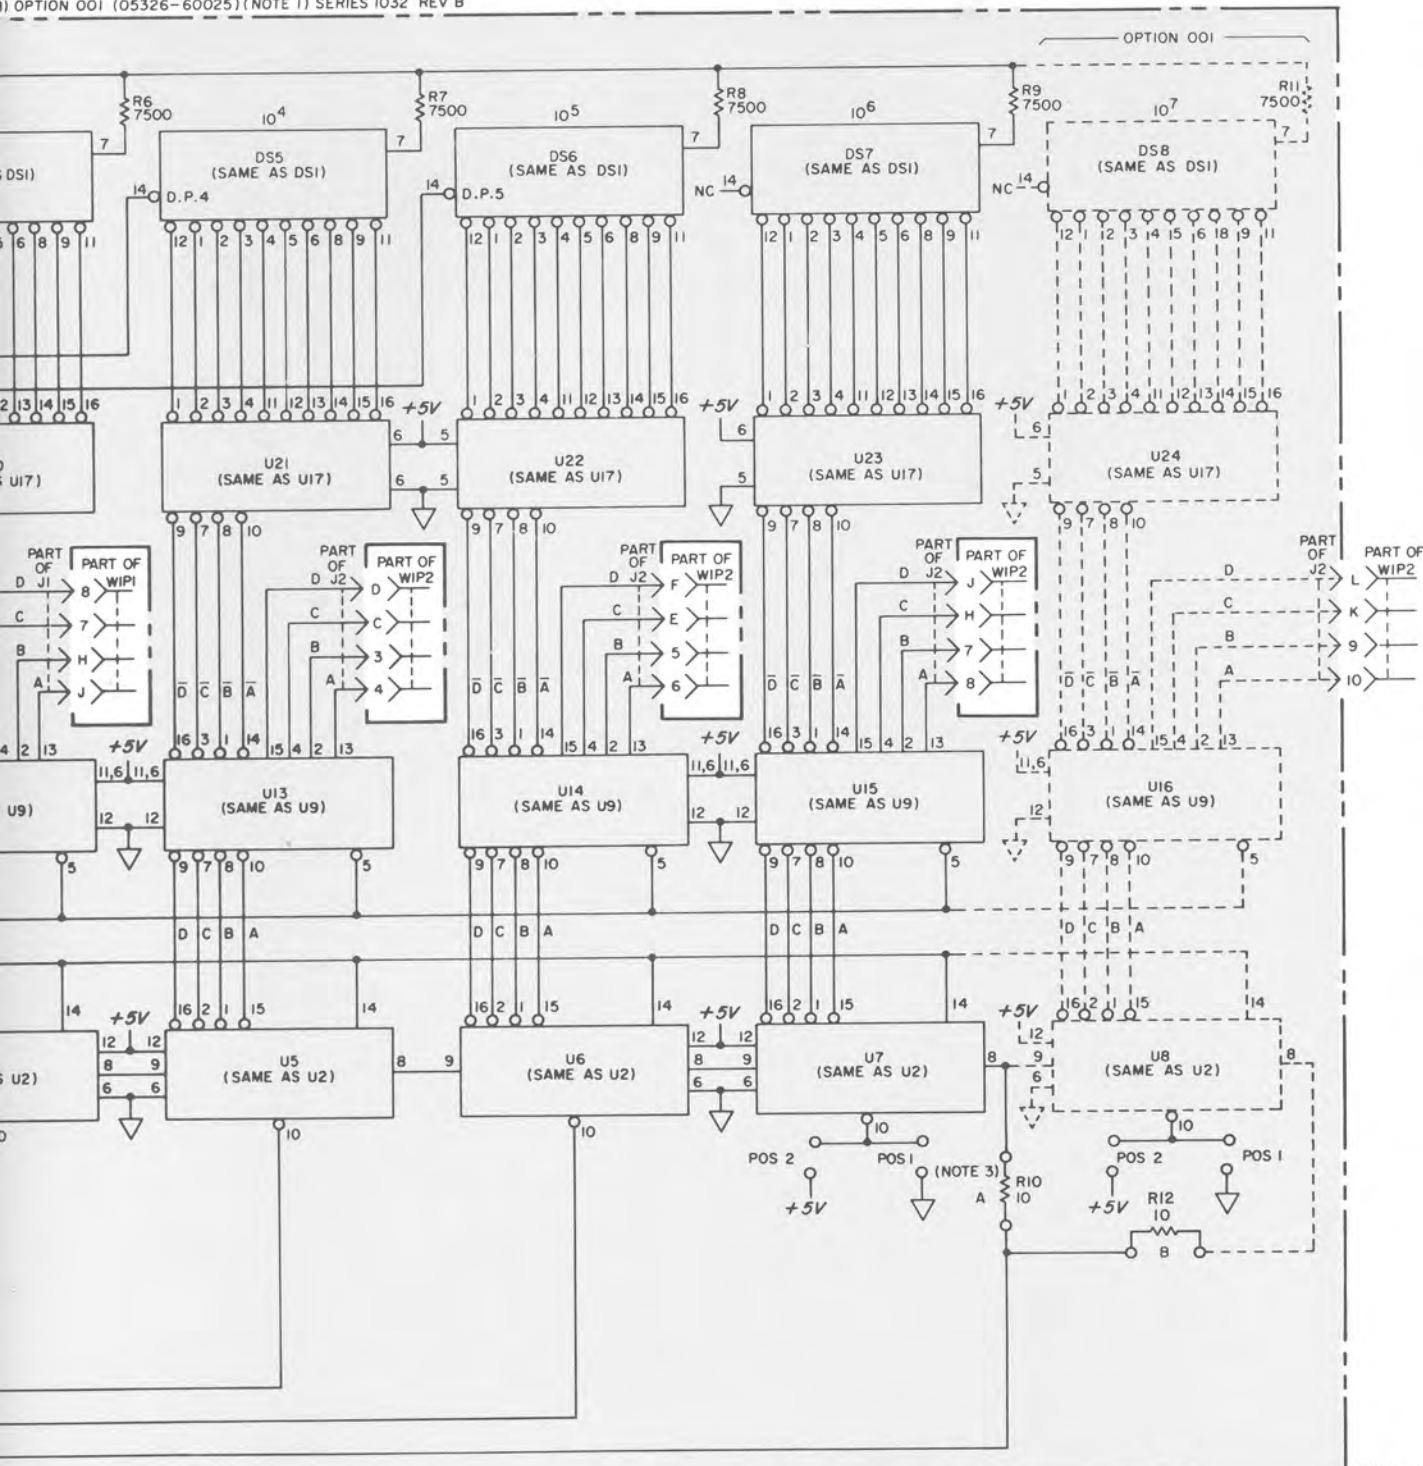


Figure 8-12. A9 Display Assembly Standard Instrument and Option 001

Model 5326/27B
Schematic Diagrams

A10 RIGHT READOUT OPERATION



The right readout contains DTL logic to provide the proper measurement units for a given setting of the front-panel controls. A10 logic is negative true, and a low (<0.8 volts) to the emitter of any driver transistor will light the given neon. When a DTL high is applied on the emitters, the transistor is reverse biased to turn off the neon lamps. The voltage dividers provide a reference of 2 V (nominal) to the bases of the drivers, when no annunciators are on.

Selecting a function mode and time base pulls a pair of these lines low, activating a gate. This low on the gate output will forward bias the driver transistor to turn on the annunciator lamp. For example, selection of frequency and 1 ms makes the output of U4D(11) low, turning on Q9 to light DS5. Q10 also turns on, lighting DS6.


The asterisk (*) annunciator (DS8) is activated when the counter is in the time interval or period mode and the time base is 10s. An asterisk indicates the proper units are not displayed.


A10 TROUBLESHOOTING

Select the specific function mode and time base combination that is faulty. Check the gate that is common to the two lines. For instance, when using frequency and a 1 ms gate time, check U4D; when using .1 μ s, U3A becomes the common gate. Refer to Table 5-5 for the proper annunciator lighting conditions.

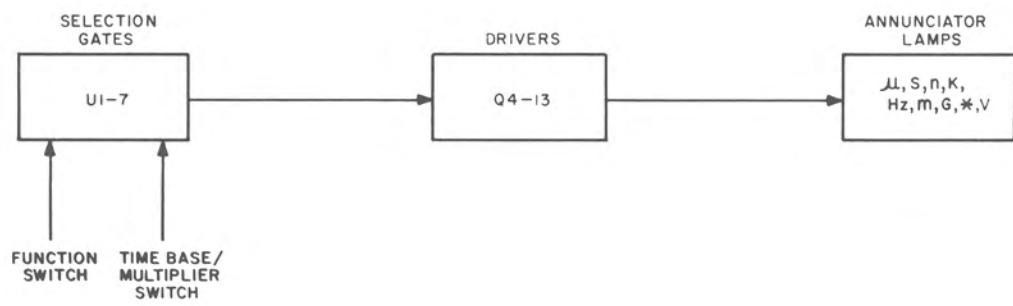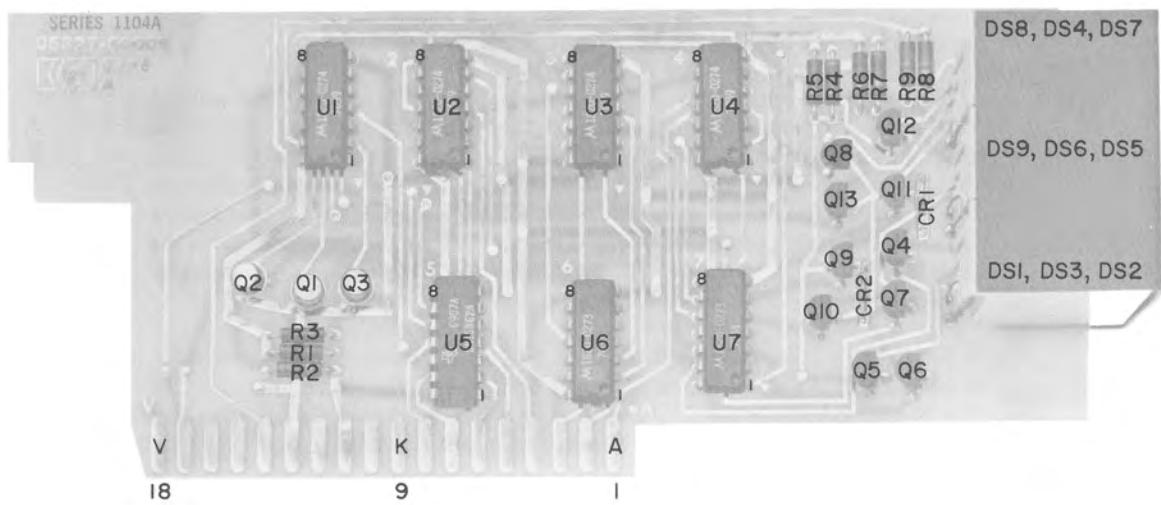


AIO RIGHT READOUT BOARD ASSE

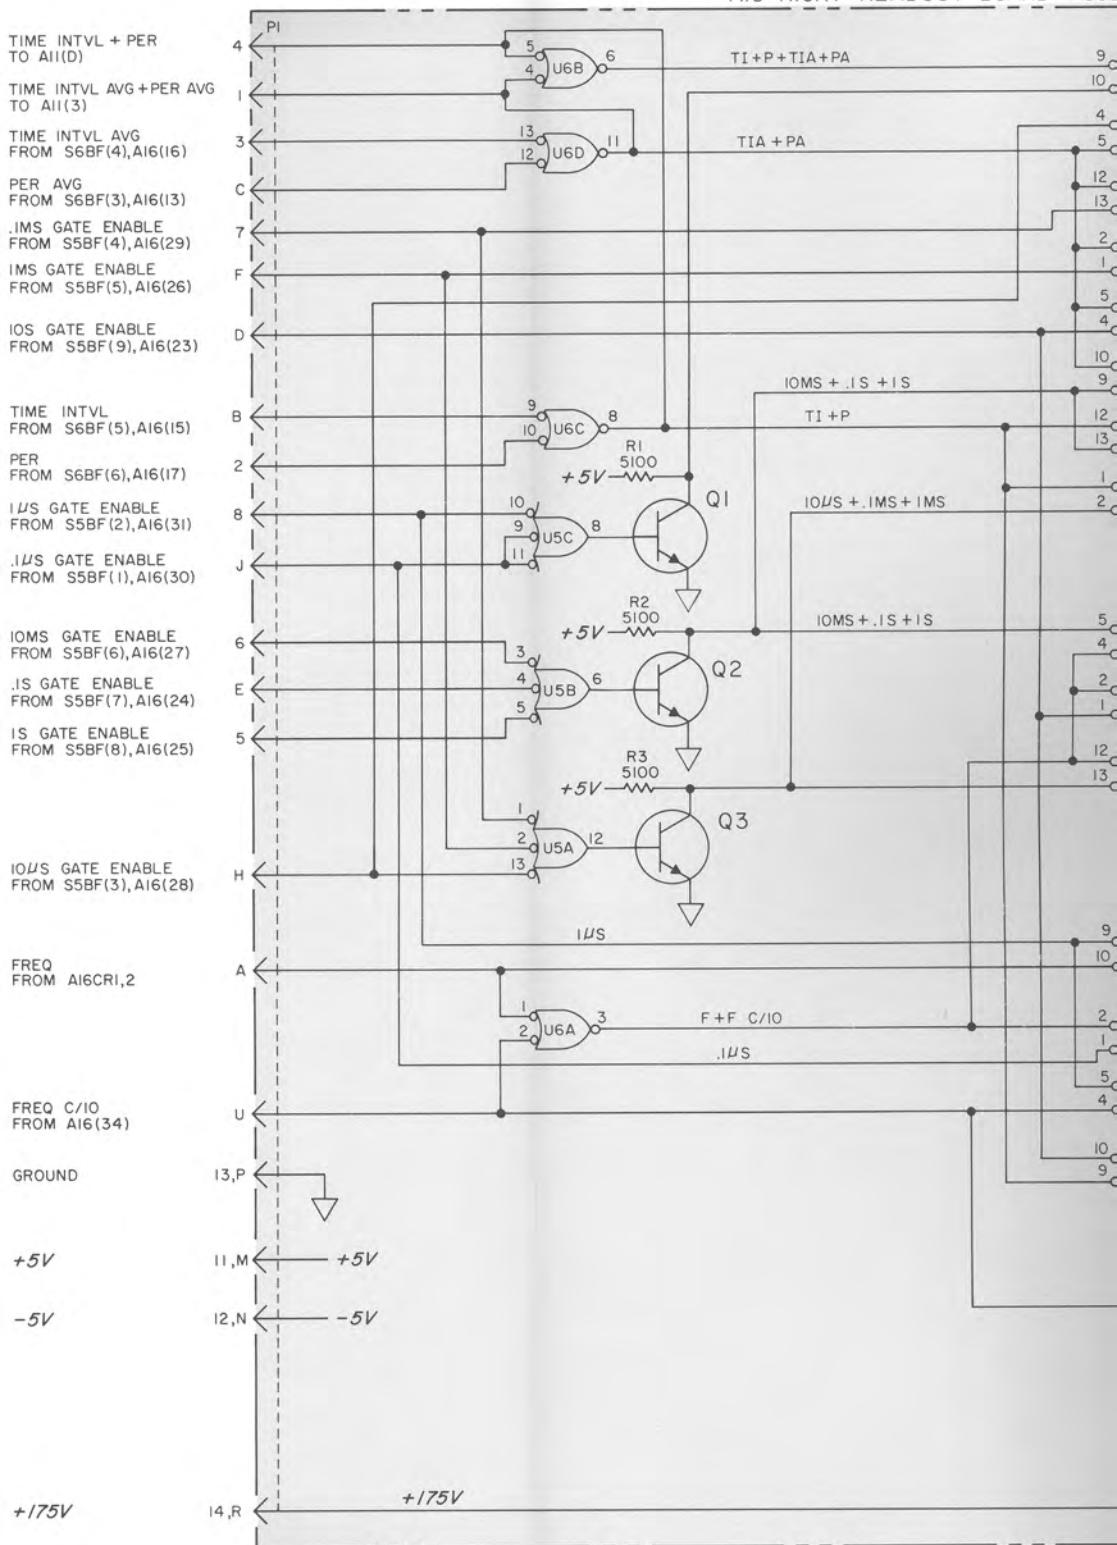

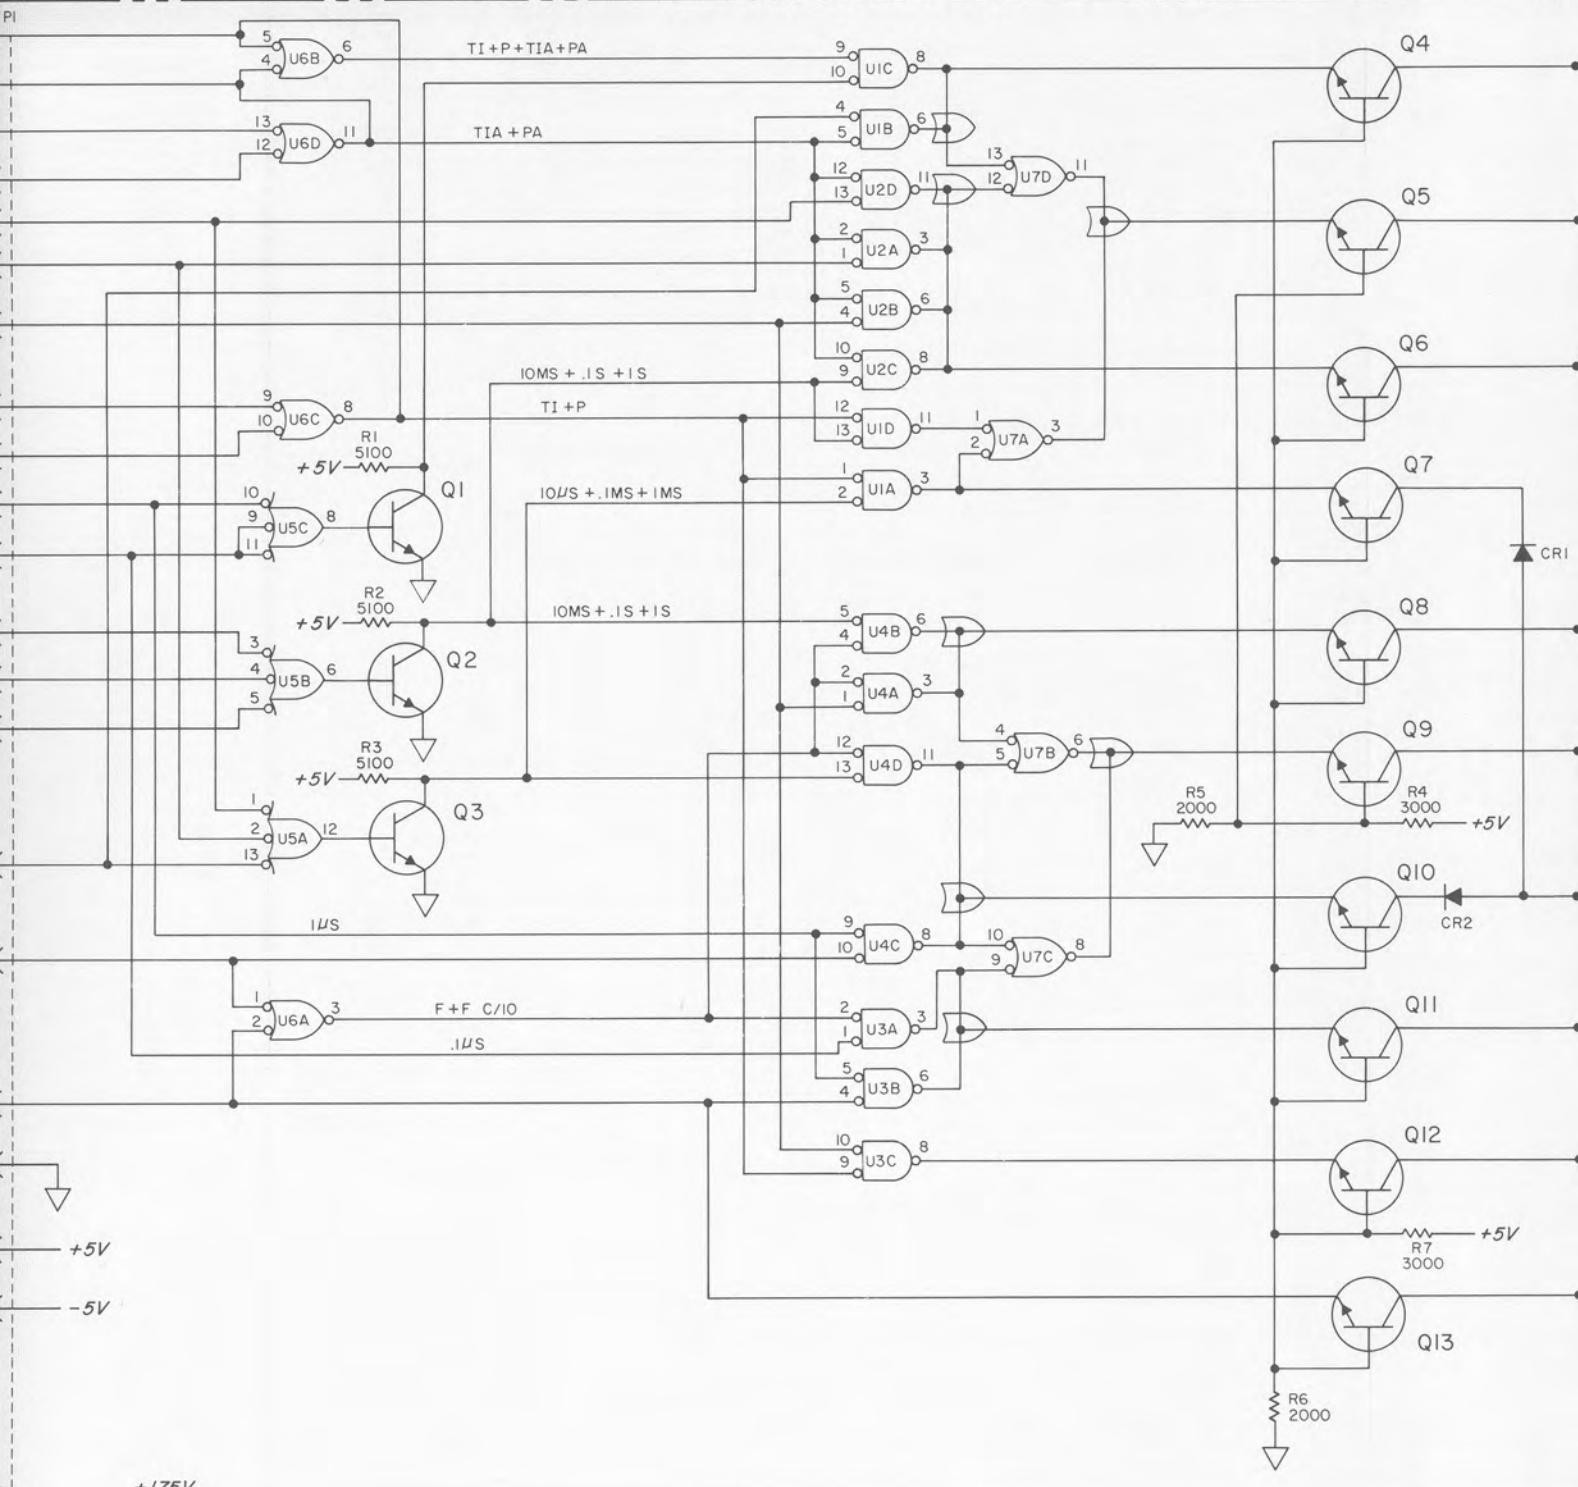

60008 (NOTE 1) SERIES 1116A, REV. B

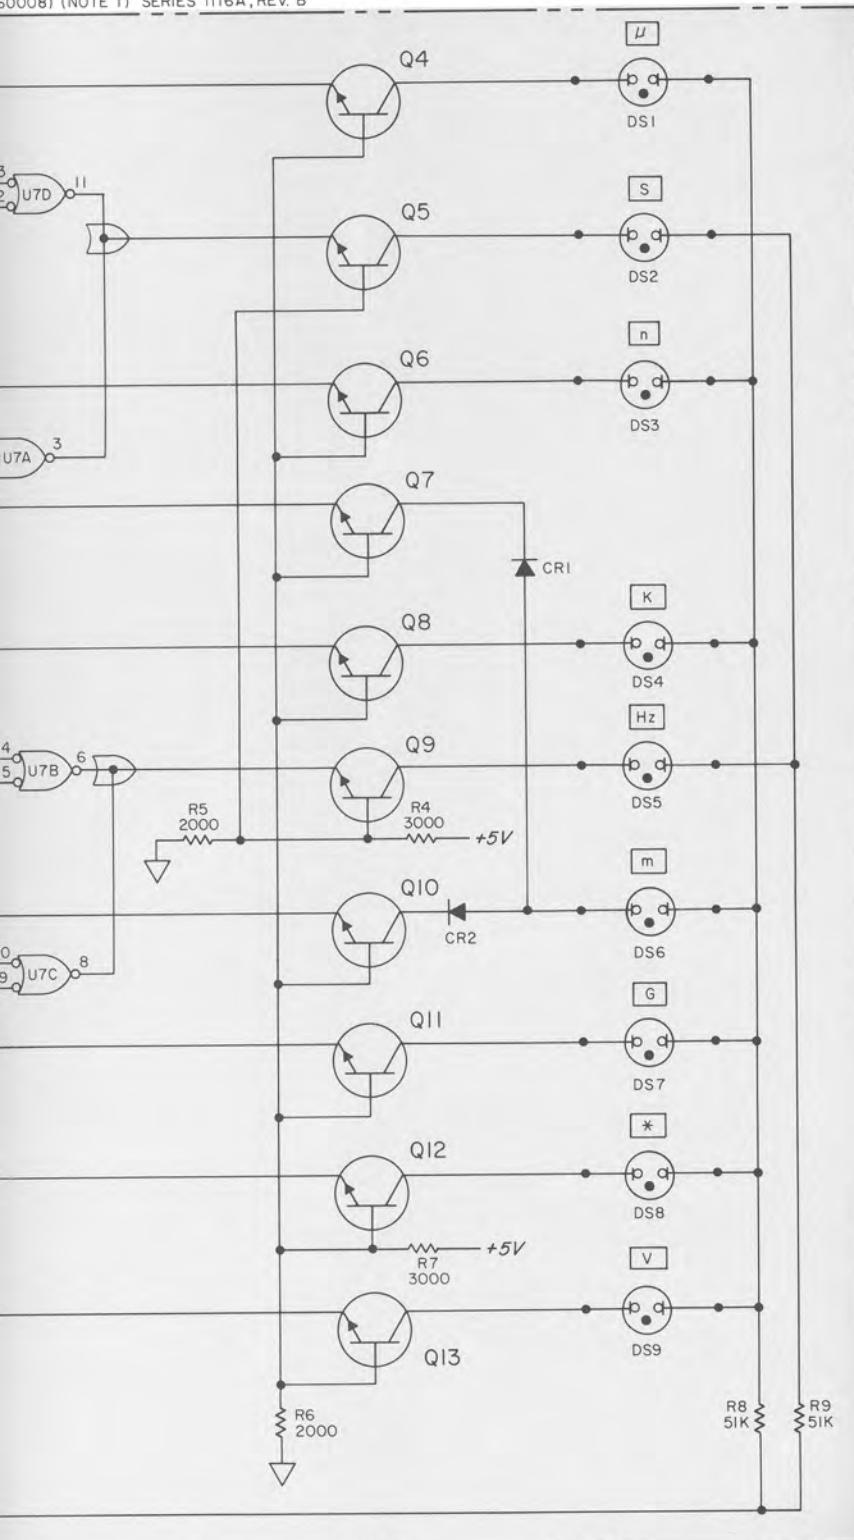

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS;

REFERENCE DESIGNATIONS

| A10 |
|-------|
| CRI,2 |
| DSI-9 |
| P1 |
| Q1-13 |
| R1-9 |
| UI-7 |

TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|------------------------|-----------------|
| CR1,2 | I901-0040 |
| Q1-3 | I854-0009 |
| Q4-13 | I854-0474 |
| UI-4 | 2N709 |
| U5 | 2N555I |
| U6,7 | I820-0274 |
| | MC 1808 |
| | I820-0310 |
| | MC 862 |
| | I820-0273 |

05327-D-14

Figure 8-13. A10 Right Readout Assembly

A11 LEFT READOUT OPERATION

The left readout contains DTL logic to select the proper decimal point corresponding to the TIME BASE SETTING. It also contains the switch common drivers for the time base, function, and amplifier common lines (for remote programming), a storage circuit and lamp for the overflow signal, the gate light, and the EXT light.

The overflow signal from the $\div 10$ output of A9U7 (U8, Option 001) enters through pin M and is differentiated by C2 and R1. Q1 turns on momentarily to set flip-flop U1A&D. During the transfer pulse, the information at U1A&D is transferred to the overflow storage flip-flop U1B&C. The overflow condition drives U1C(8) low to turn Q2 on and light overflow lamp DS1. The next reset pulse clears flip-flop U1A&D; however, U1B&C are not reset until the transfer pulse arrives. With storage off, transfer is on continuously.

A low at pin L turns on Q3 to light the count lamp, DS2. Similarly, a low at pin A lights the EXT lamp and opens the common lines for the TIME BASE, FUNCTION, and SLOPE switches. This disables these controls to allow remote programming of the unit.



Decimal selection and resultant blanking are accomplished by the negative logic AND gates. For any pair of low inputs, a specific decimal point line is held low, lighting the decimal point. There are a number of combinations for each decimal; therefore, the output of each AND gate is paralleled to give a wired OR configuration (any output low = all low).

A11 TROUBLESHOOTING


Select the specific function mode and time base combination that is faulty. Check the gate that is common to the two lines. Refer to Table 5-5 for the proper annunciator lighting conditions.

To check the overflow circuits, set the FUNCTION switch to START and select a fast gate time. When the most significant digit on the counter's display changes from 9 to 0, both flip-flops in the overflow circuit should set. As an initial test, check U2 for a High on pin 13. The second flip-flop (U1B and U1C) should have a Low on pin 8 and a High on pin 6.

In any mode other than START, the -TRANSFER line pulses Low, rather than being held Low. If the OF light does not turn off at the end of the display time, check that the -RESET pulse clears flip-flop U1A&D.

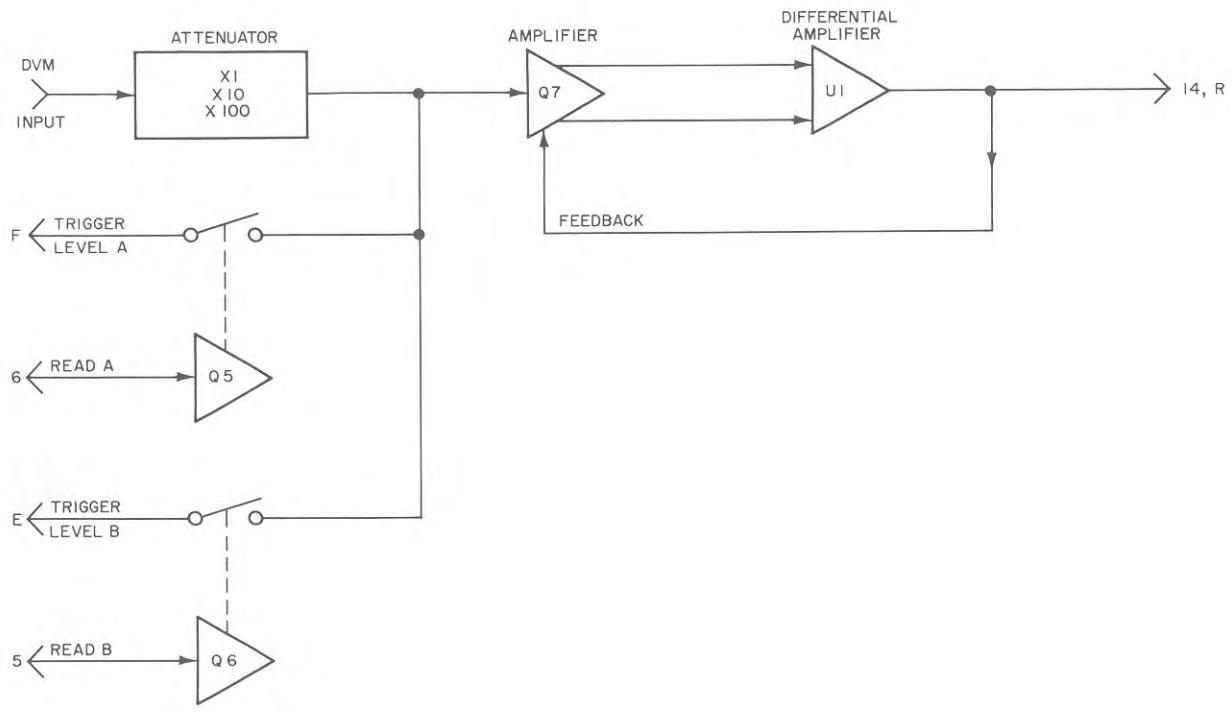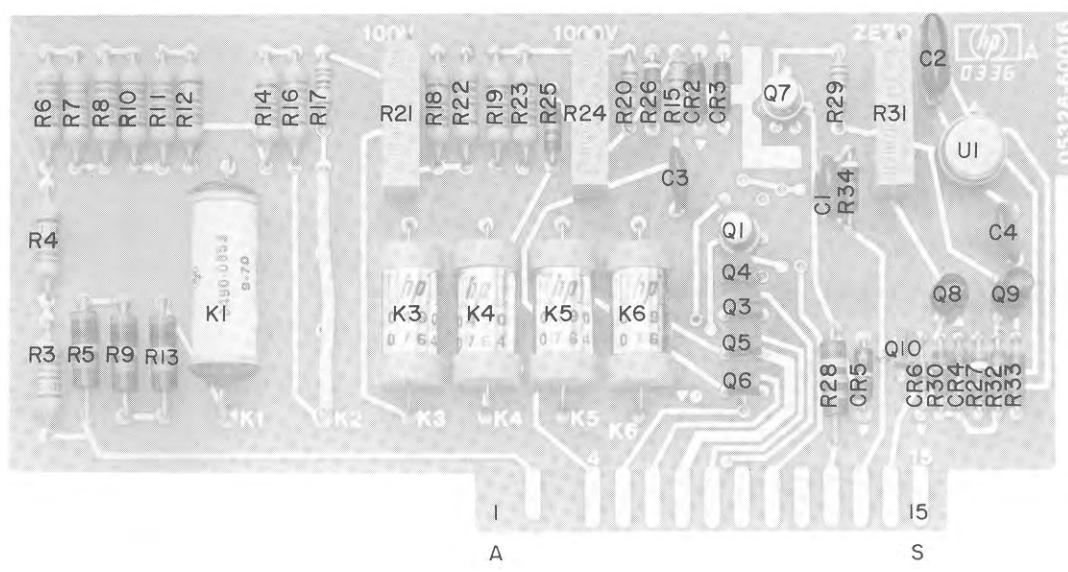

AI2 VOLTMETER INPUT AMPLIFIER AS

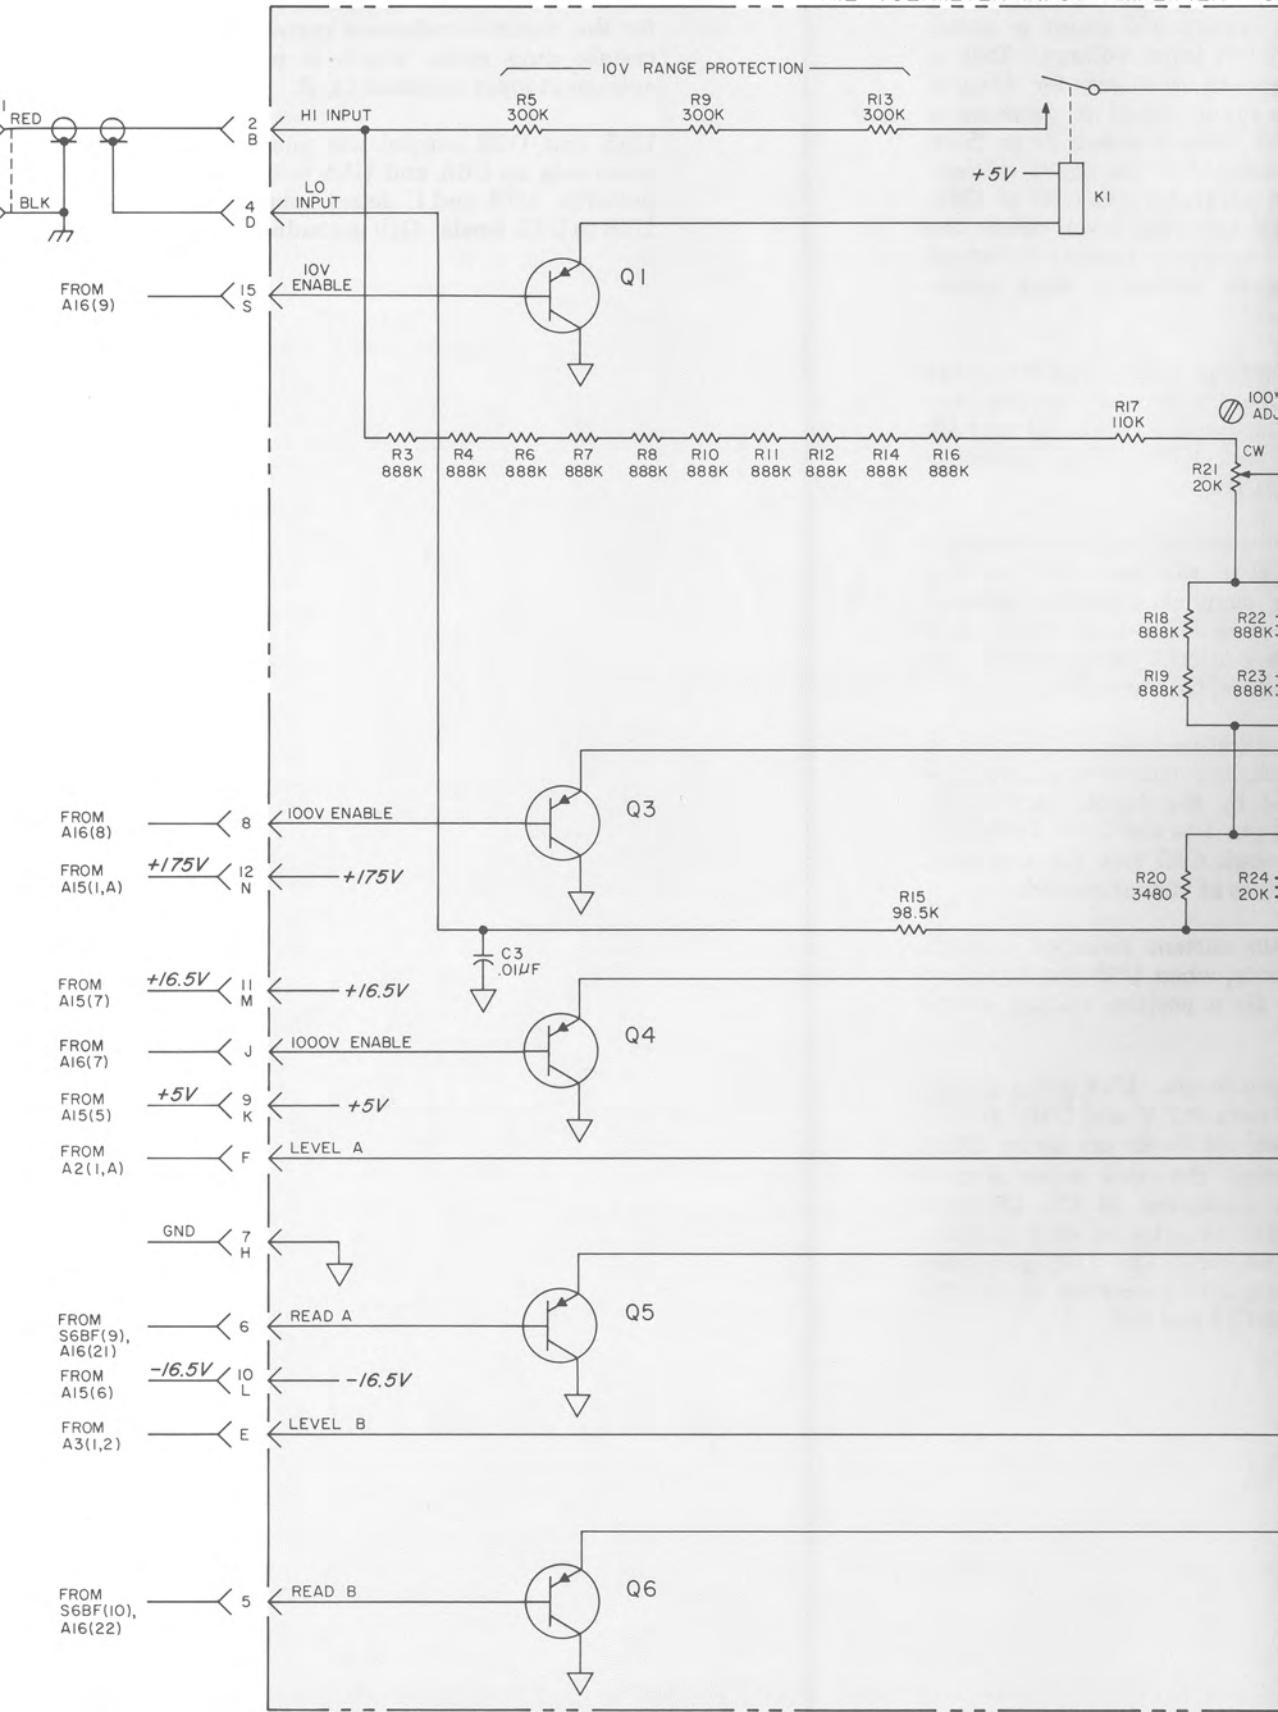

OV RANGE PROTECTION

R9 300K
R13 300K

+5V
K1

Q1

R8 888K R10 888K R11 888K R12 888K R14 888K R16 888K

R17 110K

100V ADJ

CW

R18 888K R22 888K
R19 888K R23 888K

R21 20K

+5V

K3

Q3

R15 98.5K

R20 3480

R24 20K

R25 820K

+5V

K4

Q4

R26 910K

+5V

K6

Q5

+5V

K5

Q6

+175V

R28 160K

CR5 6.19V

CR6

+16.5V

Q10

-16.5V

INPUT PROTECTION

CR2

CR3

Q7A

D

G

S

Q7B

D

G

S

R29 237

CW

R31 500

ZERO ADJUST

Q8

R27 3900

CR4 4.64V

CONSTANT CURRENT SOURCES

R30 17.8K

R32 17.8K

-16.5V

C1 .01μF

R34 910K

R33 10K

Q9

R31 500

ZERO ADJUST

Q8

R27 3900

CR4 4.64V

CONSTANT CURRENT SOURCES

R30 17.8K

R32 17.8K

-16.5V

C2 47

R34 910K

R33 10K

Q9

R31 500

ZERO ADJUST

Q8

R27 3900

CR4 4.64V

CONSTANT CURRENT SOURCES

R30 17.8K


R32 17.8K

-16.5V

FEEDBACK
UI
C2 47
C4 0.01A
+16.5V

UNITY GAIN AMPLIFIER

SERIES 1048A

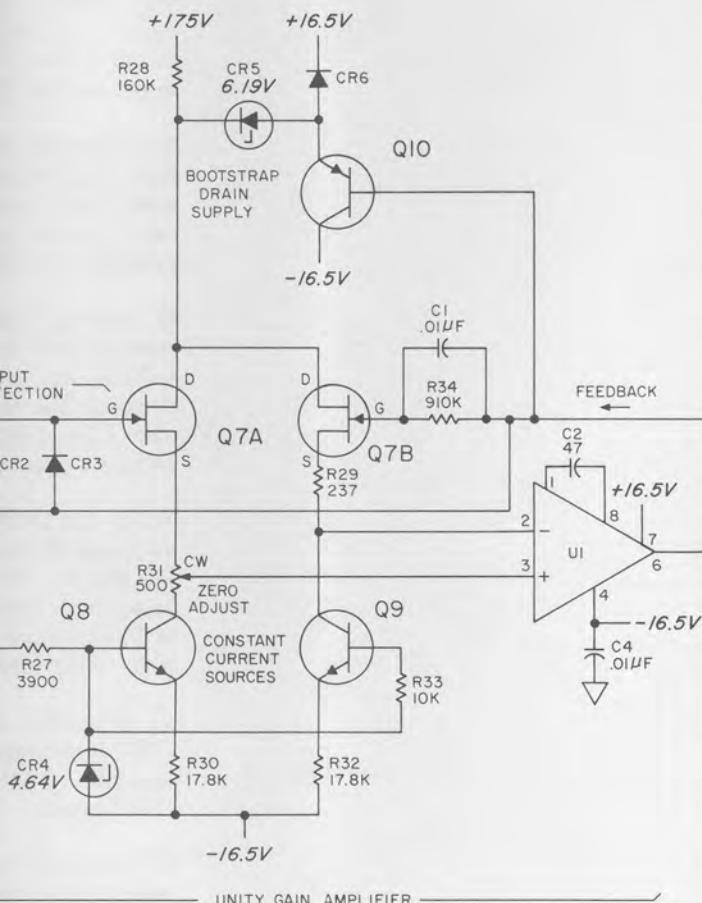


NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;

TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|------------------------|-------------------------------|
| CR2,3 | 1901-0376 |
| CR4 | 1902-3083 |
| CR5 | 1902-0049 |
| CR6 | 1901-0040 |
| Q1 | 1850-0099 |
| Q3-6 | 1853-0020 |
| Q7 | 1855-0049 |
| Q8,9 | 1854-0087 |
| Q10 | 1853-0036 |
| UI | 2N3906 1820-0223 LM301A |

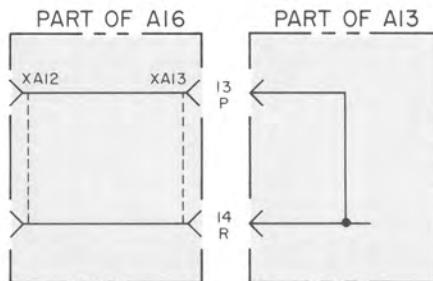

RELAY TRUTH TABLE

| RANGE | RELAY ENERGIZED | | | | |
|--------|-----------------|----|----|----|----|
| | K1 | K3 | K4 | K5 | K6 |
| IOV | X | | | | |
| IOOV | | | X | | |
| IOOOV | | | | X | |
| READ A | | | | | X |
| READ B | | | | X | |

REFERENCE DESIGNATIONS

| NO PREFIX | A12 |
|-----------|---|
| J1 | C1-4 CR2-6 K1,3-6 Q1,3-10 R3-34 UI |


NOT USED: CRI, K2, Q2, RI, R2

05326-D-15

Figure 8-15. A12 Voltmeter Input Amplifier Assembly

Model 5326/27B
Schematic Diagrams

Part of Figure 8-16. A13 Voltmeter V to F Converter Assembly

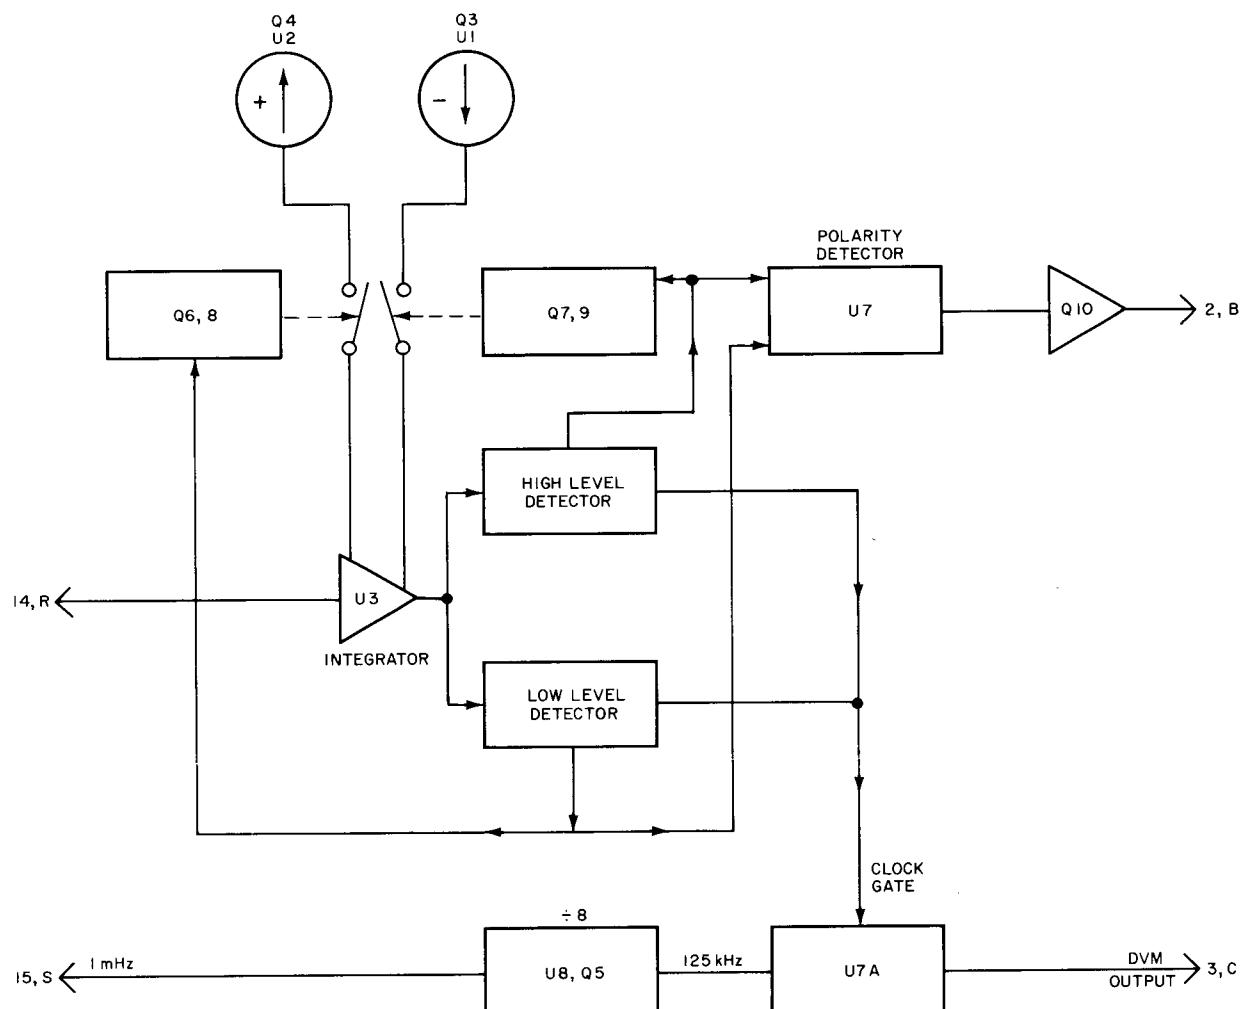

MORE DATA UNDER THIS FOLD

U6 and U5 are connected as two master-slave flip-flops. U6A is the master and U5A the slave. Data from U4A is stored and clocked for the negative reference current control, e.g., A will be high for a certain duty cycle, which is proportional to the applied negative voltage at input terminal 14, R.

U6B and U5B control the positive reference current in much the same way as U6A and U5A to evaluate input signals with a positive polarity. U7B and C detect polarity and Q10 translates the output of U7B to DTL levels. Q10 is conducting for negative polarity.

Figure 8-15
A12 VOLTMETER INPUT AMPLIFIER ASSEMBLY

(See Page 8-39)

A13 VOLTAGE TO FREQUENCY CONVERTER OPERATION

This assembly converts the output from the unity gain amplifier on A12 to a control signal that opens the clock gate U7A. When the main gate A7U11B opens, the decade counters will count a signal whose frequency is proportional to the DVM input voltage. This is accomplished by establishing two reference voltages for U4A/B switching circuitry and integrating the input signal to generate a ramp function. The time required for the ramp function to go from one reference level to the other is proportional to the input voltage. A reference current is switched into the integrator via CR5 or CR6. This returns the integrator to its original reference level, where the cycle starts again. During the time the reference current is turned on to return the integrator to the original reference, clock pulses appear at the DVM output on Pin 3 of U7A.

This process continues during the integrating time selected by the time base switch. At the end of this time, the decade counters contain a count that indicates the input voltage on the DVM. Q1 and Q2 are constant current sources for CR1 and CR4. This develops extremely stable voltages across CR1 and CR4.

Q3 and Q4 are output transistors connected in feedback arrangement which keeps pins 2 of U1 and U2 at the same level as the voltage on the reference diode. This supplies constant currents through the resistive networks connected to U2(2) and U1(2). R15 and R16 adjust the magnitude of this current. R10 and R7 are factory selected according to the exact value of CR4 and CR1.



When the DVM input is negative, the negative reference current is switched through diode CR5 into the summing node of the integrator U3 pin 2. This operation is controlled by the digital part of the assembly. If pin 2 of U5A is high and pin 1 is low (A=1), diode CR7 is back biased to route Q3 current through CR5 into the summing node of the integrator. The summing node is at virtual ground.

In a similar way, the positive reference current switches through CR6 to the summing node of the integrator, when U5B pin 12 is low and pin B is high (B=1). This is used for a positive voltage at the DVM input.


U4 is a quad comparator with ECL output levels. U4A gives a high output if the output of U3(V2) is greater than -0.7 V and U4B pin 4 is low if V2 is less than -1.8 V. These threshold levels are set by CR11 and R29, 31, 32. U4C and D differentiate the clock input after it passes through the divide-by-8 circuit consisting of U8, Q5, and R24. U4D generates a negative going 100 ns pulse on each positive transition of the 125 kHz clock at the collector of Q5. U4C generates a positive going 100 ns pulse on each negative transition of the 125 kHz clock. Differentiating occurs through C11 and R33.

U6 and U5 are connected to the master and U5A the for the negative reference certain duty cycle, which voltage at input terminal


U6B and U5B control same way as U6A and U5A polarity. U7B and C develop U7B to DTL levels. Q10

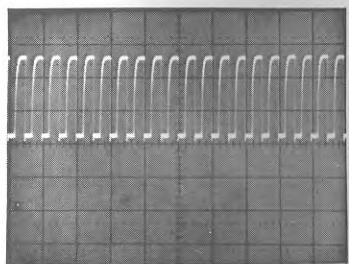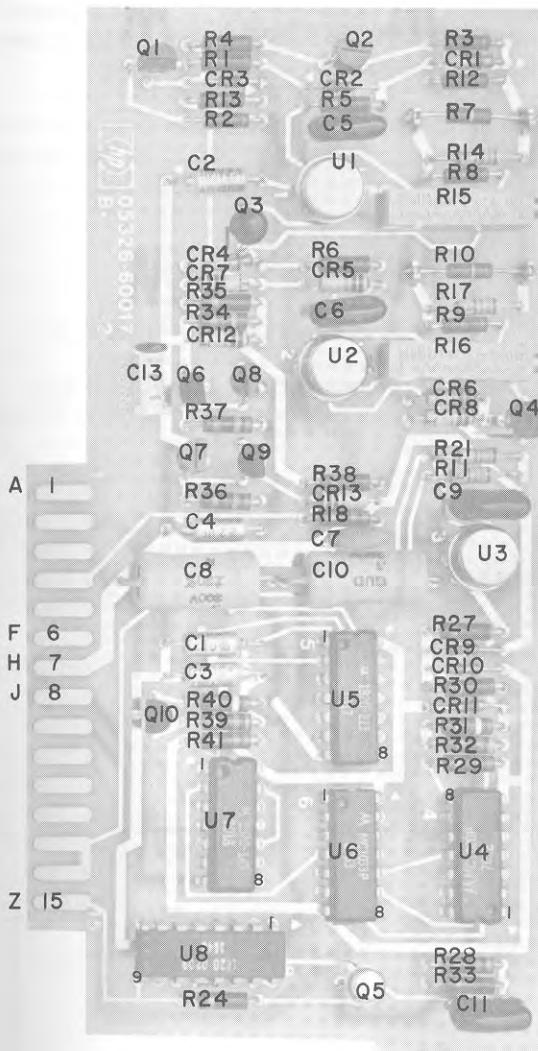

① U8(9)
.1 V/cm
2 μ s/cm

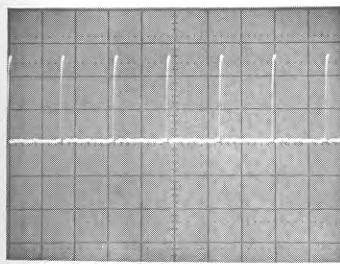

② Q5 Collector
.2 V/cm
5 μ s/cm

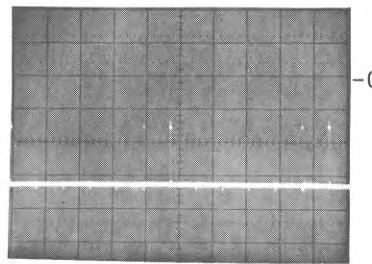


③ U7(3)
.05 V/cm
10 μ s/cm


All waveforms dc coupled through 10:1 divider probe. Divider probe ground connected to junction to C1 and C3. Triggering is internal ac. Zero volts in center line of graticule.

SAMPLE RATE NORM CCW
FUNCTION READ A


A LEVEL for 2.10 V readout

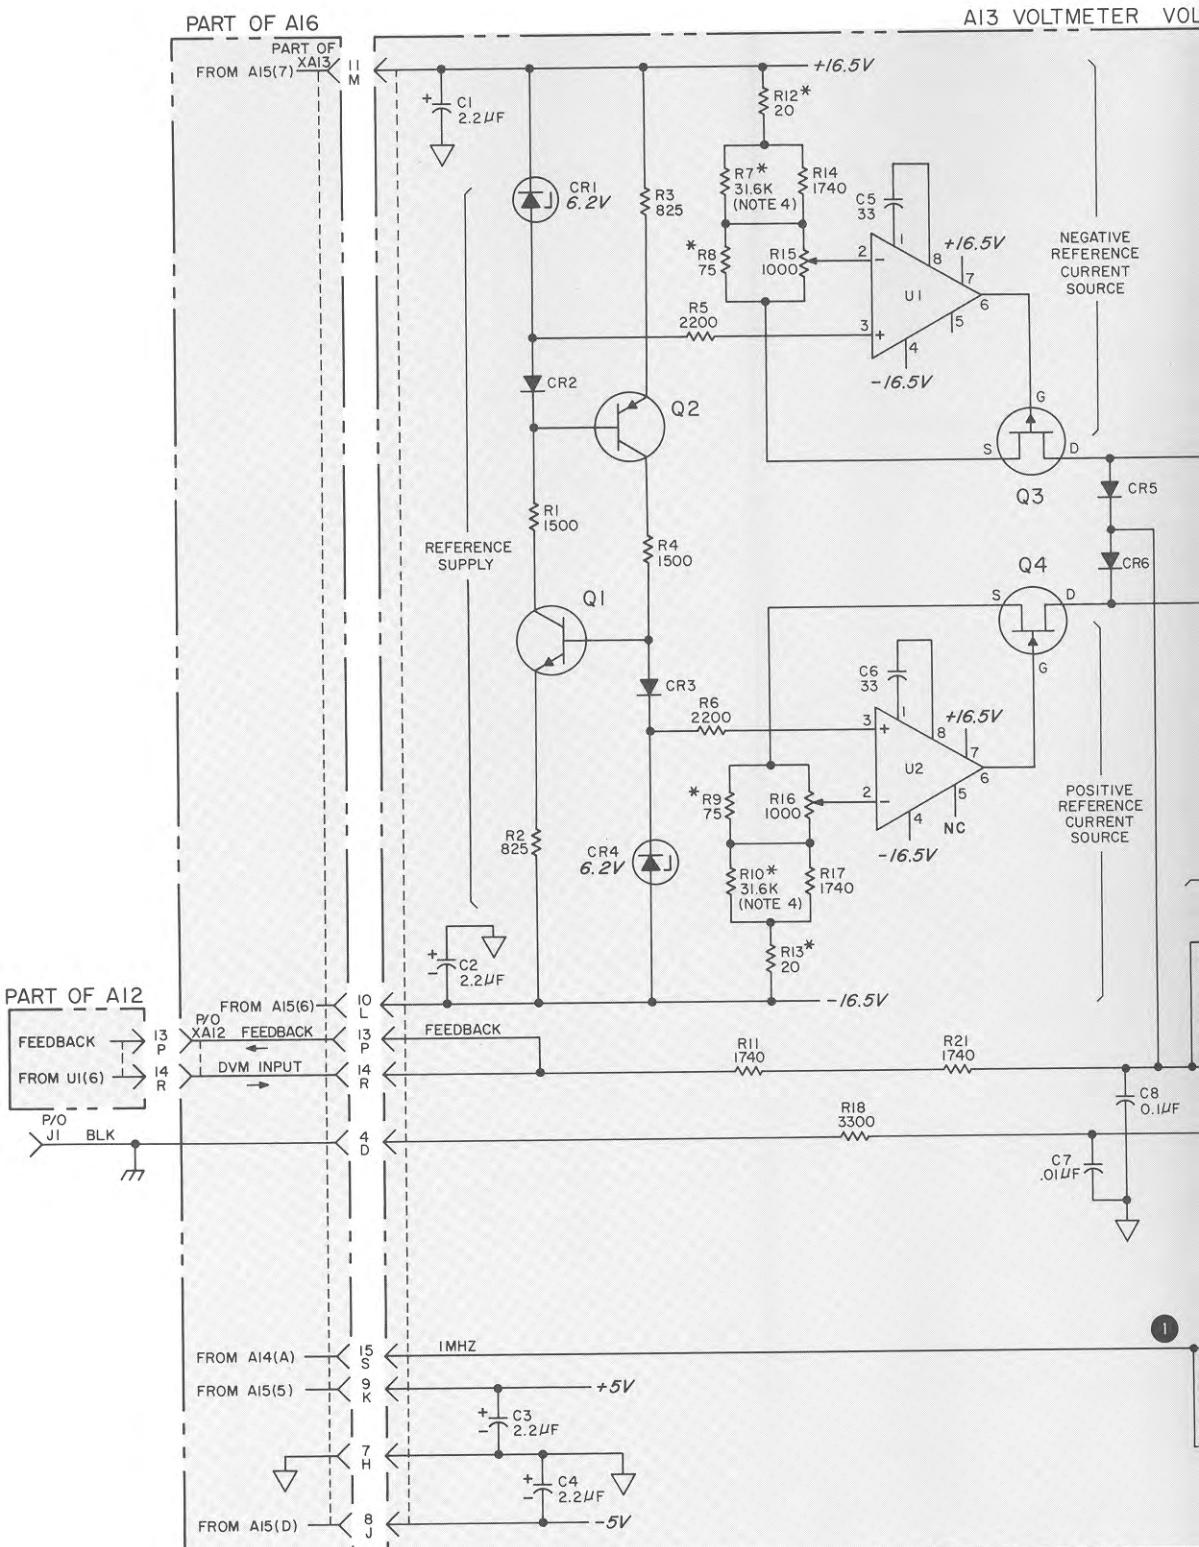

A13 VOLTMETER VOLTAGE TO FREQUENCY CONVERTOR ASSEMBLY (05326-60017) (NOTE 1) REV. B SERIES 1032A

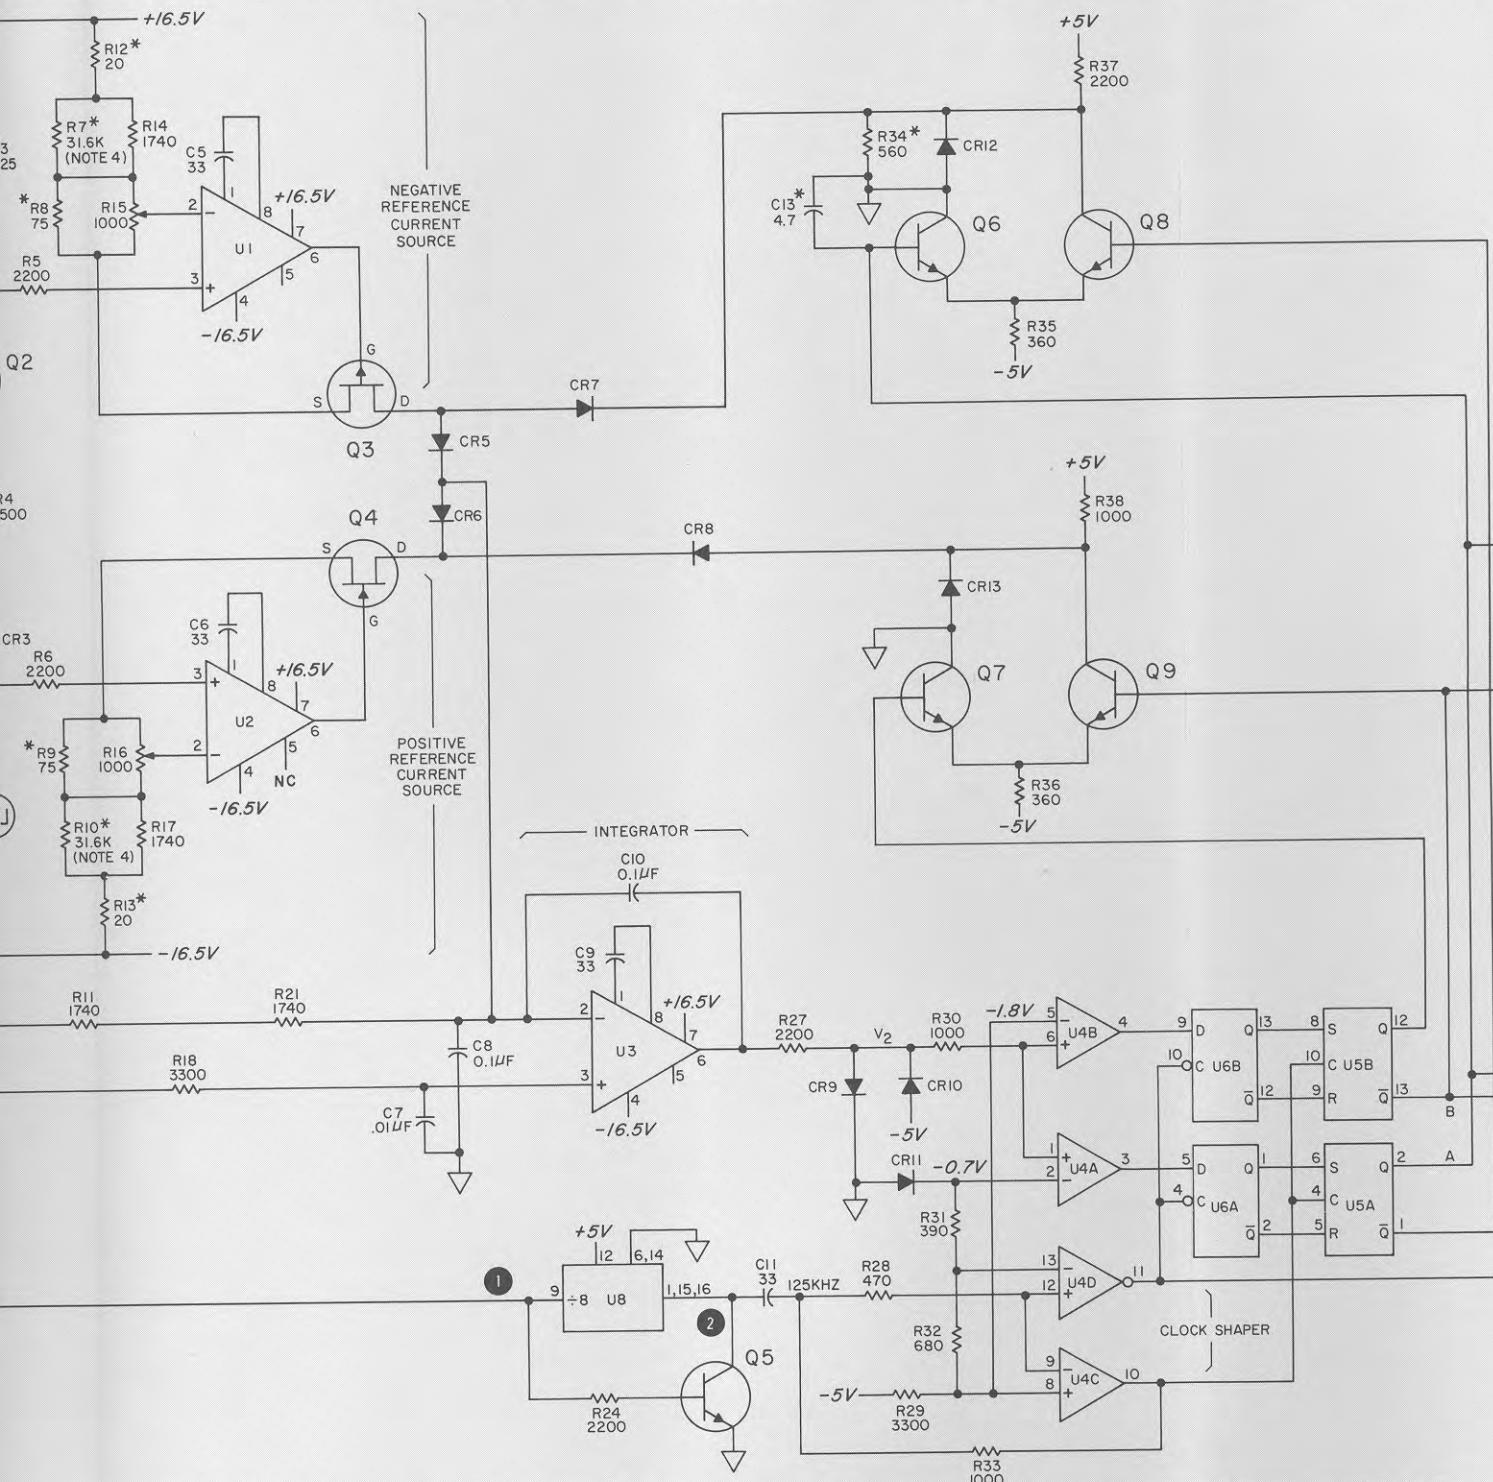

R ASSEMBLY (05326-60017) (NOTE 1) REV. B SERIES 1032A

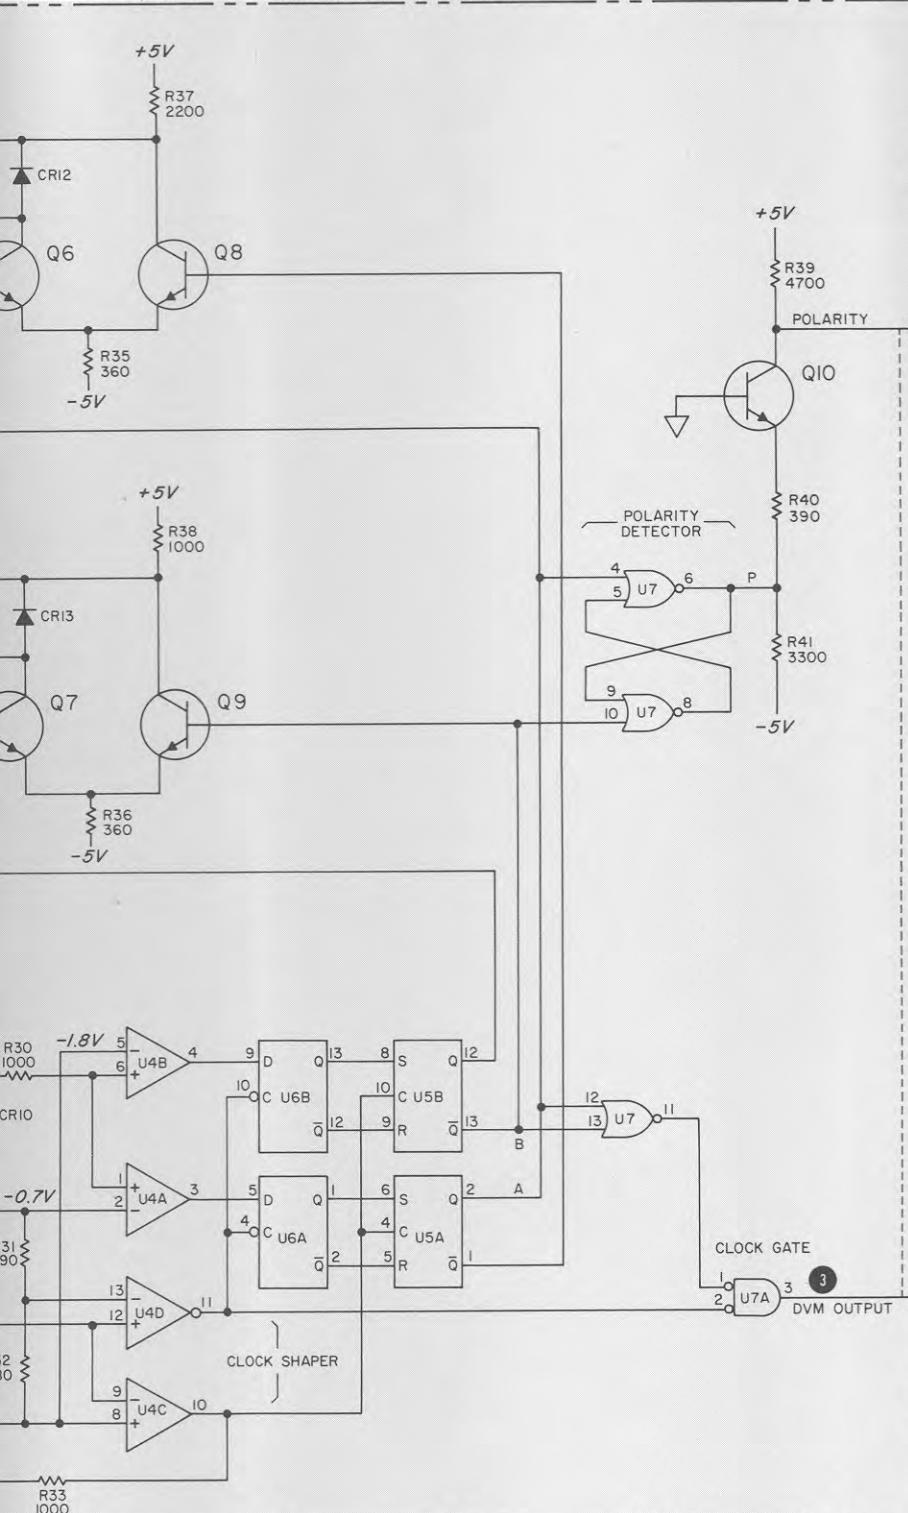

NOTES

- REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
- UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;
- ASTERISK (*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN
- R7 AND R10 ARE SELECTED FROM ONE OF THE FOLLOWING FOUR VALUES:
31.6K, 61.9K, 19.6K OR OPEN.

| REFERENCE DESIGNATIONS | |
|------------------------|----------|
| NO PREFIX | A13 |
| CRI12 | CI-II,13 |
| CR13 | CRI-19 |
| Q1 | QI-10 |
| Q2 | RI-41 |
| Q3 | UI-8 |
| Q6 | |
| Q7 | |
| Q8 | |
| Q9 | |
| Q10 | |
| U4A | |
| U4B | |
| U6A | |
| U6B | |
| U5A | |
| U5B | |
| U7 | |
| U7A | |
| U4C | |
| U4D | |

C12 DELETED
R19,20,22,23,25,26 DELETED

TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|------------------------|-----------------|
| CRI,4 | I902-0680 |
| CR7 | I901-0535 |
| CR2,3,9-II | I901-0040 |
| CR5,6,8,12,13 | I901-0179 |
| Q1,10 | I854-0071 |
| Q2 | I853-0020 |
| Q3 | I855-0056 |
| Q4 | 2N4342 |
| Q5 | I855-0081 |
| Q6-9 | I854-0009 |
| U1-3 | 2N709 |
| U4 | I854-0092 |
| U5 | 2N3563 |
| U6 | I820-0223 |
| U7 | MC14399 |
| U8 | MC1020P |
| | I820-0212 |
| | MC1014P |
| | I820-0213 |
| | MC1033P |
| | I820-0145 |
| | MC1010P |
| | I820-0209 |

TRUTH TABLE

| VOLTMETER INPUT | V2 = OUTPUT OF OP AMP U2(6) | AFTER CLOCK PULSE | | |
|-----------------|-----------------------------|-------------------|---|----------------|
| | | A | B | P |
| NEGATIVE | V2 > -0.7V | H | L | L |
| | -0.7V > V2 > -1.8V | L | L | PREVIOUS STATE |
| POSITIVE | -1.8V > V2 | L | H | H |

H = -0.75V, L = -1.60V

05326-D-16

Figure 8-16. A13 Voltmeter V to F Converter Assembly

Model 5326/27B
Schematic Diagrams


A14 VOLTMETER DISPLAY CONTROL OPERATION



This board activates the "volts", "+", or "-" annunciators, provides the 1 MHz required by A13, and selects the decimal point for three settings of the time base switch.

U3A and B gates the polarity information into the polarity flip-flop U3C, D (H=+ polarity). This information is transferred into buffer storage U2A and B by gates U2C and D when the "transfer data" line is enabled (low = enable).


Gates U5C and D activate either the + or - front panel lamp when the unit is in the DVM, READ A, or READ B mode. The volts annunciator is activated by U5B whenever the mode is DVM, READ A, or READ B and when the time base is 10 ms, 100 ms, or 1 sec. U5A removes the ground from the DVM range switch when not in the DVM mode. U6D sets the time base to 10 ns when the READ A or READ B mode is selected.

U4, U7, and U6C select the correct decimal point for the various combinations of time base and range switch settings. CR6, 7, 4, and 5 are installed to alleviate fan-out (IC loading) problems.

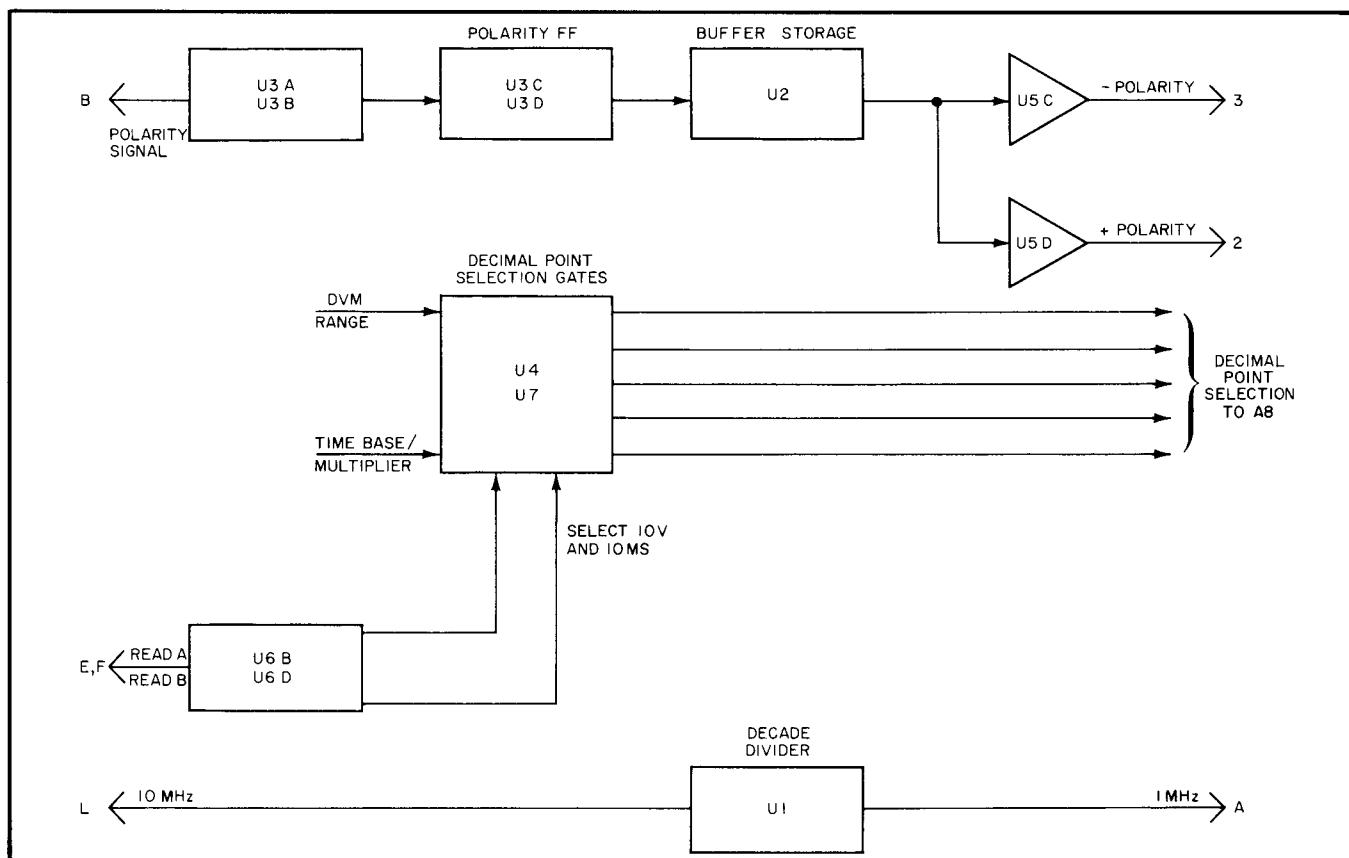

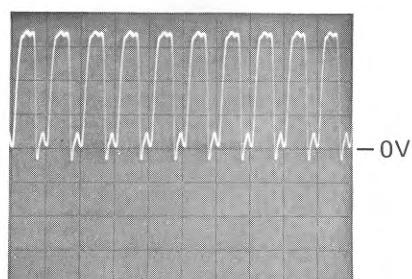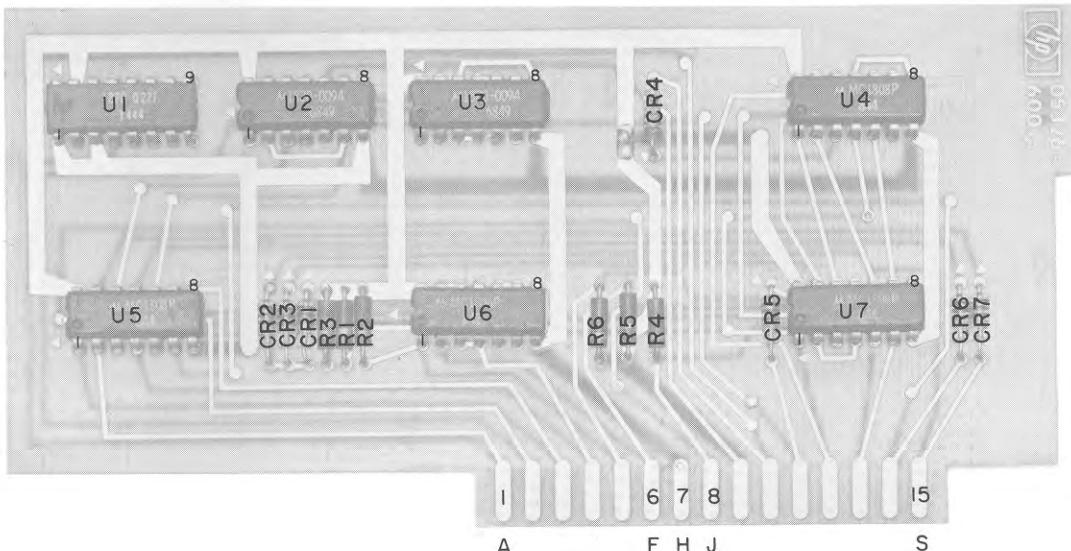

① A14 U1(2)
.1 V/cm
.1 μ s/cm

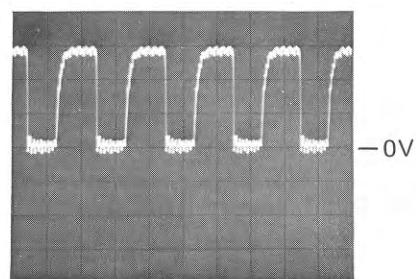



② A14 U1(4)
.1 V/cm
.5 μ s/cm


All waveforms dc coupled through 10:1 divider probe. Divider probe ground is connected to U2(7). Zero volt center line as indicated.

Counter Controls: INT-EXT (rear panel) INT

A14 VOLTMETER DISPLAY CONTROL ASSEMBLY (05326-60015) (NO)

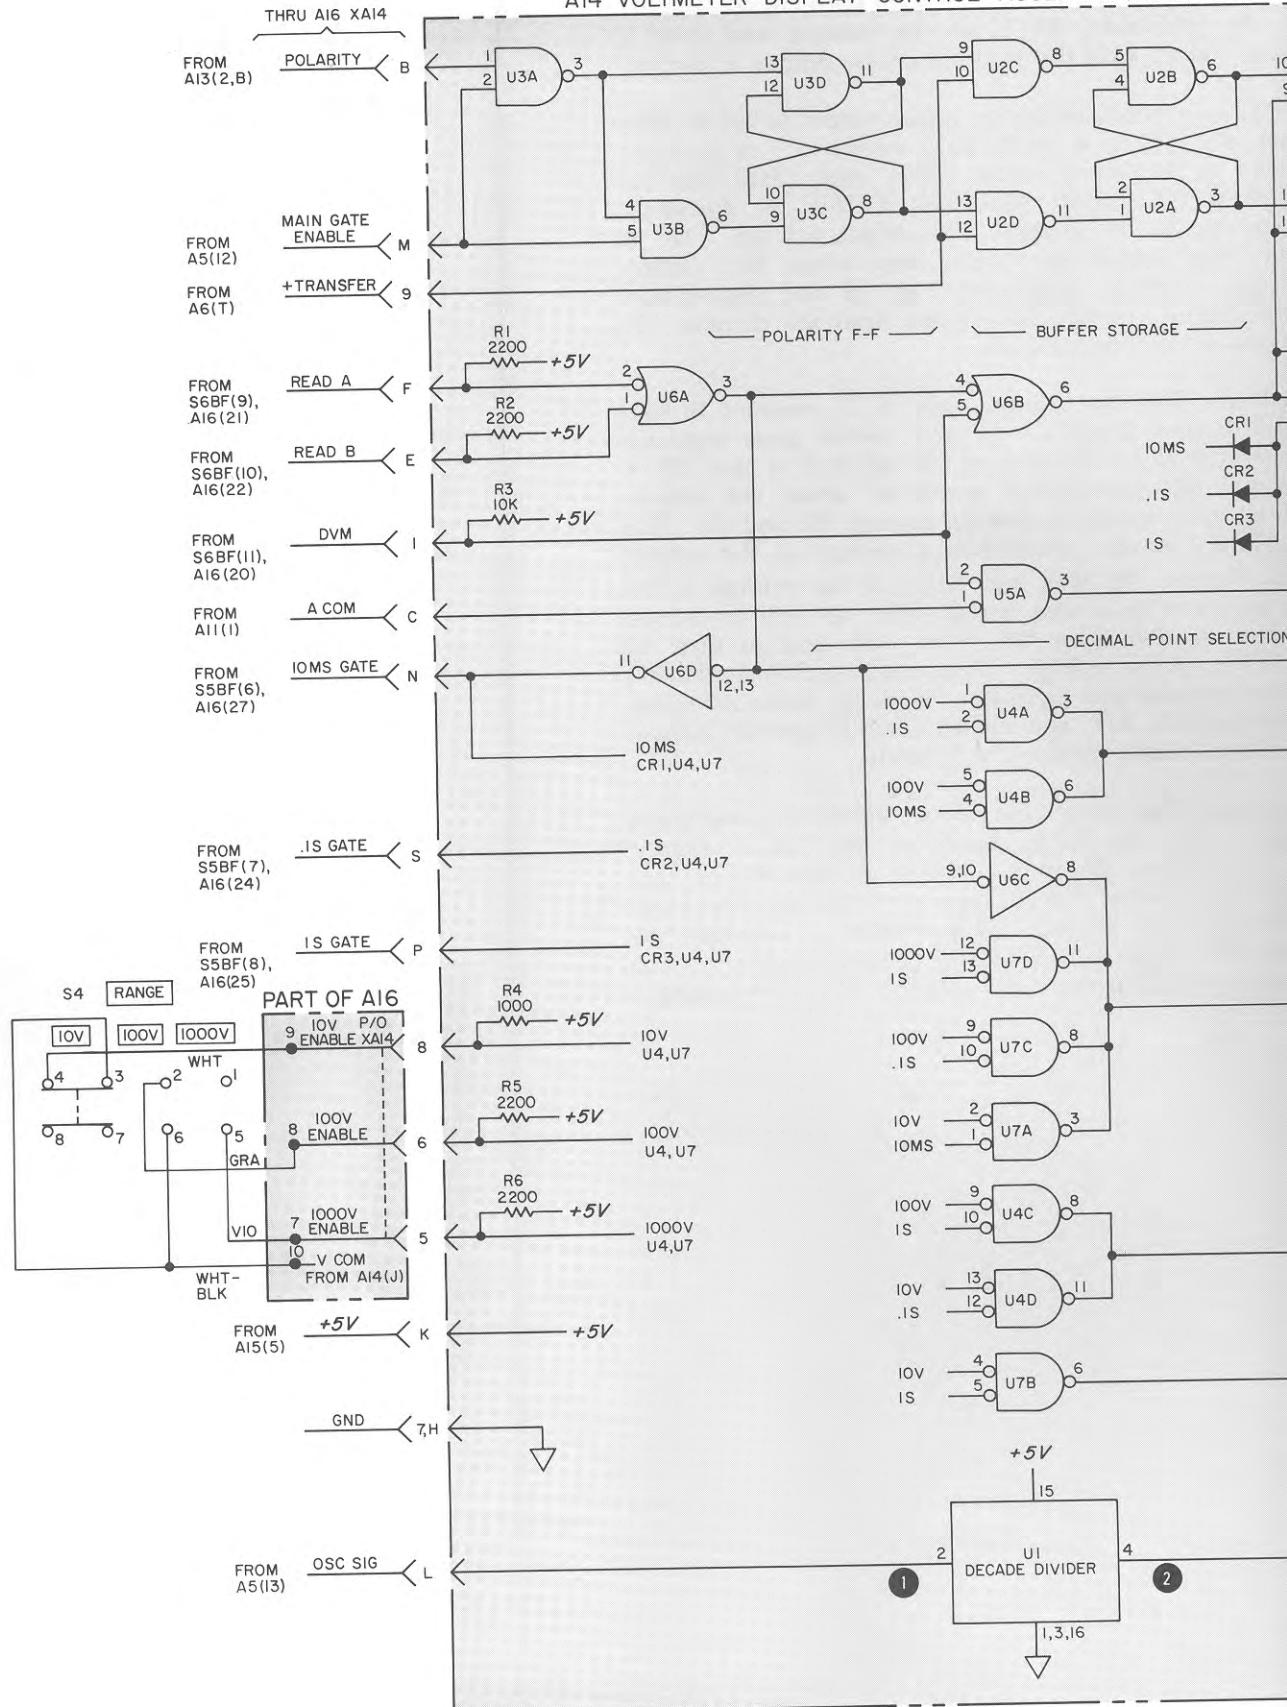

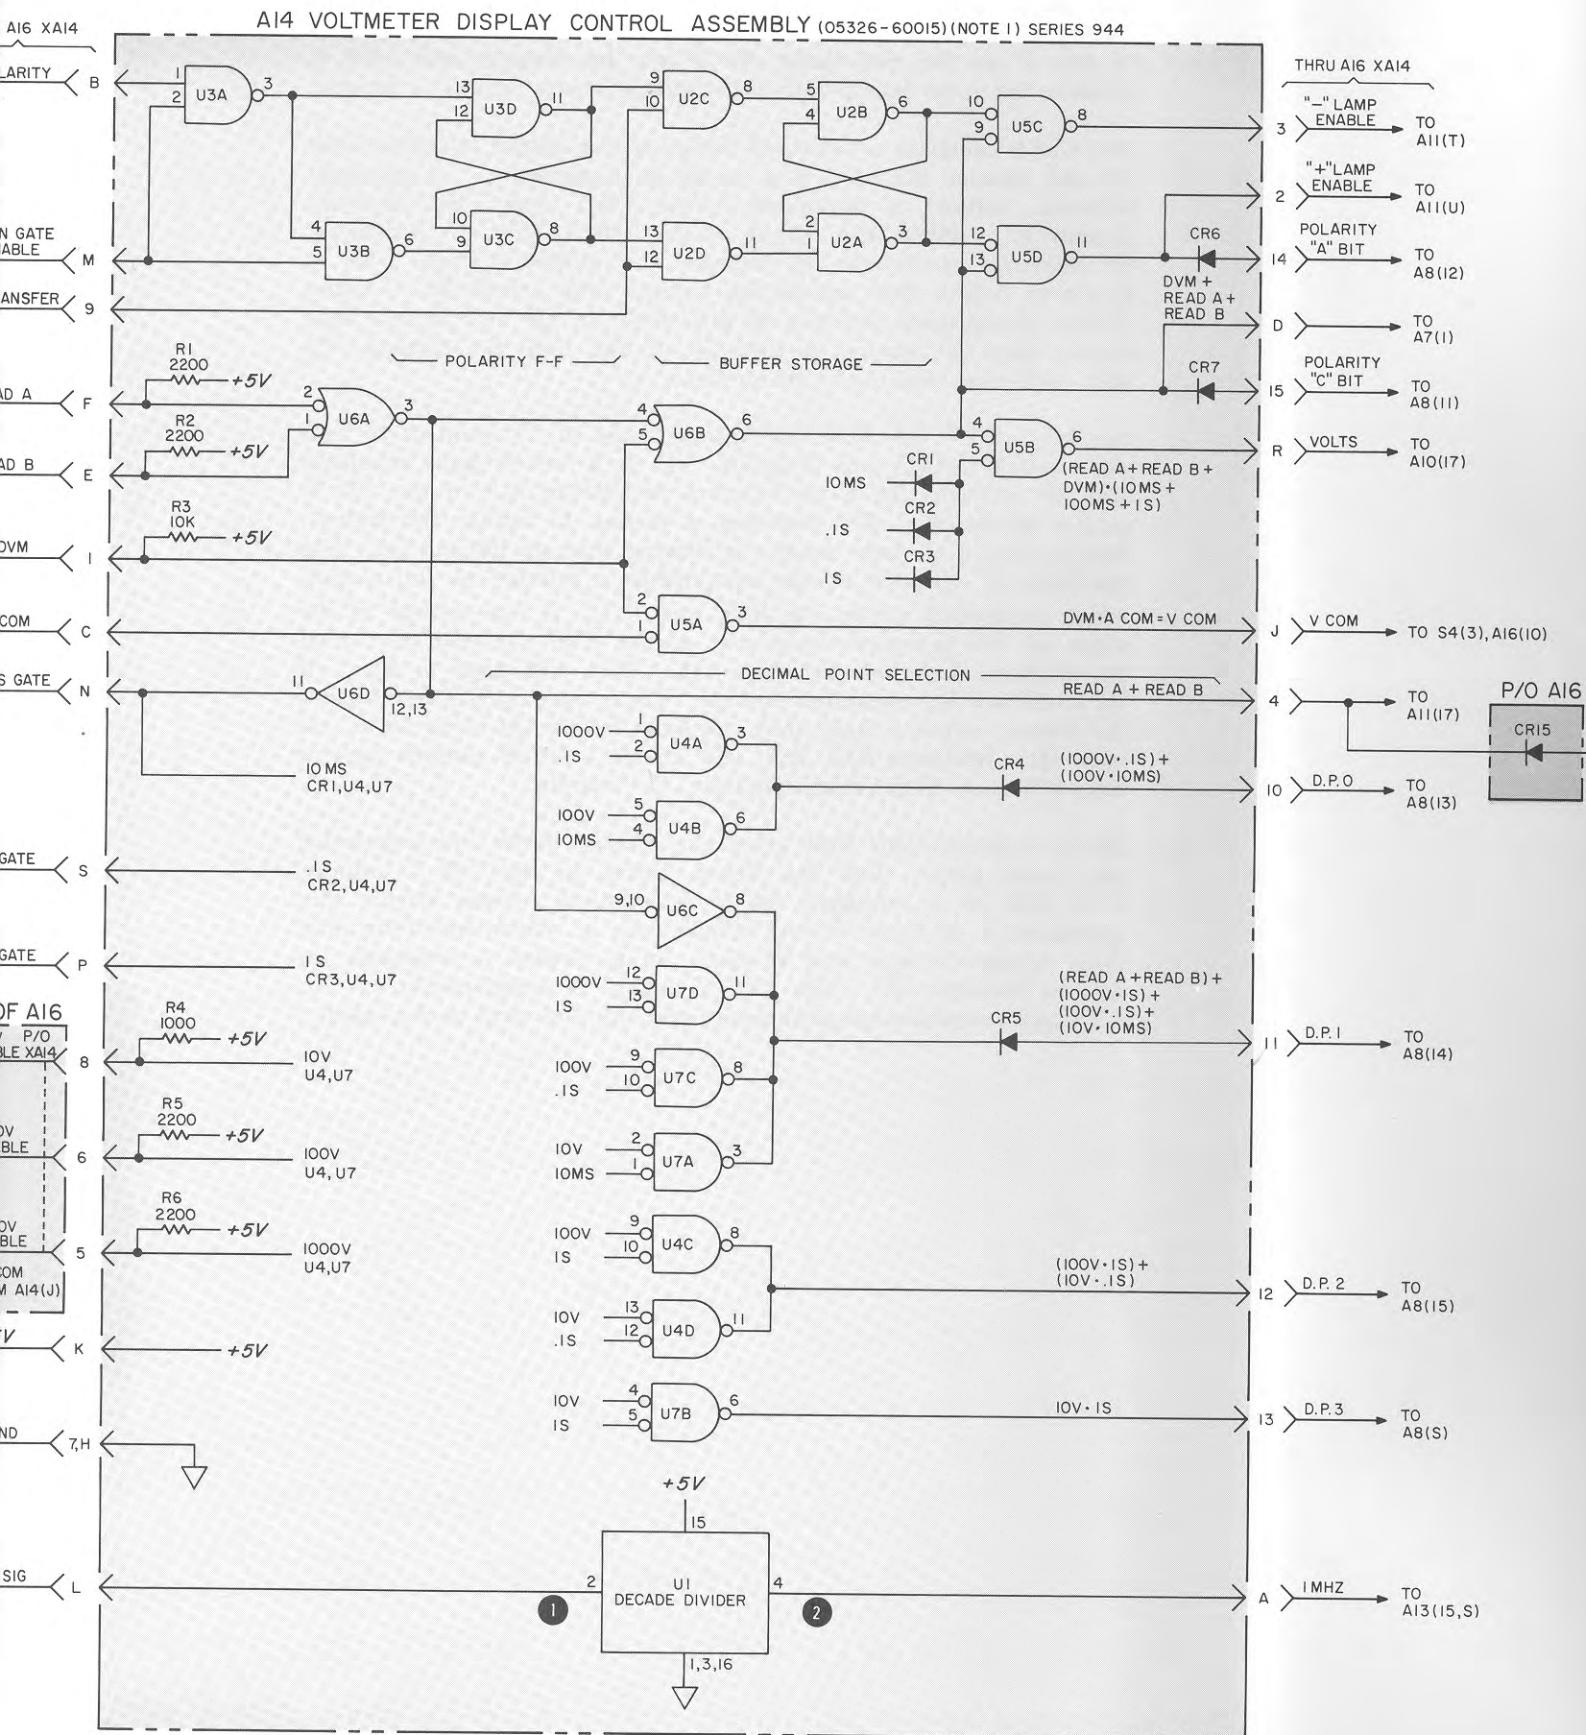

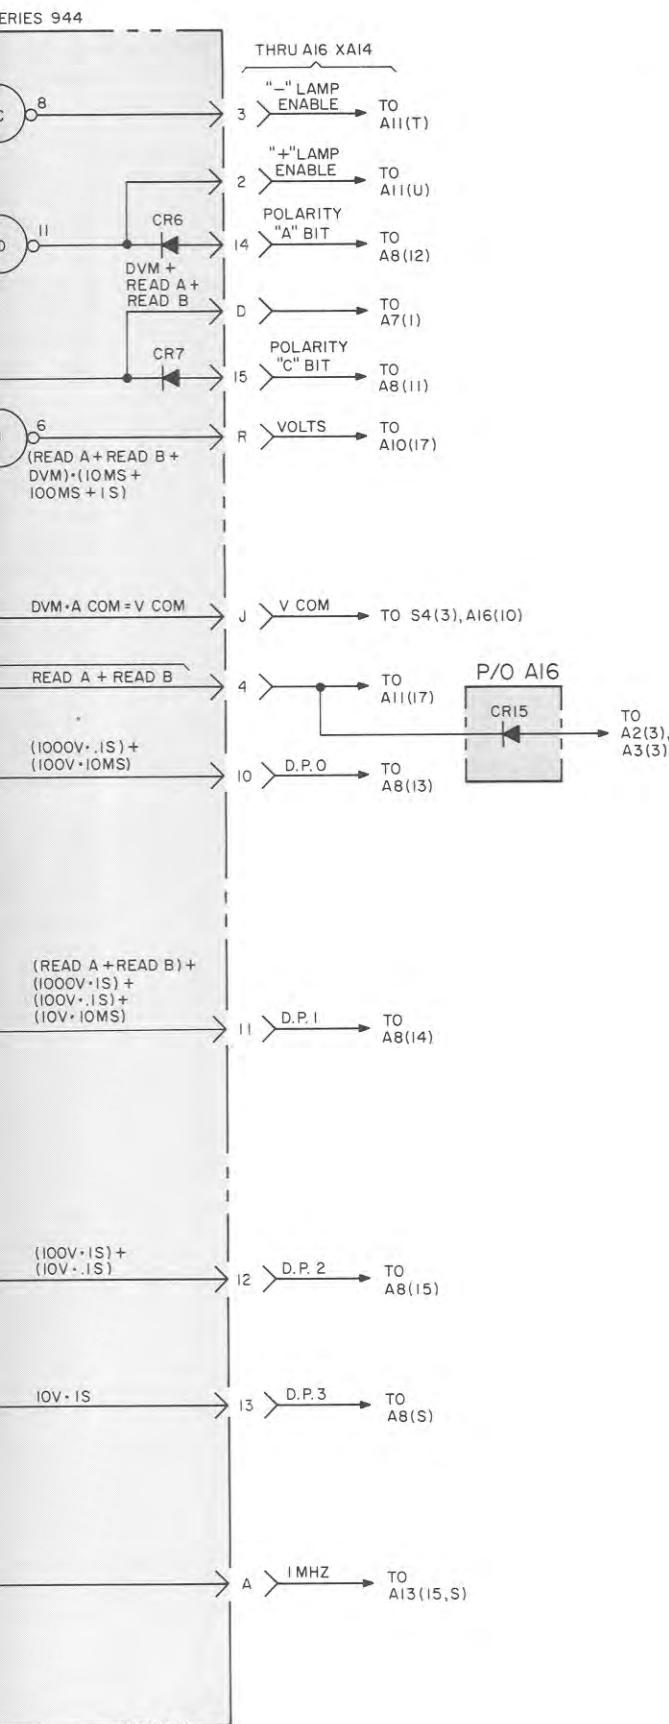

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;

REFERENCE DESIGNATIONS

| NO PREFIX | A14 | A16 |
|--------------|-----------------------|------|
| S4 | CRI-7 R1-6 UI-7 | CR15 |

TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|---|--|
| A14 CRI-7 U1 U2,3 U4,5,7 U6 A16 CR15 | 1910-0016 1820-0413 1820-0094 MC 846P 1820-0274 1820-0273 MC1806P 1901-0040 |

05326-D-3

Figure 8-17. A14 Voltmeter Display Control Assembly

A15-A16 POWER SUPPLY OPERATION

The power supply provides +175, +16.5 V and +5 V. Transformer T1 has a 115/220 primary and secondaries with open circuit voltages of 181 V at the red leads, 21 V at the orange, and 18.6 V between the green leads, with the winding center tapped to ground.

A15 CR6-9 comprise a full-wave bridge whose output is fed to filter C3 and bleeder R3. Q5 is a series pass regulator. A constant reference voltage is developed across CR11 and CR12 through resistor R1. When the output voltage at XA15(1, A) decreases, Q5 increases conduction to increase the output voltage. Q8 is a current limiter that senses the voltage drop across R6. Output current above approximately 60 mA turns on Q8 and shunts base current from Q5, tending to turn Q5 off and limit the current. C1 adds oscillation stability to the regulator.

For the +16.5 V supplies, the orange leads of T1 connect to half wave rectifier CR4 and filter C4. Q1 is a series pass regulator and Q9 performs the same function as CR11&CR12 in the 175 V supply except that R10 provides a means to adjust the output. Assume that a Q1 base current is flowing through R2 and Q6. The resulting Q1 collector current establishes a voltage at the output, which is divided across R9, R10, and R11. If the voltage at the wiper of R10 is greater than that across CR9, Q9 will be turned on, shunting base current from Q1. This will tend to turn off Q1 and lower the regulated voltage. Thus, varying R10 establishes the largest output voltage that can exist before Q9 turns on to cut back Q1. Resistors R17, R18, and diodes CR15-18 provide current limit action at 180 mA similar to the +175 V supply.

Q6 is a preregulator that gives the circuit better line regulation and lower ripple than the Zener diodes of the 175 V supply. With CR1 as a reference, Q6 is a constant current circuit that maintains a Q1 base current independent of variations of the input (line voltage changes and ripple). R4 is needed to establish the current through CR1. The -16.5 V supply is complementary. The 5 V supplies are also complementary and only the + will be discussed.

The output from the T1 green leads is fed through full wave rectifier CR10 and CR11 into filter C1. It then passes through overload current limiter R1 and into the series pass regulator Q1, to the 5 V output at Q1C. Q3 is a driver for Q1 and has approximately 5.75 V on its base, developed across CR6 and CR5 by the current from the 16.5 V supply through R7. If the voltage at the emitter 5.1 V, Q3 is turned on providing base current to turn on Q1, raising the output voltage. Q3 turns off when its emitter gets above 5.1 V. C2 is the output filter to maintain a low output impedance at high frequencies.

CR2 clamps the output at 6 V to provide protection for the IC's in case the 16.5 V or 175 V line should momentarily short to the 5 V line. CR5 provides thermal compensation for Q3.

Note that the 16.5 V supply is needed for operation of the 5 V supply. If the + or - 16.5 V supply fails, the corresponding 5 V supply will be inoperative.



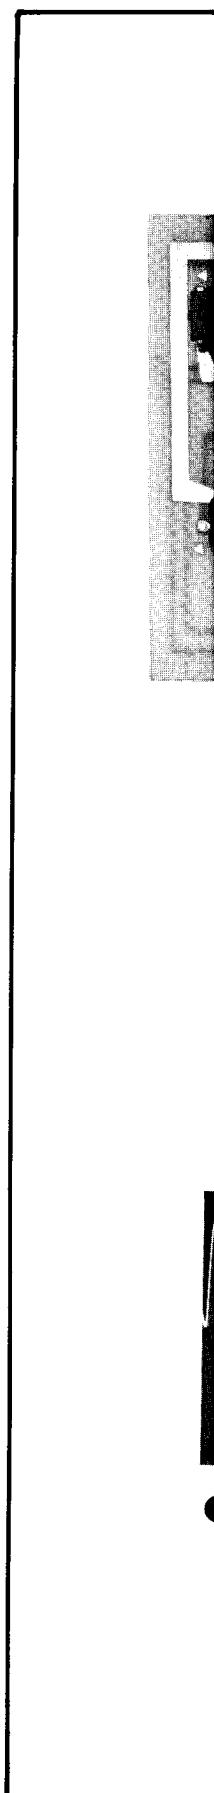



Figure 8-17
A14 VOLTMETER DISPLAY CONTROL ASSEMBLY

(See Page 8-43)


Part of Figure 8-18. A15, A16 Regulator/Interconnect Board Assembly

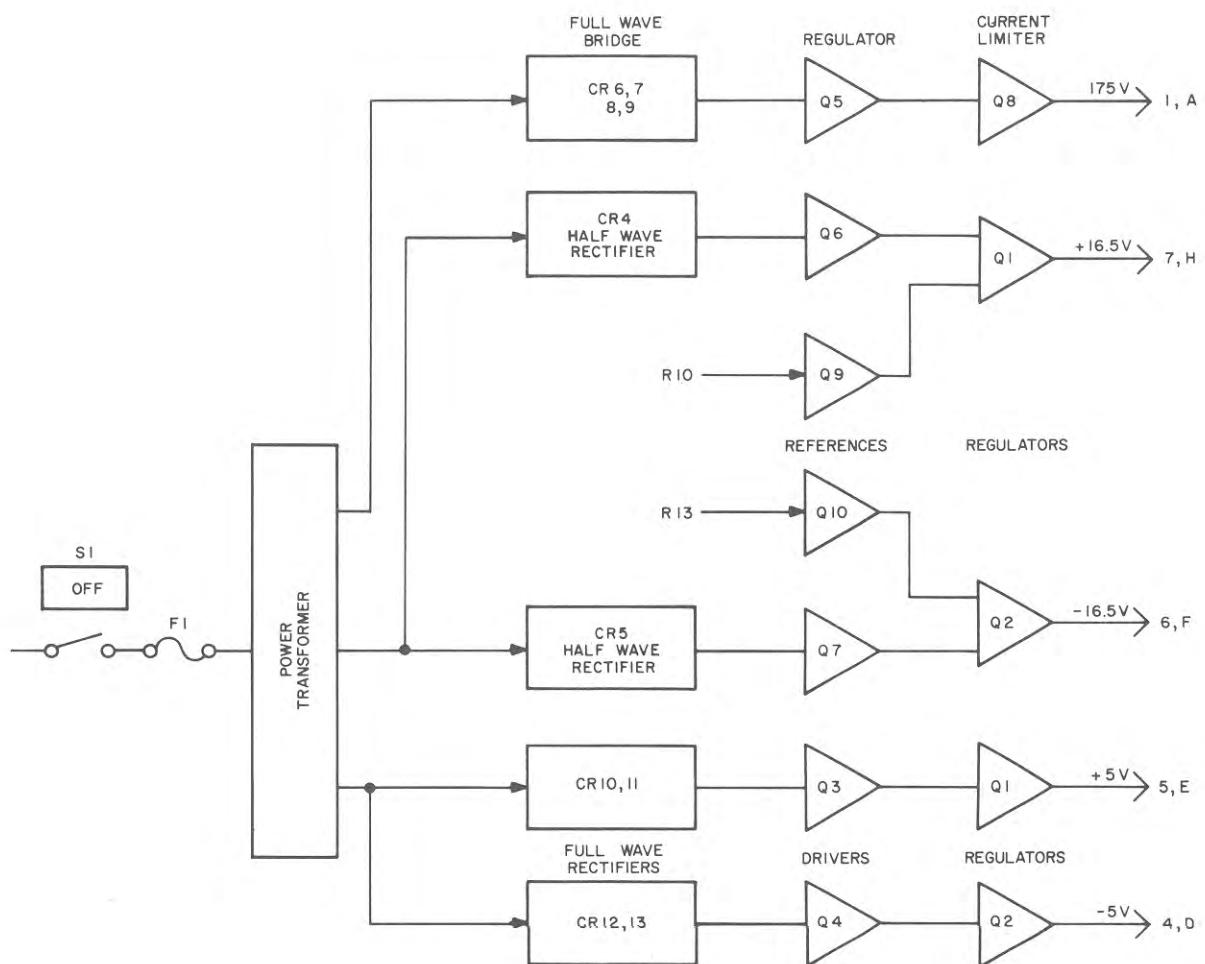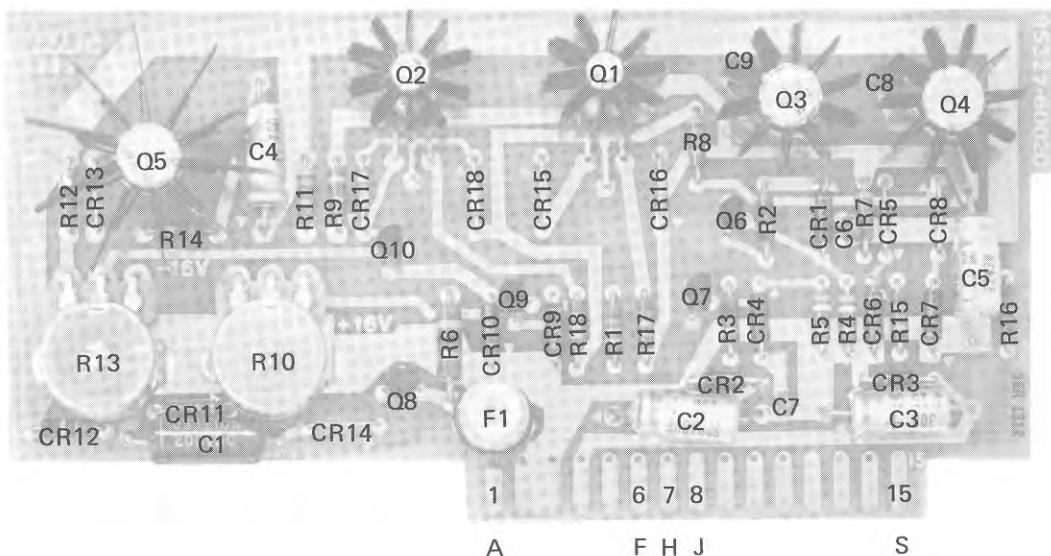



MORE DATA UNDER THIS FOLD

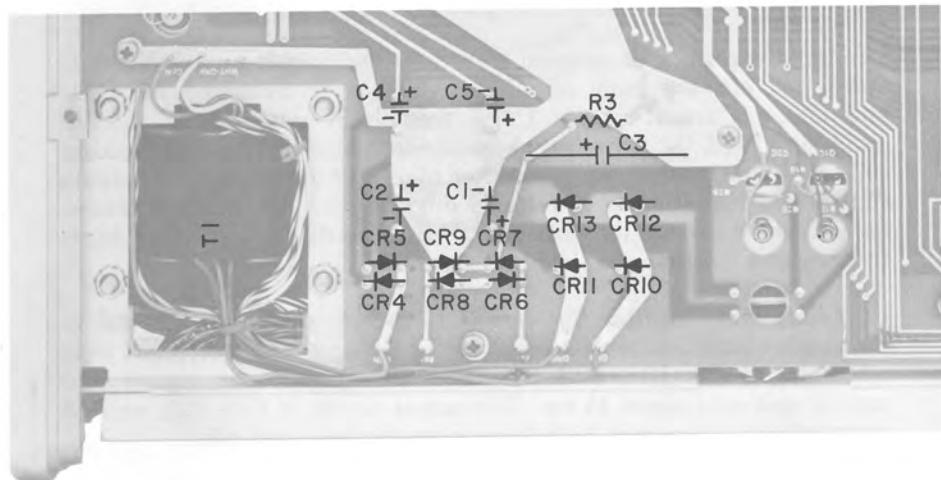


SEE FIGURE 8-24

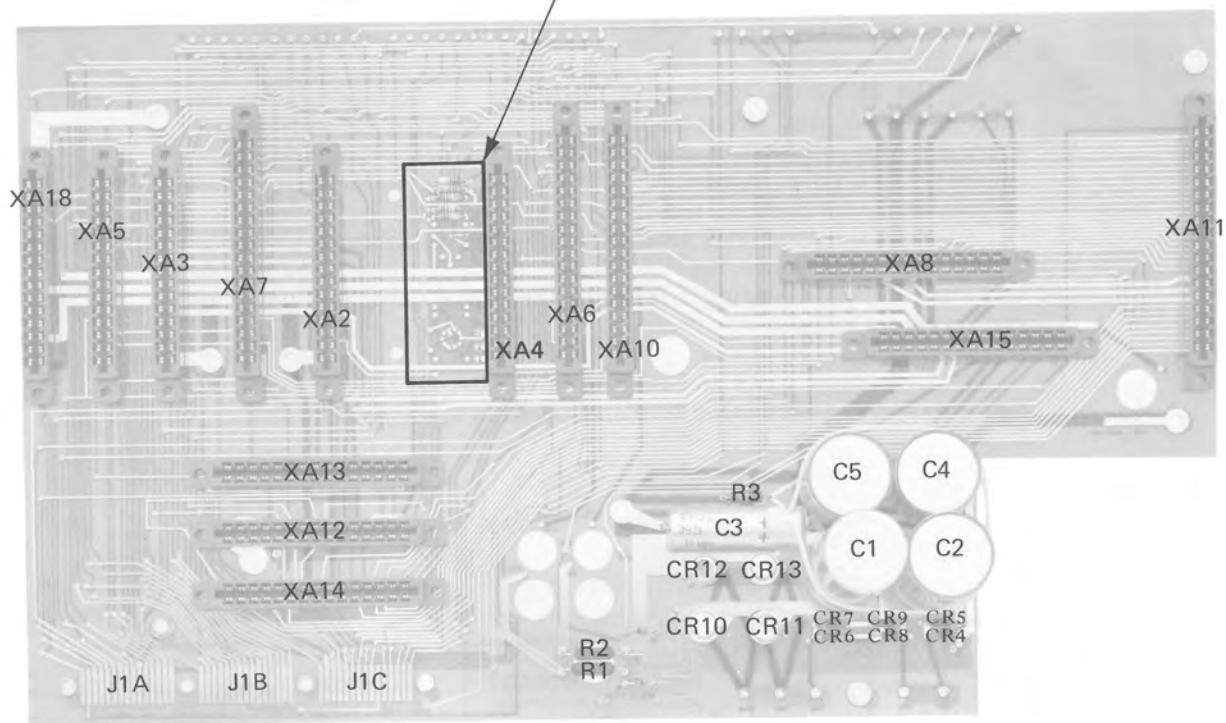


PART OF AI6 INTERCONNECT

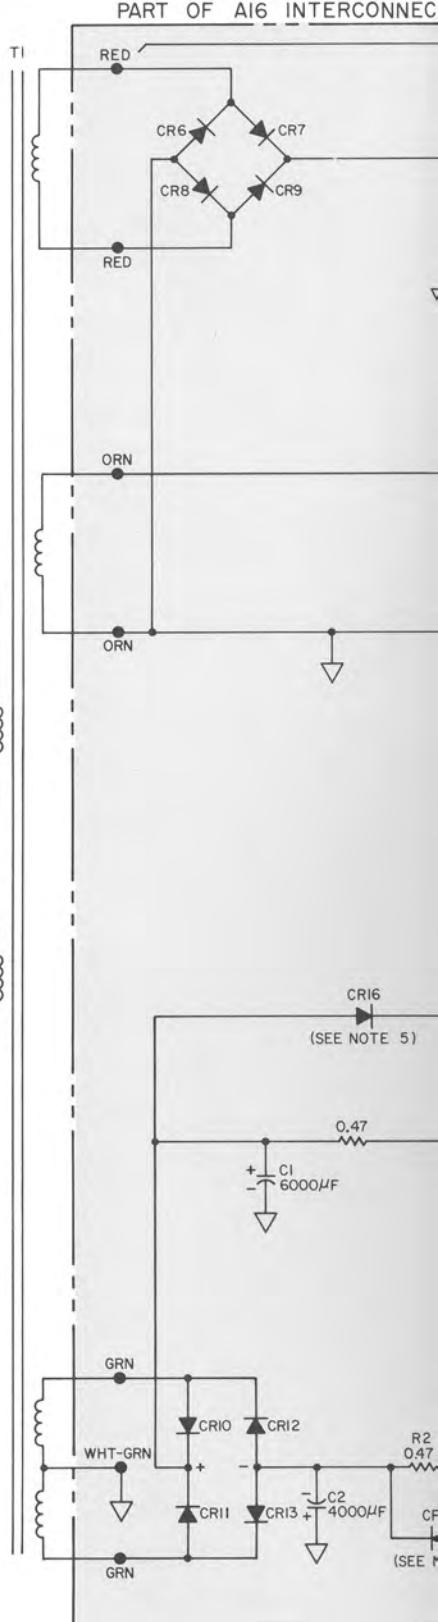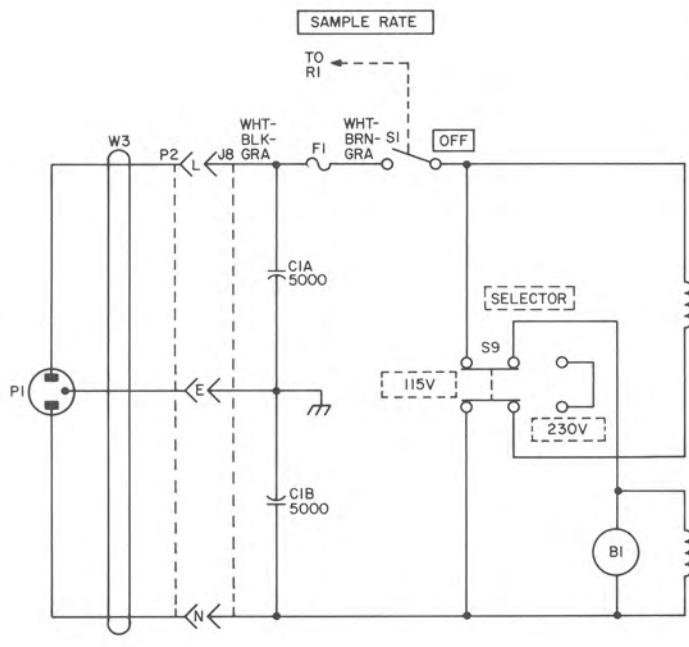

PART OF AI6 INTERCONNECT BOARD ASSY. (05327-60027) 1132A

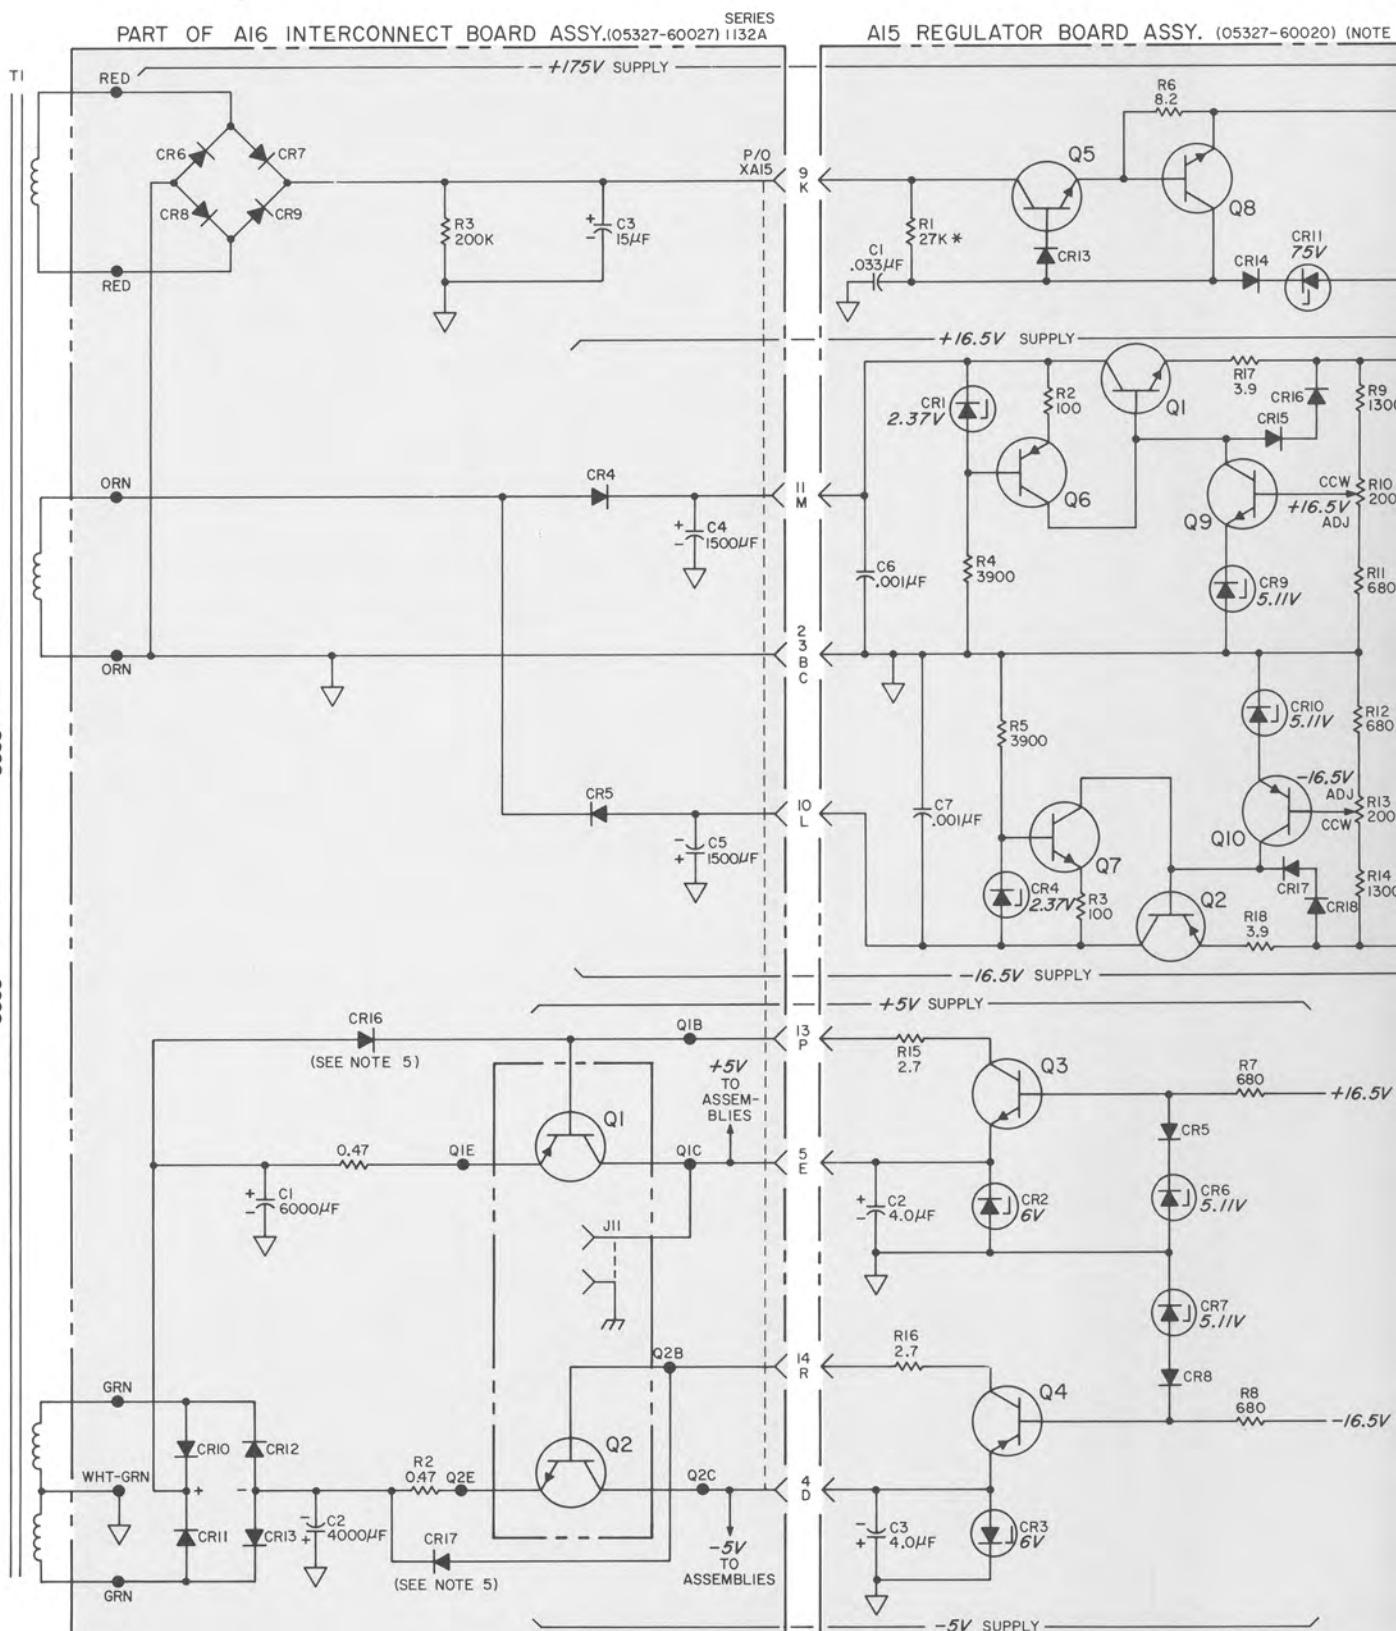

REGULATOR BOARD ASSY. (05327-60020) (NOTE 1) SERIES 1428A REV.D

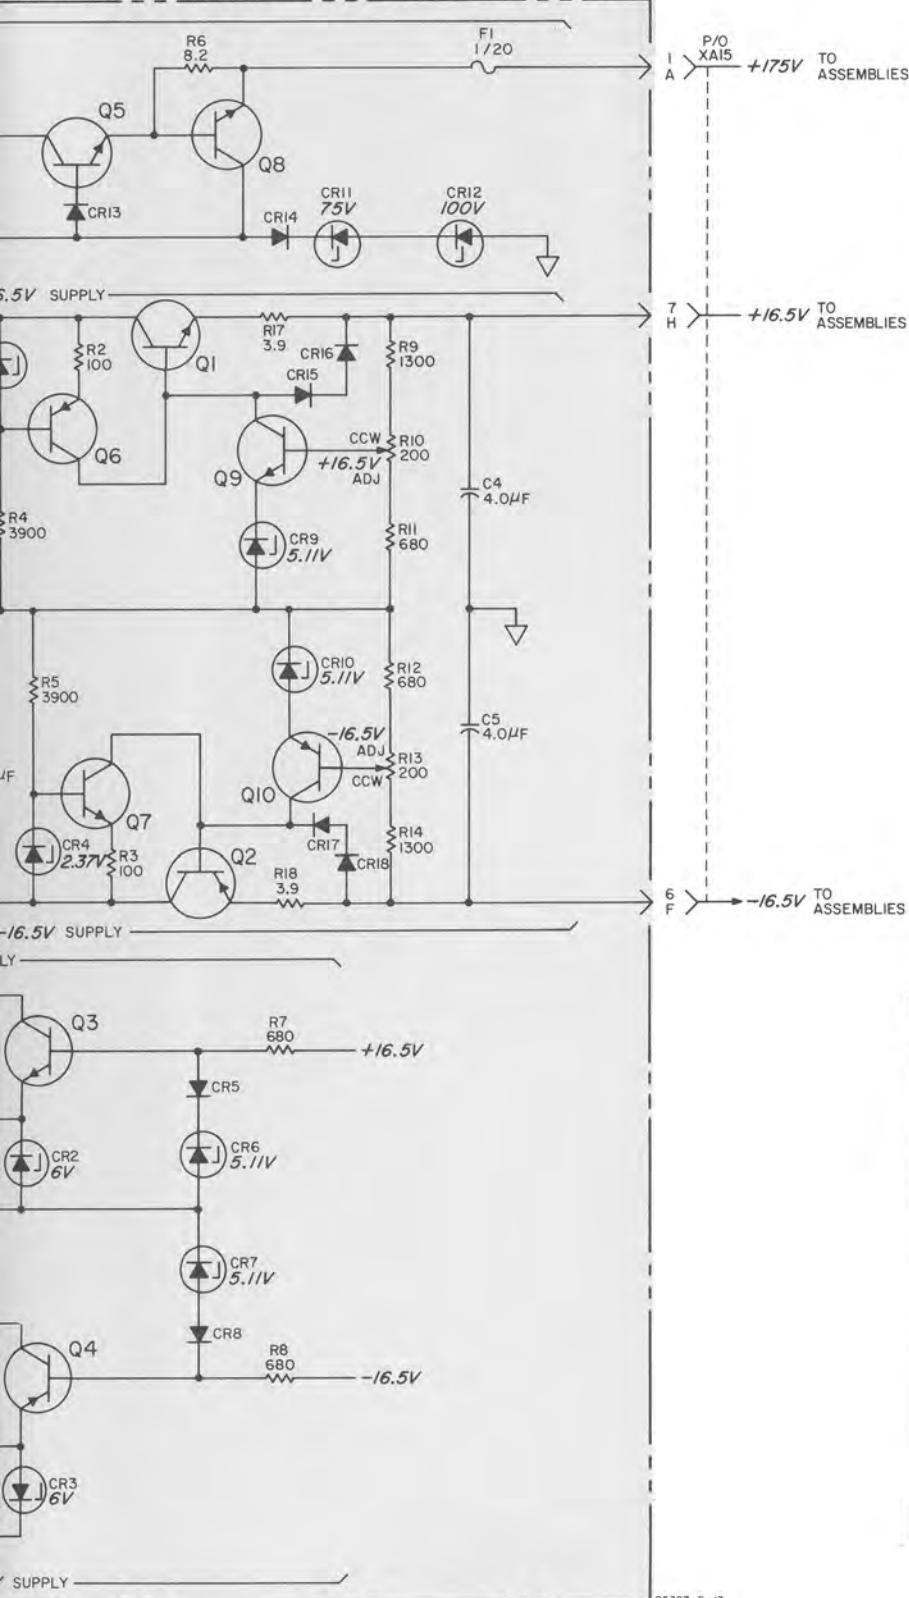

NOTES

- REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
- UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN PICOFARADS;
- A15 Q1-5 HAVE HEAT SINK.
- ASTERISK (*) INDICATES SELECTED COMPONENT, AVERAGE VALUES SHOWN.
- CRI6 AND CRI7 ARE 3-JUNCTION SILICON DIODES.

REFERENCE DESIGNATIONS

| NO PREFIX | A15 | A16 |
|-----------|----------------|--------------------------|
| BI | | |
| CI | CI-7 CRI-18 | CI-5 CR4-13, 16,17 |
| FI | | FI |
| J8, J11 | | |
| P2 | | |
| Q1, 2 | Q1-10 | RI-18 |
| SI, 9 | | |
| TI | | |
| W3 | | RI-3 |

TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|------------------------|--------------------------------|
| NO PREFIX | |
| Q1 | I853-0233 |
| Q2 | I854-0420 |
| A15 | |
| CR1, 4 | I902-3002 |
| CR2, 3 | I902-0551 |
| CR5, 8, 15-18 | I901-0040 |
| CR6, 7, 9, 10 | I902-3094 |
| CRI1 | I902-3394 |
| CRI2 | I902-3429 |
| CRI3, 14 | I901-0033 |
| Q1 | I854-0300 |
| Q2 | I853-0073 |
| Q3 | I854-0039 |
| Q4 | 2N3053 I853-0012 2N2904A |
| Q5 | I854-0232 |
| Q6, 10 | I853-0020 |
| Q7, 9 | I854-0071 |
| Q8 | I854-0474 |
| A16 | |
| CR4, 5 | I901-0045 |
| CR6-9 | I901-0029 |
| CRI10-13 | I901-0415 |
| CR16, 17 | I901-0460 |

Figure 8-18. A15, A16 Regulator/Interconnect Board Assembly

A17 INPUT C AMPLIFIER OPERATION

The input amplifier performs two functions: it provides a channel for increased sensitivity and it produces narrow pulses for efficient usage by other counter circuits. The amplifier is not controlled by any front-panel switches.

The input signal is dc coupled into a 50 ohm input impedance (R1) and is fed into the input amplifier, which is protected by R2, CR1, and CR2. Current source U1Q5 feeds the balanced differential amplifier U1Q3, Q4. The twin outputs are loaded by R10 and peaking coil L2. The signal flows to another amplifier circuit, whose outputs control the triggering of the tunnel diode, CR3. The diode is biased for maximum sensitivity with R11. When the diode fires, it produces fast rise and fall times on the input signal.

High-impedance emitter followers (Q1, Q2) ac couple the signal to the single-ended differential amplifier of Q3 and Q4. The short time constants of C9, R18, and C12, R23 differentiate the signal into narrow spikes of about 15 ns. The output circuit of C11, R22, and L4 approaches resonance at high frequencies for improved gain.

The signal is then fed to the one-shot multivibrator U2. The one-shot output goes High (U2, pin 4) when the input goes low. The output goes Low again after about 12 ns, when the level changes have propagated through the gates in a domino effect.

SENSITIVITY ADJUSTMENT


- Set counter controls as follows:



| | |
|-----------------|--------|
| FUNCTION | FREQ C |
| TIME BASE | 0.1 S |

- Set HP 606B HF Signal Generator (or equivalent) for 50 MHz at 500 mV rms. Measure the output signal of 606B with an HP 411A RF Millivoltmeter, using a 50Ω termination. Connect signal source to INPUT C of counter.


- Reduce output level until counter's display becomes unstable. Adjust R11 for a stable display. Repeat this procedure until unable to obtain a stable reading. Increase the signal level until display just becomes stable.

- Disconnect input and connect to voltmeter, reading should be less than 5 mV. Check other frequencies within the band.

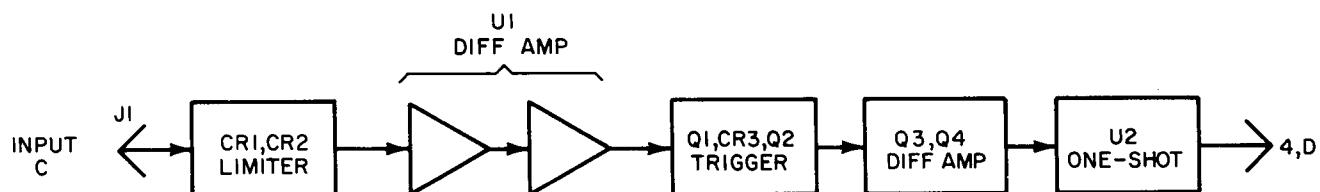


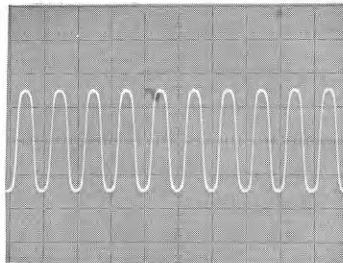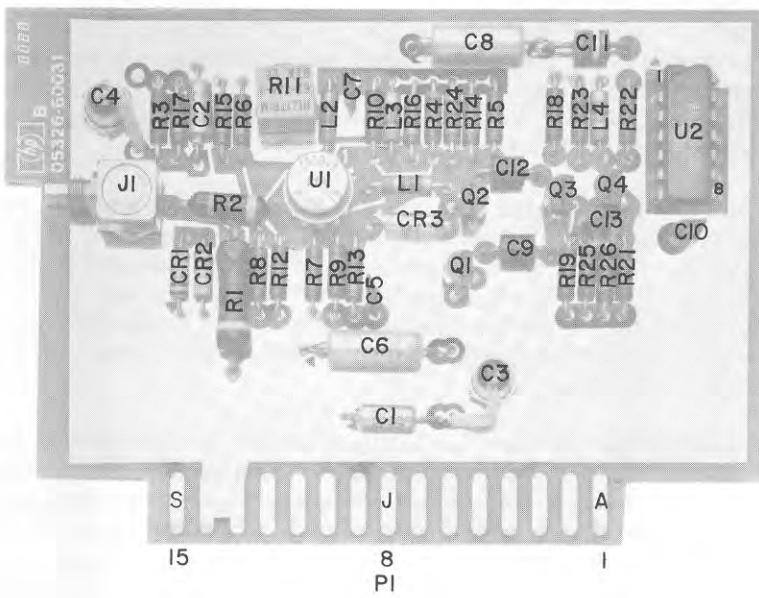


① .05 V/cm
.1 μ s/cm

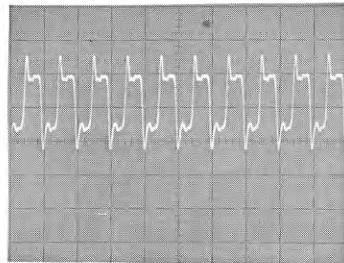

② .05 V/cm
.1 μ s/cm

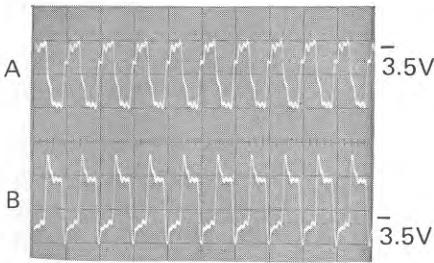

③ a. Q1 (base)
b. Q2 (base)
.02 V/cm
.1 μ s/cm
ALT B

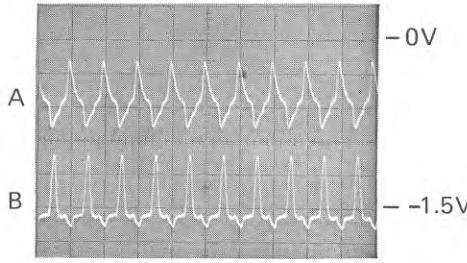

④ a. Q4 b. U2(4)
.05 V/cm
.1 μ s/cm
ALT B

DC VOLTAGES:

Set counter controls as stated.
Disconnect input signal.

All waveforms taken with 10:1 divider probe; ground lead is connected to ground side of C6. A17 is mounted on extender board.


COUNTER CONTROLS:

| | |
|--------------------|-------------------------------------|
| INPUT C jack | connect 10 MHz sine wave at 1 V rms |
| FUNCTION | FREQ C |
| TIME BASE | 1 ms |
| CHK/SEP/COM | SEP |

OSCILLOSCOPE CONTROLS:

| | |
|------------------|------|
| SWEEP MODE | AUTO |
| TRIGGER | INT |
| SLOPE | + |

A17 INPUT C AMPLIFIER ASSEMBLY (05326-60)

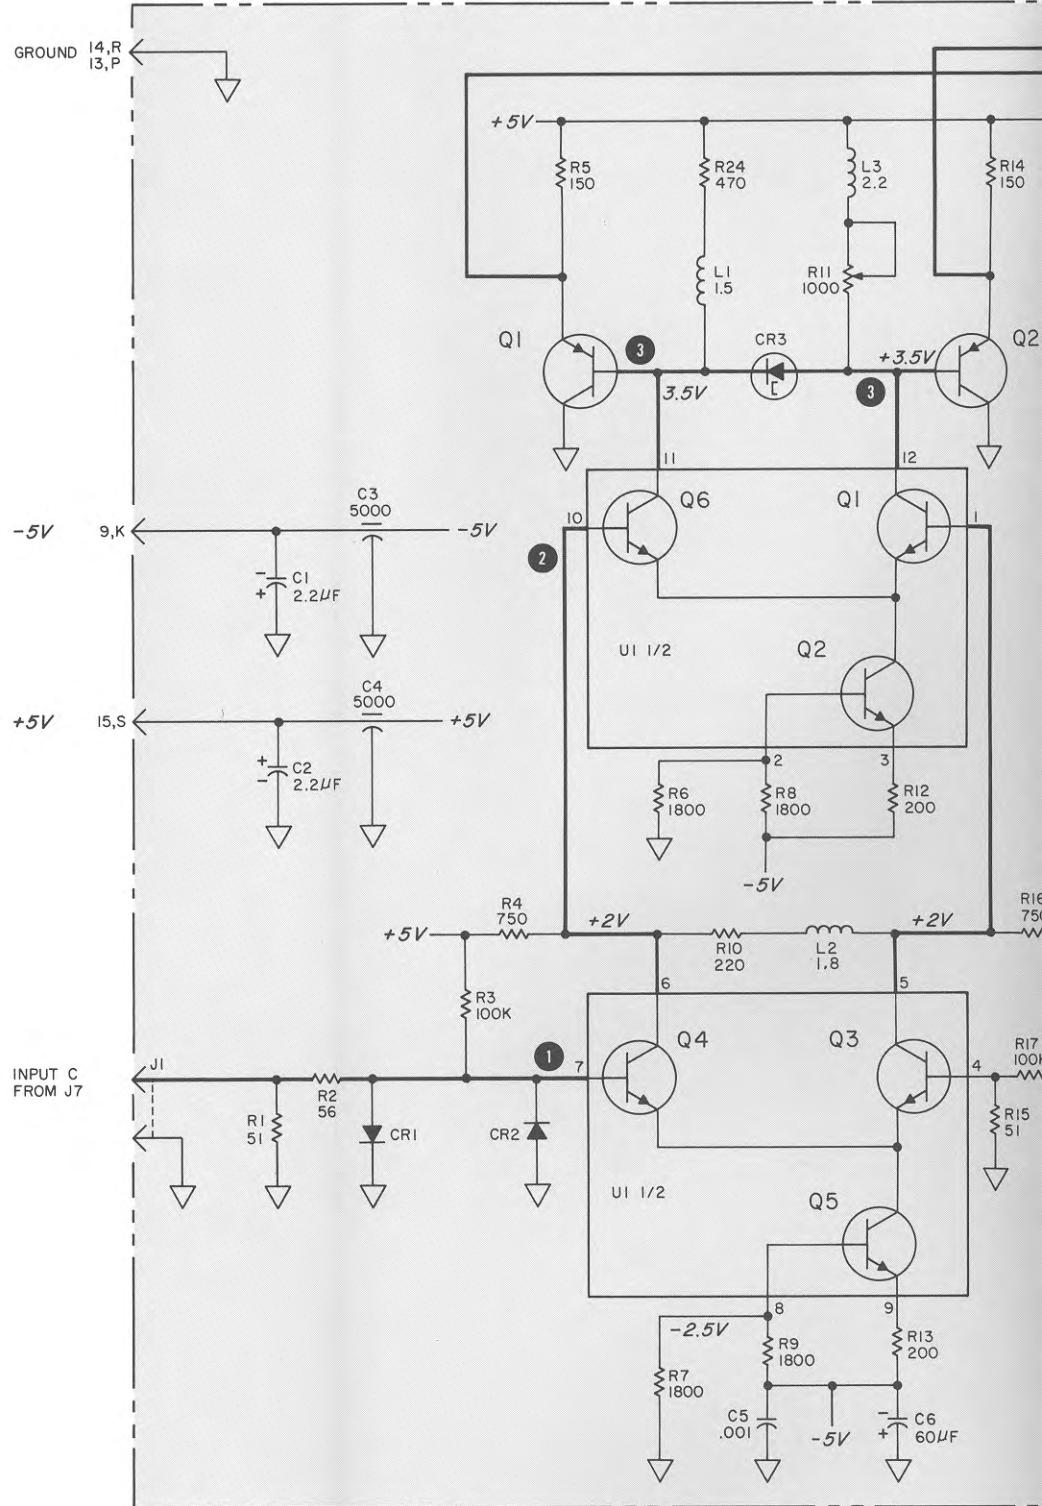

ASSEMBLY (05326-6003) (NOTE 1) SERIES 1312A REV C

NOTES

- REFERENCE DESIGNATIONS WITHIN ASSEMBLY ARE ABBREVIATED ASSEMBLY NUMBER TO ABBREV FOR COMPLETE DESCRIPTION.
- UNLESS OTHERWISE INDICATED RESISTANCE IN OHMS; CAPACITANCE IN PICOFARAD; INDUCTANCE IN MICROHENRY.

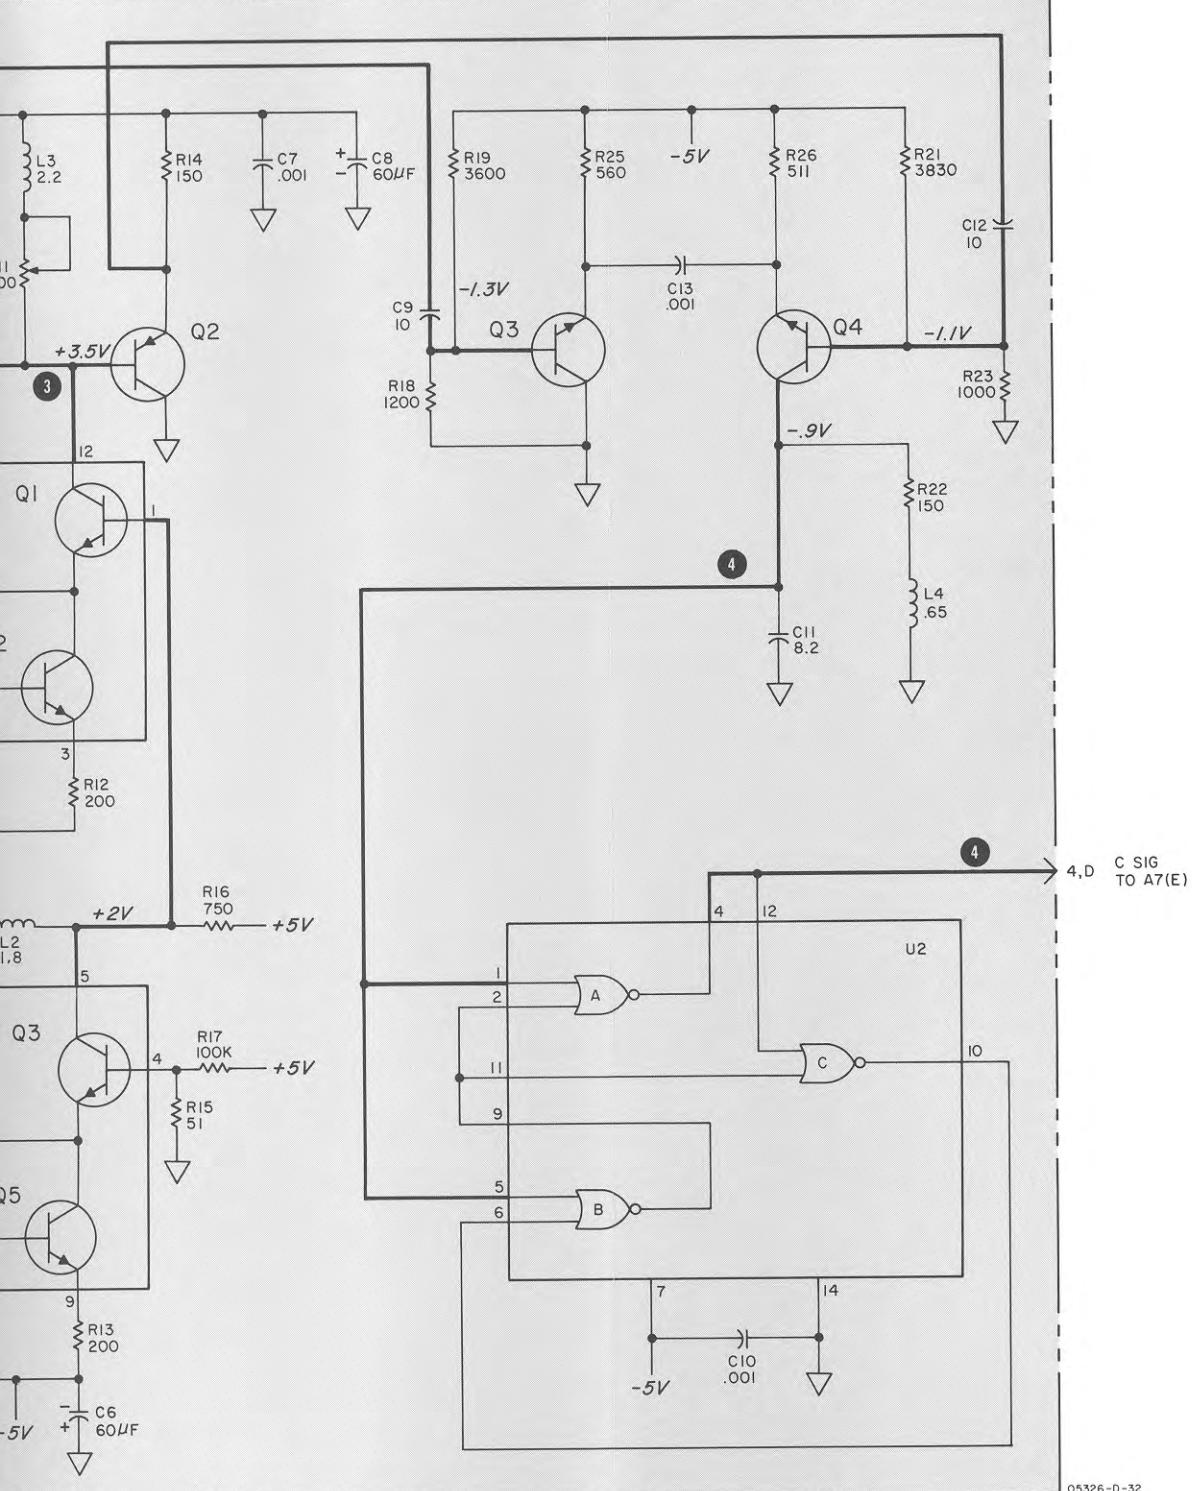


TABLE OF ACTIVE COMPONENTS


| REFERENCE DESIGNATIONS | PART |
|------------------------|---------|
| CRI,2 | I901-00 |
| CR3 | I912-00 |
| Q1,2 | I853-00 |
| Q3 | I854-00 |
| Q4 | I854-03 |
| U1 | I858-00 |
| U2 | I820-00 |

REFERENCE DESIGNATIONS

| A1 |
|-----------------|
| C1-I3 |
| CR1-3 |
| L1-4 |
| Q1-4 |
| R1-19, 21-26 |
| U1,2 |

Figure 8-19. A17 Input C Amplifier
(53)

NOTE 1) SERIES 1312A REV C

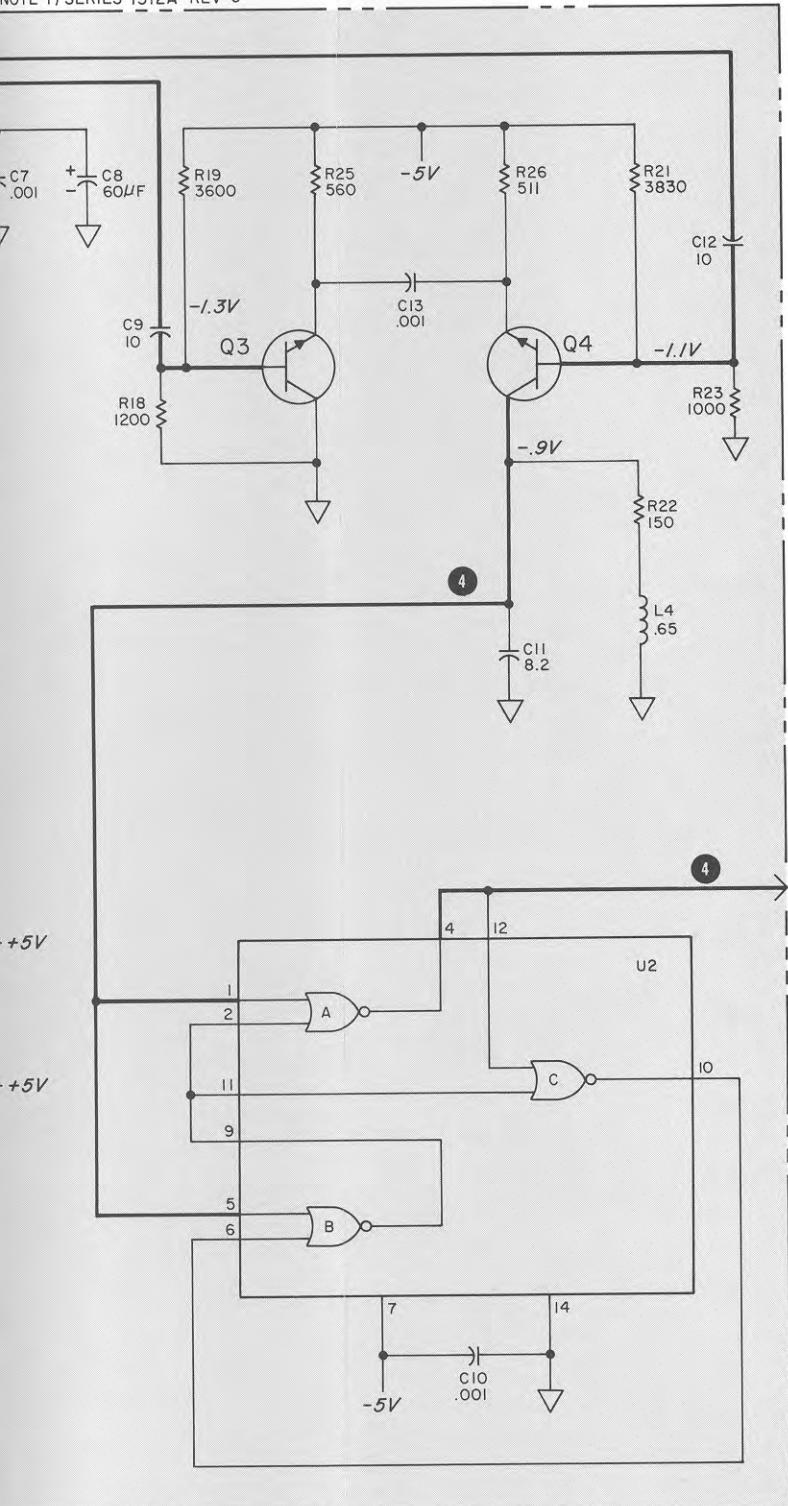

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;
INDUCTANCE IN MICROHENRIES

TABLE OF ACTIVE COMPONENTS

| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|------------------------|-----------------|
| CRI,2 | I901-0047 |
| CR3 | I912-0009 |
| Q1,2 | I853-0015 |
| Q3 | I854-0092 |
| Q4 | I854-0345 |
| U1 | I858-0004 |
| U2 | I820-0147 |

REFERENCE DESIGNATIONS

| A1 |
|-----------------|
| C1-C13 |
| CR1-3 |
| L1-4 |
| Q1-4 |
| R1-19, 21-26 |
| U1,2 |

Figure 8-19. A17 Input C Amplifier Assembly
(5326B Only)

A18 PRESCALER OPERATION


The prescaler board serves as a direct amplifier-trigger or as a divide-by-ten amplifier-trigger, with the function controlled by a front-panel input selector switch. With the switch in the PRESCALE position, the circuit performs as follows:


The signal is fed into the 50Ω input of J1. CR1, CR2, and U1 provide protection above 3.5 V rms or 5 V peak. There is about 2 dB loss through U1. The signal is passed to U2 amplifier, which is biased for sensitivity by R3. U3 amplifies the differential input and shapes the signal into a square wave. U4 and U5 combine to divide the signal by ten and Q2 translates the signal from EECL to ECL levels before presenting it to the data switch.

The direct signal, also from U3(13), bypasses the divider network and is sent to the data switch through the level translator Q1. The setting of the INPUT SELECTOR switch determines whether the data switch will accept the direct or prescaled signal. Pin 2 of U6 is High for direct and Low for prescaled. U9 shapes the positive, square-shaped pulses into narrow spikes before sending the signal to A7 Function board. U7, U8, and U10 (a production option) are constant-current sources for the amplifier circuits.

A18 TROUBLESHOOTING

Before troubleshooting the circuits, check the input protection fuse. If problem is in direct mode only, check Q1 and U6. If problem is in pre-scale mode only, check U4, U5, U6, and Q2. If a problem is found in the amplifiers (U2 and U3), remove the input signal and check the dc voltages supplied by the constant-current sources U7 and U8.

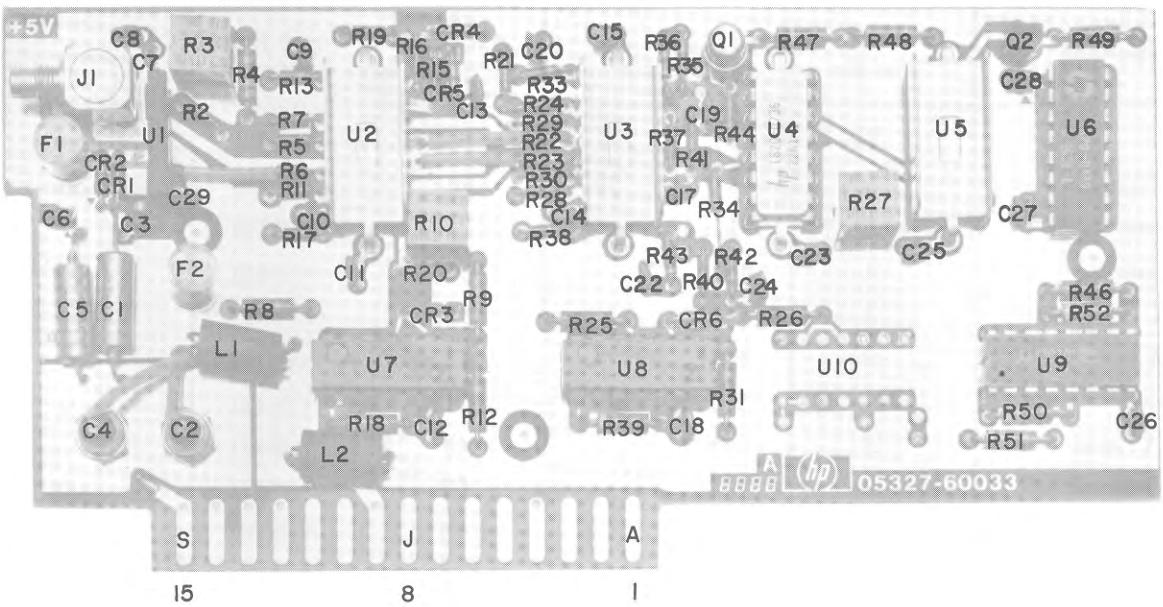

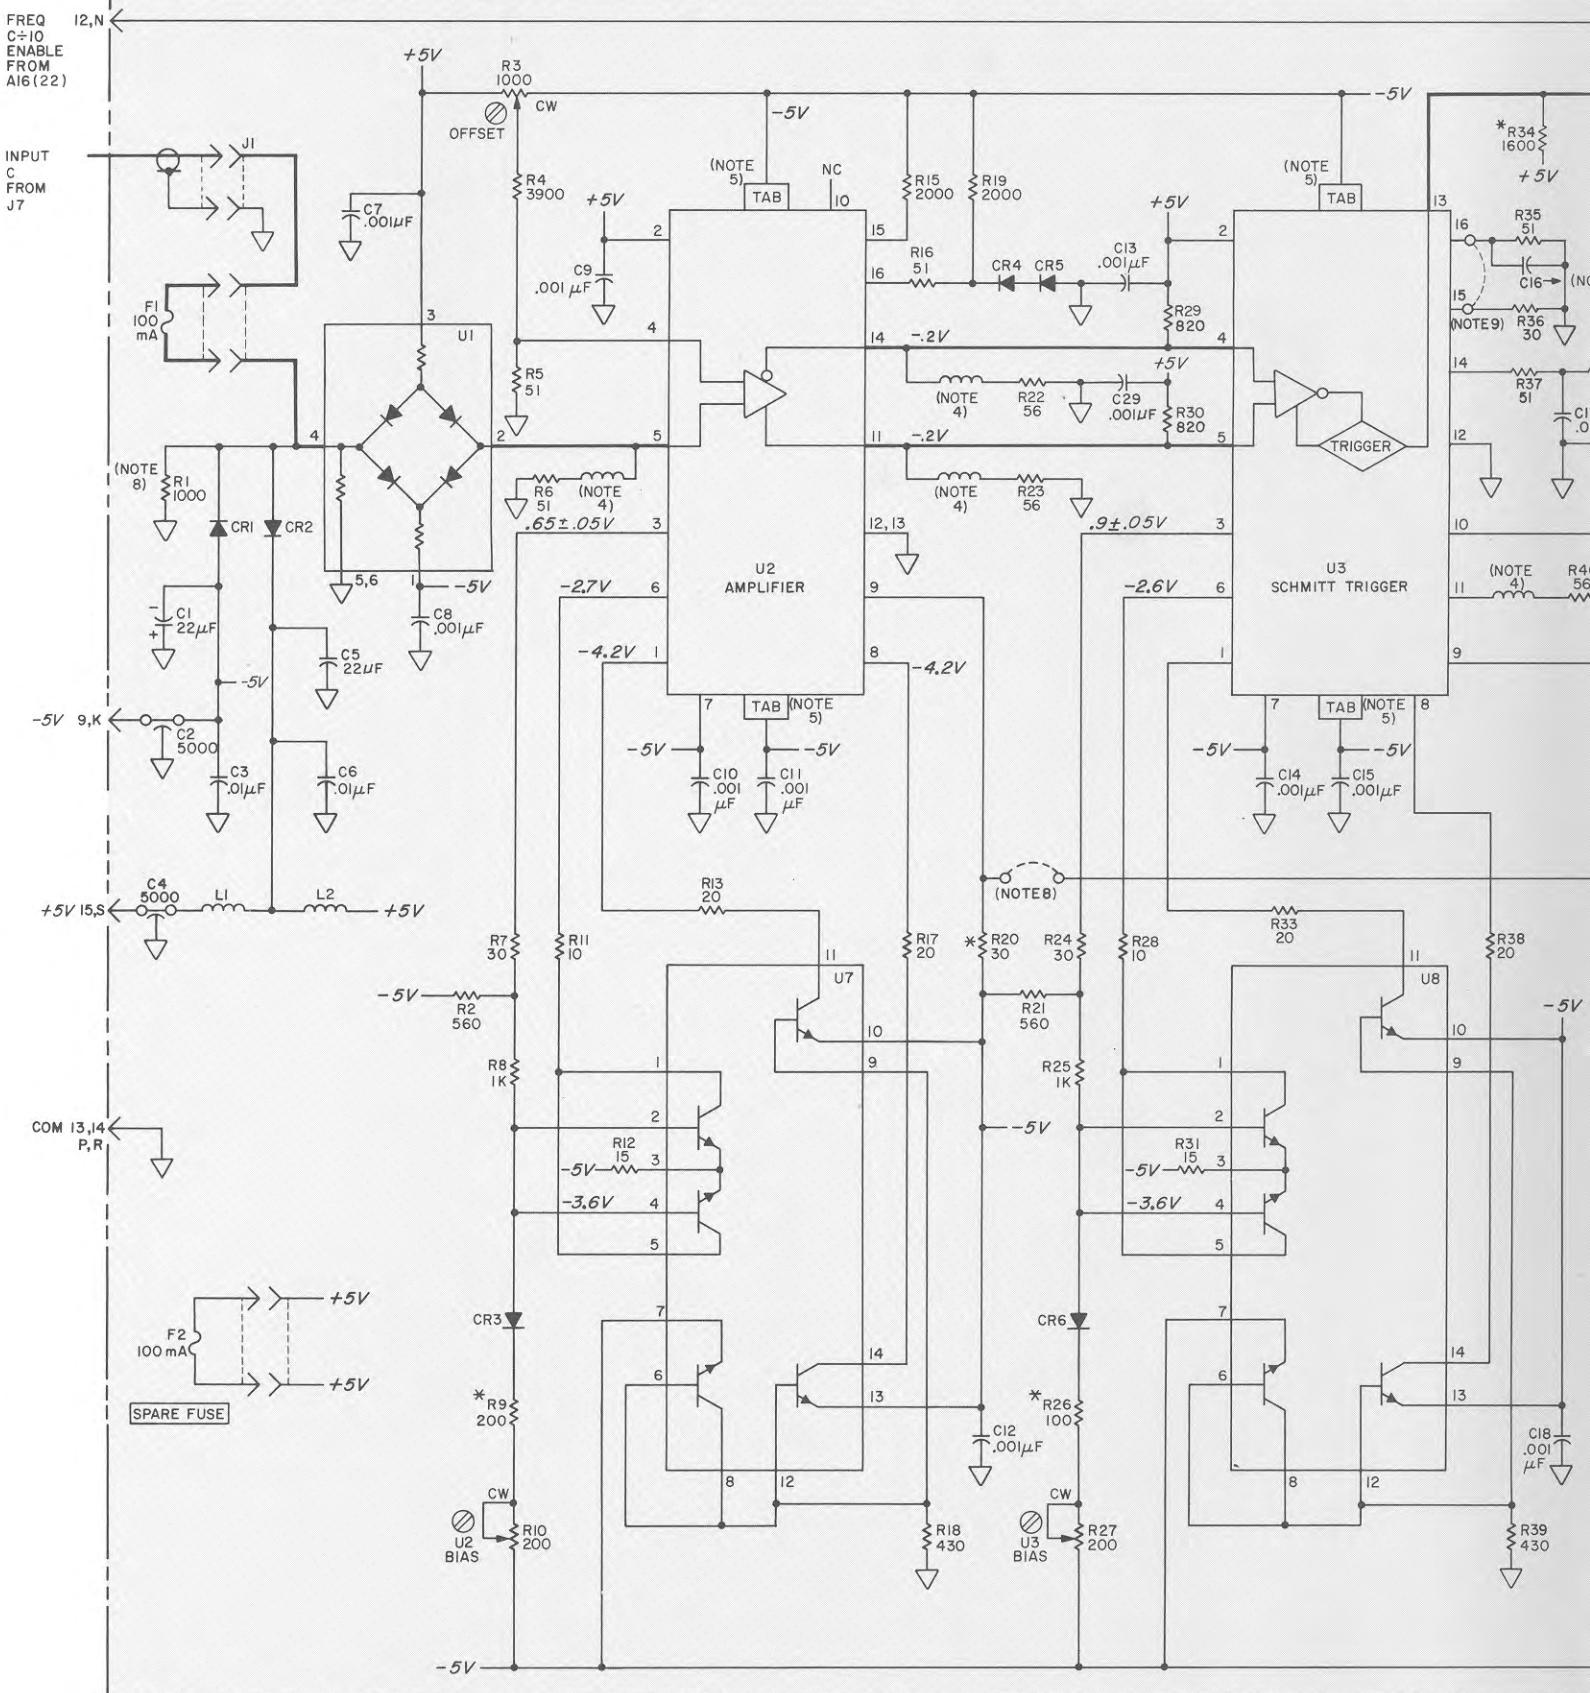

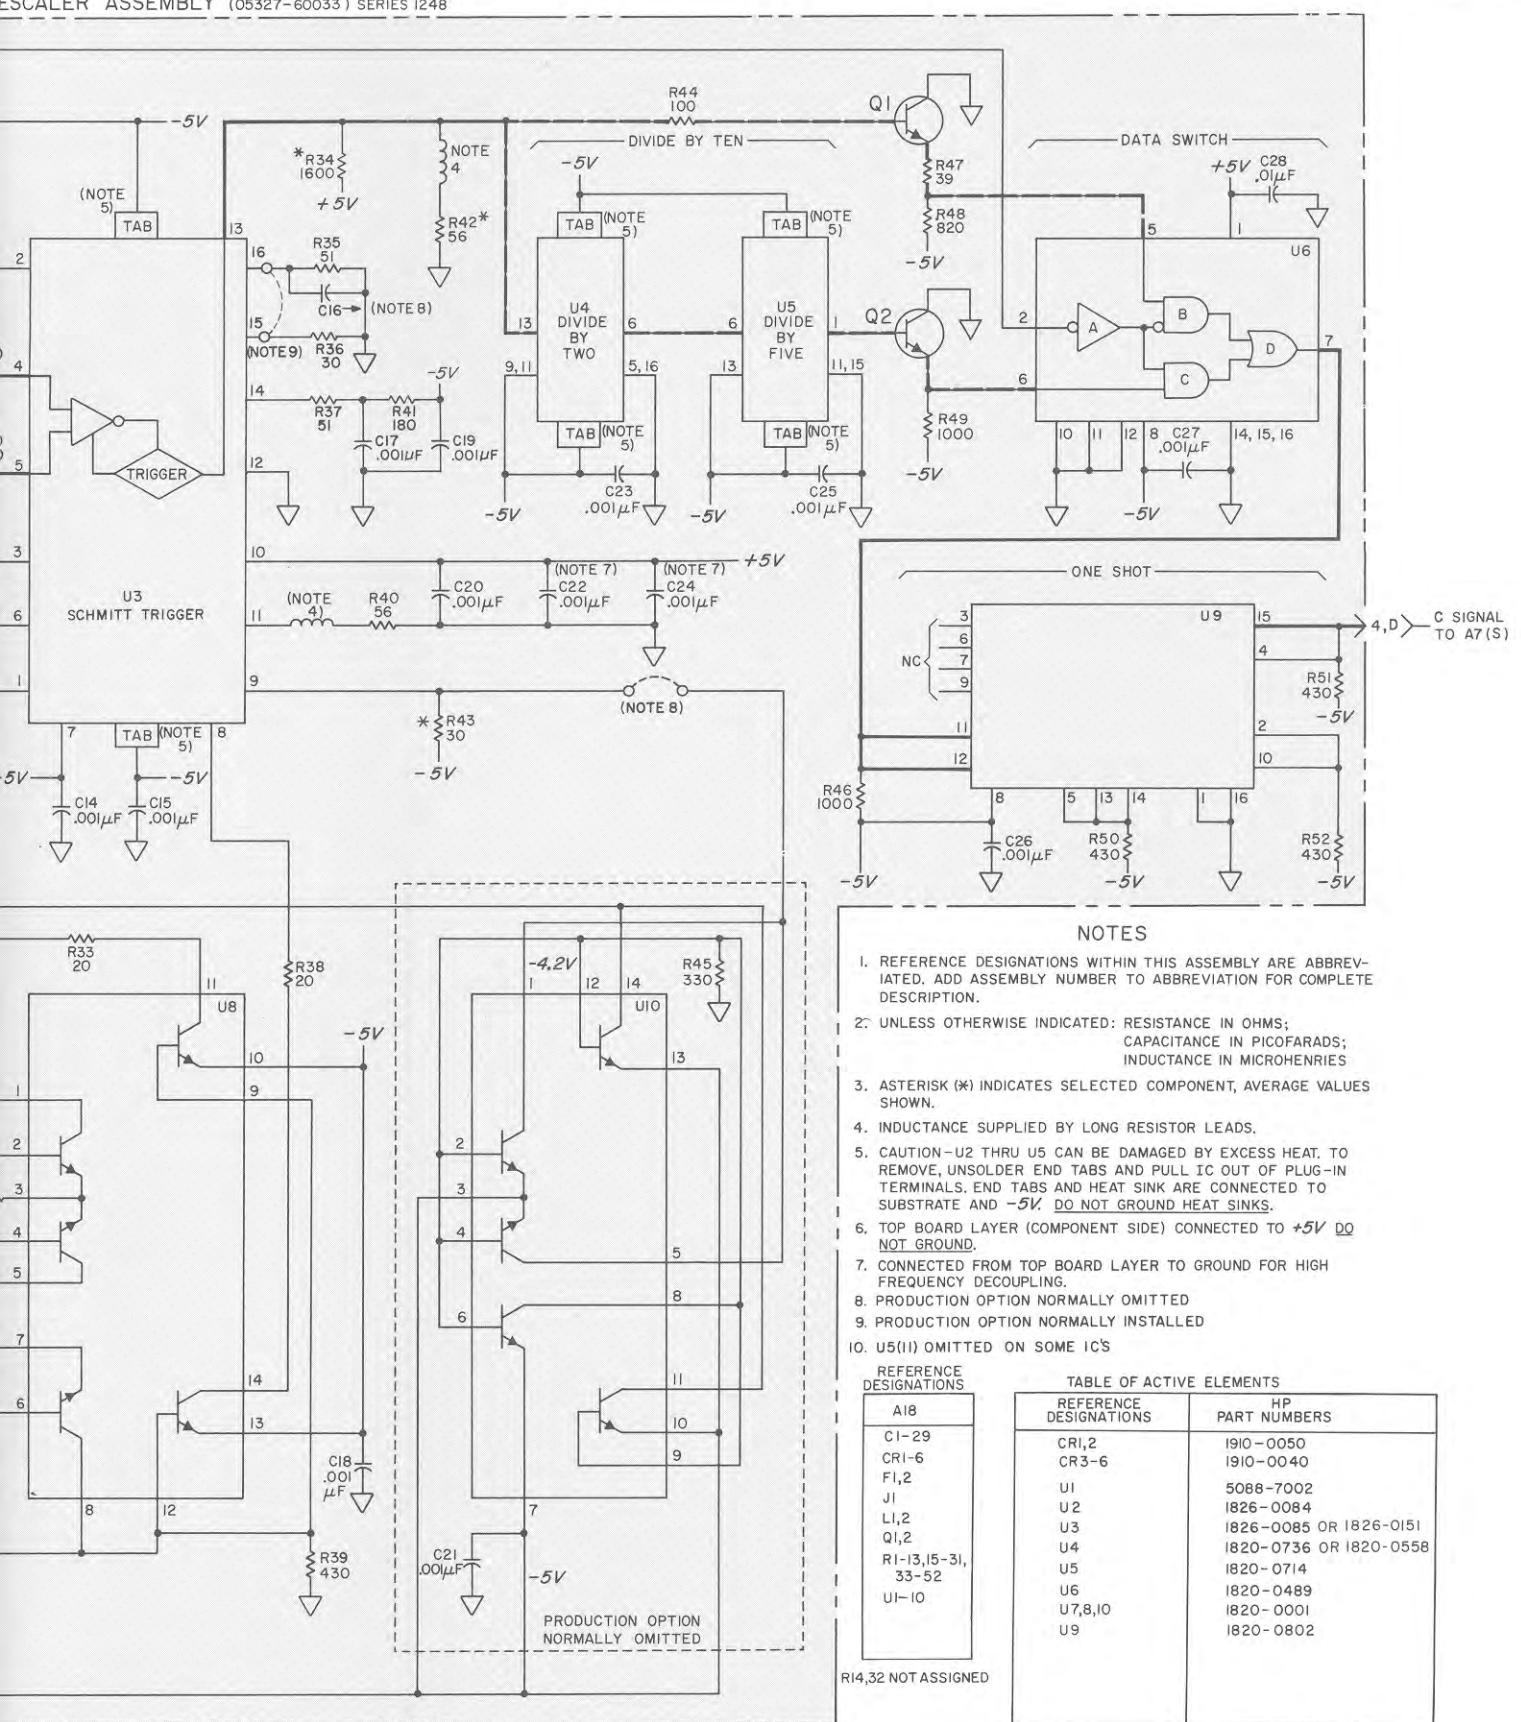


Figure 8-20. A18 Prescaler Board Assembly
(5327B Only)

OPTION 002 REMOTE PROGRAMMING



See Section II for programming information.


| Function | J10 Pin No. | Wire Color | W2P1 Pin No. | Circuit Board Terminals | Level |
|-----------------------|-------------|-------------|--------------|-------------------------|--|
| Start | 1 | Brn | B12 | A16(14) | L = Start Open = Stop L = Enable |
| Period Avg A | 2 | Red | B11 | A16(13) | |
| Time Intvl Avg | 3 | Orn | B10 | A16(16) | |
| Time Intvl | 4 | Yel | B2 | A16(15) | |
| Period | 5 | Grn | B3 | A16(17) | |
| Freq A | 6 | Blu | B8 | A16(18) | |
| Freq C | 7 | Vio | B13 | A16(12) | |
| Read A Level | 8 | Gra | C5 | A16(21) | |
| Read B Level | 9 | Wht | C3 | A16(22) | |
| DVM | 10 | Wht-Blk | C1 | A16(20) | |
| 10 V Enable | 11 | Wht-Brn | C11 | A16(9) | |
| 100 V Enable | 12 | Wht-Red | C6 | A16(8) | |
| 1000 V Enable | 13 | Wht-Orn | C4 | A16(7) | L = Enable |
| Check | 14 | Wht-Yel | B15 | XA3(B) | L = Check |
| Gate Out | 15 | Wht-Grn | A9 | XA5(F) | H = Gate Closed L = Gate Open |
| Computer Inhibit | 16 | Wht-Blu | C9 | XA6(14) | L = Inhibit |
| Ext | 17 | Wht-Vio | A4 | XA11(A) | H = Int L = Ext |
| Freq C ÷ 10 | 18 | Wht-Gra | (W2P2) | A16(34) | L = Enable |
| .1 μs/1 | 19 | Wht-Blk-Brn | B1 | A16(30) | |
| 1 μs/10 ¹ | 20 | Wht-Blk-Red | B9 | A16(31) | |
| 10 μs/10 ² | 21 | Wht-Blk-Orn | B6 | A16(28) | |
| .1 ms/10 ³ | 22 | Wht-Blk-Yel | B7 | A16(29) | |
| 1 ms/10 ⁴ | 23 | Wht-Blk-Grn | B5 | A16(26) | |
| 10 ms/10 ⁵ | 24 | Wht-Blk-Blu | C15 | A16(27) | |
| .1 s/10 ⁶ | 25 | Wht-Blk-Vio | C13 | A16(24) | |
| 1 s/10 ⁷ | 26 | Wht-Blk-Gra | C14 | A16(25) | |
| 10 s/10 ⁸ | 27 | Wht-Blk-Red | B4 | A16(23) | L = Enable |
| Slope A | 28 | Wht-Brn-Orn | C12 | XA2(13,P) | L = Minus Open = Plus |
| Slope B | 29 | Wht-Brn-Yel | B14 | XA3(13,P) | L = Minus Open = Plus |

| Function | J10 Pin No. | Wire Color | W2P1 Pin No. | Circuit Board Terminals | Level |
|---|----------------|-------------|-----------------|----------------------------|----------------------|
| A Trig Level | 30 | Wht-Brn-Grn | C10 | XA2(1,A) | +3 V to -3 V |
| B Trig Level | 31 | Wht-Brn-Blu | C2 | XA3(1,A) | +3 V to -3 V |
| Sample Rate Disable | 32 | Wht-Brn-Vio | C7 | A16(11) | L = Disable |
| Print Command | 33 | Wht-Brn-Gra | C8 | XA6(S) | L = Causes Print |
| Manual Reset | 34 | Wht-Red-Orn | A5 | A16(6) | L = Reset |
| Sample Rate Hold | 35 | Wht-Red-Yel | A2 | A16(4) | L = Maintain Display |
| Ground | 36 | Blk | A10 | Ground | |
| Logic levels (Input) H ≥ +2.0 V, L ≤ +0.8 V (Output) H ≥ +2.4 V, L ≤ +0.4 V | | | | | |

OPTION 002

W2 REMOTE PROGRAM CABLE ASSY (05326-60006) (OPT. 002 ONLY) (NOTE 1)

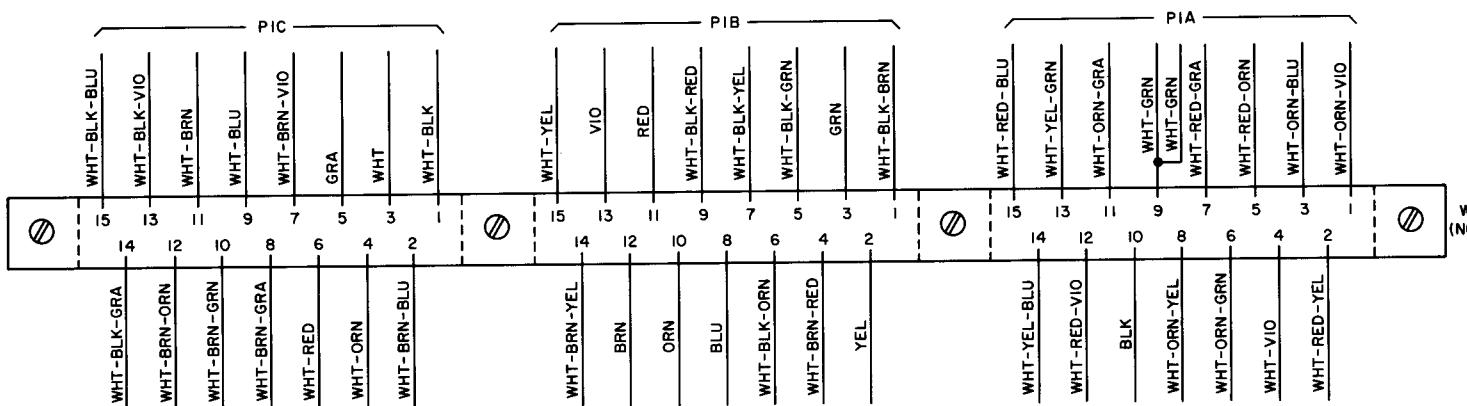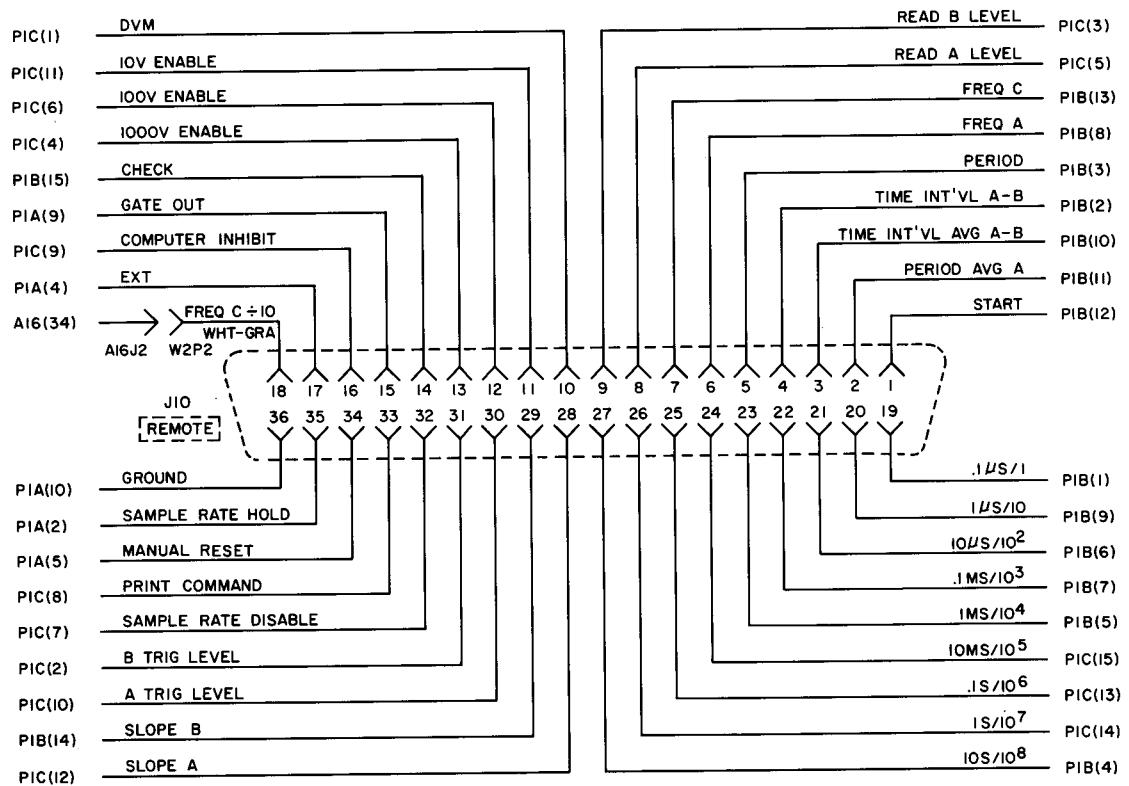

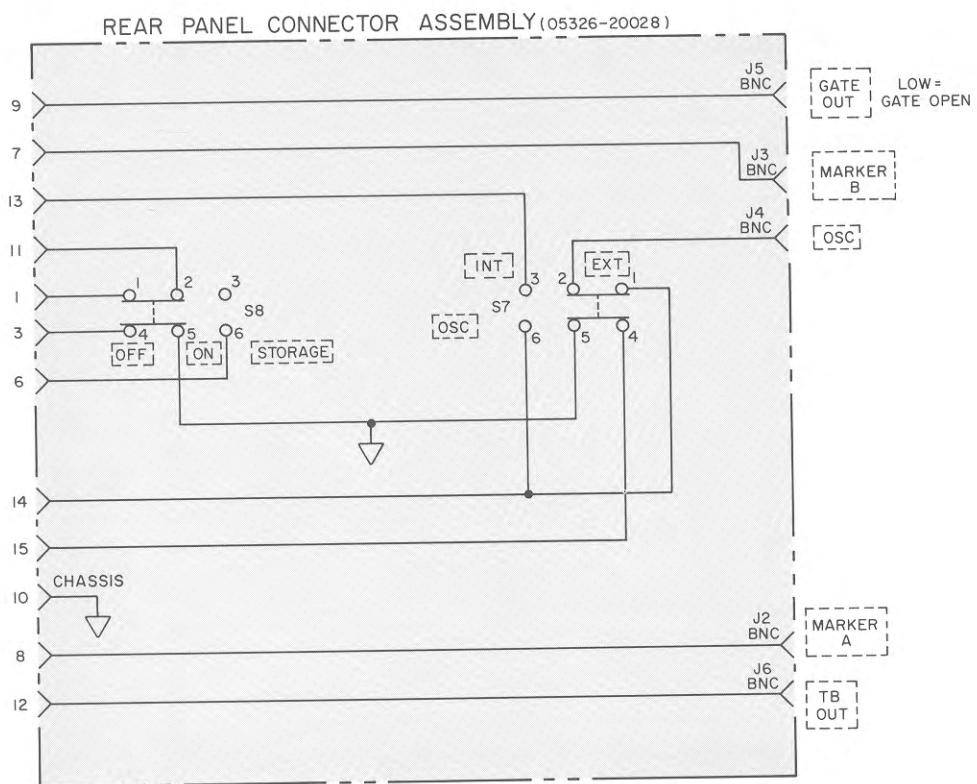

NOTES

- I. IN STANDARD INSTRUMENT, ONLY W2PIA IS WIRED.

05327-0-26

Figure 8-21. Option 002, Remote Programming Cable Assembly and Rear Panel Connector Assembly

OPTION 003, DIGITAL RECORDER OUTPUT

Option 003 includes cable assembly W1 and rear panel connector J9. The counter (A9 Display Assembly) provides +8421 BCD and control line inputs and outputs for use with a printer or other data storage devices.

The annunciator lines (J9-17, 18, 42, and 43) supply overflow, plus, and minus outputs as follows:

| FUNCTION | BCD |
|----------|---------|
| | 8 4 2 1 |
| Overflow | L L L L |
| + | H L H L |
| - | H L H H |

When the print command line at J9(48) goes low, it indicates that the counter has completed a measurement and the data output may be interrogated. When the inhibit line is held High, the data output is maintained. The line must go high less than 30 μ s after the print command goes low. The +5 V reference line (J9-25) has a 1K source impedance and is used for data level references. The 0 volt or ground reference connects to J9(24, 50).




OPTION 004, EXTENDED REMOTE PROGRAMMING


See Section II for remote programming information.

Option 004 Pin Connections

| Function | J10 Pin No. | Wire Color | W2P1 Pin No. | Circuit Board Terminals | Level |
|----------------|----------------|------------|-----------------|----------------------------|-------|
| Ground | 1 | Blk | | | |
| Ground | 2 | Blk | | | |
| -16.5 V Output | 3 | Orn | | | |
| +16.5 V Output | 4 | Yel | | | |
| +5 V Output | 5 | Grn | | | |
| Sep-Com | 6 | Blu | | A1 Cable Point 4 | |
| Ac-Dc Chan B | 7 | Vio | | A1 Cable Point 7 | |
| No connection | 8 | Gra | | | |
| X10 Atten B | 9 | Wht | | A1 Cable Point 5 | |
| X100 Atten B | 10 | Wht-Blk | | A1 Cable Point 6 | |
| Ac-Dc Chan A | 11 | Wht-Brn | | A1 Cable Point 8 | |
| No connection | 12 | Wht-Red | | | |
| X10 Atten A | 13 | Wht-Orn | | A1 Cable Point 2 | |
| X100 Atten A | 14 | Wht-Yel | | A1 Cable Point 3 | |

| Function | J10 Pin No. | Wire Color | W2P1 Pin No. | Circuit Board Terminals | Level |
|---------------------|-------------|-------------|--------------|-------------------------|----------------------------------|
| Ground | 15 | Blk | A10 | | |
| Sample Rate Hold | 16 | Wht-Blu | A2 | A16(4) | L = Maintain Disable |
| Manual Reset | 17 | Wht-Vio | A5 | A16(6) | L = Reset |
| Print Command | 18 | Wht-Gra | C8 | XA6(S) | L = Causes Print |
| Sample Rate Disable | 19 | Wht-Blk-Brn | C7 | A16(11) | L = Disable |
| Trig Level B | 20 | Wht-Blk-Red | C2 | XA3(1, A) | +3 V to -3 V |
| Trig Level A | 21 | Wht-Blk-Orn | C10 | XA2(1, A) | +3 V to -3 V |
| Slope B | 22 | Wht-Blk-Yel | B14 | XA3(13, P) | L = Minus Open = Plus |
| Slope A | 23 | Wht-Blk-Grn | C12 | XA2(13, P) | L = Minus Open = Plus |
| 10 ms/ 10^5 | 24 | Wht-Blk-Blu | C15 | A16(27) | L = Enable |
| 1 ms/ 10^4 | 25 | Wht-Blk-Vio | B5 | A16(26) | |
| .1 ms/ 10^3 | 26 | Wht-Blk-Gra | B7 | A16(29) | |
| 10 μ s/ 10^2 | 27 | Wht-Brn-Red | B6 | A16(28) | |
| .1 μ s/1 | 28 | Wht-Brn-Orn | B1 | A16(30) | |
| 1 μ s/10 | 29 | Wht-Brn-Yel | B9 | A16(31) | |
| .1 s/ 10^6 | 30 | Wht-Brn-Grn | C13 | A16(24) | |
| 1 s/ 10^7 | 31 | Wht-Brn-Blu | C14 | A16(25) | |
| 10 s/ 10^8 | 32 | Wht-Brn-Vio | B4 | A16(23) | |
| Freq C \div 10 | 33 | Wht-Brn-Gra | W2P2 | A16(34) | L = Enable |
| Ext | 34 | Wht-Red-Orn | A4 | XA11(A) | H = Int L = Ext |
| Computer Inhibit | 35 | Wht-Red-Yel | C9 | XA6(4) | L = Inhibit |
| Gate Output | 36 | Wht-Red-Grn | A9 | XA5(F) | H = Gate Closed L = Gate Open |
| Check | 37 | Wht-Red-Blu | B15 | XA3(B) | L = Check |
| 1000 V Enable | 38 | Wht-Red-Vio | C4 | A16(7) | L = Enable |
| 100 V Enable | 39 | Wht-Red-Gra | C6 | A16(8) | |
| 10 V Enable | 40 | Wht-Orn-Yel | C11 | A16(9) | |
| Freq C | 41 | Wht-Orn-Grn | B13 | A16(12) | |
| Freq A | 42 | Wht-Orn-Blu | B8 | A16(18) | |
| Period | 43 | Wht-Orn-Vio | B3 | A16(17) | |
| Time Intvl | 44 | Wht-Orn-Gra | B2 | A16(15) | |
| Time Intvl Avg | 45 | Wht-Yel-Grn | B10 | A16(16) | L = Enable |
| Start | 46 | Wht-Yel-Blu | B12 | A16(14) | L = Start Open = Stop |
| Period Avg | 47 | Wht-Yel-Vio | B11 | A16(13) | L = Enable |
| Read A Level | 48 | Wht-Yel-Gra | C5 | A16(21) | L = Enable |
| Read B Level | 49 | Wht-Grn-Blu | C3 | A16(22) | L = Enable |
| DVM | 50 | Wht-Grn-Vio | C1 | A16(20) | L = Enable |

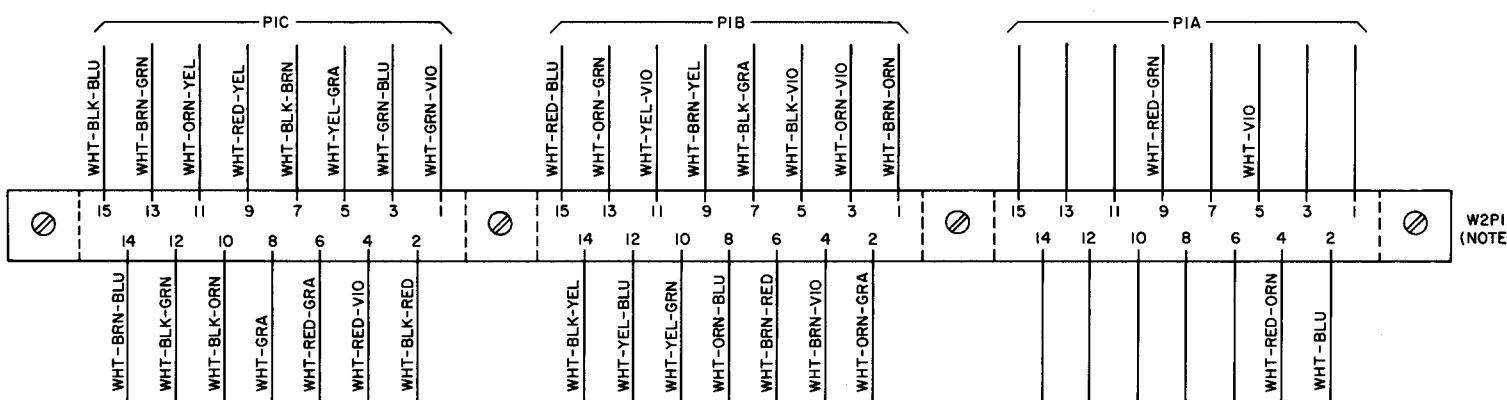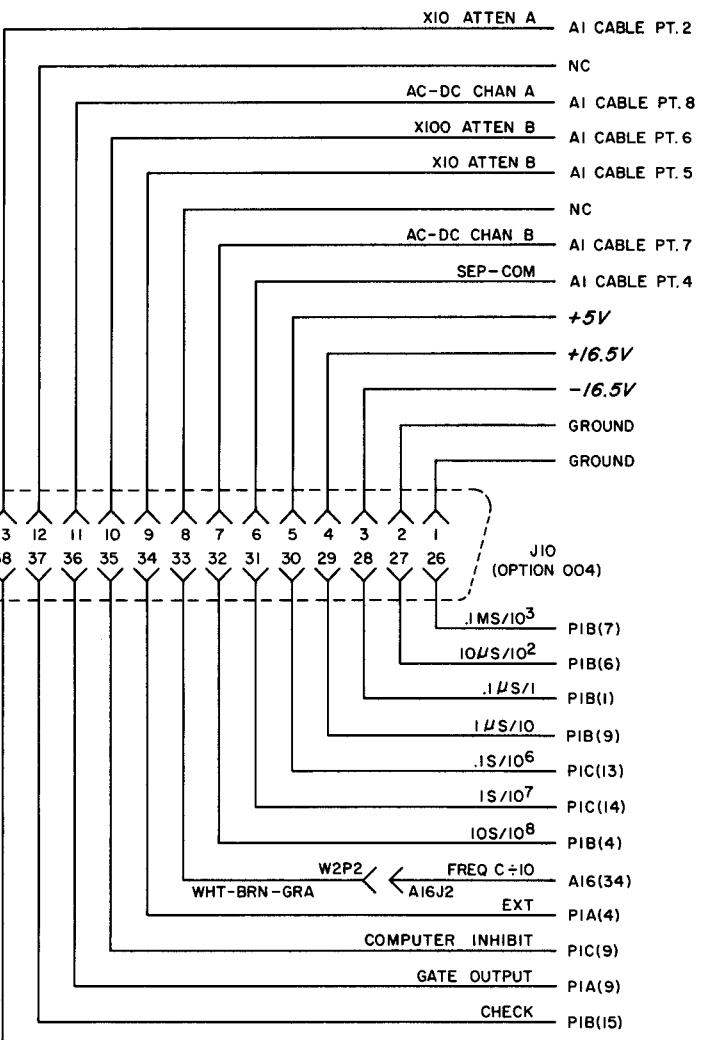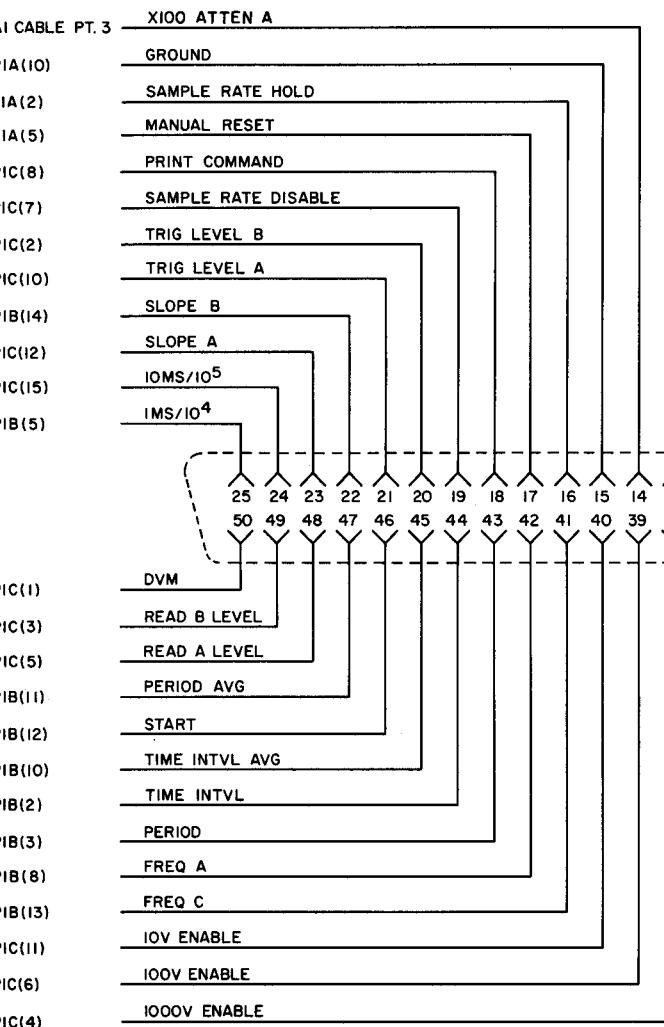

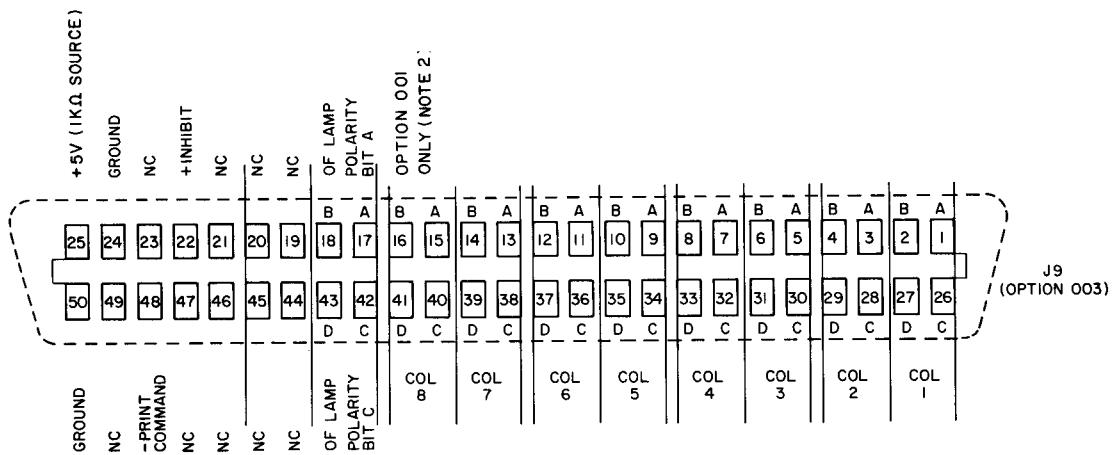

BCD WEIGHTS: A=1, B=2, C=4, D=8.
"1" STATE POSITIVE

NOTES

1. IN STANDARD INSTRUMENT, ONLY W2PIA IS WIRED.
 2. OUTPUT FROM COLUMN B IS AVAILABLE ONLY WHEN OPTION 001 IS ADDED.

05327-0-27 E

Figure 8-22. Option 004, Remote Programming Cable Assembly and J10 Option 003, Digital Recorder Cable Assembly

A1 OPTION 004 OPERATION

The remote programmable attenuator board attenuates the input signal and routes it to the amplifier boards. The signals from inputs A and B are routed through identical paths.

In the X1 position K2 is closed and the signal is routed directly to K4, which is open with ac coupling and closed with dc. R30 provides the 1 MΩ input impedance. R34, R38, and C7 compensate for high frequency roll-off and also limit the input current to Q1A. Diodes CR25 and CR27 limit the voltage at the input of Q13A to ±5.8 V. Q13A operates as a source follower with a high input impedance and a low output impedance to the amplifier boards. Q1B operates as a source follower, supplying the amplifiers with the dc trigger-level voltage generated either by R49, CR32, and CR33, or from an external analog input (J10). R46, 44, 42, and C13 filter the trigger-level voltage.

In the X1 position, K2 and K4 are closed providing a direct path for the input signal to the gate of Q13A. In the X10 position, K2 is open and diodes CR7 and CR9 are turned on, shorting R16 to ground. R12, R14, and R16 form the dc attenuator. The ac (high frequency) attenuator is formed by C1 and stray capacitance in the circuit.

In the X100 position, K2 is open, CR7 and CR9 are off, and CR21 and CR23 are turned on. C3 and R28 are thus connected to ground. R12, R14, and R28 form the dc portion of the attenuator, while C1, C3, and stray capacitance form the high frequency portion of the attenuator.

The circuitry to drive AC/DC relay K4, and SEP/COM relay K1 is provided by U3 A&C. U3's output is at HTL levels (+12 V, +1.5 V) and thus is sufficient to drive the relays directly. U3's input is at DTL levels and is compatible with remote programming levels. K2 is driven by Q7 and is open when CR7 and CR9 or CR21 and CR23 are on.

Diode pairs CR7 and CR9 are driven by emitter followers Q3 and Q6, which, in turn, are driven by HTL gates U2D AND U2C. U2's power supply, consisting of Q1 and Q2, is +8.9 V and -5.6 V rather than the usual +15 V and 0 V. This special bias moves the HTL input threshold to +1.9 V, rather than the normal +7.5 V. U2D can now be driven by DTL gate U1B. The output swing of U2D is +9 V to -4 V, providing the diode quad CR7 and CR9 with positive turn-on and turn-off signals. R9 is adjusted to minimize the offset voltage of the quad.

ADJUSTMENTS

Set:


| | |
|-----------------|----------|
| TIME BASE | 0.1 sec. |
| AC/DC | DC |
| SEP/COM | SEP |
| ATTEN A/B | X10 |

1. Using an HP 412A or equivalent, measure voltage at CHANNEL A jack.
2. Adjust R56 for $<\pm 1$ mV reading.
3. Measure voltage at CHANNEL B jack.
4. Adjust R9 for $<\pm 1$ mV reading.
5. Set A and B attenuators to X100 position.
6. Measure voltage at CHANNEL B jack.
7. Adjust R32 for $<\pm 1$ mV reading.
8. Measure voltage at CHANNEL A jack.
9. Adjust R33 for $<\pm 1$ mV reading.


Figure 8-22
**OPTION 004, REMOTE PROGRAMMING CABLE ASSEMBLY
AND J10 OPTION 003, DIGITAL RECORDER CABLE ASSEMBLY**

(See Page 8-53)

Part of Figure 8-23. Option 004 Programmable Attenuator Assembly

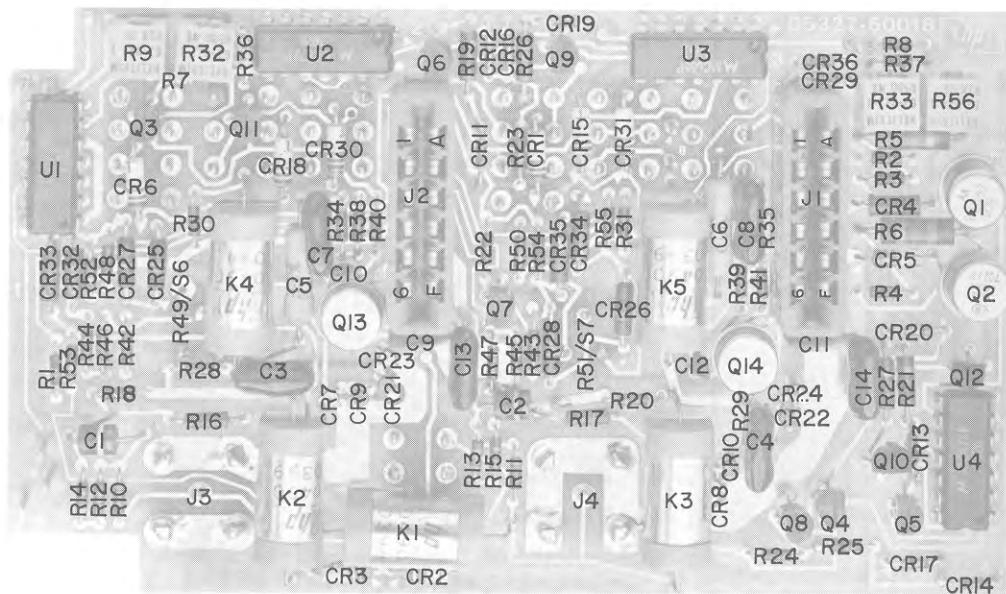

TOP VIEW

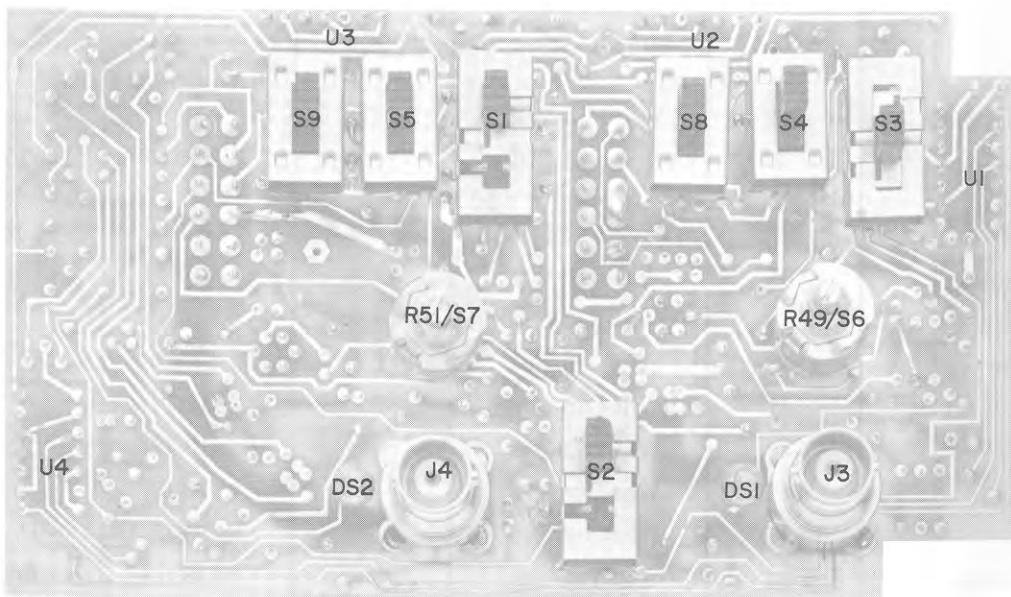

BOTTOM VIEW

MORE DATA UNDER THIS FOLD

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;
INDUCTANCE IN MICROHENRIES

REFERENCE DESIGNATIONS


| |
|--------------|
| AI, OPT. 004 |
| CI-14 |
| CRI-36 |
| DSI,2 |
| J1-4 |
| KI-5 |
| Q1-14 |
| RI-56 |
| SI-9 |
| UI-4 |

TABLE OF ACTIVE COMPONENTS


| REFERENCE DESIGNATIONS | HP PART NUMBERS |
|-------------------------------|--------------------|
| CRI-3,6,15,18,30,31 | I910-0016 |
| CR4 | I902-0025 |
| CR5 | I902-0057 |
| CR7,8,23,24 | I906-0024 |
| CR9,10,21,22 | I906-0025 |
| CR11-14,16,17, 19,20,29,36 | I901-0040 |
| CR25-28 | I901-0376 |
| CR32-35 | I902-0041 |
| Q1 | I854-0039 |
| Q2 | I853-0001 |
| Q3,4,7,8,11,12 | I854-0215 |
| Q5,6,9,10 | I853-0036 |
| Q13,14 | I855-0334 |
| U1 | I820-0274 |
| U2,4 | I820-0287 |
| U3 | I820-0625 |

05327-D-12

| CABLE POINT | WIRE COLOR | DESTINATION |
|----------------|---------------|-------------|
| 1 | GRN | +5V |
| 2 | WHT-ORN | J10(13) |
| 3 | WHT-YEL | J10(14) |
| 4 | BLU | J10(6) |
| 5 | WHT | J10(9) |
| 6 | WHT-BLK | J10(10) |
| 7 | VIO | J10(7) |
| 8 | WHT-BRN | J10(11) |

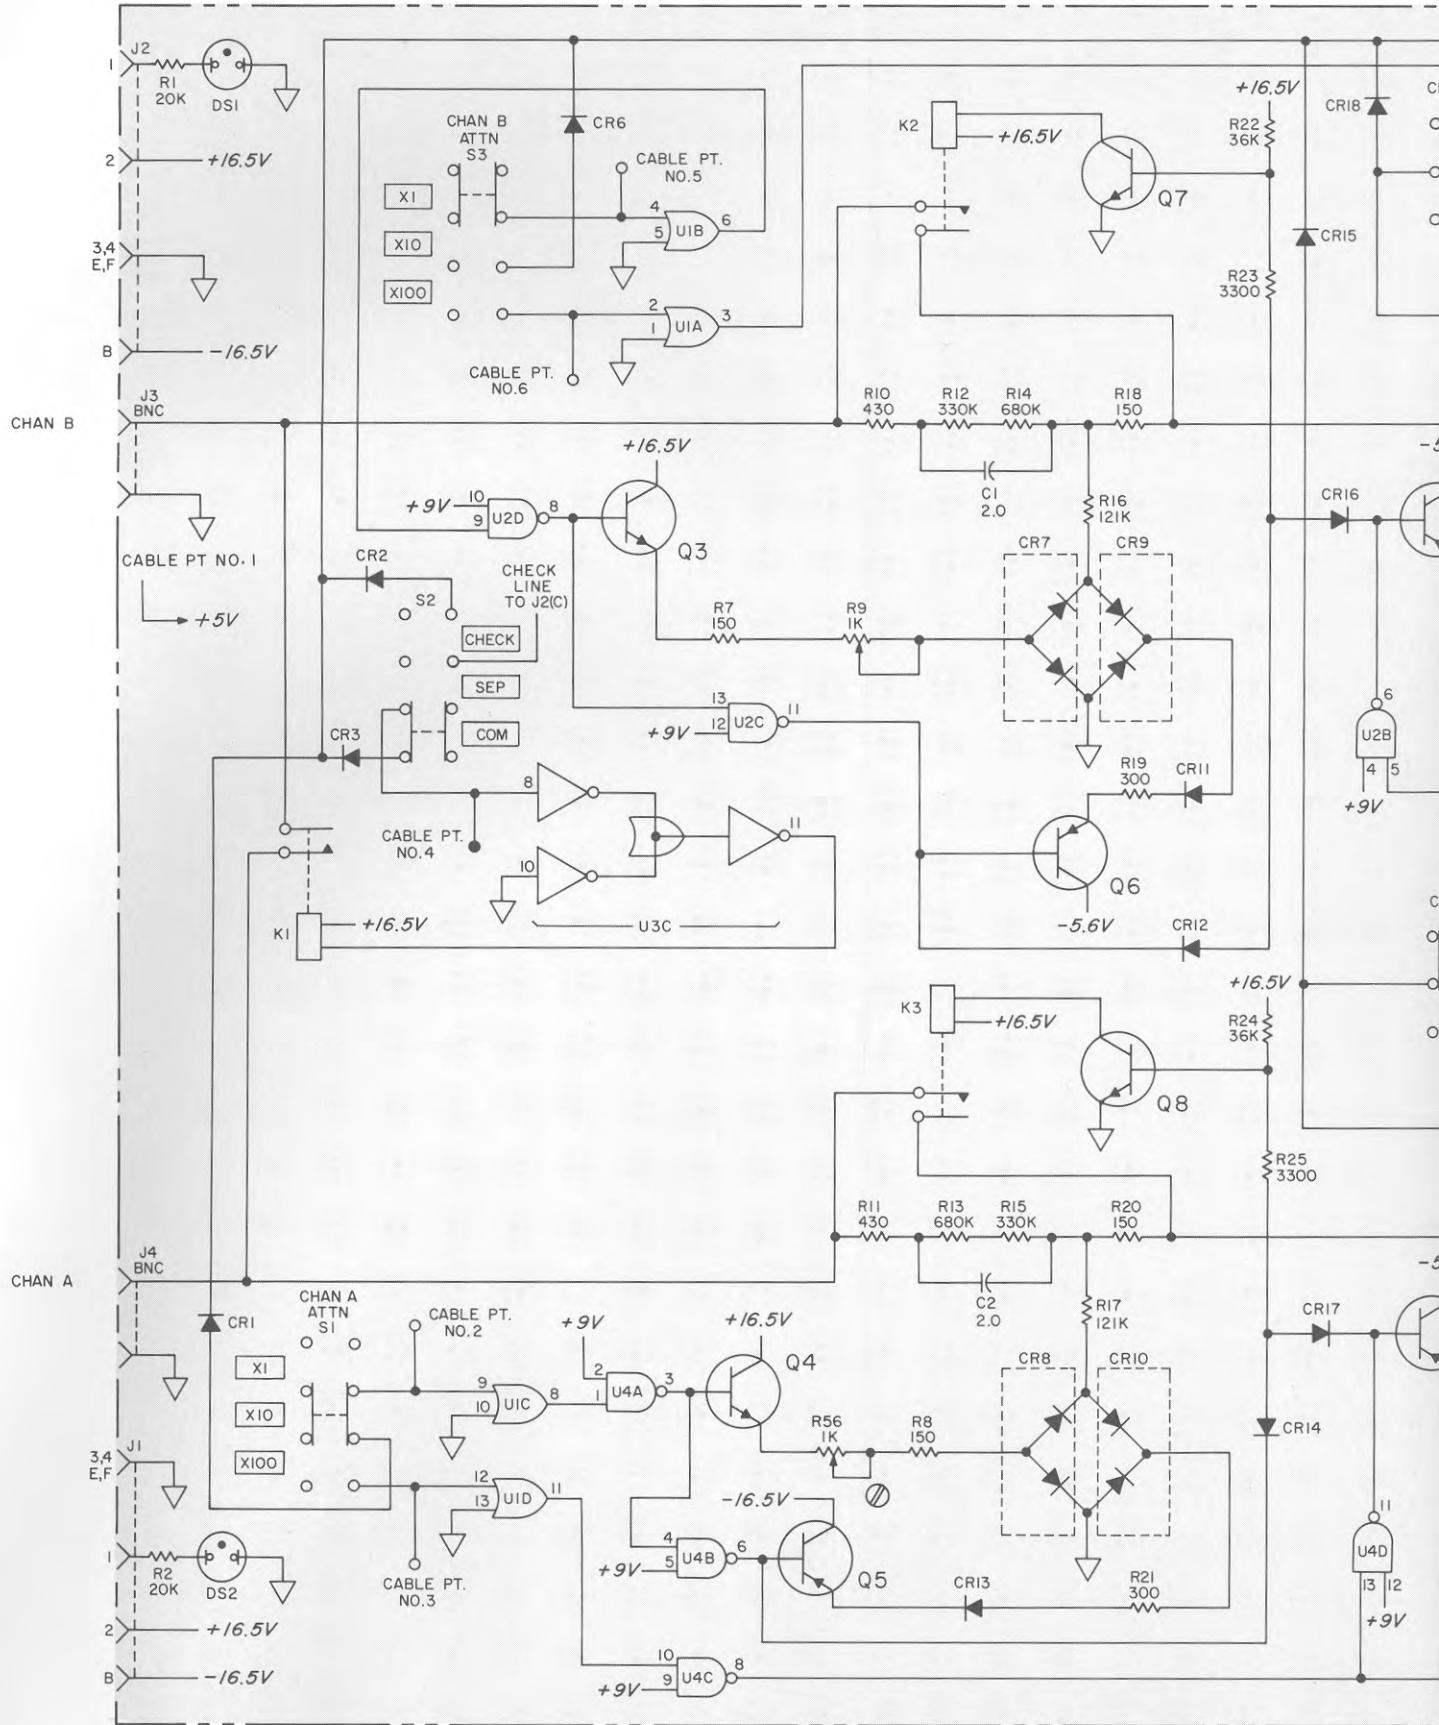

OPTION 004 PROGRAMMABLE ATTENUATOR ASSEMBLY (05327-60034)(NOTE 1) SERIES 1040A

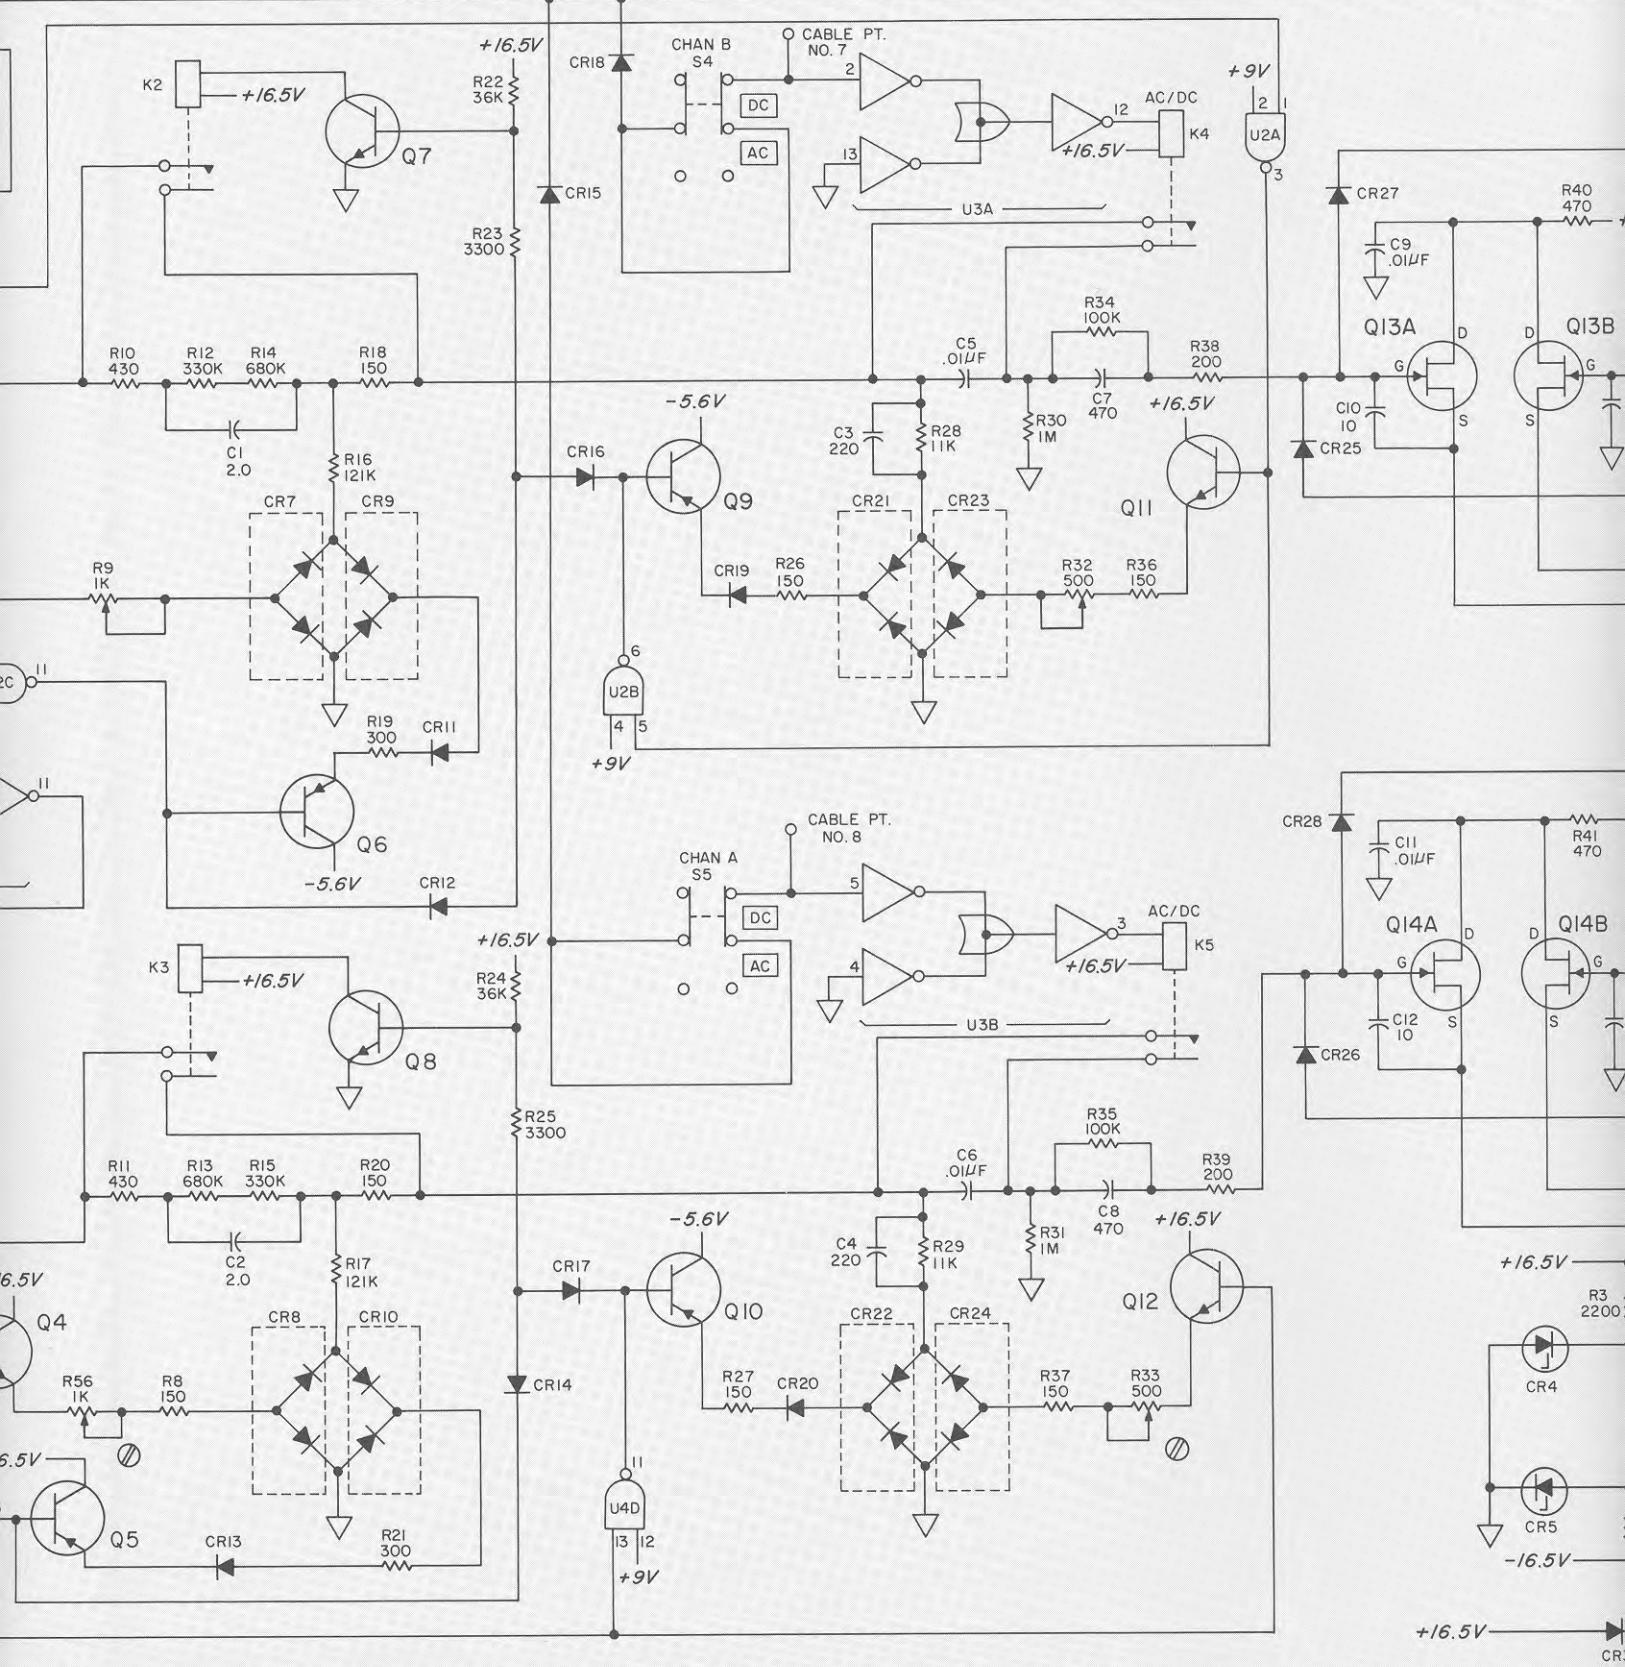

Fig

OR ASSEMBLY (05327-60034)(NOTE 1) SERIES 1040A



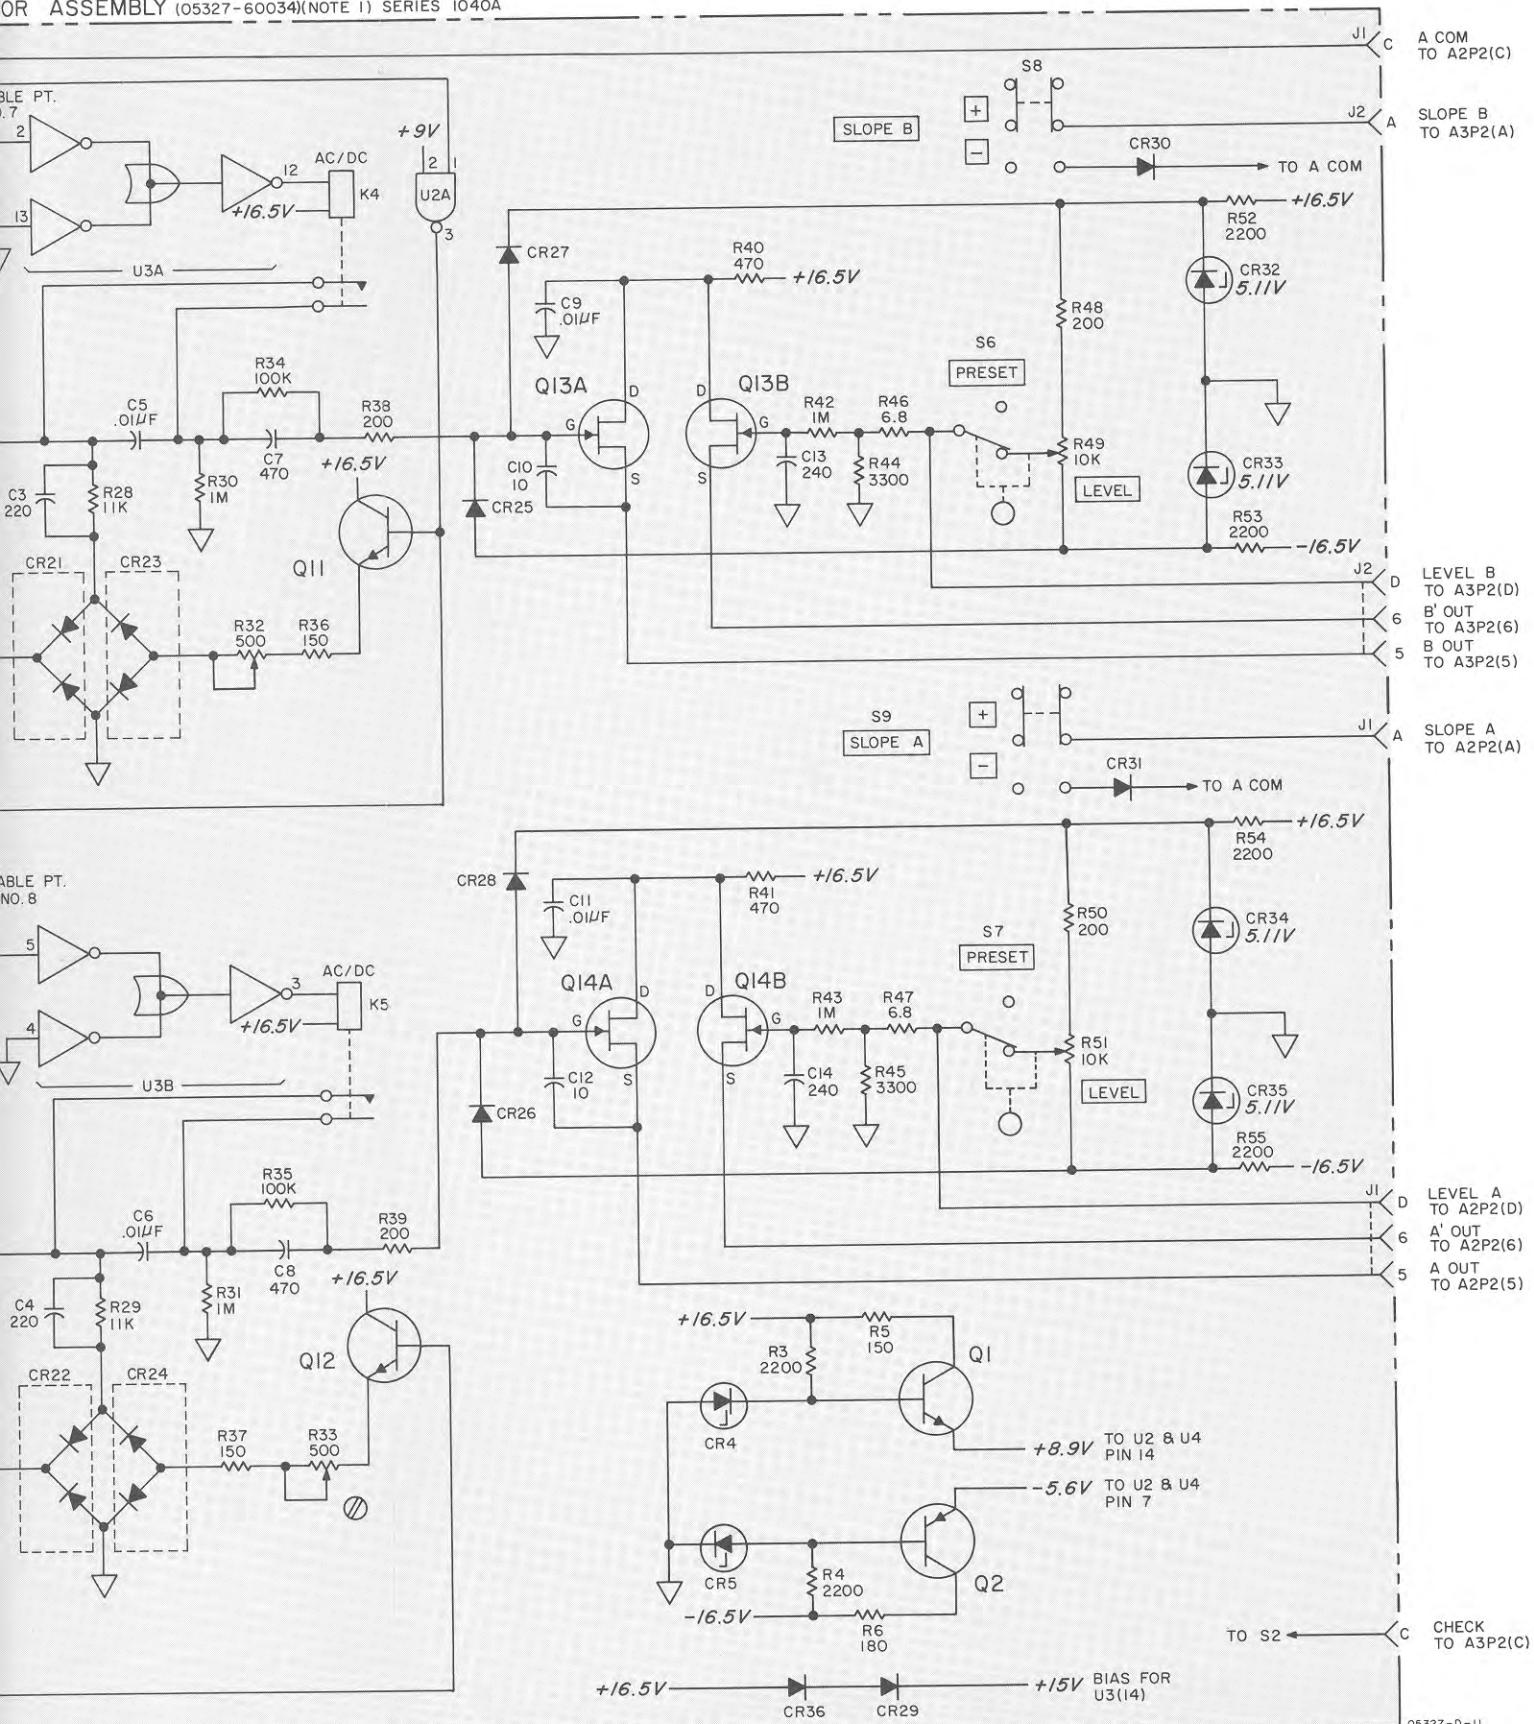


Figure 8-23. A1 Option 004 Programmable Attenuator Assembly

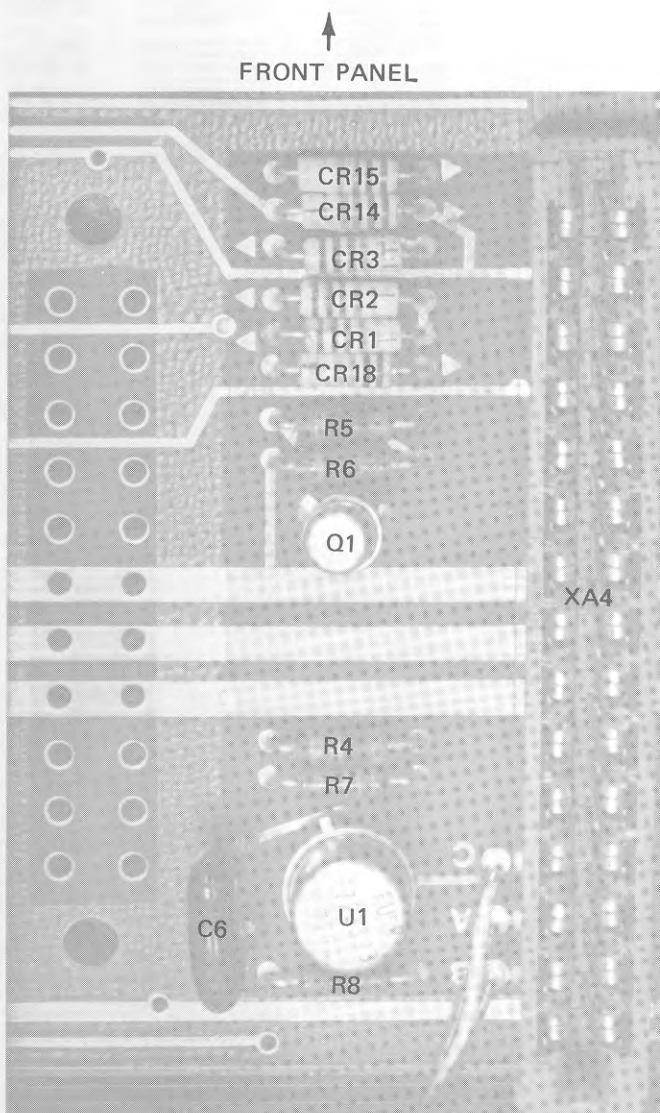

TOP VIEW
OF
A16

OPTIONS O10 AND

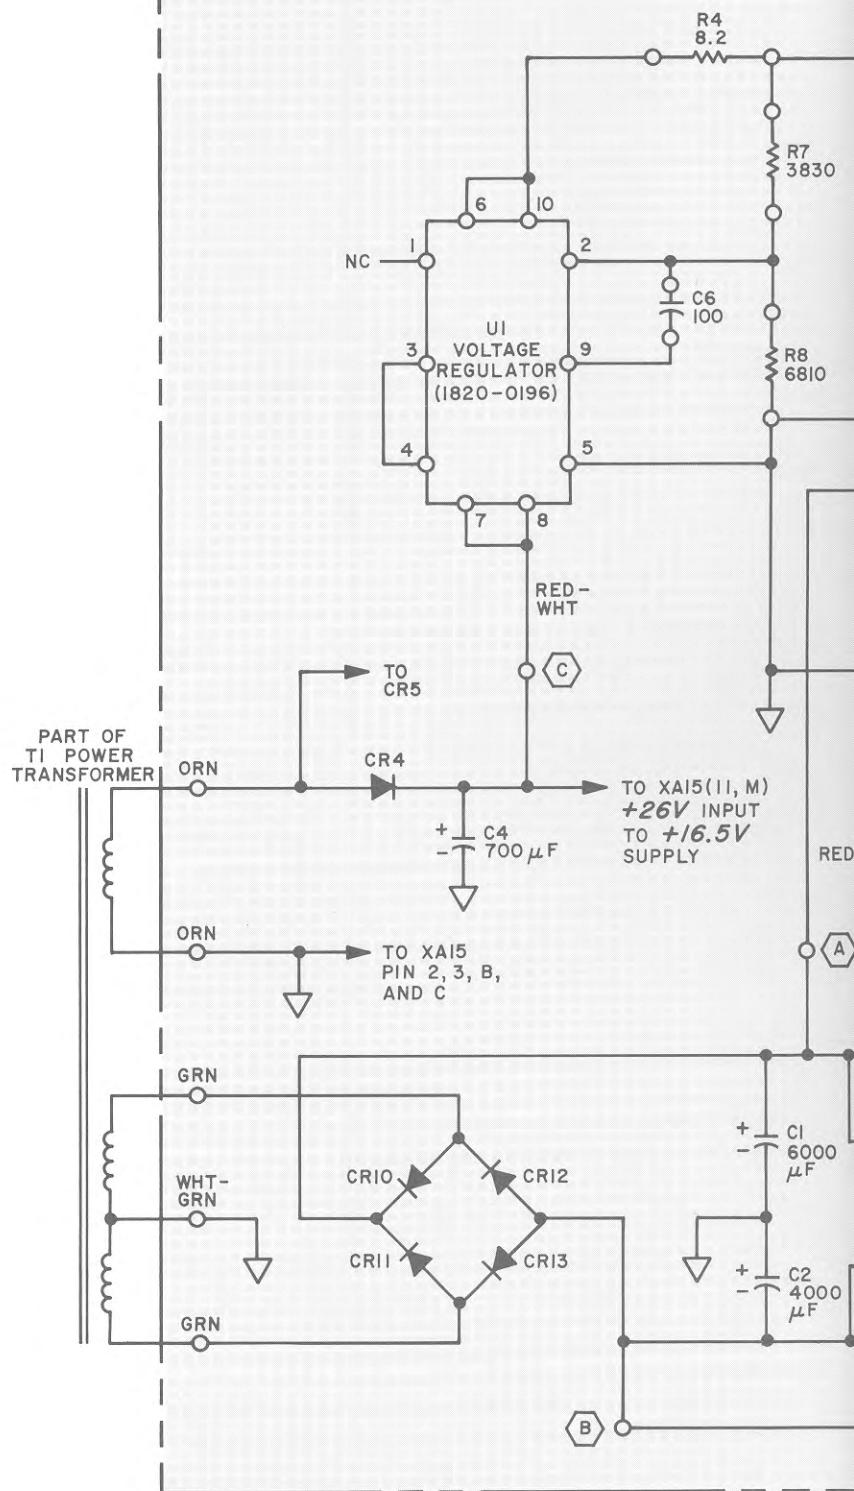

INTERCONNECT CIRCUIT BOARD (PARTIAL DIAGRAM) (05327-60027) SERIES I224A

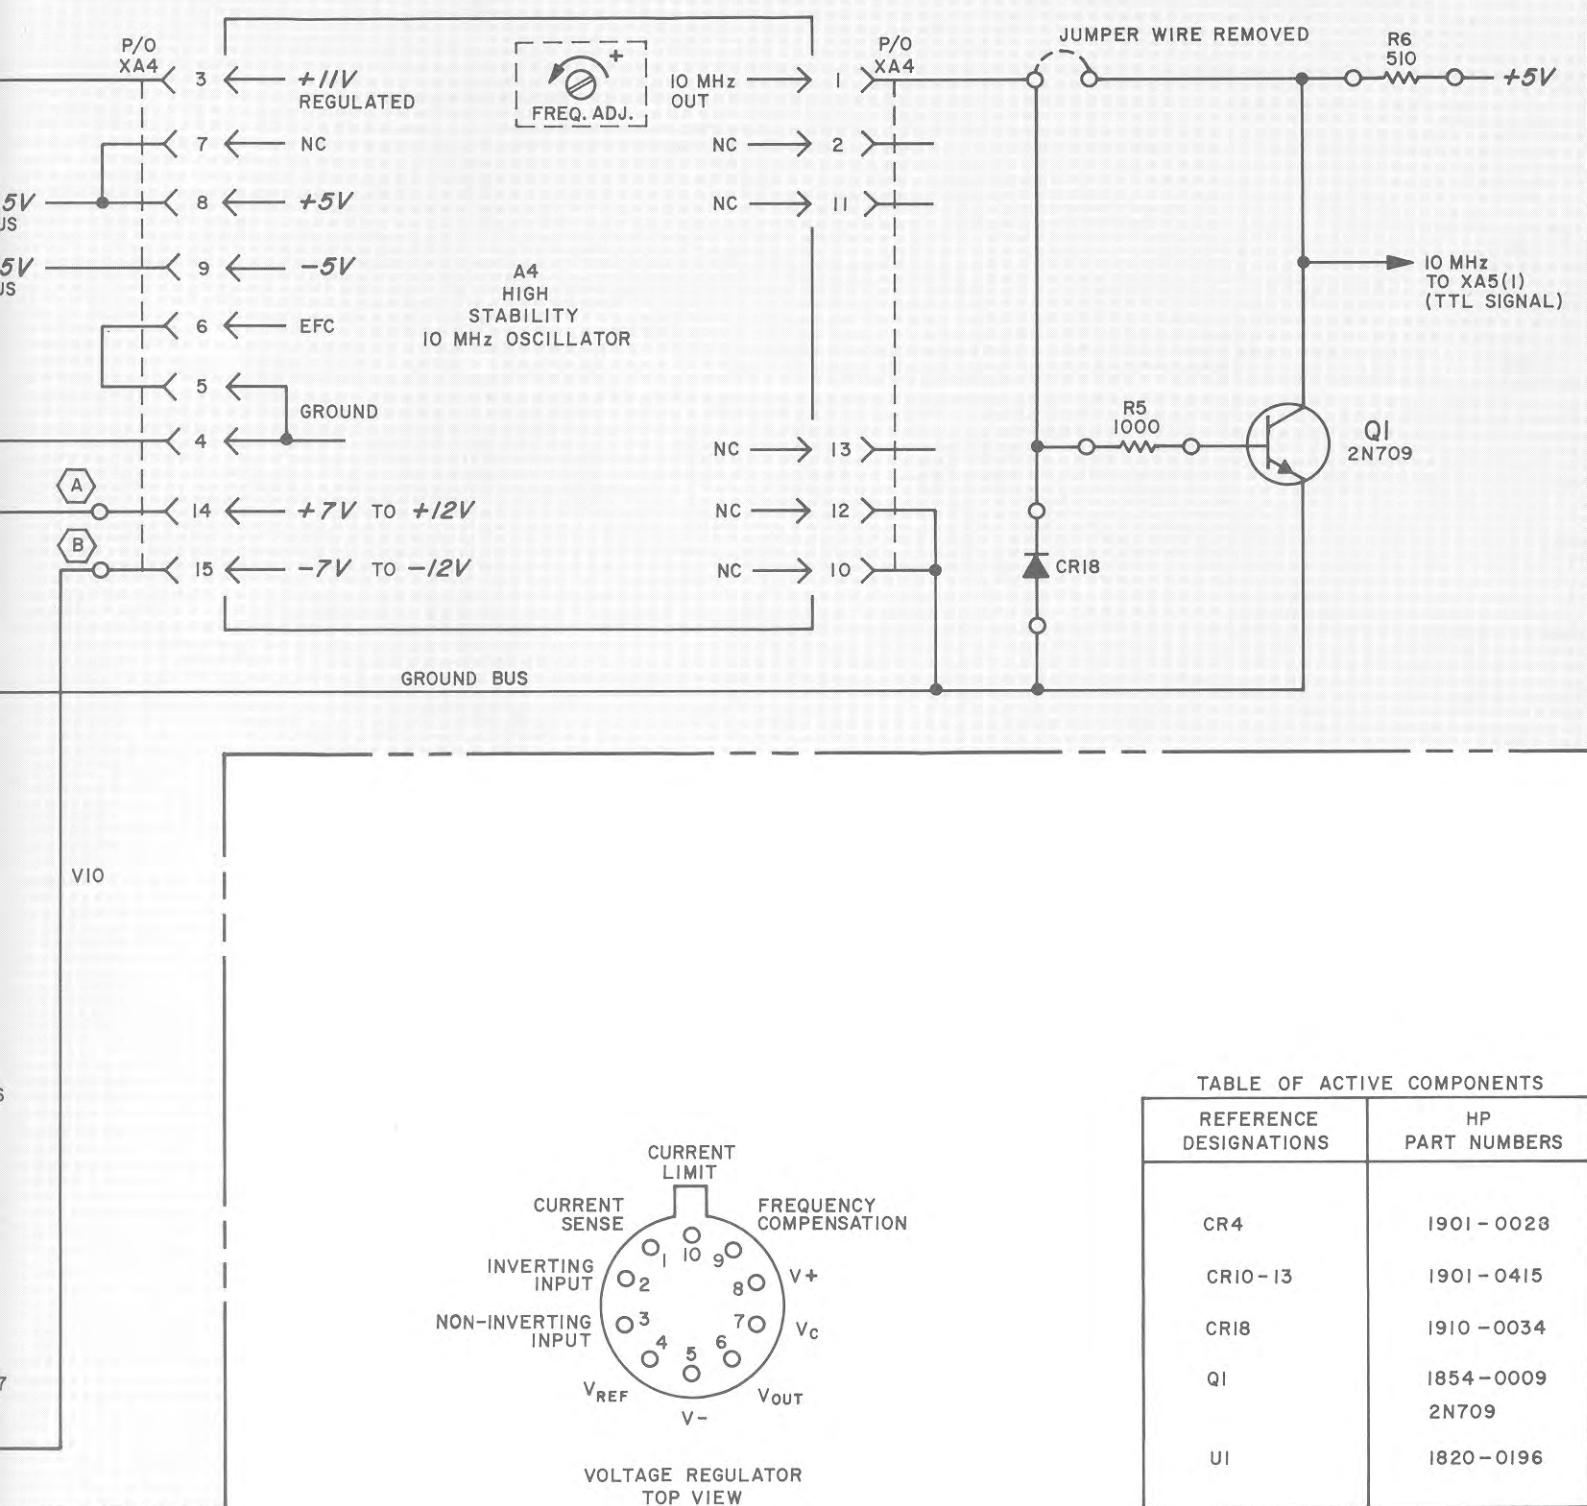


Figure 8-24. Options 010, 011, and A16 Interconnect Circuit Board

HEWLETT·PACKARD
ELECTRONIC INSTRUMENTATION SALES AND SERVICE
UNITED STATES, CENTRAL AND SOUTH AMERICA, CANADA

UNITED STATES

| | | | | |
|---|---|---|--|---|
| ALABAMA 8290 Whitehouse Dr., S.E. P.O. Box 4207 Huntsville 35802 Tel: (205) 851-4591 TWX: 710-726-2204 | CONNECTICUT 12 Lunal Drive New Haven 06525 Tel: (203) 389-6551 TWX: 710-465-2029 | MARYLAND 5707 White Station Road Baltimore 21207 Tel: (301) 944-5400 TWX: 710-862-9157 | NEW MEXICO P.O. Box 4366 Santa Fe 6501 Lomas Boulevard N.E. Albuquerque 87108 Tel: (505) 265-3713 TWX: 910-989-1665 | SOUTH CAROLINA 69410 N. Trenholm Road Columbia 29260 Tel: (803) 782-6493 |
| ARIZONA 2335 E. Magnolia St. Phoenix 85034 Tel: (602) 244-1361 TWX: 910-951-1330 | FLORIDA P.O. Box 24210 2805 W. Oakland Park Blvd. Ft. Lauderdale 33307 Tel: (305) 731-2020 TWX: 510-955-4099 | 20010 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | OHIO 155 Wyatt Drive Las Cruces 88001 Tel: (505) 562-2485 TWX: 910-983-0550 | TEXAS P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| 2424 East Aragon Rd. Tucson 85706 Tel: (602) 889-4661 | P.O. Box 13910 6177 Lake Ellinor Dr. Orlando, 32809 Tel: (305) 859-2800 TWX: 710-850-0113 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | NEW YORK 6 Automation Lane Computer Park Albany 12205 Tel: (518) 458-1550 TWX: 710-441-8270 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| CALIFORNIA 1430 East Orangeborro Ave. Fullerton 92631 Tel: (714) 870-1000 TWX: 910-592-1288 | GEORGIA P.O. Box 28234 450 Interstate North Atlanta 30328 Tel: (404) 436-6181 TWX: 810-766-4890 | 32 Hartwell Ave. Lexington 02173 Tel: (617) 881-8960 TWX: 710-326-9904 | 32 Hartwell Ave. Lexington 02173 Tel: (617) 881-8960 TWX: 710-326-9904 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| 3399 Lankershim Boulevard North Hollywood 91604 Tel: (213) 877-1282 TWX: 910-499-2170 | ILLINOIS 5615 Arizona Place Los Angeles 90045 Tel: (213) 776-7500 TWX: 910-328-6148 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | MICHIGAN 23855 Research Drive Farmington 48024 Tel: (313) 476-5400 TWX: 810-242-2900 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| 1101 Embarcadero Road Palo Alto 94303 Tel: (415) 327-6500 TWX: 910-373-1280 | HAWAII 2875 So. King Street Honolulu 96154 Tel: (808) 955-4455 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | MINNESOTA 2459 University Avenue St. Paul 55114 Tel: (612) 645-9461 TWX: 910-563-3734 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| 2220 Watt Ave. Sacramento 95825 Tel: (916) 482-1463 TWX: 910-367-2092 | INDIANA 50309 Meadows Drive Indianapolis 46205 Tel: (317) 546-4891 TWX: 810-341-3263 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | MISSOURI 11131 Colorado Ave. Kansas City 64137 Tel: (816) 763-8000 TWX: 910-771-2087 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| 9606 Aero Drive P.O. Box 23333 San Diego 92123 Tel: (714) 279-2200 TWX: 910-335-2000 | IOWA 1902 Broadway Iowa City 52240 Tel: (319) 338-9466 Night: (319) 338-9467 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | 18 Weldon Parkway Maryland Heights 63043 Tel: (314) 567-1455 TWX: 910-764-0630 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| COLORADO 5600 South Ulster Parkway Englewood 80110 Tel: (303) 771-3455 TWX: 910-935-0705 | *NEVADA Las Vegas Tel: (702) 382-5777 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | *NEVADA Las Vegas Tel: (702) 382-5777 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| LOUISIANA P. O. Box 840 3239 Williams Boulevard Kenner 70062 Tel: (504) 721-5201 TWX: 810-955-5524 | NEW JERSEY W. 120 Century Rd. Paramus 07652 Tel: (201) 265-5000 TWX: 710-990-4951 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | NORTH CAROLINA P.O. Box 5184 1923 North Main Street High Point 27260 Tel: (336) 885-2610 TWX: 510-221-2168 | RHOODE ISLAND 873 Waterman Ave East Providence 02914 Tel: (401) 434-5535 TWX: 710-381-7573 |
| TEXAS P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 | OHIO 1650 Sprague Road Cleveland 44130 Tel: (216) 243-7300 Night: 243-7305 TWX: 810-423-9431* | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | OKLAHOMA P.O. Box 230006 Oklahoma City 73132 Tel: (405) 721-0200 TWX: 910-830-6862 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| UTAH 2890 South Main Street Salt Lake City 84115 Tel: (801) 487-0715 TWX: 910-925-5681 | OREGON 17890 SW Boones Ferry Road Tualatin 97062 Tel: (503) 620-3350 TWX: 710-467-8714 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | PENNSYLVANIA 111 Zeta Drive Pittsburgh 15238 Tel: (412) 782-0400 Night: 782-0401 TWX: 710-795-3124 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| WASHINGTON Bellshill Office Park, 1203 - 114th SE Bellevue 98004 Tel: (206) 454-3971 TWX: 710-555-0157 | WISCONSIN 1021 8th Avenue King of Prussia Industrial Park King of Prussia 19406 Tel: (215) 265-7000 TWX: 510-660-2670 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | *WEST VIRGINIA Charleston Tel: (304) 345-1640 | P.O. Box 1270 201 N. Akard St. Dallas 75201 Tel: (214) 231-6101 TWX: 910-467-4723 |
| FOR U.S. AREAS NOT LISTED: Contact the regional office nearest you: Atlanta, Georgia; North Hollywood, California; Paramus, New Jersey... Skokie, Illinois. Their complete addresses are listed above. *Service Only | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 | 32001 Century Blvd. Germantown 20767 Tel: (31) 428-0700 |

CENTRAL AND SOUTH AMERICA

| | | | | | | |
|------------------|---|--|---|---|---|--|
| ARGENTINA | Hewlett-Packard Argentina I.E.C. Ltda. Lavalle 1171 - 3° | Hewlett-Packard Do Brasil I.E.C. Ltda. Rua da Matriz, 29 20000-Rio de Janeiro-GB Tel: 265-2643 Telex: 210079 HEWPACK Cable: HEWPACK Rio de Janeiro | ECUADOR Laboratorios de Radio-Ingenieria Calle Guayaquil 1246 Post Office Box 3199 Quito Tel: 212-496; 219-185 Cable: HORVATH Quito | NICARAGUA Roberto Terán G. Apartado Postal 689 Edificio Terán Managua Tel. 3451, 3452 Cable: ROTERAN Managua | PERU Compañía Electro Médica S.A. Ave. Enrique Canaval 312 San Isidro Casilla 1030 Lima Tel: 22-3900 Cable: ELMED Lima | URUGUAY Pablo Ferrando S.A. Comercial e Industrial Avenida Italia 2877 Casilla de Correo 370 Montevideo Tel: 40-3102 Cable: RADIMUM Montevideo |
| BOLIVIA | Hewlett-Packard (Santa Cruz) LTDA. Av. Presidente Santa Cruz 1342 La Paz | Héctor Calagni y Cia, Ltda. Casilla 16.475 Santiago Tel: 423-96 Cable: CALCAGNI Santiago | CHILE Electronik Associates Apartado Postal 1682 Centro Comercial Gigante San Bernardo, El Salvador C.A. Pasaje Encuentro 645-4° Piso Tel: 23-44-60, 23-32-37 Cable: ELECAS | EL SALVADOR Electrónico Balboa, S.A. P.O. Box 4929 Av. Manuel Espinoza No. 13-50 Bldg. B Panama City Tel: 210-3833 Telex: 348103, Cururunda, Canal Zone Cable: ELECTRON Panamá City | PANAMA San Juan Electronics, Inc. P.O. Box 5167 Ponce de Leon 154 Pda. 3-PTA de Tierra San Juan Tel: (809) 725-3342, 722-3342 Cable: SATRONICS San Juan Telex: SATRON 3450 332 | VENEZUELA Hewlett-Packard de Venezuela C.A. Apartado 50933 Edif. 10 Segre Sector Transversal Los Ruices Norte Caracas 107 Tel: 35-00-11 Telex: 21145 HEWPACK Cable: HEWPACK Caracas |
| BRAZIL | Hewlett-Packard Do Brasil I.E.C. Ltda. Praça Frei Caneca 1119 01307-Sao Paulo-SP | Henrique A. Langebaek & Kier S.A. Carrera 7 No. 48-59 Apartado Adreça 6287 Bogotá D.C. | COLOMBIA Hewlett-Packard Av. 28-7111, 287-5858 Telex: 309151/2/3 Cable: HEWPACK Sao Paulo | GUATEMALA Hewlett-Packard Avenida La Reforma 3-48, Zona 9 Guatemala Tel: 63627, 64736 Telex: 4192 TELTRO GU | PARAGUAY Z. J. Melamed S.R.L. Division: Aparatos y Equipos Medicos Division: Aparatos y Equipos Scientificos y de Investigacion P.O. Box 1000 Chile, 482, Edificio Victoria Asuncion Tel: 4-5069, 4-6272 Cable: RAMEL | Puerto Rico San Juan Electronics, Inc. P.O. Box 5167 Ponce de Leon 154 Pda. 3-PTA de Tierra San Juan Tel: (809) 725-3342, 722-3342 Cable: SATRONICS San Juan Telex: SATRON 3450 332 |
| | Hewlett-Packard Do Brasil I.E.C. Ltda. Praça Dom Feliciano, 78 90000-Porto Alegre-RS | Hewlett-Packard I.E.C. Ltda. Praça Dom Feliciano, 78 90000-Porto Alegre-RS | MEXICO Hewlett-Packard Mexicana, S.A. de C.V. Torres Adolfo Nuñez No. 21, 11° Piso Col. del Valle Mexico 12, D.F. Tel: 54-49-13 Cable: GALGUR San José | COSTA RICA Hewlett-Packard I.C. Ltda. Av. Alfredo Gallegos Gurdíán Apartado 10159 San José Tel: 21-56-13 Cable: GALGUR San José | MEXICO Hewlett-Packard Mexicana, S.A. de C.V. Torres Adolfo Nuñez No. 21, 11° Piso Col. del Valle Mexico 12, D.F. Tel: 543-42-32 Cable: GALGUR San José | FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard 1000 Corporate Park 3300 Hillsview Ave. Palo Alto, California 94304 Tel: (415) 493-1501 TWX: 910-373-1267 Cable: HEWPACK Palo Alto Telex: 034-8309, 034-4493 |

CANADA

| | | | | | |
|---|--|---|--|---|---|
| ALBERTA | BRITISH COLUMBIA | MANITOBA | NOVA SCOTIA | ONTARIO | QUEBEC |
| Hewlett-Packard (Canada) Ltd. | Hewlett-Packard (Canada) Ltd. | Hewlett-Packard (Canada) Ltd. | Hewlett-Packard (Canada) Ltd. | Hewlett-Packard (Canada) Ltd. | Hewlett-Packard (Canada) Ltd. |
| 11748 Kingsway Ave. Edmonton T5G 0X5 Tel: (403) 452-3670 TWX: 610-831-2431 | 837 E. Cordova Street Vancouver V6A 3R2 Tel: (604) 254-0531 TWX: 610-922-5059 | 513 Century St. St. James Winnipeg R3H 0L8 Tel: (204) 785-7581 TWX: 610-671-3531 | 2745 Dutch Village Rd. Halifax B3L 4C7 Tel: (902) 455-0511 TWX: 610-271-4482 | 1785 Woodward Dr. Ottawa K2C 0P9 Tel: (613) 255-6530 TWX: 610-562-8968 | 2275 Hwy. 104 Pointe-Claire H9R 1G7 Tel: (514) 561-6520 TWX: 610-422-3022 Telex: 05-821521 HPCL |
| Hewlett-Packard (Canada) Ltd. | | | Hewlett-Packard (Canada) Ltd. | Hewlett-Packard (Canada) Ltd. | Hewlett-Packard (Canada) Ltd. |
| 15-42 Avenue S.E. Calgary T2C 1Z1 Tel: (403) 262-4279 | | | 6877 Corneway Drive Mississauga L4V 1N9 Tel: (416) 678-9430 TWX: 610-492-4246 | 2376 Galvan Street Ste-Foy G1N 4G2 Tel: (418) 688-8710 | 2376 Galvan Street Ste-Foy G1N 4G2 Tel: (418) 688-8710 |

HEWLETT · PACKARD
ELECTRONIC INSTRUMENTATION SALES AND SERVICE
EUROPE, AFRICA, ASIA, AUSTRALIA

EUROPE

| | | | | |
|---|---|---|---|--|
| AUSTRIA Hewlett-Packard Ges.m.b.H Handelskai 52/3 P.O. Box 7 A-1205 Vienna Tel.: (0222) 33 66 06 to 09 Cable: HEWPACK Vienna Telex: 75923 hewpak a | Hewlett-Packard France Zone Aéronautique Avenue Clément Ader F-31770 Célemeris Tel.: (61) 86 81 55 Telex: 51957 | Hewlett-Packard GmbH Zone Aéronautique Avenue Clément Ader F-31770 Célemeris Tel.: (61) 86 81 55 Telex: 51957 | Hewlett-Packard Ltd. The Graftons Stamford New Road Altringham, Cheshire Tel.: (040) 24 13 93 Cable: HEWPACKSA Hamburg Telex: 21 63 03 hphd d | PORTUGAL Telecra-Empresa Técnica de Equipamentos Eléctricos S.a.r.l. Rua Rodrigo da Fonseca 103 P-1600 Lisboa 2551 P-1600 Lisboa 1 Tel.: (19) 68 60 72 Cable: TELECTRA Lisbon Telex: 1598 |
| BELGIUM Hewlett-Packard Benelux S.A./N.V. Avenue de Col-Vert, 1, (Groenkringlaan) B-1170 Brussels Tel.: (02) 72 22 40 Cable: PALOBEN Brussels Telex: 23 494 paloben bru | Hewlett-Packard France Agence Régionale Boulevard Félix-Garrama Boite Postale No. 11 F-13100 Lurey Tel.: (47) 24 00 66 Telex: 41770 | Hewlett-Packard GmbH Vertriebsbüro Hamburg Wendenschr. 23 D-2000 Hamburg 1 Tel.: (040) 24 13 93 Cable: HEWPACK Hamburg Telex: 686056 | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | TURKEY Telekom Engineering Bureau Saglik Sok No. 15/1 Ayaspaşa-Yıldız P-14080 43 Beyoglu TR-İstanbul Tel: 49 40 40 Cable: TELEMATION Istanbul |
| DENMARK Hewlett-Packard A/S Datavej 38 DK-3460 Birkerød Tel.: (01) 81 66 40 Cable: HEWPACK AS Telex: 165 40 hp as | Hewlett-Packard France Agence Régionale 63, Avenue de Rochester F-35000 Rennes Tel.: (99) 36 33 21 Telex: 74912 F | Hewlett-Packard GmbH Vertriebsbüro München Unterhachinger Strasse 28 D-8000 München 6 Tel.: (089) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | UNITED KINGDOM Hewlett-Packard Ltd. 224 Bath Road GB-Slough, SL1 4 DS, Bucks Tel: Slough (0753) 33341 Cable: HEWPAC Slough Telex: 848413 |
| FINLAND Hewlett-Packard Oy Bulevardi 26 P.O. Box 12185 SF-00120 Helsinki 12 Tel.: (09) 13730 Cable: HEWPACKY Helsinki Telex: 12-15363 hel | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard GmbH Vertriebsbüro Nürnberg Hersbruckerstrasse 7 D-9000 Nürnberg Tel.: (0911) 57 10 66 Telex: 623 860 | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | SPAIN Hewlett-Packard Espaola, S.A. Jerez No 8 E-Madrid 16 Tel: 458 26 00 Cable: 23515 hpc Telex: 32046 |
| GERMAN FEDERAL REPUBLIC Hewlett-Packard GmbH Vertriebszentrale Frankfurt Bernerstrasse 1 D-6000 Frankfurt 55 Tel.: (0611) 50 04-1 Cable: HEWPACKSA Frankfurt Telex: 41 32 49 fra | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard GmbH Vertriebsbüro Würzburg Bernerstrasse 1 D-9500 Würzburg 12 Tel.: (0931) 317045 Cable: HEWPACK Würzburg | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | SWEDEN Hewlett-Packard Sverige AB Enighetsvägen 1-3 Fack S-161 20 Bromma 20 Cable: MEASUREMENTS Stockholm Tel.: 10721 |
| FRANCE Hewlett-Packard France Quartier du Tournebut Bâtiment Présale No. 6 F-91401 Orsay Tel.: (1) 907 78 25 Cable: HEWPACK Orsay Telex: 60048 | Hewlett-Packard France Agence Régionale 4 Quai des Etroits F-69321 Lyon Cedex 1 Tel.: (78) 72 63 45 Cable: HEWPACK Lyon Telex: 31617 | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | SWITZERLAND Hewlett-Packard (Schweiz) AG Zürichstrasse 20 P.O. Box 7825 CH-8001 Zürich, 1011 Tel.: (01) 98 18 21/24 Cable: HPAG CH |
| ANGOLA Techno-Empresa Técnica de Equipamentos Eléctricos S.A.R.L. Rua da Bandeira, Rodrigues, 44-46, D. Olinda P.O. Box 6487 Luanda Cable: TELECTRA Luanda | ETHIOPIA African Salespower & Agency Private Ltd., Co. P.O. Box 718 56-59, Birmingham St. Addis Ababa Tel.: 12285 Cable: ASACO Addisababa | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | NETHERLANDS Hewlett-Packard Benelux N.V. Weerdestraat 117 NL-6130 MD, Enschede Mediterranean & Middle East Operations 35 Kolokotroni Street Plaka Kefalonia 28 Greece Tel.: 2080337, 8080358, 8080429, 8018693 Cable: RAKAR Athens Telex: 21 59 62 Kar gr |
| AUSTRALIA Hewlett-Packard Australia Pty. Ltd. 31 Bridge Street Potts Point New South Wales, 2073 Tel.: 449 6556 Telex: 21561 Cable: HEWPARD Sydney | HONG KONG Schmidt & Co. (Hong Kong) Ltd. P.O. Box 297 Connaught Centre 39/Floor Connaught Road, Central Hong Kong Tel.: 240158, 232735 Telex: X47465 Cable: SCHMIDTCo Hong Kong | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | NORWAY Hewlett-Packard Norge A/S Nesveien 13 Box 149 N-1344 Aslum Tel.: (02) 53 83 60 Telex: 16621 hnpsa n |
| IRISH LAND Hewlett-Packard Ltd. 224 Bath Road GB-Slough, SL1 4 DS, Bucks Tel.: (0753) 33341 Cable: HEWPAC Slough Telex: 848413 | INDIA Blue Star Ltd. Kasturi Buildings Jamsheedji Tata Rd. Bombay 400 020 Tel.: 45 78 87 Telex: 3751 Cable: BLUESTAR | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | PAKISTAN Musko & Company, Ltd. Osman Chambers Abdullah Haroon Road Karachi 3 Tel.: 511027, 512927 Cable: COOPERATOR Karachi |
| INDONESIA Bali Bolon Trading Coy. N.V. Djalal Merdeka 29 Bali 10111 Tel.: 491516 Cable: ILMU Telex: 08-809 | INDONESIA Blue Star Ltd. Kasturi Buildings Jamsheedji Tata Rd. Bombay 400 020 Tel.: 45 78 87 Telex: 3751 Cable: BLUESTAR | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | PHILIPPINES Electronex, Inc. Unit 4 Floor 4, Samplana Development Corp. Bldg Ayala Avenue, Makati, Rizal C.P.C.O. Box 1028 Makati, Rizal Tel.: 86-18-87, 87-77-77, 87-86-88, 87-18-15, 88-91-71, 88-61-12, 88-62-12 Cable: ELENEX Manila |
| LEBANON Constantine E. Macridis P.O. Box 7213 R-14-2400 Beirut Tel.: 2080464 Cable: ELECTRONECULAR Beirut | IRAN Multi Corp International Ltd. Avenue Scraya 130 P.O. Box 1212 Dae Kyung Bldg., 8th Floor 107 Sejong-Ro Chongku-Ku, Seoul Tel.: 4 lines 78-8924-7 Cable: AMTRACO Seoul | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | TAIWAN Hewlett-Packard Taiwan 3rd Floor, Cocoa House Sect. 1 Overseas Insurance Corp. Bldg. 7th Floor Taipei Tel.: 389-1601, 1, 375121, Ext. 240-246 Telex: FB24 HEWPACK Cable: HEWPACK Taipei |
| KOREA American Trading Company Korea, 1 P.O. Box 1103 Dae Kyung Bldg., 8th Floor 107 Sejong-Ro Chongku-Ku, Seoul Tel.: 2080464 Cable: ELECTRONECULAR Beirut | KOREA American Trading Company Korea, 1 P.O. Box 1103 Dae Kyung Bldg., 8th Floor 107 Sejong-Ro Chongku-Ku, Seoul Tel.: 2080464 Cable: ELECTRONECULAR Beirut | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | THAILAND UNIMESA Ltd. Chittaphak Building 55 Sukhumvit Road Bangkok Tel.: 37956, 31300, 31307, 37540 Cable: UNIMESA Bangkok |
| ISRAEL Electronics & Engineering Div. of Motorola Israel Ltd. 17 Ammanav Street Tel-Aviv Tel.: 35941 (3 lines) Cable: BASTER Tel-Aviv Telex: 33569 | MALAYSIA MECOMB Malaysia Ltd. 2 Lorong 13/6A Section 13 Petaling Jaya, Selangor Cable: MECOMB Kuala Lumpur | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | UGANDA Uganda Tele-Electric Co., Ltd. P.O. Box 4449 Kampala Tel.: 57279 Cable: COMCO Kampala |
| VIETNAM Peninsular Trading Inc. P.O. Box H-3 216 Hien-Vuong Saigon Tel.: 20-805, 93398 Cable: PENTRA, SAIGON 242 | MOZAMBIQUE A.N. Goncalves, Ltd. 162, Av. D. Luis P.O. Box 107 Lourdes Matades Tel.: 278-22112 Telex: 5-203 Negon Mo Cable: NECON Telex: 28935 KCI TM | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | VIETNAM Peninsular Trading Inc. P.O. Box H-3 216 Hien-Vuong Saigon Tel.: 20-805, 93398 Cable: PENTRA, SAIGON 242 |
| ZAMBIA R. & T. Tilbury (Zambia) Ltd. P.O. Box 2792 Lusaka Zambia, Central Africa Tel.: 73793 Cable: ARAYTEE, Lusaka | SOUTH AFRICA Hewlett-Packard South Africa (Pty.) Ltd. Hewlett-Packard House Daphne Street, Wendyswood, Sandton, Transval 2001 P.O. Box 87 Telex: 33320 Cable: HEWPACK SINGAPORE | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN PLEASE CONTACT: Hewlett-Packard S.A. Mediterranean and Middle East Operations 35, Kolokotroni Street— Plaka, Kefalonia Greece Cable: HEWPACKSA Athens Telex: 21-658 |
| OTHER AREAS NOT LISTED, CONTACT: Hewlett-Packard Export Trade Company 3200 Hillview Ave. Palo Alto, CA 94304 Tel.: (415) 493-1501 Telex: 910-373-1267 Cable: HEWPACK Palo Alto Telex: 034-8300, 034-8493 | NIGERIA The Electronics Instrumenta- tions Ltd. (TEIL) 144 Agege Motor Rd., Mushin P.O. Box 6645 Lagos Cable: THETEL Lagos | Hewlett-Packard France Agence Régionale 74, Avenue du Rhône F-67000 Strasbourg Tel.: (88) 35 23 20/21 Telex: 89141 Cable: HEWPACK STRBG | Hewlett-Packard Italia S.p.A. Via Amerigo Vespucci 2 I-20139 Milan Tel.: (2) 6251 10 (lines) Cable: HEWPACKIT Milan Telex: 32046 | OTHER AREAS NOT LISTED, CONTACT: Hewlett-Packard Export Trade Company 3200 Hillview Ave. Palo Alto, CA 94304 Tel.: (415) 493-1501 Telex: 910-373-1267 Cable: HEWPACK Palo Alto Telex: 034-8300, 034-8493 |

AFRICA, ASIA, AUSTRALIA

| | | | | |
|--|---|--|---|---|
| GEYLON United Electricals Ltd. P.O. Box 681 60, Park St. Colombo 2 Tel.: 26966 Cable: HOPOINT Colombo | CYPRUS Kytronics 19 Gregoris & Xenopoulos Road P.O. Box 1152 CY-Nicosia Tel.: 4562-129 Cable: KYTRONICS PANDEHIS | JAPAN Yokogawa-Hewlett-Packard Ltd. Ohsaki Building 7-1 Hata Street Shibuya-ku, Tokyo P.O. Box 505 Tel.: 03-3721/92 Telex: 232-2024YHP Cable: YOKOPART KOK Telex: 23-0131 Telex: 655 Cable: BLUESTAR | NEW ZEALAND Hewlett-Packard (N.Z.) Ltd. 94-96 Diven Street P.O. Box 9443 Courtney Place, Wellington Tel.: 59-559 Telex: 3898 Cable: HEWPACK Wellington | SOUTH AFRICA Hewlett-Packard South Africa (Pty.) Ltd. Bree Street Brentford Professional Centre Box 51092 Pakuranga Nitro Bldg. 2-4 Shinohara-Kita Kohoku-ku Yokohama 222 Tel.: 045-432-1504 Telex: 362-3204 YHP OKA |
| AFGHANISTAN Hewlett-Packard Afghanistan P.O. Box 100 Kabul Tel.: 0093 1 22 40 60 Cable: HEWPACK Kabul Telex: 0093 1 22 40 60 | PAKISTAN Hewlett-Packard Pakistan P.O. Box 100 Kabul Tel.: 0093 1 22 40 60 Cable: HEWPACK Kabul Telex: 0093 1 22 40 60 | AFGHANISTAN Hewlett-Packard Afghanistan P.O. Box 100 Kabul Tel.: 0093 1 22 40 60 Cable: HEWPACK Kabul Telex: 0093 1 22 40 60 | AFGHANISTAN Hewlett-Packard Afghanistan P.O. Box 100 Kabul Tel.: 0093 1 22 40 60 Cable: HEWPACK Kabul Telex: 0093 1 22 40 60 | AFGHANISTAN Hewlett-Packard Afghanistan P.O. Box 100 Kabul Tel.: 0093 1 22 40 60 Cable: HEWPACK Kabul Telex: 0093 1 22 40 60 |
| INDIA Hewlett-Packard India P.O. Box 20001 Kharal Industrial Area Bombay 400 025 Tel.: 45 73 01 Cable: BLUESTAR | INDIA Hewlett-Packard India P.O. Box 20001 Kharal Industrial Area Bombay 400 025 Tel.: 45 73 01 Cable: BLUESTAR | INDIA Hewlett-Packard India P.O. Box 20001 Kharal Industrial Area Bombay 400 025 Tel.: 45 73 01 Cable: BLUESTAR | INDIA Hewlett-Packard India P.O. Box 20001 Kharal Industrial Area Bombay 400 025 Tel.: 45 73 01 Cable: BLUESTAR | INDIA Hewlett-Packard India P.O. Box 20001 Kharal Industrial Area Bombay 400 025 Tel.: 45 73 01 Cable: BLUESTAR |
| INDONESIA Bali Bolon Trading Coy. N.V. Djalal Merdeka 29 Bali 10111 Tel.: 491516 Cable: ILMU Telex: 08-809 | INDONESIA Bali Bolon Trading Coy. N.V. Djalal Merdeka 29 Bali 10111 Tel.: 491516 Cable: ILMU Telex: 08-809 | INDONESIA Bali Bolon Trading Coy. N.V. Djalal Merdeka 29 Bali 10111 Tel.: 491516 Cable: ILMU Telex: 08-809 | INDONESIA Bali Bolon Trading Coy. N.V. Djalal Merdeka 29 Bali 10111 Tel.: 491516 Cable: ILMU Telex: 08-809 | INDONESIA Bali Bolon Trading Coy. N.V. Djalal Merdeka 29 Bali 10111 Tel.: 491516 Cable: ILMU Telex: 08-809 |
| LAOS Hewlett-Packard Laos P.O. Box 100 Vientiane Tel.: 020-2602 Cable: HEWPACK Vientiane Telex: 24-19-194 | LAOS Hewlett-Packard Laos P.O. Box 100 Vientiane Tel.: 020-2602 Cable: HEWPACK Vientiane Telex: 24-19-194 | LAOS Hewlett-Packard Laos P.O. Box 100 Vientiane Tel.: 020-2602 Cable: HEWPACK Vientiane Telex: 24-19-194 | LAOS Hewlett-Packard Laos P.O. Box 100 Vientiane Tel.: 020-2602 Cable: HEWPACK Vientiane Telex: 24-19-194 | LAOS Hewlett-Packard Laos P.O. Box 100 Vientiane Tel.: 020-2602 Cable: HEWPACK Vientiane Telex: 24-19-194 |
| MYANMAR MECOMB Myanmar 24 Kamiasazima-cho Nakamura-ku, Magaya City Tel.: (052) 571-5171 | MYANMAR MECOMB Myanmar 24 Kamiasazima-cho Nakamura-ku, Magaya City Tel.: (052) 571-5171 | MYANMAR MECOMB Myanmar 24 Kamiasazima-cho Nakamura-ku, Magaya City Tel.: (052) 571-5171 | MYANMAR MECOMB Myanmar 24 Kamiasazima-cho Nakamura-ku, Magaya City Tel.: (052) 571-5171 | MYANMAR MECOMB Myanmar 24 Kamiasazima-cho Nakamura-ku, Magaya City Tel.: (052) 571-5171 |
| NEPAL Hewlett-Packard Nepal P.O. Box 100 Kathmandu Tel.: 011-22 40 60 Cable: HEWPACK Nepal Telex: 011-22 40 60 | NEPAL Hewlett-Packard Nepal P.O. Box 100 Kathmandu Tel.: 011-22 40 60 Cable: HEWPACK Nepal Telex: 011-22 40 60 | NEPAL Hewlett-Packard Nepal P.O. Box 100 Kathmandu Tel.: 011-22 40 60 Cable: HEWPACK Nepal Telex: 011-22 40 60 | NEPAL Hewlett-Packard Nepal P.O. Box 100 Kathmandu Tel.: 011-22 40 60 Cable: HEWPACK Nepal Telex: 011-22 40 60 | NEPAL Hewlett-Packard Nepal P.O. Box 100 Kathmandu Tel.: 011-22 40 60 Cable: HEWPACK Nepal Telex: 011-22 40 60 |
| PAKISTAN Hewlett-Packard Pakistan P.O. Box 100 Islamabad Tel.: 042-22 40 60 Cable: HEWPACK Pakistan Telex: 042-22 40 60 | PAKISTAN Hewlett-Packard Pakistan P.O. Box 100 Islamabad Tel.: 042-22 40 60 Cable: HEWPACK Pakistan Telex: 042-22 40 60 | PAKISTAN Hewlett-Packard Pakistan P.O. Box 100 Islamabad Tel.: 042-22 40 60 Cable: HEWPACK Pakistan Telex: 042-22 40 60 | PAKISTAN Hewlett-Packard Pakistan P.O. Box 100 Islamabad Tel.: 042-22 40 60 Cable: HEWPACK Pakistan Telex: 042-22 40 60 | PAKISTAN Hewlett-Packard Pakistan P.O. Box 100 Islamabad |

HEWLETT  PACKARD