

SONY[®] SERVICE MANUAL

RA-1 CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
KP-53XBR45	RM-Y128	US	SCC-H53G-A	KP-61XBR48	RM-Y128	US	SCC-H53H-A
KP-53XBR45	RM-Y128	Canadian	SCC-H58F-A	KP-61XBR48	RM-Y128	Canadian	SCC-H58G-A

CORRECTION-2


SUBJECT: CHANGE OF PART No

File this correction with the Supplement and Service manual.

 : Corrected portion

SECTION 2. DISASSEMBLY

2-8-2. EXTENTION CABLE(See page27)

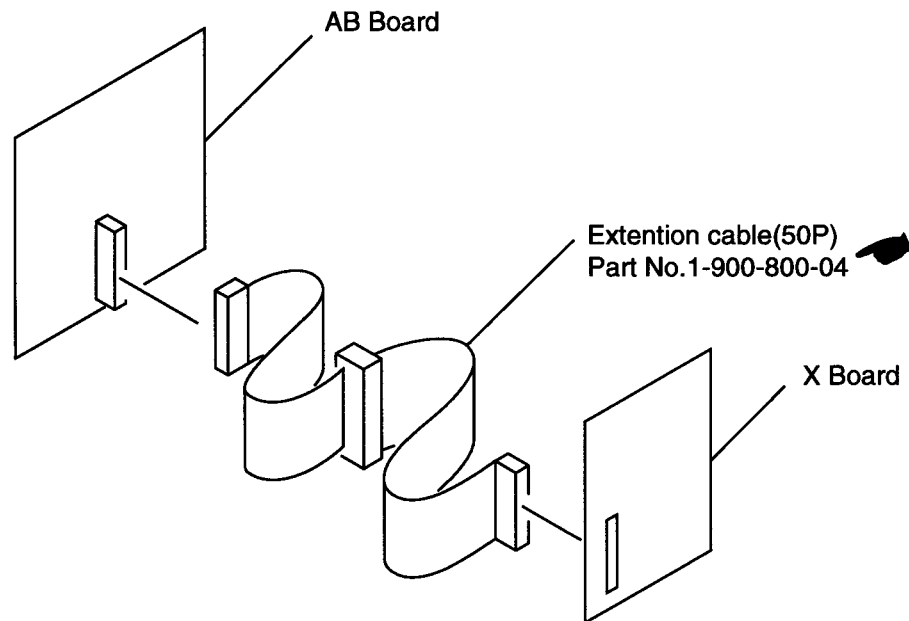

996507392



※ Please file according to model size.

