

**DIGITAL ENGINE ANALYSER** October 1980, (File No. 3/TM/16): The digital display may "bounce" in some situations, particularly when the instrument is used with a timing light. The solution is to earth the chassis. Connect the negative lead from the battery directly to a lug mounted on the chassis and then to the earth on the PC board. There is also an error in the parts list: the  $.037\mu\text{F}$  capacitor should read  $.027\mu\text{F}$ .