




(Front Loading Parts)

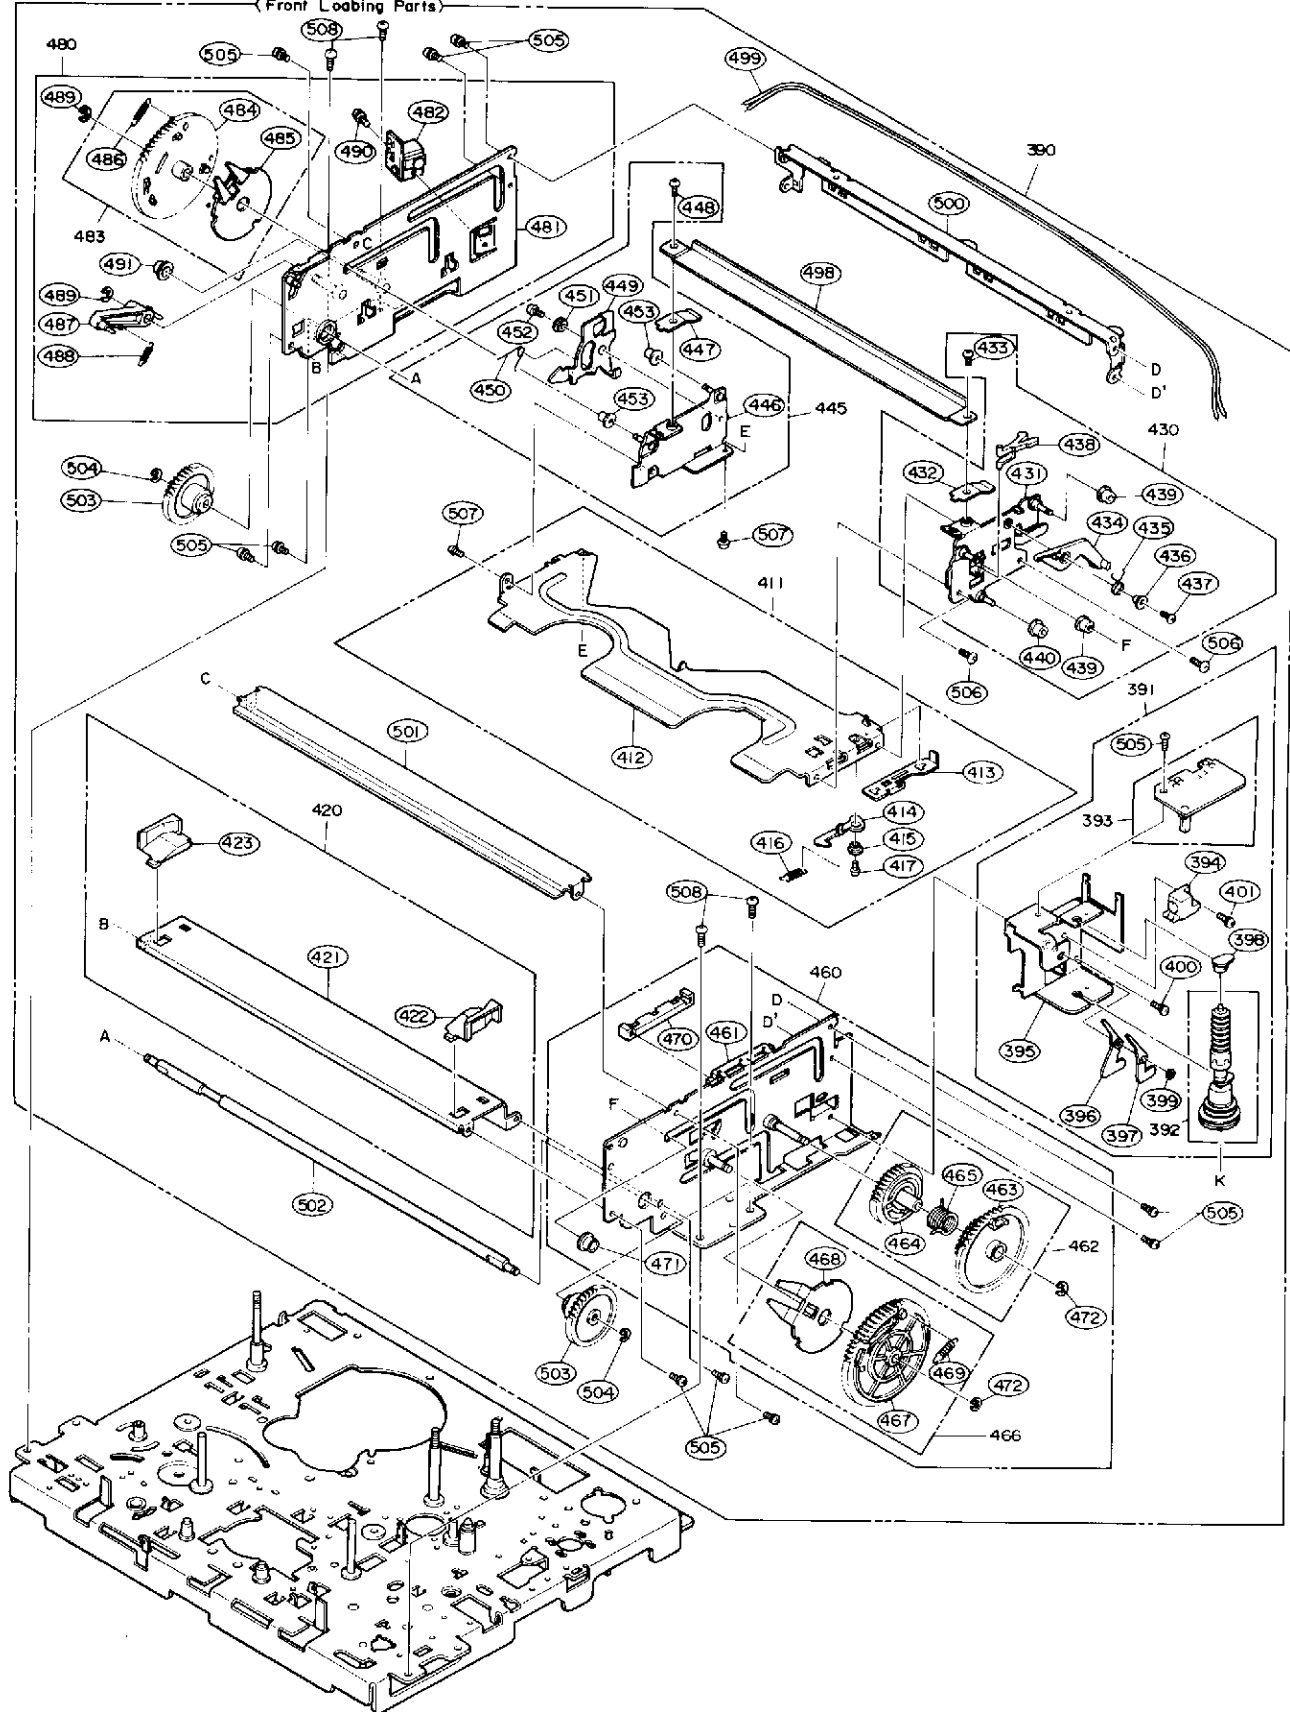


(Loading Parts)

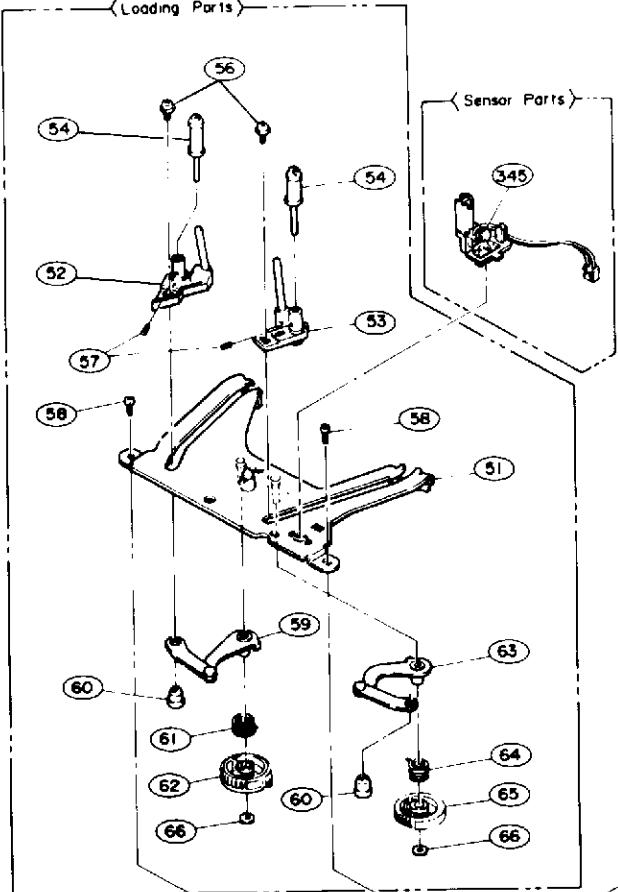



(Cylinder Parts)

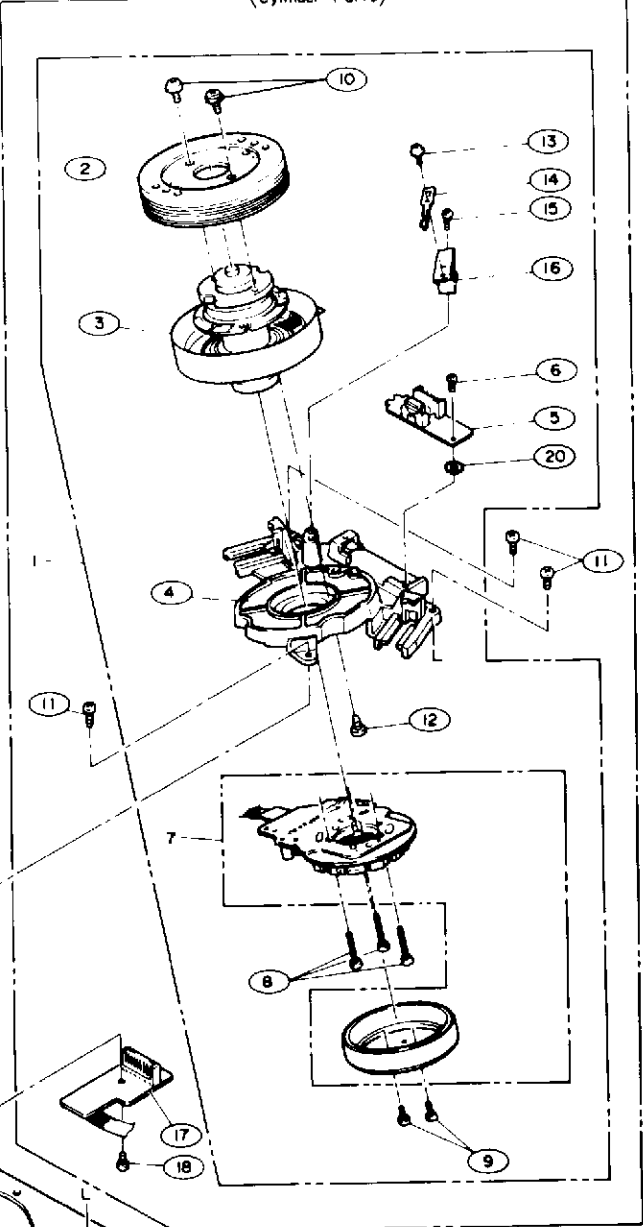



(Back Tension Parts)

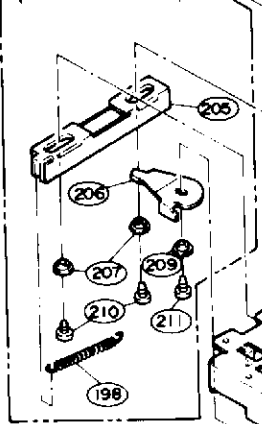

(Sensor Parts)

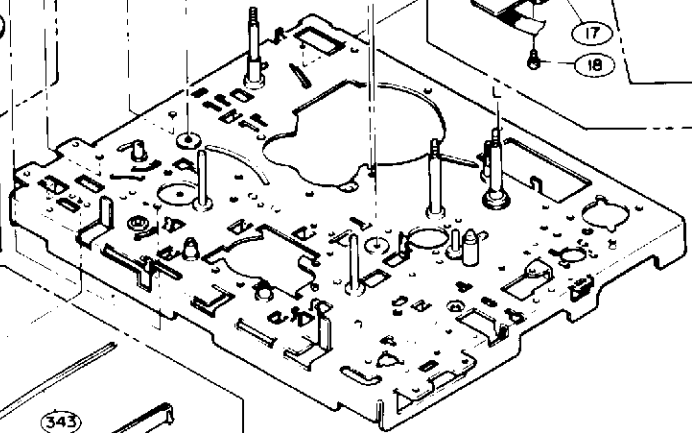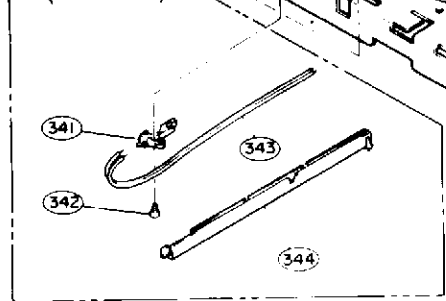

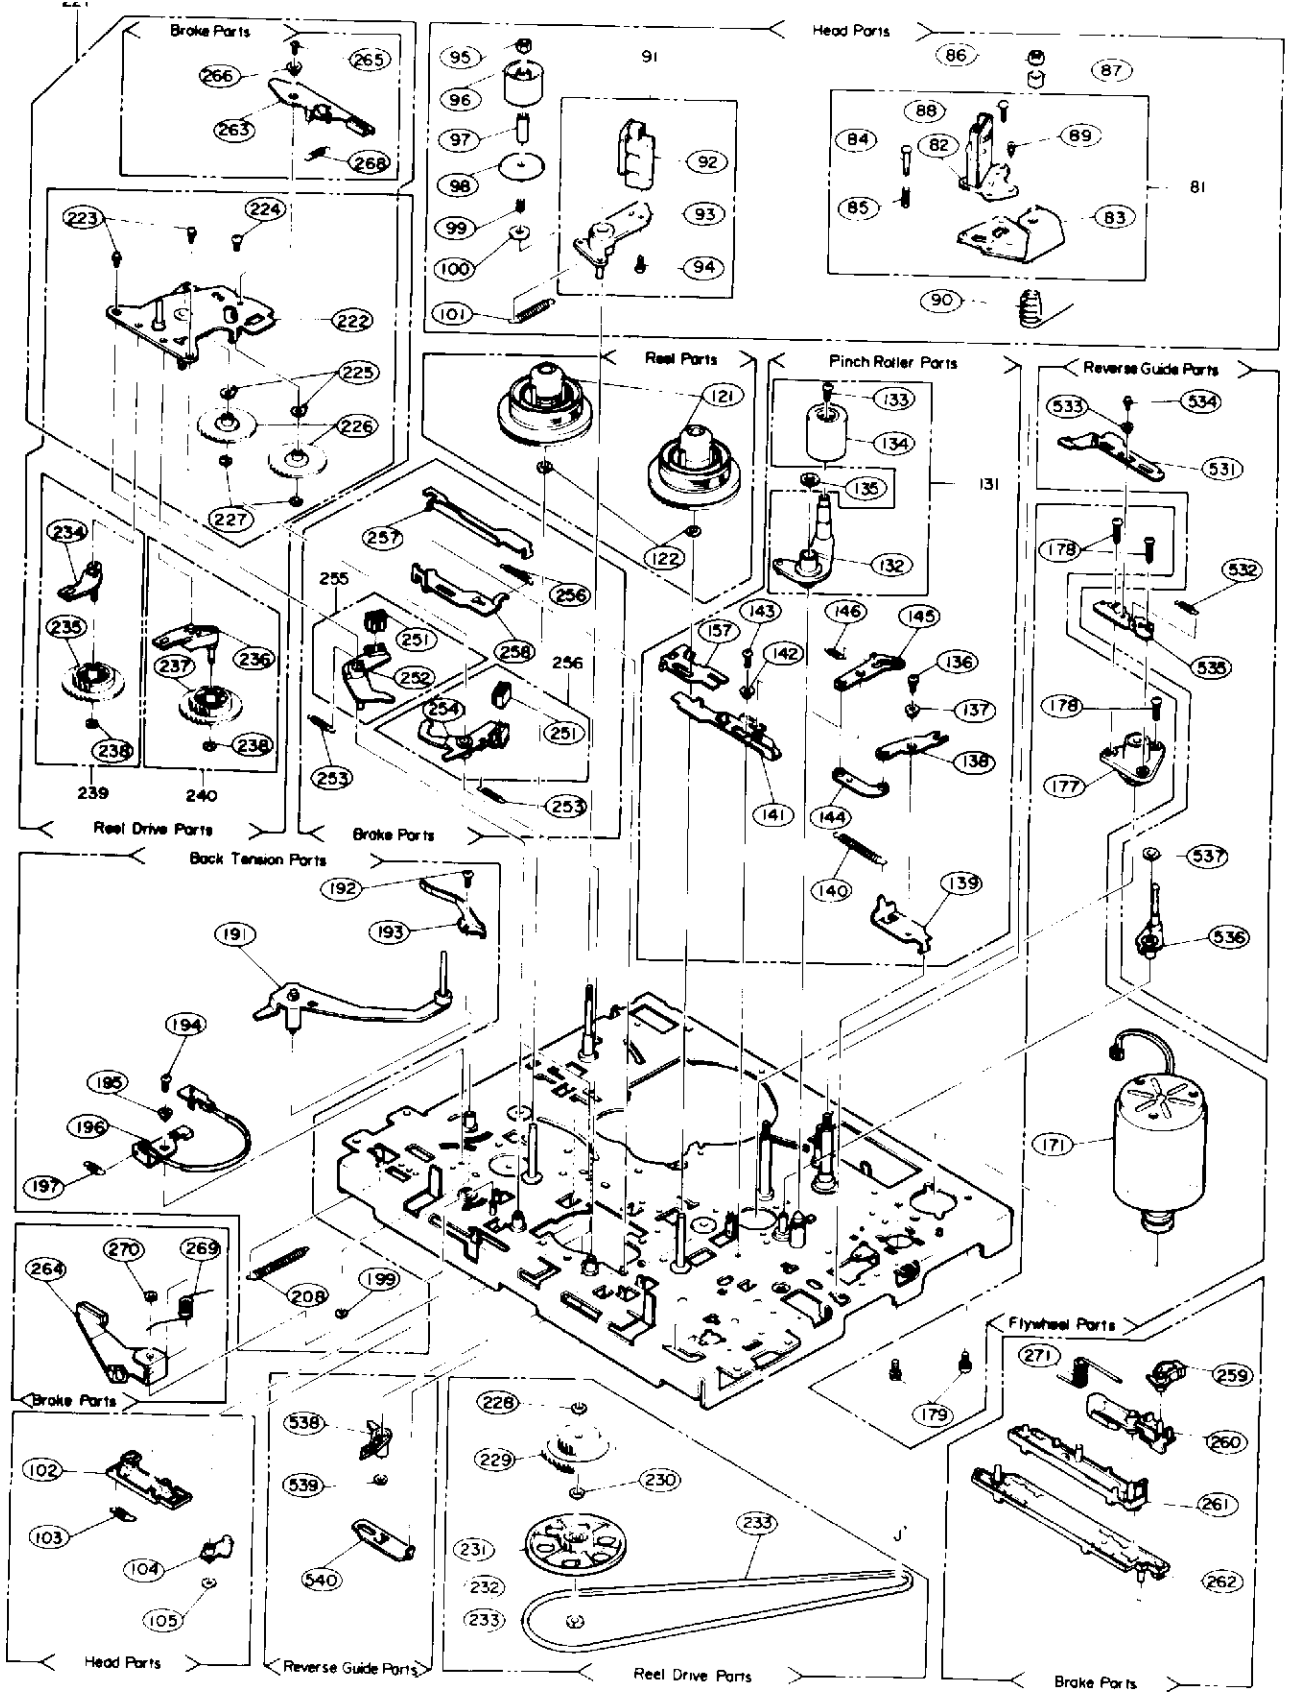

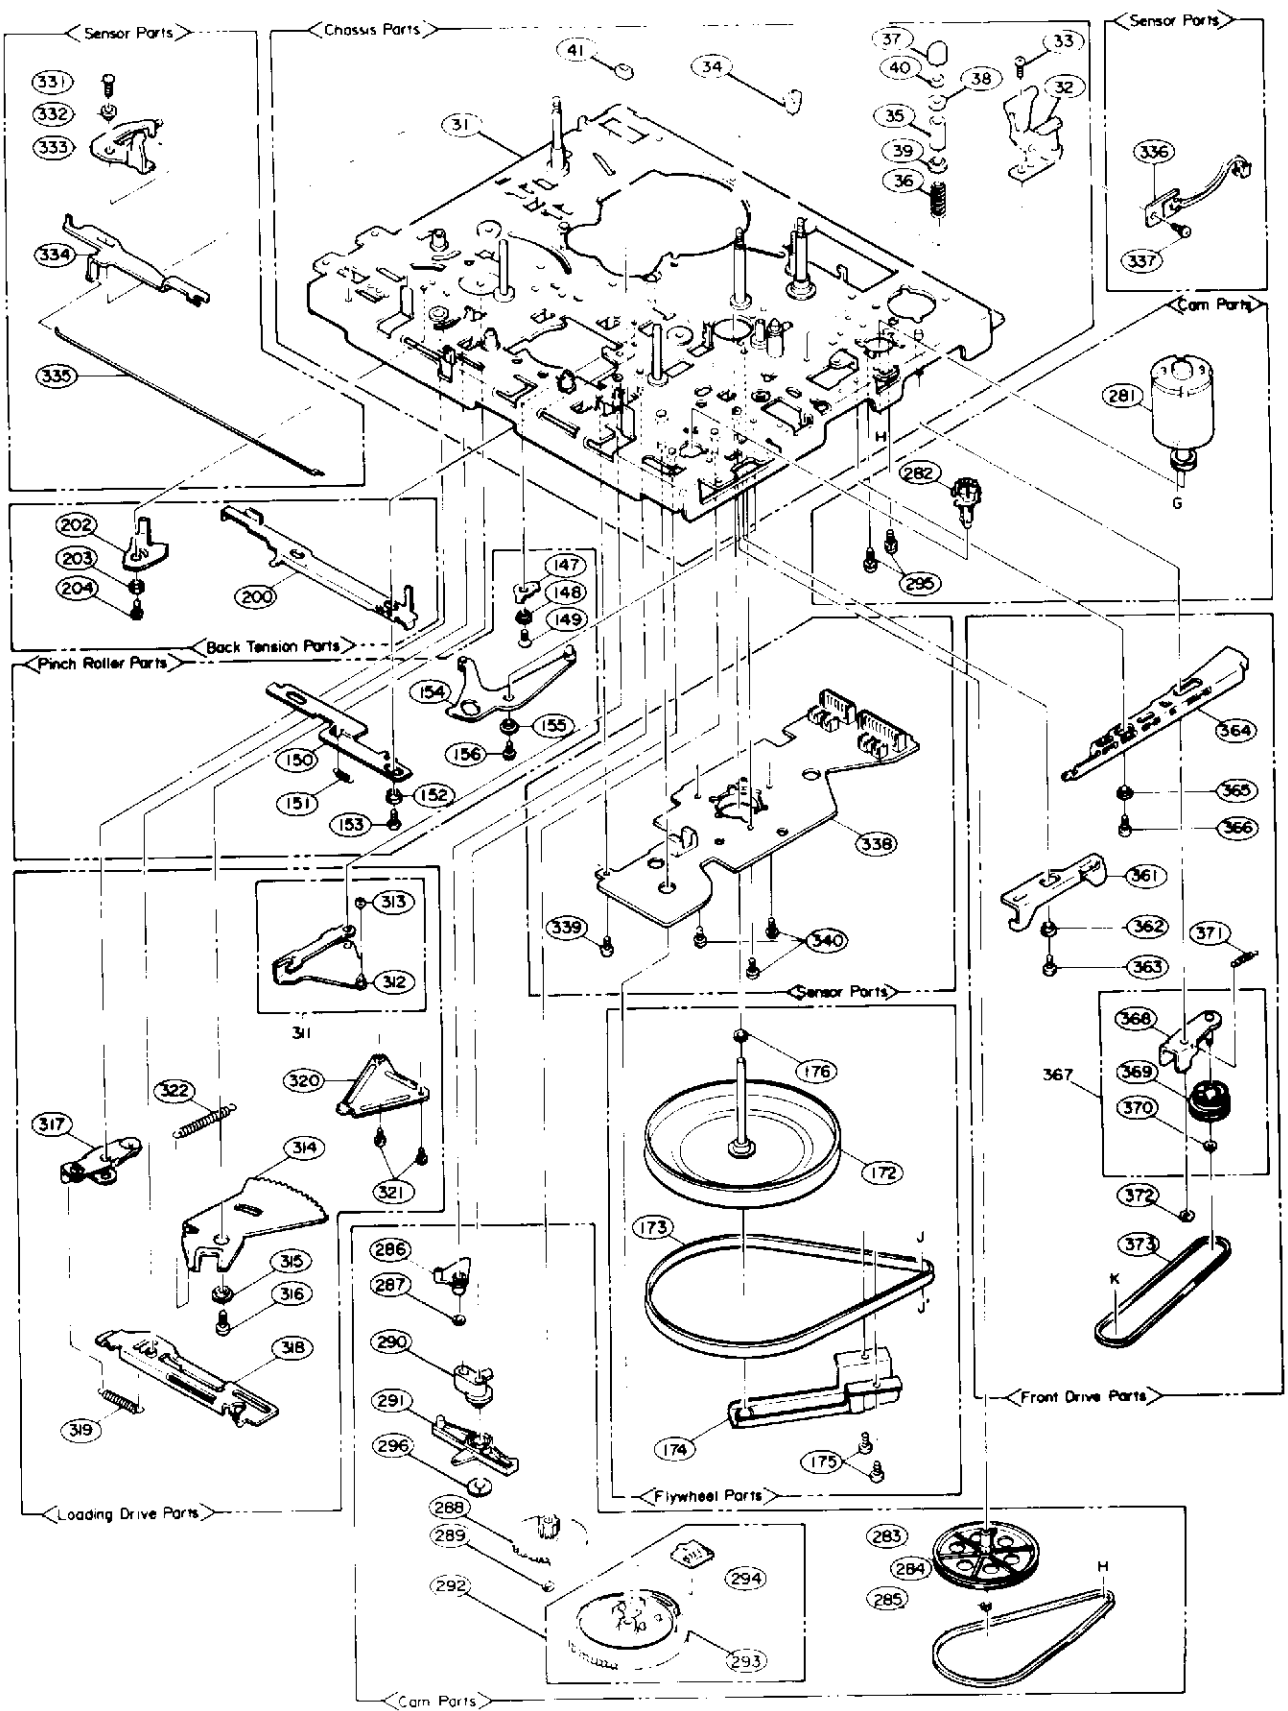

Ref.No.	Part No.	Description
1	62D805901308	Cylinder Ass'y
2	62D80590118	Upper Drum
3	62D805901304	Lower Drum Ass'y
4	62D80590101	Cylinder Mount
5	62D805901305	Video Out P.C.B Ass'y
6	62D99730000	W Tams Screw 2.6x6
7	62D60040901	Motor TM82
8	62D90500000	Screw 2.6x20
9	62D90980000	Tams Screw 2.6x6
10	62D99720000	Bind Tams Screw 3x8
11	62D92050000	C Tapping Screw 3x10
12	62D95520000	Screw (For Camera) 2x5 (No.1)
13	62D96650000	Cup Screw 2.6x3
14	62D80590123	Drum Earth
15	62D91920000	C Tapping Screw 2.6x5
16	62D80590102	Drum Earth Bracket
17	62D805901303	DM P.C.B Ass'y
18	62D91920000	C Tapping Screw 2.6x5
20	62D97150000	Washer 2.6
31	62D805902501	Chassis Semi Ass'y
32	62D805902301	Open Angle Ass'y
33	62D91910000	C Tapping Screw 2.6x4
34	62D80000316	Tracking Adjuster
35	62D80000314	Tape Guide
36	62D80590226	Tape Guide Spring
37	62D80000319	Guide Cap
38	62D80590328	Tape Guide Flange (C)
39	62D80590225	Tape Guide Flange (F)
40	62D94530000	Nut 3.0
41	62D80590223	Dumper Rubber
51	62D805903501	Loading Base Semi Ass'y
52	62D80590304	Loading Block (L)
53	62D80590305	Loading Block (R)
54	62D80000333	Roller Post SIS
56	62D96650000	Cup Screw 2.6x3
57	62D99520000	Set Screw 2.0x3 (Plane Type)
58	62D91920000	C Tapping Screw 2.6x5
59	62D805903502	Loading Plate (L) Semi Ass'y
60	62D80590314	Loading Boss
61	62D80590308	Loading Gear Spring (L)
62	62D80590306	T Loading Gear (L)
63	62D805903503	Loading Plate (R) Semi Ass'y
64	62D80590309	Lading Gear Spring (R)
65	62D80590307	T Loading Gear (R)
66	62D98840000	P Washer Cut 2.6x6x0.5
81	62D805904303	Head Base Ass'y
82	62D62041506	ACE Head HV225211
83	62D80590501	Head Base
84	62D80000626	Azimuth Spring Screw
85	62D80000604	Azimuth Spring

Ref.No.	Part No.	Description
86	62D99530000	Nylon Nut M3
87	62D80590403	Adjust Collar
88	62D90410000	Screw 2.6x7
89	62D99500000	Set Screw 3x5 (Shape Type)
90	62D80590415	Head Spring
91	62D805904302	FE Plate Ass'y
92	62D62041503	FE Head HVFMD0006
93	62D80590404	FE Plate
94	62D91140000	Flange Bind Screw 2x3
95	62D99530000	Nylon Nut M3
96	62D80590405	Impedance Roller
97	62D80590406	Impedance Roller Sleeve
98	62D80590407	Tape Guide Flange (A)
99	62D80590409	Tape Guide Flange Spring
100	62D93370000	Plane Washer 3x8x0.5
101	62D80590408	FE Plate Spring
102	62D80590410	FE Slide Plate
103	62D80590412	FE Actuate Spring
104	62D80590411	FE Actuate Lever
105	62D98760000	P Washer Cut 2.1x5x0.5
121	62D805905301	Reel Ass'y
122	62D99120000	R Washer 3.1x6x0.5
131	62D805906301	Pinch Roller Arm Ass'y
132	62D805906501	Pinch Roller Arm Semi Ass'y
133	62D90380000	Screw 2.6x4
134	62D80000922	Pinch Roller (A)
135	62D99990311	P Washer Cut 5x8x0.5
136	62D90960000	Tams Screw 2.6x4
137	62D80590618	Collar
138	62D80590605	P Actuate Angle
139	62D80590619	P Angle Holder
140	62D80590620	P Roller Spring
141	62D80590624	P Slide Plate A
142	62D80590618	Collar
143	62D91920000	C Tapping Screw 2.6x5
144	62D80590606	Joint Plate
145	62D80590604	P Actuate Arm
146	62D80590609	P Actuate Arm Spring
147	62D80590612	P Crank
148	62D80590613	P Crank Collar
149	62D99991810	C Tapping FH Screw (For Camera) 2.6x4
150	62D80590610	P Slider
151	62D80590623	P Slider Spring
152	62D80590611	P Slider Collar
153	62D91920000	C Tapping Screw 2.6x5
154	62D805906502	P Cam Lever Semi Ass'y
155	62D80590617	P Cam Lever Collar
156	62D91920000	C Tapping Screw 2.6x5
157	62D80590625	P Slide Plate B
171	62D805907302	Capstan Motor Ass'y

Ref.No.	Part No.	Description
172	62D80590714	Flywheel Capstan
173	62D80590710	Main Belt
174	62D805907303	FL Angle Ass'y
175	62D92020000	C Tapping Screw 3x5
176	62D99120000	R Washer 3.1x6x0.5
177	62D805907301	Metal Housing Ass'y
178	62D91950000	C Tapping Screw 2.6x8
179	62D91050000	Tams Screw 3x4
191	62D805908501	BT Arm Semi Ass'y
192	62D91910000	C Tapping Screw 2.6x4
193	62D80590809	Back Tension Support
194	62D91910000	C Tapping Screw 2.6x4
195	62D80590815	Band Holder Collar
196	62D805908302	BT Band Ass'y
197	62D80590817	Band Holder Spring
198	62D80590813	Back Tension Spring
199	62D99990315	P Washer Cut 2.1x4x0.5
200	62D80590810	BT Change Plate
202	62D80590812	BT Return Lever
203	62D80590618	Collar
204	62D91920000	C Tapping Screw 2.6x5
205	62D80590819	BT Actuate Plate
206	62D80590818	BT Actuate Lever
207	62D80590821	BT Actuate Plate Collar
208	62D80590820	BT Actuate Plate Spring
209	62D80590618	Collar
210	62D98400000	S Tapping Screw (for Camera) 2.6x3.5
211	62D9192J000	C Tapping Screw 2.6x5
221	62D805909307	Sub Plate Ass'y
222	62D805909501	Sub Plate Semi Ass'y
223	62D90770000	Tams Screw 2x4
224	62D91910000	C Tapping Screw 2.6x4
225	62D80001025	Wave Washer
226	62D80590906	Reel Drive Gear
227	62D95000000	E Ring Sl.5
228	62D98530000	Nylon Washer 3.1x6x0.3
229	62D805909302	Clutch Ass'y
230	62D99990604	Nylon Washer 2.98x6x0.3
231	62D805909301	Middle Pulley Ass'y
232	62D98840000	P Washer Cut 2.6x6x0.5
233	62D80590917	Drive Belt
234	62D805909303	P Gear Arm Ass'y
235	62D80590920	Play Gear
236	62D805909304	RF Gear Arm Ass'y
237	62D80590922	FF Gear
238	62D97430000	P Washer Cut 1.6x3.8x0.3
239	62D805909305	P Gear Ass'y
240	62D805909306	RF Gear Ass'y
251	62D80591019	Brake Shue
252	62D80591001	S Brake Arm

Ref.No.	Part No.	Description
253	62D80591002	Brake Arm Spring
254	62D80591003	T Brake Arm
255	62D805910301	S Brake Arm Ass'y
256	62D805910302	T Brake Arm Ass'y
257	62D80591016	Brake Lifter
258	62D80591017	L Brake Actuator
259	62D80591014	Trigger Hook
260	62D80591013	Trigger Lever
261	62D80591011	Brake Plate
262	62D80591009	Brake Actuate Base
263	62D805910303	T Soft Brake Ass'y
264	62D805910304	S Soft Brake Ass'y
265	62D99740000	SL FH Screw (For Camera) 2x3
266	62D80591007	T Soft Brake Arm Collar
267	62D80591018	L Brake Actuator Spring
268	62D80591006	T Soft Brake Arm Spring
269	62D80591022	S Soft Brake Spring
270	62D98760000	P Washer Cut 2.1x5x0.5
271	62D80591023	Trigger Lever Spring
281	62D805911301	LM Ass'y
282	62D805911302	Trigger Bearing Ass'y
283	62D80591103	Loading Pulley
284	62D97430000	P Washer Cut 1.6x3.8x0.3
285	62D80591106	Loading Belt
286	62D80591112	Search Arm (B)
287	62D98840000	P Washer Cut 2.6x6x0.5
288	62D80591104	Loading Gear
289	62D98760000	P Washer Cut 2.1x5x0.5
290	62D80591113	Brake Actuate Arm
291	62D80591114	Eject Arm
292	62D805911303	Loading Cam Ass'y
293	62D80591101	Loading Cam
294	62D80591102	S Brush
295	62D91050000	C Tapping Screw 3x4
296	62D99990310	P Washer 2.6x8x0.5
311	62D805912301	Loading Lever Ass'y
312	62D805912501	Loading Lever Semi Ass'y
313	62D80591213	Cam Roller
314	62D80591209	L Gear Plate
315	62D80591210	L Gear Plate Collar
316	62D92030000	C Tapping Screw 3x6
317	62D805912502	Loading Actuate Lever Semi Ass'y
318	62D805912503	Loading Actuator Semi Ass'y
319	62D80591205	Loading Actuator Spring
320	62D80591211	Loading Lever Reinforce Plate
321	62D90770000	Tams Screw 2x4
322	62D80591212	L Gear Plate Spring
331	62D91920000	C Tapping Screw 2.6x5
332	62D80590618	Collar
333	62D80591306	REC Lever

Ref.No.	Part No.	Description
334	62D80591307	REC Actuator
335	62D80591311	REC Actuate Spoke
336	62D68080804	DEW Senser EYH-S10R
337	62D90960000	Tams Screw 2.6x4
338	62D805913302	Base Plate Ass'y
339	62D96910000	S Tapping Screw (For Camera) 2.6x5
340	62D91930000	C Tapping Screw 2.6x6
341	62D640101151	Leaf Switch MSW-1290NBKN
342	62D91920000	C Tapping Screw 2.6x5
343	62D80591308	Wire
344	62D80591310	Wire Holder
345	62D805913303	Lamp Ass'y
361	62D80591508	Eject Actuator
362	62D80590618	Collar
363	62D91920000	C Tapping Screw 2.6x5
364	62D80591507	L Brake Plate
365	62D80590618	Collar
366	62D91920000	C Tapping Screw 2.6x5
367	62D805915301	E Idler Arm Ass'y
368	62D805915501	E Idler Arm Semi Ass'y
369	62D80591505	Eject Pulley
370	62D98760000	P Washer Cut 2.1x6x0.5
371	62D80591511	Idler Arm Spring
372	62D98760000	P Washer Cut 2.1x6x0.5
373	62D80591506	FL Belt
390	62D805916303	Front Loading Ass'y
391	62D805916304	C Road Bracket Ass'y
392	62D805916305	F Loading Clutch Ass'y
393	62D805916302	FL P.C.B Ass'y
394	62D805916316	Senser P.C.B RM Ass'y
395	62D805916501	C Road Bracket Semi Ass'y
396	62D80002228	SW Lever (A)
397	62D80002229	SW Lever (B)
398	62D80591606	F Worm Bearing (A)
399	62D97430000	P Washer Cut 1.6x3.8x0.3
400	62D90960000	Tams Screw 2.6x4
401	62D90780000	Tams Screw 2x5
411	62D805916306	Cassette Holder Ass'y
412	62D80002203	Cassette Holder
413	62D80002213	Slide Plate
414	62D80002212	C Lock Plate (A)
415	62D80590618	Collar
416	62D80591629	Lock Spring
417	62D99680000	SL Screw (For Camera) 2.6x3
420	62D805916307	Front Angle Ass'y
421	62D80591618	Front Angle
422	62D80591625	Tape Guide (R)
423	62D80591624	Tape Guide (L)
430	62D805916308	Side Plate (R) Ass'y
431	62D805916502	Side Plate (R) Semi Ass'y

Ref.No.	Part No.	Description
432	62D80591628	Cassette Push Plate
433	62D98330000	Screw (For Camera) 2.3x2
434	62D80002225	Open Lever
435	62D80002244	Open Lever Spring
436	62D80002242	Open Lever Collar
437	62D99670000	SL Screw (For Camera) 2x4
438	62D80002216	Lock Release Lever
439	62D80002275	Guide Roller
440	62D80002223	Guide Roller
445	62D805916309	Side Plate (L) Ass'y
446	62D805916503	Side Plate (L) Semi Ass'y
447	62D80591628	Cassette Push Plate
448	62D98330000	Screw (For Camera) 2.3x2
449	62D80002266	C Lock Plate (L)
450	62D80591630	Lock Plate Spring (L)
451	62D80001963	Lock Plate Collar
452	62D99660000	SL Screw (For Camera) 2x2.5
453	62D80002275	Guide Roller
460	62D805916310	Frame (R) Ass'y
461	62D805916504	Frame (R) Semi Ass'y
462	62D805916311	Worm Wheel Ass'y
463	62D80591620	Worm Wheel
464	62D80591623	Friction Gear
465	62D80591631	Friction Spring
466	62D805916312	Lift Gear (R) Ass'y
467	62D80591621	Lift Gear (R)
468	62D80002211	Lift Arm
469	62D80002245	LP Spring
470	62D80002226	Open Lever Guide
471	62D80002224	Guide Sleeve
472	62D95040000	E Ring S2.5
480	62D805916313	Frame (L) Ass'y
481	62D805916505	Frame (L) Semi Ass'y
482	62D805916301	Senser P.C.B (LM) Ass'y
483	62D805916314	Lift Gear (L) Ass'y
484	62D80591622	Lift Gear
485	62D80002211	Lift Arm
486	62D80002245	LP Spring
487	62D80002276	Lift Lever
488	62D80002247	Lift Lever Spring
489	62D95040000	E Ring S2.5
490	62D90990000	Tams Screw 2.6x7
491	62D80002224	Guide Sleeve
498	62D80002265	Top Stay
499	62D80591619	End Senser Wire
500	62D80591609	Rear Angle
501	62D80002207	Upper Plate
502	62D80002246	Synchronize Shaft
503	62D80591617	Synchronize Gear (A)
504	62D95040000	E Ring S2.5

Ref.No.	Part No.	Description
505	62D90960000	Tams Screw 2.6x4
506	62D95560000	Screw (For Camera) 2.6x3
507	62D99910000	Screw (For Camera) 2.3x2.5 (No.3)
508	62D91920000	C Tapping Screw 2.6x4
531	62D80591703	RG Slide Plate
532	62D80591711	RG Slide Spring
533	62D80591710	RG Slide Plate Collar
534	62D90770000	Tams Screw 2x4
535	62D80591709	RG Slide Base
536	62D805917501	RG Arm Semi Ass'y
537	62D98840000	P Washer Cut 2.6x6x0.5
538	62D80591701	RG Actuate Arm
539	62D98760000	P Washer Cut 2.1x5x0.5
540	62D80591702	RG Actuator

