



Barracuda 7200.7 Installation Guide

ST3200822A, ST3200821A, ST3160021A, ST3160023A, ST3120022A, ST3120026A, ST380011A, ST380013A, and ST340014A

ATA Interface Disc Drives

Publication Number: 100217284, Rev. D, March 2004

The easiest way to install your drive

DiscWizard™, available exclusively from Seagate®, provides you with customized installation instructions for your hard drive. You can get this free disc drive installation software from our web site at www.seagate.com/support or run the program directly from your web browser. In either case, you should run DiscWizard **before** you install your drive.

To run DiscWizard:

Follow the instructions on the download page at www.seagate.com to create a diskette and complete the installation.

If you cannot run DiscWizard, follow the instructions on this installation sheet to install and configure your drive.

What you need

- A Phillips screwdriver and four 6-32 UNC drive mounting screws
- An ATA interface cable. For optimum drive performance and data integrity, use an 80-conductor Ultra ATA/100 cable (which can be identified by its blue, gray, and black connectors).

Ultra ATA/100 requirements

The drive can be configured to support a default maximum transfer rate. This drive can support transfer rates up to 100 Mbytes per second (UDMA 5) in Ultra ATA/100 mode. Using a software utility, you can set the default transfer rate to the best capability of your system. For your drive to run in this mode, you need the following:

- A computer that supports UDMA mode 5
- A 40-pin, 80-conductor cable (available from your computer dealer)
- A software utility to confirm and activate Ultra ATA/100. Seagate provides a utility called UATA100.exe. You can download the latest version from our web site at www.seagate.com.
- Windows XP, Windows Me, or Windows 98 operating system which supports Ultra ATA 100.


Large disc requirements (for capacities over 137 Bytes)

To realize the full capacity of drives over 137 Gbytes:

- Use an operating system that supports 48-bit addressing:
 - Microsoft Windows XP Home with Service Pack 1
 - Microsoft Windows XP Professional with Service Pack 1
 - Windows 2000 Professional with Service Pack 3
 - Windows 2000 Server with Service Pack 3
- Use a 48-bit compatible Ultra ATA/133 PCI host adapter card or connector on your motherboard.

Go to <http://support.seagate.com> for additional information.

Breather filter hole precaution

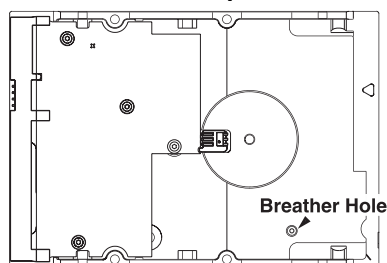

Caution. Do not cover, seal, or insert any object into this hole.

This hole has two purposes:

- To allow condensation inside the hard disc to escape
- To allow air pressure inside the hard disc to equalize with ambient pressure

If this hole is covered, sealed, or penetrated by any object, the drive reliability may be compromised and could lead to permanent damage—doing so voids the warranty.

Handling precautions/electrostatic discharge protection


- Disc drives are fragile. Do not drop or jar the drive. Handle the drive only by the edges or frame.

- Drive electronics are extremely sensitive to static electricity. While installing the drive, wear a wrist strap and cable connected to ground.
- Turn off the power to the host system during installation.
- Do not disassemble the drive; doing so voids the warranty. Return the entire drive for depot service if any part is defective.
- Do not apply pressure or attach labels to the drive.

Setting the jumpers


Refer to the jumper settings illustration below or on your drive label to configure the drive for your system. Jumper settings can also be accessed online from our web site at www.seagate.com.

- **Master or single drive:** The drive is shipped configured for a master or a single drive with a jumper set on pins 7 and 8.
- **Drive is slave:** To configure the drive as a slave or second drive on the cable, remove all the jumpers.
- **Master with non-ATA compatible slave:** Use this setting if the slave drive is not recognized. Configure the master drive with a jumper set on pins 5 and 6 and pins 7 and 8 to enable this option.
- **Cable select:** Computers that use cable select to determine the master and slave drives by selecting or deselecting pin 28, CSEL, on the interface bus. To enable cable select, set a jumper on pins 5 and 6.
- **Alternate capacity jumper:** Drives with a 40-Gbyte capacity or greater are limited to 32 Gbytes. Use this jumper only if you have a legacy system with a BIOS that does not support large capacity disc drives. When using the alternate capacity jumper, Manager software is required to achieve the drive's full capacity.

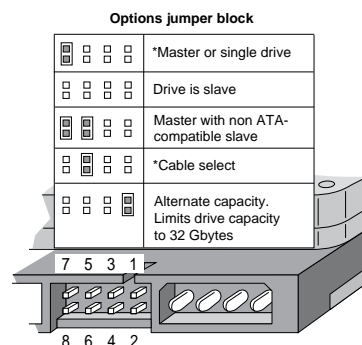

Attaching cables and mounting the drive

1. Attach one end of the drive interface cable to the interface connector on your computer's motherboard (see your computer manual for connector locations).

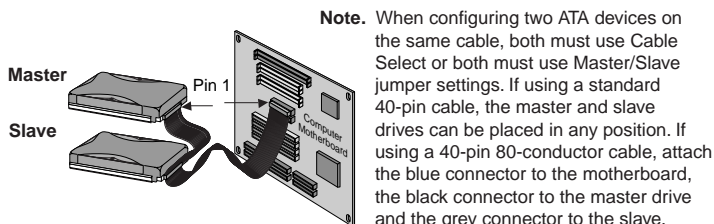

Caution. Align pin 1 on the motherboard connector with pin 1 on your drive connector. Pin 1 is marked by a stripe on one side of the cable.

2. Secure the drive using four 6-32 UNC mounting screws in either the side-mounting or bottom-mounting holes. Insert the screws no more than 0.20 inches (5.08 mm) into the bottom-mounting holes and no more than 0.14 inches (3.55 mm) into the side-mounting holes.

Note. Do not overtighten the screws or use metric screws. This may damage the drive.

3. Attach the interface connector and the power connector to the drive.

Configuring the BIOS

Close your computer case and restart your computer. Your computer may automatically detect your new drive. If your computer does not automatically detect your new drive, follow the steps below.

- a. Restart your computer. While the computer restarts, run the System Setup program (sometimes called BIOS or CMOS setup). This is usually done by pressing a special key, such as DELETE, ESC, or F1 during the startup process.
- b. Within the System Setup program, instruct the system to auto detect your new drive.
- c. Enable LBA and UDMA modes, if available and then save the settings and exit the Setup program.

When your computer restarts, it should recognize your new drive. If your system still doesn't recognize your new drive, see the troubleshooting section on the back of this sheet.

BIOS Settings

Drive Model	Formatted Gbytes	Total Sectors*	Cache
ST3200822A	200.0	390,721,968	8 Mbytes
ST3200821A	200.0	390,721,968	2 Mbytes
ST3160023A	160.0	312,581,808	8 Mbytes
ST3160021A	160.0	312,581,808	2 Mbytes
ST3120026A	120.0	234,441,648	8 Mbytes
ST3120022A	120.0	234,441,648	2 Mbytes
ST380013A	80.0	156,301,488	8 Mbytes
ST380011A	80.0	156,301,488	2 Mbytes
ST340014A	40.0	78,165,360	2 Mbytes

*One sector equals 512 bytes.

Preparing the drive using DiscWizard

Installing a single drive

If you are installing a single drive, we recommend using DiscWizard to automatically partition and format your drive. DiscWizard software is available at www.seagate.com and is free. During the download, the Diskette Creator creates a portable bootable diskette. To run DiscWizard:

1. Insert your bootable DiscWizard diskette and follow the instructions. DiscWizard will guide you through the installation process.
2. Boot your computer from the Windows operating system CD-ROM or from your system startup diskette with the Windows CD loaded. At the prompt, type **setup**. Follow the instructions provided on your screen.

Installing a slave drive

If you are installing a second drive, or slave, to your system, use the DiscWizard software available at www.seagate.com.

If you do not want to install your drive using either DiscWizard or Disk Manager, see "Standard Microsoft Installation" below to partition and format your drive.

Standard Microsoft installation

Caution. Partitioning or formatting a drive erases all data on the drive. Seagate assumes no liability if you erase your data.

1. Insert a bootable Windows startup diskette and restart your computer. This is provided with your Microsoft Windows operating system software.
2. Run **fdisk** and create a primary DOS partition.
3. Mark the partition as active to make the partition bootable.

Drive formatting

Caution. Use the correct drive letters to prevent formatting a drive that already contains data.

1. At the A: prompt, type **format x:** (where x is the letter of your first new partition) and then press the Enter key. Repeat the format process for all new partitions.
2. Proceed to "Loading the operating system" below.

Loading the operating system

Note. The operating system needs to be installed on the master drive only. It is not required when adding a second drive.

1. Boot your computer from your Windows operating system CD-ROM or from your system startup diskette with the Windows CD loaded in the CD drive.
2. At the prompt, type **setup** and continue with the Windows setup as instructed on your screen.

Troubleshooting

If your drive is not working properly, these troubleshooting tips may help solve the problem.

1. **Does the drive spin up?** A spinning drive produces a faint whine and clicking noise that begins when power is applied. If your drive does not spin, check that the power connector and interface cable are securely attached and the jumpers are installed correctly.
2. **Does the computer recognize the drive?** Verify that the drive is enabled in the system CMOS or setup program. If not, select the auto-detect option and enable it. If your drive has a problem, it may not be recognized by the system.
3. **Does FDISK detect the drive?** Run the FDISK program located on your Windows startup diskette. Type **fdisk/status** to verify that your hard drive is present and recognized by the system.
4. **Does Scandisk find the drive defect-free?** Scandisk is a utility located on your Windows startup diskette that scans the drive for defects. If defects are detected, this may be an indication of a problem.
5. **Why won't the drive format to full capacity?** Verify that your BIOS has autodetect and LBA mode enabled. Otherwise, you may need to

use Disk Manager to achieve the full capacity of your drive. Download the latest version from www.seagate.com or find it on your CD.

6. **Why does my computer hang on startup?** Verify that your system is ATA/100 compatible with the UDMA mode setting. Some legacy BIOS cause hangs on startup or other problems if it is not ATA/100 compatible. For more information, see the earlier section on the Ultra ATA/100 requirements. In addition, some legacy BIOS may cause a hang due to the large drive capacity. Consider using the alternate capacity jumper if it is available on your drive model.

Use the alternate capacity jumper if your computer does not support higher capacity drives. The jumper will limit large capacity drives to 32 Gbytes.

Note. If these tips do not answer your question or solve the problem, contact your dealer or visit <http://seatools.seagate.com> to download SeaTools disc diagnostics software and more troubleshooting advice.

Seagate support services

For online information about Seagate products, visit www.seagate.com or e-mail your disc questions to DiscSupport@Seagate.com.

If you need help installing your drive, consult your dealer first. If you need additional help, call a Seagate technical support specialist. Before calling, note your system configuration and drive model number.

Africa	+1-405-324-4714	Netherlands	00 800-47324283
Australia	1800-14-7201	New Zealand	0800-443988
Austria	0 800-20 12 90	Norway	00 800-47324283
Belgium	00 800-47324283	Poland	00 800-311 12 38
China*	800-810-9668	Spain	00 800-47324283
Denmark	00 800-47324283	Sweden	00 800-47324283
France	00 800-47324283	Switzerland	00 800-47324283
Germany	00 800-47324283	Singapore	800-1101-150
Hong Kong	800-90-0474	Taiwan*	00-800-0830-1730
Hong Kong†	001-800-0830-1730	Thailand	001-800-11-0032165
India	1-600-33-1104	Turkey	00 800-31 92 91 40
Indonesia	001-803-1-003-2165	United Kingdom	00 800-47324283
Ireland	00 800-47324283	USA/Canada/	1-800 SEAGATE or
Italy	00 800-47324283	Latin America	+1-405-324-4700
Japan	0034 800 400 554	Other European	
Malaysia	1-800-80-2335	countries	+1-405-324-4714
Middle East	+1-405-324-4714		

*Mandarin

†Cantonese

Warranty. To determine the warranty status of your Seagate disc drive, contact your place of purchase or visit our web site at www.seagate.com for more information.

Return Merchandise Authorization (RMA). Run SeaTools to diagnose your drive before requesting a return authorization. In addition, please verify that your drive is defective by following the troubleshooting checklist in this guide. Seagate offers comprehensive customer support for all Seagate drives worldwide. Seagate customer service centers are the only facilities authorized to service Seagate drives. Drive return procedures vary depending on geographical location and are subject to current international trade regulations.

Shipping the drive

Caution. Back up the data before shipping. Seagate assumes no responsibility for data lost during shipping or service.

Shipping drive in an unapproved container voids the warranty. Pack the drive with original box and packing materials. Use no other materials. This prevents electrical and physical damage in transit.

Electromagnetic compliance for the European Union. This model complies with the European Union requirements of the Electromagnetic Compatibility Directive 89/336/EEC of 03 May 1989 as amended by Directive 92/31/EEC of 28 April 1992 and Directive 93/68/EEC of 22 July 1993. Compliance of this drive, as a system component, was confirmed with a test system. We cannot guarantee that your system will comply. The drive is not meant for external use (without properly designed enclosure, shielded I/O cable, etc.).

Sicherheitsanleitung 1. Das Gerät ist ein Einbaugerät, das für eine maximale Umgebungstemperatur von 60°C vorgesehen ist. **2.** Zur Befestigung des Laufwerkes werden 4 Schrauben 6-32 UNC-2A benötigt. Bei seitlicher Befestigung darf die maximale Länge der Schrauben im Chassis nicht mehr als 3,3 mm und bei Befestigung an der Unterseite nicht mehr als 5,08 mm betragen. **3.** Als Versorgungsspannungen werden benötigt: +5V +/- 5% 1,2A; +12V +/- 5% 2,0A **4.** Die Versorgungsspannung muss SELV entsprechen. **5.** Alle Arbeiten auf dem Festplatte dürfen nur von Ausgebildetem Servicepersonal durchgeführt werden. Bitte entfernen Sie nicht die Aufschriftenschilder des Laufwerkes. **6.** Der Einbau des Laufwerkes muss den Anforderungen gemäß DIN IEC 950 VDE 0805/05.90 entsprechen.

© 2003, 2004 Seagate Technology LLC. All rights reserved

Publication number: 100217284, Rev. D, March 2004, Printed in USA

Seagate and Seagate Technology are registered trademarks of Seagate Technology LLC. Barracuda and the Wave logo are either registered trademark or trademarks of Seagate Technology LLC. Other product names are registered trademarks or trademarks of their owners. Seagate reserves the right to change, without notice, product offerings or specifications.