

Errata

Title & Document Type: 5221A / 5321A Electronic Counters Operating and Service Manual

Manual Part Number: 05221-90001

Revision Date: July 1971

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.agilent.com



Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.



Agilent Technologies

OPERATING AND SERVICE MANUAL

ELECTRONIC COUNTERS 5221A AND 5321A

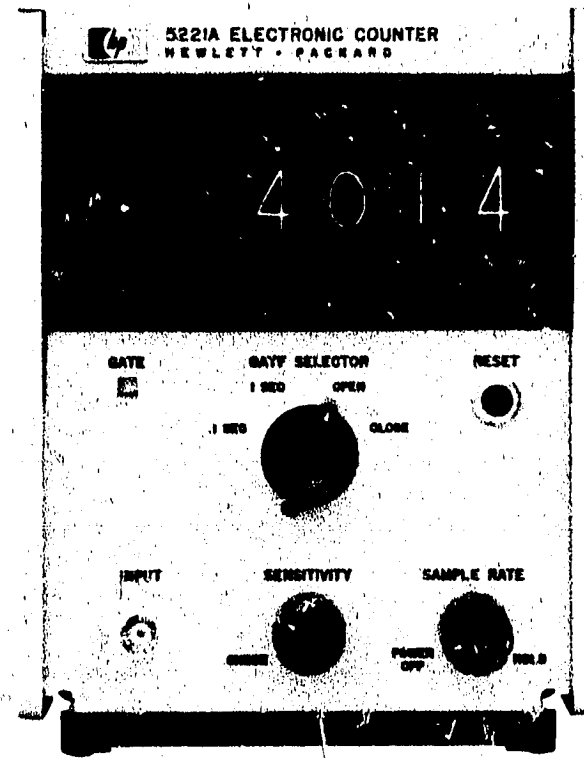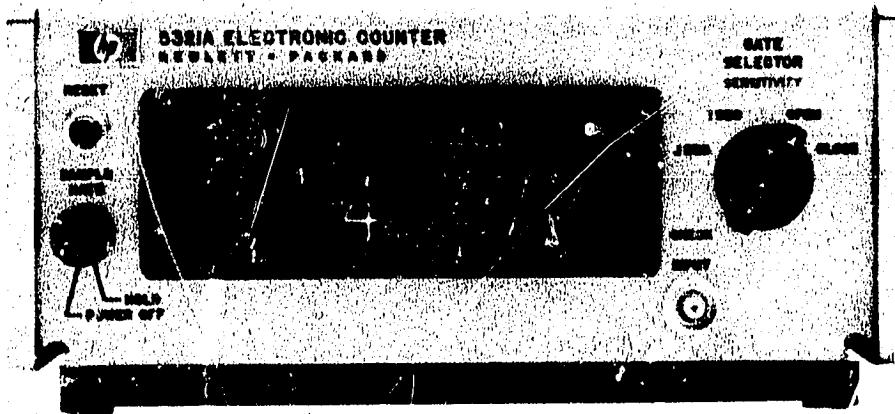

HEWLETT  PACKARD

CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.

WARRANTY AND ASSISTANCE

All Hewlett-Packard products are warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the operating manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

ELECTRONIC COUNTERS

5221A and 5321A

5221A SERIALS PREFIXED 1048A

This manual applies directly to HP Model 5221A Electronic Counters having serial prefix number 1048A.

5321A SERIALS PREFIXED: 1040A

This manual applies directly to HP Model 5321A Electronic Counters having serial prefix number 1040A.

OLDER INSTRUMENTS

The changes required to backdate this manual for older instruments can be found in Section VII.

OPTIONS

For instruments having options, refer to Section VII.

Copyright HEWLETT-PACKARD COMPANY 1969
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

Printed: JUL 1971

HEWLETT  PACKARD

TABLE OF CONTENTS

I	GENERAL INFORMATION	1-1
1-1.	Description	1-1
1-5.	Specifications	1-1
1-7.	Applications	1-1
1-9.	Options	1-1
1-11.	Instrument Identification	1-1
1-14.	Equipment Supplied	1-1
1-16.	Accessories Available	1-1
II	INSTALLATION	2-1
2-1.	Unpacking and Inspection	2-1
2-3.	Storage and Shipment	2-1
2-8.	Rack Installation	2-1
2-10.	Model 5221A	2-1
2-13.	Model 5321A	2-1
2-16.	Operation From 115 or 230 Volts	2-3
III	OPERATION	3-1
3-1.	Introduction	3-1
3-3.	Interpreting Display	3-1
3-5.	Accuracy	3-1
IV	THEORY OF OPERATION	4-1
4-1.	Introduction	4-1
4-3.	General Description	4-1
4-5.	Gating and Logic	4-1
4-7.	Logic Symbols	4-1
4-10.	DeMorgan's Theorem and Logic Symbols	4-2
4-12.	JK Flip-Flop	4-2
4-14.	One-Shot Multivibrator	4-2
4-17.	Sensitivity Control R1	4-2
4-19.	Input Amplifier Assembly A1	4-3
4-21.	Main Board Assembly A2	4-3
4-30.	Counting Sequence	4-3
4-36.	Power Supply Assembly A3	4-4
V	MAINTENANCE	5-1
5-1.	Introduction	5-1
5-3.	Test Equipment	5-1
5-5.	Assembly Connection Identification	5-1
5-7.	Assembly Designations	5-1
5-9.	In-Cabinet Performance Check	5-1
5-12.	Instrument Cover Removal	5-3
5-14.	Adjustments	5-3
5-15.	Power Supply A3	5-3
5-17.	Amplifier-Trigger Assembly A1	5-3
5-22.	Troubleshooting	5-6
5-23.	General	5-6
5-25.	Module Substitution	5-6
5-27.	Removal of Main Board Assembly A2	5-6
5-29.	Troubleshooting Assemblies	5-6
5-31.	Printed Circuit Component Replacement	5-6
5-33.	Replacing Integrated Circuits	5-6
5-35.	Troubleshooting Aids	5-6
5-37.	Main Gate	5-6
5-39.	Decade Counters	5-8
5-41.	Buffer Storage Units	5-8
5-43.	Decoder Drivers	5-8
VI	REPLACEABLE PARTS	6-1
6-1.	Introduction	6-1
6-4.	Ordering Information	6-1
VII	OPTIONS AND MANUAL CHANGES	7-1
7-1.	Options	7-1
7-3.	Option 001 - 5 Digit Readout	7-1
7-5.	Option 002 - 6 Digit Readout	7-1
7-7.	Digit Display Kit	7-1
7-10.	Option 003 - 1 MHz Time Base	7-1
7-13.	Option 004 - Noise Rejection	7-2

TABLE OF CONTENTS (Cont'd)

7-15.	Option 010 - 50 Hz Operation	7-2
7-17.	Option 103 - 5 Digit Readout with 1 MHz Time Base	7-2
7-19.	Option 110 - 5 Digit Readout with 50 Hz Operation	7-2
7-21.	Option 203 - 6 Digit Readout with 1 MHz Time Base	7-2
7-23.	Option 210 - 6 Digit Readout with 50 Hz Operation	7-2
7-25.	Manual Changes	7-2
7-26.	Current Instruments	7-2
7-28.	Newer Instruments	7-2
7-30.	Older Instruments	7-2
VIII	CIRCUIT DIAGRAMS	8-1

LIST OF TABLES

1-1.	Equipment Supplied	1-1
1-2.	Accessories Available	1-1
1-3.	Specifications	1-2
4-1.	Truth Table	4-2
5-1.	Printed Circuit Assemblies	5-1
5-2.	Recommended Test Equipment	5-1
5-3.	In-Cabinet Performance Check	5-2
5-4.	Power Supply Voltage	5-3
5-5.	Troubleshooting Chart	5-7
5-6.	High Frequency Decade Output	5-8
5-7.	Decade Counter Output	5-8
5-8.	Buffer Storage Output	5-8
5-9.	Decoder Driver	5-9
6-1.	Reference Designation Index	6-2
6-2.	Replaceable Parts	6-17
6-3.	Manufacturers Code List	6-22
7-1.	Options	7-1
7-2.	Oscillator Specifications (Option 003, 103, and 203)	7-2
7-3.	Manual Changes	7-2

LIST OF FIGURES


1-1.	Models 5221A and 5321A and Accessories Supplied	1-0
2-1.	Adapter Frame and Combining Case	2-2
3-1.	Front Panel Controls and Connectors	3-0
3-2.	Rear Panel Controls and Connectors	3-0
3-3.	Self Check Function	3-1
3-4.	Totalizing Operation	3-1
3-5.	Frequency Measurement	3-2
4-1.	Gate Symbols	4-1
4-2.	Logic Comparison Diagrams	4-1
4-3.	JK Flip-Flop	4-2
4-4.	One-Shot Multivibrator	4-3
4-5.	Timing Diagram	4-4
5-1.	Model 5221A Bottom and Side Internal Views	5-4
5-2.	Model 5321A Bottom and Top Internal Views	5-5
6-1.	Model 5221A Cabinet Parts	6-15
6-2.	Model 5321A Cabinet Parts	6-16
7-1.	Time Base A4 (Options 003, 103, and 203), Schematic Diagram	7-3
7-2.	Time Base A4 (Options 003, 103, and 203), Component Location	7-3
8-1.	Schematic Diagram Notes	8-2
8-2.	Block Diagram	8-3
8-3.	A1 Amplifier-Trigger	8-5
8-4.	A2 Main Board	8-7
8-5.	A3 Power Supply (5221A)	8-11
8-6.	A3 Power Supply (5321A)	8-13

Figure 1-1. Models 5221A and 5321A and Accessories Supplied


MODEL 5221A




MODEL 5321A

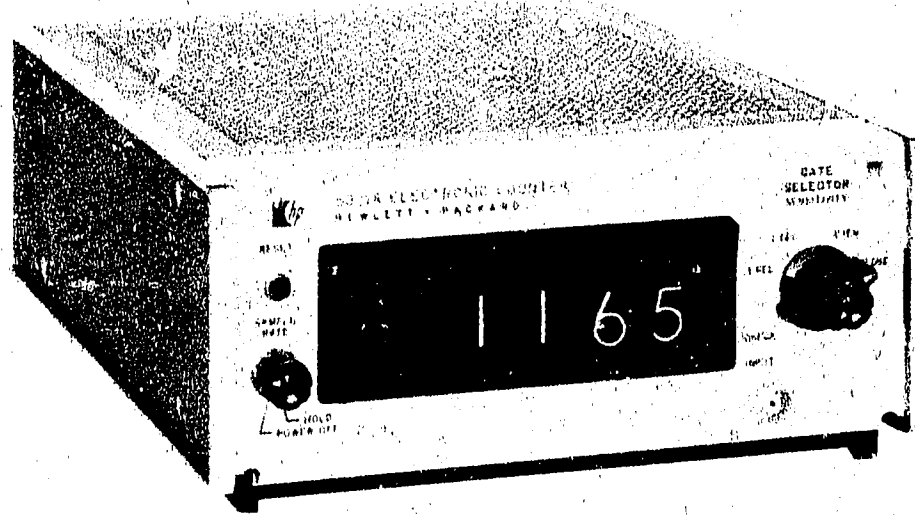

BNC TO BNC CABLE

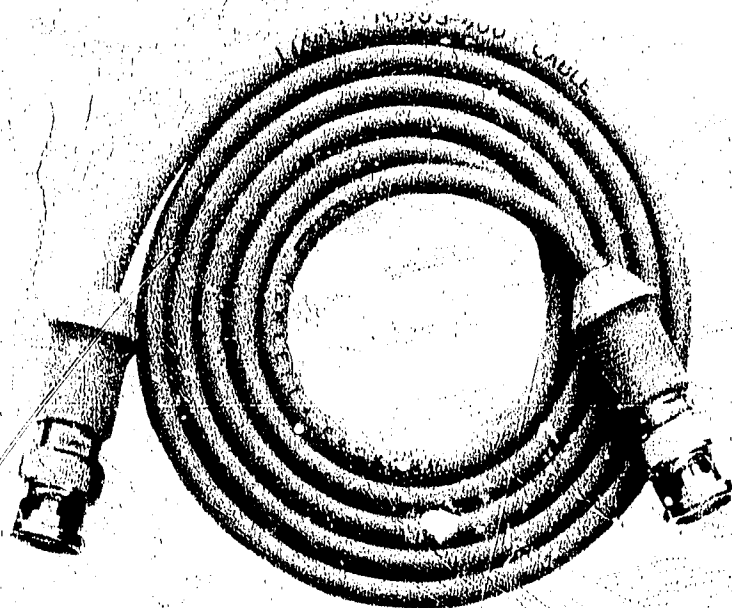

POWER CORD

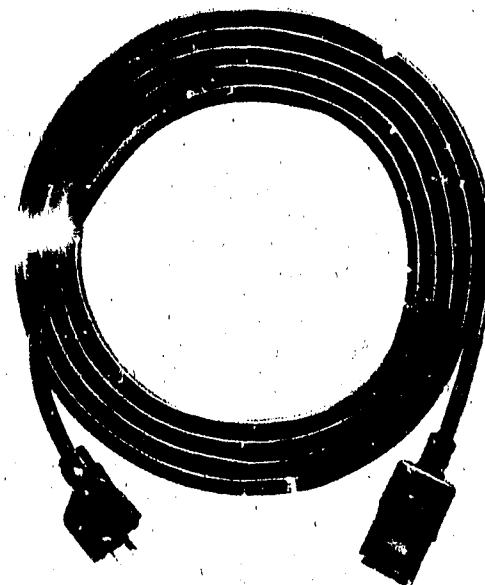

SECTION I GENERAL INFORMATION

1-1. DESCRIPTION

1-2. The Hewlett-Packard Model 5221A or 5321A Electronic Counter measures frequencies from 5 Hz to 10 MHz. Models 5221A and 5321A are similar. The main differences being size and shape.

1-3. The counters provide these additional features:

a. Blanking of unwanted zeros in the display (zeros left of the most significant digit).

b. Display storage holds the display while a new count is being made.

c. Remote gate control through BNC connector on rear panel.

1-4. The counters feature solid state design incorporating HP integrated circuits.

1-5. SPECIFICATIONS

1-6. Table 1-3 outlines the technical specifications for Models 5221A and 5321A Electronic Counters.

1-7. APPLICATIONS

1-8. The counters can measure speed, rpm, rps, and count events occurring within a selected period of time. With transducers converting mechanical to electrical phenomena, weight, pressure, temperature, acceleration and other quantities can be measured.

1-9. OPTIONS

1-10. The counters are available with the following options:

- a. 5 digit display (Option 001).
- b. 6 digit display (Option 002).
- c. 1 MHz crystal time base (Option 003).
- d. Noise rejection, 100 kHz bandwidth (Option 004).

- e. Operation from 50 Hz power line (Option 010).
- f. 5 digit display with 1 MHz time base (Option 103).
- g. 5 digit display with 50 Hz operation (Option 110).
- h. 6 digit display with 1 MHz time base (Option 203).
- i. 6 digit display with 50 Hz operation (Option 210).

1-11. IDENTIFICATION

1-12. Hewlett-Packard uses a two-section serial number mounted on the rear panel. Earlier instruments use an 8-digit serial number (000-00000). The first three digits are a serial prefix number; the last five digits refer to the specific instrument. Later instruments use a 9-digit serial number (0000A00000). The first four digits are the serial prefix and the last five digits refer to the specific instrument.

1-13. If the serial prefix of your instrument differs from that listed on the title page of this manual, there are differences between this manual and your instrument. Lower serial prefixes are documented in Section VII, and higher serial prefixes are covered with manual change sheets included with the manual. If the change sheet is missing, contact the nearest Hewlett-Packard Sales and Service Office listed on the inside rear cover of this manual.

1-14. EQUIPMENT SUPPLIED

1-15. Equipment supplied with the Model 5221A and 5321A is listed in Table 1-1.

1-16. ACCESSORIES AVAILABLE

1-17. Accessories available for the Model 5221A and 5321A are listed in Table 1-2.

Table 1-1. Equipment Supplied

Description	HP Part No.
Detachable power cord 7-1/2 feet (231 cm) long; NEMA plug.	8120-1348
Cable: 4 feet (122 cm) long, male BNC connectors.	10503A

Table 1-2. Accessories Available

Description	HP Part No.
Rack mount adapter frame (5221A)	5060-0797
Rack mount adapter frame (5321A).	5060-0808
Combining Case (used for both)	1052A

Table 1-3. Specifications

RANGE: 5 Hz to 10 MHz for sine waves.

REGISTRATION: 4 digits (5 and 6 available); long-life display tubes with storage.

MAXIMUM DISPLAYED FREQUENCY:

- Std. Model, Opt. 003, 004: 99.99 kHz
- Opt. 001, 103, 110: 999.99 kHz
- Opt. 002, 203, 210: 9.99999 MHz (decimal point and units are not displayed).

INPUT

Maximum Sensitivity: 0.1 V rms sine wave from 5 Hz to 10 MHz.

Pulses: 300 mV peak voltage (internal control adjusts for positive or negative pulses), 50 ns minimum pulse width.

Impedance: Approximately 1 megohm shunted by 50 pF.

Overload: At maximum sensitivity, input should not exceed 3.5V rms to maintain rated input impedance. Damage level is 15V rms. At min. sensitivity damage level is 250V rms.

ACCURACY: ± 1 count \pm power line frequency accuracy.*

TIME BASE: Frequency: 60 Hz power line frequency (50 Hz optional).

SELF CHECK: Counts power line frequency. Options 010, 110, and 210 count twice the power line frequency (100 Hz).

GATE TIMES: 1 and 0.1 sec.

GATE CONTROL: With GATE SELECTOR switch on front panel, by contact closure, or saturated NPN transistor ground at EXT GATE jack on rear panel with GATE SELECTOR in OPEN position.



* Line Frequency is typically $\pm .1\%$ for domestic utility systems.

DISPLAY TIME: Variable from 50 ms to approx. 5 s, or may be held until manually reset.

OPERATING TEMPERATURE: 0°C to +50°C.

WEIGHT: Net, 5-1/4 lbs (2, 4 kg);
Shipping, 7-3/4 lbs (3, 5 kg).

DIMENSIONS:

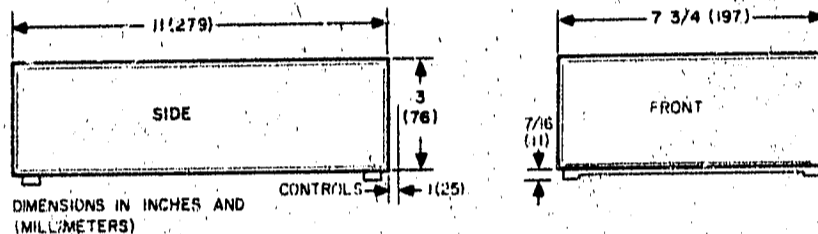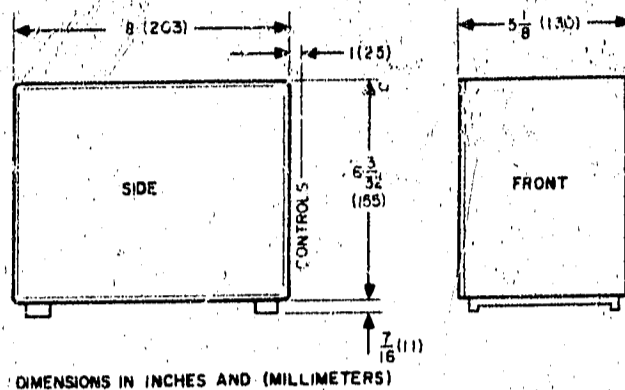

POWER REQUIREMENTS: 115 or 230 V $\pm 10\%$, 60 Hz (50 Hz Optional) 12 W.

ACCESSORIES SUPPLIED: Detachable power cord and BNC to BNC cable.

- OPTIONS:**
- Option 001 (5 digit display)
 - Option 002 (6 digit display)
 - Option 003 (1 MHz crystal time base)
 - Option 004 (noise rejection, 100 kHz bandwidth)
 - Option 010 (50 Hz operation)
 - Option 103 (5 digit display with 1 MHz crystal time base)
 - Option 110 (5 digit display with 50 Hz operation)
 - Option 203 (6 digit display with 1 MHz crystal time base)
 - Option 210 (6 digit display with 50 Hz operation)

SECTION II INSTALLATION

2-1. UNPACKING AND INSPECTION

2-2. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage (dents, scratches, broken knobs, etc.). If the instrument is damaged or fails to meet specifications, (Performance Check, Paragraph 5-9), notify the carrier and the nearest Hewlett-Packard Sales and Service office immediately (offices are listed at the back of this manual). Retain the shipping carton and the padding material for the carrier's inspection. The Sales and Service office will arrange for the repair or replacement of the instrument without waiting for the claim against the carrier to be settled.

2-3. STORAGE AND SHIPMENT

2-4. To protect valuable electronic equipment during storage or shipment always use the best packing methods available. Your Hewlett-Packard Sales and Service office can provide packing material such as that used for original factory packaging. Contract packaging companies in many cities can provide dependable custom packaging on short notice. Here are two recommended packaging methods:

2-5. **RUBBERIZED HAIR.** Cover painted surfaces of the instrument with protective wrapping paper. Pack instrument securely in strong corrugated container (350 lb/sq in bursting test) with 2-inch rubberized hair pads placed along all surfaces of the instrument. Insert fillers between pads and container to ensure a firm fit.

2-6. **EXCELSIOR.** Cover painted surfaces of the instrument with protective wrapping paper. Pack instrument in strong corrugated container (350 lb/sq in bursting test) with a layer of excelsior about 6 inches thick packed firmly against all surfaces of instrument.

2-7. **ENVIRONMENT.** Conditions during storage and shipment should be limited as follows:

- a. Maximum temperature: +167°F (+75°C).
- b. Minimum temperature: -40°F (-40°C).

2-8. RACK INSTALLATION

2-9. When the instrument is to be rack-mounted, a combining case or adapter frame is required. These are available through the Hewlett-Packard Sales and Service offices. The following paragraphs outline the methods for rack mounting the 5221A and the 5321A.

2-10. MODEL 5221A

2-11. **COMBINING CASE.** The combining case (HP Part No. 1052A, Figure 2-1) is a unit which accepts three units of 5221A size. The combining case can be used as a bench model or it can be rack mounted. A rack mounting kit (HP Part No. 5060-0777) is supplied with the combining case. When only 1/3 or 2/3 of the case is used, a blank filler panel (HP Part No. 5060-0793) is available to enclose the unused portion.

2-12. **ADAPTER FRAME.** The adapter frame (HP Part No. 5060-0797) in Figure 2-1 is a rack frame that accepts three units of 5221A size. It can only be rack mounted. Install instruments in the adapter frame as follows:

- a. Place adapter frame on edge of bench as shown in step 1 of Figure 2-1.
- b. Stack units in frame as shown in step 2. Place spacer clamps between units (step 3).
- c. Place two end spacer clamps (step 4) and push units into frame.
- d. Insert screws on either side of frame (step 5) and tighten until units are tight in frame. The complete assembly is now ready for rack mounting.


2-13. MODEL 5321A

2-14. **COMBINING CASE.** The combining case (HP Part No. 1052A, Figure 2-1) is a unit which accepts four units of 5321A size. The combining case can be used as a bench model or it can be rack mounted. A rack mounting kit (HP Part No. 5060-0777) is supplied with the combining case. When only half the case is used, a blank filler panel (HP Part No. 5060-0794) is available to enclose the unused portion. If only one unit is placed in the combining case, a blank filler panel (HP Part No. 5060-0097) is available to enclose the unused vertical area.

2-15. **ADAPTER FRAME.** The adapter frame (HP Part No. 5060-0808) similar to Figure 2-1 is a rack frame that accepts two units of 5321A size. It can only be rack mounted. Install the instruments in the adapter frame as follows:

- a. Place adapter frame on edge of bench as shown in step 1 of Figure 2-1.
- b. Stack units in frame as shown in step 2. Place spacer clamp between units, step 3.

Figure 2-1. Adapter Frame and Combining Case

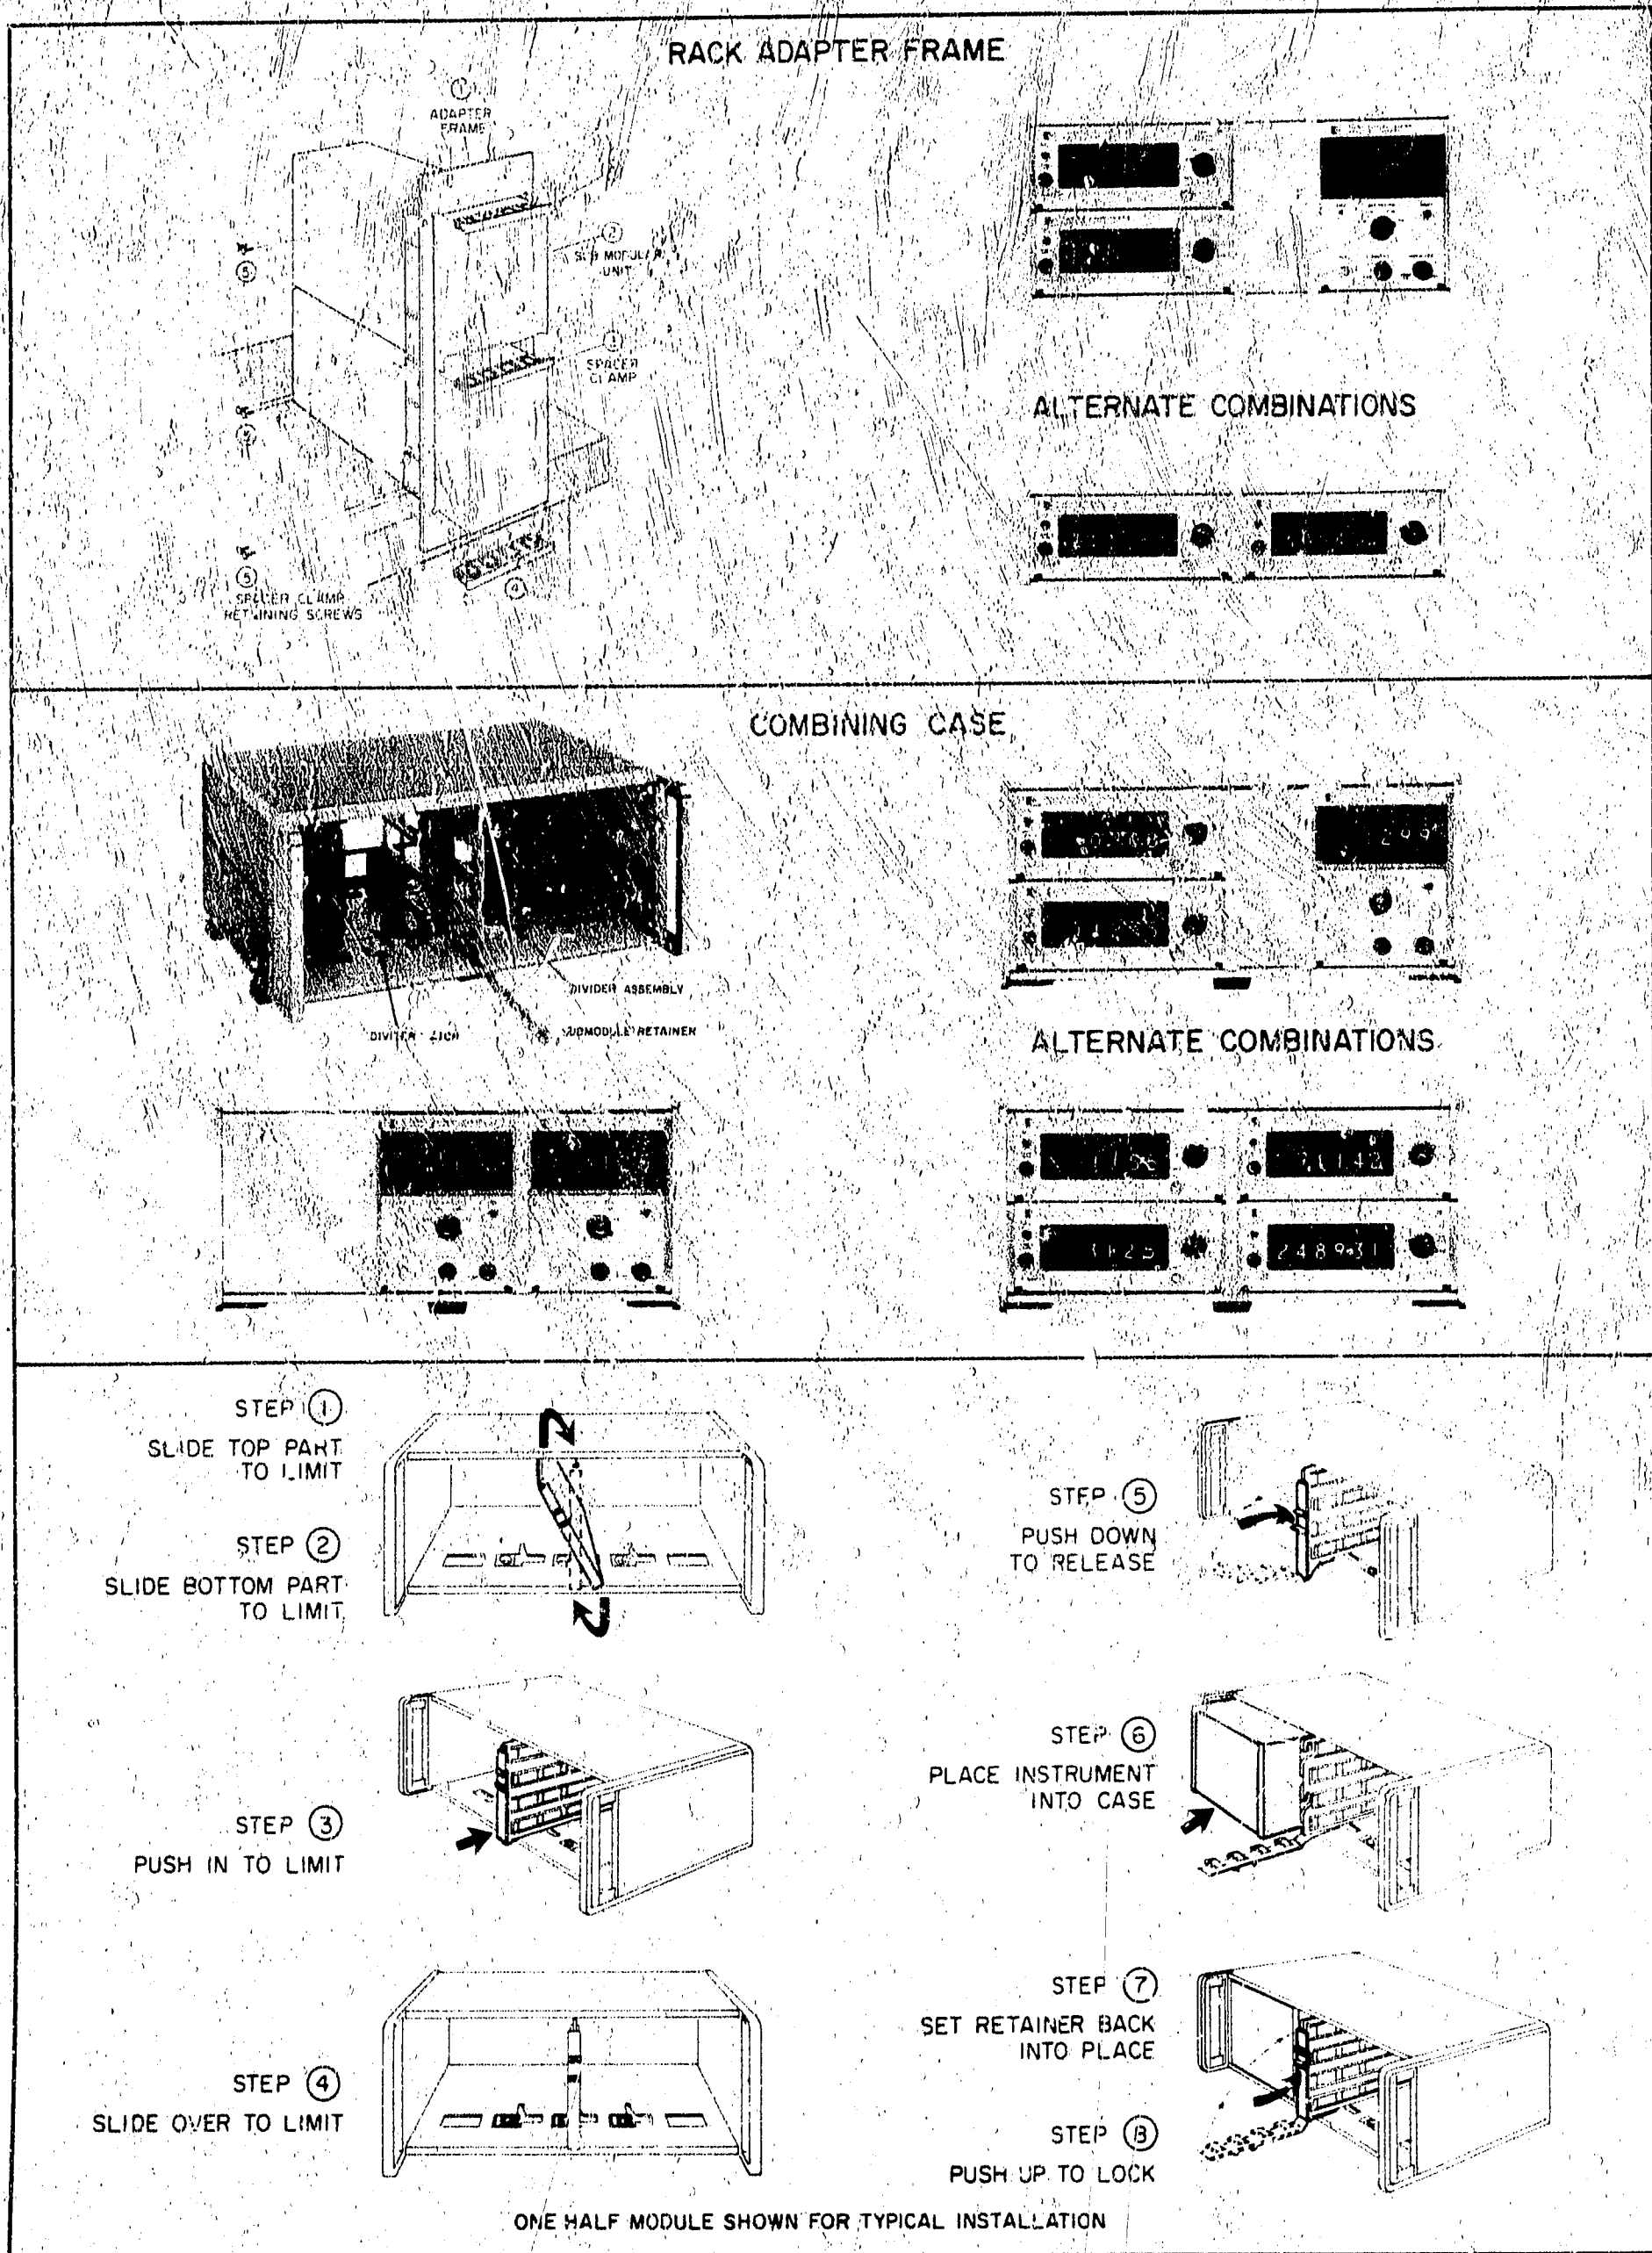

c. Place two end spacer clamps (step 4) and push units into frame.

d. Insert screws on either side of frame, step 5, and tighten until units are tight in frame. The complete assembly is now ready for rack mounting.

2-16. OPERATION FROM 115 OR 230 VOLTS

2-17. GENERAL. The instrument can be operated from either 115 or 230 Vac (60 Hz standard and 50 Hz optional) power lines. A slide switch on the rear panel permits quick conversion for operation from 115 or 230 Vac. Insert a narrow blade screwdriver in the switch slot and slide the switch to expose "115"

marking for 115 volt operation or "230" marking for 230 volt operation. The ac line fuse is 0.25 ampere for 115 V and 0.15 ampere for 230 V operation.

2-18. POWER CONNECTION. The instrument is supplied with a detachable 3-wire power cable. Install as follows:


a. Connect flat plug (3-conductor female connector) to the ac line jack at the rear of the instrument.

b. Connect plug (2-blade male with round grounding pin) to 3-wire grounded ac outlet. Exposed portions of the instrument are grounded through the round pin on the plug for safety. When only a 2-blade outlet is available, use HP adapter 1251-0048 and connect short wire from side of adapter to ground.

OPERATION


**Section III
Operation**

Figure 3-1. Front Panel Controls and Connectors

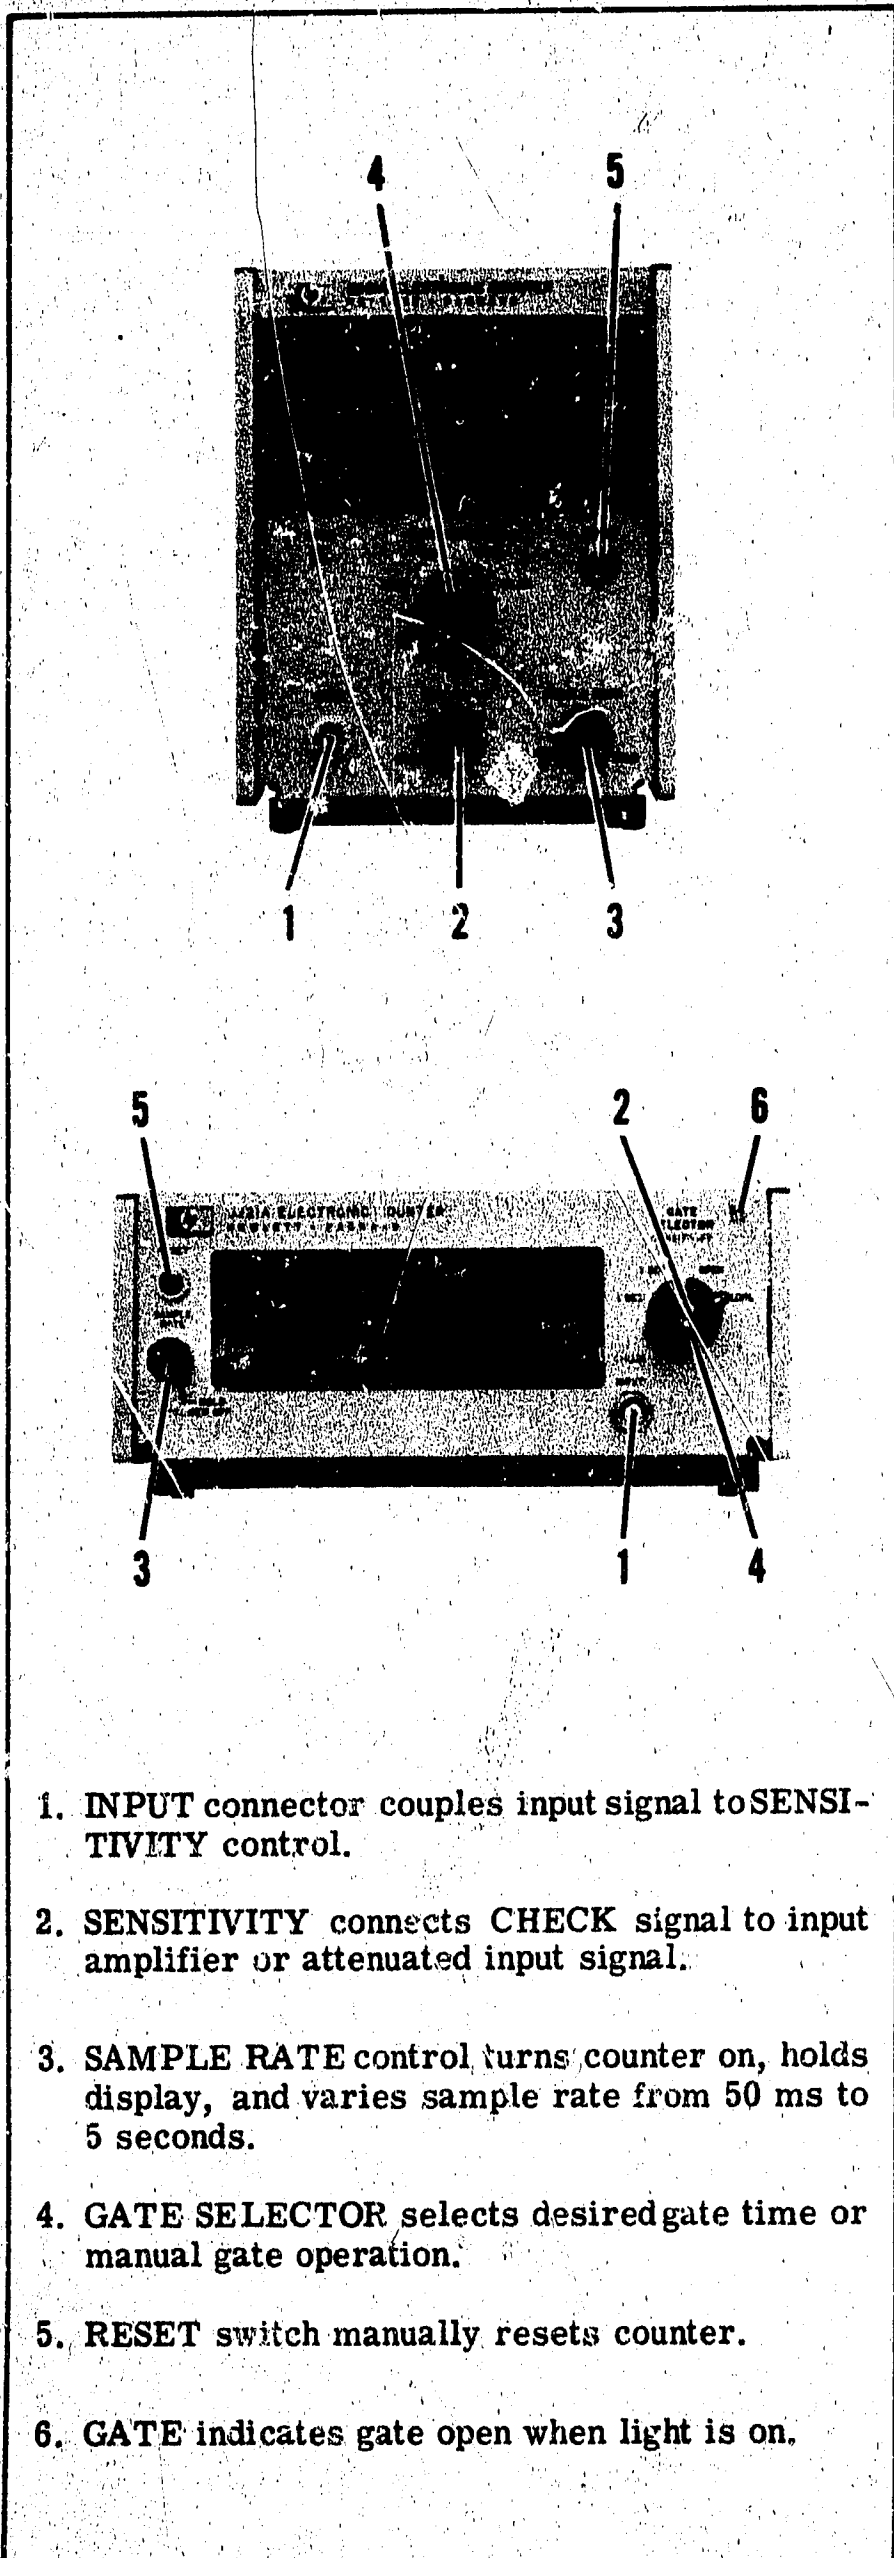

1. **INPUT** connector couples input signal to **SENSITIVITY** control.
2. **SENSITIVITY** connects **CHECK** signal to input amplifier or attenuated input signal.
3. **SAMPLE RATE** control turns counter on, holds display, and varies sample rate from 50 ms to 5 seconds.
4. **GATE SELECTOR** selects desired gate time or manual gate operation.
5. **RESET** switch manually resets counter.
6. **GATE** indicates gate open when light is on.

Figure 3-2. Rear Panel Controls and Connectors

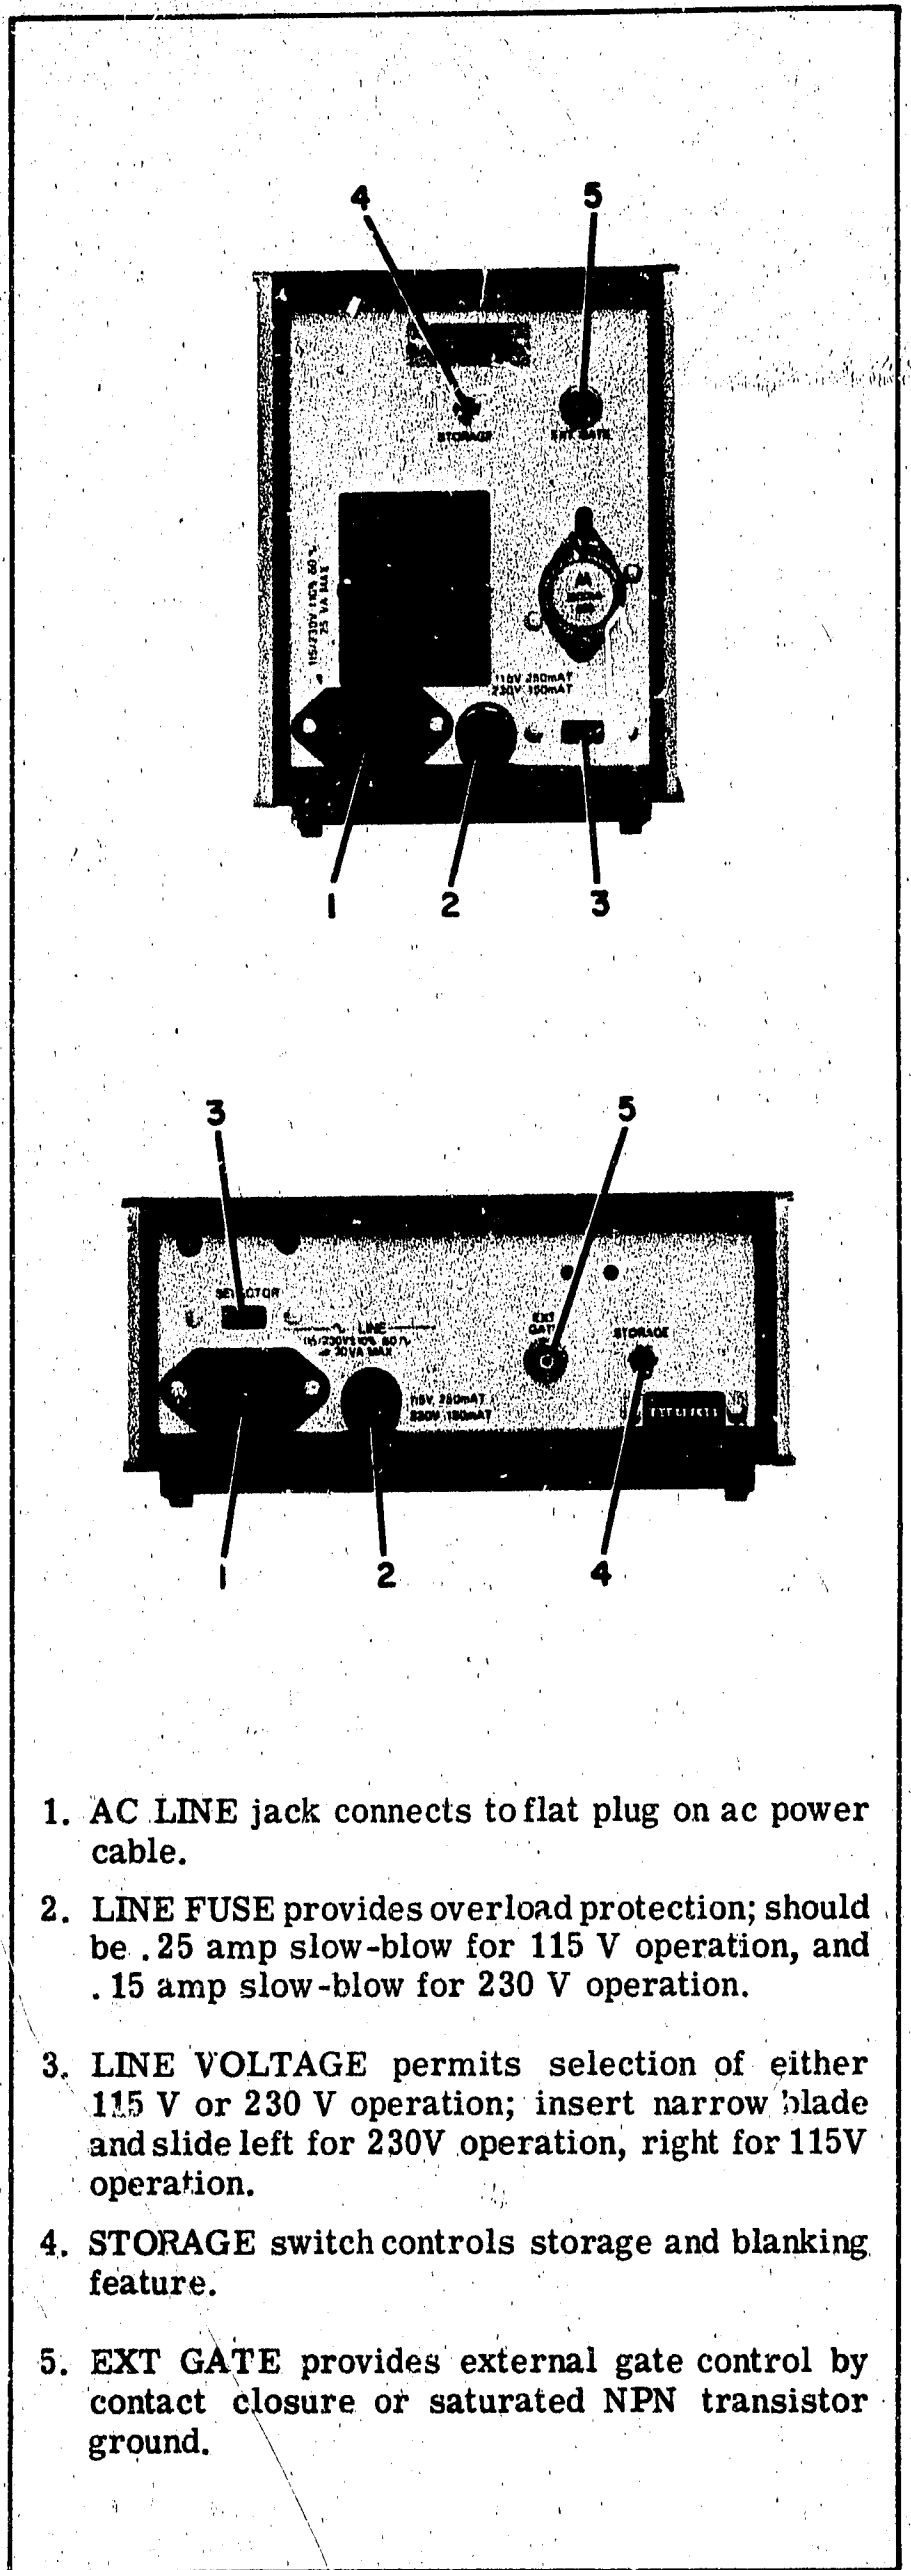

1. **AC LINE** jack connects to flat plug on ac power cable.
2. **LINE FUSE** provides overload protection; should be .25 amp slow-blow for 115 V operation, and .15 amp slow-blow for 230 V operation.
3. **LINE VOLTAGE** permits selection of either 115 V or 230 V operation; insert narrow blade and slide left for 230V operation, right for 115V operation.
4. **STORAGE** switch controls storage and blanking feature.
5. **EXT GATE** provides external gate control by contact closure or saturated NPN transistor ground.

SECTION III OPERATION

3-1. INTRODUCTION

3-2. The Counters have a maximum counting rate of 10 MHz and can measure the repetition rate of periodic signals by totalizing the events during gate times of 0.1 or 1 second. GATE SELECTOR switch selects measurement function and time base. SAMPLE RATE control selects the sampling rate and a SENSITIVITY control adjusts the instrument sensitivity. Figures 3-1 and 3-2 describe the operation of controls on the front and rear panels.

Figure 3-3. Self Check Function



1. Set SAMPLE RATE control for maximum sample rate (ccw, not off).
2. Set SENSITIVITY control to CHECK.
3. Set GATE SELECTOR switch to 1 SEC and .1 SEC.
4. Set STORAGE switch to on and repeat step 3.
5. The table below shows the proper count for each gate time setting.

Gate Time	Standard (60 Hz Time Base)	50 Hz or 1 MHz Time Base
1 SEC	0060	0100
.1 SEC	0006	0010


3-3. INTERPRETING DISPLAY

3-4. Display is in events per gate time. Decimal point and units are not displayed. With the GATE SELECTOR switch in the OPEN/CLOSE position, the display is read directly.

3-5. ACCURACY


3-6. Counter accuracy is determined by the 50 or 60 Hz line time base accuracy (typically $\pm 0.1\%$ or better for domestic utility systems) and the inherent error of ± 1 count present in all digital counters of this type.

Figure 3-4. Totalizing Operation

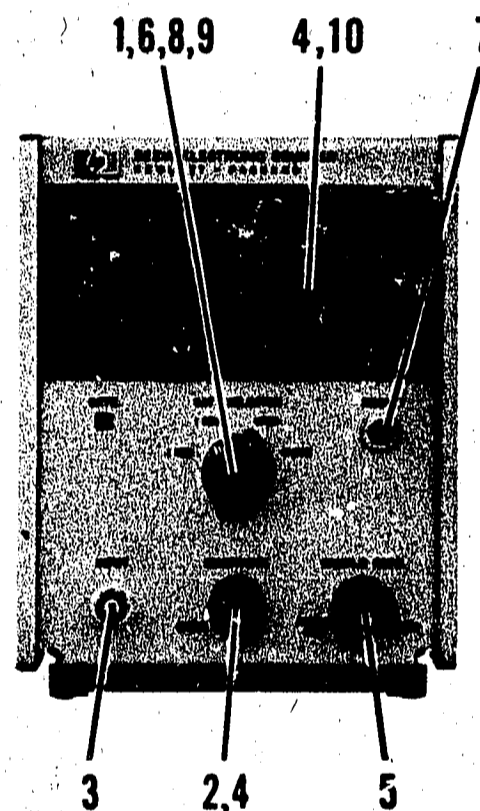

1. Set GATE SELECTOR switch to OPEN.
2. Set SENSITIVITY to minimum (ccw, not to CHECK).
3. Connect signal to INPUT jack.
4. Adjust SENSITIVITY until count is displayed. Set SENSITIVITY 30° clockwise beyond this point.
5. Set SAMPLE RATE to any position (not POWER OFF).
6. Set GATE SELECTOR to CLOSE.
7. Press RESET button to set display to zero.
8. To start count, set GATE SELECTOR to OPEN.
9. To stop count, set GATE SELECTOR to CLOSE.
10. Read total count displayed.

Figure 3-5. Frequency Measurement

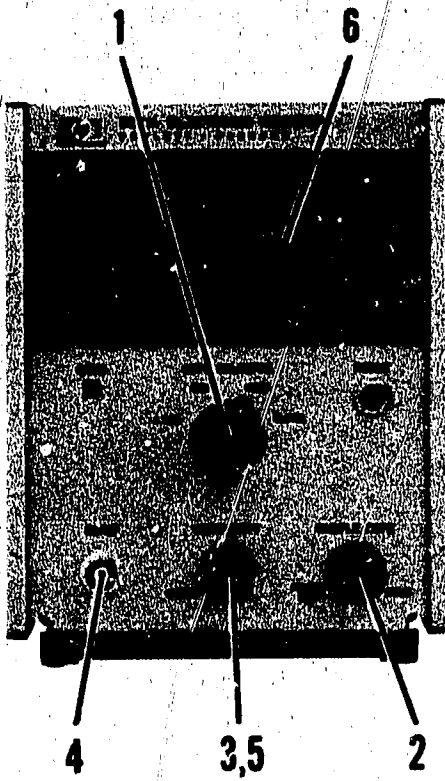

1. Set GATE SELECTOR switch to desired gate time; 1 SEC or .1 SEC.
2. Set SAMPLE RATE control for desired sample rate.
3. Set SENSITIVITY to minimum (ccw).
4. Connect signal to INPUT jack.
5. Adjust SENSITIVITY until consistent count is displayed. Set SENSITIVITY 30° clockwise beyond this point.
6. Read frequency displayed.

THEORY

SECTION IV THEORY OF OPERATION

4-1. INTRODUCTION

4-2. This section describes how the counters operate. A discussion of logic fundamentals is given to aid understanding how integrated circuits work. Each assembly is discussed in order of its assembly designation. Schematic diagrams are included in Section VIII, Circuit Diagrams.

4-3. GENERAL DESCRIPTION

Block Diagram Figure 8-2

4-4. Frequency range is from 5 Hz to 10 MHz with a maximum sensitivity of 100 millivolts. The counter includes 3 printed circuit assemblies:

- 1) Input Amplifier A1 provides amplification and triggering for the main gate.
- 2) Main Board Assembly A2 consists of the following circuits:
 - a. Time base dividers.
 - b. Main gate and driver for decade counter assemblies.
 - c. Sample rate multivibrator.
 - d. Reset control.
 - e. Transfer multivibrator for storage and non-storage.
 - f. Integrated circuit decade counters, buffer storage units, and decoder-drivers for digital display tubes.
- 3) Power Supply Assembly A3.

4-5. GATING AND LOGIC

4-6. The counters use many integrated circuits. Therefore it is necessary to understand basic logic symbols and their application in gating. In the circuit diagrams, AND gate and OR gate symbols are used. The following paragraphs and illustrations introduce logic symbols and their applications.

4-7. Logic Symbols

4-8. The symbol shown in Figure 4-1A is for the basic AND gate function. AND gate output is high if all inputs are high. The AND gate can have two or more inputs. The symbol in Figure 4-1D is for the basic OR gate. The OR gate output is high when one or more of its inputs is high. The OR gate can have two or more

Figure 4-1. Gate Symbols


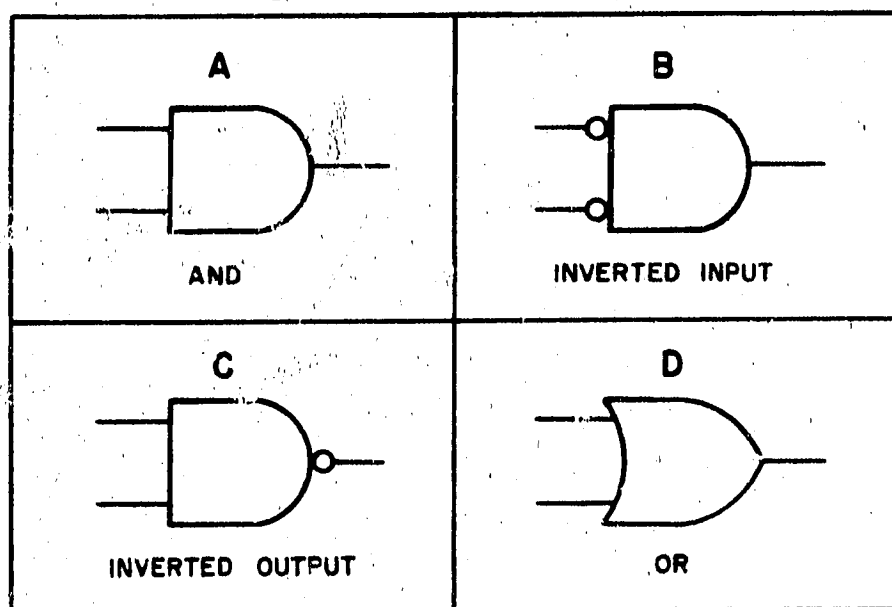


Figure 4-2. Logic Comparison Diagrams

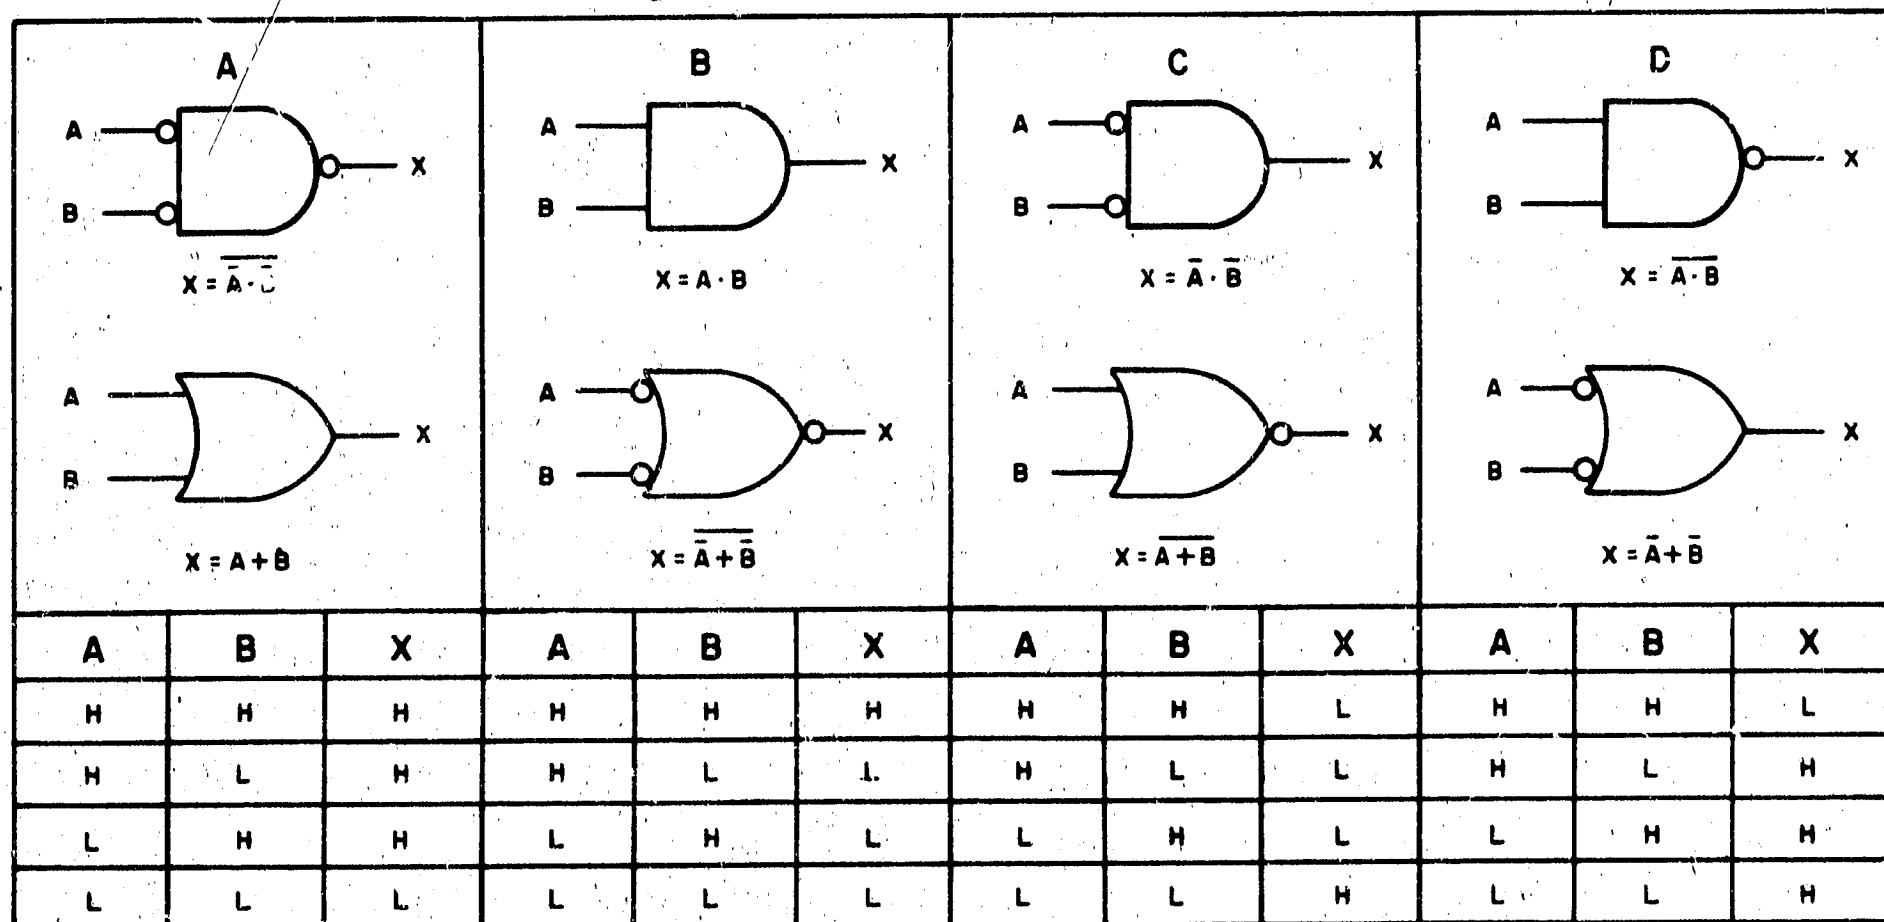

Section IV Theory

inputs. A small circle at the input line of a logic symbol indicates a low (L) level activates the function. The symbol in Figure 4-1B shows a low input on all lines causes a high (H) level output. A small circle at the output line of a logic symbol indicates a low (L) level when activated, as shown in Figure 4-1C. Thus a small circle indicates inversion. This applies to both types of gates. Figure 4-2 lists examples and truth tables for logic actions. When the output of the OR gate is inverted, it is referred to as a NOR gate. Similarly, an inverted AND gate output is a NAND gate.

4-9. In a binary system there are only two states, referred to as H or L. H is the relatively more positive level and L is the relatively less positive level. Positive logic means that the voltage level assigned to the one state is more positive than that assigned to the zero state. Negative logic has the one state less positive than the zero state. Thus, positive logic (logical one) or negative logic (logical zero) must be clearly specified. An H state could be a logical one or a logical zero. However, H must always represent the more positive level. In this manual positive logic is used with the H state (logical one) more positive than the L state (logical zero). A circle at the symbol input shows signal polarity required to activate the function. Figure 4-2 shows four types of symbols that have the same truth tables and can be used interchangeably. The same output function is performed by what appears to be two different logic symbols. The following discussion will show that they are the same. Therefore more than one symbol can be used to represent a particular function.

4-10. De Morgan's Theorem and Logic Symbols

4-11. De Morgan's theorem states: $\overline{A \cdot B} = \overline{A} + \overline{B} = \overline{A} \cdot \overline{B}$, where the dot (\cdot) is read as "and" and the cross (+) is read as "or". The bar across the letters is read as "not". The theorem shows that an AND gate with an inverted output is the same as an OR gate with inverted inputs. The expression $X = \overline{A \cdot B}$ is correct for the AND gate with the inverted output as in Figure 4-2D. From De Morgan's theorem, $X = \overline{A \cdot B} = \overline{A} + \overline{B}$ and the symbol for $\overline{A} + \overline{B}$ is the OR gate with inverted inputs shown in Figure 4-2D. Thus, the same truth table will work for both symbols. Remember that the symbol used must describe the logic function performed. Positive and negative logic differences are shown in Figure 4-1. When positive logic symbology is used to represent negative logic functions, the dual of the function is produced. For example, a positive logic AND gate becomes a negative logic OR gate. Thus, AND is dual of OR and NOR is dual of NAND.

4-12. JK FLIP-FLOP

4-13. The JK flip-flop is a bistable MV with added features. One unique feature is that the JK flip-flop stores two simultaneous inputs at J and K; then changes states when a clock input signal is applied. Three inputs are used for JK operation in addition to the standard two inputs: 1) clock, 2) set, and 3) reset. The clock input is like the normal input for flip-flop

Figure 4-3. JK Flip-Flop

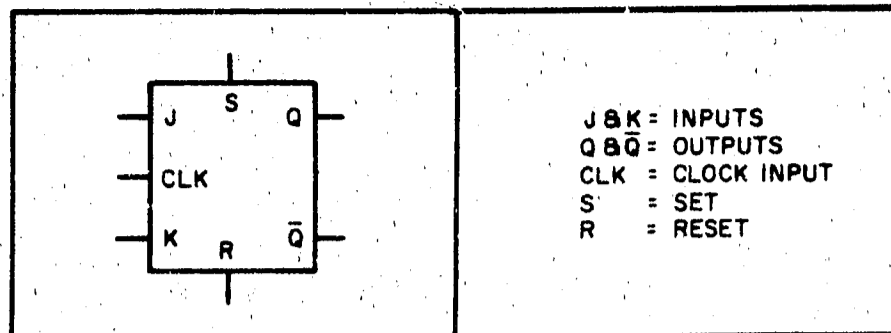


Table 4-1. Truth Table

t_n		$t_n + 1$		t_n = Before clock pulse $t_n + 1$ = After clock pulse
J	K	Q	\overline{Q}	
0	0	Q_n	\overline{Q}_n	If J = 0 and K = 0, then Q and \overline{Q} will not change from what they were before the clock pulse.
1	0	1	0	If J = 1 and K = 0, then Q will be 1 and \overline{Q} will be 0 after the clock pulse.
0	1	0	1	If J = 0 and K = 1, then Q will be 0 and \overline{Q} will be 1 after a clock pulse.
1	1	\overline{Q}_n	Q_n	If J = 1 and K = 1 before the clock pulse, then after the clock pulse Q and \overline{Q} will change states.

operation. When a set input is applied, this sets output Q to a logical one. A reset input sets \overline{Q} to a logical one. In addition to these features, some JK flip-flops have multiple inputs which are internally gated to control the flip-flop output. JK flip-flop action is shown by truth table 4-1. JK flip-flop is shown in Figure 4-3.

4-14. ONE-SHOT MULTIVIBRATOR


4-15. The reset and transfer one-shot MV's use two NAND gates as shown in Figure 4-4. With no input, pins 1 and 2 of gate A are held high (about 2.5 V) by R1, 2, 3, and 4. Pin 3 of gate A is low. Pin 6 of gate B is high.

4-16. When a negative pulse is applied to the input, pin 1 of gate A goes low for a time determined by C1, R1, and R2. At this time, pin 3 goes high and produces a low output at pin 6 of gate B. This drives pin 2 of gate A low through C2. C2 now charges through R3 and R4. When C2 has charged sufficiently to allow pin 2 of gate A to go high, pin 3 goes low and permits pin 6 of gate B to return to a high. Thus the output is a negative pulse.

4-17. SENSITIVITY CONTROL R1 Schematic Diagram Figure 8-3

4-18. SENSITIVITY control R1 selects one of two functions: 1) self-check, or 2) adjustment of input sensitivity. At full counterclockwise, it operates self-

Figure 4-4. One-Shot Multivibrator

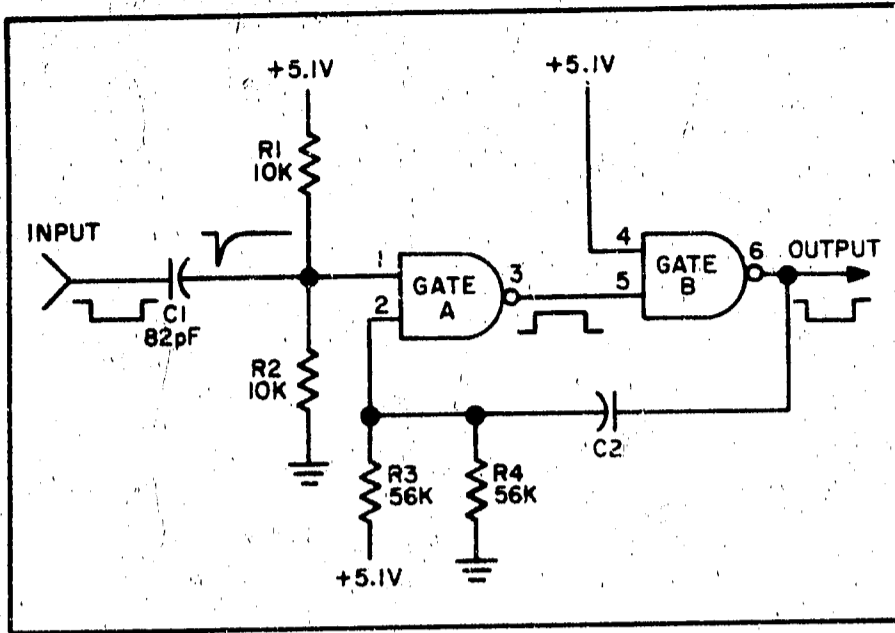

check switch S3 (see Figure 8-3). In this position, 60 Hz from A2(P) is connected directly to input amplifier A1. When not in CHECK, it varies the sensitivity from 250 V rms maximum to 0.1 V rms minimum (full clockwise).

4-19. INPUT AMPLIFIER ASSEMBLY A1

Schematic Diagram Figure 8-3.

4-20. Input amplifier assembly A1 provides stable voltage gain of the input signal. Diodes CR1 and CR2 are limiters. Field effect transistor Q1 is a source follower to obtain maximum current gain with low noise while maintaining a high input impedance. Q2 is a feedback amplifier for Q1 and improves stability. Q3 and Q4 further amplify the input signal to drive Schmitt trigger Q5 and Q6. The output of Q6 is applied to output amplifier Q7 and Q8. Bias amplifier Q9 with R20 sets the operating point for the Schmitt trigger.

4-21. MAIN BOARD ASSEMBLY A2

Schematic Diagram Figure 8-4

4-22. TIME BASE. The 60 Hz signal from A3(3) is shaped by Q2. The positive portion is applied to IC1c(2). IC1c is the time base NAND gate. When pins 1 and 13 of this gate are high there is a 60 Hz square wave output at pin 12. This signal is applied to IC2(3)(hexade divider). With the GATE SELECTOR switch in the .1 SEC gate position, 10 Hz from the gate output of IC2(6) is applied to the clock input of main gate flip-flop IC4a(6). When GATE SELECTOR switch is in the 1 SEC gate position, the 10 Hz output of IC2(5) is applied to IC3(3) (decade divider). The output of IC3(6) is then applied to the clock input of the main gate flip-flop.

4-23. MAIN GATE. With the GATE SELECTOR switch set to OPEN, CR8 and CR9 are grounded. This disables transfer multivibrator IC5c and IC5a and sample rate multivibrator IC4b. NAND gate IC5d now has a low output at pin 3. This signal is applied to main gate flip-flop IC4a(7) resulting in a low output at pin 10. The output at pin 10 is applied to Q9 base (gate light amplifier) to turn on the gate lamp and also to main gate transistor Q3 to open the main gate. With the main gate open the counted signal at Q1 base is allowed to pass on to the driver and decade counters.

With the GATE SELECTOR switch in CLOSE, the transfer and sample rate multivibrators are disabled by grounding CR10 and CR11. At this time there is a low input applied to IC5d(2) to reverse the main gate flip-flop and close the main gate. With the GATE SELECTOR switch in OPEN, the gate may be closed by grounding the EXT GATE terminal. This provides a low input to IC5(2) through CR15 to close main gate.

4-24. RESET. Reset is done by grounding the inputs of the transfer and reset MV's through CR12 and CR3, respectively. This allows the reset MV to trigger and provide a negative pulse to time base NAND gate IC1c and reset of main gate flip-flop IC4a. At the same time a positive pulse is applied to pin 1 of time base dividers IC2 and IC3 to reset them at 9. This pulse also goes to reset amplifier Q7 and resets the decade counters to zero.

4-25. STORAGE. In storage mode pin 5 of the buffer storage units is held high by IC5a(8). This prevents information in the decade counters from reaching the buffer storage units. When a negative transfer pulse occurs (after the main gate has closed) information in the decade counters passes onto the buffer storage units and the new count is displayed. When STORAGE switch is closed (storage off) the transfer MV is disabled by grounding pin 13 of IC5c. This holds the output at pin 8 of IC5a low and allows a continuous transfer of information from the decade counters to the buffer storage units.

4-26. BLANKING. Blanking occurs when STORAGE switch is on and pin 10 of decade counters IC11, 14 and 17 are grounded. This feature permits blanking of unwanted zeros in the display (zeros left of the most significant digit).

4-27. DECADE COUNTERS. Decade counter IC8 is a high speed, non-blanking decade. Input is on pin 5. It provides a four line coded signal to buffer storage unit IC7. Decade counters IC11, IC14, and IC17 are low frequency blanking decades.

4-28. BUFFER STORAGE UNITS. These units have four inputs and four outputs. When pin 5 is low the buffer storage unit assumes the state of the decade counter and this information is passed to the decoder driver. Pin 5 will be low when there is a transfer pulse or when the STORAGE switch is off.


4-29. DECODER DRIVERS. The decoder drivers are four-line to ten-line decoders with 4 inputs and 10 outputs. A low from the decoder driver to a number in the digital display tube will light that number.

4-30. COUNTING SEQUENCE

Refer to Timing Diagram Figure 4-5

4-31. The 60 Hz signal at pin 11 of main board assembly A2 is shaped by Q2. The positive portion at Q2 collector goes to pin 2 of time base NAND gate IC1c. To derive an output from this gate, pins 1 and 13 must be high. When pins 1 and 13 are high, a 60 Hz square wave is applied to pin 3 of IC2 (hexade divider). If the gate control of IC2 pin 7 is grounded (.1 SEC position of the GATE SELECTOR switch), the gated

Figure 4-5. Timing Diagram

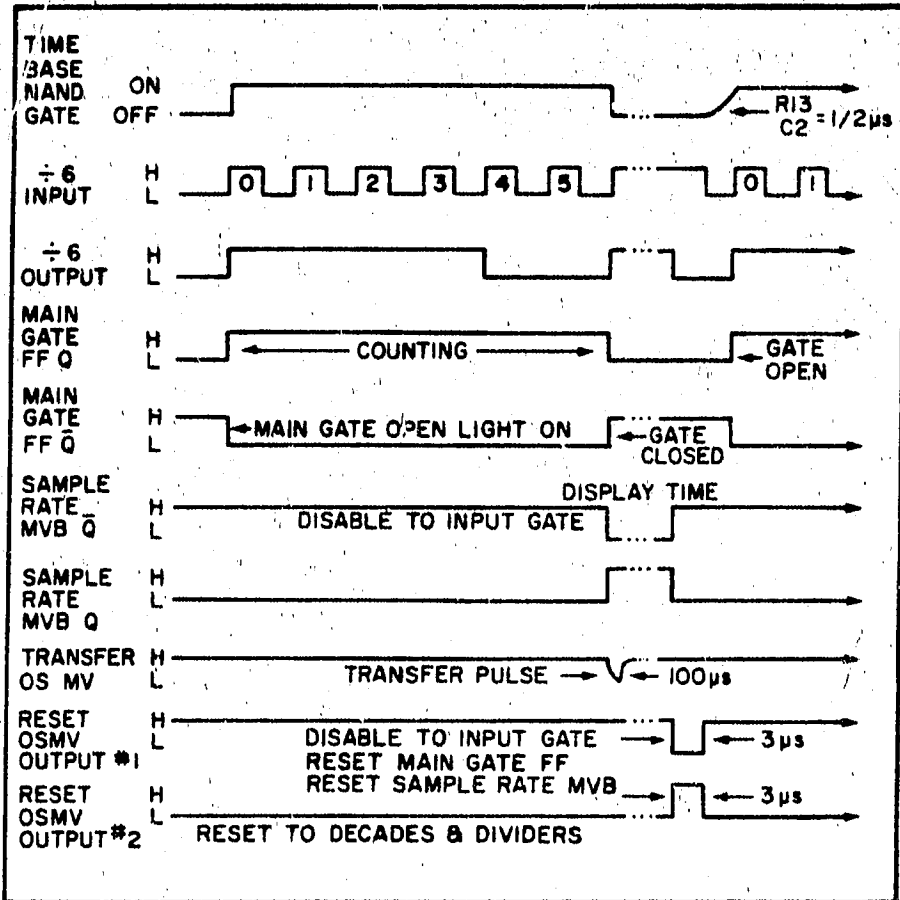

output at pin 6 will become the clock input to main gate flip-flop IC4a. When the GATE SELECTOR is set to 1 SEC, the gated output of IC3(6) becomes the clock input to the main gate flip-flop.

4-32. In both .1 SEC and 1 SEC positions of the GATE SELECTOR switch the set (pin 7) of the main gate flip-flop is held high by IC5d. \bar{Q} at pin 10 of the main gate flip-flop is high. Completion of the first clock pulse will cause Q and \bar{Q} to change states. Now \bar{Q} is low and will open the main gate and light the gate lamp. A low at Q9 base cuts off the transistor. Collector voltage rises and the gate lamp lights. A low at Q3 base cuts off Q3 and the input signal at Q1 base passes on to the driver and decade counters. At this time Q is high and acts as the clock input to sample rate MV IC4b. This MV requires a complete change of input state of change its output. Therefore it must wait for the second clock pulse input to the main gate flip-flop before it will change states.

4-33. At the end of the second clock pulse input, Q and \bar{Q} will change states. \bar{Q} will go high and close the main gate and turn off the gate lamp. Q will go low and trigger the sample rate MVB. Q and \bar{Q} of the sample rate MV will now change states. \bar{Q} goes low and triggers the transfer one-shot MV to produce a transfer pulse that allows counted information to enter the buffer storage units. The low from \bar{Q} is also applies to pin 13 of the time base NAND gate and prevent any 60 Hz output from pin 12. Sample rate MV Q output goes high, charging C9 at a rate determined by R21 and R (SAMPLE RATE control). When the voltage across C9 is sufficient, Q6 and Q8 will conduct and cause a high input to NAND gate IC5b(4). The subsequent low output from IC6b(6) clears the sample rate MV and causes Q and \bar{Q} to again change states. \bar{Q} goes high and remove the disabling input from pin 13 of the time base NAND gate. Q goes low and triggers the reset one-shot MV. The positive reset pulse from IC1b(6) resets IC2 and IC3 to 9 and the decade counters to 0.

4-34. A negative pulse from IC1a(8) is at this time applied to time base NAND gate pin 1 for a period determined by R13 and C2. This allows all reset operations to occur before the next clock pulse enters the time base dividers. This negative pulse is also applied as the set of main gate flip-flop to ensure that it will be ready for the next clock pulse.

4-35. At this time IC2 and IC3 are reset to 9. The main gate flip-flop is preset. The decade counters are reset to 0 and ready for the next count cycle.

4-36. POWER SUPPLY ASSEMBLY A3

Schematic Diagram Figures 8-5 and 8-6

4-37. GENERAL. Power supply assembly A3 provides three regulated voltages: +155, +5.1, and -12 V. These are operating voltages for the instrument.

NOTE

In the following discussion, complete reference designations are used to prevent confusion between parts located on the chassis and parts located on printed circuit board A3.

4-38. PRIMARY POWER. Either 115 Vac or 230 V ac is connected through fuse F1 and power switch S4 (part of SAMPLE RATE control R2). Slide switch S6 on the rear panel connects T1 primary windings in parallel for 115 Vac operation or in series for 230 V ac operation.

4-39. MINUS 12 VOLT SUPPLY. The regulated -12 volt supply consists of full wave bridge rectifier A3CR5 through A3CR8 whose output is filtered by A3C1, regulated by A3Q1 and further filtered by A3C4. Breakdown diode A3CR15 provides a 12.7V reference for A3Q1. When the output voltage attempts to change, A3Q1 conducts more or less to oppose this change.

4-40. PLUS 5.1 VOLT SUPPLY. The 5.1 volt supply consists of full wave bridge rectifier A3CR9 through A3CR12 whose output is filtered by A3C2 and regulated by series regulator Q1. A3Q4 is the reference amplifier whose gain is adjusted by A3R6. Breakdown diode A3CR17 provides the reference voltage for A3Q4. Thermistor A3RT1 provides temperature compensation for resistive divider A3R6, A3R7, and A3R8. This helps to maintain the gain of the reference amplifier.

4-41. PLUS 155 VOLT SUPPLY. The regulated +155 volt supply consists of full wave bridge rectifier A3CR1 through A3CR4. A3Q2 is the series regulator. Breakdown diodes A3CR13, A3CR14, and A3CR16 provide the reference level for A3Q2. These diodes also contribute to temperature compensation to minimize intensity changes in the readout display tubes. The +155 volt output is adjusted by A3R1. The power supply board used in the Model 5321A has additional components (A3R9, 10, 11, and C6) which provide 90 volts at pin 9. This voltage is not used.

MAINTENANCE

SECTION V MAINTENANCE

5-1. INTRODUCTION

5-2. This section provides maintenance and service information for the Model 5221A and 5321A Electronic Counters. Included are a table of recommended test equipment, troubleshooting procedures, repair and adjustment procedures, and an in-cabinet performance check which may be used to verify proper operation of the Counter.

5-3. TEST EQUIPMENT

5-4. Recommended test equipment for troubleshooting and performance checking is listed in Table 5-2. Test instruments other than those listed may be used if their specifications equal the required characteristics.

5-5. ASSEMBLY CONNECTION IDENTIFICATION

5-6. Throughout the manual, connections to printed circuit assemblies are referred to in abbreviated form. For example, connection to pin 6 of assembly A1 is A1(6).

5-7. ASSEMBLY DESIGNATIONS

5-8. Table 5-1 lists the designation, name, and part number of printed circuit assemblies used in standard instruments. For options, refer to Section VII.

Table 5-1. Printed Circuit Assemblies

Assy	Name	HP Part No.
A1	Amplifier-Trigger	05221-6002
A2	Main Board	05221-6001
A3	Power Supply	05221-6003 (5221A) 05221-6010 (5321A)

5-9. IN-CABINET PERFORMANCE CHECK

5-10. GENERAL. The following performance check, Table 5-3 and Test Card, verifies proper operation of all circuits in the Model 5221A and 5321A Electronic Counters and may be used:

- a. as part of an incoming inspection check of instrument specifications,
- b. periodically, for instruments used in systems where maximum reliability is important,
- c. as part of a troubleshooting procedure to locate malfunctioning circuits, and
- d. after any repairs or adjustments, before returning instrument to regular service.

Table 5-2. Recommended Test Equipment

Instrument Type	Required Characteristics	HP Part No.
Low Frequency Oscillator	5 Hz to 50 kHz, 0.1 V rms	200CD
High Frequency Oscillator	50 kHz to 10 MHz, 0.1 V rms	651B
Pulse Generator	±50 ns, .3 V, 100 kHz	222A
Oscilloscope Dual Trace Plug-in Horizontal Plug-in	20 MHz Bandwidth 5 mV/cm	140A 1402A 1420A
Divider Probe	10:1, 10 pF, dc to 30 MHz	10001A
Divider Probe	50:1, 2.5 pF, dc to 30 MHz	10002A
50 ohm Feedthrough Termination	Male to Female BNC	10100A
DC VTVM	0 to ±300 V dc, ±1%, 200 megohm impedance	412A
AC VTVM	10 Hz to 10 MHz, ±4%, .001 to 300 V rms	400E
AC Transistor Voltmeter	5 Hz to 10 Hz, ±5%, .001 to 300 V rms	403B
BNC "T" Connector		1250-0781

Table 5-3. In-Cabinet Performance Check

1. MAXIMUM COUNTING RATE: 10 MHz

- a. Set Counter controls as follows:
 SENSITIVITY counterclockwise, not in CHECK
 SAMPLE RATE slightly clockwise out of POWER OFF
 GATE SELECTOR 1 sec
- b. With BNC "T", connect output of Low Frequency Oscillator to Counter INPUT and Oscilloscope input. The Oscilloscope monitors input signal level. Set Oscillator for 0.1 V rms (0.28 V p-p).
- c. Vary frequency of Low Frequency Oscillator from 5 Hz to 50 kHz, keeping output at 0.1 V rms (0.28 V p-p). Adjust Counter SENSITIVITY to trigger on input signal. Counter should properly display frequencies in this range. For frequencies above 9.999 kHz (99.999 kHz Option 01 and 999.999 kHz Option 02) the most significant figure is not displayed.
- d. Substitute HF Oscillator for Low Frequency Oscillator. Vary frequency of HF Oscillator from 50 kHz to 10 MHz keeping output at 0.1 V rms (0.28 V p-p). Adjust Counter SENSITIVITY to trigger on input signal. The Counter should display frequencies in this range.
- e. To measure pulses, the input trigger circuit must be adjusted to compensate for hysteresis effects so that correct triggering occurs with either positive or negative pulses. Refer to paragraph 5-21 for this adjustment.

NOTE: Shifts in hysteresis limits to obtain a consistent count on positive or negative pulses will affect sine wave sensitivity. Steps d and e above will require an input signal level above .1 V rms if the input circuit is adjusted for pulse operation.

- f. Perform the following check only if trigger circuit has been adjusted for pulse operation. Connect Pulse Generator to Counter INPUT with normal recommended load. Set Pulse Generator for 50 ns, 300 mV pulse, \pm depending on the setting of internal trigger control. Set REPETITION RATE of Pulse Generator to 100 kHz. The Counter should display this frequency.

2. INPUT SENSITIVITY: 0.1 V rms sine wave

NOTE: Internal control allows selection of either positive or negative pulse input.

Sensitivity is checked by procedure of Item 1, Maximum Counting Rate.

3. GATE CONTROL: Controlled by GATE SELECTOR switch on front panel or by contact closure or saturated NPN transistor ground at EXT GATE jack on rear panel with GATE SELECTOR switch at OPEN.

- a. Set Counter controls as follows:
 GATE SELECTOR CLOSE
 SAMPLE RATE slightly clockwise out of POWER OFF
- b. Connect Low Frequency Oscillator to Counter INPUT. Set Oscillator to 3 kHz at 0.1 V rms (0.28 V p-p).
- c. Set GATE SELECTOR switch to OPEN; the Counter should be totalizing the input signal. Set the GATE SELECTOR to CLOSE. The Counter should stop counting.
- d. Set GATE SELECTOR to OPEN. Ground the EXT GATE jack on rear panel. Counter should stop counting.

PERFORMANCE CHECK TEST CARD

Hewlett-Packard Model 5221A/5321A
 Electronic Counter
 Serial No. _____

Tests Performed by _____
 Date _____

DESCRIPTION	CHECK
<p>1. MAXIMUM COUNTING RATE: 10 MHz</p>	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 100px; height: 20px; margin-right: 10px;"></div> <p>5 Hz to 10 MHz minimum</p> </div>
<p>2. INPUT SENSITIVITY: 0.1 V rms sine wave</p>	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 100px; height: 20px; margin-right: 10px;"></div> <p>0.1 V rms (verified by step 1 above)</p> </div>
<p>3. GATE CONTROL: controlled by front panel GATE SELECTOR switch, or by external contact closure.</p> <p style="margin-left: 40px;">With GATE SELECTOR set to OPEN</p>	<div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 100px; height: 20px; margin-right: 10px;"></div> <p>OPEN (start counting)</p> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 100px; height: 20px; margin-right: 10px;"></div> <p>CLOSE (stop count and hold)</p> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 100px; height: 20px; margin-right: 10px;"></div> <p>Contacts open (start counting)</p> </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; width: 100px; height: 20px; margin-right: 10px;"></div> <p>Contacts closed (stop counting)</p> </div>

5-11. **VARIABLE LINE VOLTAGE.** During the following tests (Table 5-3), Counter should be connected to power source through a variable voltage device so that line voltage may be varied $\pm 10\%$ from nominal (115 or 230 V ac) to assure proper operation of Counter under various supply conditions.

5-12. INSTRUMENT COVER REMOVAL

5-13. To remove top, bottom, or side covers, remove phillips-head screws. Side covers must be removed for access to adjustments.

WARNING

115/230 V AC AND +155 V DC SUPPLY WIRES ARE EXPOSED WHEN EITHER TOP OR BOTTOM INSTRUMENT COVER IS REMOVED. USE EXTREME CAUTION DURING TROUBLESHOOTING, ADJUSTMENT, OR REPAIR. AVOID DAMAGE TO INSTRUMENT BY REMOVING POWER BEFORE REMOVING OR REPLACING COVERS, ASSEMBLIES, OR COMPONENTS.

5-14. ADJUSTMENTS

5-15. Power Supply A3

5-16. To check and adjust power supply voltages, perform the following:

- Set line voltage to normal value (115 or 230 Vac).
- Connect dc voltmeter to A3(6).
- Voltmeter should read between +145 and +165 Vdc. If voltage is outside this range, adjust A3R1 (see Figure 5-1 for 5221A or Figure 5-2 for 5321A).
- Vary line voltage from 103 to 127 V ac (206 to 254 Vac). The +155 Vdc supply should stay between +145 and +165 Vdc. See Table 5-4.
- Set line voltage to normal (115 or 230 Vac).
- Connect dc voltmeter to A3(9) on 5221A or A3(1) on 5321A.
- Voltmeter should read between +4.95 and +5.25 Vdc. If voltage is outside this range, adjust A3R6 (see Figure 5-1 for 5221A or Figure 5-2 for 5321A).
- Vary the line voltage from 103 to 127 Vac (206 to 254 Vac). The +5.1 Vdc supply should stay between +4.95 and 5.25 Vdc.

5-17. Amplifier-Trigger Assembly A1

5-18. Paragraph 5-19 is a procedure to test input amplifier trigger assembly A1 for proper operation. If any test is not passed, see Paragraphs 5-20 and 5-21 for trigger adjustment procedure.

5-19. 5 Hz TO 10 MHz CHECK.

- Set SENSITIVITY control clockwise.
- Connect Test Oscillator to Counter INPUT. Set Oscillator output to 5 Hz at 0.1 V rms.
- Connect Oscilloscope to output at A1(1). Oscilloscope display should be a rectangular wave, about 50% positive and 50% negative.
- Vary input frequency from 5 Hz to 10 MHz.
- Oscilloscope display should remain a jitter-free rectangular wave at any frequency between 5 Hz and 10 MHz.

5-20. ADJUSTMENT FOR SINE WAVE OPERATION.

- Set SENSITIVITY control clockwise.
- Connect 100 kHz sine wave at 0.1 V rms to Counter INPUT.
- Turn A1R20 (trigger level adjust; see Figure 5-1 for 5221A or Figure 5-2 for 5321A) fully clockwise.
- Turn A1R20 counterclockwise until output at A1(1), as observed on oscilloscope, is a stable rectangular waveform, 50% positive and 50% negative (50% duty cycle).

5-21. ADJUSTMENT FOR PULSE OPERATION.

NOTE

Optimum adjustment for pulse operation will differ from optimum sine wave adjustment. Use this adjustment only for pulse operation. Input Schmitt trigger may be adjusted for either positive or negative pulse operation.

- Connect Pulse Generator set for 50 ns, 300 mV pulse of desired polarity with repetition rate of 100 kHz. (Connect Generator with normal recommended load.)
- Connect Oscilloscope to output at A1(1). Adjust A1R20 until a stable pulse is displayed.

Table 5-4. Power Supply Voltage

Test Point	AC Line Voltage			Adjustment	Ripple and Noise
	(206) 103	(230) 115	(254) 127		
A3(6)	+155 \pm 10	+155 \pm 10	+155 \pm 10	A3R1	Not Filtered
A3(9)5221A A3(1)5321A	+5.1 \pm .15	+5.1 \pm .15	+5.1 \pm .15	A3R6	.01 V rms max.
A3(4)5221A A3(5)5321A	-12 \pm .5	-12 \pm .5	-12 \pm .5	None ⁽¹⁾	.003 V rms max.

Figure 5-1. Model 5221A Bottom and Side Internal Views


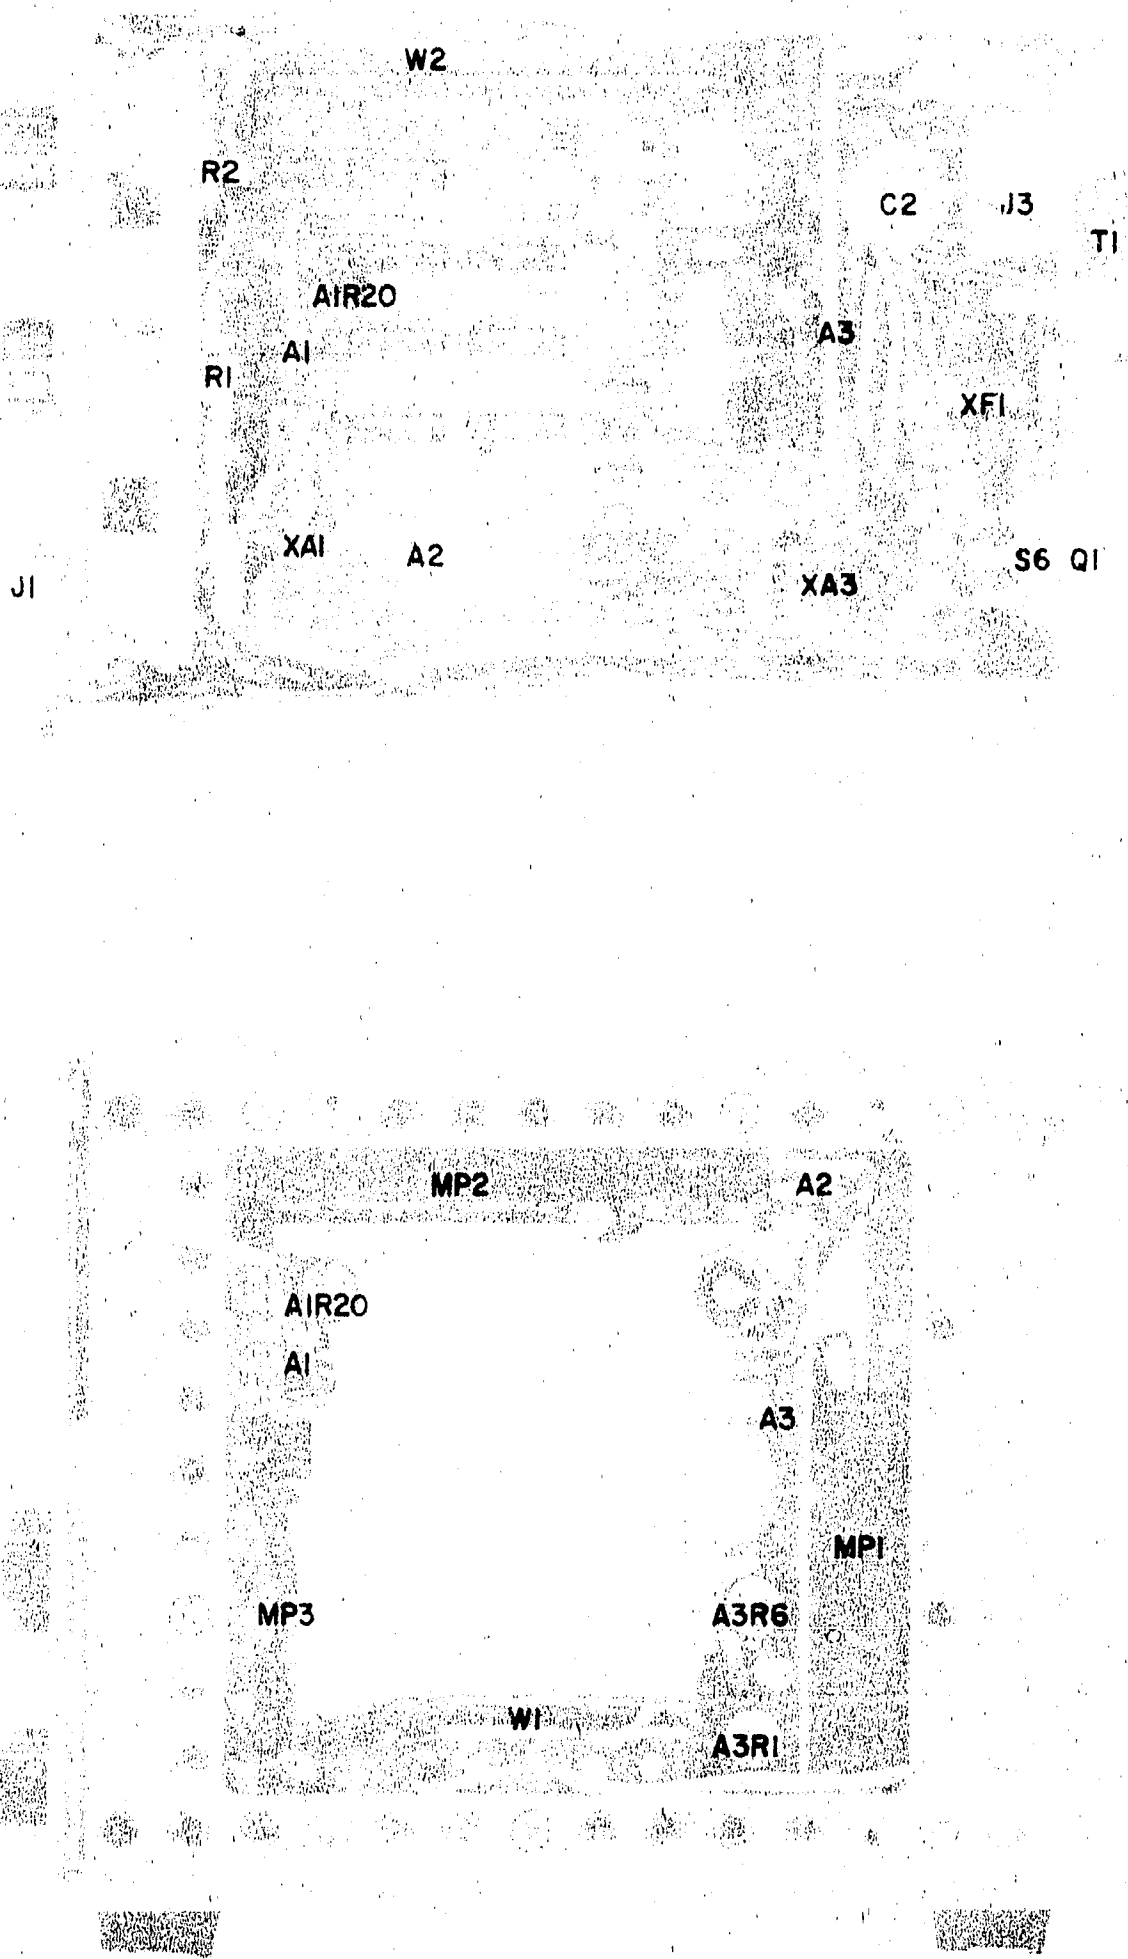


Figure 5-2. Model 5321A Bottom and Top Internal Views

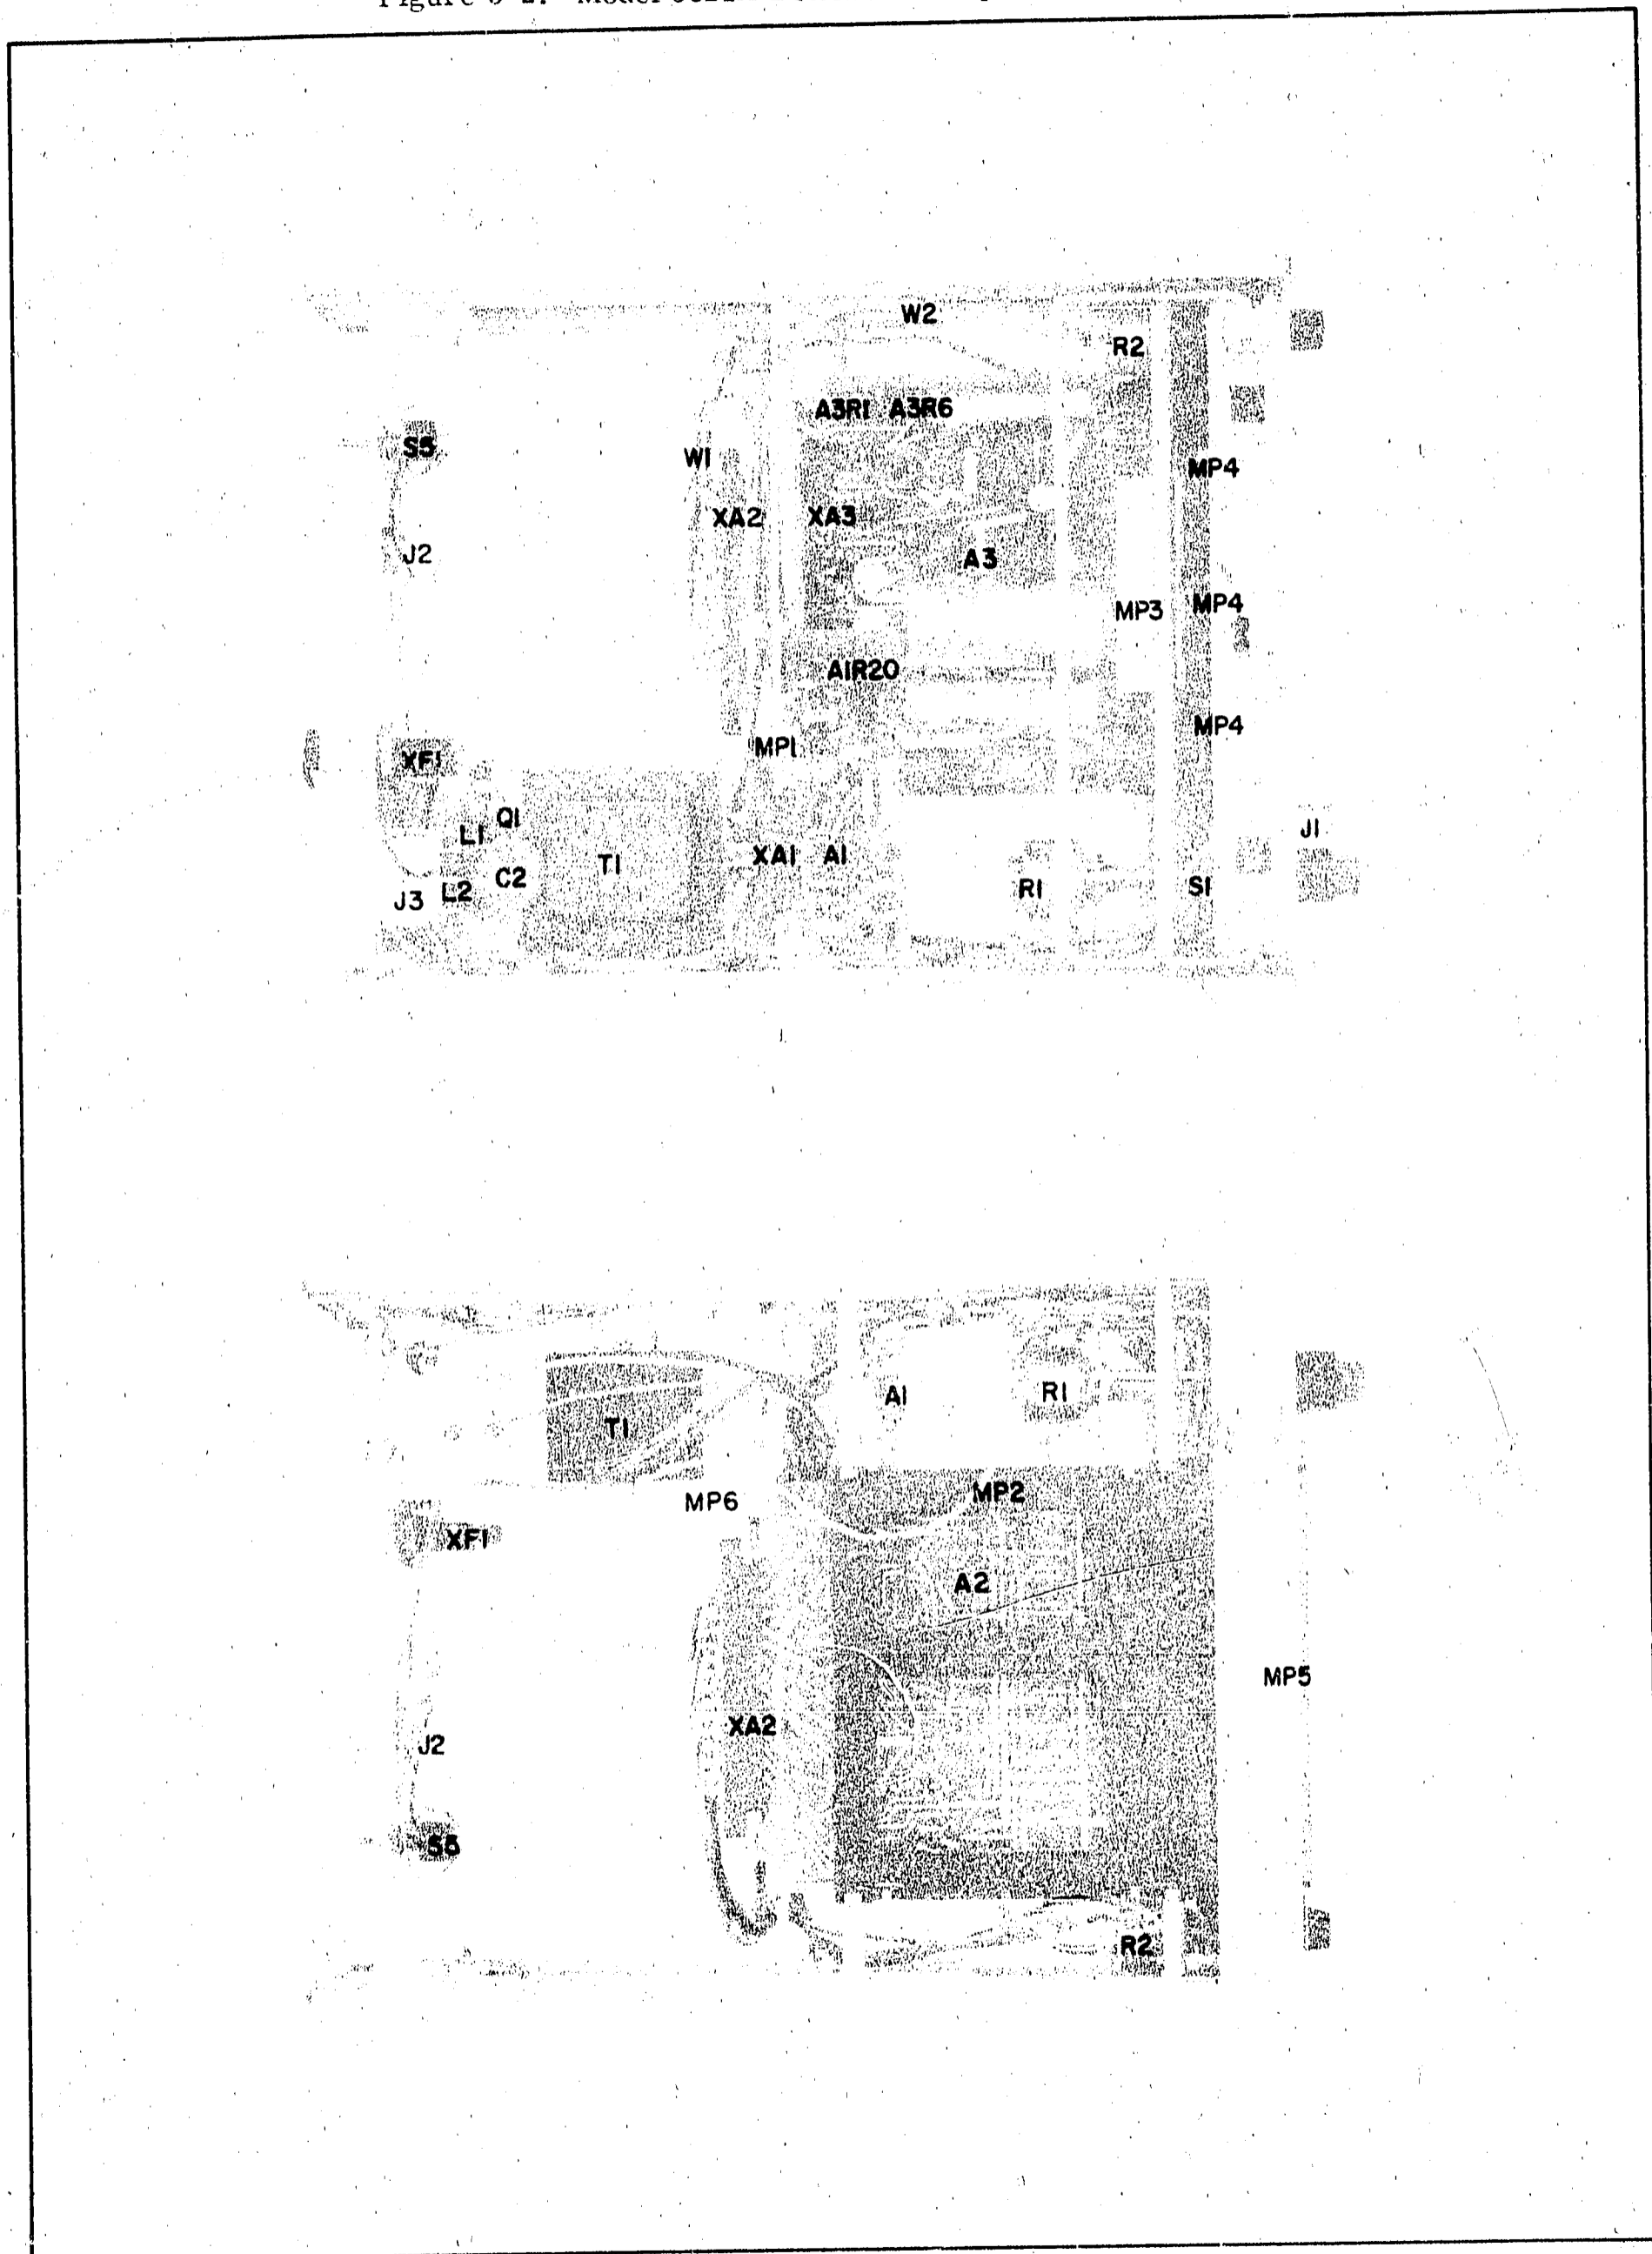

5-22. TROUBLESHOOTING

5-23. General

5-24. Trouble isolation can best be accomplished by first obtaining all possible information from the controls, indicators, and connectors; then logically applying this information to locate the defective circuit or component. Operating procedures in Section III and circuit diagrams in Section VIII can be used to help understand operation. Table 5-1 lists the printed circuit assemblies in the instrument. Figure 5-1 shows the location of assemblies and chassis-mounted components in the 5221A and Figure 5-2 shows the location of assemblies and chassis-mounted components in the 5321A. Refer to component location figures, voltages, waveforms, and schematic diagrams in Section VIII. The performance check (Table 5-3) table is also useful for locating trouble.

5-25. Module Substitution

5-26. Maintenance procedures may be greatly simplified if troubleshooting is done by replacing a bad assembly with a spare assembly known to be operating correctly. When bad assembly is found, trouble then may be traced to the individual components responsible, or the assembly may be shipped to your Hewlett-Packard Sales and Service office for repair.

5-27. Removal of Main Board Assembly A2

5-28. To remove main board assembly A2:

- a. Remove the top and both side covers (see Paragraph 5-13).
- b. For 5221A, remove front panel window by sliding it out either way.
- c. For 5321A, remove front panel window by pushing top of window down at the same time pulling out. When window is released pull up and out.
- d. Reach inside the side castings and gently lift sides of main board. Pull the board forward with the fingers.
- e. After board is started, remove connector XA2.
- f. Push or pull board out of counter being careful to keep board moving in a straight line.
- g. To replace board, reverse the above procedure.

Make sure connector XA2 is reconnected and none of the wires are pinched by the board.

5-29. Troubleshooting Assemblies

5-30. Refer to Section IV, Theory of Operation, for information on the operation of circuits. Consult the component location figures, signal waveforms, and voltages which are included with the assembly schematics in Section VIII.

5-31. Printed Circuit Component Replacement

5-32. Component lead-holes in the counter's circuit boards have plated walls to ensure good electrical contact between conductors on the opposite sides of the board. To prevent damage to this plating and to the replacement component, apply heat sparingly, and work carefully. The following replacement procedure is recommended:

- a. Remove defective component.
- b. Melt solder in component lead-holes. Use clean dry soldering iron to remove excess solder. Clean holes with toothpick or wooden splinter. Do not use metal tool for cleaning as this may damage through-hole plating.
- c. Bend leads of replacement component to the correct shape and insert component leads into component lead-holes. Using heat and solder sparingly, solder leads in place. Heat may be applied to either side of board. A heat sink (longnose pliers, commercial heat-sink tweezers, etc) should be used when replacing transistors and diodes in order to prevent excessive heat from being conducted by the leads from the soldering iron to the component.
- d. Through-hole plating breaks are indicated by the separation from the board of the round conductor-pad on either side of the board. To repair breaks, press conductor-pads against board and solder replacement component lead to conductor-pad on both sides of board.

5-33. Replacing Integrated Circuits

5-34. If it becomes necessary to replace an integrated circuit, clip the leads as close to the case as possible. With a soldering iron and long nose pliers, carefully remove the wires from each hole. Clean holes as described in Paragraph 5-32 step b.

5-35. Troubleshooting Aids


5-36. When trouble is suspected, refer to Section III and perform SELF CHECK procedure. If Counter does not pass SELF CHECK, refer to Table 5-5 for a detailed breakdown of Counter operation in various modes. Once the problem is isolated to a particular area, refer to schematic diagrams in Section VIII.

5-37. Main Gate

5-38. If there is no output from the main gate, check all associated components and voltage levels. If still unable to locate the problem, check the rise time of the input signal from A1 (1) to pin S of the mainboard. This is typically 20 ns. If the rise time is too slow, the problem is most likely on input amplifier board A1.

Table 5-5. Troubleshooting Chart

GATE SELECTOR to OPEN
SENSITIVITY not in CHECK
STORAGE on
SAMPLE RATE mid range
Press RESET

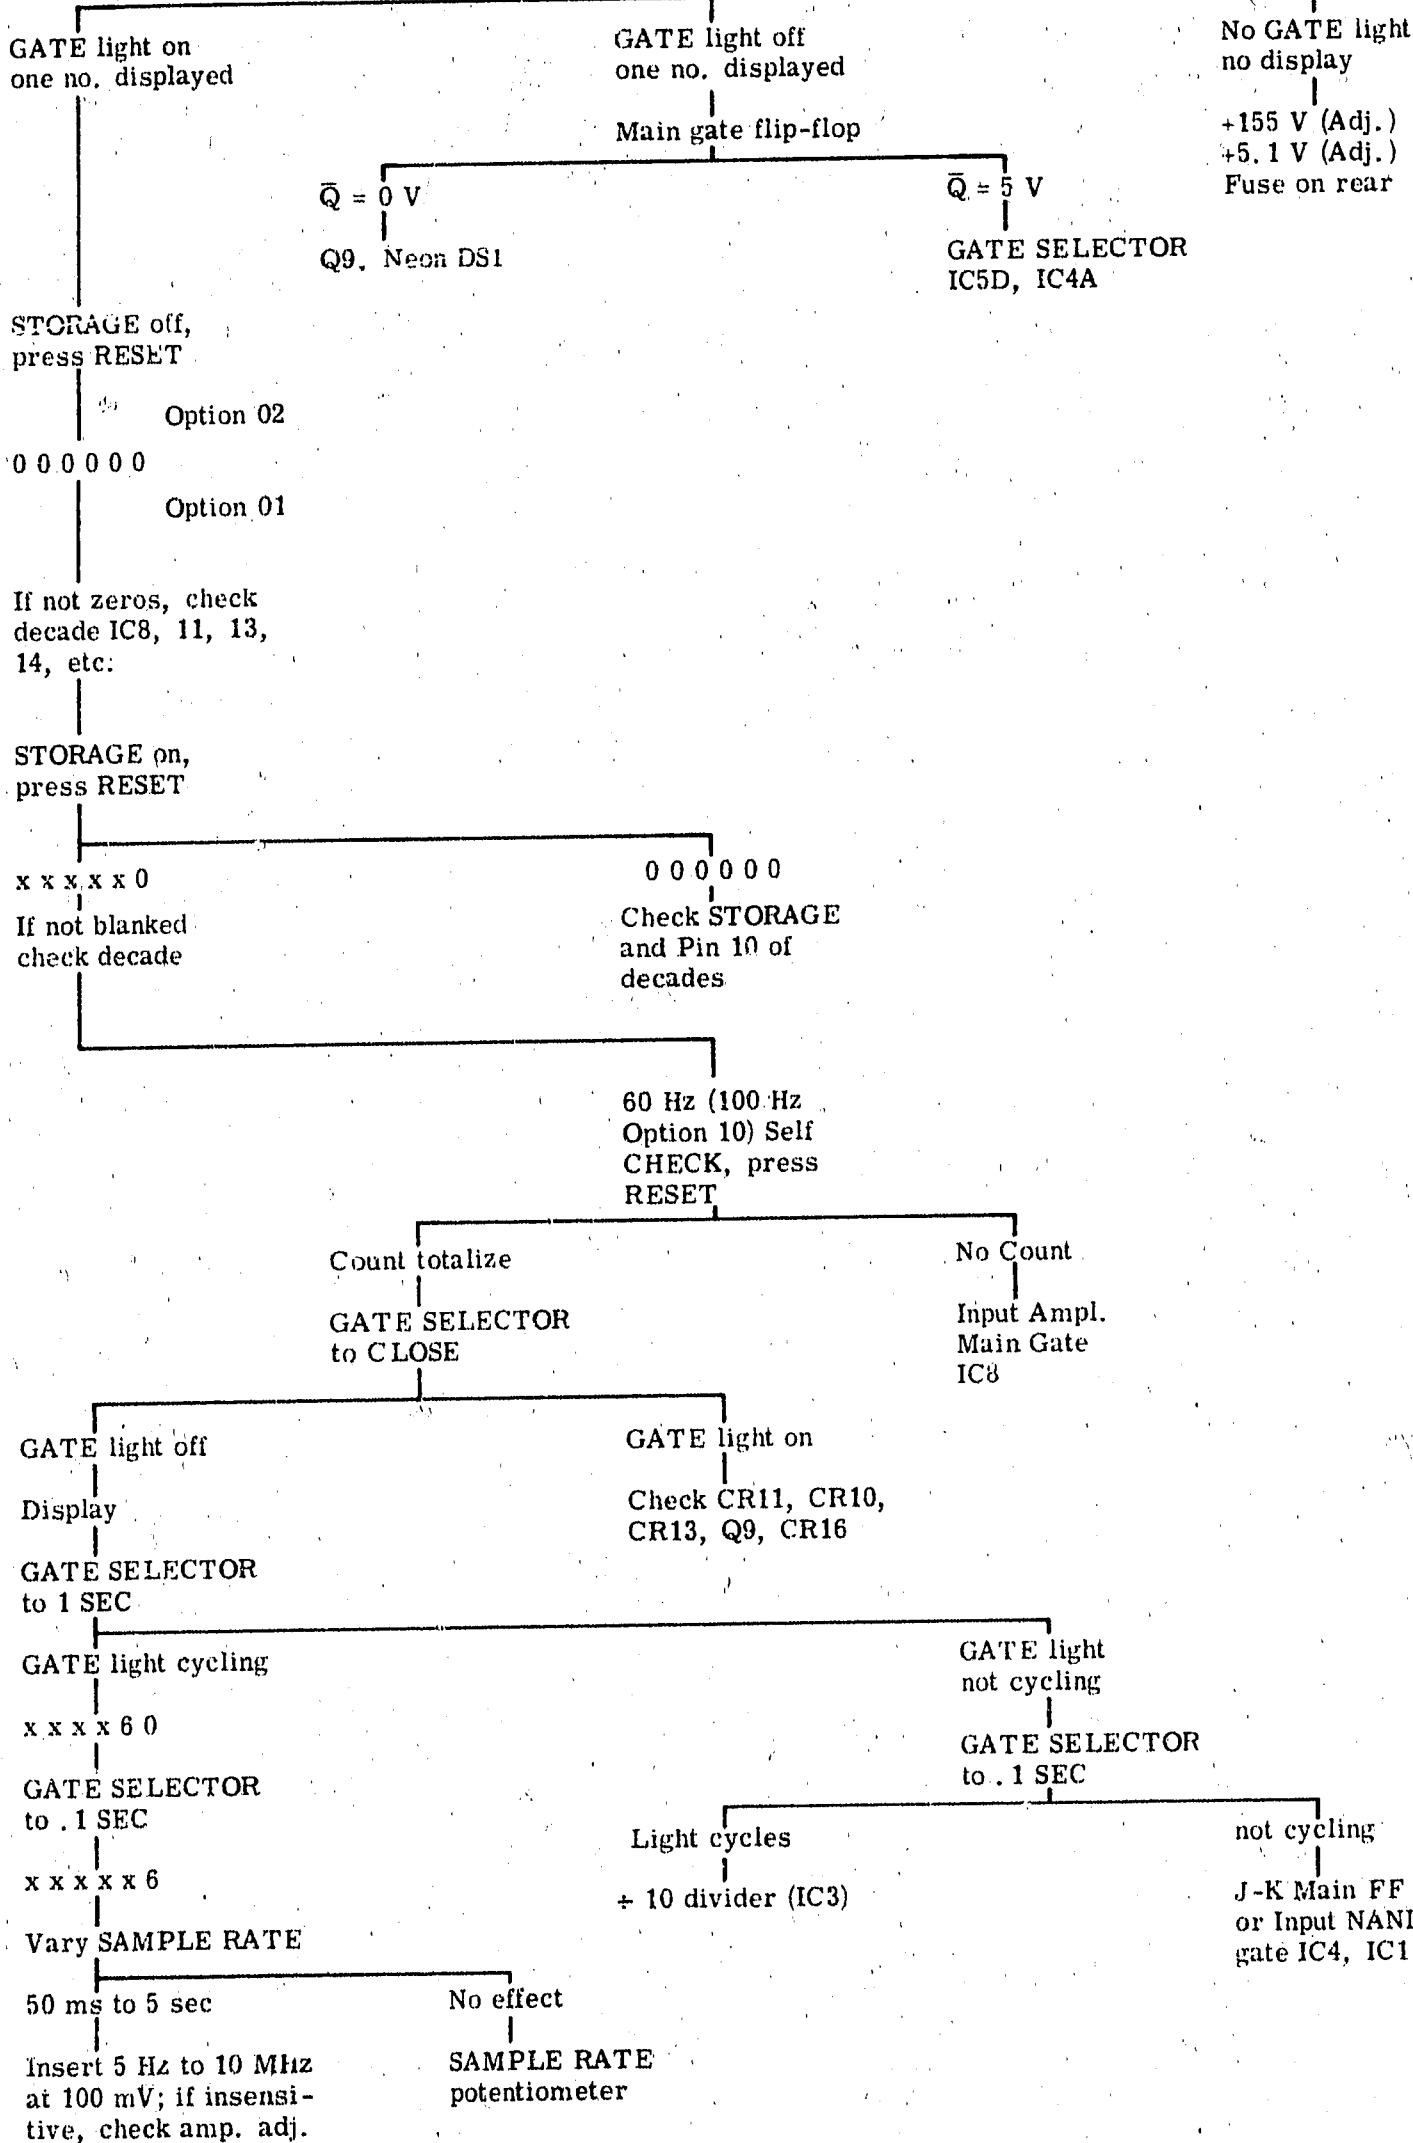

5-39. Decade Counters

5-40. With the exception of IC8 (see Table 5-6) all decade counters receive signal input on pin 9 and supply a divide-by-10 output on pin 8. IC8 has its input on pin 5 and divide-by-10 output on pin 1. All decade counters provide -8421 (\overline{DCBA}) BCD output to their associated buffer storage units. Refer to Table 5-7. This output is taken from pins 1, 8, 7, and 6 on IC8 and pins 16, 2, 1, and 15 on the remaining decade counters.

5-41. Buffer Storage Units

5-42. The buffer storage units receive -8421 (\overline{DCBA}) BCD code on pins 9, 7, 8, and 10 from the decade counters when there is a negative transfer pulse at pin 5 or when pin 5 is held low (storage off). -8421 (\overline{DCBA}) output is from pins 16, 3, 1, and 14. Refer to Table 5-8.

5-43. Decoder Drivers

5-44. The decoder drivers receive -8421 (\overline{DCBA}) BCD code from the buffer storage units on pins 9, 7, 8, and 10. This information is deciphered within the unit and provides an output to one of the 10 digital display tube elements. A low (about 2 V) to an element of the display tube will light that number. Numbers which are not lighted are held high (about 85 V). Refer to Table 5-9.

Table 5-7. Decade Counter Output

Decade Counters IC11, 14, 17 Output H = High (>1.5V), L = Low (<0.4V)				
Digit	Pin Number			
	16	2	1	15
Blank	L	L	L	L
0	H	H	H	H
1	H	H	H	L
2	H	H	L	H
3	H	H	L	L
4	H	L	H	H
5	H	L	H	L
6	H	L	L	H
7	H	L	L	L
8	L	H	H	H
9	L	H	H	L

Table 5-6. High Frequency Decade Output

High Frequency Decade IC8 Output H = High (>1.5V), L = Low (<0.4V)				
Digit	Pin Number			
	1	8	7	6
0	H	H	H	H
1	H	H	H	L
2	H	H	L	H
3	H	H	L	L
4	H	L	H	H
5	H	L	H	L
6	H	L	L	H
7	H	L	L	L
8	L	H	H	H
9	L	H	H	L

Table 5-8. Buffer Storage Output

Buffer Storage Output: H=High (>2.1V); L=Low (<0.4V)				
Digit	Pin Number			
	16	3	1	14
Blank	L	L	L	L
0	H	H	H	H
1	H	H	H	L
2	H	H	L	H
3	H	H	L	L
4	H	L	H	H
5	H	L	H	L
6	H	L	L	H
7	H	L	L	L
8	L	H	H	H
9	L	H	H	L

Table 5-9. Decoder Driver

Decoder Driver (H = High, L = Low)															
Digit	Input L = < 0.4V, H = > 2.1V				10 Line Output H = > 55 V, L = < 3 V										Number Lighted
	Pin Number				Pin Number										
	9	7	8	10	1	2	3	4	11	12	13	14	15	16	
Blank	L	L	L	L	H	H	H	H	H	H	H	H	H	H	None
0	H	H	H	H	L	H	H	H	H	H	H	H	H	H	0
1	H	H	H	L	H	L	H	H	H	H	H	H	H	H	1
2	H	H	L	H	H	H	L	H	H	H	H	H	H	H	2
3	H	H	L	L	H	H	H	L	H	H	H	H	H	H	3
4	H	L	H	H	H	H	H	H	L	H	H	H	H	H	4
5	H	L	H	L	H	H	H	H	H	L	H	H	H	H	5
6	H	L	L	H	H	H	H	H	H	H	L	H	H	H	6
7	H	L	L	L	H	H	H	H	H	H	H	L	H	H	7
8	L	H	H	H	H	H	H	H	H	H	H	H	L	H	8
9	L	H	H	L	H	H	H	H	H	H	H	H	H	L	9

PARTS

LIST

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alpha-numerical order of their reference designators and indicates the description and HP part number of each part, together with any applicable notes. Table 6-2 lists parts in alpha-numerical order of their HP part number and provides the following information on each part.

- a. Description of the part (see list of abbreviations below).
- b. Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 6-3.
- c. Manufacturer's part number.
- d. Total quantity used in the instrument (TQ column).

6-3. Miscellaneous parts are listed at the end of Table 6-1.

6-4. ORDERING INFORMATION

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Sales and Service office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard part numbers.

6-6. To obtain a part that is not listed; include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

REFERENCE DESIGNATORS			
<p>A = assembly B = motor BT = battery C = capacitor CP = coupler CR = diode DL = delay line DS = device signaling (lamp) E = misc electronic part</p>	<p>F = fuse FL = filter IC = integrated circuit J = jack K = relay L = inductor LS = loud speaker M = meter MK = microphone</p>	<p>MP = mechanical part P = plug Q = transistor R = resistor RT = thermistor S = switch T = transformer TB = terminal board TP = test point</p>	<p>V = vacuum, tube, neon bulb, photocell, etc. VR = voltage regulator W = cable X = socket Y = crystal Z = tuned cavity, network</p>
ABBREVIATIONS			
<p>A = amperes AFC = automatic frequency control AMPL = amplifier BFO = beat frequency oscillator BE CU = beryllium copper BH = binder head BP = bandpass BR = brass BWO = backward wave oscillator CCW = counter-clockwise CER = ceramic CMO = cabinet mount only COEF = coefficient COM = common COMP = composition COMPL = complete CONN = connector CP = cadmium plate CRT = cathode-ray tube CW = clockwise DEPC = deposited carbon DR = drive ELECT = electrolytic ENCAP = encapsulated EXT = external F = farads FH = flat head FIL H = fillister head FXD = fixed G = giga (10⁹) GE = germanium GL = glass GRD = ground(ed)</p>	<p>H = henries HDW = hardware HEX = hexagonal HG = mercury HR = hour(s) HZ = hertz IF = intermediate freq IMPG = impregnated INCD = incandescent INCL = include(s) INS = insulation(ed) INT = internal K = kilo = 1000 LH = left hand LIN = linear taper LK WASH = lock washer LOG = logarithmic taper LPF = low pass filter M = milli = 10⁻³ MEG = meg = 10⁶ MET FI M = metal film MET OX = metallic oxide MFR = manufacturer MHZ = mega hertz MINAT = miniature MOM = momentary MTG = mounting MY = "mylar" N = nano (10⁻⁹) N/C = normally closed NE = neon NI PL = nickel plate</p>	<p>N/O = normally open NPO = negative positive zero (zero temperature coefficient) NPN = negative-positive-negative NRFR = not recommended for field replacement NSR = not separately replaceable OBD = order by description OH = oval head OX = oxide P = peak PC = printed circuit PF = picofarads = 10⁻¹² farads PH BRZ = phosphor bronze PHL = Phillips PIV = peak inverse voltage PNP = positive-negative-positive P/O = part of POLY = polystyrene PORC = porcelain POS = position(s) POT = potentiometer PP = peak-to-peak PT = point PWV = peak working voltage RECT = rectifier RF = radio frequency RH = round head or right hand</p>	<p>RMO = rack mount only RMS = root-mean square RWV = reverse working voltage S-B = slow-blow SCR = screw SE = selenium SECT = section(s) SEMICON = semiconductor SI = silicon SIL = silver SL = slide SPG = spring SPL = special SST = stainless steel SR = split ring STL = steel TA = tantalum TD = time delay TGL = toggle THD = thread TI = titanium TOL = tolerance TRIM = trimmer TWT = traveling wave tube U = micro = 10⁻⁶ VAR = variable VDCW = dc working volts W/ = with W = watts WIV = working inverse voltage WW = wirewound W/O = without</p>

Section VI
Parts

Table 6-1. Reference Designation Index

Reference Designation	hp Part No.	Description #	Note
A1	05221-6002	ASSY:INPUT AMPLIFIER BOARD	
	05221-2002	BOARD:BLANK PC	
A1C1	0160-2255	C:FXD CER 8.2±0.25PF 500VDCW	
A1C2	0180-0291	C:FXD ELECT 1UF 10% 35VDCW	
A1C3	0180-0229	C:FXD ELECT 33 UF 10% 10VDCW	
A1C4	0180-0137	C:FXD ELECT 100 UF 20% 10VDCW	
A1C5	0180-2250	C:FXD CER 5.1±0.25 PF 500VDCW	
A1C6	0180-0291	C:FXD ELECT 1UF 10% 35VDCW	
A1C7	0160-2257	C:FXD 10 PF 5% 500VDCW	
A1CR1	1901-0040	DIODE:SILICON 30MA 30WV	
A1CR2	1901-0040	DIODE:SILICON 30MA 30WV	
A1CR3	1901-0040	DIODE:SILICON 30MA 30WV	
A1Q1	1855-0053	TRANSISTOR:SILICON FET N CHANNEL	
A1Q2	1853-0036	TRANSISTOR:SILICON PNP 2N3906	
A1Q3	1854-0215	TRANSISTOR:SILICON NPN 2N3904	
A1Q4	1853-0036	TRANSISTOR:SILICON PNP 2N3906	
A1Q5	1854-0019	TRANSISTOR:SILICON NPN	
A1Q6	1854-0019	TRANSISTOR:SILICON NPN	
A1Q7	1854-0215	TRANSISTOR:SILICON NPN 2N3904	
A1Q8	1853-0036	TRANSISTOR:SILICON PNP 2N3906	
A1Q9	1853-0036	TRANSISTOR;SILICON PNP 2N3906	
A1R1	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A1R2	0684-4711	R:FXD COMP 470 OHM 10% 1/4W	
A1R3	0757-0927	R:FXD MET FLM 1.3K OHM 2% 1/4W	
A1R4	0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	
A1R5	0757-0931	R:FXD MET FLM 2000 OHM 2% 1/4W	
A1R6	0757-0945	R:FXD MET FLM 7500 OHM 2% 1/4W	
A1R7	0683-5615	R:FXD COMP 560 OHM 5% 1/4W	
A1R8	0757-0904	R:FXD MET FLM 150 OHM 2% 1/4W	
A1R9	0757-0925	R:FXD MET FLM 1.1K OHM 2% 1/4W	
A1R10	0757-0939	R:FXD MET FLM 4.3K OHM 2% 1/4W	
A1R11	0757-0934	R:FXD MET FLM 3.7K OHM 2% 1/4W	

See introduction to this section for ordering information

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
A1R12	0757-0917	R:FXD MET FLM 510 OHM 2% 1/4W	
A1R13	0757-0924	R:FXD MET FLM 1.0K OHM 2% 1/4W	
A1R14	0757-0932	R:FXD MET FLM 2.2K OHM 2% 1/4W	
A1R15	0757-0920	R:FXD MET FLM 680 OHM 2% 1/4W	
A1R16	0683-6815	R:FXD COMP 680 OHM 5% 1/4W	
A1R17	0683-2025	R:FXD COMP 2000 OHM 5% 1/4W	
A1R18	0757-0912	R:FXD MET FLM 330 OHM 2% 1/4W	
A1R19	0683-8215	R:FXD COMP 820 OHM 5% 1/4W	
A1R20	2100-1757	R:VAR WW 500 OHM 10% LIN 1/2W	
A1R21	0683-2225	R:FXD COMP 2200 OHM 5% 1/4W	
A2	05221-6001	ASSY:COUNTER BOARD	
	05221-2001	BOARD:BLANK PC	
A2C1	0160-2257	C:FXD CER 10 PF 5% 500VDCW	
A2C2	0140-0149	C:FXD MICA 47 PF 5%	
A2C3	0160-2250	C:FXD CER 5.1±0.25 PF 500VDCW	
A2C4	0160-2257	C:FXD CER 10 PF 5% 500VDCW	
A2C5	0160-0299	C:FXD MY 1800 PF 10% 200VDCW	
A2C6	0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	
A2C7	0140-0193	C:FXD MICA 82 PF 5%	
A2C8	0140-0193	C:FXD MICA 82 PF 5%	
A2C9	0180-0229	C:FXD ELECT 33 UF 10% 10VDCW	
A2C10	0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	
A2C11	0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	
A2CR1	1901-0081	DIODE:SILICON 50 VOLTS WORKING	
A2CR2	1901-0040	DIODE:SILICON 30MA 30WV	
A2CR3	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR4	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR5	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR6	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR7	1901-0081	DIODE:SILICON 50 VOLTS WORKING	
A2CR8	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR9	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR10	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR11	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	

See introduction to this section for ordering information

Section VI
Parts

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
A2CR12	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR13	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR14	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR15	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR16	1901-0081	DIODE:SILICON 50 VOLTS WORKING	
A2CR17	1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60PIV	
A2CR18	1902-0197	DIODE:BREAKDOWN:SILICON 82.5V 5%	
A2CR19	1902-0197	DIODE:BREAKDOWN:SILICON 82.5V 5%	
A2CR20	1901-0025	DIODE:SILICON 100WV 100MA	
A2CR21	1901-0025	DIODE:SILICON 100WV 100MA	
A2CR22	1901-0025	DIODE:SILICON 100WV 100MA	
A2CR23	1901-0025	DIODE:SILICON 100WV 100MA	
A2DS1	1970-0025	DIGITAL DISPLAY TUBE	
A2DS2	1970-0025	DIGITAL DISPLAY TUBE	
A2DS3	1970-0025	DIGITAL DISPLAY TUBE	
A2DS4	1790-0025	DIGITAL DISPLAY TUBE	
	1251-1556	CONNECTOR:DISPLAY TUBES	
A2IC1	1820-0068	INTEGRATED CIRCUIT SN7410N	
A2IC2	1820-0089	INTEGRATED CIRCUIT	
A2IC3	1820-0098	INTEGRATED CIRCUIT	
A2IC4	1820-0076	INTEGRATED CIRCUIT 2N7476N	
A2IC5	1820-0054	INTEGRATED CIRCUIT SN7400N	
A2IC6	1820-0092	INTEGRATED CIRCUIT	
A2IC7	1820-0116	INTEGRATED CIRCUIT	
A2IC8*	1820-0254	INTEGRATED CIRCUIT	**
A2IC9	1820-0092	INTEGRATED CIRCUIT	
A2IC10	1820-0116	INTEGRATED CIRCUIT	
A2IC11	1820-0119	INTEGRATED CIRCUIT	
A2IC12	1820-0092	INTEGRATED CIRCUIT	
A2IC13	1820-0116	INTEGRATED CIRCUIT	
A2IC14	1820-0119	INTEGRATED CIRCUIT	

**FACTORY SELECTED PART

*INSTRUMENTS WITH SERIAL PREFIX 920- MAY HAVE EITHER AN 1820-0079 OR 1820-0254 IC INSTALLED FOR A2IC8. AN 1820-0079 REQUIRES A 1K RESISTOR FOR A2R17 AND AN 1820-0254 REQUIRES A 51 OHM RESISTOR. WHEN REPLACING IC8, USE AN 1820-0254 AND CHANGE A2R17 TO 51 OHMS.

See introduction to this section for ordering information

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
A2IC15	1820-0092	INTEGRATED CIRCUIT	
A2IC16	1820-0116	INTEGRATED CIRCUIT	
A2IC17	1820-0119	INTEGRATED CIRCUIT	
A2Q1	1854-0009	TRANSISTOR:SILICON NPN 2N709	
A2Q2	1854-0071	TRANSISTOR:SILICON NPN	
A2Q3	1854-0009	TRANSISTOR:SILICON NPN 2N709	
A2Q4	1854-0009	TRANSISTOR:SILICON NPN 2N709	
A2Q5	1854-0009	TRANSISTOR:SILICON NPN 2N709	
A2Q6	1854-0071	TRANSISTOR:SILICON NPN	
A2Q7	1854-0071	TRANSISTOR:SILICON NPN	
A2Q8	1854-0071	TRANSISTOR:SILICON NPN	
A2Q9	1854-0232	TRANSISTOR:SILICON NPN	
A2R1	0683-8235	R:FXD COMP 82K OHM 5% 1/4W	
A2R2	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A2R3	0683-5135	R:FXD COMP 51K OHM 5% 1/4W	
A2R4	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A2R5	0683-5135	R:FXD COMP 51K OHM 5% 1/4W	
A2R6	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A2R7	0683-1045	R:FXD COMP 100K OHMS 5% 1/4W	
A2R8	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A2R9	0683-4325	R:FXD COMP 4300 OHM 5% 1/4W	
A2R10	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A2R11	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A2R12	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A2R13	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A2R14	0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	
A2R15	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A2R16	0683-5115	R:FXD COMP 510 OHM 5% 1/4W	
A2R17*	0683-5105	R:FXD COMP 51 OHM 5% 1/4W	**
A2R18	0683-5635	R:FXD COMP 56K OHMS 5% 1/4W	
A2R19	0683-1035	R:FXD COMP 10K OHM 5% 1/4W	
A2R20	0683-5635	R:FXD COMP 56K OHMS 5% 1/4W	

**FACTORY SELECTED PART

*INSTRUMENTS WITH SERIAL PREFIX 920- MAY HAVE EITHER AN 1820-0079 OR 1820-0254 IC INSTALLED FOR A2IC8. AN 1820-0079 REQUIRES A 1K RESISTOR FOR A2R17 AND AN 1820-0254 REQUIRES A 51 OHM RESISTOR. WHEN REPLACING IC8, USE AN 1820-0254 AND CHANGE A2R17 TO 51 OHMS.

See introduction to this section for ordering information

Section VI
Parts

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
A2R21	0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	
A2R22	0683-1035	R:FXD COMP 10K OHM 5% 1/4W	
A2R23	0683-1035	R:FXD COMP 10K OHM 5% 1/4W	
A2R24	0683-2035	R:FXD COMP 20K OHM 5% 1/4W	
A2R25	0683-1035	R:FXD COMP 10K OHM 5% 1/4W	
A2R26	0683-5635	R:FXD COMP 56K OHMS 5% 1/4W	
A2R27	0683-1035	R:FXD COMP 10K OHM 5% 1/4W	
A2R28	0683-2035	R:FXD COMP 20K OHM 5% 1/4W	
A2R29	0683-5635	R:FXD COMP 56K OHMS 5% 1/4W	
A2R30	0683-4715	R:FXD COMP 470 OHM 5% 1/4W	
A2R31	0683-1525	R:FXD COMP 1500 OHM 5% 1/4W	
A2R32	0683-2735	R:FXD COMP 27K OHM 5% 1/4W	
A2R33	0683-1045	R:FXD COMP 100K OHMS 5% 1/4W	
A2R34	0683-2035	R:FXD COMP 20K OHM 5% 1/4W	
A2R35	0683-2035	R:FXD COMP 20K OHM 5% 1/4W	
A2R36	0683-2035	R:FXD COMP 20K OHM 5% 1/4W	
A2R37	0683-2035	R:FXD COMP 20K OHM 5% 1/4W	
A3	05221-6003	ASSY:POWER SUPPLY BOARD (5221A ONLY)	
	05221-2003	BOARD:BLANK PC	
	05221-6010	ASSY:POWER SUPPLY BOARD (5321A ONLY)	
	05221-2010	BOARD:BLANK PC	
A3C1	0180-2102	C:FXD ELECT 700 UF +75-10% 25VDCW	
A3C2	0180-2101	C:FXD ELECT 4000 UF +75-10% 15VDCW	
A3C3	0180-1780	C:FXD ELECT 500 UF +75-10% 10VDCW	
A3C4	0180-0032	C:FXD ELECT 10 UF +75-10% 12VDCW	
A3C5	0180-0032	C:FXD ELECT 10 UF +75-10% 12VDCW	
A3C6	0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW (5321A ONLY)	
A3CR1	1901-0028	DIODE:SILICON 400 PIV 0.5 AMP	
A3CR2	1901-0028	DIODE:SILICON 400 PIV 0.5 AMP	
A3CR3	1901-0028	DIODE:SILICON 400 PIV 0.5 AMP	
A3CR4	1901-0028	DIODE:SILICON 400 PIV 0.5 AMP	
A3CR5	1901-0049	DIODE:SILICON 50PIV	
A3CR6	1901-0049	DIODE:SILICON 50PIV	
A3CR7	1901-0049	DIODE:SILICON 50PIV	
A3CR8	1901-0049	DIODE:SILICON 50PIV	
A3CR9	1901-0200	DIODE:SILICON 100 PIV 3A	
A3CR10	1901-0200	DIODE:SILICON 100 PIV 3A	
A3CR11	1901-0200	DIODE:SILICON 100 PIV 3A	

See introduction to this section for ordering information

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
A3CR12	1901-0200	DIODE:SILICON 100 PIV 3A	
A3CR13	1902-3036	DIODE BREAKDOWN:SILICON 3.16V	
A3CR14	1902-3036	DIODE BREAKDOWN:SILICON 3.16V	
A3CR15	1902-0031	DIODE BREAKDOWN:12.7V 5%	
A3CR16	1902-3036	DIODE BREAKDOWN:SILICON 3.16V	
A3CR17	1902-3059	DIODE BREAKDOWN:SILICON 3.83V 5%	
A3Q1	1854-0039	TRANSISTOR:SILICON 2N3053	
A3Q2	1205-0050 1854-0232 1205-0061	HEAT DISSIPATOR TRANSISTOR:SILICON NPN HEAT DISSIPATOR	
A3Q3	1854-0071	TRANSISTOR:SILICON NPN	
A3Q4	1854-0071	TRANSISTOR:SILICON NPN	
A3R1	2100-1758	R:VAR WW 1K OHM 10% LIN 1/2W	
A3R2	0686-5135	R:FXD COMP 51K OHM 5% 1/2W	
A3R3	0683-6815	R:FXD COMP 680 OHM 5% 1/4W	
A3R4	0761-0031	R:FXD MET OX 82K OHM 5% 1/2W	
A3R5	0683-1315	R:FXD COMP 130 OHM 5% 1/4W	
A3R6	2100-1756	R:VAR WW 200 OHM 10% LIN 1/2W	
A3R7	0683-3615	R:FXD COMP 360 OHM 5% 1/4W	
A3R8	0683-1315	R:FXD COMP 130 OHM 5% 1/4W	
A3R9	0683-1055	R:FXD COMP 1 MEGOHM 5% 1/4W (5321A ONLY)	
A3R10	0683-1055	R:FXD COMP 1 MEGOHM 5% 1/4W (5321A ONLY)	
A3R11	0683-5145	R:FXD COMP 510K OHM 5% 1/4W (5321A ONLY)	
A3RT1	0839-0021	THERMISTOR:DISC 500 OHM 10%	
CHASSIS PARTS			
C1	0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	
C2	0160-3043	C:FXD CER 2 X 0.005 UF 20% 250WVAC	
DS1	2140-0018	LAMP:GLOW NE-2E	
	5040-0234 5040-0235	LAMPHOLDER BASE:LAMPHOLDER	

See introduction to this section for ordering information

Section VI
Parts

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
F1	2110-0320	FUSE:CARTRIDGE 0.15 AMP SLOW BLOW	
	2110-0201	FUSE:CARTRIDGE 0.25 AMP SLOW BLOW	
	1400-0084	FUSEHOLDER:EXTRACTOR POST TYPE	
	2190-0037	WASHER:LOCK SST FOR 1/2 THREAD	
	2950-0038	NUT:HEX SST 1/2-24 X 11/16	
	0900-0016	"O" RING:11/16"	
J1	1250-0083	CONNECTOR:BNC	
J2	1250-0083	CONNECTOR:BNC	
J3	1251-2357	CONNECTOR:POWER 3 PIN MALE	
L1	9140-0136	COIL:FXD RF 22 UH	
L2	9140-0136	COIL:FXD RF 22 UH	
MP1	05216-4006	HOLDER:POWER SUPPLY (5221A ONLY)	
MP1	05321-00007	CHASSIS:MAIN (5321A ONLY)	
MP2	05221-4001	CASE:MAIN BOARD (BLACK PLASTIC)	
MP3	05221-0004	SPACER:FRONT PANEL (5221A ONLY)	
MP3	05321-00006	BRACKET:POWER SUPPLY BOARD (5321A ONLY)	
MP4	05221-4002	FRAME:WINDOW (5221A ONLY)	
MP4	05321-00008	SPRING:WINDOW (5321A ONLY)	
MP5	05221-4003	WINDOW (5221A ONLY)	
MP5	05321-40001	WINDOW (5321A ONLY)	
MP6	05321-00001	CHASSIS:POWER SUPPLY (5321A ONLY)	
Q1	1854-0063	TRANSISTOR:NPN SILICON 2N3055	
	1200-0043	INSULATOR:TRANSISTOR MOUNTING	
	1200-0041	SOCKET:TRANSISTOR	
	0370-0103	KNOB:BLK W/ARROW 5/8IN. OD 1/4 IN. SHAFT	
	0370-0134	KNOB:ROUND, RED 1/2 DIA (5321A ONLY)	

See introduction to this section for ordering information

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
R2	2100-0318	R:VAR 250K OHM 20% 1/4W/SPST SW (5221A ONLY)	
R1	2100-0273	R:VAR 3 MEGOHM 20% 1/8W	
	2100-2573	R:VAR COMP 250K OHM 20% LIN 1/4W (5321A ONLY)	
	0370-0103	KNOB:BLK W/ARROW 5/8 IN. OD 1/4 IN. SHAFT (5221A ONLY)	
	0370-0102	KNOB:RED BAR (5321A ONLY)	
S1	3100-2072	SWITCH:ROTARY (5221A ONLY) INCLUDES:	
	3130-0041	SHIELD:SWITCH	
	5040-0218	COUPLER	
	3100-2424	SWITCH:ROTARY (5321A ONLY)	
	0370-0077	KNOB:5/8 SK BAR (5221A ONLY)	
	0370-0099	KNOB:SKIRTED BAR 5/8 DIA (5321A ONLY)	
S2	3101-0052	SWITCH:PUSHBUTTON SPST	
S3		NOT ASSIGNED	
S4		NSR:P/O R2	
S5	3101-0957	SWITCH:TOGGLE DPDT	
S6	3101-1234	SWITCH:SLIDE DPDT	
T1	9100-2438	TRANSFORMER	
W1	05221-6004	CABLE ASSY:MAIN (5221A ONLY)	
	0180-0376	C:FXD 0.47 UF 35 VDCW	
	0683-2025	R:FXD 2000 OHM 1/4W	
	05321-60008	CABLE ASSY:MAIN (5321A ONLY)	
	0180-0376	C:FXD 0.47 UF 35 VDCW	
	0683-2025	R:FXD 2000 OHM 1/4W	
		NOTE: YELLOW LEAD OF MAIN CABLE ASSEMBLY (05221-6004 OR 05321-60008) CONNECTED AT A2(11) IS MOVED TO A2(8). THE ADDED 2000 OHM RESISTOR IS CONNECTED BETWEEN A2(11) AND A2(8). THE ADDED 0.47 UF CAPACITOR IS CONNECTED BETWEEN A2(8) AND GROUND AT A2(R,N).	

See introduction to this section for ordering information

Section VI
Parts

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
W2	05221-6007	CABLE ASSY:POWER (5221A ONLY)	
W1	05321-60014	CABLE ASSY:MAIN (5321A OPT 010)	
W2	05321-60003	CABLE ASSY:POWER (5321A ONLY)	
W3	8120-1348	CABLE ASSY:POWER CORD	
XA1	1251-0158	CONNECTOR:6-CONTACT	
XA2	1251-0159	CONNECTOR:30-CONTACT	
XA3	1251-0194	CONNECTOR:PRINTED CIRCUIT 15-CONTACT	
	5000-0230	INSULATOR:P.C. BOARD (5321A ONLY)	

See introduction to this section for ordering information

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
OPT 001		(ADD THE FOLLOWING PARTS TO A2 (05221-6001) LISTING)	
A2	05221-6005	ASSY:COUNTER BOARD	
A2CR24	1901-0025	DIODE:SILICON 100WV 100MA	
A2DS5	1970-0025	DIGITAL DISPLAY TUBE	
A2IC18	1820-0092	INTEGRATED CIRCUIT	
A2IC19	1820-0116	INTEGRATED CIRCUIT	
A2IC20	1820-0119	INTEGRATED CIRCUIT	
A2R38	0683-2035	R:FXD COMP 20K OHM 5% 1/4W	
OPT 002		(ADD THE FOLLOWING PARTS TO OPT 001 AND A2 LISTING)	
A2	05221-6006	ASSY:COUNTER BOARD	
A2CR25	1901-0025	DIODE:SILICON 100WV 100MA	
A2DS6	1970-0025	DIGITAL DISPLAY TUBE	
A2IC21	1820-0092	INTEGRATED CIRCUIT	
A2IC22	1820-0116	INTEGRATED CIRCUIT	
A2IC23	1820-0119	INTEGRATED CIRCUIT	
A2R39	0683-2035	R:FXD COMP 20K OHM 5% 1/4W	
OPT 003			
A4	05221-6027	ASSY:TIME BASE 1 MHZ	
A4	05221-2014	BOARD:BLANK	
A4C1	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A4C2	0160-0127	C:FXD CER 1.0 UF 20% 25VDCW	
A4C3	0160-2143	C:FXD CER 0.002 UF +80-20% 1000VDCW	
A4C4	0150-0093	C:FXD CER 0.01 UF +80-10% 100VDCW	
A4C5	0160-2205	C:FXD MICA 120 PF 5% 300VDCW	
A4C6	0121-0046	C:VAR 9-35 PF	
A4C7	0160-2259	C:FXD CER 12 PF 5% 500VDCW	
A4C8	0160-2218	C:FXD MICA 1000 PF 5% 300VDCW	
A4IC1	1820-0098	INTEGRATED CIRCUIT	
A4IC2	1820-0098	INTEGRATED CIRCUIT	
A4IC3	1820-0098	INTEGRATED CIRCUIT	
A4IC4	1820-0098	INTEGRATED CIRCUIT	
A4L1	9100-1666	COIL:FXD RF 3600 UH	

See introduction to this section for ordering information

Section VI
Parts

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
OPT 003 (CONT'D)			
A4Q1	1854-0071	TRANSISTOR:SILICON NPN	
A4Q2	1854-0071	TRANSISTOR:SILICON NPN	
A4R1	0683-3035	R:FXD COMP 30K OHM 5% 1/4W	
A4R2	0683-3025	R:FXD COMP 3K OHM 5% 1/4W	
A4R3	0683-1035	R:FXD COMP 10K OHM 5% 1/4W	
A4R4	0683-1015	R:FXD COMP 100 OHM 5% 1/4W	
A4R5	0683-1015	R:FXD COMP 100 OHM 5% 1/4W	
A4R6	0683-3025	R:FXD COMP 3K OHM 5% 1/4W	
A4R7	0683-1045	R:FXD COMP 100K OHM 5% 1/4W	
A4R8	0683-2235	R:FXD COMP 22K OHM 5% 1/4W	
A4R9	0683-1035	R:FXD COMP 10K OHM 5% 1/4W	
A4R10	0683-1525	R:FXD COMP 1.5K OHM 5% 1/4W	
A4R11	0675-1021	R:FXD COMP 1K OHM 10% 1/8W	
A4R12	0675-1021	R:FXD COMP 1K OHM 10% 1/8W	
A4R13	0675-1021	R:FXD COMP 1K OHM 10% 1/8W	
A4R14	0675-1021	R:FXD COMP 1K OHM 10% 1/8W	
A4R15	0683-1025	R:FXD COMP 1K OHM 5% 1/4W	
A4Y1	0410-0142	CRYSTAL:1 MHZ	
XA4	1251-0158	CONNECTOR:6-CONTACT	
	05216-0007	BRACKET:TIME BASE BOARD (5221A)	
	05221-6032	CABLE:TIME BASE BOARD (5221A)	
	05221-6035	CABLE:ASSY (5221A)	
A2	05221-6029	ASSY:COUNTER BOARD (5221A)	
		MAKE THE FOLLOWING MODIFICATIONS TO A2 (05221-6001) PARTS LIST (5221A)	
	05321-00010	BRACKET:MOUNTING (5321A)	
	05321-00011	BRACKET:MOUNTING (5321A)	
	05321-60011	CABLE:TIME BASE (5321A)	
	05321-60012	CABLE:ASSY (5321A)	

See introduction to this section for ordering information

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
OPT 003 (CONT'D)			
DELETE			
A2R2	0683-1025	R:FXD COMP 1K OHM 5% 1/4W	
A2R3	0683-5135	R:FXD COMP 51K OHM 5% 1/4W	
A2R7	0683-1045	R:FXD COMP 100K OHM 5% 1/4W	
A2CR1	1901-0081	DIODE:SILICON 50V 10NS 6PF	
A2IC2	1820-0089	INTEGRATED CIRCUIT	
ADD			
A2R2	0683-5135	R:FXD COMP 51K OHM 5% 1/4W	
A2R7	0683-6825	R:FXD COMP 6800 OHM 5% 1/4W	
A2R40	0683-6825	R:FXD COMP 6800 OHM 5% 1/4W	
A2C12	0150-0014	C:FXD CER 0.005 UF MIN 500VDCW	
A2IC2	1820-0098	INTEGRATED CIRCUIT	
OPT 004			
A1	05221-6034	INPUT AMPLIFIER BOARD	
DELETE			
(CHANGE A1 PARTS LIST AS FOLLOWS)			
A1R2	0684-4711	R:FXD COMP 470 OHM 10% 1/4W	
A1C5	0160-2250	C:FXD CER 5.1 PF 500VDCW	
ADD			
A1R2	0683-2235	R:FXD COMP 22K OHM 5% 1/4W	
A1C5	0160-0363	C:FXD MICA 620 PF 5% 500VDCW	
A1C8	0140-0214	C:FXD MICA 60 PF 5% 500VDCW	
OPT 010			
(CHANGE A2 PARTS LIST AS FOLLOWS)			
A2	05221-6021	ASSY:COUNTER BOARD	
DELETE			
A2R1	0683-8235	R:FXD COMP 82K OHM 5% 1/4W	
A2R3	0683-5135	R:FXD COMP 51K OHM 5% 1/4W	
A2IC2	1820-0089	INTEGRATED CIRCUIT	
W1	05221-6004	CABLE:ASSY MAIN (5221A ONLY)	
W1	05321-60008	CABLE:ASSY MAIN (5321A ONLY)	

See introduction to this section for ordering information


Section VI
Parts

Table 6-1. Reference Designation Index (Cont'd)

Reference Designation	hp Part No.	Description #	Note
OPT 010 (CONT'D)			
ADD			
A2R1	0683-1545	R:FXD COMP 150K OHM 5% 1/4W	
A2R3	0683-1545	R:FXD COMP 150K OHM 5% 1/4W	
A2IC2	1820-0098	INTEGRATED CIRCUIT	
A2C12	0170-0021	C:FXD CER 0.0047 UF 10% 400VDCW	
W1	05221-6036	CABLE:ASSY MAIN (5221A ONLY)	
W1	05321-60014	CABLE:ASSY MAIN (5321A ONLY)	
C3	0160-0006	CHASSIS PART C:FXD CER 1000 PF 10% 600VDCW	


See introduction to this section for ordering information

Figure 6-1. Mode 5221A Cabinet Parts

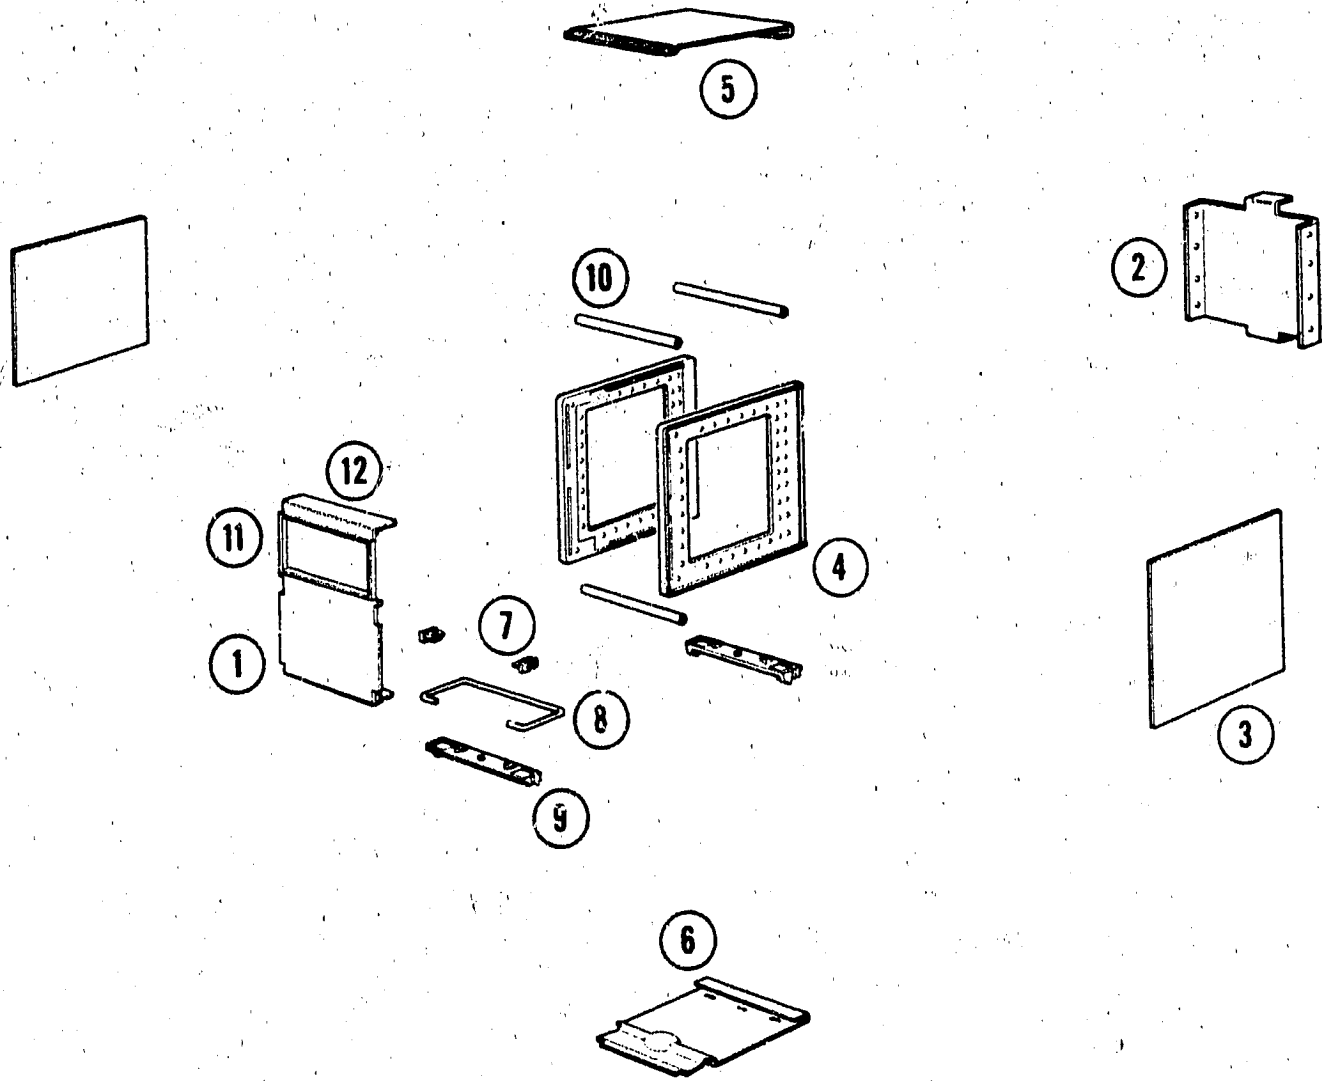

Item	Description	HP Part No.	Quantity
1.	Front Panel	05221-0001	1
2.	Rear Panel	05221-0014	1
3.	Side Cover	5000-0702	2
4.	Side Frame	5060-0702	2
5.	Top Cover	5060-0714	1
6.	Bottom Cover	5000-0713	1
7.	Hinge	5040-0700	2
8.	Tilt Stand	1490-0031	1
9.	Foot Assembly	5060-0727	2
10.	Spacer	5020-0700	3
11.	Window Frame	05221-4002	1
12.	Trim, Top Front	05221-0002	1

Figure 6-2. Model 5321A Cabinet Parts

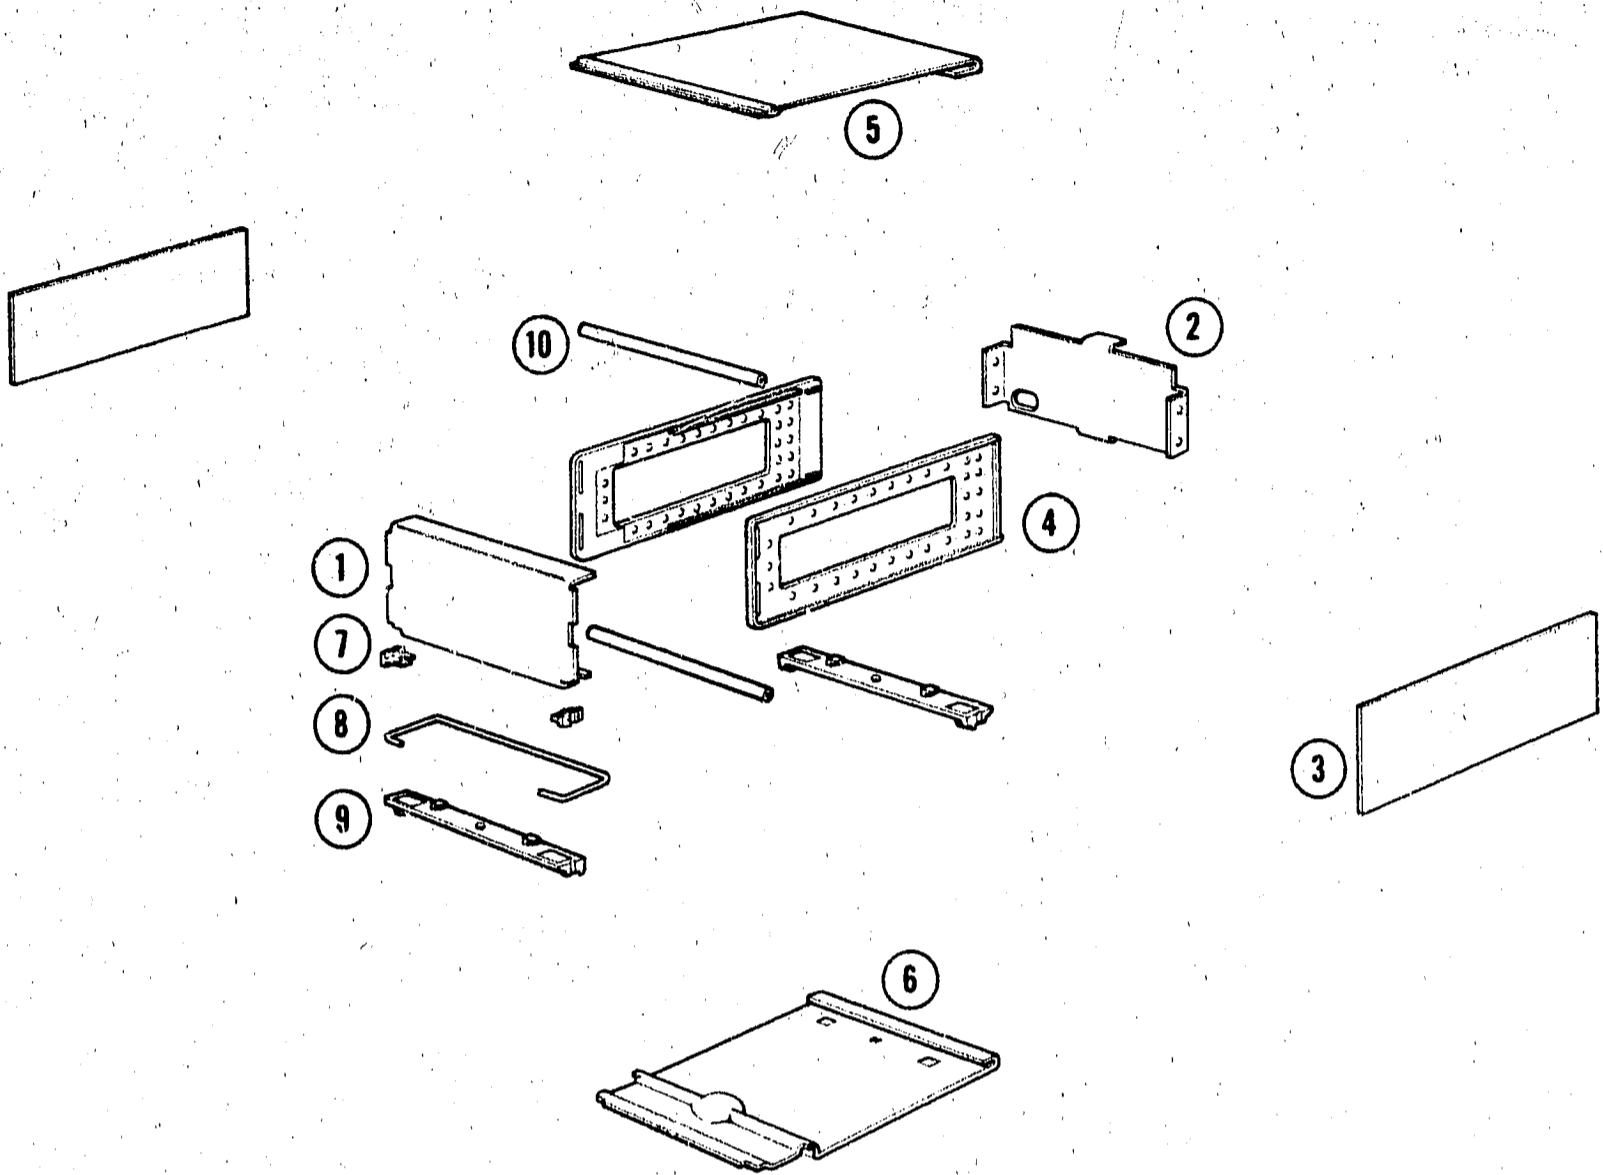

Item	Description	HP Part No.	Quantity
1.	Front Panel	05321-00003	1
2.	Rear Panel	05321-00012	1
3.	Side Cover	5000-0700	2
4.	Side Frame	5060-0700	2
5.	Top Cover	5060-0724	1
6.	Bottom Cover	5000-0719	1
7.	Hinge	5040-0700	2
8.	Tilt Stand	1490-0032	1
9.	Foot Assembly	5060-0728	2
10.	Spacer	5020-0701	2

Table 6-2. Replaceable Parts

hp Stock No.	Description #	Mfr.	Mfr. Part No.	TQ	TQ
				5221	5321
0140-0149	C:FXD MICA 47 PF 5%	28480	0140-0149	1	1
0140-0193	C:FXD MICA 82 PF 5%	28480	0140-0193	2	2
0150-0014	C:FXD CER 0.005 UF MIN 500VDCW				
0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	91418	TA	2	3
0150-0119	C:FXD CER 2 X 0.01 UF 20% 250WVAC	56289	36C219A	1	1
0160-0299	C:FXD MY 1800 PF 10% 200VDCW	28480	0160-0299	1	1
0160-2250	C:FXD CER 5.1±0.25 PF 500VDCW	72982	301-000-COHO-519E	2	2
0160-2255	C:FXD CER 8.2±0.25 PF 500VDCW	72982	301-NPO-8.2 PF	1	1
0160-2257	C:FXD CER 10 PF 5% 500VDCW	72982	301-000-COHO-100J	3	3
0160-3043	C:FXD CER 2 X 0.005 UF 20% 250WVAC				
0170-0040	C:FXD MY 0.047 UF 10% 200VDCW	28480	0170-0040	2	2
0180-0032	C:FXD ELECT 10 UF +75-10% 12VDCW	28480	0180-0032	2	2
0180-0137	C:FXD ELECT 100 UF 20% 10VDCW	28480	0180-0137	1	1
0180-0229	C:FXD ELECT 33 UF 10% 10VDCW	28480	0180-0229	2	2
0180-0291	C:FXD ELECT 1UF 10% 35VDCW	56289	150D105X9035A2	2	2
0180-1780	C:FXD ELECT 500 UF +75-10% 10VDCW	28480	0180-1780	1	1
0180-2101	C:FXD ELECT 4000 UF +75-10% 15VDCW	28480	0180-2101	1	1
0180-2102	C:FXD ELECT 700 UF +75-10% 25VDCW	28480	0180-2102	1	1
0370-0077	KNOB:5/8 SKIRTED BAR	28480	0370-0077	1	
0370-0099	KNOB:SKIRTED BAR 5/8" DIA	28480	0370-0099		1
0370-0102	KNOB:RED BAR	28480	0370-0102		1
0370-0103	KNOB:BLK W/ARROW 5/8 IN. OD 1/4 IN. SHAFT	28480	0370-0103	2	
0370-0134	KNOB:ROUND, RED 1/2" DIA	28480	0370-0134		1
0683-1025	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB 1025	4	4
0683-1035	R:FXD COMP 10K OHM 5% 1/4W	01121	CB 1035	6	6
0683-1045	R:FXD COMP 100K OHMS 5% 1/4W	01121	CB 1045	2	2
0683-1055	R:FXD COMP 1 MEGOHM 5% 1/4W	01121	CB 1055		2
0683-1315	R:FXD COMP 130 OHM 5% 1/4W	01121	CB 1315	2	2
0683-1525	R:FXD COMP 1500 OHM 5% 1/4W	01121	CB 1525	1	1
0683-2025	R:FXD COMP 2000 OHM 5% 1/4W	01121	CB 2025	1	1
0683-2035	R:FXD COMP 20K OHM 5% 1/4W	01121	CB 2035	6	6
0683-2225	R:FXD COMP 2200 OHM 5% 1/4W				
0683-2425	R:FXD COMP 2400 OHM 5% 1/4W	01121	CB 2425	1	1
0683-2735	R:FXD COMP 27K OHM 5% 1/4W	01121	CB 2735	1	1
0683-3615	R:FXD COMP 360 OHM 5% 1/4W	01121	CB 3615	1	1
0683-3925	R:FXD COMP 3900 OHM 5% 1/4W	01121	CB 3925	1	1
0683-4325	R:FXD COMP 4300 OHM 5% 1/4W	01121	CB 4325	1	1
0683-4715	R:FXD COMP 470 OHM 5% 1/4W	01121	CB 4715	1	1
0683-5105	R:FXD COMP 51 OHM 5% 1/4W	01121	CB 5105	1	1
0683-5115	R:FXD COMP 510 OHM 5% 1/4W	01121	CB 5115	4	4

See list of abbreviations in introduction to this section

Section VI
Parts

Table 6-2. Replaceable Parts (Cont'd)

hp Stock No.	Description #	Mfr.	Mfr. Part No.	TQ	TQ
				5221	5321
0683-5125	R:FXD COMP 5100 OHM 5% 1/4W	01121	CB 5125	5	5
0683-5135	R:FXD COMP 51K OHM 5% 1/4W	01121	CB 5135	2	2
0683-5145	R:FXD COMP 510K OHM 5% 1/4W	01121	CB 5145		1
0683-5615	R:FXD COMP 560 OHM 5% 1/4W	01121	CB 5615	1	1
0683-5635	R:FXD COMP 56K OHMS 5% 1/4W	01121	CB 5635	4	4
0683-6815	R:FXD COMP 680 OHM 5% 1/4W	01121	CB 6815	2	2
0683-6825	R:FXD COMP 6800 OHM 5% 1/4W				
0683-8215	R:FSC COMP 820 OHM 5% 1/4W	01121	EB 8235	1	1
0683-8235	R:FXD COMP 82K OHM 5% 1/4W	01121	EB 8235	1	1
0683-9115	R:FSC COMP 910 OHM 5% 1/4W	01121	CB 9115	1	1
0684-4711	R:FXD COMP 470 OHM 10% 1/4W	01121	CB 4711	1	1
0686-5135	R:FXD COMP 51K OHM 5% 1/2W	01121	EB 5135	1	1
0757-0904	R:FXD MET FLM 150 OHM 2% 1/4W				
0757-0907	R:FXD MET FLM 200 OHM 2% 1/4W	28480	0757-0907	1	1
0757-0912	R:FXD MET FLM 330 OHM 2% 1/4W	28480	0757-0912	1	1
0757-0917	R:FXD MET FLM 510 OHM 2% 1/4W	28480	0757-0917	1	1
0757-0920	R:FXD MET FLM 680 OHM 2% 1/4W	28480	0757-0920	1	1
0757-0924	R:FXD MET FLM 1.0K OHM 2% 1/4W	28480	0757-0924	1	1
0757-0925	R:FXD MET FLM 1.1K OHM 2% 1/4W	28480	0757-0925	1	1
0757-0927	R:FXD MET FLM 1.3K OHM 2% 1/4W	28480	0757-0927	1	1
0757-0931	R:FXD MET FLM 2000 OHM 2% 1/4W				
0757-0932	R:FXD MET FLM 2.2K OHM 2% 1/4W	28480	0757-0932	1	1
0757-0934	R:FXD MET FLM 2.7K OHM 2% 1/4W	28480	0757-0934	2	2
0757-0939	R:FXD MET FLM 4.3K OHM 2% 1/4W	28480	0757-0939	1	1
0757-0944	R:FXD MET FLM 6.8K OHM 2% 1/4W	28480	0757-0944	1	1
0757-0945	R:FXD MET FLM 7500 OHM 2% 1/4W				
0758-0022	R:FXD MET OX 82K OHM 5% 1/2W	28480	0758-0022	1	1
0761-0031	R:FXD MET FLM OX 82K OHM 5% 1/2W				
0839-0021	THERMISTOR:DISC 500 OHM 10%	83186	25E11	1	1
0900-0016	"O" RING: 11/16"	28480	0900-0016	1	1
1200-0041	SOCKET:TRANSISTOR				
1200-0043	INSULATOR:TRANSISTOR MOUNTING	71785	293011	1	1
1205-0050	HEAT DISSIPATOR	28480	1205-0050	1	1
1205-0061	HEAT DISSIPATOR SEMICONDUCTOR	28480	1205-0061	1	1
1250-0083	CONNECTOR:BNC	28480	1250-0083	2	2
1251-0148	CONNECTOR:POWER 3 PIN MALE	87930	1065-1	1	1
1251-0158	CONNECTOR:6-CONTACT	28480	1251-0158	1	1
1251-0159	CONNECTOR: 30-CONTACT	28480	1251-0159	1	1
1251-0194	CONNECTOR:PRINTED CIRCUIT 15-CONTACT	28480	1251-0194	1	
1251-1556	CONNECTOR:DISPLAY TUBES				
1251-2357	CONNECTOR:POWER 3 PIN MALE				

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

hp Stock No.	Description #	Mfr.	Mfr. Part No.	TQ	TQ
				5221	5321
1400-0084	FUSEHOLDER:EXTRACTOR POST TYPE	79515	342014	1	1
1820-0054	INTEGRATED CIRCUIT SN7400N	28480	1820-0054	1	1
1820-0068	INTEGRATED CIRCUIT SN7410N	28480	1820-0068	1	1
1820-0076	INTEGRATED CIRCUIT SN7476N	28480	1820-0076	1	1
1820-0089	INTEGRATED CIRCUIT	28480	1820-0089	1	1
1820-0092	INTEGRATED CIRCUIT	28480	1820-0092	4	4
1820-0098	INTEGRATED CIRCUIT	28480	1820-0098	1	1
1820-0116	INTEGRATED CIRCUIT	28480	1820-0116	4	4
1820-0119	INTEGRATED CIRCUIT	28480	1820-0119	3	3
1820-0254	INTEGRATED CIRCUIT	28480	1820-0254	1	1
1853-0036	TRANSISTOR:SILICON PNP 2N3906	28480	1853-0036	4	4
1854-0009	TRANSISTOR:SILICON NPN 2N709	07263	2N709	4	4
1854-0019	TRANSISTOR:SILICON NPN	28480	1854-0019	2	2
1854-0039	TRANSISTOR:SILICON 2N3053	02735	2N3053	1	1
1854-0063	TRANSISTOR:NPN SILICON 2N3055	02735	2N3055	1	1
1854-0071	TRANSISTOR:SILICON NPN	28480	1854-0071	6	6
1854-0215	TRANSISTOR:SILICON NPN 2N3904	28480	1854-0215	2	2
1854-0232	TRANSISTOR:SILICON NPN	28480	1854-0232	2	2
1854-0053	TRANSISTOR:SILICON FET N CHANNEL	28480	1855-0053	1	1
1901-0025	DIODE:SILICON 100WV 100MA	28480	1901-0025	4	4
1901-0028	DIODE:SILICON 400 PIV 0.5 AMP	28480	1901-0028	4	4
1901-0040	DIODE:SILICON 30MA 30WV	28480	1901-0040	4	4
1901-0049	DIODE:SILICON 50 PIV	28480	1901-0049	4	4
1901-0081	DIODE:SILICON 50 VOLTS WORKING	28480	1901-0081	3	3
1901-0200	DIODE:SILICON 100 PIV 3A	02735	1N4998	4	4
1902-0031	DIODE: BREAKDOWN:12.7V 5%	28480	1902-0031	1	1
1902-0197	DIODE BREAKDOWN:SILICON 82.5V 5%	28480	1902-0197	2	2
1902-3036	DIODE BREAKDOWN:SILICON 3.16V	28480	1902-3036	3	3
1902-3059	DIODE BREAKDOWN:SILICON 3.83V 5%	28480	1902-3059	1	1
1910-0016	DIODE:GERMANIUM 100MA AT 0.85V 60 PIV	28480	1910-0016	13	13
1970-0025	DIGITAL DISPLAY TUBE	28480	1970-0025	4	4
2100-0273	R:VAR COMP 3 MEGOHM 20% 5 CCWLOG 1/4W	28480	2100-0273	2	
2100-0318	R:VAR 250K OHM 20% 1/4W/SPST SW	28480	2100-0318	1	
2100-1756	R:VAR WW 200 OHM 10% LIN 1/2W	28480	2100-1756	2	2
2100-1757	R:VAR WW 500 OHM 10% LIN 1/2W				
2100-1758	R:VAR WW 1K OHM 10% LIN 1/2W	28480	2100-1758	1	1
2100-2573	R:VAR COMP 250K OHM 20% LIN 1/4W	28480	2100-2573		1
2110-0017	FUSE:CARTRIDGE 0.15 AMP SLOW BLOW	75915	313.150	1	1
2110-0018	FUSE:CARTRIDGE 0.25 AMP SLOW BLOW	75915	313.250	1	1
2140-0018	LAMP:GLOW NE-2E	24455	NE 2E1	1	1

See list of abbreviations in introduction to this section

Section VI
Parts

Table 6-2. Replaceable Parts (Cont'd)

hp Stock No.	Description #	Mfr.	Mfr. Part No.	TQ	TQ
				5221	5321
2190-0037	WASHER:LOCK SST FOR 1/2 THREAD	78189	1224-08	1	1
2950-0038	NUT:HEX SST 1/2-24 X 11/16	75915	903-12	1	1
3100-2072	SWITCH:ROTARY	28480	3100-2072	1	
3100-2424	SWITCH:ROTARY	28480	3100-2424		1
3101-0033	SWITCH:SLIDE DPDT	79727	6510 C	1	1
3101-0052	SWITCH:PUSHBUTTON SPST	82389	961 LESS HWD	1	1
3101-0957	SWITCH:TOGGLE DPDT	28480	3101-0957	1	1
3101-1234	SWITCH:SLIDE				
5000-0230	INSULATOR:P.C.BOARD	28480	5000-0230		1
5040-0234	LAMPHOLDER	28480	5040-0234	2	2
8120-0078	CABLE ASSY:POWER CORD	28480	8120-0078	1	1
8120-1348	CABLE: ASSY POWER CORD				
9100-2438	TRANSFORMER	28480	9100-2438	1	1
9140-0136	COIL:FXD RF 22 UH	28480	9140-0136	2	2
05216-0007	BRACKET:TIME BASE BOARD (5221A)				
05216-4006	HOLDER:POWER SUPPLY	28480	05216-4006	1	
05221-0004	SPACER:FRONT PANEL	28480	05221-0004	1	
05221-0014	REAR PANEL				
05221-2001	BOARD:BLANK PC	28480	05221-2001	1	1
05221-2002	BOARD:BLANK PC	28480	05221-2002	1	1
05221-2003	BOARD:BLANK PC	28480	05221-2003	1	
05221-2010	BOARD:BLANK PC	28480	05221-2010		1
05221-2014	BOARD:BLANK				
05221-4001	CASE:MAIN BOARD(BLACK PLASTIC)	28480	05221-4001	1	1
05221-4002	FRAME:WINDOW	28480	05221-4002	1	
05221-4003	WINDOW	28480	05221-4003	1	
05221-6001	ASSY:COUNTER BOARD	28480	05221-6001	1	1
05221-6002	ASSY:INPUT AMPLIFIER BOARD	28480	05221-6002	1	1
05221-6003	ASSY:POWER SUPPLY BOARD	28480	05221-6003	1	
05221-6004	CABLE ASSY:MAIN	28480	05221-6004	2	
05221-6005	ASSY:COUNTER BOARD				
05221-6006	ASSY:COUNTER BOARD				
05221-6007	CABLE ASSY:POWER	28480	05221-6007	1	
05221-6010	ASSY:POWER SUPPLY BOARD	28480	05221-6010		1
05221-6021	ASSY:COUNTER BOARD				
05221-6029	ASSY:COUNTER BOARD				
05221-6032	CABLE:TIME BASE BOARD (5221A)				
05221-6034	ASSY:INPUT AMPL BOARD				
05221-6035	CABLE:ASSY (5221A)				
05221-6036	CABLE:ASSY MAIN (5221A)				

See list of abbreviations in introduction to this section

Table 6-2. Replaceable Parts (Cont'd)

hp Stock No.	Description #	Mfr.	Mfr. Part No.	TQ	TQ
				5221	5321
05321-00001	CHASSIS:POWER SUPPLY	28480	05321-00001		1
05321-00004	CHASSIS:MAIN	28480	05321-00004		1
05321-00006	BRACKET:POWER SUPPLY BOARD	28480	05321-00006		1
05321-00007	BRACKET:TIME BASE BOARD (5221A)				
05321-00008	SPRING:WINDOW	28480	05321-00008		1
05321-00012	REAR PANEL				
05321-40001	WINDOW	28480	05321-40001		1
05321-60003	CABLE ASSY:POWER	28480	05321-60003		1
05321-60008	CABLE:ASSY MAIN (5321A)				
05321-60010	CABLE ASSY:MAIN	28480	05321-60010		1
05321-60014	CABLE:ASSY MAIN (5321A)				

See list of abbreviations in introduction to this section

Table 3-3. Manufacturers Code List

The following code numbers are from the Federal Supplement Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) and their latest supplements. The date of publication and the date of the supplements used appear at the bottom of each page. Alphabetical codes have been arbitrarily assigned to suppliers not appearing in the H4 Handbooks.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
00000	U. S. A Common	Any supplier of U. S.	05347	Ultronix, Inc.	San Mateo, Cal.	11236	CTS of Berne, Inc.	Berne, Ind.
00136	McCoy Electronics	Mount Holly Springs, Pa.	05397	Union Carbine Corp., Elect. Div.	New York, N. Y.	11237	Chicago Telephone of California, Inc.	So. Pasadena, Cal.
00213	Sage Electronics Corp.	Rochester, N. Y.	05574	Viking Ind. Inc.	Canoga Park, Cal.	11242	Bay State Electronics Corp.	Waltham, Mass.
00287	Cemco, Inc.	Danielson, Conn.	05593	Icore Electro-Plastics Inc.	Sunnyvale, Cal.	11312	Teledyne Inc., Microwave Div.	Palo Alto, Cal.
00334	Humidial	Colton, Calif.	05616	Cosmo Plastic (c/o Electrical Spec Co.)	Cleveland, Ohio	11314	National Seal	Downey, Cal.
00348	Mictron, Co., Inc.	Valley Stream, N. Y.	05624	Barber Colman Co.	Rockford, Ill.	11453	Precision Connector Corp.	Jamaica, N. Y.
00373	Garlock Inc.	Cherry Hill, N. J.	05728	Tiffen Optical Co.	Roslyn Heights, Long Island, N. Y.	11534	Duncan Electronics Inc.	Costa Mesa, Cal.
00656	Aerovox Corp.	New Bedford, Mass.	05729	Metro-Tel Corp.	Westbury, N. Y.	11711	General Instrument Corp. Semiconductor Division Products Group	Newark, N. J.
00779	Amp. Inc.	Harrisburg, Pa.	05783	Stewart Engineering Co.	Santa Cruz, Cal.	11717	Imperial Electronic, Inc.	Buena Park, Cal.
00781	Aircraft Radio Corp.	Boonton, N. J.	05820	Wakelield Engineering Inc.	Wakelield, Mass.	11870	Melabs, Inc.	Palo Alto, Cal.
00809	Croven, Ltd.	Whitby, Ontario, Canada	06004	Bassick Co., Div. of Stewart Warner Corp.	Bridgeport, Conn.	12136	Philadelphia Handle Co.	Camden, N. J.
00815	Northern Engineering Laboratories, Inc.	Burlington, Wis.	06090	Raychem Corp.	Redwood City, Cal.	12361	Grove Mfg. Co., Inc.	Shady Grove, Pa.
00853	Sangamo Electric Co., Pickens Div.	Pickens, S. C.	06175	Bausch and Lomb Optical Co.	Rochester, N. Y.	12574	Gulton Ind. Inc., Data System Div.	Albuquerque, N. M.
00866	Goe Engineering Co.	City of Industry, Cal.	06402	E. T. A. Products Co. of America	Chicago, Ill.	12697	Clarostat Mfg. Co.	Dover, N. H.
00891	Carl E. Holmes Corp.	Los Angeles, Cal.	06540	Amatom Electronic Hardware Co., Inc.	New Rochelle, N. Y.	12728	Elmar Filter Corp.	W. Haven, Conn.
00929	Microlab Inc.	Livingston, N. J.	06555	Beede Electrical Instrument Co., Inc.	Penacook, N. H.	12859	Nippon Electric Co., Ltd.	Tokyo, Japan
01002	General Electric Co., Capacitor Dept.	Hudson Falls, N. Y.	06666	General Devices Co., Inc.	Indianapolis, Ind.	12881	Metex Electronics Corp.	Clark, N. J.
01009	Alden Products Co.	Brockton, Mass.	06751	Components Inc., Ariz. Div.	Phoenix, Arizona	12930	Delta Semiconductor Inc.	Newport Beach, Cal.
01121	Allen Bradley Co.	Milwaukee, Wis.	06812	Torrington Mfg. Co., West Div.	Van Nuys, Cal.	12954	Dickson Electronics Corp.	Scottsdale, Arizona
01255	Litton Industries, Inc.	Beverly Hills, Cal.	06980	Varian Assoc. Etmac Div.	San Carlos, Cal.	13019	Airco Supply Co., Inc.	Wichita, Kansas
01281	TRW Semiconductors, Inc.	Lawndale, Cal.	07088	Kelvin Electric Co.	Van Nuys, Cal.	13061	Wilco Products	Detroit, Mich.
01295	Texas Instruments, Inc., Transistor Products Div.	Dallas, Texas	07126	Digitran Co.	Pasadena, Cal.	13103	Thermolloy	Dallas, Texas
01349	The Alliance Mfg. Co.	Alliance, Ohio	07137	Transistor Electronics Corp.	Minneapolis, Minn.	13327	Solitron Devices Inc.	Tappan, N. Y.
01538	Small Parts Inc.	Los Angeles, Cal.	07138	Westinghouse Electric Corp., Electronic Tube Div.	Elmira, N. Y.	13396	Telefunken (GmbH)	Hanover, Germany
01589	Pacific Relays, Inc.	Van Nuys, Cal.	07148	Filmohm Corp.	New York, N. Y.	13835	Midland-Wright Div. of Pacific Industries, Inc.	Kansas City, Kansas
01670	Gudebrod Bros. Silk Co.	New York, N. Y.	07233	Cinch-Graphik Co.	City of Industry, Cal.	14099	Sem-Tech	Newbury Park, Cal.
01930	Amerock Corp.	Rockford, Ill.	07256	Silicon Transistor Corp.	Carle Place, N. Y.	14193	Calif. Resistor Corp.	Santa Monica, Cal.
01960	Pulse Engineering Co.	Santa Clara, Cal.	07261	Avnet Corp.	Culver City, Cal.	14298	American Components, Inc.	Conshohocken, Pa.
02114	Ferroxcube Corp. of America	Saugerties, N. Y.	07263	Fairchild Camera & Inst. Corp., Semiconductor Div.	Mountain View, Cal.	14433	ITT Semiconductor, a Div. of Int. Telephone and Telegraph Corporation	West Palm Beach, Fla.
02116	Wheelock Signals, Inc.	Long Branch, N. J.	07322	Minnesota Rubber Co.	Minneapolis, Minn.	14493	Hewlett-Packard Company	Loveland, Colo.
02286	Cole Rubber and Plastics Inc.	Sunnyvale, Cal.	07387	Birtcher Corp., The	Monterey Park, Cal.	14655	Cornell Dublier Electric Corp.	Newark, N. J.
02660	Amphenol-Borg Electronics Corp.	Broadview, Ill.	07397	Sylvania Elect. Prod. Inc., Mt. View Operations	Mountain View, Cal.	14674	Corning Glass-Works	Corning, N. Y.
02735	Radio Corp. of America, Semiconductor and Materials Division	Somerville, N. J.	07700	Technical Wire Products Inc.	Cranford, N. J.	14752	Electro Cube Inc.	San Gabriel, Cal.
02771	Vocaline Co. of America, Inc.	Old Saybrook, Conn.	07829	Bodine Elect.	Chicago, Ill.	14960	Williams Mfg. Co.	San Jose, Cal.
02777	Hopkins Engineering Co.	San Fernando, Cal.	07910	Continental Device Corp.	Hawthorne, Cal.	15108	The Sphere Co., Inc.	Little Falls, N. J.
02875	Hudson Tool & Die	Newark, N. J.	07933	Raytheon Mfg. Co., Semiconductor Div.	Mountain View, Cal.	15203	Webster Electronics Co.	New York, N. Y.
03296	Nylon Molding Corp.	Springfield, N. J.	07980	Hewlett-Packard Co., New Jersey Division	Rockaway, N. J.	15287	Scionics Corp.	Northridge, Cal.
03508	G. E. Semiconductor Prod. Dept.	Syracuse, N. Y.	08145	U. S. Engineering Co.	Los Angeles, Cal.	15291	Adjustable Bushing Co.	N. Hollywood, Cal.
03705	Apex Machine & Tool Co.	Dayton, Ohio	08289	Blinn, Delbert Co.	Pomona, Cal.	15558	Mycron Electronics	Garden City, Long Island, N. Y.
04797	Eldema Corp.	Compton, Calif.	08358	Burgess Battery Co.	Niagara Falls, Ontario, Canada	15566	Anprobe Inst. Corp.	Lynbrook, N. Y.
03818	Parker Seal Co.	Los Angeles, Cal.	08524	Deutsch Fastener Corp.	Los Angeles, Cal.	15631	Cabletronics	Costa Mesa, Cal.
03877	Transitron Electric Corp.	Wakelield, Mass.	08664	Bristol Co., The	Waterbury, Conn.	15772	Twentieth Century Coil Spring Co.	Santa Clara, Cal.
03888	Pyrofilm Resistor Co., Inc.	Cedar Knolls, N. J.	08717	Sloan Company	Sun Valley, Cal.	15801	Fenwal Elect. Inc.	Framingham, Mass.
03954	Singer Co., Diehl Div., Flinderne Plant	Sumerville, N. J.	08718	ITT Cannon Electric Inc., Phoenix Div.	Phoenix, Arizona	15818	Amelco Inc.	Mountain View, Cal.
04009	Arrow, Hart and Hegeman Elect. Co.	Hartford, Conn.	08806	General Electric Co., Miniature Lamp Dept.	Cleveland, Ohio	16037	Spruce Pine Mica Co.	Spruce Pine, N. C.
04013	Taruus Corp.	Lambertville, N. J.	08984	Mel-Rain	Indianapolis, Ind.	16179	Omni-Spectra Inc.	Detroit, Ill.
04062	Arco Electronic Inc.	Great Neck, N. Y.	09026	Babcock Relays Div.	Costa Mesa, Cal.	16352	Computer Diode Corp.	Lodi, N. J.
04217	Essex Wire	Los Angeles, Cal.	09097	Electronic Enclosures Inc.	Los Angeles, Calif.	16554	Electrold Co.	Union, N. J.
04222	H-Q Division of Aerovox	Myrtle Beach, S. C.	09134	Texas Capacitor Co.	Houston, Texas	16585	Boots Aircraft Nut Corp.	Pasadena, Cal.
04354	Precision Paper Tube Co.	Wheeling, Ill.	09145	Tech. Ind. Inc. Atohm Elect.	Burbank, Cal.	16688	Ideal Prec. Meter Co., Inc., De Jur Meter Div.	Brooklyn, N. Y.
04404	Palo Alto Division of Hewlett-Packard Co.	Palo Alto, Cal.	09250	Electro Assemblies, Inc.	Chicago, Ill.	16758	Delco Radio Div. of G. M. Corp.	Kokomo, Ind.
04651	Sylvania Electric Products, Microwave Device Div.	Mountain View, Cal.	09353	C & K Components Inc.	Newton, Mass.	17109	Thermonetics Inc.	Canoga Park, Cal.
04673	Dakota Engr. Inc.	Culver City, Cal.	09569	Mallory Battery Co. of Canada, Ltd.	Toronto, Ontario, Canada	17474	Tranex Company	Mountain View, Cal.
04713	Motorola Inc. Semiconductor Prod. Div.	Phoenix, Arizona	09795	Pennsylvania Florocarbon	Clifton Heights, Penn.	17675	Hamlin Metal Products Corp.	Akron, Ohio
04732	Filttron Co., Inc. Western Div.	Culver City, Cal.	09922	Burdy Corp.	Norwalk, Conn.	17745	Angstrom Prec. Inc.	No. Hollywood, Cal.
04773	Automatic Electric Co.	Northlake, Ill.	10214	General Transistor Western Corp.	Los Angeles, Cal.	17856	Siliconix Inc.	Sunnyvale, Cal.
04796	Sequoia Wire Co.	Redwood City, Cal.	10411	Ti-Tal, Inc.	Berkeley, Cal.	17870	McGraw-Edison Co.	Manchester, N. H.
04811	Precision Coil Spring Co.	El Monte, Cal.	10846	Carborundum Co.	Niagara Falls, N. Y.	18042	Power Design Pacific Inc.	Palo Alto, Cal.
04870	P. M. Motor Company	Westchester, Ill.				18083	Clevite Corp. Semiconductor Div.	Palo Alto, Cal.
04919	Component Mfg. Service Co.	W. Bridgewater, Mass.				18324	Signetics Corp.	Sunnyvale, Cal.
05006	Twentieth Century Plastics, Inc.	Los Angeles, Cal.				18476	Ty-Car Mfg. Co., Inc.	Holliston, Mass.
05277	Westinghouse Electric Corp. Semiconductor Dept.	Youngwood, Pa.				18486	TRW Elect. Comp. Div.	Des Plaines, Ill.

Section VI
Parts

Table 6-3. Manufacturers Code List Cont'd.

Code No.	Manufacturer	Address	Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
94870	Sarkes Tarzian, Inc.	Bloomington, Ind.	91929	Honeywell Inc., Micro Switch Division	Freeport, Ill.	96095	Hi-Q Div. of Aerovox Corp.	Olean, N. Y.
85454	Boonton Molding Company	Boonton, N. J.				96256	Thordarson-Meissner Inc.	Mt. Carmel, Ill.
85471	A. B. Boyd Co.	San Francisco, Cal.	91961	Nahm Bros. Spring Co.	Oakland, Cal.	96296	Solar Mfg. Co.	Los Angeles, Cal.
85474	R. M. Bracamonte & Co.	San Francisco, Cal.	92180	Try-Connector Corp.	Peabody, Mass.	96396	Microswitch, Div. of	
85660	Koiled Kords, Inc.	Hamden, Conn.	92367	Elgeet Optical Co., Inc.	Rochester, N. Y.		Minn.-Honeywell	Freeport, Ill.
85911	Seamless Rubber Co.	Chicago, Ill.	92607	Tensolite Insulated Wire Co., Inc.		96330	Carlton Screw Co.	Chicago, Ill.
86174	Fafnir Bearing Co.	Los Angeles, Calif.				96341	Microwave Associates, Inc.	Burlington, Mass.
86197	Clifton Precision Products Co., Inc.	Clifton Heights, Pa.	92702	IMC Magnetics Corp.	Westbury, L. I., N. Y.	96501	Excel Transformer Co.	Oakland, Cal.
			92968	Hudson Lamp Co.	Kearney, N. J.	96508	Xcelite, Inc.	Orchard Park, N. Y.
86579	Precision Rubber Products Corp.	Dayton, Ohio	93332	Sylvania Electric Prod. Inc., Semiconductor Div.	Woburn, Mass.	96733	San Fernando Elec. Mfg. Co.	San Fernando, Cal.
86684	Radio Corp. of America, Electronic Comp. & Devices Division	Harrison, N. J.	93369	Robbins & Myers Inc.	Pallisades Park, N. J.	96881	Thomsen Ind. Inc.	Long Island, N. Y.
86928	Seastrom Mfg. Co.	Glendale, Cal.	93410	Stemco Controls, Div. of Essex Wire Corp.	Mansfield, Ohio	97464	Industrial Retaining Ring Co.	Irvington, N. J.
87034	Marco Industries	Anaheim, Cal.				97539	Automatic & Precision Mfg.	Englewood, N. J.
87216	Philco Corporation (Lansdale Division)	Lansdale, Pa.	93632	Waters Mfg. Co.	Culver City, Cal.	97979	Reon Resistor Corp.	Yonkers, N. Y.
			93929	G. V. Controls	Livingston, N. J.	97983	Litton System Inc., Adler-Westrex Commun. Div.	New Rochelle, N. Y.
87473	Western Fibrous Glass Products Co.	San Francisco, Cal.	94137	General Cable Corp.	Bayonne, N. J.	98141	R-Tronics, Inc.	Jamaica, N. Y.
			94144	Raytheon Co., Comp. Div., Ind. Comp. Operations	Quincy, Mass.	98159	Rubber Teck, Inc.	Gardena, Cal.
87664	Van Waters & Rogers Inc.	San Francisco, Cal.	94148	Scientific Electronics Products, Inc.	Loveland, Colo.	98220	Hewlett-Packard Co., Medical Elec. Div.	Pasadena, Cal.
87930	Tower Mfg. Corp.	Providence, R. I.				98278	Microdot, Inc.	So. Pasadena, Cal.
88140	Cutler-Hammer, Inc.	Lincoln, Ill.	94154	Wagner Elect. Corp., Tung-Sol Div.	Newark, N. J.	98291	Sealestro Corp.	Mamaronech, N. Y.
88220	Gould-National Batteries, Inc.	St. Paul, Minn.	94197	Curtiss-Wright Corp., Electronics Div.	East Patterson, N. J.	98376	Zero Mfg. Co.	Burbank, Cal.
88698	General Mills, Inc.	Buffalo, N. Y.				98410	Etc. Inc.	Cleveland, Ohio
89231	Graybar Electric Co.	Oakland, Cal.	94222	South Chester Corp.	Chester, Pa.	98731	General Mills Inc., Electronics Div.	Minneapolis, Minn.
89473	G. E. Distributing Corp.	Schenectady, N. Y.	94330	Wire Cloth Products, Inc.	Bellwood, Ill.	98734	Paceo Division of Hewlett-Packard Co.	Palo Alto, Cal.
89479	Security Co.	Detroit, Mich.	94375	Automatic Metal Products Co.	Brooklyn, N. Y.			
89665	United Transformer Co.	Chicago, Ill.	94682	Worcester Pressed Aluminum Corp.	Worcester, Mass.	98821	North Hills Electronics, Inc.	Glen Cove, N. Y.
90030	United Shoe Machinery Corp.	Beverly, Mass.				98978	International Electronic Research Corp.	Burbank, Cal.
90179	U. S. Rubber Co., Consumer Ind. & Plastics Prod. Div.	Passaic, N. J.	94696	Magnecraft Electric Co.	Chicago, Ill.			
90365	Belleville Speciality Tool Mfg., Inc.	Belleville, Ill.	95023	George A. Philbrick Researchers, Inc.	Boston, Mass.	99109	Columbia Technical Corp.	New York, N. Y.
						99313	Varian Associates	Palo Alto, Cal.
90763	United Carr Fastener Corp.	Chicago, Ill.	95146	Alco Elect. Mfg. Co.	Lawrence, Mass.	99378	Atlee Corp.	Winchester, Mass.
90970	Bearing Engineering Co.	San Francisco, Cal.	95236	Allies Products Corp.	Dania, Fla.	99515	Marshall Ind., Capacitor Div.	Monrovia, Cal.
91146	ITT Cannon Elect. Inc.	Salem Div., Salem, Mass.	95238	Continental Connector Corp.	Woodside, N. Y.	99707	Control Switch Division, Controls Co. of America	El Segundo, Cal.
			95263	Leecraft Mfg. Co., Inc.	Long Island, N. Y.	99800	Delevan Electronics Corp.	East Aurora, N. Y.
91260	Connor Spring Mfg. Co.	San Francisco, Cal.	95265	National Coil Co.	Sheridan, Wyo.	99848	Wilco Corporation	Indianapolis, Ind.
91345	Miller Dial & Nameplate Co.	El Monte, Cal.	95275	Vitramon, Inc.	Bridgeport, Conn.	99928	Branson Corp.	Whippany, N. J.
91418	Radio Materials Co.	Chicago, Ill.	95348	Gordos Corp.	Bloomfield, N. J.	99934	Rembrandt, Inc.	Boston, Mass.
91506	Augat Inc.	Attleboro, Mass.	95354	Method Mfg. Co.	Rolling Meadows, Ill.	99942	Hoffman Electronics Corp., Semiconductor Division	El Monte, Cal.
91637	Dale Electronics, Inc.	Columbus, Nebr.	95566	Arnold Engineering Co.	Marengo, Ill.			
91632	Elco Corp.	Willow Grove, Pa.	95712	Dage Electric Co., Inc.	Franklin, Ind.	99957	Technology-Instrument Corp. of California	Newbury Park, Cal.
91673	Epiphone Inc.	New York, N. Y.	95984	Simon Mfg. Co.	Wayne, Ill.			
91737	Gremar Mfg. Co., Inc.	Wakefield, Mass.	95987	Weckesser Co.	Chicago, Ill.			
91827	K F Development Co.	Redwood City, Cal.	96067	Microwave Assoc., West, Inc.	Sunnyvale, Cal.			
91886	Malco Mfg. Inc.	Chicago, Ill.						

The following HP Vendors have no number assigned in the latest supplement to the Federal Supply Code for Manufacturers Handbook.

0000F	Malco Tool and Die	Los Angeles, Calif.	000CS	Hewlett-Packard Co., Colorado Springs Div.	Colorado Springs, Colorado	000QQ	Cooltron	Oakland, Cal.
0000Z	Willow Leather Products Corp.	Newark, N. J.	000MM	Rubber Eng. & Development	Hayward, Cal.	000WW	California Eastern Lab.	Burlington, Cal.
000AB	ETA	England	000NN	A "N" D Mfg. Co.	San Jose, Cal.	000YY	S. K. Smith Co.	Los Angeles, Cal.
000BB	Precision Instrument Comp. Co.	Van Nuys, Cal.						

00015-49
Revised: May, 1970

From: Handbook Supplements
H4-1 Dated January 1970

**BACK DATING
MANUAL
CHANGES**

SECTION VII OPTIONS AND MANUAL CHANGES

7-1. OPTIONS

7-2. Options available with the counter are listed in Table 7-1. Component part numbers for these assemblies are listed in Table 6-1.

7-3. Option 001 - 5 Digit Readout

7-4. Option 001 extends the readout display to five digits by the addition of the following components to A2 Assembly (Figure 8-4): IC18, 19, 20, DS5, CR24, and R38.

7-5. Option 002 - 6 Digit Readout

7-6. Option 002 extends the readout display to six digits by including Option 001 plus the addition of the following components to A2 Assembly (Figure 8-4): IC21, 22, 23, DS6, CR25, and R39.

7-7. Digit Display Kit

7-8. Standard instruments can be converted to Option 001 by installing a Digit Display Kit, HP Part No. 05221-6022, or Option 002 by adding two Digit Display Kits. Instruments with Option 001 can be converted to Option 002 by adding a Digit Display Kit.

7-9. Parts included in the Digit Display Kit are listed in Table 6-1.

7-10. Option 003 - 1 MHz Time Base

7-11. Option 003 changes the counter's time base from 60 Hz to 1 MHz. Option 003 specifications are

listed in Table 7-2. Counters with this option have an additional board installed (A4) and modifications added to the main board assembly (A2). A4 schematic is shown in Figure 7-1. A4 component locations are shown in Figure 7-2. Parts list for A4 Assembly is in Table 6-1.

7-12. To make A2 Assembly schematic (Figure 8-4) reflect modifications installed as Option 003, make the following changes to Figure 8-4.

- a. Change A2R2 to 51K.
- b. Replace A2R3 with A2C12, .005 μ F capacitor.
- c. Change A2R7 to 6800 ohm.
- d. Replace A2CR1 with A2R40, 6800 ohm resistor.
- e. Change A2IC2 to 1820-0098, Integrated Circuit Decade Divider.

Table 7-2. Oscillator Specifications.
(Options 003, 103 and 203)

Stability	
Aging Rate	1 part in 10^6 /month
Temperature	± 3 parts in 10^5 (0° to 50° C) ± 5 parts in 10^6 (10° to 40° C)
Line Voltage	± 1 part in 10^6 for $\pm 10\%$ variation in line voltage.

Table 7-1. Options

OPTION	DESCRIPTION	ASSEMBLY	HP PART NO.
001	5-Digit Readout	A2 Main Board	05221-6005
002	6-Digit Readout	A2 Main Board	05221-6006
003	1 MHz Crystal Time Base	A2 Main Board A4 Time Base	05221-6029 05221-6027
004	Noise Rejection 100 kHz Bandwidth	A1 Amplifier Trigger	05221-6034
010	50 Hz Operation	A2 Main Board	05221-6021
103	5-Digit Readout with 1 MHz Time Base	A2 Main Board A4 Time Base	05221-6030 05221-6027
110	5-Digit Readout with 50 Hz Operation	A2 Main Board	05221-6023
203	6-Digit Readout with 1 MHz Time Base	A2 Main Board A4 Time Base	05221-6031 05221-6027
210	6-Digit Readout with 50 Hz Operation	A2 Main Board	05221-6024

Section VII
Options and Manual Changes

7-13. Option 004 - Noise Rejection

7-14. Option 004 changes the counter's input range (Table 1-3) from 5 Hz to 10 MHz to 5 Hz to 100 kHz. Instruments with this option will have the following changes to A1 Assembly (Figure 8-3).

- a. Change A1R2 to 22k.
- b. Add A1C8 60 pF in parallel with A1CR2.
- c. Change A1C5 to 620 pFd.

Parts used with this option are listed in Table 6-1.

7-15. Option 010 - 50 Hz Operation

7-16. Option 010 permits the counter to be used from a 50 Hz power source. This option is not necessary when Option 003 is installed. Instruments with this option installed will have the following changes to A2 Assembly (Figure 8-4).

- a. Disconnect yellow wire from XA2(8)
- b. Change A2R1 and A2R3 to 150k.
- c. Change A2IC2 to 10 circuit.
- d. Add A2C12, .0047 μ Fd capacitor from XA2(8) to XA2(1).
- e. Add C3, 1000 pFd capacitor from XA2(1) to chassis ground, (external to A2 Assembly).

Parts used for this option are listed in Table 6-1.

7-17. Option 103 - 5 Digit Readout with 1 MHz Time Base

7-18. Option 103 is a combination of Options 001 and 003. See paragraphs 7-3 and 7-10 for manual changes.

7-19. Option 110 - 5 Digit Readout with 50 Hz Operation

7-20. Option 110 is a combination of Options 001 and 010. See paragraphs 7-3 and 7-15 for manual changes.

7-21. Option 203 - 6 Digit Readout with 1 MHz Time Base

7-22. Option 203 is a combination of Options 002 and 003. See paragraphs 7-5 and 7-10 for manual changes.

7-23. Option 210 - 6 Digit Readout with 50 Hz Operation

7-24. Option 210 is a combination of Options 002 and 010. See paragraphs 7-5 and 7-15 for manual changes.

7-25. MANUAL CHANGES

7-26. Current Instruments

7-27. This manual applies directly to 5221A counters with serial prefix 920 and to 5321A counters with serial prefix 920 (refer to paragraph 1-11).

7-28. Newer Instruments

7-29. As changes are made, newer instruments may have serial numbers not listed in this manual. The manuals for these instruments will be supplied with an additional "Manual Changes" sheet containing the required information; contact the nearest Hewlett-Packard Sales and Service Office for information if this sheet is missing.

7-30. Older Instruments

7-31. This manual with changes listed in Table 7-3 also applies to 5221A counters having serial prefix numbers 716 or 740, and to 5321A instruments with serial prefix numbers 812.

Table 7-3. Manual Changes

SERIAL PREFIX	MANUAL CHANGES
716	1, 2, 3(5221A only)
740	3 (5221A only)
816	3 (5321A only)
CHANGE 1: (5221A only)	
Delete green wire from S1AF(7-1/2) to wiper of SAMPLE RATE control R2. See Figure 8-3.	
CHANGE 2: (5221A only)	
Figure 8-3, A2 Main Board Assembly, A2R21: Change to 470 ohm	
Table 6-1, A2R21: Change to R:fxd, com, 470 ohm, 5%, 1/4 W; HP Part No. 0683-4715.	
CHANGE 3:	
Table 6-1:	
Change A2IC8 to "1820-0079"	
Change A2R17 to "0683-1025 1000 ohms"	
Figure 8-4 (Sheet 1):	
Change A2R17 to "1000 ohms"	
Figure 8-4 (Sheet 2):	
Change A2IC8 to "1820-0079"	

Figure 7-1. Time Base A4 (Options 003, 103, and 203), Schematic Diagram


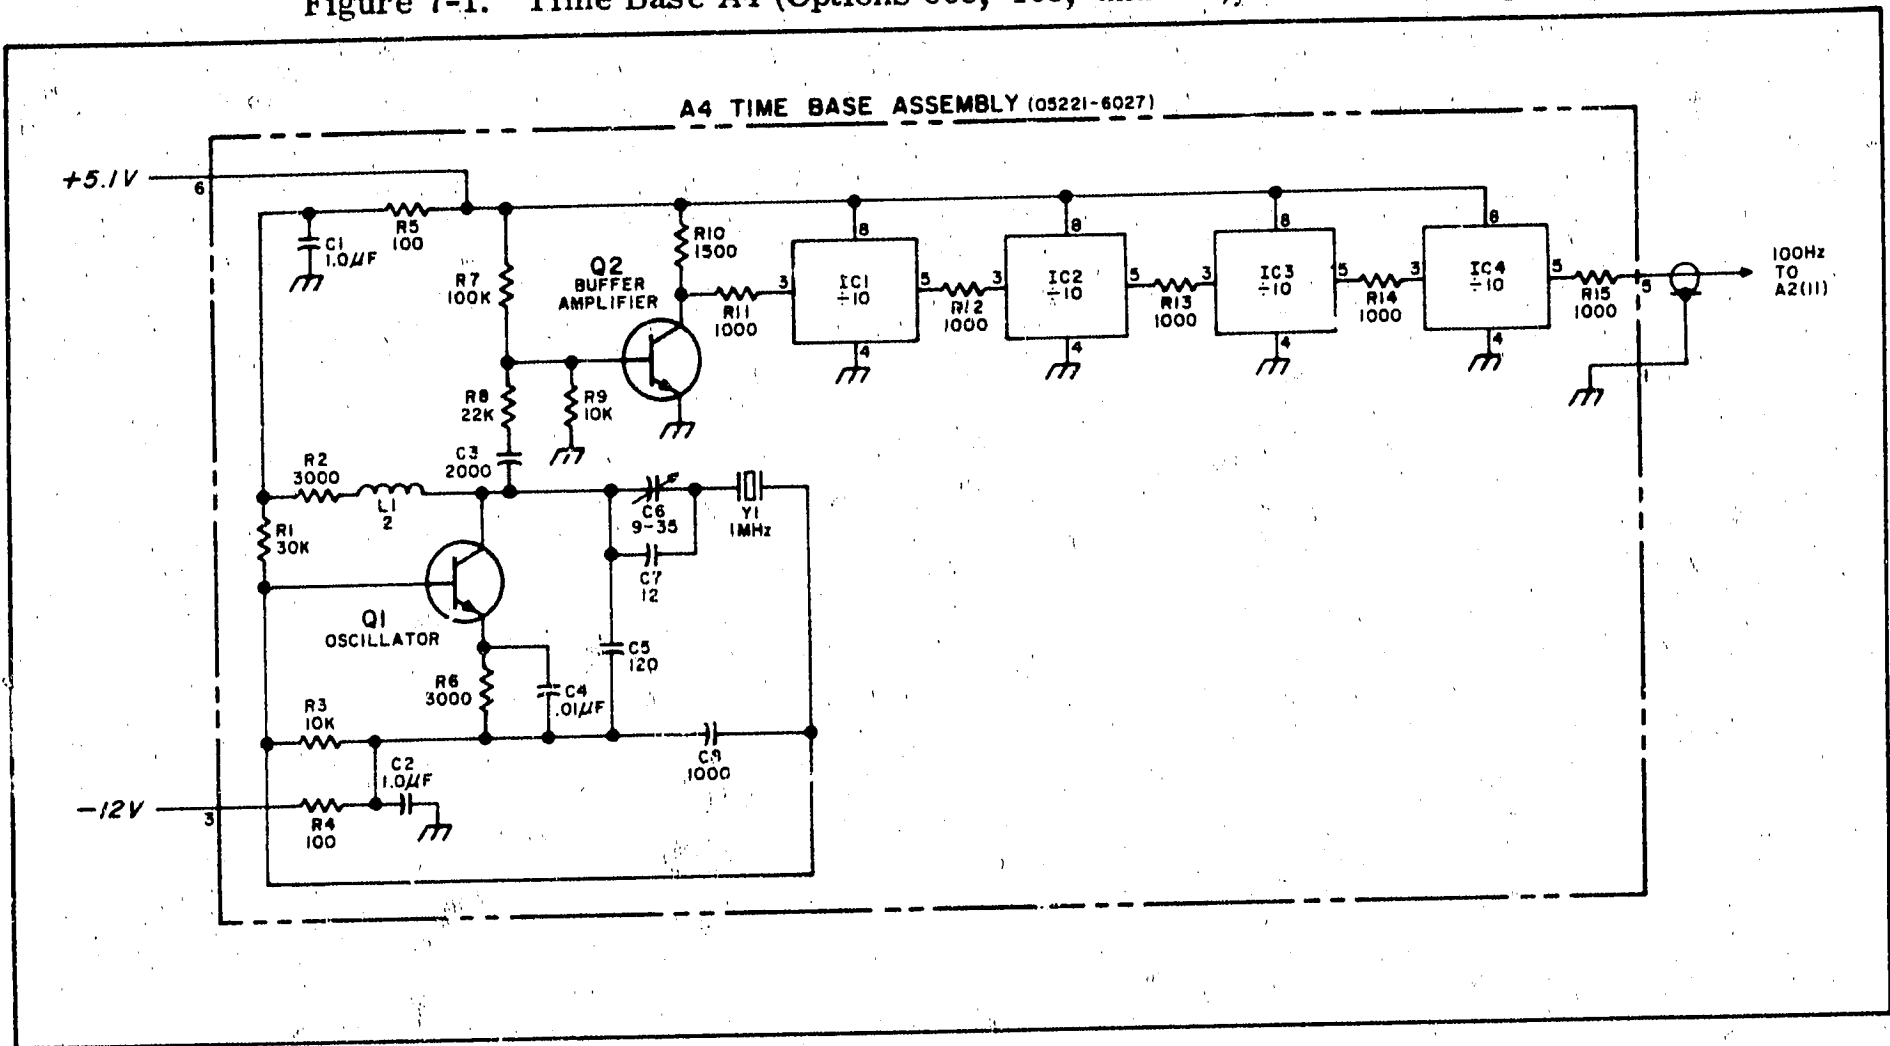


Figure 7-2. Time Base A4 (Options 003, 103, and 203), Component Location

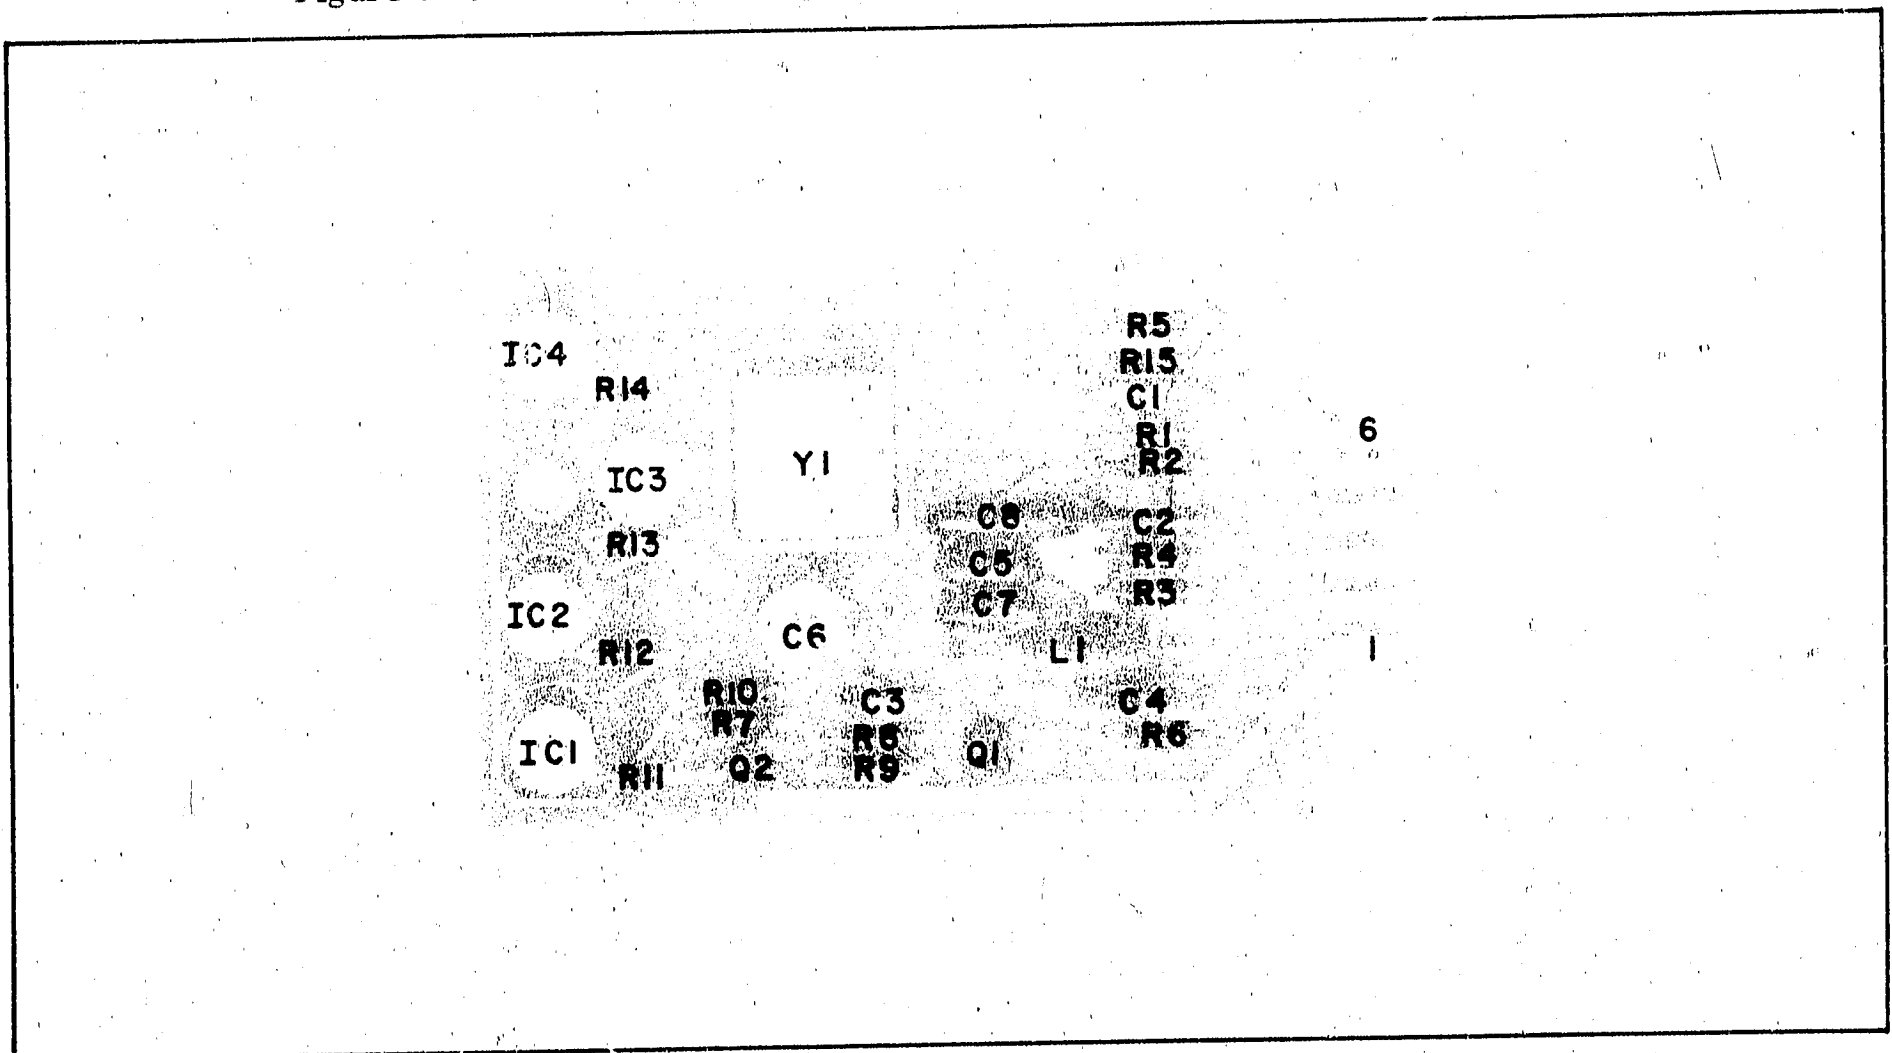

SCHEMATIC DIAGRAMS

SECTION VIII CIRCUIT DIAGRAMS

8-1. This section includes the following:

a. General notes for schematic diagrams in Figure 8-1.

b. Schematic diagrams and component location illustrations of counter circuit board assemblies in the order of their assembly designation (A1 through A3, Figures 8-2 through 8-6). These figures may also include waveforms and voltages. Top and bottom views of integrated circuits are shown with pin numbers for identification.


8-2. The diagrams, when unfolded, can be used with other parts of the manual or when the manual is closed.

8-3. Dc voltages are measured with HP Model 412A DC Voltmeter. Typical voltages are shown.

8-4. Waveforms taken with HP Model 140A Oscilloscope with the HP 1402A and 1420A Vertical and Horizontal plug-ins. Oscilloscope vertical amplifier bandwidth is 20 MHz and is used with 10:1 divider probe HP 10001A.

8-5. Shaded areas on the schematic diagrams indicate printed circuit assemblies. All components within the shaded areas are mounted on the boards.


Figure 8-1. Schematic Diagram Notes

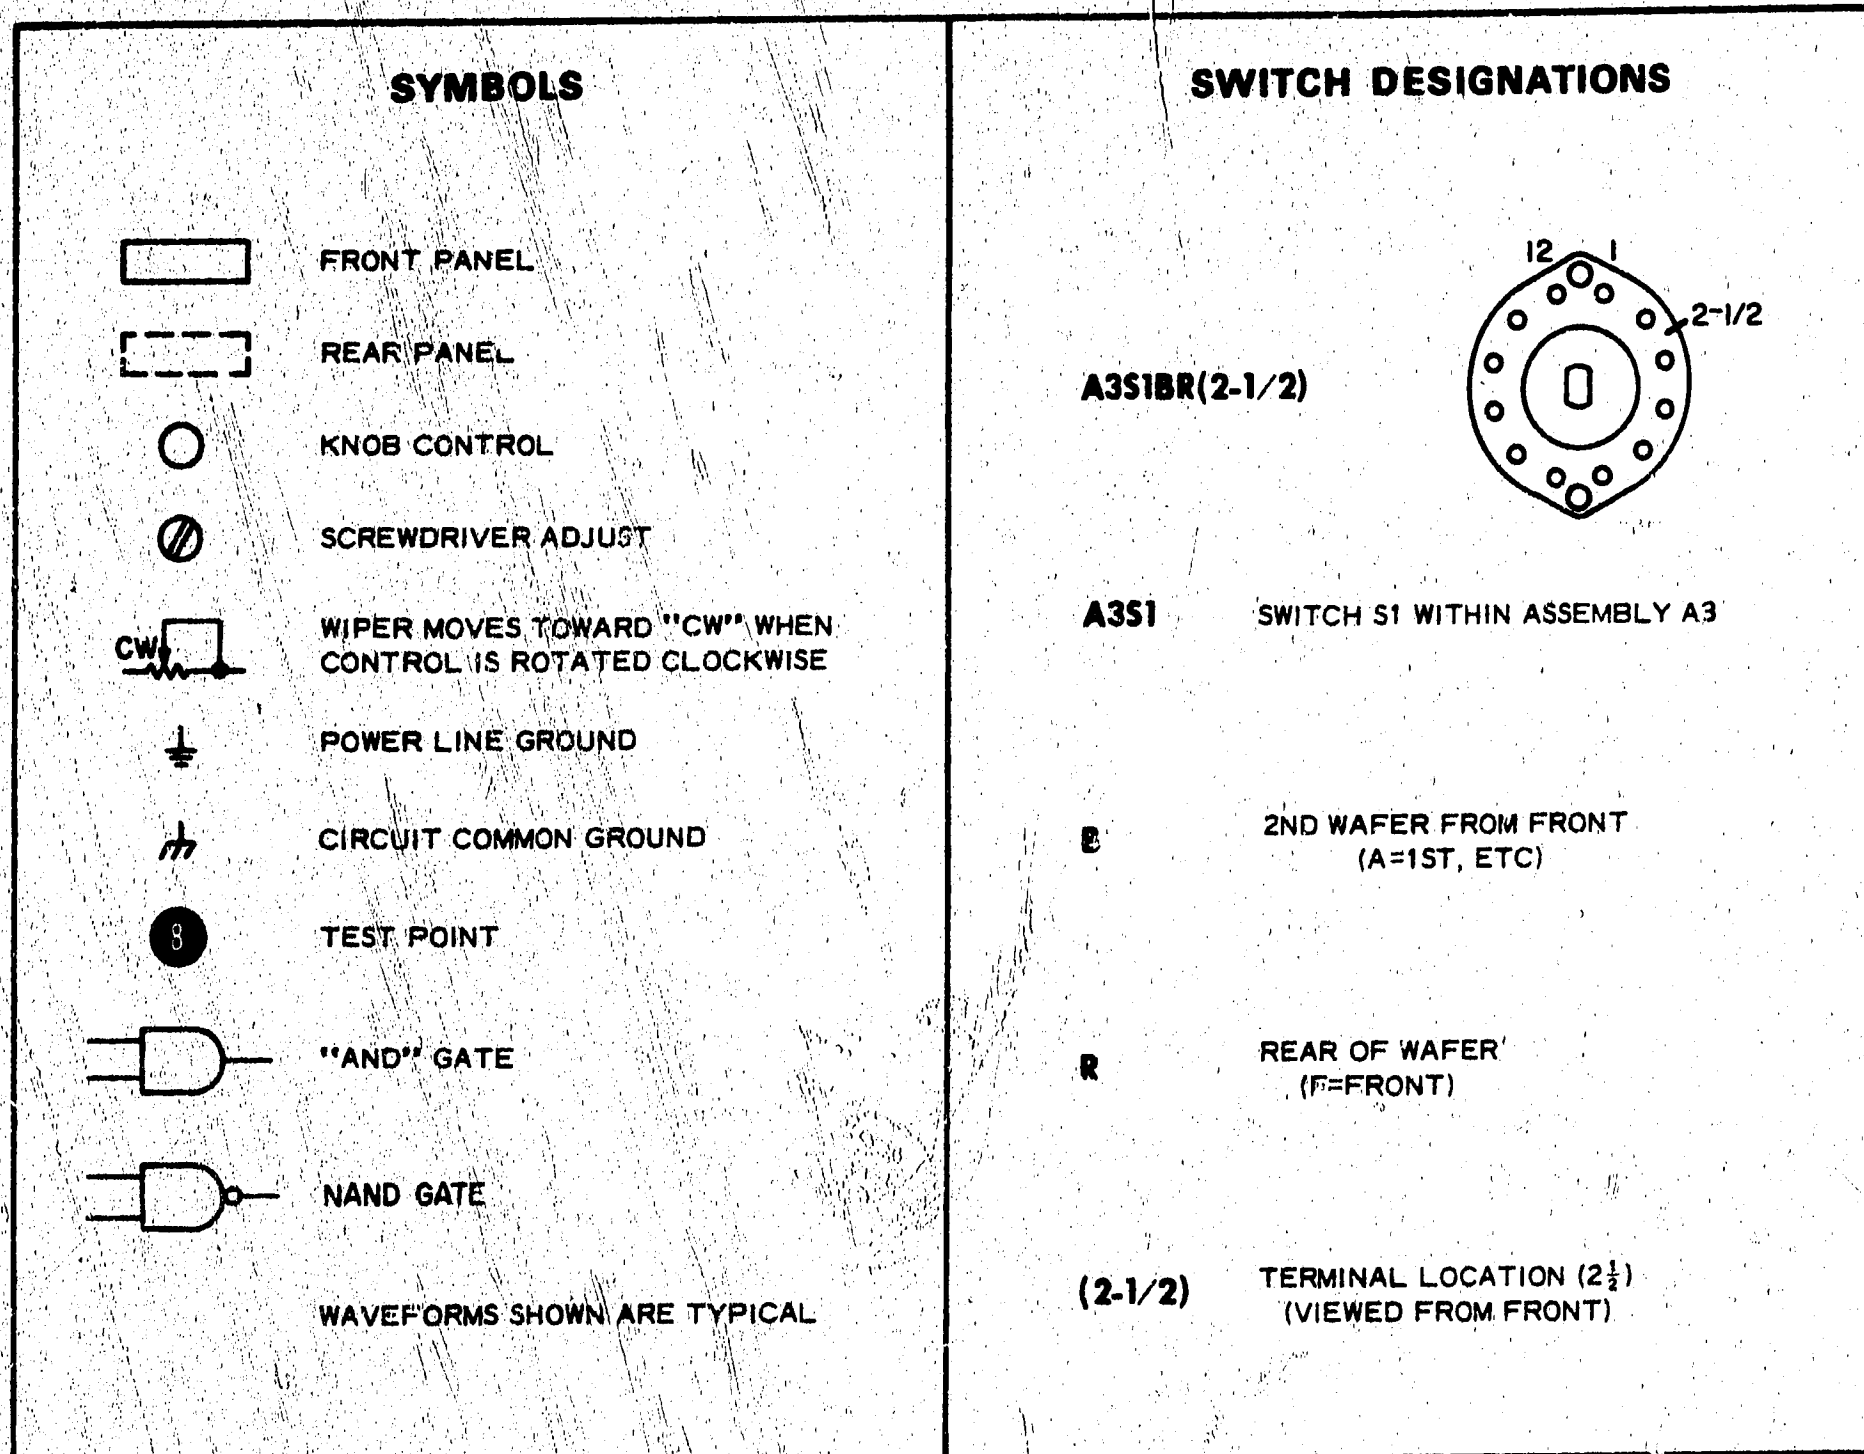


REFERENCE DESIGNATIONS

REFERENCE DESIGNATIONS WITHIN ASSEMBLIES ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.


ASSEMBLY	ABBREVIATION	COMPLETE DESCRIPTION
A25	CI	A25CI
A25A1	CR1	A25A1CR1
NO PREFIX	J3	J3

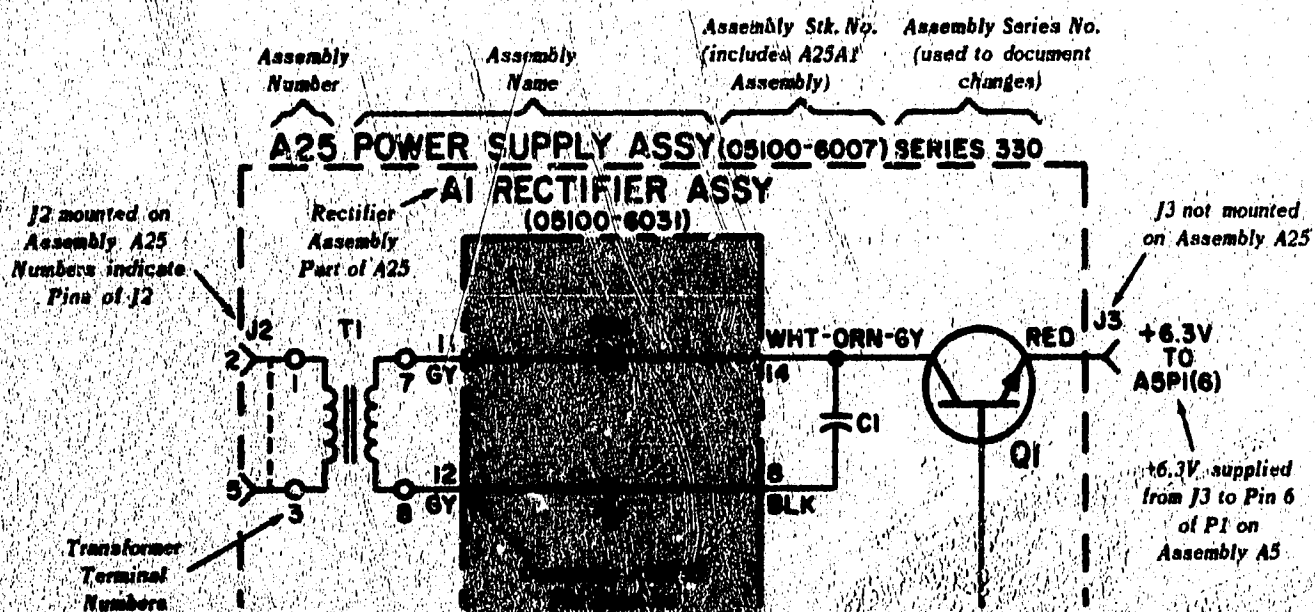

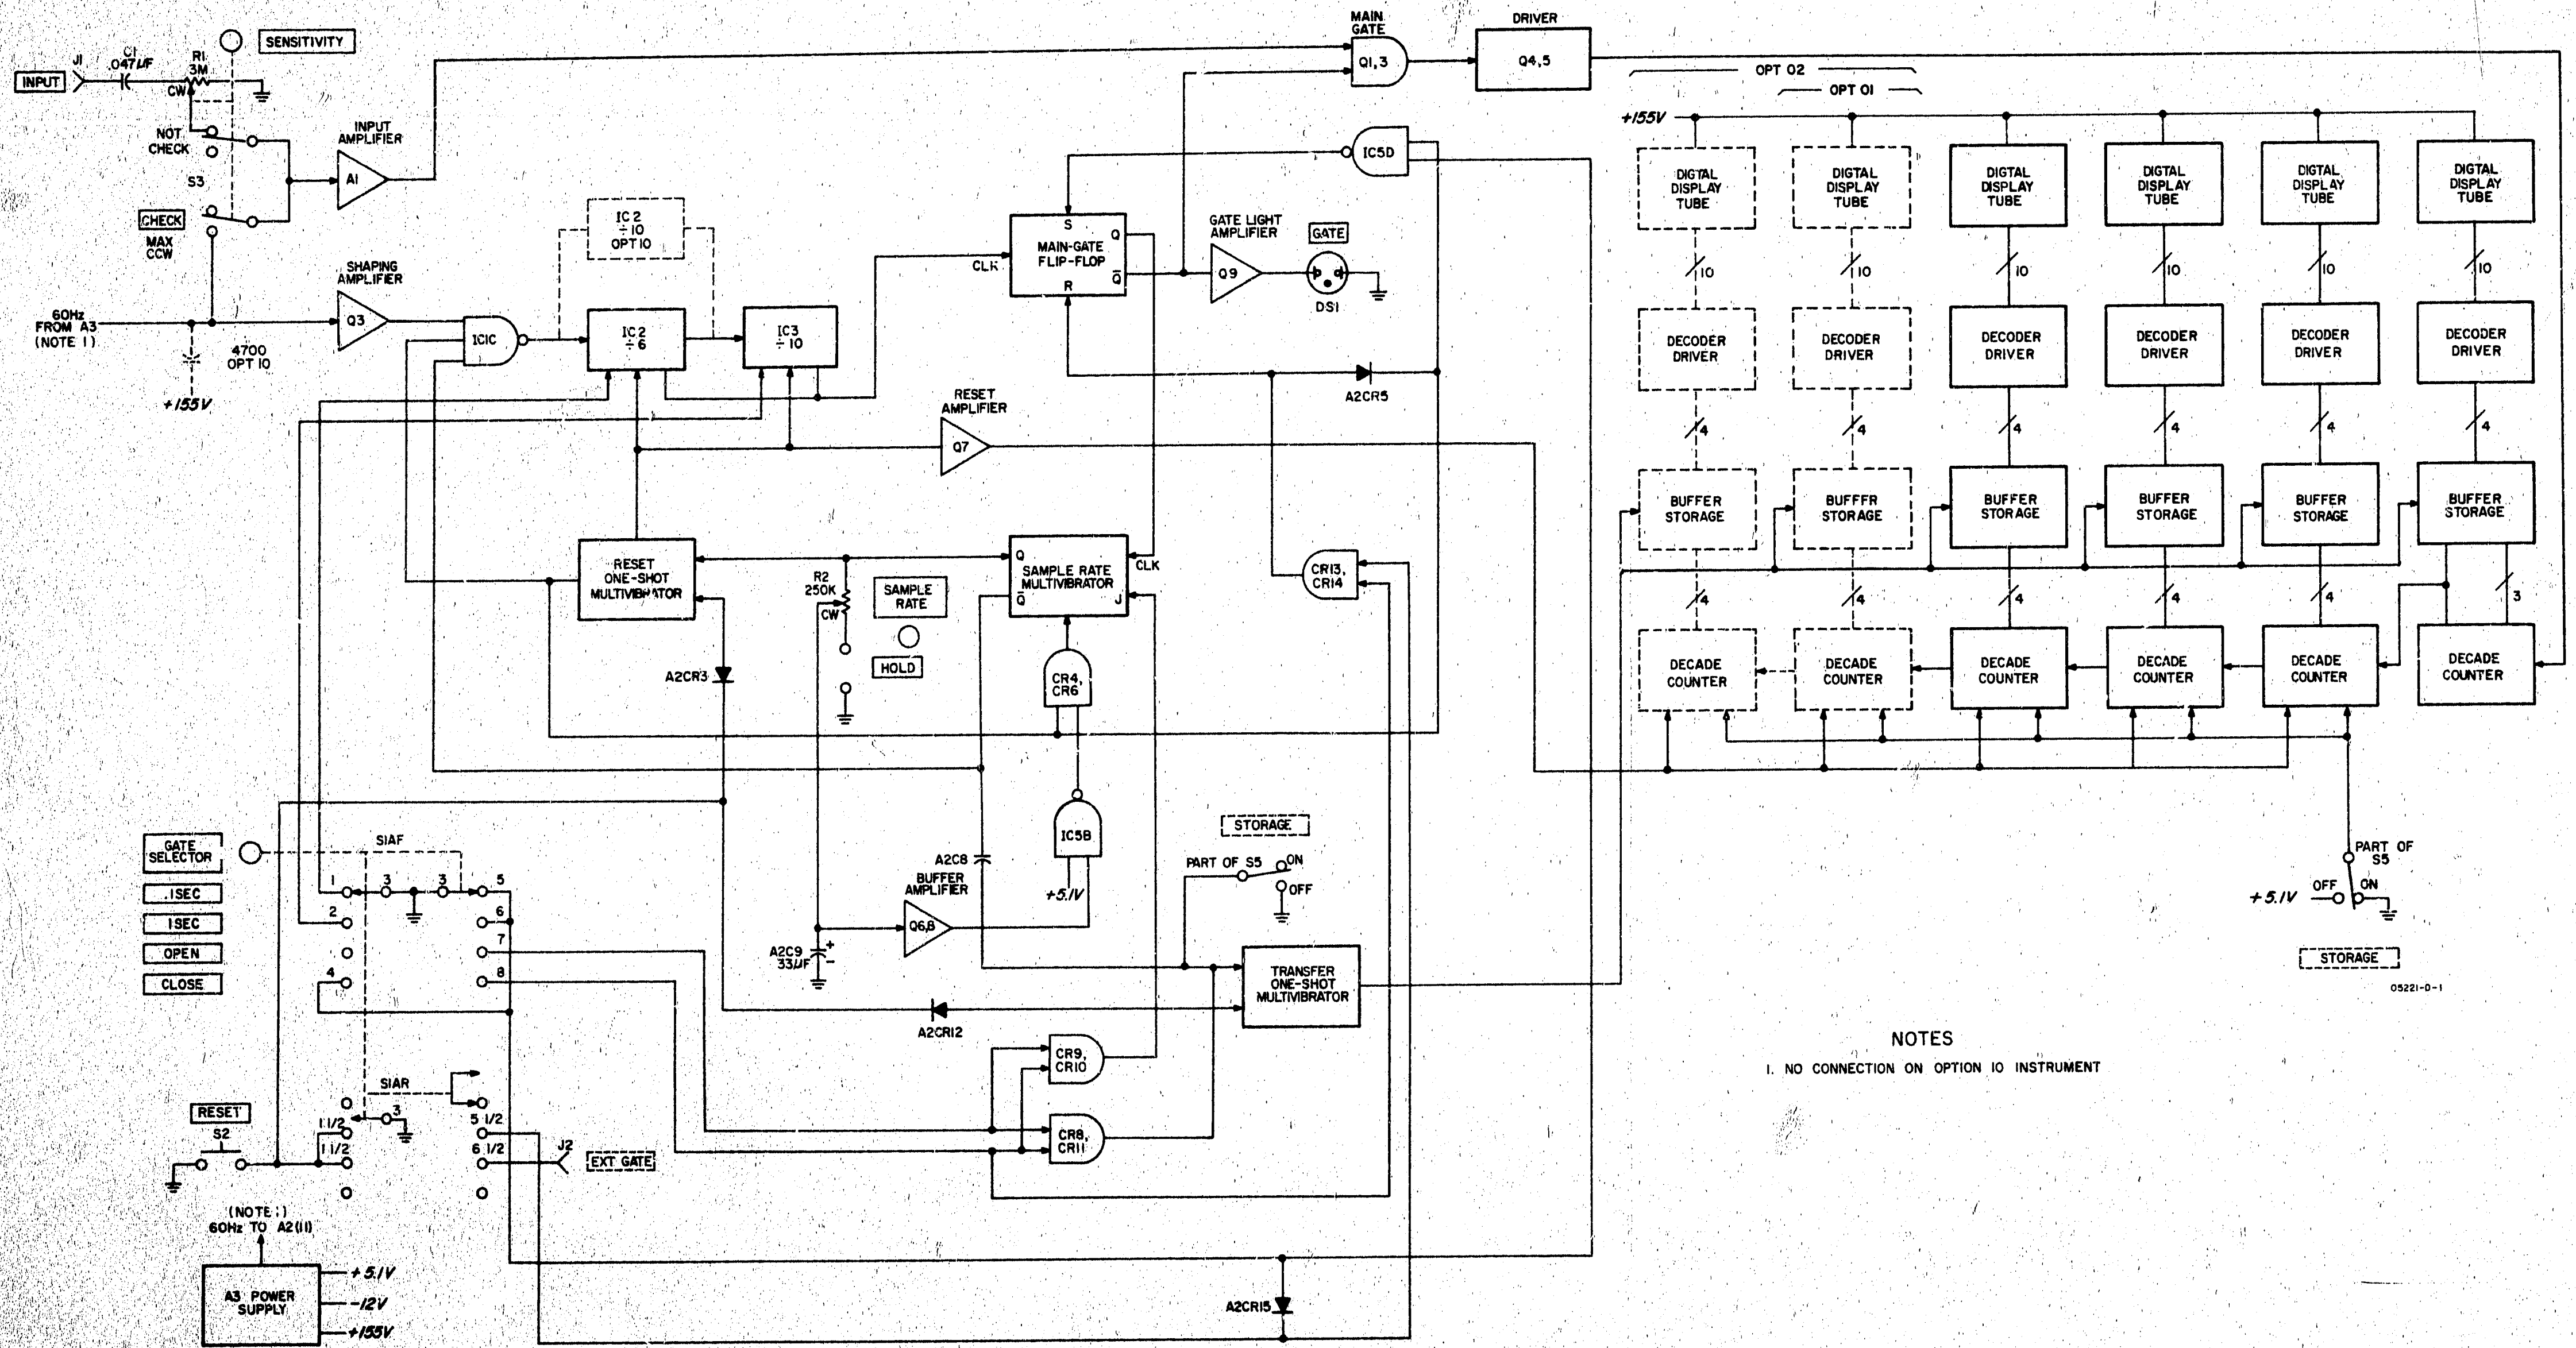


NOTES
1. NO CONNECTION ON OPTION 10 INSTRUMENT

Figure 8-2. Block Diagram
8-3

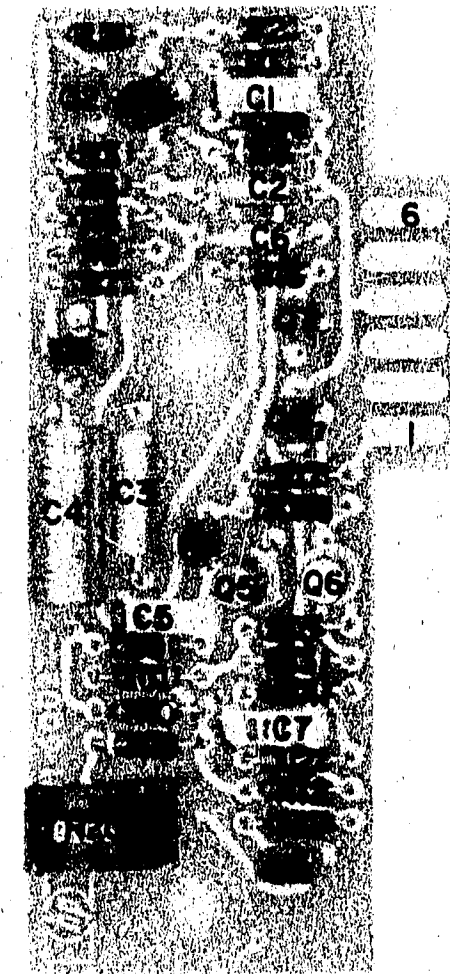

A1 AMPLIFIER-TRIGGER ASSEMBLY (05221-6002) (NOTE 1) SERIES 716

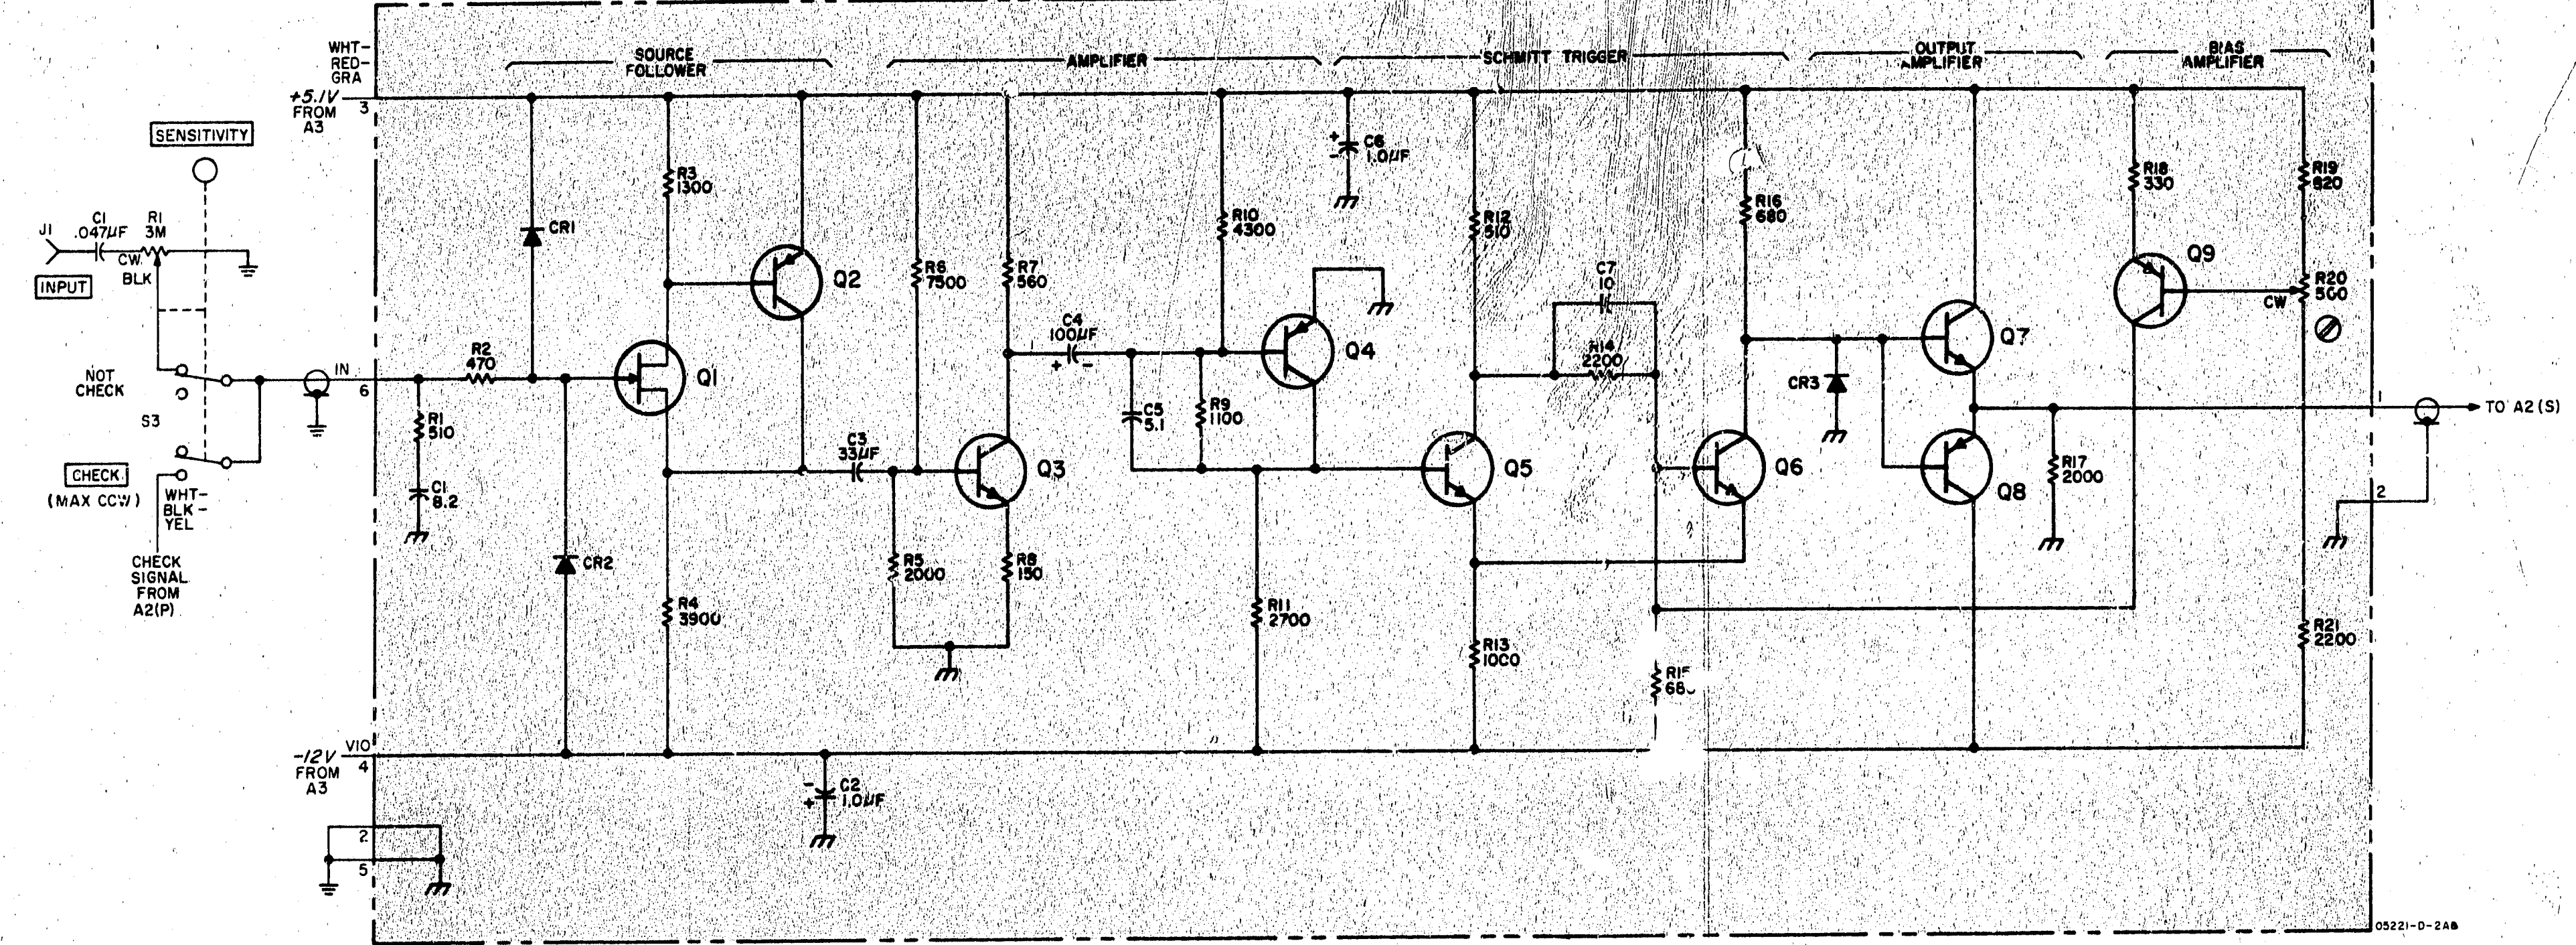


NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS;
CAPACITANCE IN PICOFARADS;


REFERENCE DESIGNATIONS

NO PREFIX	A1
C1	C1-7
J1	CR1-3
R1	Q1-9
S3	R1-21


Figure 8-3. A1 Amplifier-Trigger
8-5

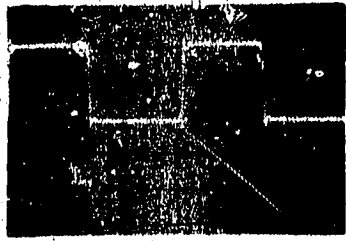


1 .2 V/cm +slope
.2 μ s/cm

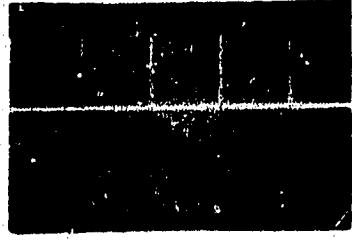


2 .2 V/cm +slope
.5 μ s/cm

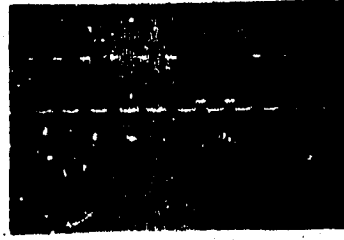


3 .1 V/cm +slope
20 ms/cm

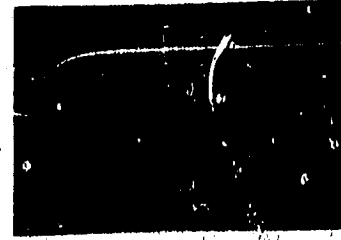

4 .2 V/cm -slope
5 μ s/cm

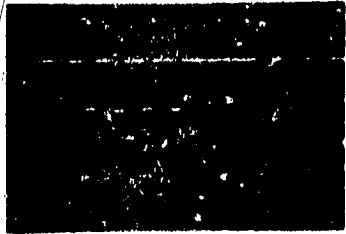

5 .2 V/cm +slope
20 ms/cm

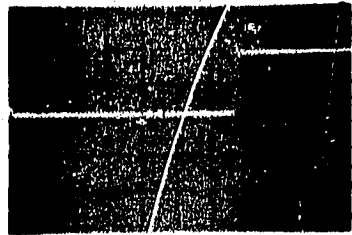


6 .2 V/cm -slope
.5 μ s/cm




7 .1 V/cm +slope
50 ms/cm




8 .05 V/cm +slope
.5 μ s/cm

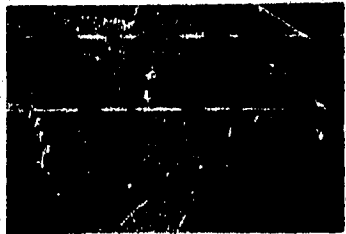


9 .2 V/cm -slope
50 ms/cm

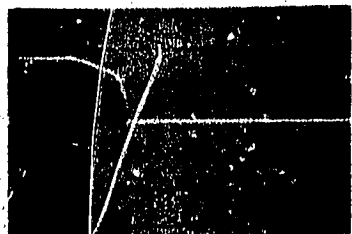


10 .2 V/cm +slope
1 μ s/cm

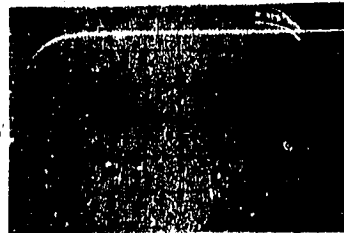

11 .1 V/cm -slope
1 μ s/cm

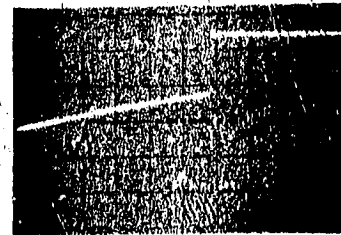


12 .2 V/cm +slope
.5 μ s/cm

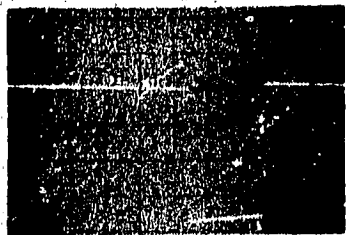

13 .1 V/cm +slope
20 ms/cm




14 .2 V/cm +slope
50 ms/cm

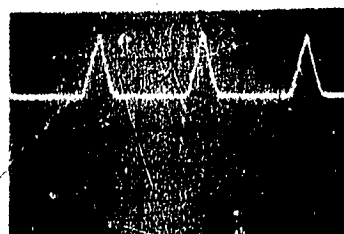


15 .05 V/cm +slope
50 ms/cm



16 .2 V/cm -slope
20 ms/cm

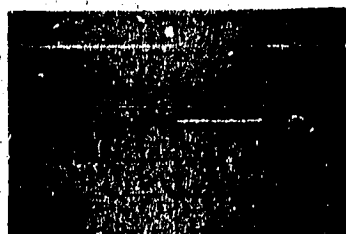


17 .2 V/cm +slope
20 ms/cm

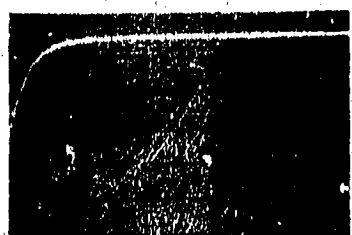

18 .1 V/cm -slope
1 μ s/cm



19 .2 V/cm +slope
20 μ s/cm

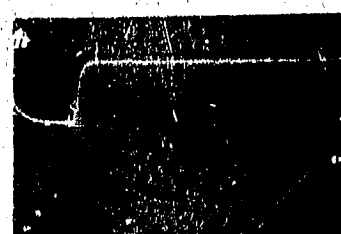

20 .1 V/cm -slope
50 μ s/cm

Oscilloscope: All waveforms dc coupled through 10:1 divider probe. Center line of graticule is zero volts. Triggering is internal ac.

Counter:

SENSITIVITY	clockwise with 1 MHz input
GATE SELECTOR1 sec
SAMPLE RATE	counterclockwise not OFF



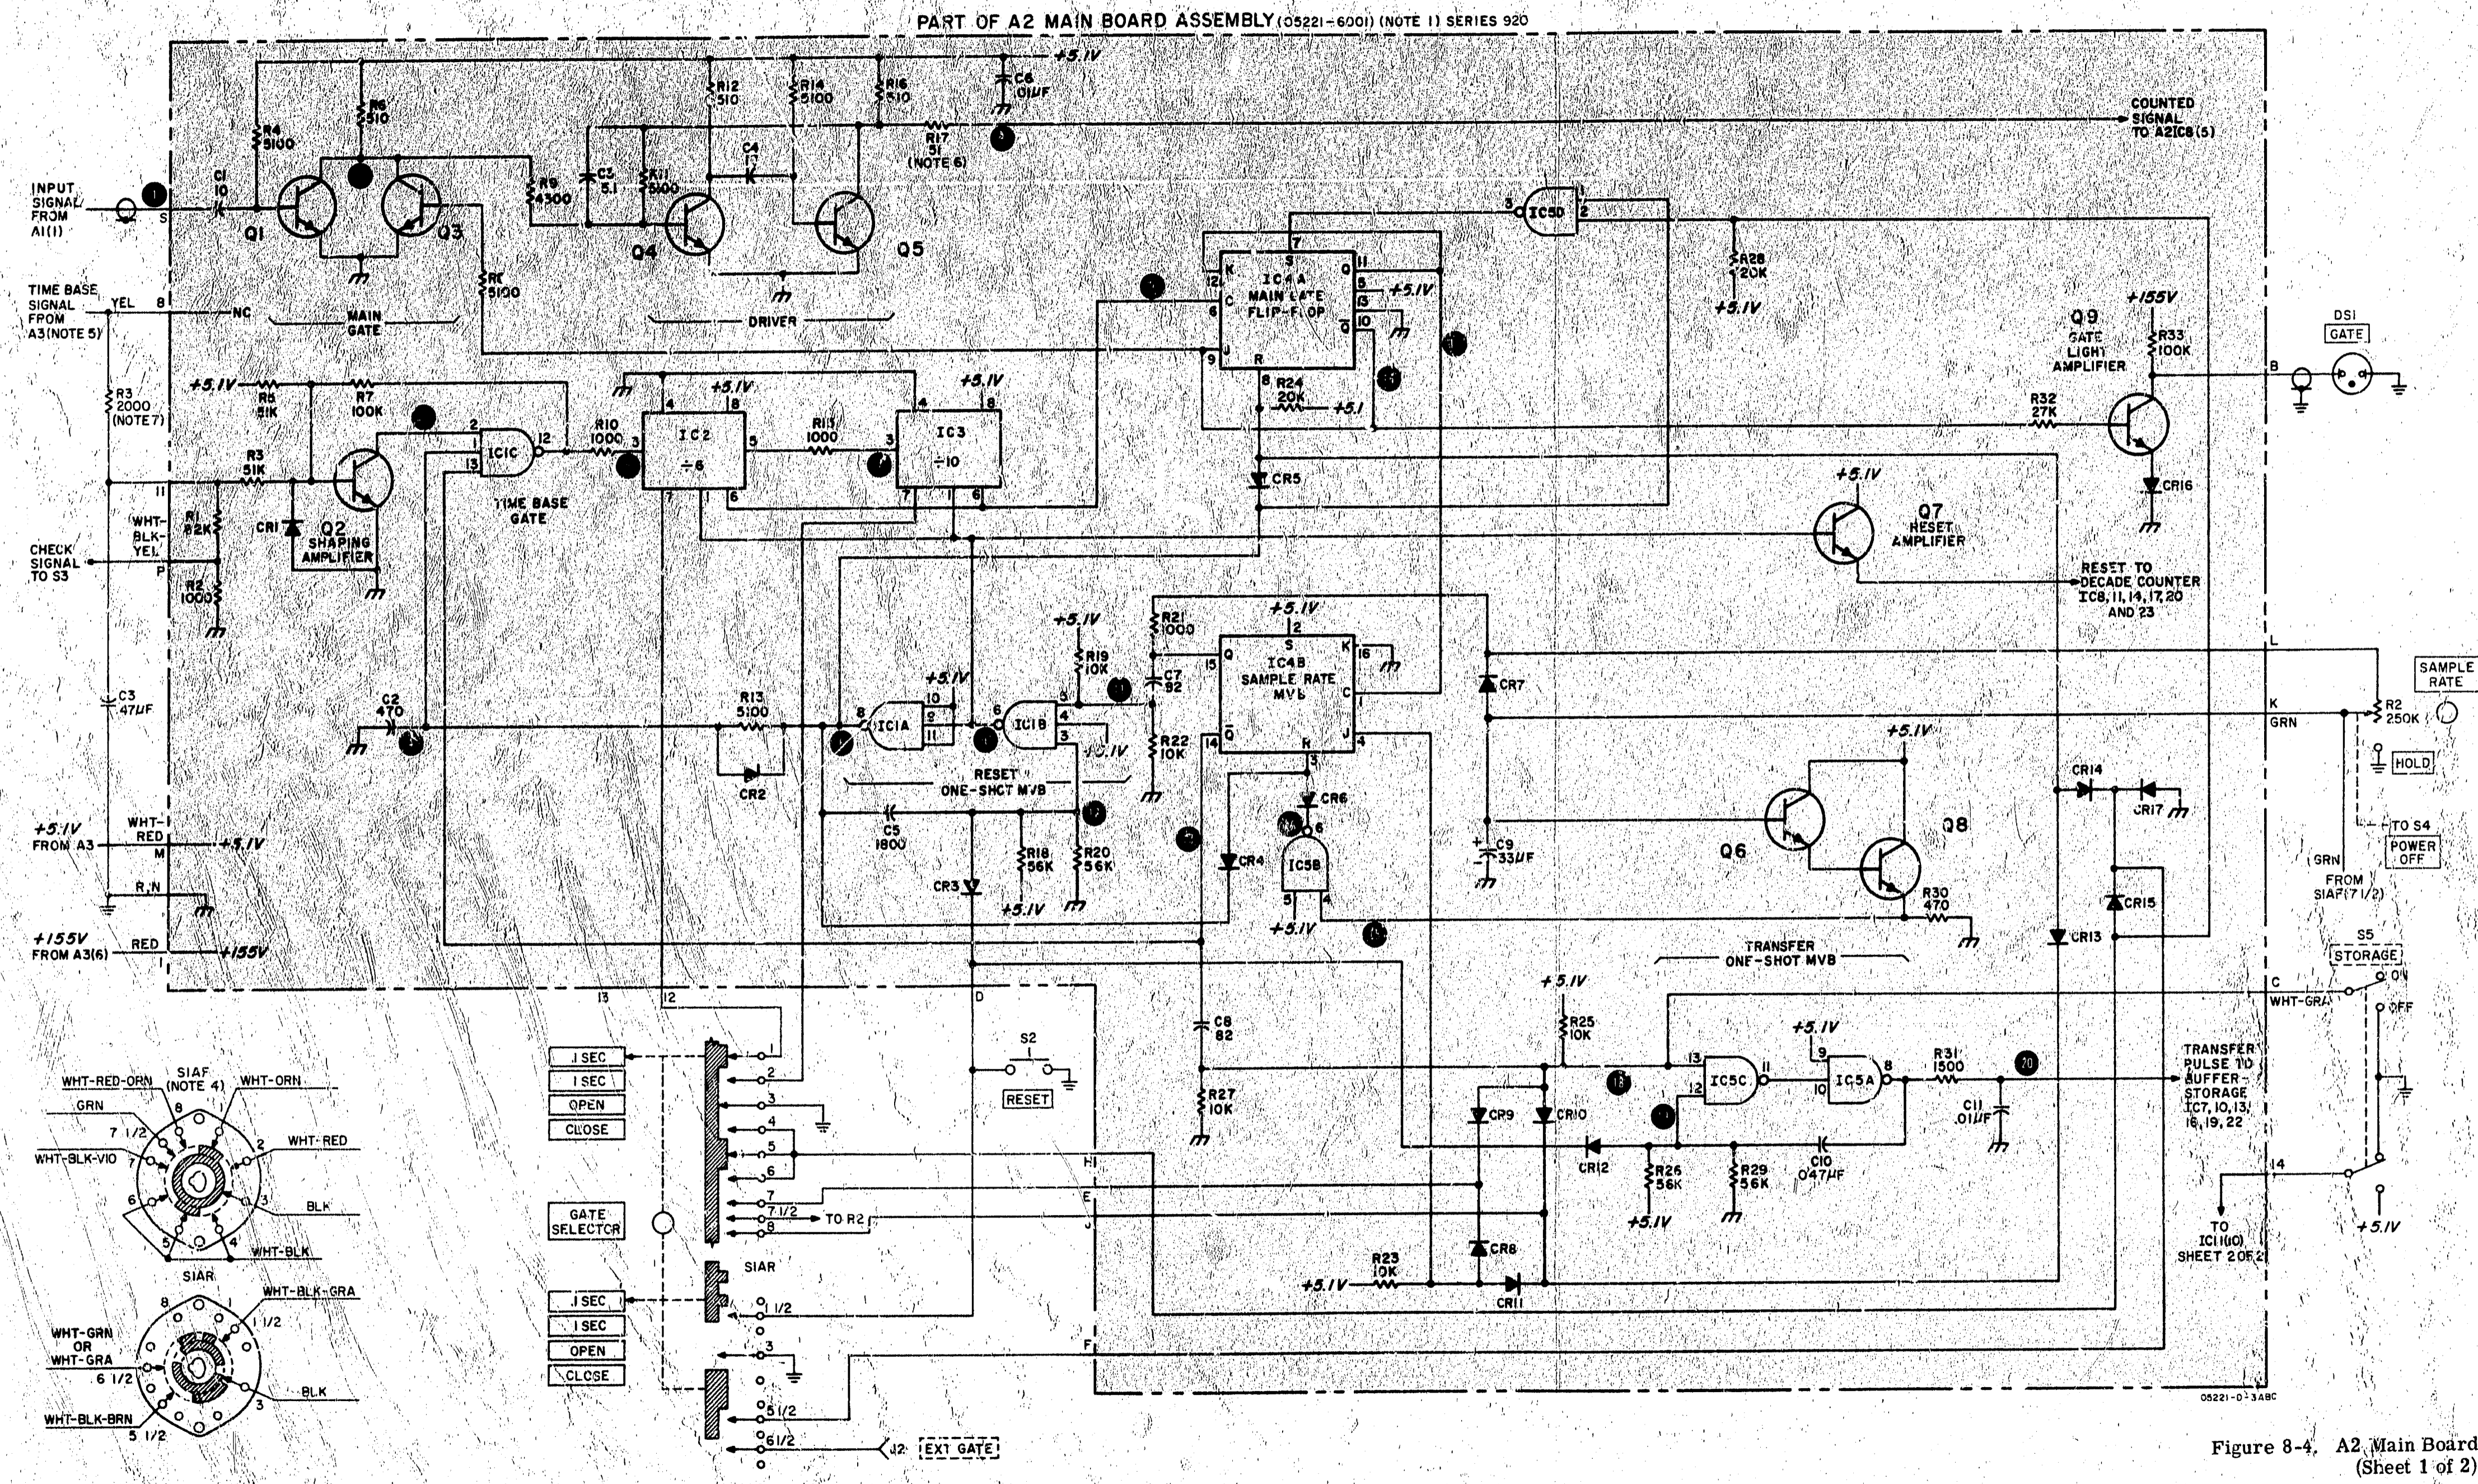


Figure 8-4. A2 Main Board (Sheet 1 of 2)


Section VIII
Circuit Diagrams

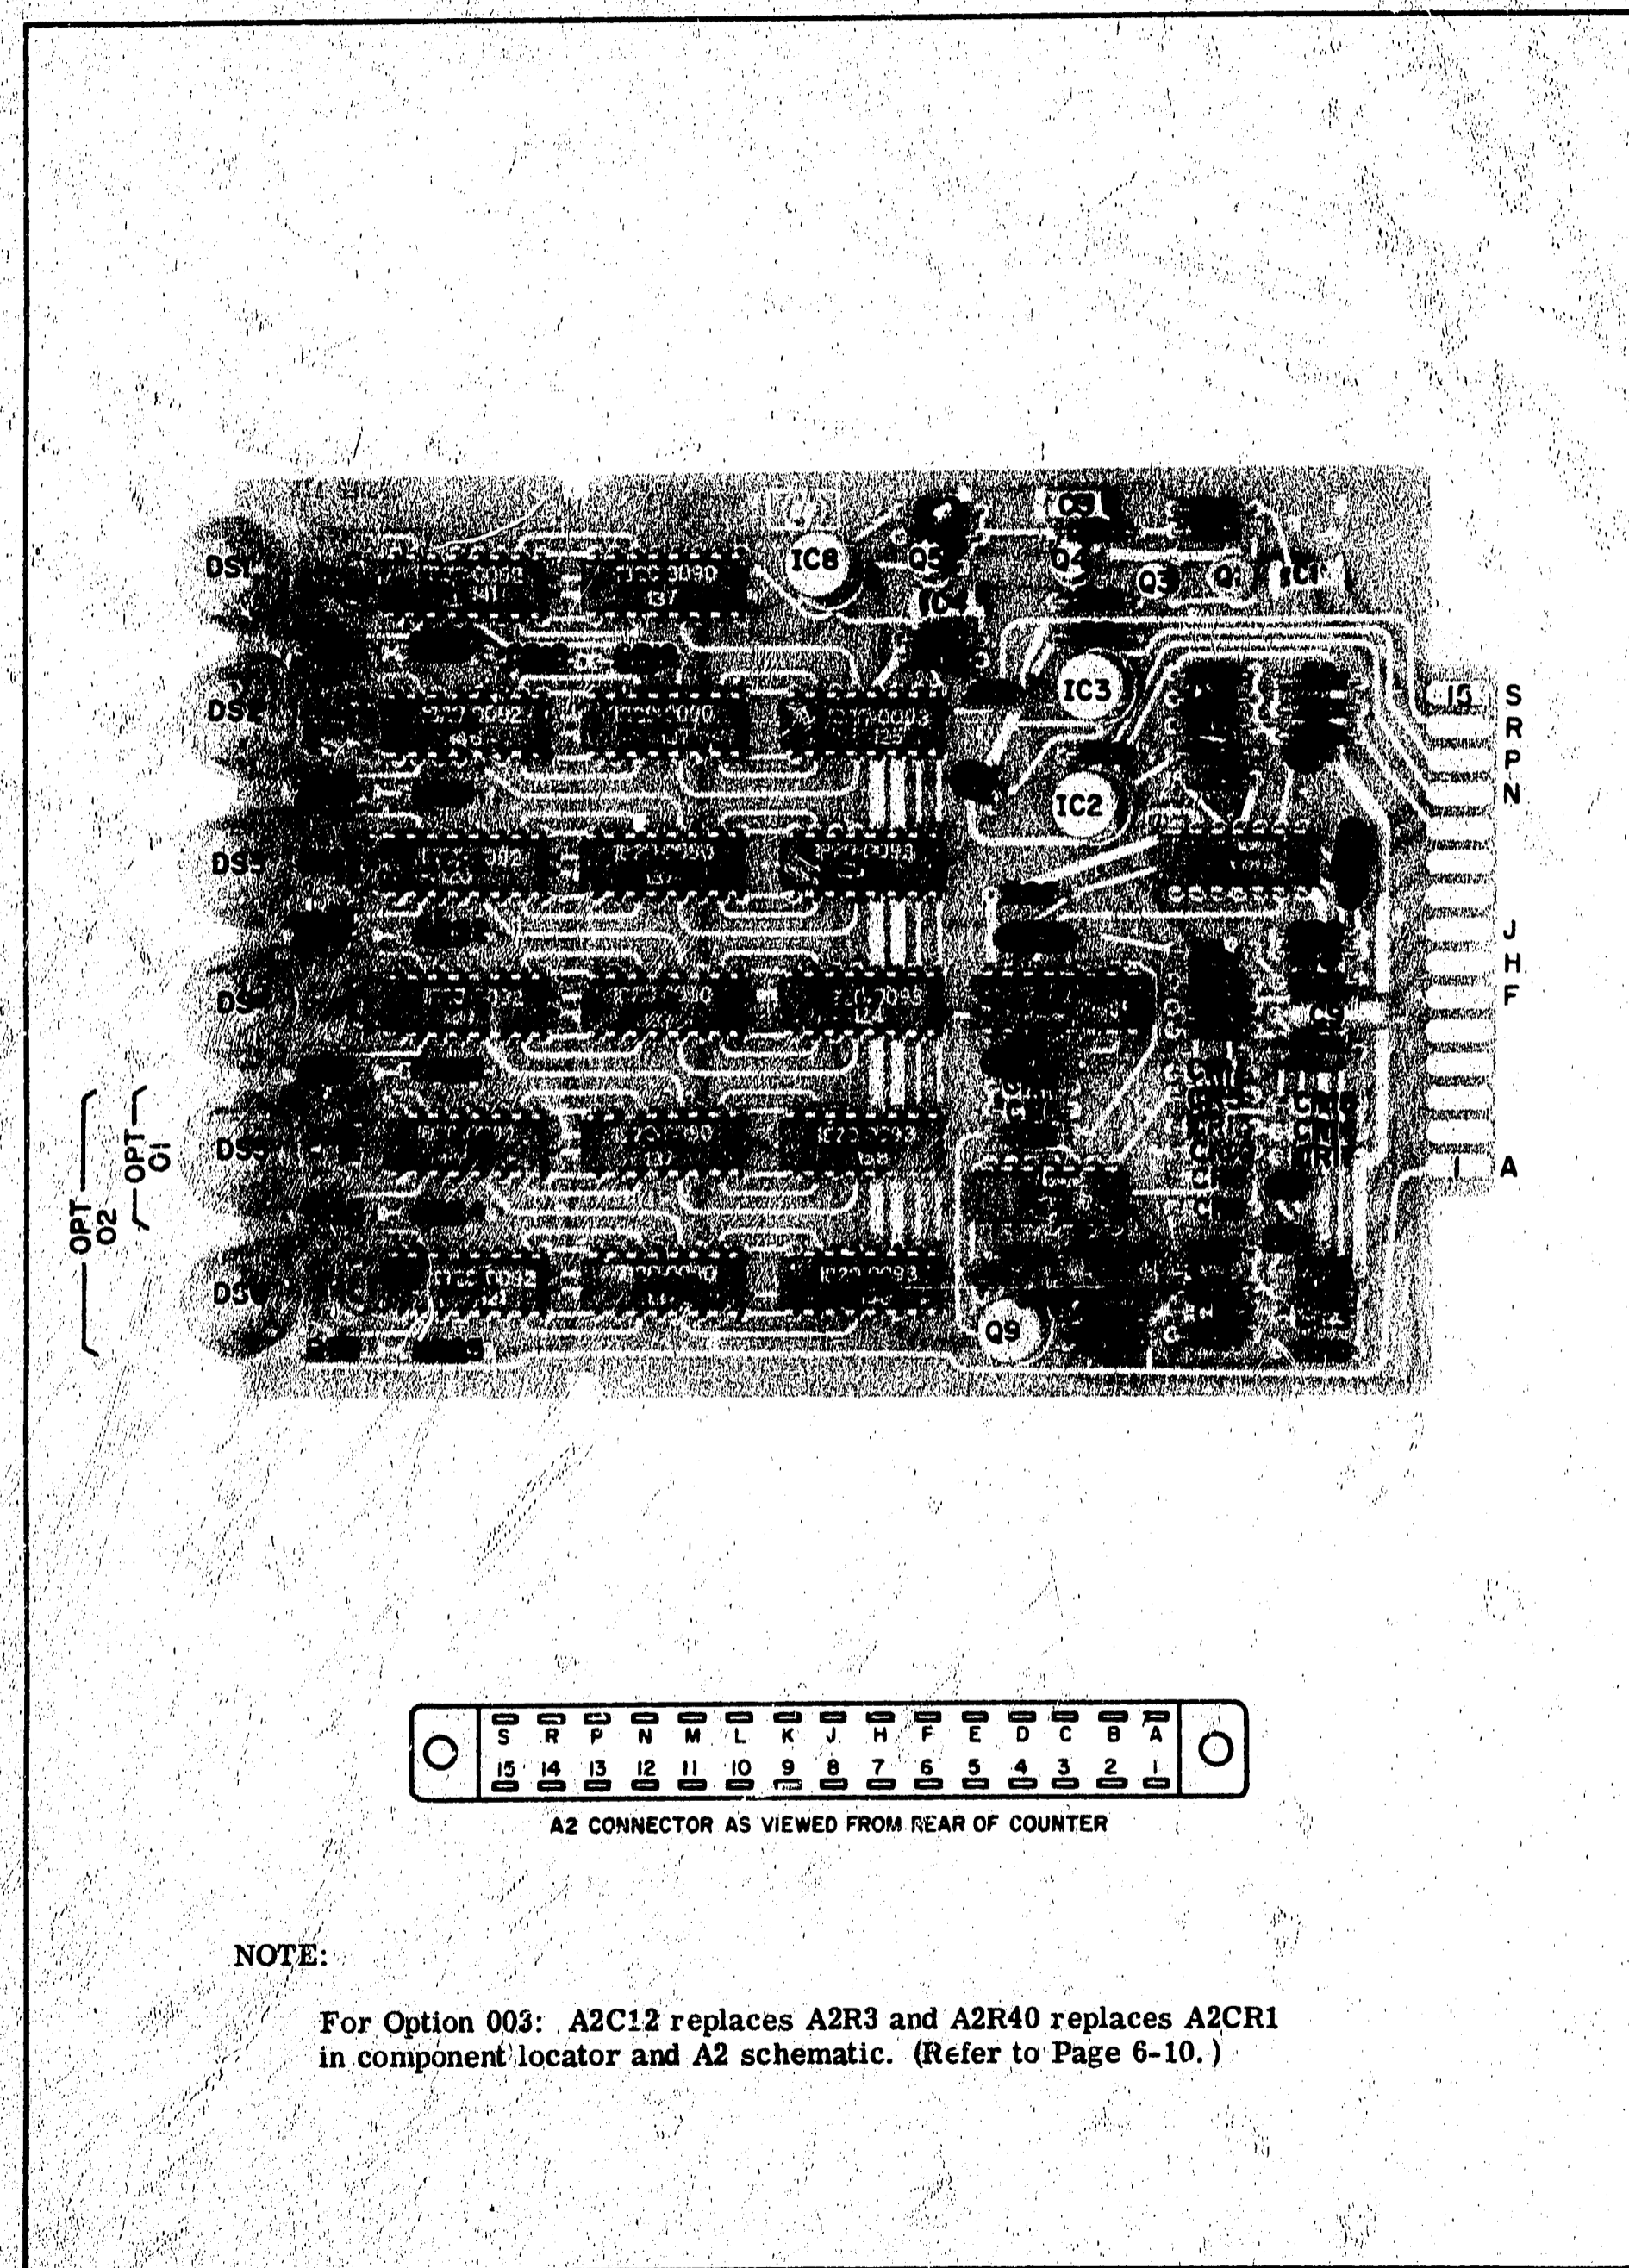


1 .2 V/cm +slope
.2 μs/cm

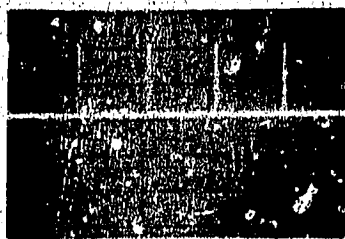


2 .2 V/cm +slope
.5 μs/cm

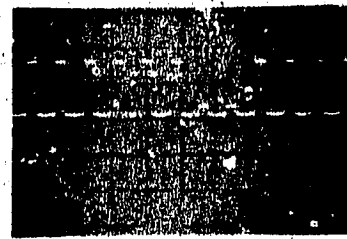


3 .1 V/cm +slope
20 ms/cm

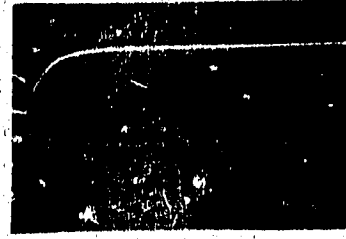


4 .2 V/cm -slope
5 μs/cm

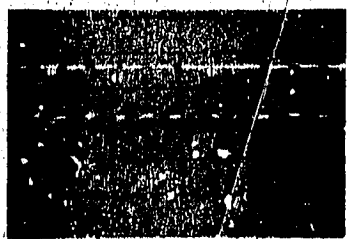


5 .2 V/cm +slope
20 ms/cm

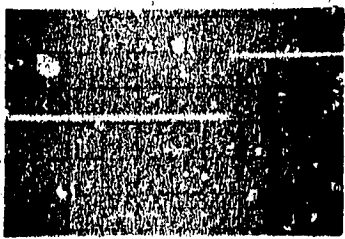


6 .2 V/cm -slope
.5 μs/cm

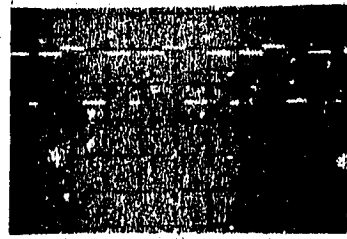


7 .1 V/cm +slope
50 ms/cm

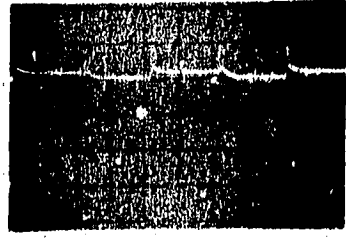


8 .05 V/cm +slope
.5 μs/cm

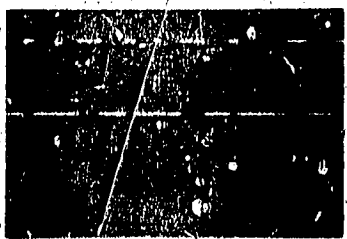


9 .2 V/cm -slope
50 ms/cm

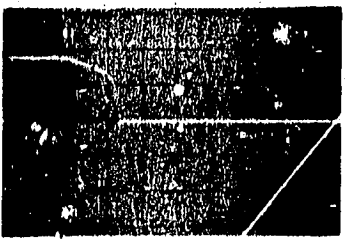


10 .2 V/cm +slope
1 μs/cm

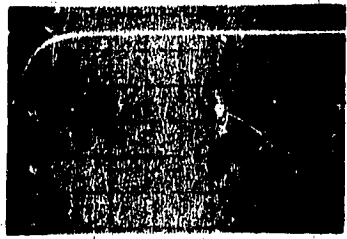


11 .1 V/cm -slope
1 μs/cm

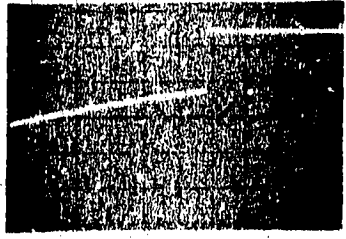


12 .2 V/cm +slope
.5 μs/cm

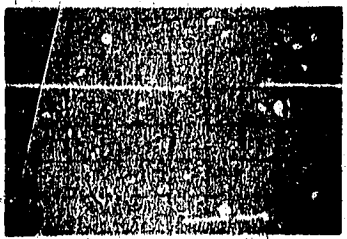


13 .1 V/cm +slope
20 ms/cm

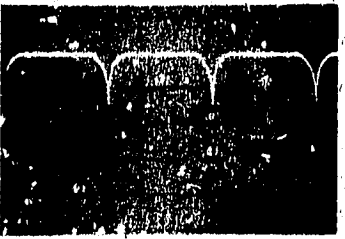


14 .2 V/cm +slope
50 ms/cm

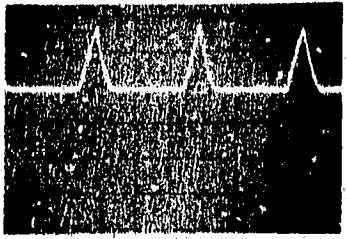


15 .05 V/cm +slope
50 ms/cm

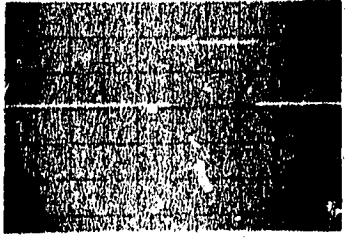


16 .2 V/cm -slope
20 ms/cm

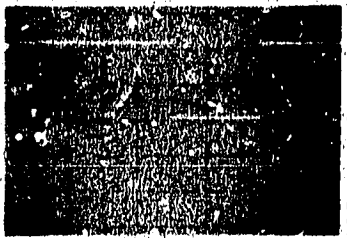


17 .2 V/cm +slope
20 ms/cm

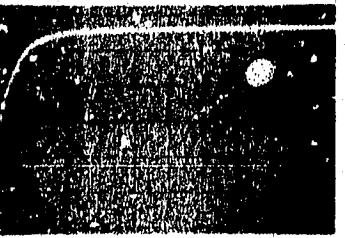

18 .1 V/cm -slope
1 μs/cm

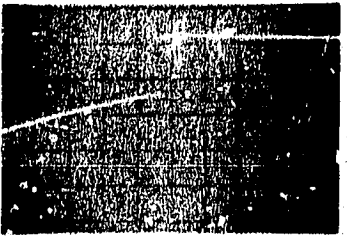

19 .2 V/cm +slope
20 μs/cm


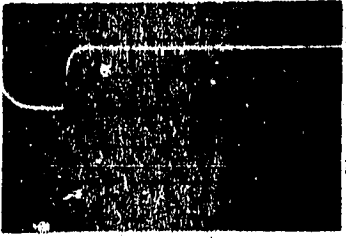


20 .1 V/cm -slope
50 μs/cm

Oscilloscope: All waveforms dc coupled through 10:1 divider probe. Center line of graticule is zero volts. Triggering is internal ac.

Counter:

SENSITIVITY	clockwise with 1 MHz input
GATE SELECTOR1 sec
SAMPLE RATE	counterclockwise not OFF

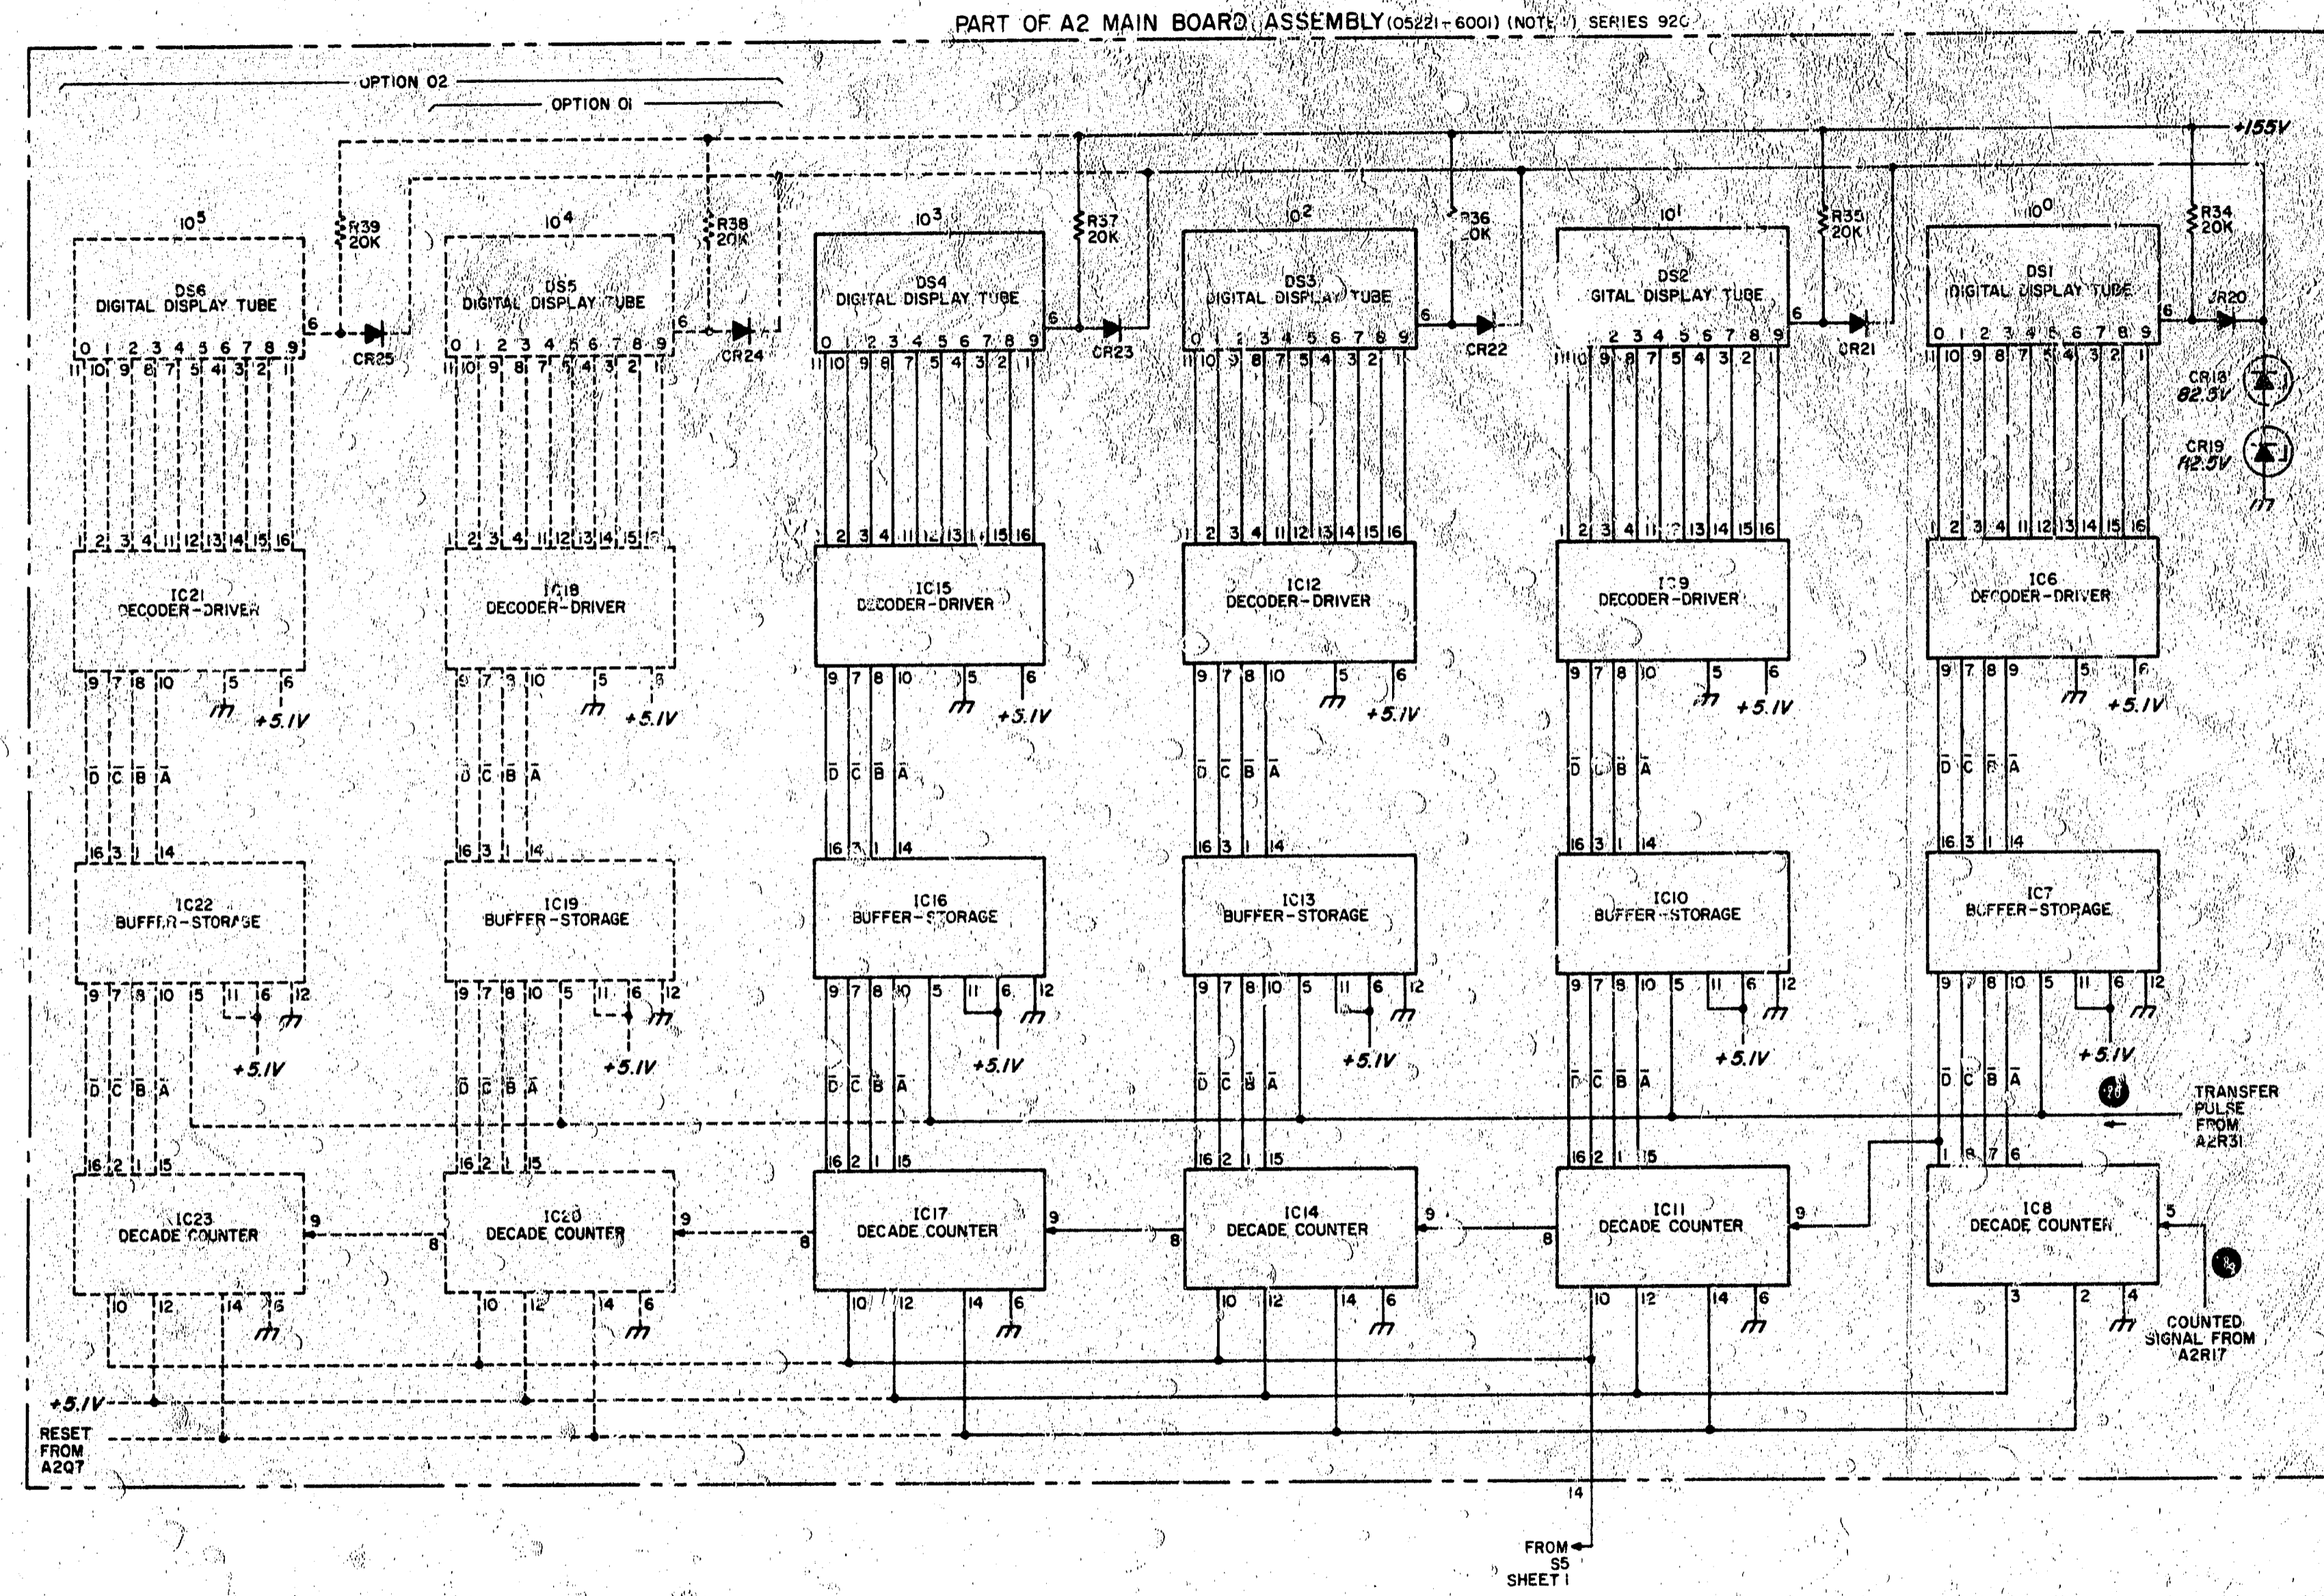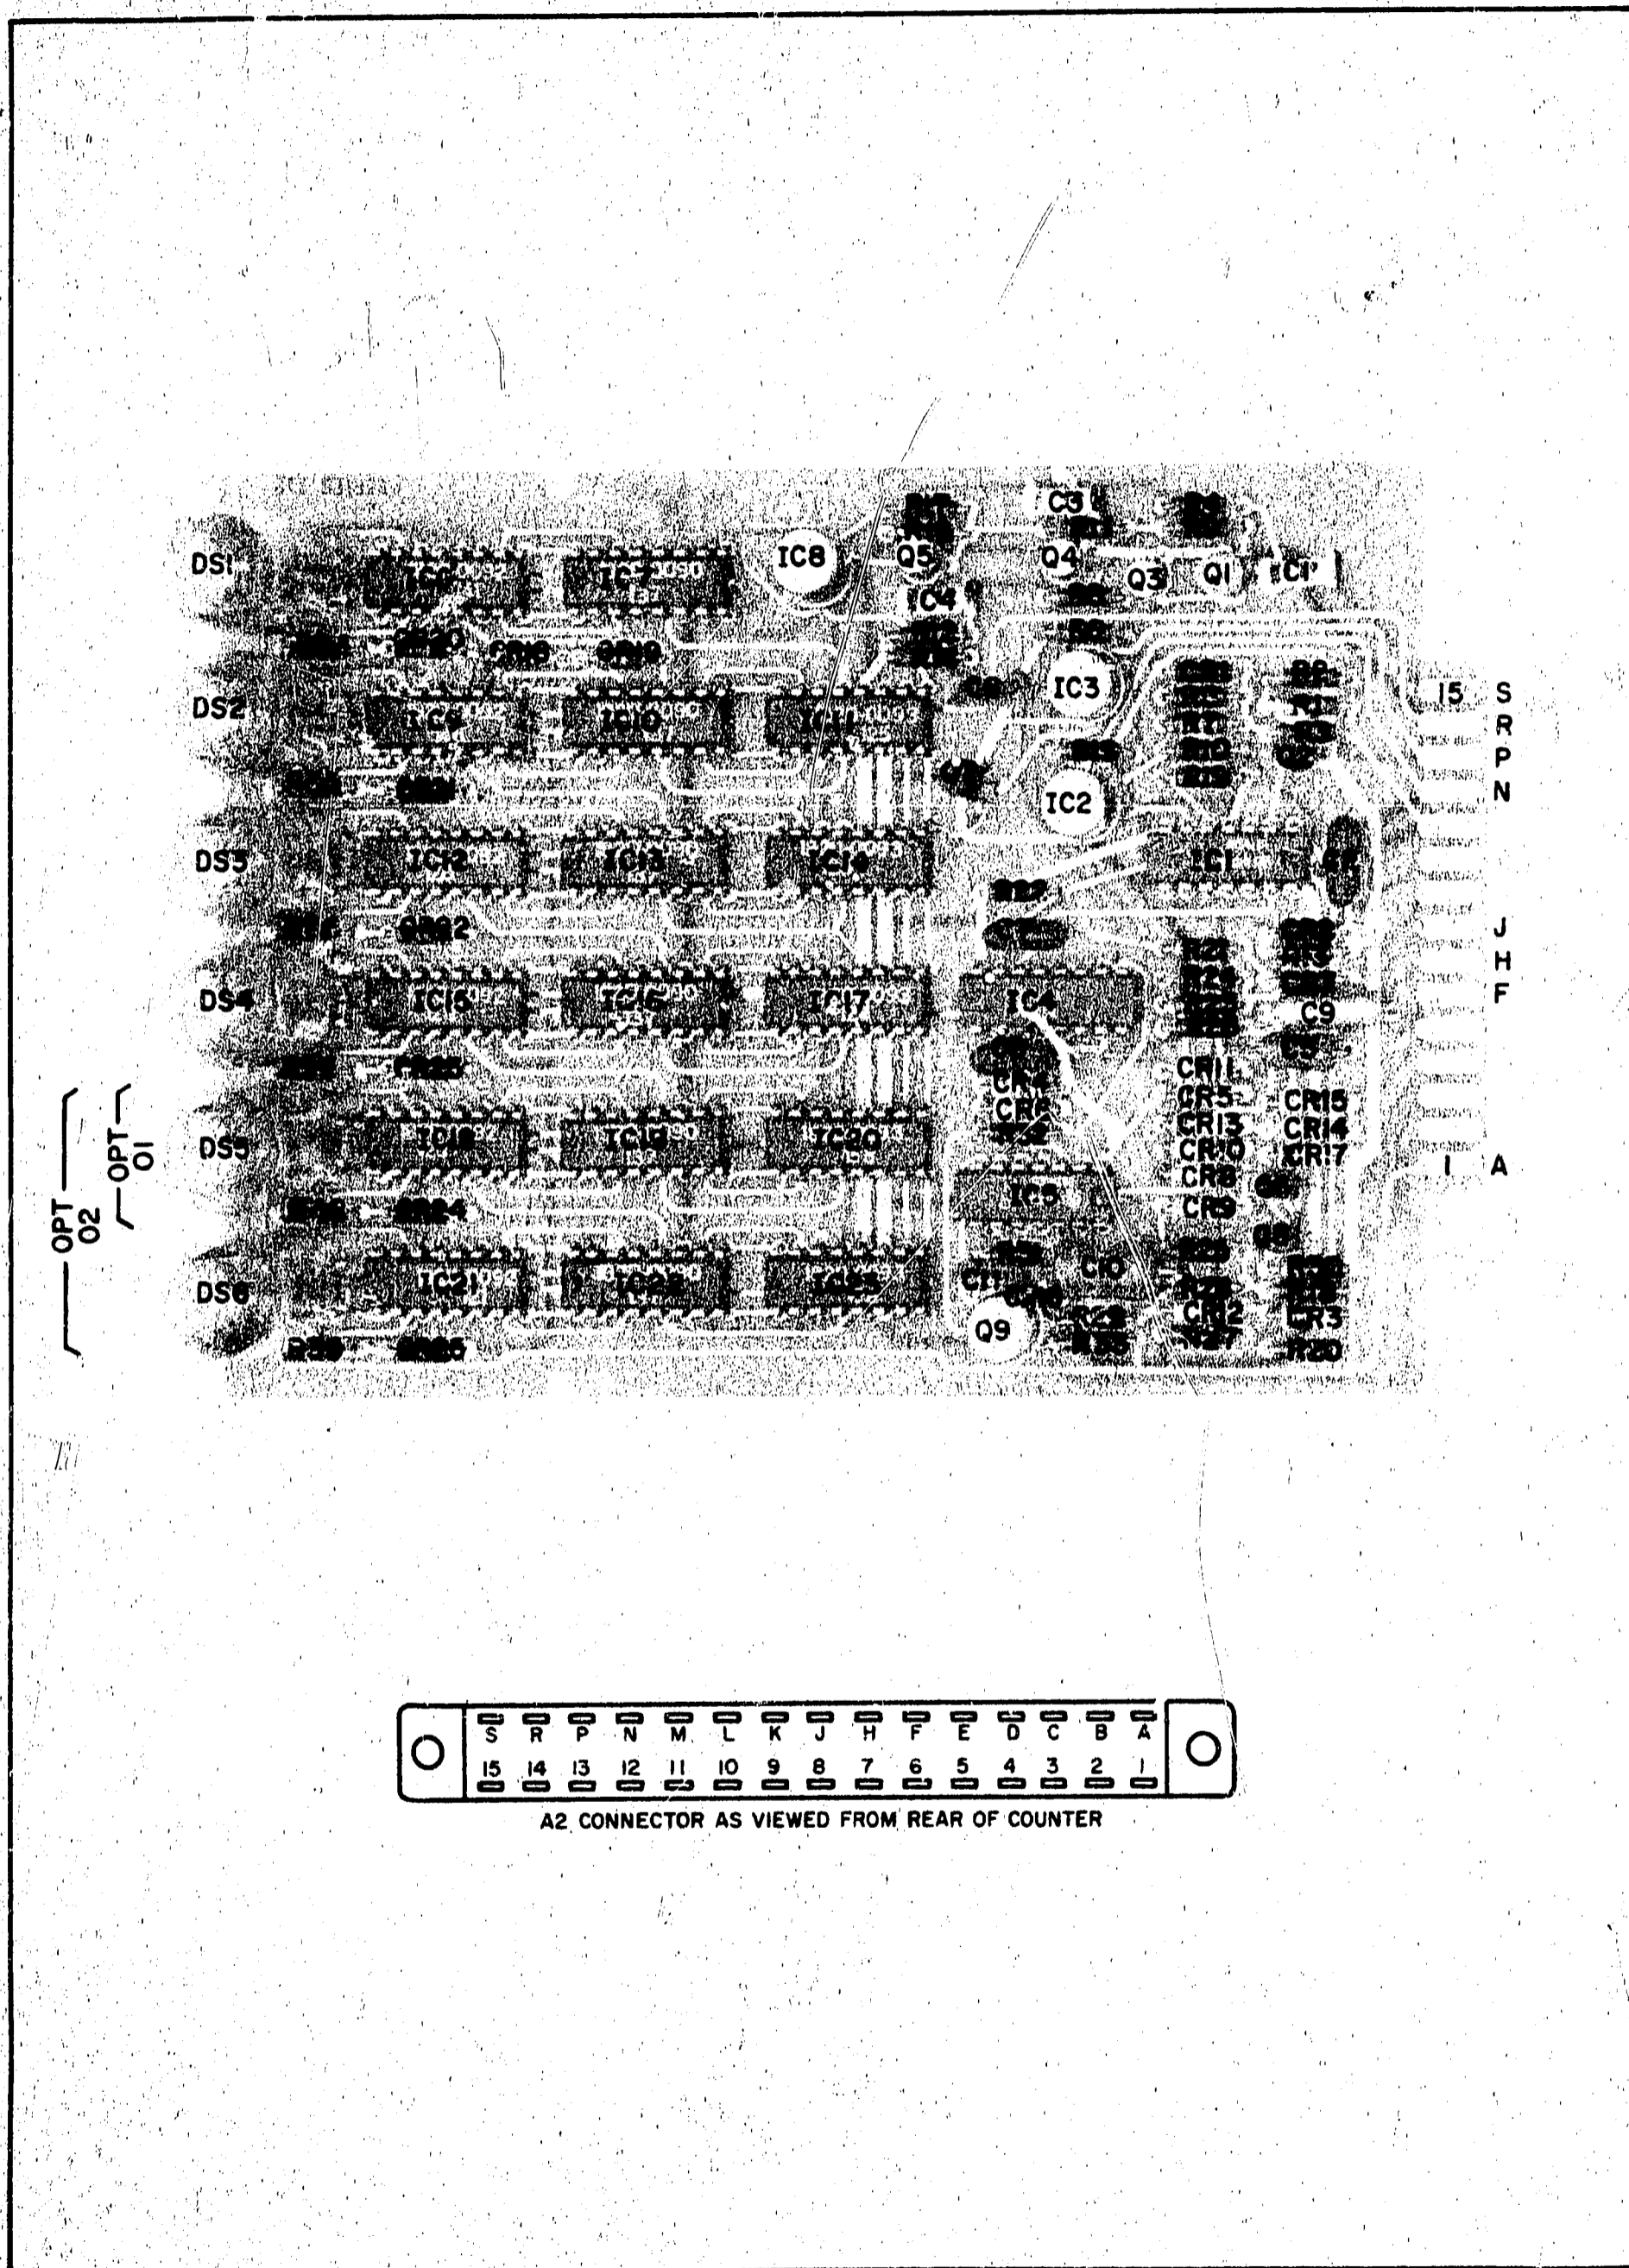

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED, RESISTANCE IN OHMS, CAPACITANCE IN PICOFARADS.
3. NO CONNECTION ON DETENT.
4. SWITCH SHOWN IN MAX CCW POSITION.
5. NO CONNECTION ON OPTION 10 INSTRUMENT.
6. R17 IS 51 OHMS WHEN IC9 IS 1820-0254 FOR 1820-0079 IC, R17 IS 1000.
7. C3 AND R3 ARE MOUNTED ON XA2.

REFERENCE DESIGNATIONS

NO. PREFIX	A2
C3	C1-11
CR1	CR1-23
DS1	DS1-6
	IC1-23
R2,3	Q1-9
S1,2,5	R1-39




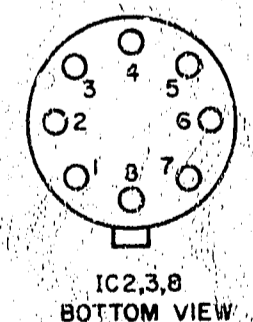


Figure 8-4. A2 Main Board (Sheet 2 of 2)

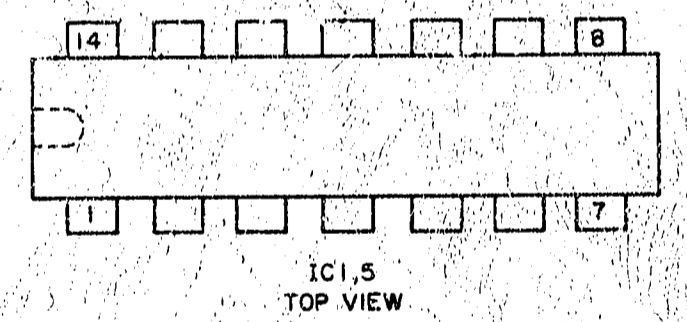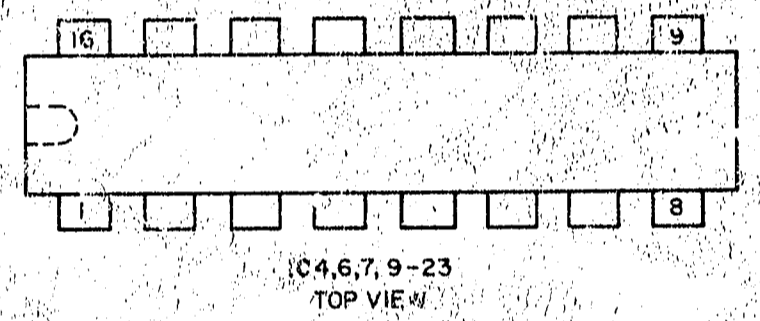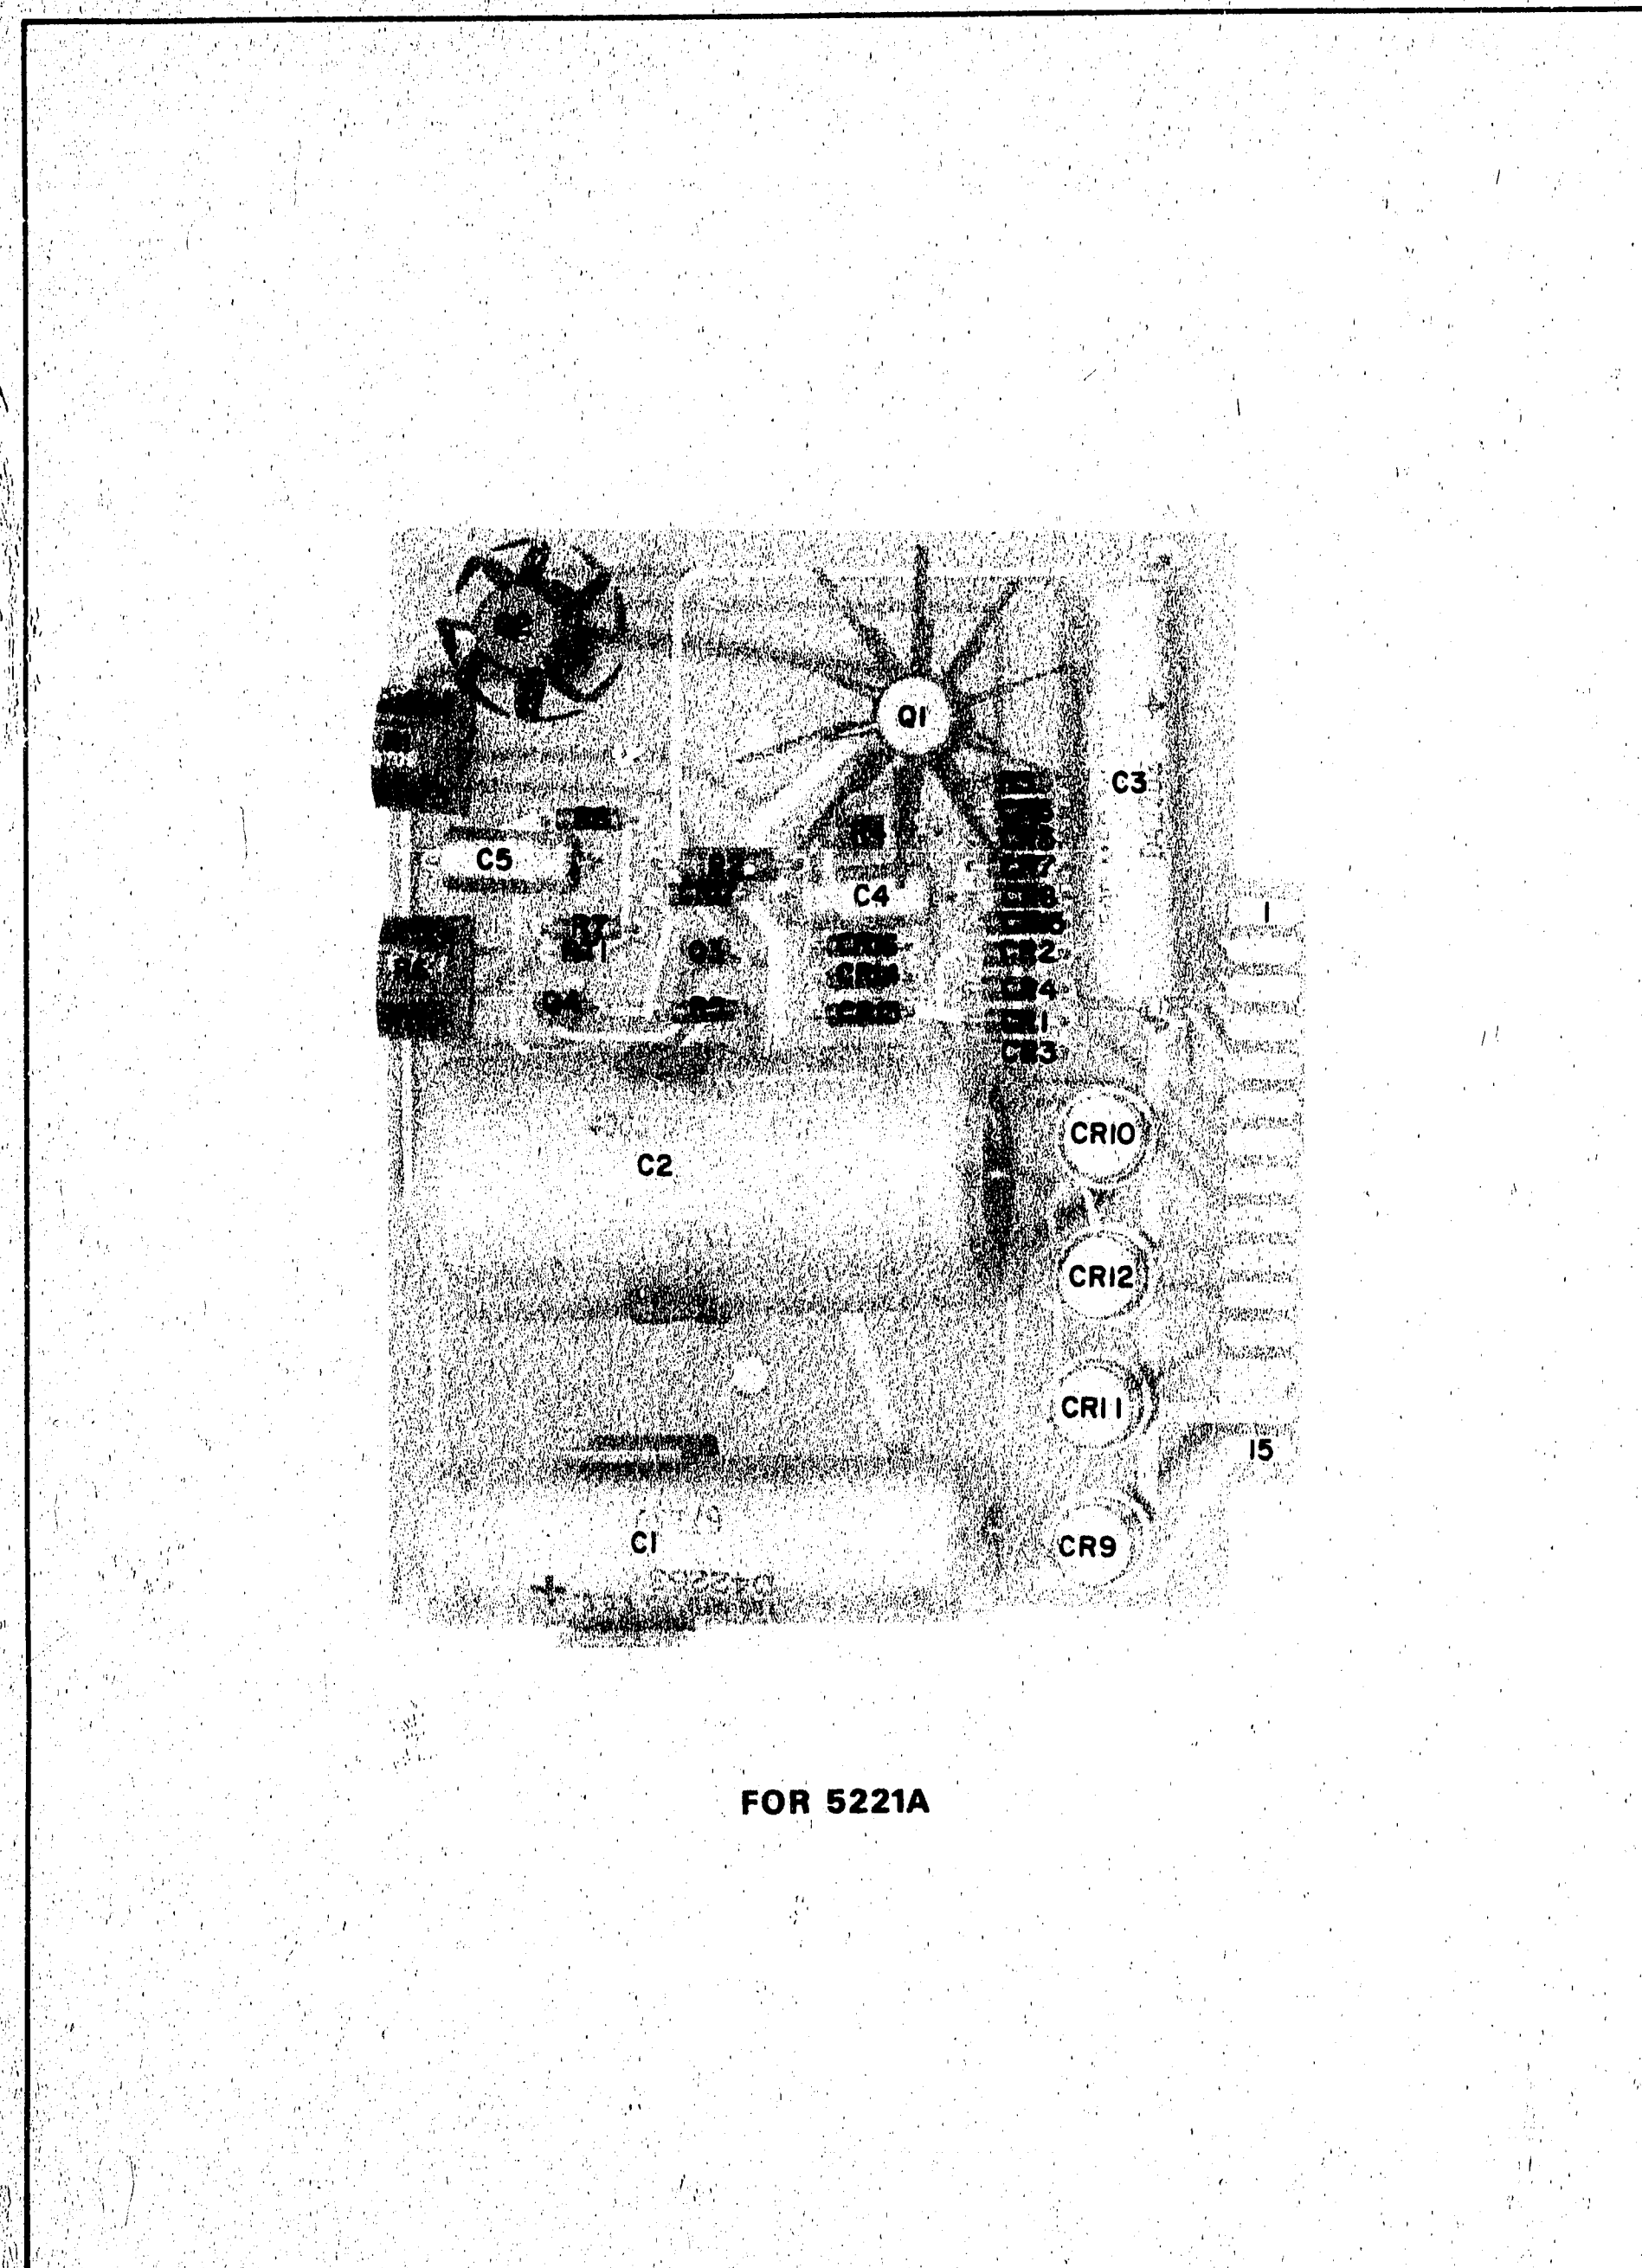

FOR 5221A


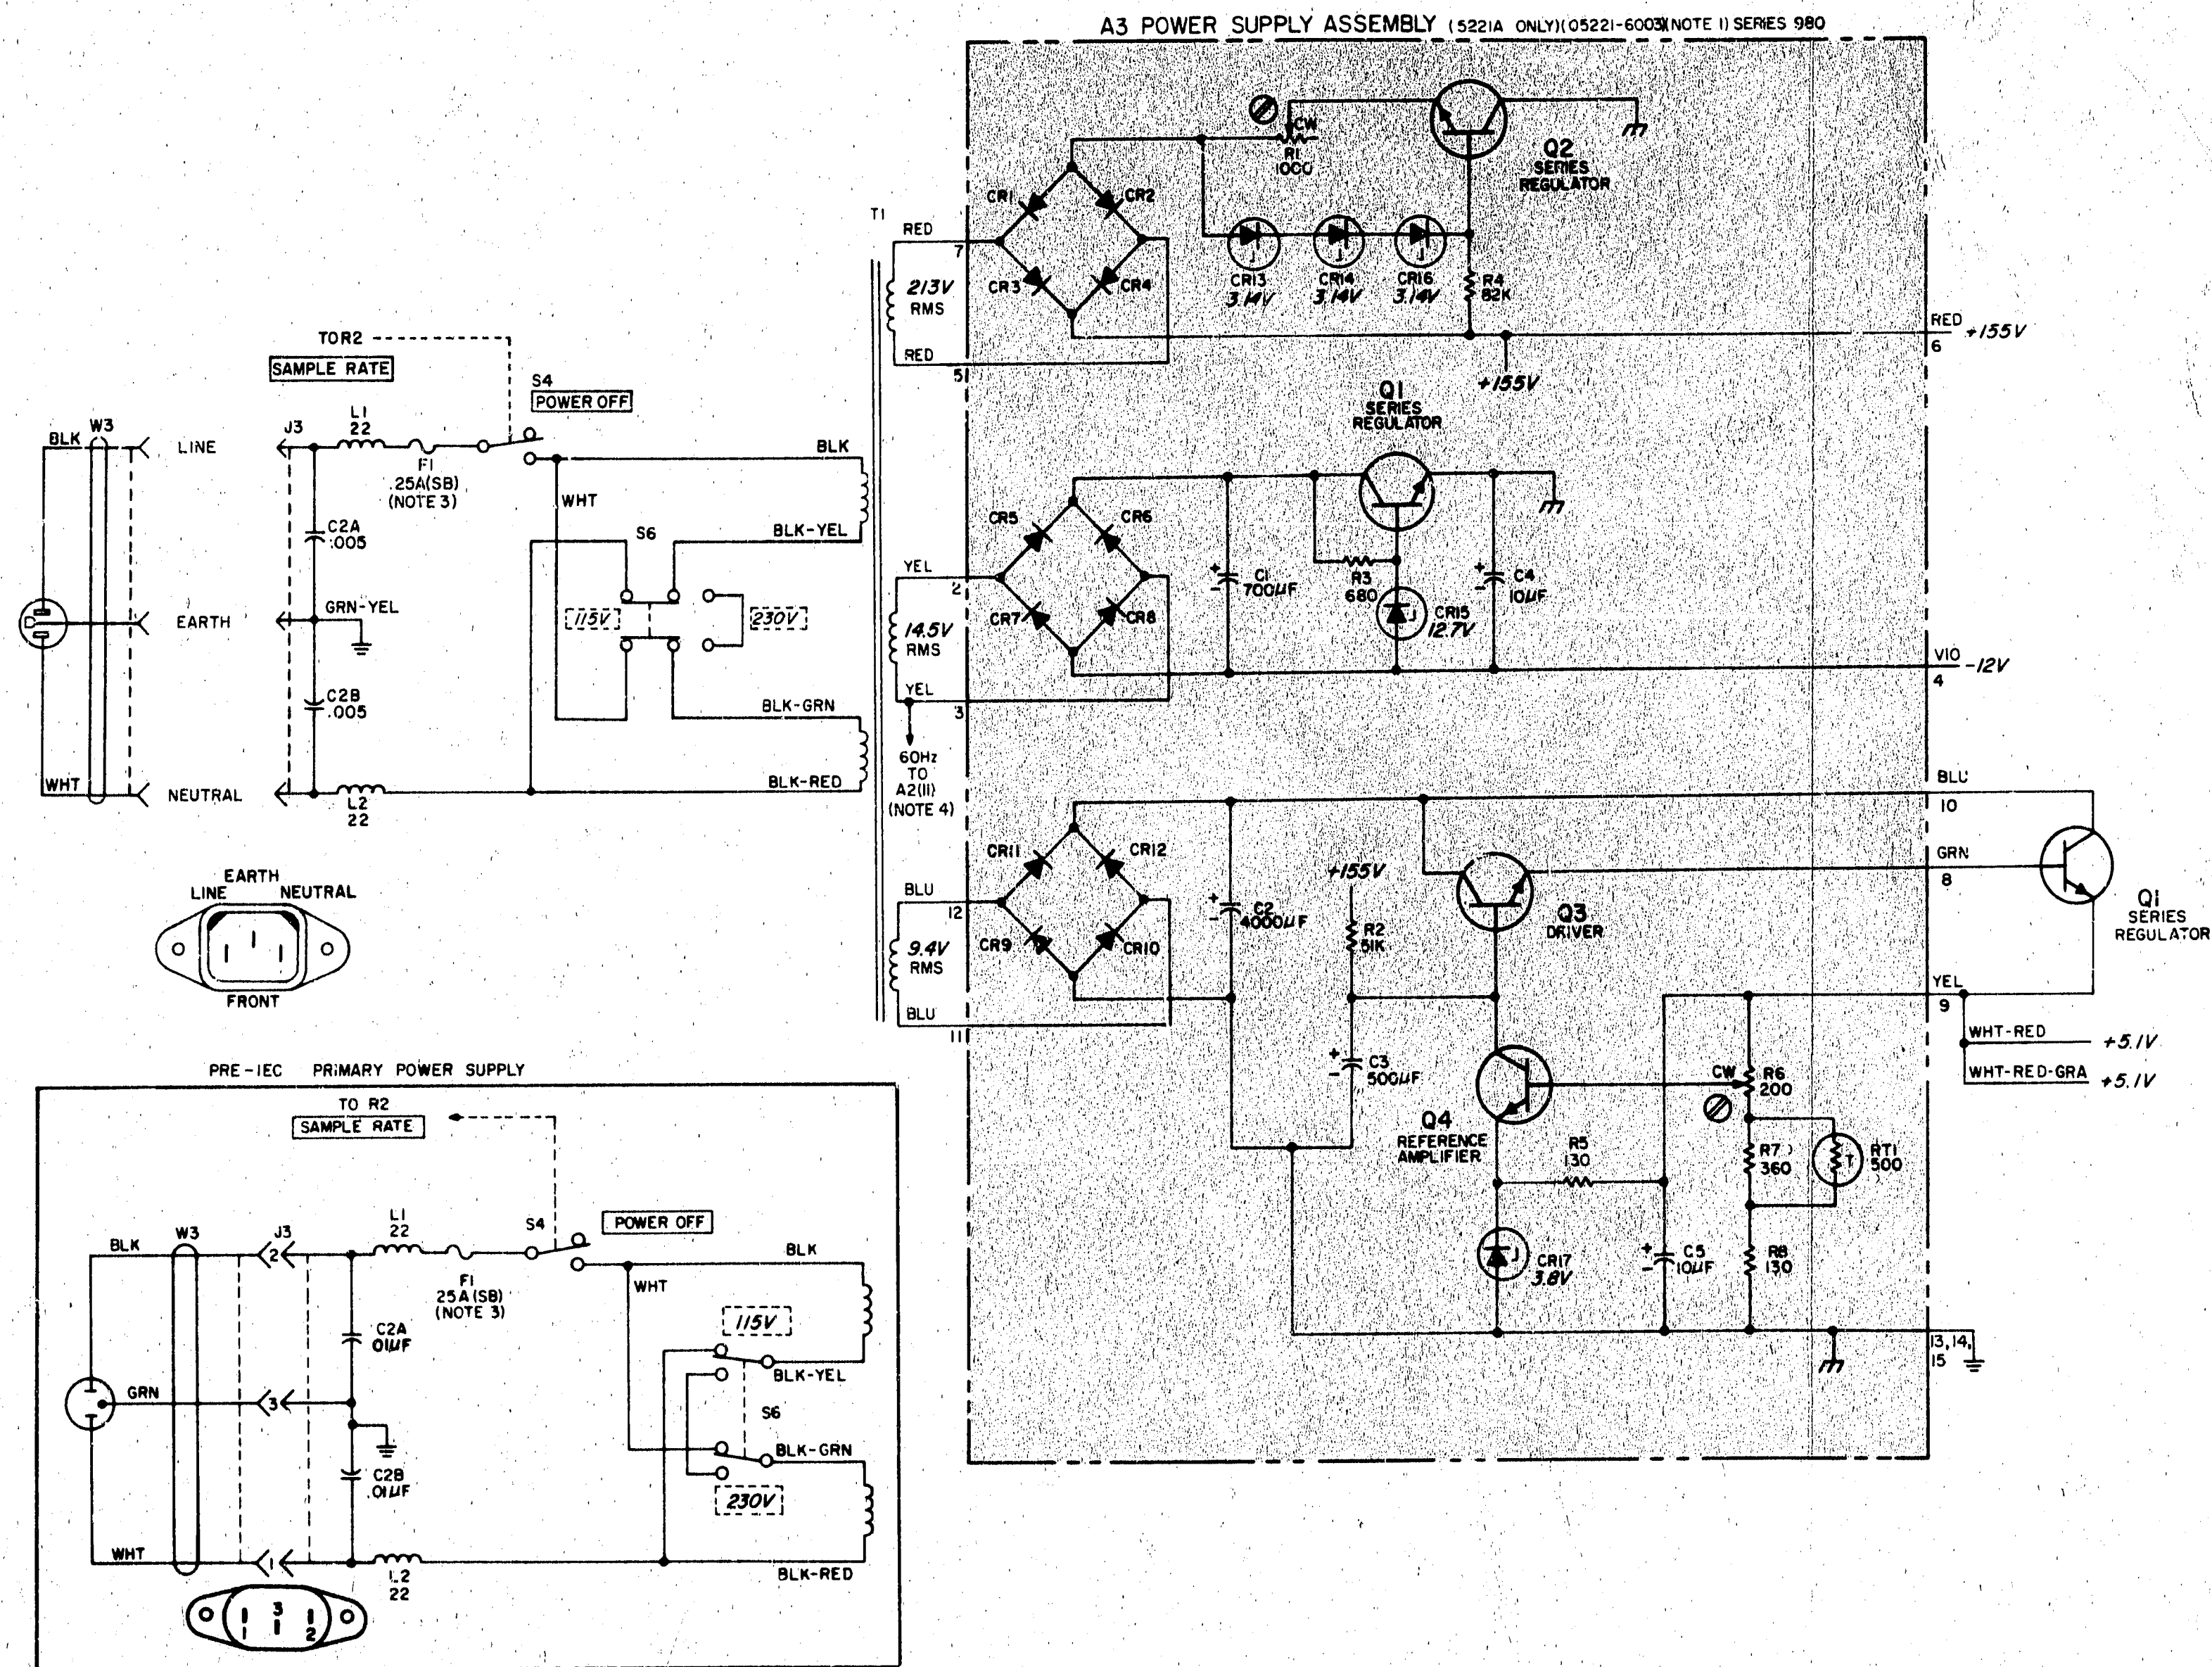


Figure 8-5. A3 Power Supply (5221A)

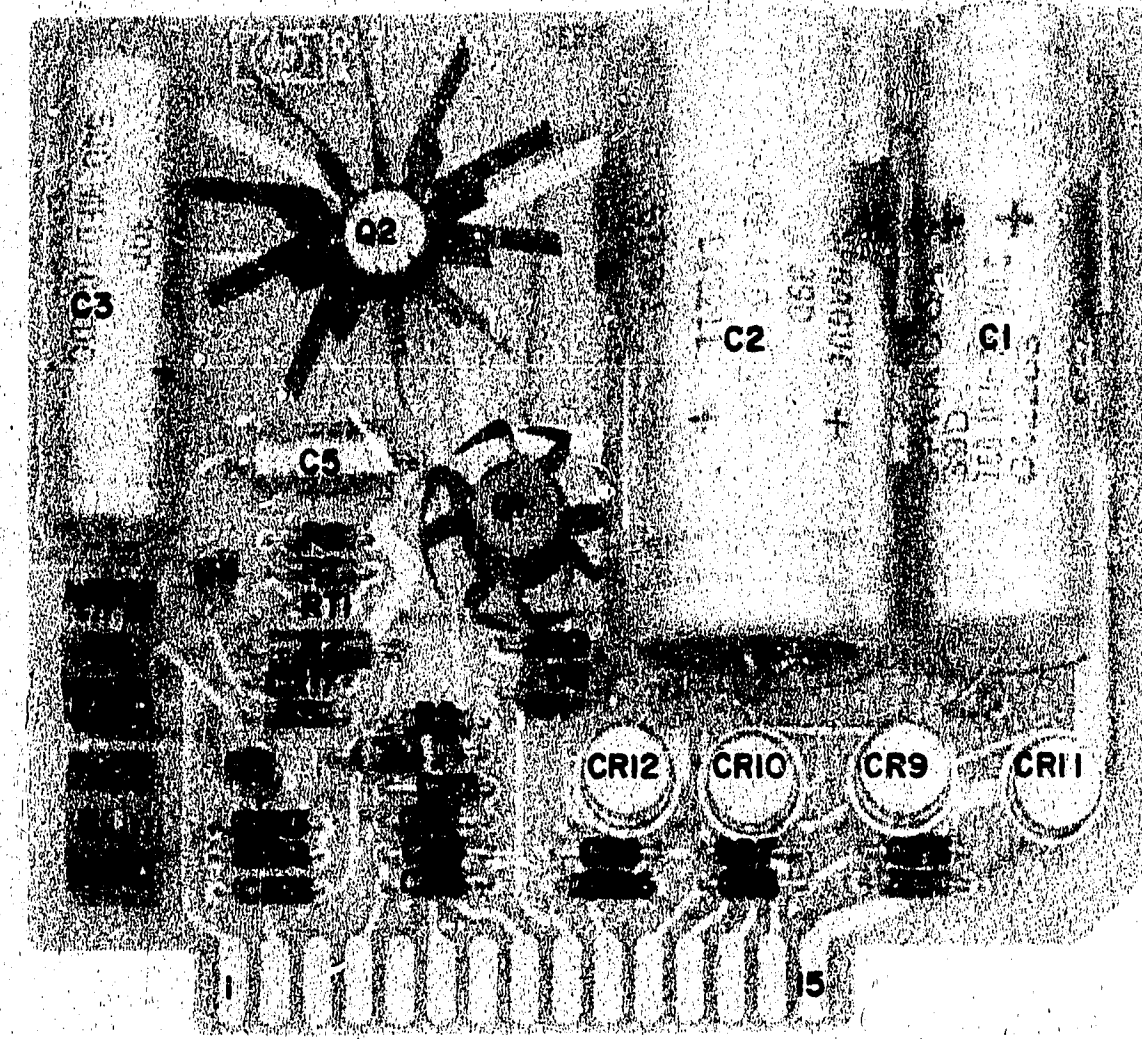

FOR 5321A

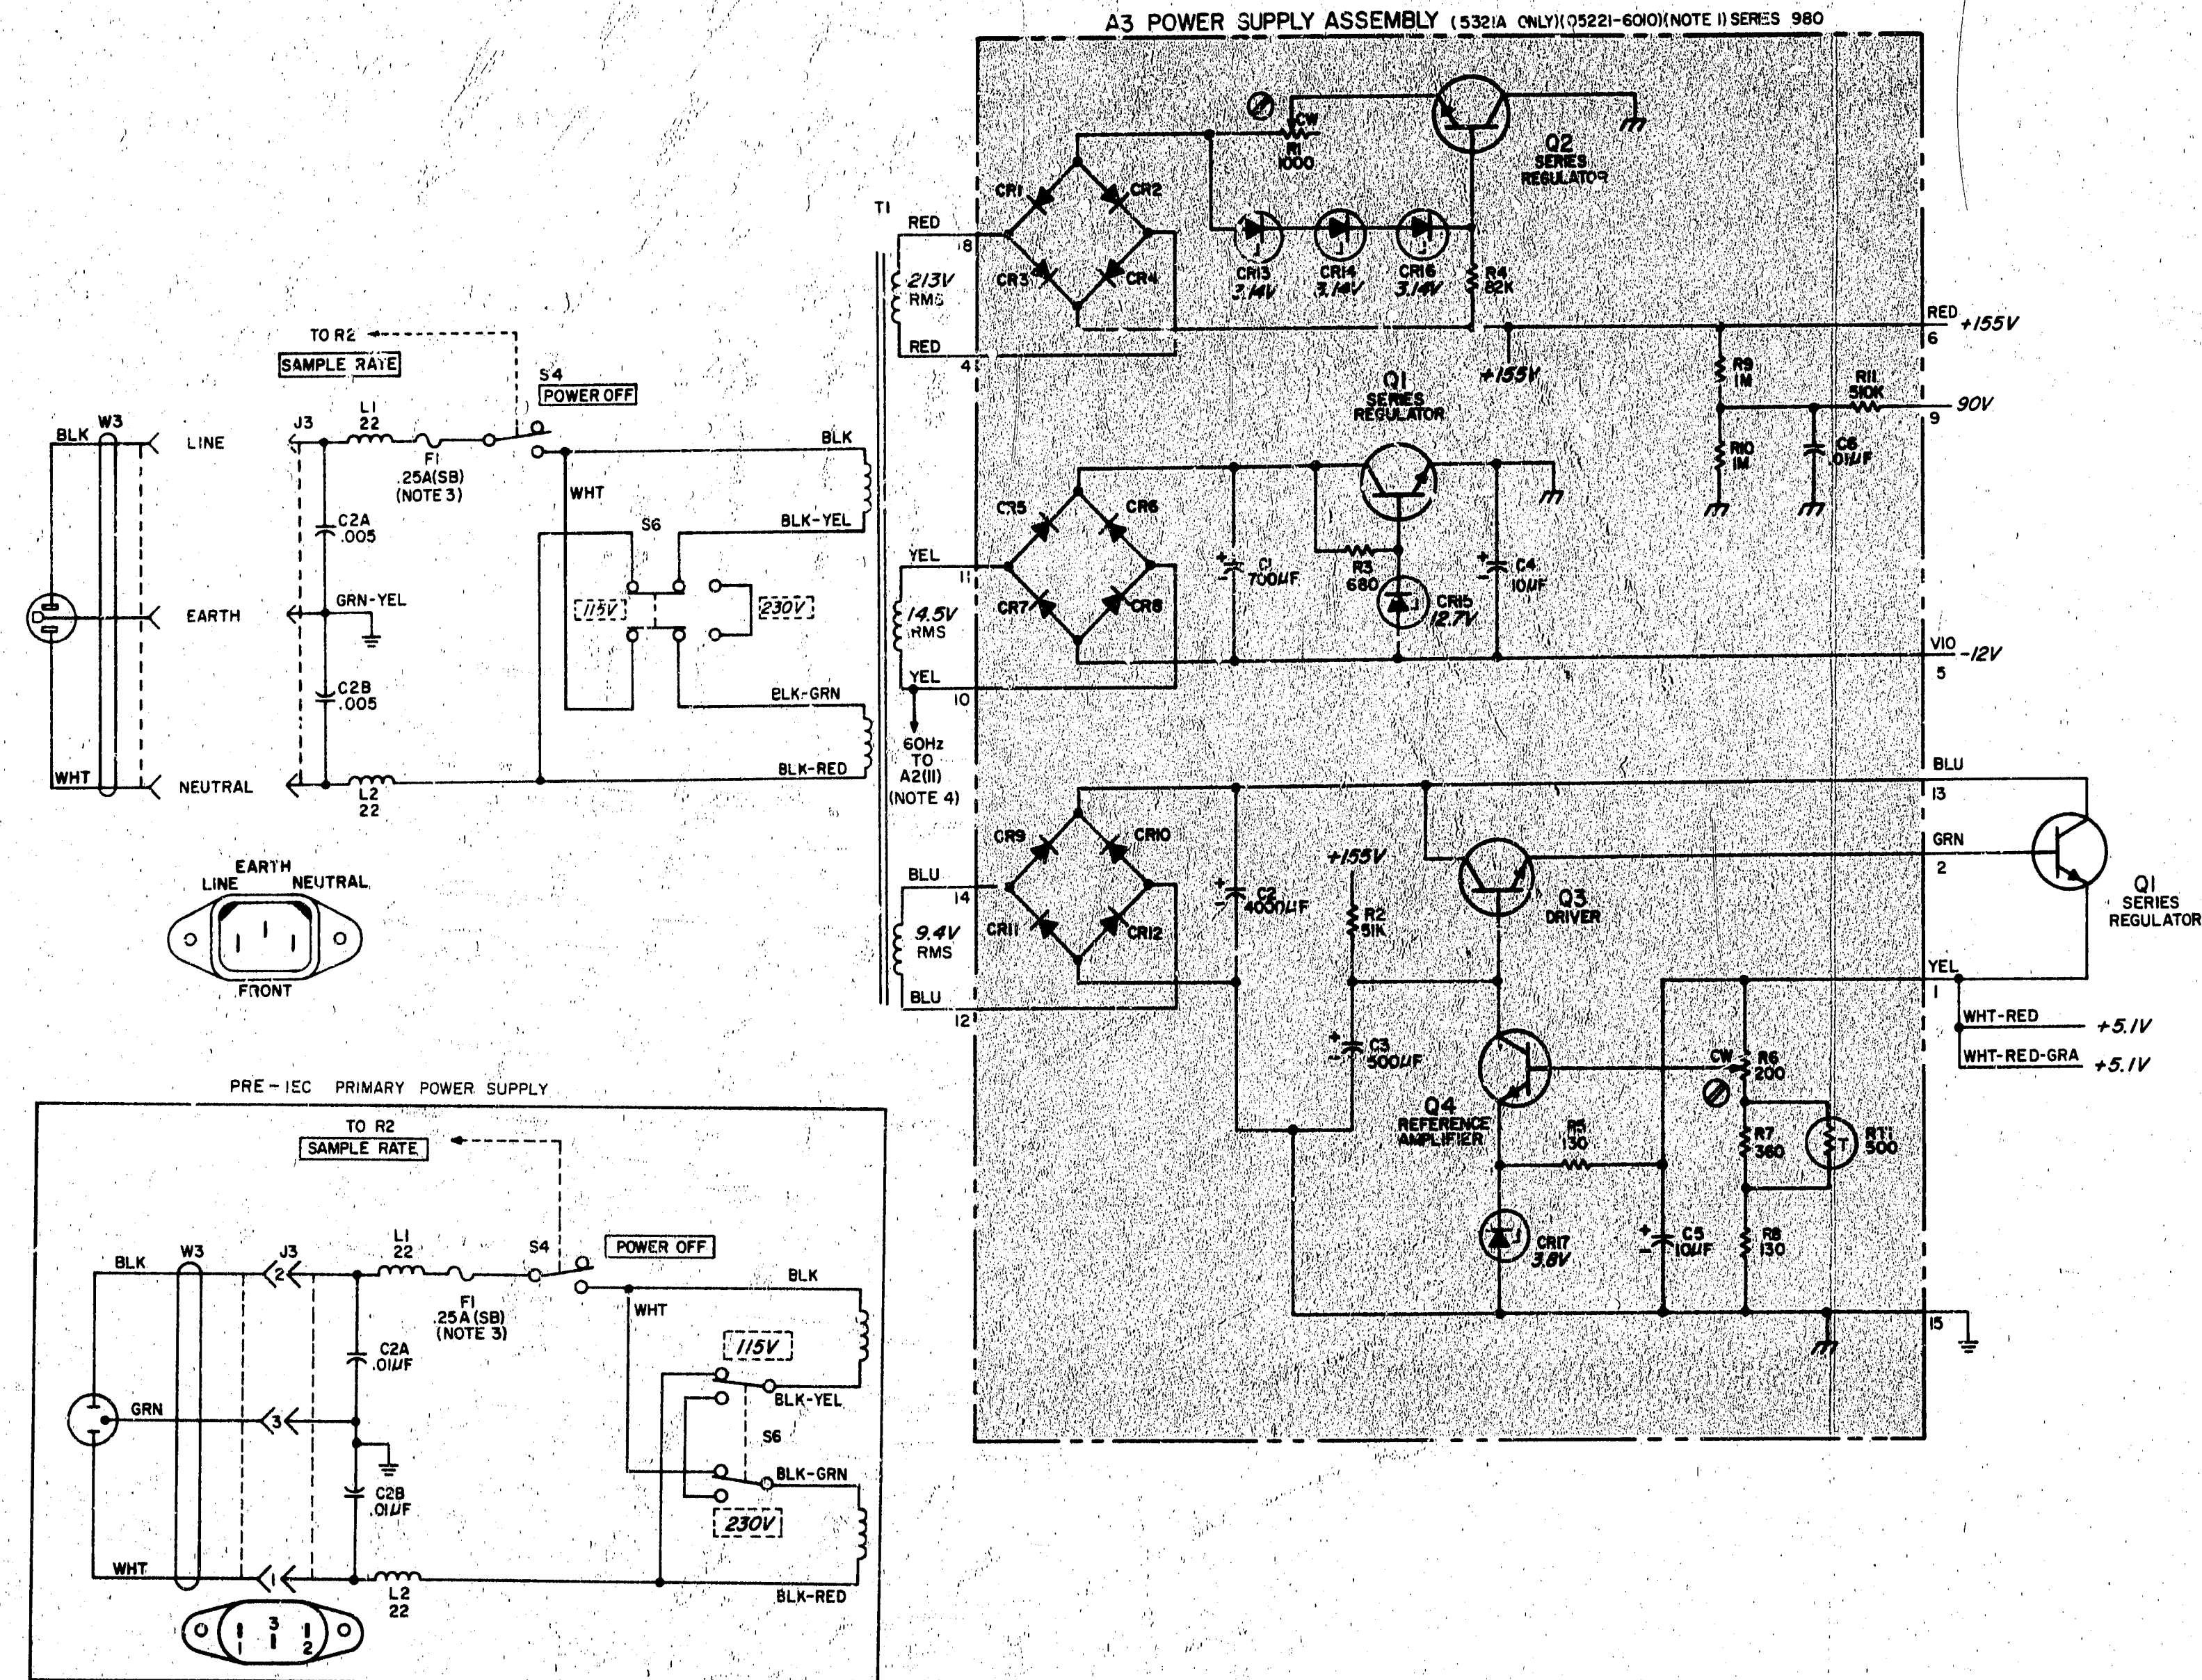


Figure 8-6. A3 Power Supply (5321A)

SERVICE

NOTES

S E R V I C E N O T E

SUPERSEDES:

When the above counters are used in applications where frequencies below 100 kHz must be measured in the presence of interference, such as ignition voltages, the following circuit modifications will reduce the amplifier bandwidth to about 100 kHz and allow accurate measurement.

On amplifier-trigger assembly 05221-6012 make the following modifications.

1. Change R2 from 470 Ω to part number 0683-2235. This is a 22K Ω resistor.
2. Change C5 from 5.1 pf to part number 0160-0363. This is a 620 pf capacitor.
3. Add part number 0140-0214 which is a 60 pf capacitor across CR2.

PP/sg/wn

Customer Service • 333 Logue Avenue, Mountain View, California 94040. Tel. (415) 968-9200
Europe: 54 Route Des Acacias, Geneva, Switzerland, Cable: "HEWPACKSA" Tel. (022) 42.81.50

HEWLETT  PACKARD

5221A/5321A-2A SERVICE NOTE

SUPERSEDES:

5221A/5321A-2

HP MODEL 5221A/5321A ELECTRONIC COUNTERS

5221A S/N 1048A02871 and below
5321A S/N 1040A01366 and below
(except those with options 03, 103, 203)

Models 5221A and 5321A that use the power line as a time base may malfunction if there is a substantial amount of noise on the line. Typically, a 10V spike at the proper point on the waveform will cause mistriggering of the shaping amplifier A2Q2, and amplifier A1.

The best solution in these conditions is to use a counter which is not susceptible to power line noise, i. e., one which has its own oscillator. If this is not feasible, then power line filtering may be the solution.

The best place to place the power line filter is outside the instrument, and there are several commercially available which should be adequate. In extremely noisy environments, it may be necessary to filter the noise off the time base signal inside the unit itself. A method of accomplishing this is described below.

Install a .47 μ f 35V capacitor HP Part No. 0160-0174 and a 2K Ω 1/4 watt resistor, HP Part No. 0683-2025 as follows:

Disconnect yellow lead from A2 pin 11 and connect to A2 pin 8.

Connect the 2K 1/4 watt resistor between A2 pin 11 and A2 pin 8.

Connect the + lead of the 0.47 μ f capacitor to pin 11 and the - lead to pin 8 (ground).

If the counter will not SELF CHECK at low line (102 V RMS) after the above modification is made, reduce A2R3 to 39K and A2R1 to 58K.

To revise the operating and service manual add the capacitor and resistor to A2 schematic as shown in the partial diagram, Figure 1. Also note on the schematic the part numbers of the added components and reference the change as per Service Note 5221A/5321A-2A.

REG/sg/WO

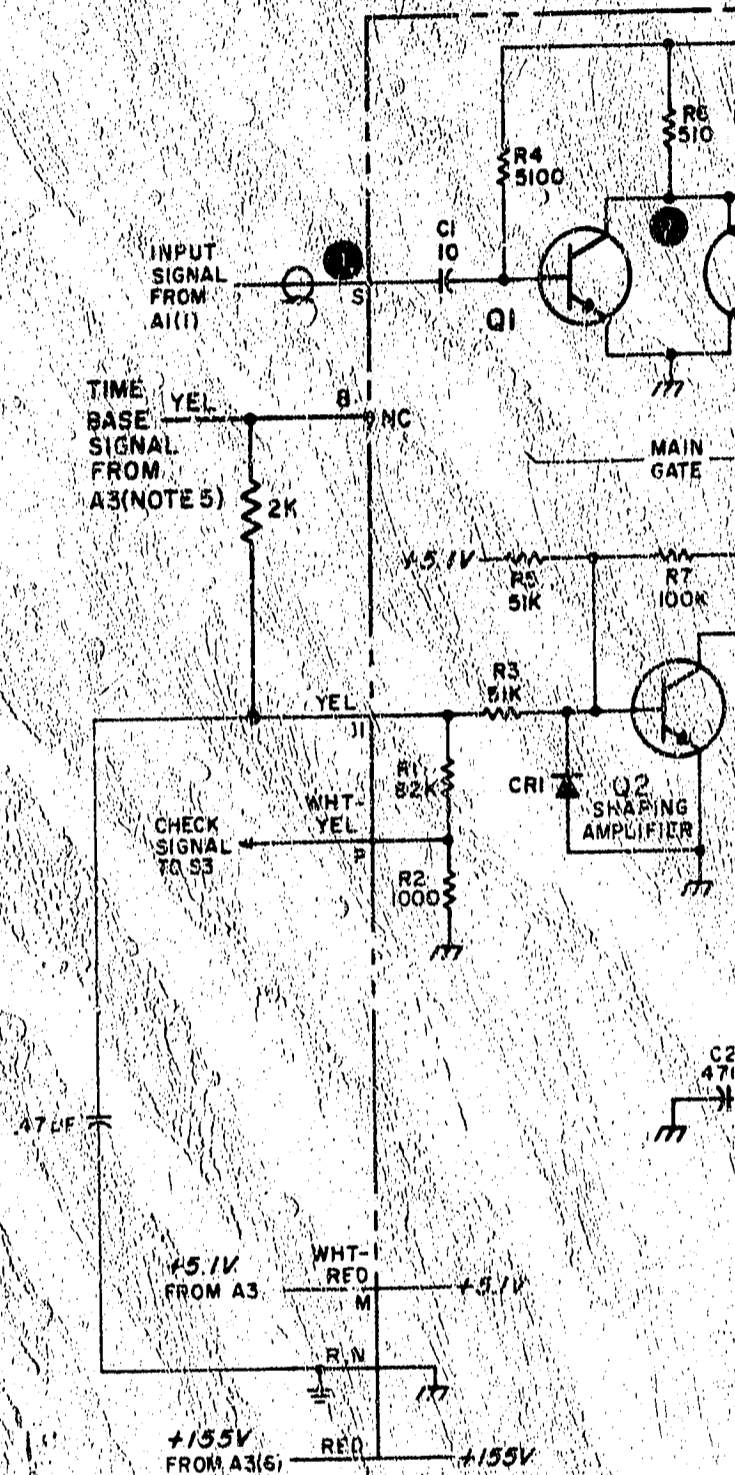


Figure 1

10/72-02

HEWLETT  PACKARD

5221A/5321A-3A

S E R V I C E N O T E

SUPERSEDES:

5221A/5321A-3

1 MHz Crystal Time Base Installation for the 5221A and the 5321A (Option 003)

This service note describes the installation of the 1 MHz crystal time base modification, Option 003, into the 5321A and the 5221A Electronic Counters.

The time base modification is a single complete board; installation requires only hand tools and a soldering iron.

INSTALLATION

1. Disconnect AC power line and remove the side frames, the top and bottom covers.
2. Changes to A2 Assembly.
 - a. Change R2 to 51K.
 - b. Change CR1 to 10K.
 - c. Change R7 to 10K.
 - d. Change R3 to .005 μ f.
 - e. Change IC2 to a divide by 10 IC, HP Part No. 1820-0098 (not needed in instruments with Option 10).

NOTE

A2 board with all these changes is 05221-60029.

3. Installation of brackets in 5221A, HP Part No. 05216-0007.
 - a. You will find two holes that will line up at bottom of left side frame casting. Use bottom holes and attach with screws. Bracket fits from bottom to top of side frame casting but is secured only at bottom.
4. Installation of brackets in 5321A, Part Numbers 05321-00010 and 05321-00011.
 - a. Two holes must be drilled in rear of unit to hold "L" shaped bracket, 05321-00011, that has a standoff to provide support for board.

- b. Insert bracket plus connector, HP Part No. 05321-00010, in slot in bracket in middle of 5321A mainframe. Then, insert board to determine where to drill holes to attach "L" bracket to rear.
 - c. Drill holes and thoroughly clean instrument of metal chips.
 - d. Attach bracket and connector to mainframe.
5. Wiring for 5221A.
 - a. Remove existing yellow wire connecting XA2 pin 11 to XA3, pin 3.

NOTE

On later models, instruments an RC network has been added between XA2 pins 8, 11, R and N with the yellow wire connected at pin 8. Remove the RC network along with the yellow wire.

- b. Install black wire from newly installed connector, pin 1, to ground.
 - c. Install violet wire from new connector, pin 3, to 12V supply, XA3, pin 4.
 - d. Install white/red/gray wire from new connector, pin 6, to +5V supply XA3, pin 9.
 - e. Install coax (HP Part No. 8120-0052) from pin 5 on new connector to XA2 pin 11 (connect shield to pin 1). Shield at XA2 end of cable is not connected.
6. Wiring for 5321A.
 - a. Remove existing yellow wire connecting XA2, pin 11, to XA3 pin 10.

NOTE

On later model instruments an RC network has been added between XA2 pins 8, 11, R and N with the yellow wire connected at pin 8. Remove the network along with the yellow wire.

LM/sg/WN

10/72-02

HEWLETT  PACKARD

For more information, call your local HP Sales Office or East (201) 265-5000 • Midwest (312) 677-0400 • South (404) 436-6181
West (213) 877-1282. Or, write: Hewlett-Packard, 1501 Page Mill Road, Palo Alto, California 94304. In Europe, 1217 Meyrin-Geneva


- b. Install black wire from newly installed connector, pin 1, to ground.
- c. Install violet wire from new connector, pin 3, to -12V supply, XA3, pin 5.
- d. Install white/red/gray wire from new connector, pin 6, to +5V supply XA3 pin 1.
- e. Install coax (HP Part No. 8120-0052) from new connector, pin 5 (connect shield to pin 1) to XA2 pin 11. Shield at XA2 end of cable is not connected.
7. Replace frames, top, bottom and side covers.

CHECK OUT

Instrument will now read 10 or 100 in CHECK position depending on gate time selected. Check and calibrate instrument to manual specifications.

Qty.	Description	HP Part No.
1	Time Base Assy. Board	05221-6027
1	Bracket plus connector	05216-0007 (5221-only)
1	Bracket plus connector	05321-00010 (5321-only)
1	Bracket & standoff	05321-00011 (5321-only)
2	Resistor, fixed 10K	0683-1035
1	Cap, .005 μ f	0160-2145
1	Resistor 51K	0683-5135
1	IC2 : 10	1820-0098

Time Base A4 (Options 003, 103, and 203), Component Location

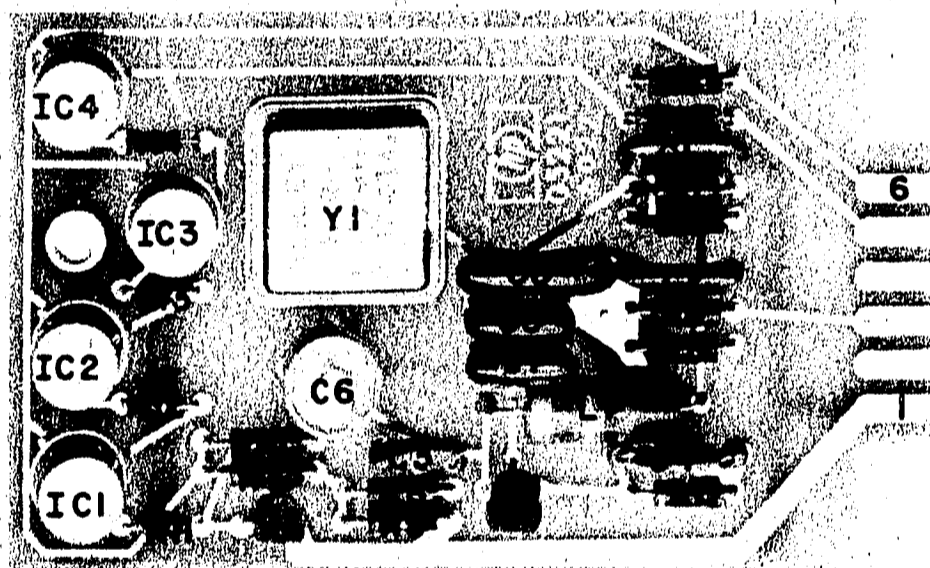

Time Base A4 (Options 003, 103, and 203), Schematic Diagram

